


FIXXU

INSTALLATION INSTRUCTIONS

For Classic Series Seat Covers

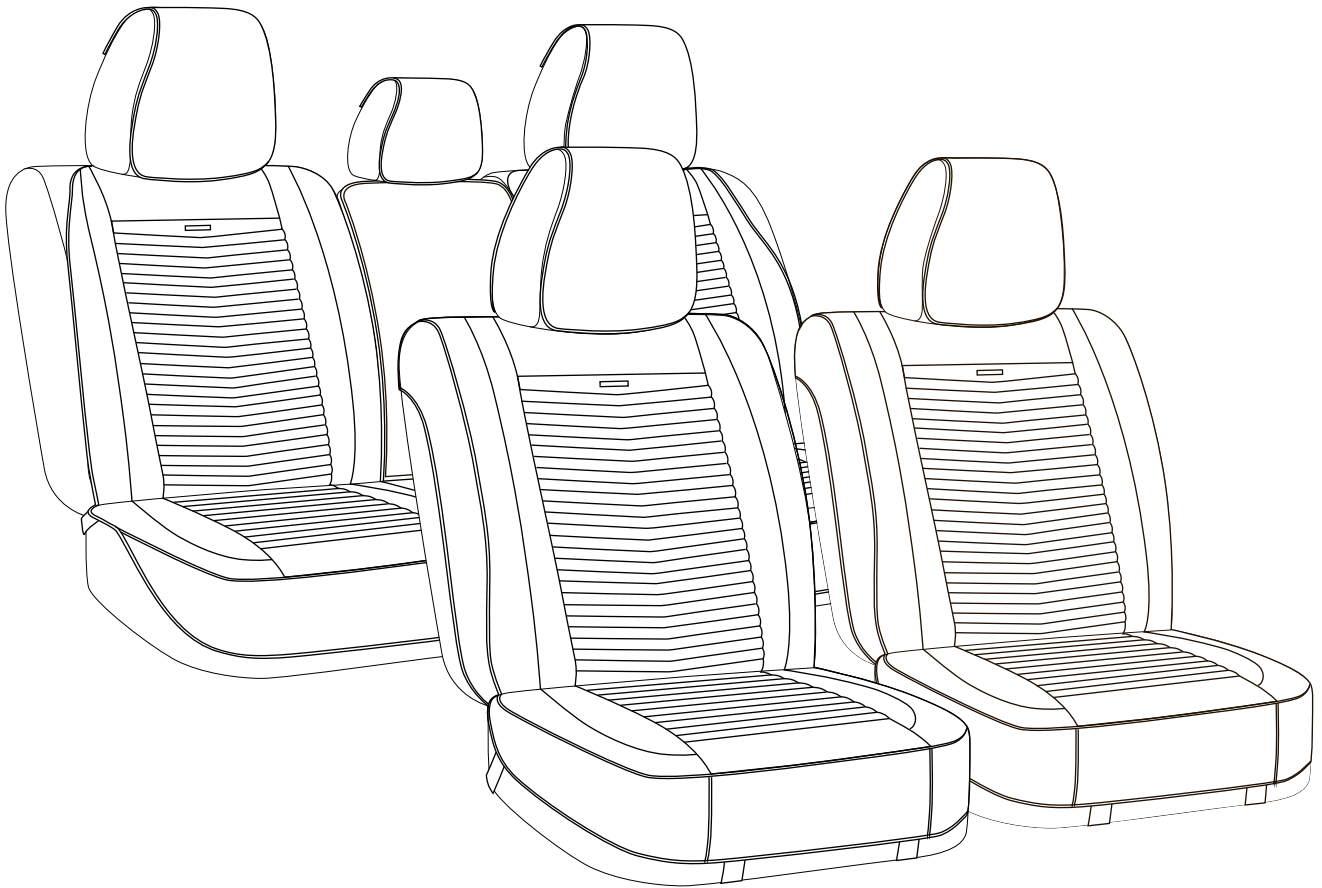

SC-DB001-WSH-1ST, SC-DB001-WSH-2ND, SC-BL001-WSH-1ST, SC-BL001-WSH-2ND, SC-CR001-WSH-1ST, SC-CR001-WSH-2ND,
SC-GY001-WSH-1ST, SC-GY001-WSH-2ND, SC-TN001-WSH-1ST, SC-TN001-WSH-2ND, SC-RD001-WSH-1ST, SC-RD001-WSH-2ND

FRONT SEAT COVERS

Seat Covers

- ① Unzip the top of the cover to allow for the cover to slide over the headrest of your front seat and pull down on the cover so the seat cover is secured around the shoulders of your car seat.



- ② Close the zippers and attach the two Velcro sides to create a secure fit around the base / posts of your headrest.



- ③ Slide the straps (1 & 2) on the lower inner back side of the cover through the separation between the upper and lower sections of the front seat. Now take the straps on the outer back (3 & 4) side of the cover and connect them to the corresponding inner straps (2 & 3 connect, 1 & 4 connect) after stretching them around the hinges at the base of the upper front seat section.



- ④ Lay the seat cover bottom so the seat cover lip wraps around the base of the car seat. Slide the inner straps (5 & 6) through the separation between the upper and lower sections of the front seat. Now take the straps on the outer side (7 & 8) of the cover and connect them to the corresponding inner straps after stretching them around the hinges of the front seat.



- ⑤ Secure the hooks at the bottom of the seat cover to the underside of the front seat. Be sure NOT to connect the hooks to any wiring, electrical components or mechanisms used to move the seat forward, backward, up or down.



Headrests

- ⑥ Attach the headrest covers by connecting the straps with quick connect clips around the base / posts of your headrest. The wider portion of the headrest should be forward facing.



⑦ Pillows can now be installed around the base of the headrest.



REAR SEAT COVERS

Upper Section

- ① Connect the 3 pieces of the upper seat covers with their respective zippers.



- ② The upper straps of the 2 outer seat covers (9 & 10, 11 & 12) should be connected around the base or posts of the headrests.



- ③ Slide the plastic anchors at the bottom of the upper seat covers through the separation of the upper and lower sections of the rear car seat. Pull the straps of the anchors to ensure they are in place and will hold the cover in place.



Lower Section

- ④ Lay the rear seat covers so the seat cover lip extends down around the front and side of the rear seat. Make sure the eyelets of each outer cover are towards the middle of the rear seat.



- ⑤ Using the included string, lace the 2 pieces together, loosely – do not tie a knot yet.



- ⑥ Now connect the corresponding straps of each of the rear covers (after stretching them around the base of the rear seat. Depending on your vehicle the strap connections may vary. Be sure the covers are lying flat after all straps are secured.



Strap Connections (for reference):

- 13 connects to 18;
- 14 connects to 15 after threading it through strap 13;
- 16 connects to 17 after threading it through strap 18;
- 24 connects 19;
- 22 connects to 23 after threading it through strap 24;
- 21 connects to 20 after threading it through strap 19.

Note: You may need to lift the bench seat to secure the straps.



- ⑦ Tighten the string in the center and tie a knot when the covers are properly positioned.



- ⑧ Using the center seat overlay with straps, cover the string and secure the straps (25 connects to 26 and 27 connects to 28) after wrapping them around the rear seat base. Strap 27 and 28 may not be necessary for your vehicle. You can connect them and hide them under the center overlay.





Headrests

- ⑨ Attach the headrest covers by connecting the straps with quick connect clips around the base / posts of your headrest. The wider portion of the headrest should be forward facing.