

SETUP & OPERATION MANUAL

FEATURES

- The table rides on 14 sealed, steel ball bearing rollers and is supported by architectural grade heavy-duty steel tubing.
- Easy to adjust, extruded aluminum miter fence for accurate miters from 0° to 45°.
- Adaptable to virtually all 10-14" table saws.
- New design sliding quick mount bracket for added cutting capacity. Cut up to 72"* with the crosscut fence positioned at the rear. Crosscut or miter up to 49"* with the fence at the front of the table.
- Quick connect mounting bracket allows for easy removal of the sliding table from the saw for users with space/storage limitations.
- Positive stop rail and locator pin quickly sets fence for commonly used miter angles.

SPECIFICATIONS

WORKING FLOOR SPACE
(FRONT TO REAR)
105" (2667 mm)

WORKING FLOOR SPACE
(TO LEFT OR RIGHT OF SAW)
40" (1016 mm)

WIDTH OF SLIDING TABLE
31" (787 mm)

LENGTH OF SLIDING TABLE
30 1/2" (775 mm)

DISTANCE IN FRONT OF BLADE
TO CUT AT 90°*
36" (914 mm)

DISTANCE FROM REAR OF BLADE
TO CUT AT 90°*
62" (1575 mm)

LENGTH OF FENCE
64" (1626 mm)

LENGTH OF FENCE WITH EXTENSION STOP
101" (2566 mm)

WEIGHT
140 LBS (64 kg)

* Depending on the positioning of the mounting bracket on your saw.

SLIDING TABLE

**SLIDING TABLE ONLY -
TABLE SAW SOLD SEPARATELY**



MODEL #50-SLT60P





GENERAL® INTERNATIONAL

8360 Champ-d'Eau, Montreal (Quebec) Canada H1P 1Y3
Telephone (514) 326-1161 • Fax (514) 326-5555 • www.general.ca

THANK YOU for choosing this Excalibur by General® International model 50-SLT60P Sliding Table. This sliding table has been carefully tested and inspected before shipment and if properly used and maintained, will provide you with years of reliable service. To ensure optimum performance and trouble-free operation, and to get the most from your investment, please take the time to read this manual before assembling, installing and operating the unit.

The manual's purpose is to familiarize you with the safe operation, basic function, and features of this sliding table as well as the set-up, maintenance and identification of its parts and components. This manual is not intended as a substitute for formal woodworking instruction, nor to offer the user instruction in the craft of woodworking. If you are not sure about the safety of performing a certain operation or procedure, do not proceed until you can confirm, from knowledgeable and qualified sources, that it is safe to do so.

Once you've read through these instructions, keep this manual handy for future reference.

Disclaimer: The information and specifications in this manual pertain to the unit as it was supplied from the factory at the time of printing. Because we are committed to making constant improvements, General® International reserves the right to make changes to components, parts or features of this unit as deemed necessary, without prior notice and without obligation to install any such changes on previously delivered units. Reasonable care is taken at the factory to ensure that the specifications and information in this manual corresponds with

that of the unit with which it was supplied. However, special orders and "after factory" modifications may render some or all information in this manual inapplicable to your machine. Further, as several generations of this model of sliding table and several versions of this manual may be in circulation, if you own an earlier or later version of this unit, this manual may not depict your unit exactly. If you have any doubts or questions contact your retailer or our support line with the model and serial number of your unit for clarification.

GENERAL® MFG & GENERAL® INTERNATIONAL WARRANTY

All component parts of General® MFG, General® International and Excalibur by General International® products are carefully inspected during all stages of production and each unit is thoroughly inspected upon completion of assembly.

Limited Lifetime Warranty

Because of our commitment to quality and customer satisfaction, General® MFG and General® International agree to repair or replace any part or component which upon examination, proves to be defective in either workmanship or material to the original purchaser for the life of the tool. *However, the Limited Lifetime Warranty does not cover any product used for professional or commercial production purposes nor for industrial or educational applications. Such cases are covered by our Standard 2-year Limited Warranty only. The Limited Lifetime Warranty is also subject to the "Conditions and Exceptions" as listed below.*

Standard 2-Year Limited Warranty

All products not covered by our lifetime warranty including products used in commercial, industrial and educational applications are warranted for a period of 2 years (24 months) from the date of purchase. General® MFG and General® International agree to repair or replace any part or component which upon examination, proves to be defective in either workmanship or material to the original purchaser during this 2-year warranty period, subject to the "conditions and exceptions" as listed below.

To file a Claim

To file a claim under our Standard 2-year Limited Warranty or under our Limited Lifetime Warranty, all defective parts, components or machinery must be returned freight or postage prepaid to General® International, or to a nearby distributor, repair center or other location designated by General® International. For further details call our service department at 1-888-949-1161 or your local distributor for assistance when filing your claim.

Along with the return of the product being claimed for warranty, a copy of the original proof of purchase and a "letter of claim" must be included (a warranty claim form can also be used and can be obtained, upon request, from General® International or an authorized distributor) clearly stating the model and serial number of the unit (if applicable) and including an explanation of the complaint or presumed defect in material or workmanship.

CONDITIONS AND EXCEPTIONS:

This coverage is extended to the original purchaser only. Prior warranty registration is not required but documented proof of purchase i.e. a copy of original sales invoice or receipt showing the date and location of the purchase as well as the purchase price paid, must be provided at the time of claim.

Warranty does not include failures, breakage or defects deemed after inspection by General® MFG or General® International to have been directly or indirectly caused by or resulting from; improper use, or lack of or improper maintenance, misuse or abuse, negligence, accidents, damage in handling or transport, or normal wear and tear of any generally considered consumable parts or components.

Repairs made without the written consent of General® International will void all warranty.

TABLE OF CONTENTS

SAFETY RULES	5	FINE TUNING ADJUSTMENTS	17
IDENTIFICATION OF MAIN PARTS AND COMPONENTS	6	Leveling the sliding table with the saw table	17
UNPACKING	7	Install the rear outer leg mount	17
List of contents	7	Setting the sliding table tracking	18
Additional requirements for set up	7	Squaring the cross cut fence to the blade	19
PREPARATION BEFORE ASSEMBLY	8	Set the 90° stop with the fence in the front position	20
STEP 1 - LEGS AND BRACKET PRE-ASSEMBLY . . .	8	Set the 90° stop with the fence in the rear position	21
STEP 2 - BRACKETS AND INNER RAIL INSTALLATION	9	BASIC OPERATIONS	22
Attach the main mounting bracket to the saw table	9	Setting and using the sliding scale	22
Attach the quick mount bracket	9	Check points	24
Attach the rear inner leg mount to the inner guide rail	10	Panel cutting	24
Attach the inner guide rail to the quick mount bracket	10	Miter cuts	26
Install the switch mount bracket	10	USAGE TIPS	26
STEP 3 - CROSS BRACES INSTALLATION	11	RECOMMENDED OPTIONAL ACCESSORIES . . .	27
Install the rear cross brace	11	PARTS LIST AND DIAGRAMS	28 - 32
Install the cross braces	11	CONTACT INFORMATION	34
STEP 4 - TABLE AND FENCE INSTALLATION . . .	12		
Install the sliding table	12		
Bearing adjustments	13		
Install the angle adjustment rail	14		
Cross cut fence assembly	15		

Rules for Safe Operation

To help ensure safe operation, please take a moment to learn the machine's applications and limitations, as well as potential hazards. General International disclaims any real or implied warranty and hold itself harmless for any injury that may result from the improper use of its equipment.

1. Do not operate the saw when tired, distracted, or under the effects of drugs, alcohol or any medication that impairs reflexes or alertness.
2. The working area should be well lit, clean and free of debris.
3. Keep children and visitors at a safe distance when the saw is in operation; do not permit them to operate the saw.
4. Childproof and tamper proof your shop and all machinery with locks, master electrical switches and switch keys, to prevent unauthorized or unsupervised use.
5. **Stay alert!** Give your work your undivided attention. Even a momentary distraction can lead to serious injury.
6. Fine particulate dust is a carcinogen that can be hazardous to health. Work in a well-ventilated area and whenever possible use a dust collector and wear eye, ear and respiratory protection devices.
7. Do not wear loose clothing, gloves, bracelets, necklaces or other jewelry while the saw is in operation. Wear protective hair covering to contain long hair and wear non-slip footwear.
8. Be sure that adjusting wrenches, tools, drinks and other clutter are removed from the machine and/or the feed table surface before operating.
9. Keep hands well away from the blade and all moving parts. Use a brush, not hands, to clear away chips and dust.
10. Be sure that the blade is securely installed and in proper cutting direction before operation.
11. Be sure the blade has gained full operating speed before beginning to cut.
12. Always use a clean, properly sharpened blade. Dirty or dull blades are unsafe and can lead to accidents.
13. If using a power feeder, stop the feeder before stopping the table saw.
14. Do not push or force stock into the blade. The saw will perform better and more safely when working at the rate for which it was designed.
15. Use suitable support when cutting stock that does not have a flat surface. Always hold stock firmly against the fence when ripping, or against the miter gauge when cross-cutting.
16. To minimize risk of injury in the event of workpiece kickback, never stand directly in-line with the blade or in the potential kickback path of the work piece.
17. Avoid working from awkward or off balance positions. Do not overreach while cutting; keep both feet on floor. Never lean over or reach over the blade and never pull the work piece over the blade from behind. Use out feed support or have an assistant help when ripping long material.
18. Keep blade guards in place and in working order. If a guard must be removed for maintenance or cleaning, be sure it is properly reattached before using the tool again.
19. Never leave the machine running with the power on when not in operation.
20. Use of parts and accessories NOT recommended by GENERAL® INTERNATIONAL may result in equipment malfunction or risk of injury.
21. Never stand on machinery. Serious injury could result if the tool is tipped over or if the blade is unintentionally contacted.
22. Always disconnect tool from power before servicing or changing accessories such as blades, or before performing any maintenance, cleaning or adjustments, or if the machine will be left unattended.
23. Make sure that switch is in "OFF" position before plugging in the power cord.
24. Make sure the tool is properly grounded. If equipped with a 3-prong plug it should be used with a three-pole receptacle. Never remove the third prong.
25. Do not use this sliding table for other than its intended use. If used for other purposes, GENERAL® INTERNATIONAL disclaims any real implied warranty and holds itself harmless for any injury, which may result from that use.



SLIDING TABLE
50-SLT60P

IDENTIFICATION OF MAIN PARTS AND COMPONENTS

RAIL & BRACE ASSEMBLY

- Ⓐ MAIN MOUNTING BRACKET
- Ⓑ QUICK MOUNT BRACKET
- Ⓒ CROSS BRACE (3X)
- Ⓓ FRONT OUTSIDE BRACKET (2X)
- Ⓔ REAR CROSS BRACE
- Ⓕ INNER GUIDE RAIL
- Ⓖ REAR INSIDE BRACKET
- Ⓗ FENCE STORAGE BRACKET (2X)
- Ⓘ SUPPORT LEG (4X)
- Ⓚ LEVELING FOOT (4X)
- Ⓛ REAR OUTSIDE BRACKET
- Ⓜ OUTER GUIDE RAIL


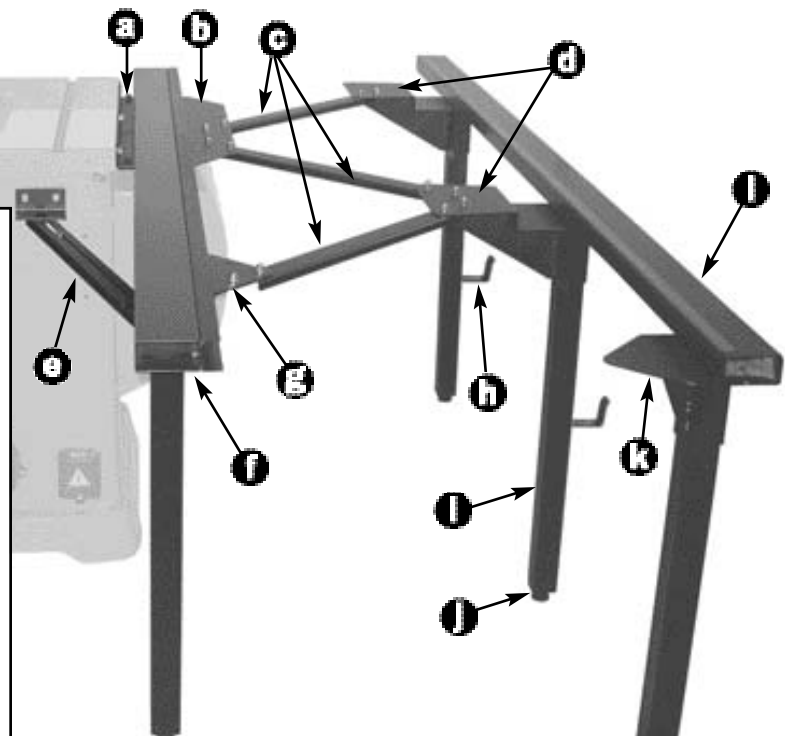


TABLE & CROSS CUT FENCE ASSEMBLY

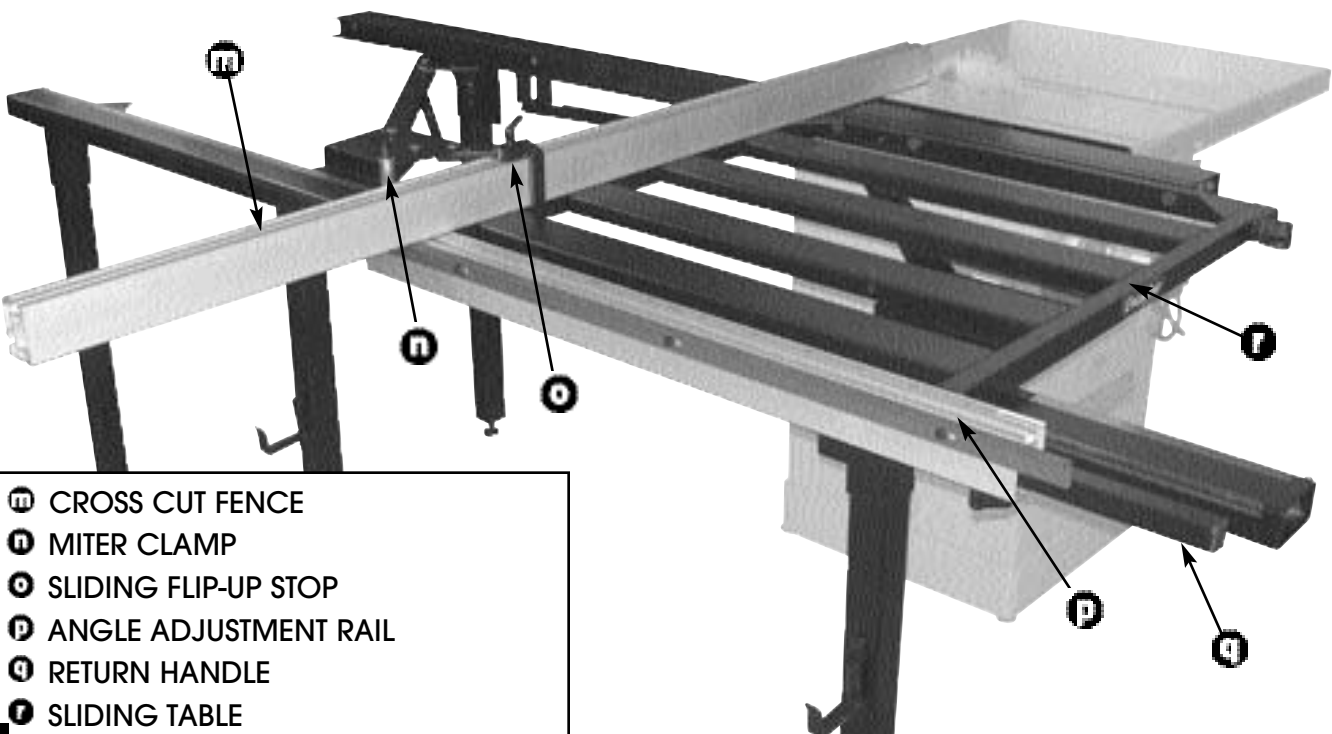

- Ⓜ CROSS CUT FENCE
- Ⓝ MITER CLAMP
- Ⓞ SLIDING FLIP-UP STOP
- Ⓟ ANGLE ADJUSTMENT RAIL
- Ⓠ RETURN HANDLE
- Ⓡ SLIDING TABLE

UNPACKING

Carefully unpack and remove the unit and its components from the box and check for missing or damaged items as per the list of contents below.

NOTE: Please report any damaged or missing items to your GENERAL® INTERNATIONAL distributor immediately.

LIST OF CONTENTS

QTY

BOX 1 - FENCE & RAILS

- Ⓐ OUTER GUIDE RAIL1
- Ⓑ INNER GUIDE RAIL1
- Ⓒ FENCE WITH FENCE EXTENSION POST1
- Ⓓ ANGLE ADJUSTMENT RAIL WITH RETURN HANDLE ...1

BOX 2 - TABLE & OTHER COMPONENTS


- Ⓔ TABLE ASSEMBLY1
- Ⓕ QUICK MOUNT BRACKET1
- Ⓖ MAIN MOUNTING BRACKET1
- Ⓗ SLIDING FLIP-UP STOP ASSEMBLY1
- Ⓘ ROLLER BEARING ASSEMBLY2
- Ⓚ FENCE PIVOT PIN ASSEMBLY1
- Ⓛ SUPPORT LEG4
- Ⓜ CROSS BRACE3
- Ⓝ REAR CROSS BRACE ASSEMBLY1
- Ⓟ SAW MOUNTING BRACKET1
- Ⓞ REAR BRACKET MOUNT1
- Ⓠ MITER CLAMP ASSEMBLY1
- Ⓡ FRONT OUTSIDE BRACKET2
- Ⓢ REAR BRACKET2
- Ⓣ RATCHET LEVER1
- Ⓤ T-NUT1
- Ⓡ SWITCH MOUNT BRACKET1
- Ⓥ FENCE EXTENSION STOP MOUNT1
- Ⓦ 5 MM T-HANDLE ALLEN WRENCH1
- Ⓧ 6 MM T-HANDLE ALLEN WRENCH1

MOUNTING HARDWARE/FASTENER KIT

For your convenience, the mounting hardware for the sliding table assembly is packaged into 4 separate bags identified 1, 2, 3 and 4, respectively. For each main assembly step in this manual, the bag containing the required hardware will be indicated.

ADDITIONAL REQUIREMENTS FOR SET UP


- Drill & drill bits
- 10/13/14 mm open end & or socket wrench
- Machinist square
- Phillips Screwdriver
- Measuring tape
- Level

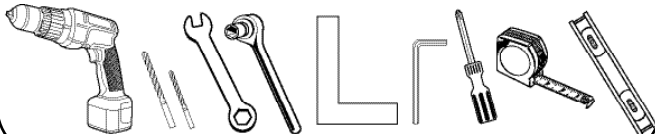


BOX 1 - FENCE & RAILS



BOX 2 - TABLE & OTHER COMPONENTS

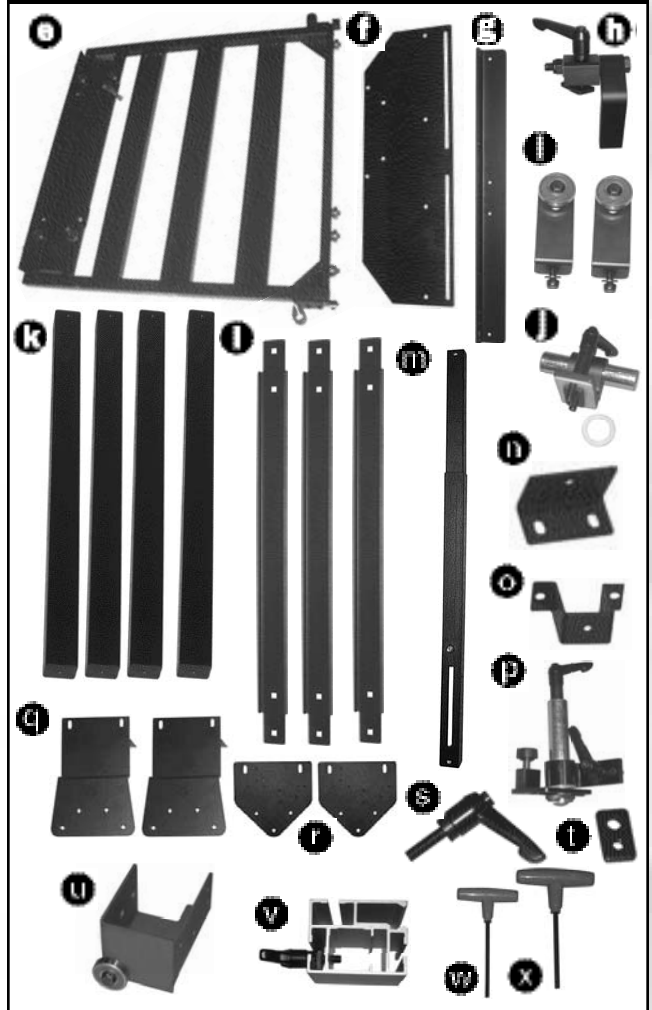

HARDWARE

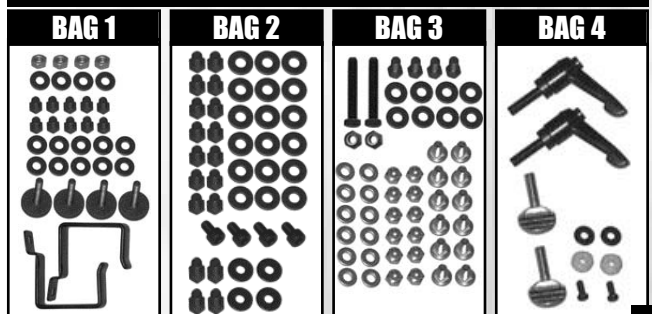


PREPARATION BEFORE ASSEMBLY

VERY IMPORTANT!


BEFORE PROCEEDING WITH THE ASSEMBLY STEPS MAKE SURE THE SAW TABLE IS LEVELED WITH THE FLOOR, PLACING A LEVEL ON THE TABLE. USE SHIMS (OR LEVELING FEET IF APPLICABLE) FOR LEVELING IF NEEDED.

REMOVE TABLE LEFT EXTENSION WING, RIP FENCE AND GUIDE RAILS

For most installations, in order for the sliding table to be as close as possible to the blade the table extension wing must be removed. To avoid interfering with the movement of the sliding table, the rip fence guide rails will also need to be temporarily removed and may need to be shortened so that they do not protrude beyond the end of the main table.

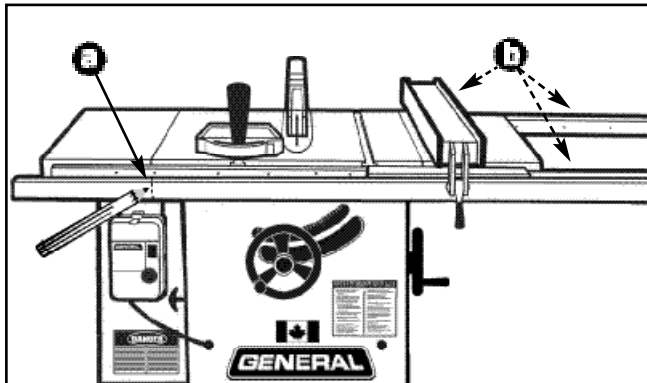

1. Make a reference mark on the rip fence guide rails even with the end of the main table (not the extension wing **a**) and then remove and set aside the fence and rails **b**.

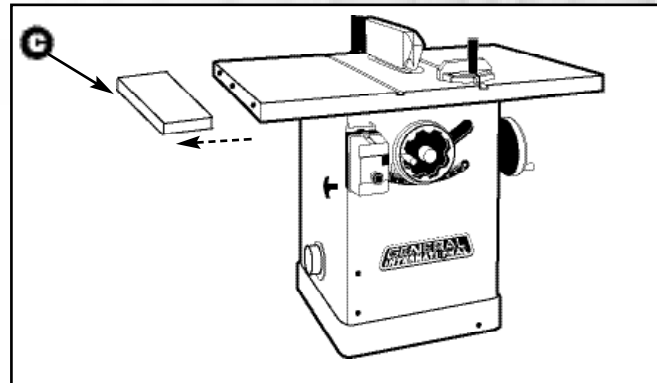

2. Remove the left extension wing **c** from the main table and set it aside.

Note: Do not cut the fence rails just yet - wait until you are ready to re-install the fence after assembling, installing and aligning the sliding table. Some fence systems may allow you to simply slide or re-mount the guide rails further to the right, allowing you to increase the rip cutting capacity of the saw to the right of the blade.

STEP 1 - LEGS AND BRACKET PRE-ASSEMBLY


HARDWARE BAG 1*



*All mounting hardware required for Assembly Step 1 can be found in hardware bag 1.

NOTE: Adjustments made during the initial set-up phase may be approximate. Once the table is assembled you will be able to make minor adjustments for leveling and fine tuning at that time.

1. Install a leveling foot **a**, a hex nut **b**, and a flat washer **c** to the bottom of all four support legs **d**, as shown in **e**.

Tip: Leave a space of approximately 1" between the feet and legs as shown in **f to facilitate the leveling of the sliding table with the saw table when you proceed to fine tuning adjustments later.**

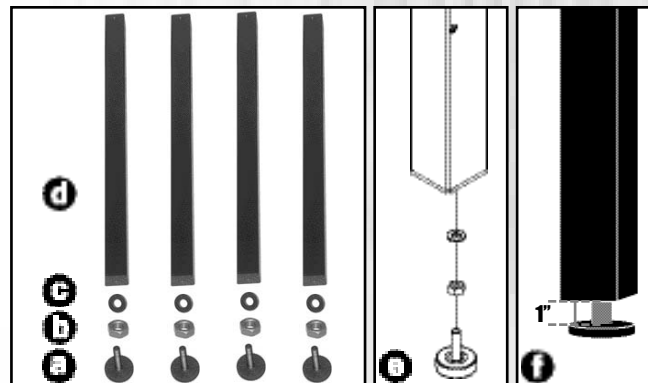

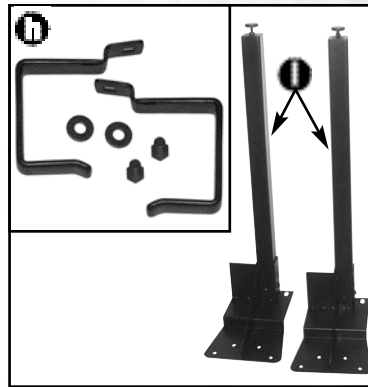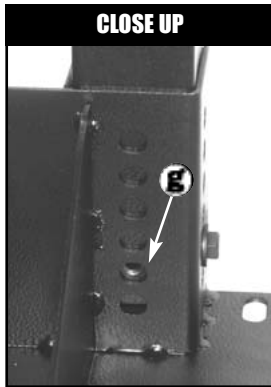

2. Fit a support leg into the four brackets as shown then tighten with two hex bolts and flat washers.

Tip: Select the second hole from the top of the bracket as shown in 2 to allow room for fine tuning adjustments later.

3. Install a fence storage bracket 1 onto the two front legs 1 as shown in 1.

STEP 2 - BRACKETS AND INNER RAIL INSTALLATION

HARDWARE BAG 2*

*All mounting hardware required for Assembly Step 2 can be found in hardware bag 2. After having completed Step 2, six hex bolts and six washers will be left over. Put them aside for now.


ATTACH THE MAIN MOUNTING BRACKET TO THE SAW TABLE

Note: Four hex bolts and flat washers are supplied with your Sliding Table. However, if they do not thread into the mounting holes on your table, use the fasteners that were supplied with the saw to hold the extension wing in place.

1. Check to see which holes on the main mounting bracket aligns on the saw's main table mounting holes.
2. Secure the main mounting bracket to the main table using as many fasteners as possible, at minimum, the rear two holes of the table 2.

Tip: For added stability, holes may be drilled into the saw table 2 if necessary.


Note: The bracket should be approximately 1/8" from the top of the table 3.

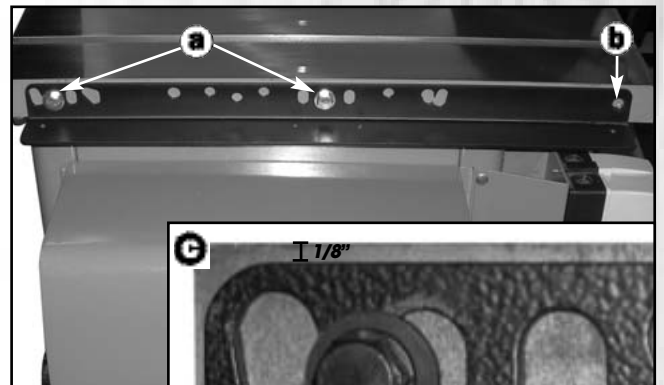


ATTACH THE QUICK MOUNT BRACKET

1. Secure the quick mount bracket to the main mounting bracket with **ALL** 4 socket head cap screws and 4 washers 4, using the supplied 6 mm t-handle wrench 5, as shown in 6.


Note: Position the quick mount bracket with the square holes 6 towards the rear of the saw.

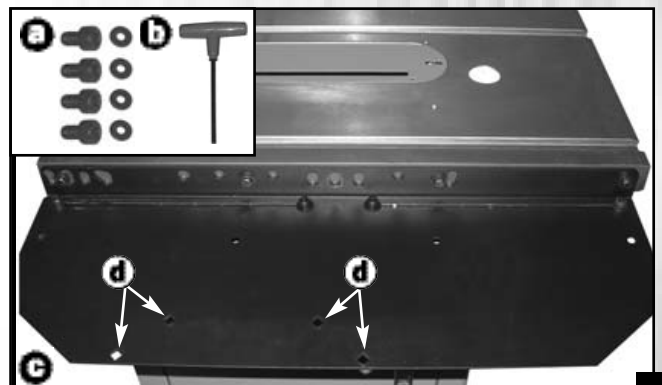


INNER RAIL UNDERSIDE VIEW - THREADED HOLES

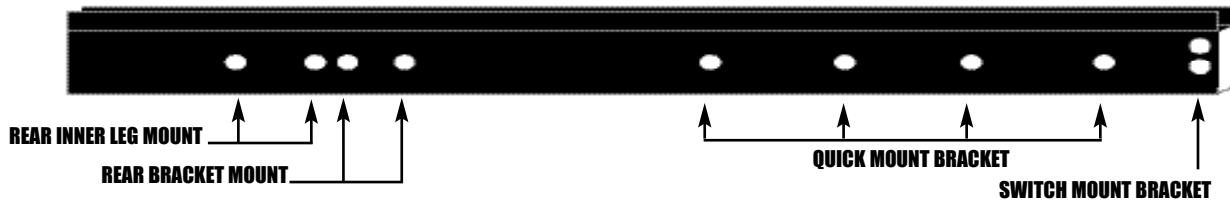


INNER RAIL SIDE VIEW - ACCESS HOLES

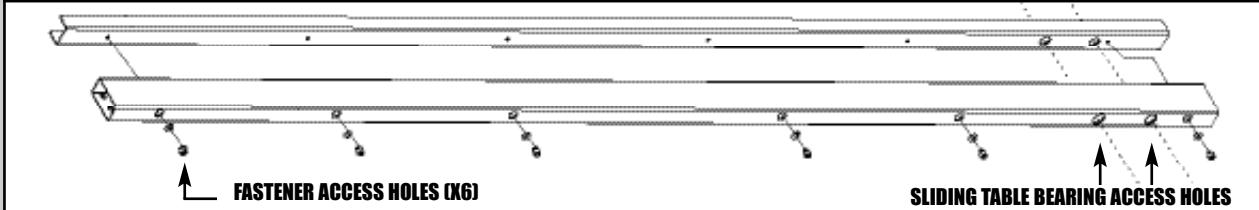

ATTACH THE REAR INNER LEG MOUNT TO THE INNER GUIDE RAIL

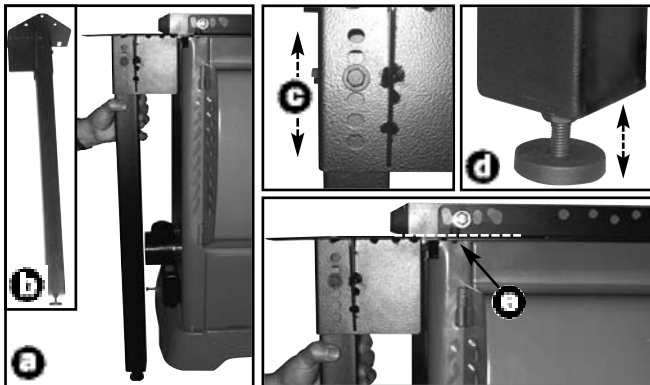


- Using the quick mount bracket as a height gauge **a**, adjust the height of the rear inner leg mount **b** by finding the hole that comes closest **c** and/or by adjusting the leveling foot **d**, until the top of the rear inner bracket is even with the quick mount bracket **e**.

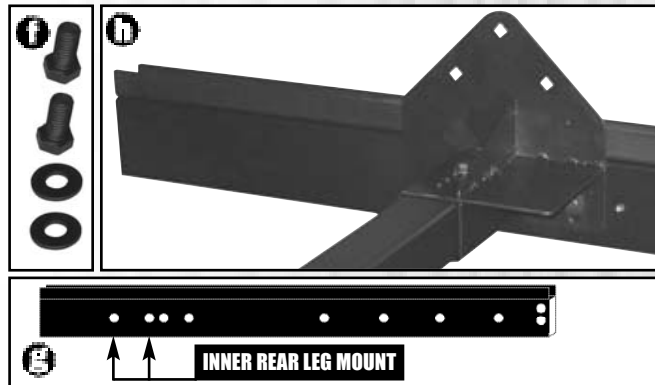

- Attach the rear leg mount to the inner rail using 2 hex bolts and 2 washers **f**, aligning the leg mount with the back two threaded holes in the rail **g**, as shown in **h**.


ATTACH THE INNER GUIDE RAIL TO THE QUICK MOUNT BRACKET

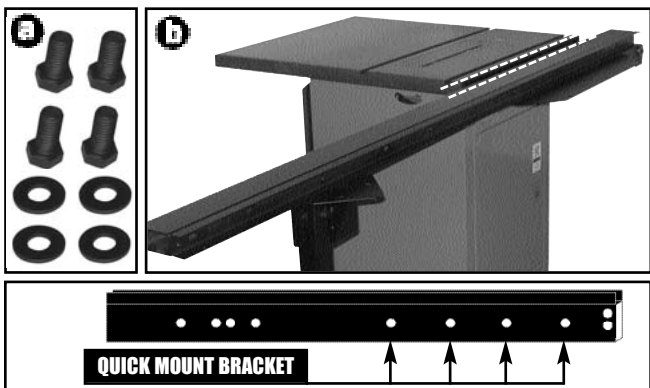

Attach the inner rail to the quick mount bracket using 4 hex bolts and 4 washers **a**.

Note: Verify that the inner rail is somewhat parallel with the saw table **b** before tightening the bolts.

INSTALL THE SWITCH MOUNT BRACKET

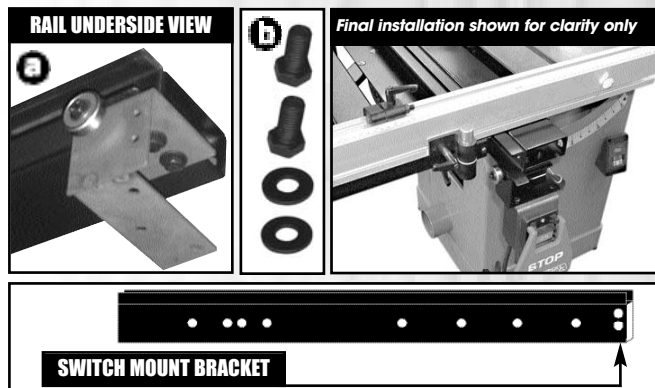

Install the switch mount bracket on the front end of the inner rail as shown in **a**, using 2 hex bolts and 2 washers **b**.



STEP 3 - CROSS BRACES INSTALLATION

HARDWARE BAG 3*


All mounting hardware required for Assembly Step 3 can be found in hardware bag 3.

INSTALL THE REAR CROSS BRACE

1. Attach the rear bracket mount **a** to the inner guide rail as shown in **b**, using two hex bolts and washers **c**.

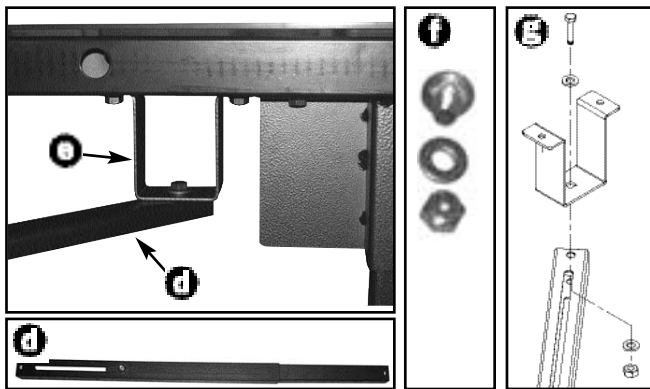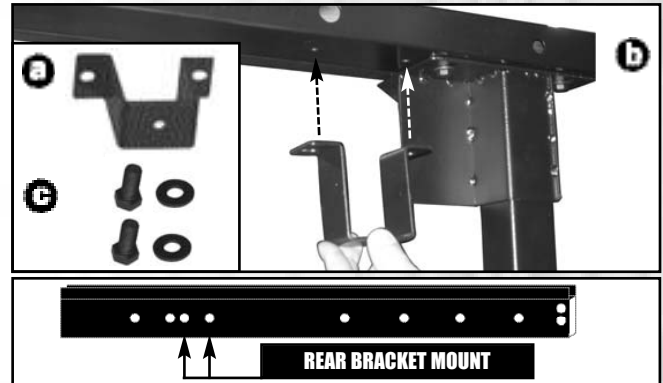


2. Attach the rear cross brace assembly **d** to the rear bracket mount **c**, using one hex bolt, 2 flat washers and a lock nut **e** in the assembly order shown in **e**.

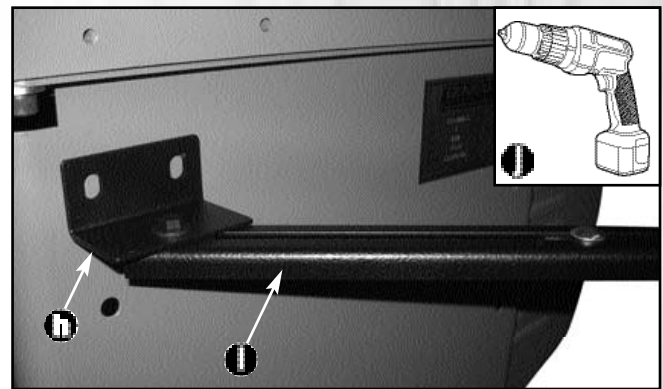


3. Attach the saw mounting bracket **f** to the rear cross brace **d** as shown, using the same hardware, in the same assembly order as in previous step (see **f** and **e**), then attach the saw mounting bracket to the saw, using the same hardware as for rear bracket mount installation (see **c**).

Note: If needed, drill two holes in your saw cabinet **g**.


INSTALL THE CROSS BRACES

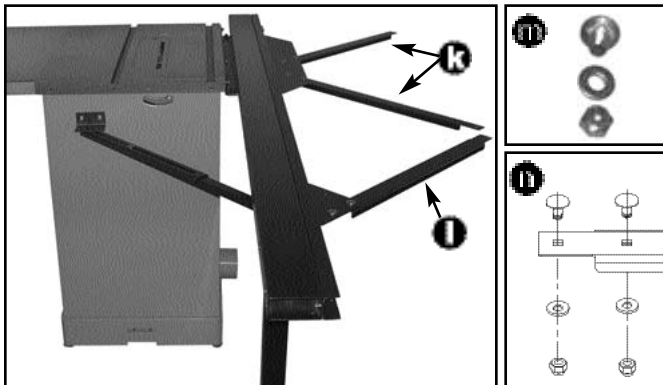


4. Attach two cross braces to the quick mount bracket **h** and the last cross brace to the rear inside bracket **i** as shown, using 6 shoulder bolts, flat washers and cap nuts **j** in the assembly order shown in **j**.

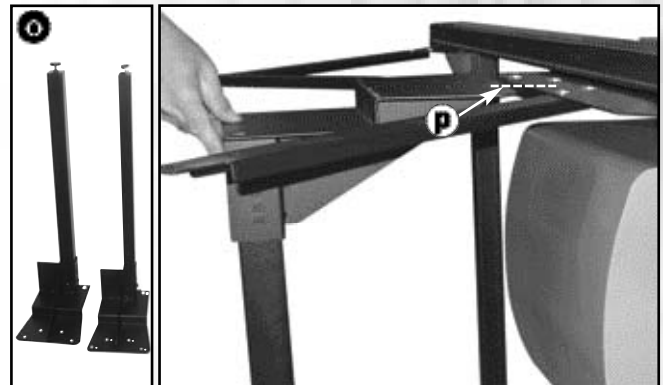

5. Using the quick mount bracket as a height gauge **l**, adjust the height of the two front outer leg mounts **k** by finding the hole that comes closest and/or by adjusting their leveling foot, until the top of the front outer brackets are even with the quick mount bracket.

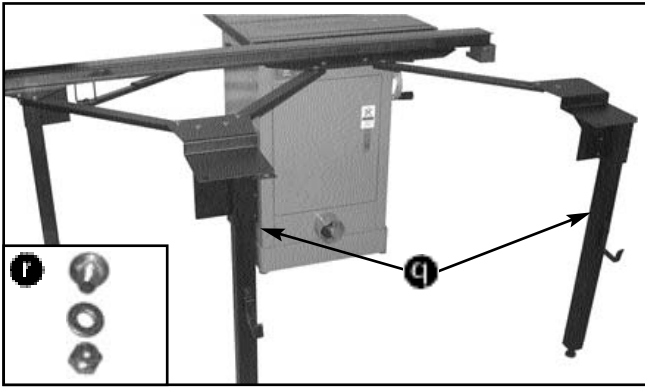


7. Attach the two front outside leg mounts **4** to the cross braces as shown, using 6 shoulder bolts, flat washers and cap nuts **7**.

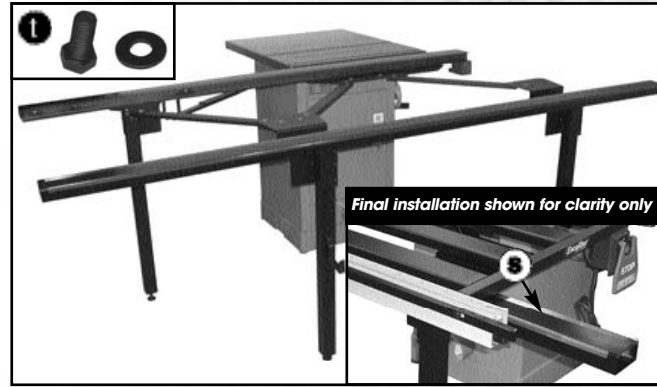

8. Attach the outer rail to the leg mounts (with the wide polished surface **3** closest to the table saw) as shown, using 4 hex bolts and washers **1** from hardware bag 2.

Note: The rear outer leg mount **11** will be installed later, once the sliding table has been leveled with the saw table in the section "FINE TUNING ADJUSTMENTS".

The 2 hex bolts and washers remaining from hardware bag 2 will be used for this later.

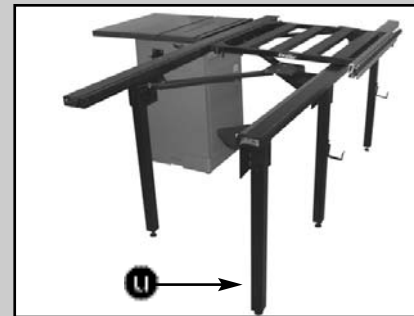


STEP 4 - TABLE AND FENCE INSTALLATION


HARDWARE BAG 4*

*All mounting hardware required for Assembly Step 4 can be found in hardware bag 4.

INSTALL THE SLIDING TABLE

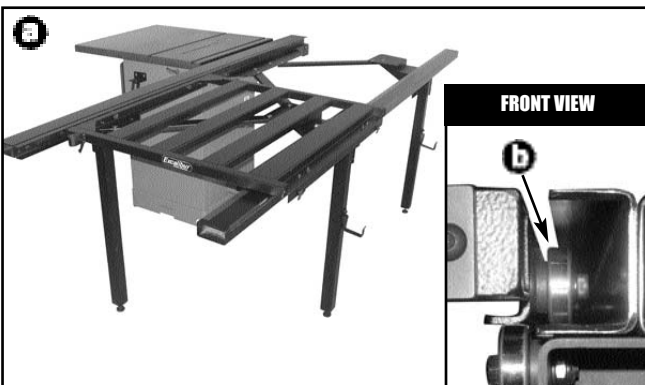

1. Carefully slide the table onto the rails **a** with the bearings/scrapers in the bearing guide channel as shown in **b**.

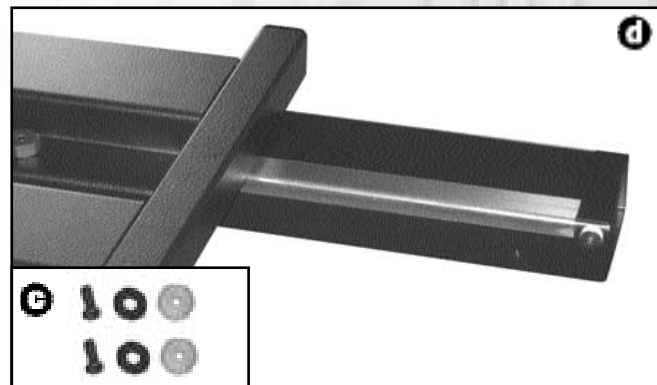


2. Screw the table stops **c** into the threaded holes at each end of the outer guide rail as show in **d**.


BEARING ADJUSTMENTS




3. To eliminate the lateral play between the table and the outer rail, release the locking bolts on the eccentric adjusters from underside of the table. Using a 3/4" socket or wrench turn the eccentric adjusters Ⓒ to pre-load the bearings against the rail. **DO NOT OVER LOAD** the bearings to the rail. Tighten the eccentric adjusters locking bolts making sure the eccentric adjusters do not move.

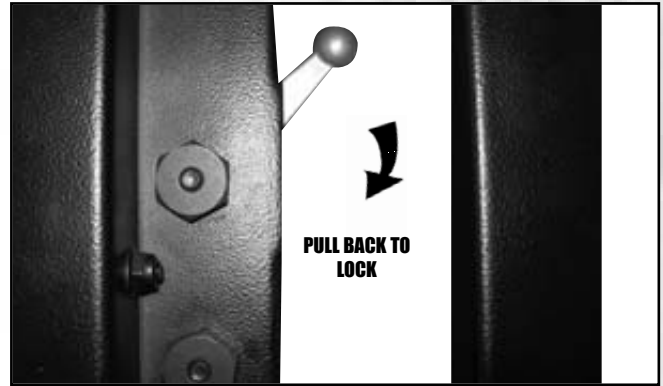


4. The brake lever is also mounted on an eccentric adjuster. If needed, turn the eccentric adjuster so that the brake lever prevents the table from sliding when in the locked position. Pull back towards the operator to lock.

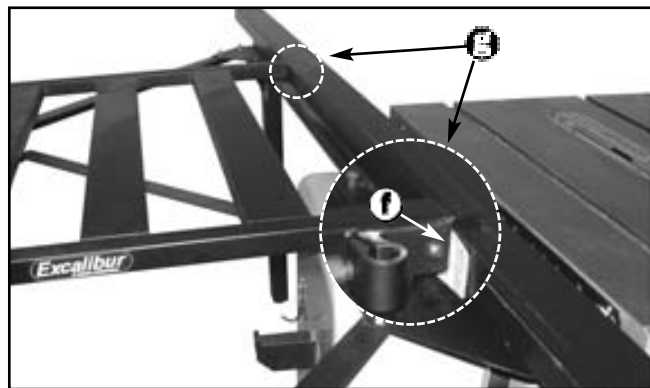


5. To set and maintain even spacing between the inner rail and the sliding table, insert wood or cardboard shims (1/8" - 3/16" thick) between the inner rail and the edge of the saw table Ⓕ at the front and the rear of the table Ⓖ.

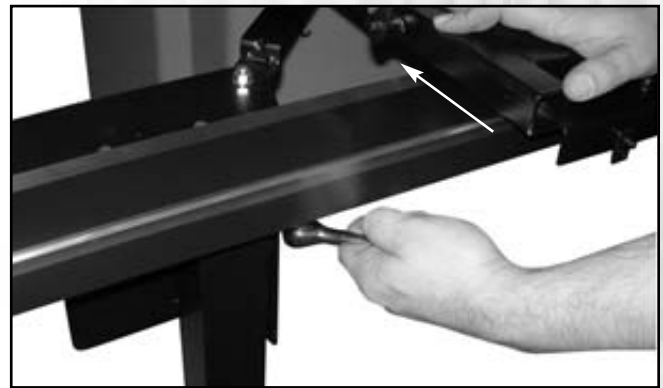


6. While leaning against the outside of the table to pinch the shims in place tighten the outer rail mounting bolts on the outer brackets using a 12 mm socket and then remove the shims.

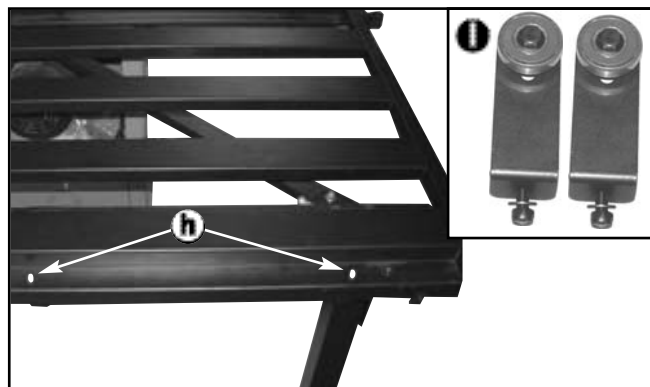


7. Using the slotted holes on the outer horizontal face of the sliding table Ⓕ install the 2 roller bearing assemblies Ⓖ.

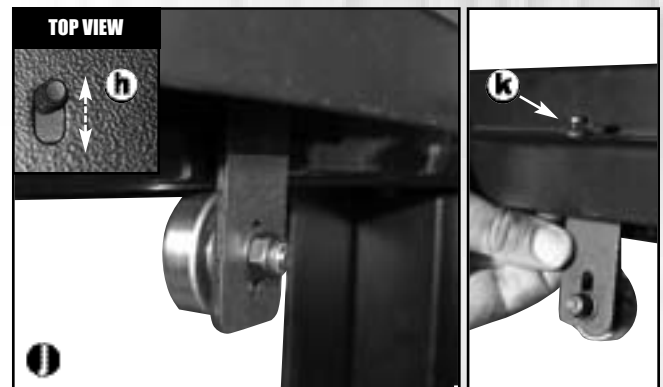

8. Adjust the positioning of the bearing brackets, in or out, along the slotted holes Ⓕ in the table to bring the bracket as close to the outside edge of the rail, without touching Ⓖ. Then tighten the nuts Ⓖ to lock the bearing brackets in place.

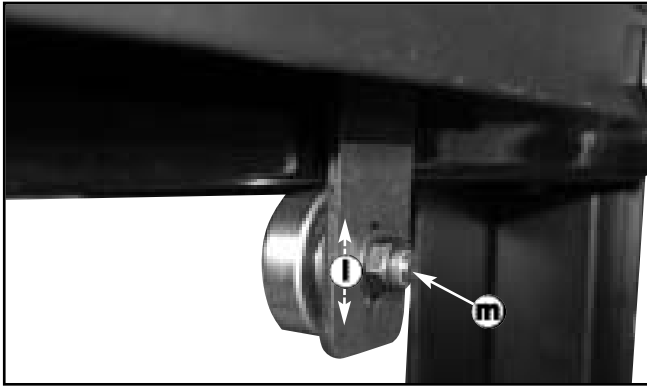


9. Adjust the height of the bearings in the slotted hole **l** in their bracket so that each bearing touches the bottom edge of the guide rail, then tighten the nuts **m** to lock the bearings in place.

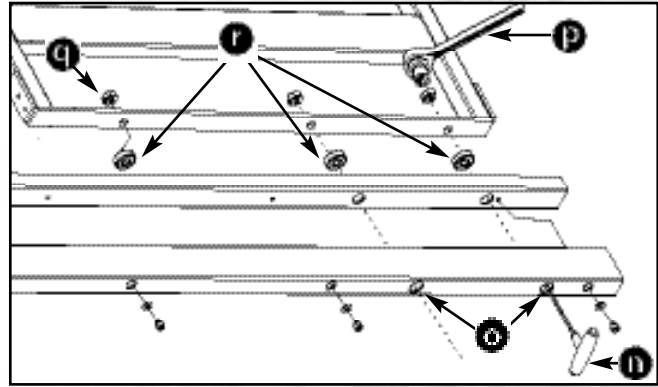


10. To eliminate the vertical play between the table and the inner rail, using the 6 mm "T" handle wrench supplied **d**, locate and release the locking bolts on the eccentric adjusters (access through holes in inner rail **s**). Using a 3/4" socket or wrench **p**, turn the eccentric adjusters **q** to pre-load the bearings **r** against the inner rail. DO NOT OVER LOAD the bearings to the rail. Tighten the eccentric adjuster locking bolts making sure the eccentric adjusters do not move.

11. Loosen the nut **s** on the switch mount bracket bearing then adjust the height of the bearing in its slotted hole **l** until it just touches the underside of the sliding table, then tighten the nut to lock the bearing in place.

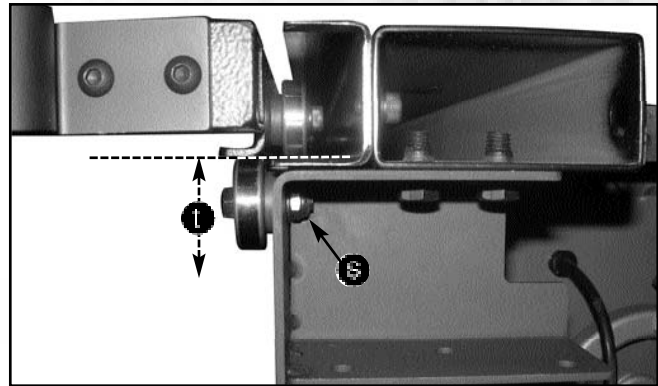


INSTALL THE ANGLE ADJUSTMENT RAIL

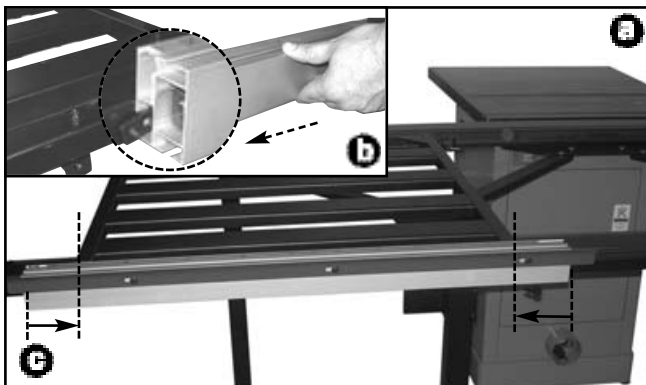

1. Attach the angle adjustment rail to the outside edge of the sliding table **a** by sliding the t-nuts into the T-slot in the adjustment rail **b** and roughly center the rail (equal distance front to back) on the table **c**.



2. With a square or a straightedge, verify that the angle adjustment rail is leveled with the table **d** at both ends of the rail. Then tighten the two t-nut / hex head bolt assemblies **e** to secure the rail to the table.

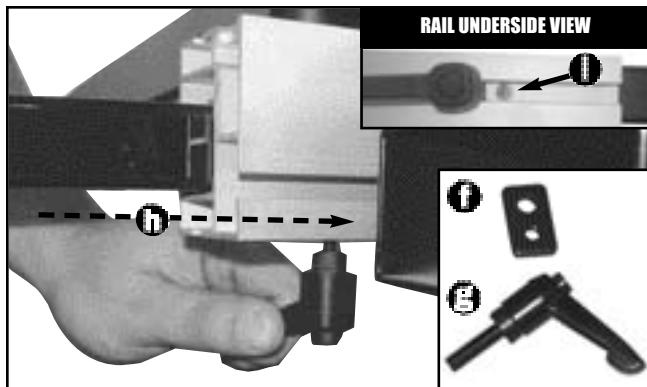


3. Thread a t-nut **f** on to one of the ratchet levers **e**. Then slide the t-nut into the t-track **d**, and locate the hole in the underside of the angle adjustment rail **d**.

Note: This ratchet lever is used to secure the return handle.



4. Thread a ratchet lever **f** onto the fence pivot brackets **k** at each end of the table.


CROSS CUT FENCE ASSEMBLY

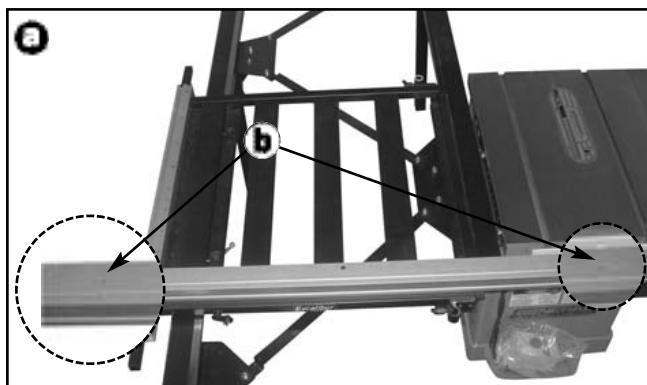


1. Sit the cross cut fence face down on the front* of the sliding table **a** with holes **b** facing upward.


***For directional clarity "front" is used to refer to the operators side of the saw.**

3. Insert the t-nut into the t-slot on the right end of the fence (closest to the saw) **d**, then slide the pivot post approximately 12" onto the fence **c**, and secure it with the ratchet lever **f**.

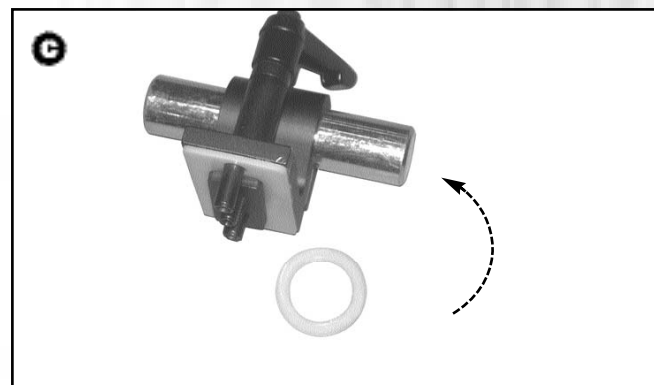


2. Insert the plastic washer on the fence pivot post **c**.

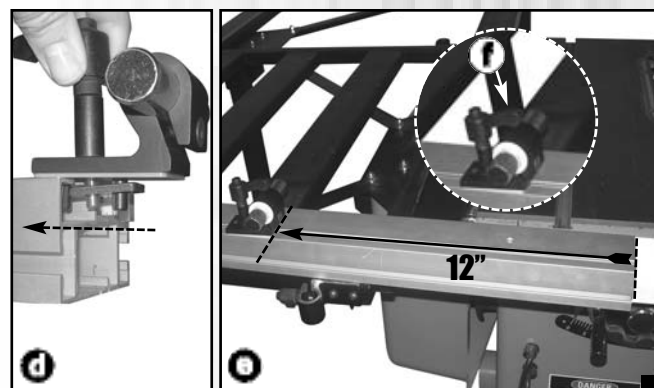


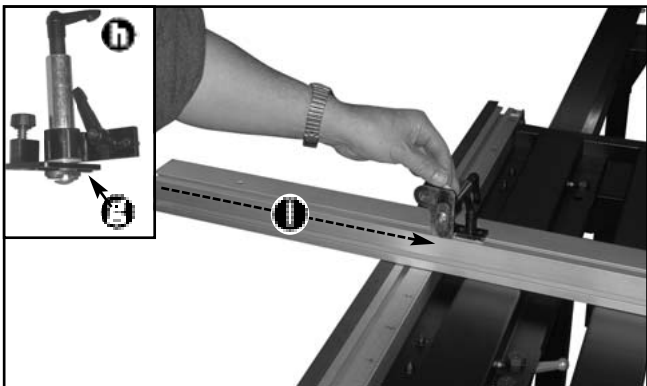


4. Slide the t-nut (3) on the miter clamp (1) into the t-slot approximately 2' from the opposite end of the fence (2).

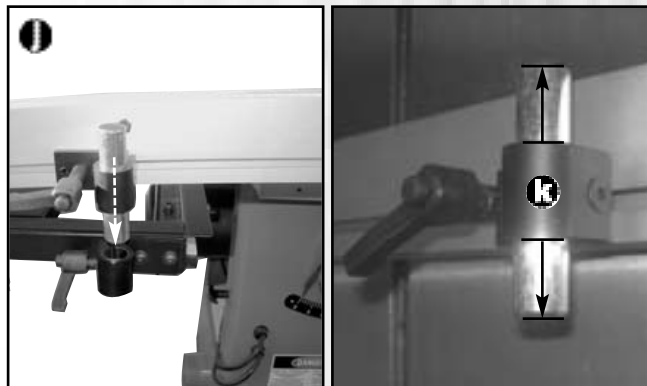


5. Fit the pivot post into the pivot post bracket (5).
Note: The pivot post should protrude an equal distance from the top and bottom of its mounting bracket (5).

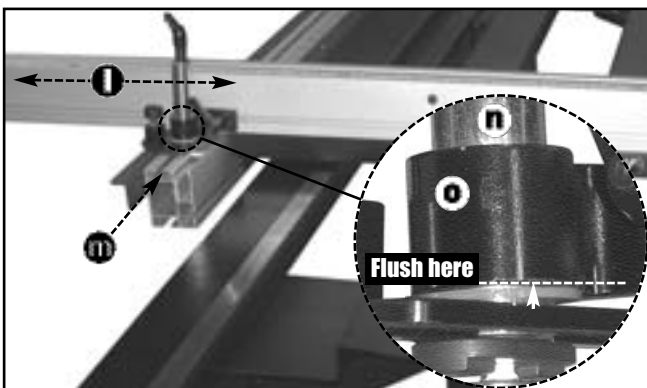

6. Slide the mitre clamp assembly along the fence (2) until the t-nut lines up with the t-slot on the angle adjustment rail (11). If needed, adjust the height of the mitre clamp post (6) so it is flush with the bottom of the mitre clamp bracket (7).

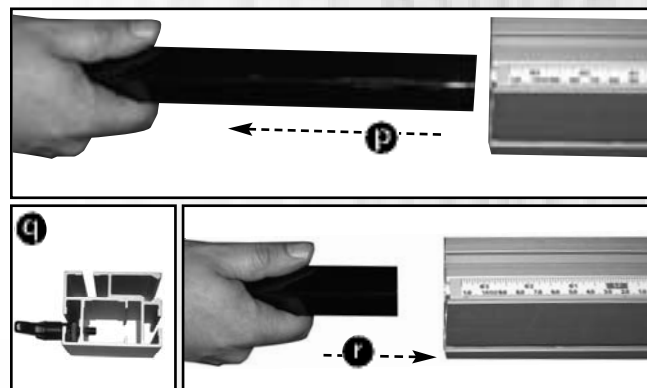

7. Remove the fence extension post from the end of the fence (2). Slide the fence extension stop mount (9) on to the post (8) and re-install the post in the same end of the fence (2).

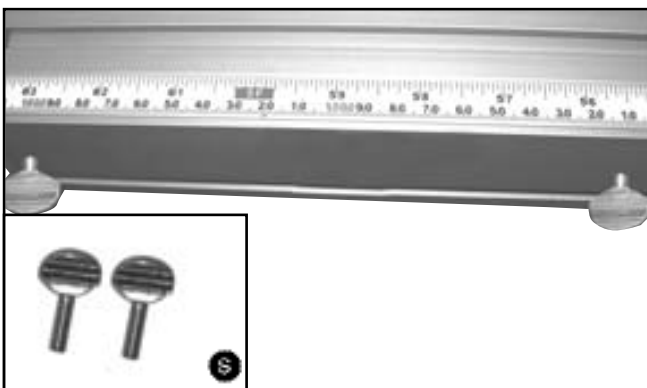

8. Install the two thumbscrews (10) into the holes in the front face of the cross cut fence.

Note: The thumbscrew is used to lock the fence extension post in place.



The cross cut fence may be stored on the fence storage brackets as shown above.


FINE TUNING ADJUSTMENTS

To ensure the ability to make square and accurate repeat cuts the following fine tuning adjustment procedures should be performed after completing the assembly steps.


VERY IMPORTANT!

THE FOLLOWING ADJUSTMENTS WILL PROVIDE ACCURACY ONLY IF YOUR SAW TABLE IS LEVELED WITH THE FLOOR. USE SHIMS (OR LEVELING FEET IF IT HAS SOME) FOR LEVELING IF NEEDED.

LEVELING THE SLIDING TABLE WITH THE SAW TABLE

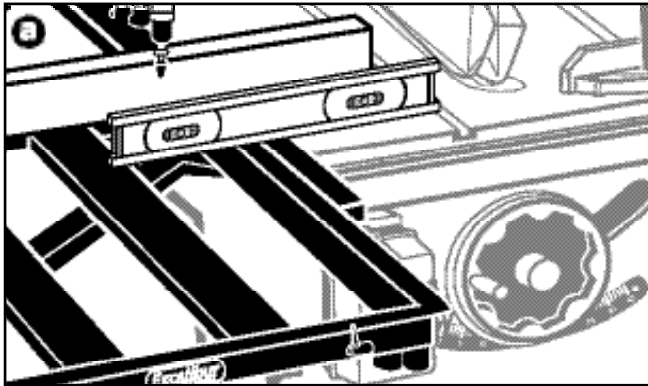

1. Using a level, verify that the sliding table is leveled with the saw table **a**.

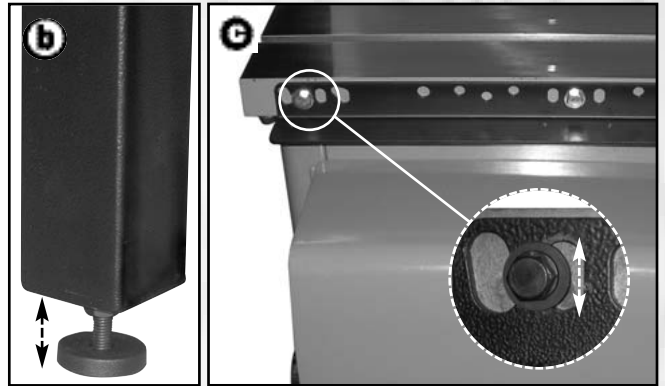


2. If needed adjust the leveling feet on the support legs **b**. The height of the main mounting bracket may also need to be adjusted **c**.

Once the sliding table has been leveled with the saw table, you can proceed to rear outer leg mount installation as follows.

INSTALL THE REAR OUTER LEG MOUNT



1. Place the rear outside leg mount **a** next to the outside guide rail. The top of the bracket should be at the same height as the bottom of the guide rail. If not, find the hole that comes closest and, if needed, fine tune with the leveling foot.

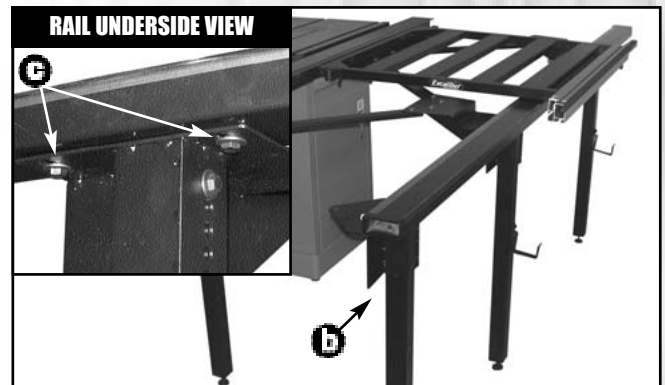

2. Attach the rear outside leg mount under the outside guide rail as shown in **b** using the two remaining hex bolts and washers from hardware bag 2 **c**.


SETTING THE SLIDING TABLE TRACKING

The sliding table must be set to run parallel to the blade **(a)** (and not the mitre slot **(b)**). Verify and, if needed, set the table tracking parallel to the blade as follows:

Note: For the following step you will need a straightedge (a minimum of 30" long and preferably as long as possible). If you don't own one, you can always use your saw rip fence.




TURN OFF AND UNPLUG THE SAW BEFORE PERFORMING ANY ADJUSTMENTS.

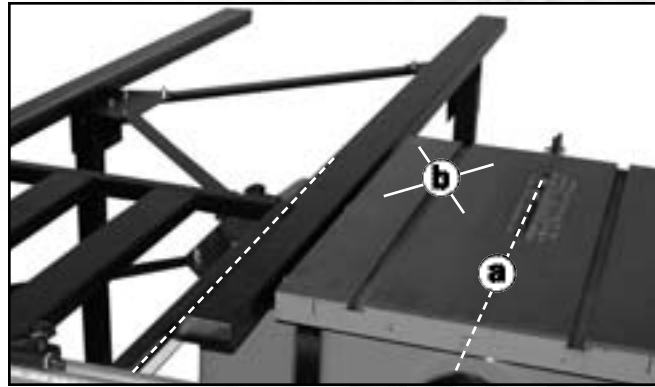


1. Raise the table saw's blade to its maximum and place the straightedge (or rip fence) against the blade.
3. Slowly slide the table front to back **(a)** while observing for any distance/parallel variations from the tape measure slide to the straightedge (or rip fence) **(b)**, taking care not to bump or dislodge the straightedge from the blade.

Note: If you observe no parallel variations from the tape measure slide to the straightedge, then the table is in fact already tracking parallel to the blade and will require no further adjustment. Proceed to the next adjustment: "Squaring the Cross Cut Fence to the Blade".

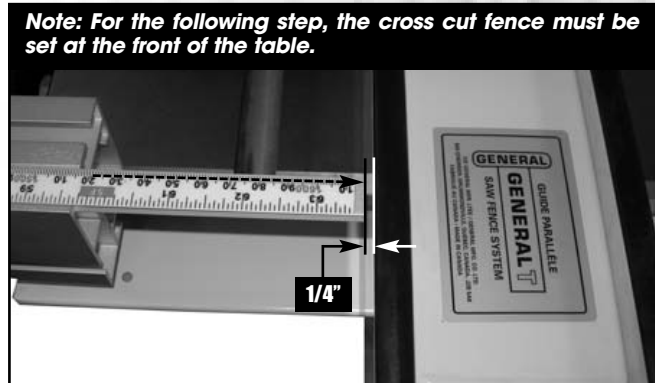



Note: For the following step, the cross cut fence must be set at the front of the table.

2. Bring the sliding tape measure slide to approximately 1/4" from your straightedge

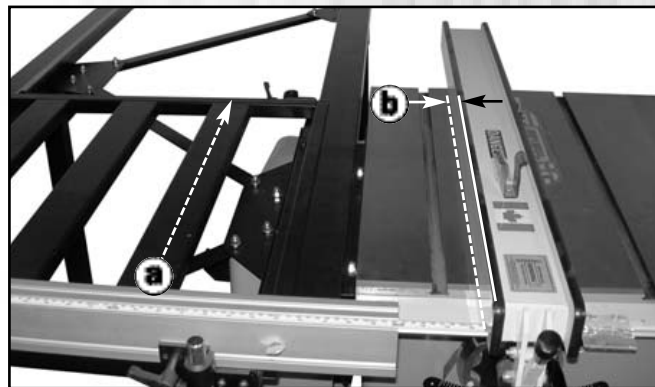

To eliminate the variation and set the table tracking parallel to the straightedge, **adjustments to the outer rail will be required.**


- a** If the table is tracking away from the straightedge (front to back) then the trailing end of the outer rail will need to be moved slightly in towards the saw (see next step).
- b** If the table is tracking in towards the straightedge (front to back) then the leading end of the outer rail will need to be moved slightly in towards the saw (see next step).

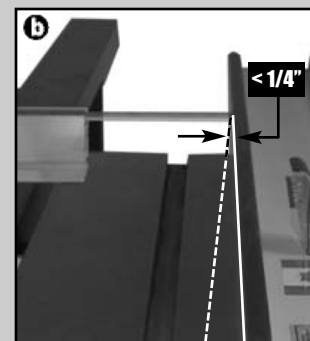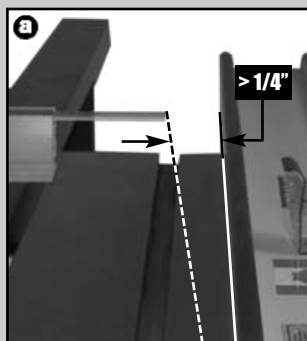

Note: As you move either end of the outer rail in towards the saw make sure to maintain a minimum 1/16" gap between the table and the outside edge of the inner rail (see shims reference - step #5 of "Install the sliding table", on page 13.




4. To adjust the outer rail, loosen the 2 bolts **c** on the front and center outer leg bracket **d**.

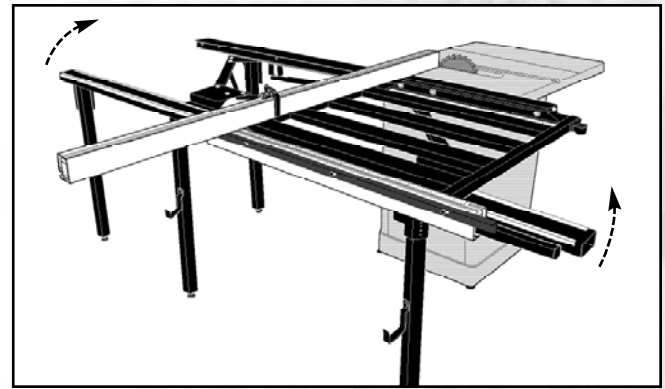


5. Manually adjust either the front or rear end of the outer rail towards the saw then retighten the leg bracket bolts.

6. Slowly slide the table front to back and verify the table tracking again. If needed, make further adjustments until the table is tracking parallel to the straightedge.

SQUARING THE CROSS CUT FENCE TO THE BLADE

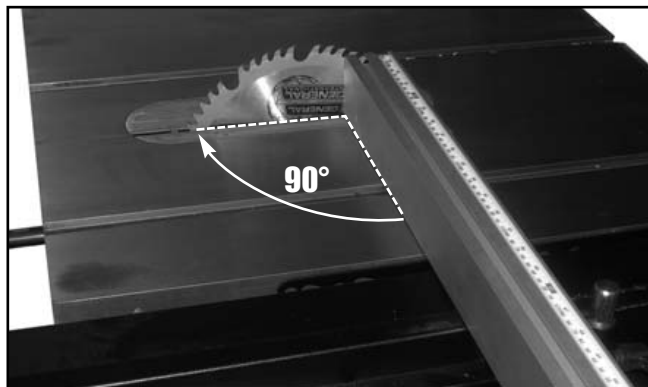

In order to make repeatable square cuts the crosscut fence must be set 90° perpendicular to the blade with the fence mounted in both front & rear positions.

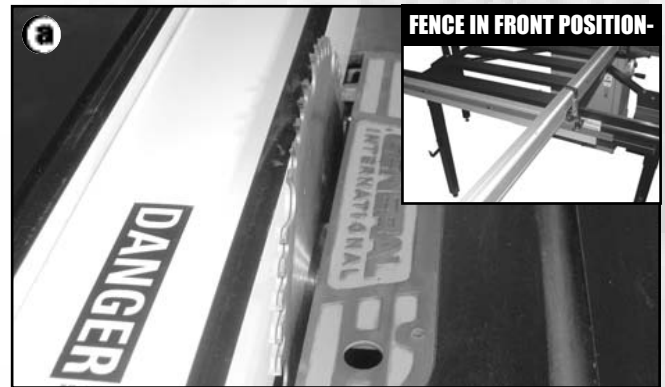


Verify and, if needed, adjust the alignment of the cross cut fence as follows for front mounted position.


1. Place a straightedge against the blade **a**.

Note: The accuracy of this adjustment will only be as good as the accuracy of the squaring tool used. A typical construction style "framing square" **b** is not considered a precision tool and is not adequate for fine tuning type adjustments.


If you do not already own one, consider contacting your local woodworking or machinist supply distributor and investing in a set of quality machinist squares that can be used for fine tuning and adjustments for virtually every machine found in a typical wood shop.

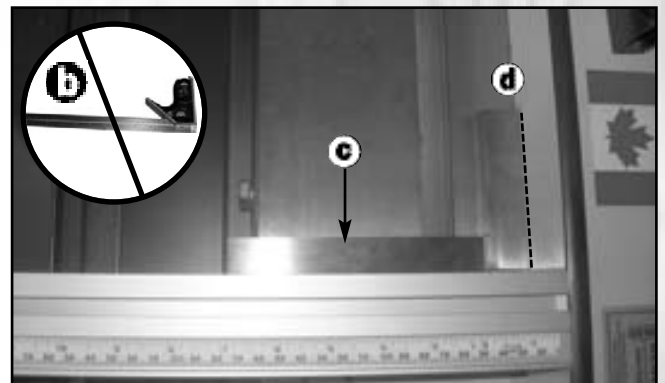

2. Place one edge of a machinist square **c** flush to the straightedge **d**.

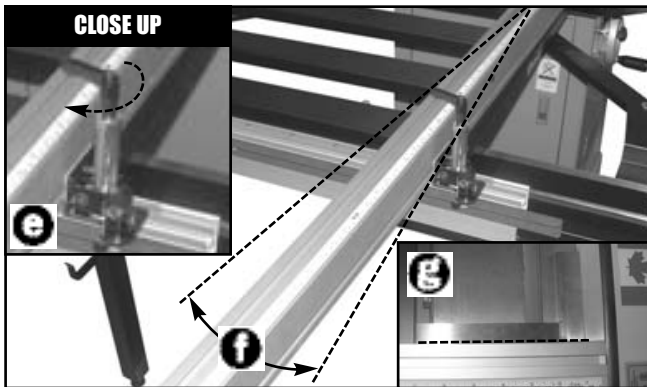


3. Loosen the miter clamp **e** and adjust the cross cut fence **f** to the perpendicular face of your machinist's square **g**. Then secure the cross cut fence in position by tightening the miter clamp.

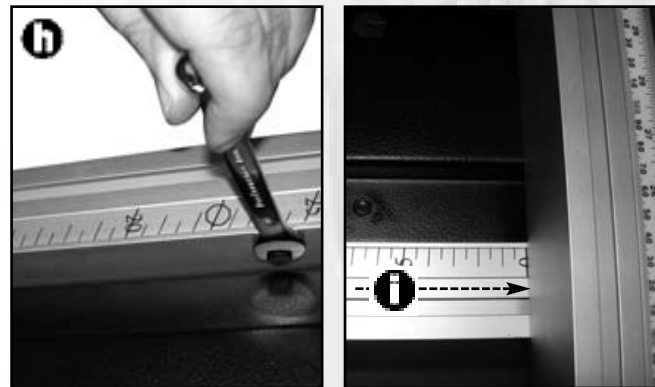


4. Adjust the sliding angle indicator (degree scale) by loosening the lock bolt **h** and manually aligning it to "0" with the front face of the cross cut fence **i** and then re-tighten the lock bolt.

SET THE 90° STOP WITH THE FENCE IN THE FRONT POSITION

The 90° stop can now be set to allow the cross cut fence to be brought back perpendicular to the blade whenever needed and without having to further realign the fence each time. To do this:

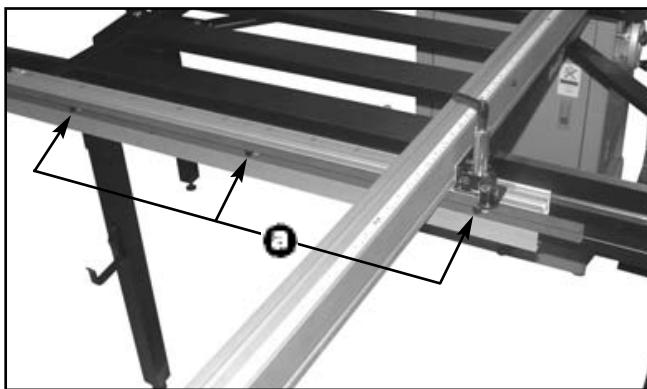


1. Loosen the 3 hex bolts **a**.

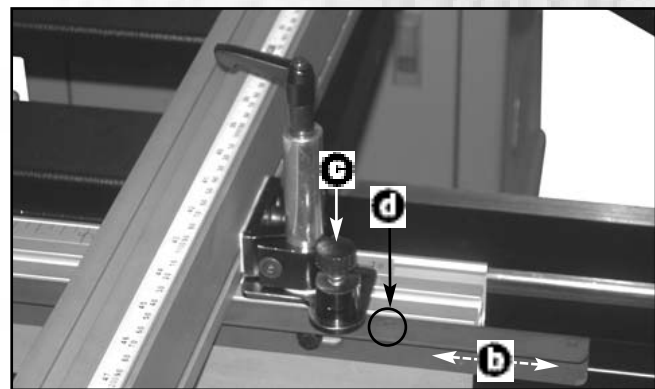

2. Slide the positive stop rail **b** until the positive stop pin **c** locates the 90° hole **d**, then retighten the bolts.

Once the 90° stop has been set, the positive stop pin can be used to locate the other holes in the positive stop rail, which corresponds to the other commonly used angles: 15°, 22.5°, 30° and 45°.

To manually set an angle, first loosen the miter clamp locking levers, then slide the left end of the cross-cut fence along the angle indicator rail to the desired angle, then retighten the locking levers to securely lock the fence in position.

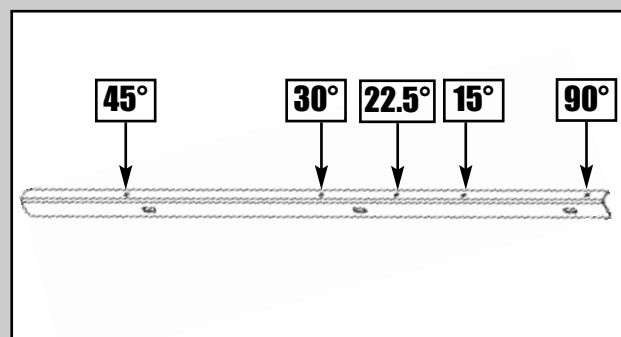


SET THE 90° STOP WITH THE FENCE IN THE REAR POSITION

In order to make repeatable square cuts the crosscut fence must be set 90° perpendicular to the blade with the fence mounted in both front & rear positions.


To align the cross cut fence in the rear mount position **a**, reverse the fence to rear position as follows.



TURN OFF AND UNPLUG THE SAW BEFORE PERFORMING ANY ADJUSTMENTS.

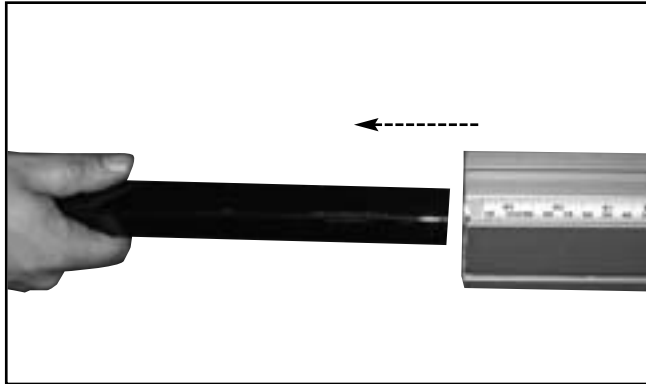



1. If installed, remove the extension from the cross-cut fence.

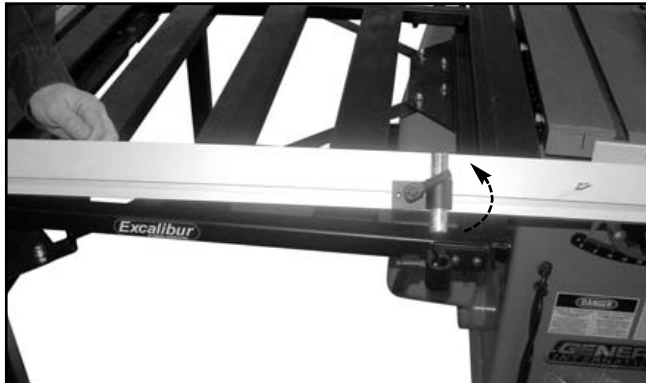


3. Lift the fence assembly off of the pivot mount and lay it face down.




5. Swing the fence assembly around 180° and fit the pivot post into the rear pivot post bracket.

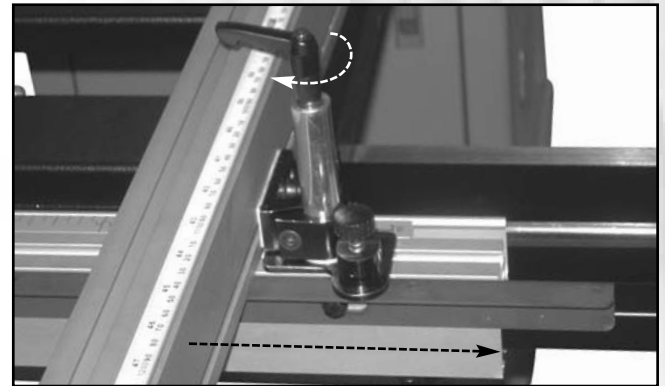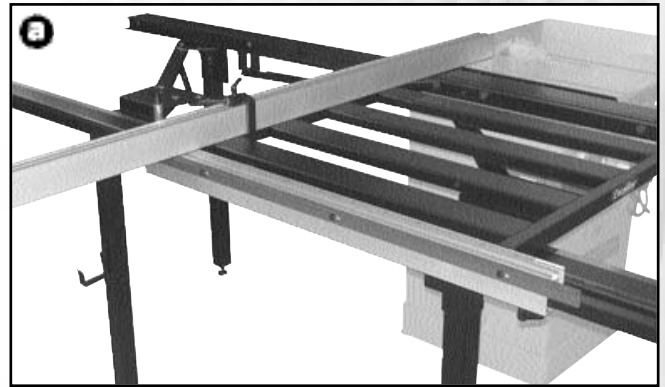

2. Loosen the miter clamp and slide the fence off of the angle adjustment rail.

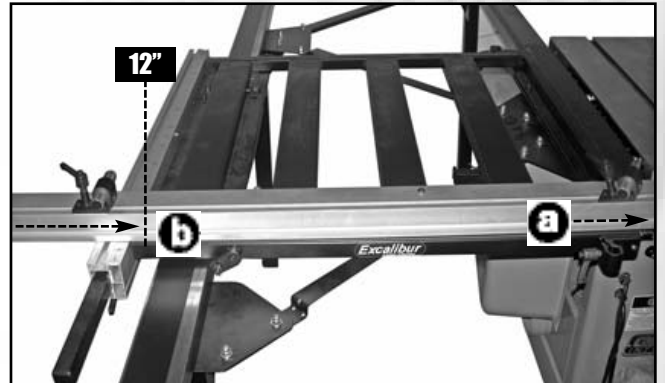

4. Slide the pivot post out of the T-track on the fence **a** and install it on the opposite side of the fence to approximately 12", **b**.

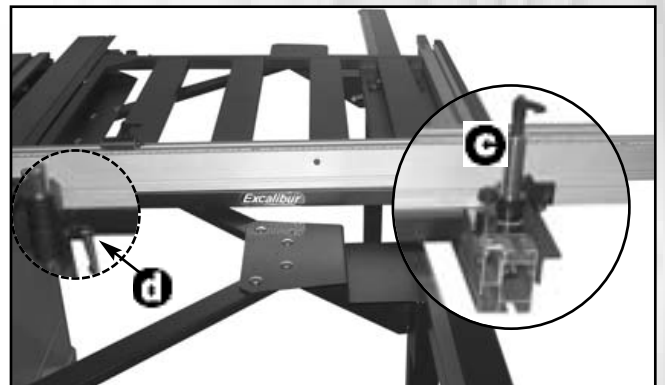


6. Slide the miter clamp assembly along the fence until the t-nut lines up with the t-slot on the angle adjustment rail **c**, then tighten the pivot bracket ratchet lever **d** to secure the fence against the table.

Once the cross cut fence has been reversed to rear position, verify and, if needed, adjust the alignment of the cross cut fence for rear mounted position. You will then be able to set the 90° stop as follows, to allow the cross cut fence to be brought back perpendicular to the blade whenever needed and without having to further realign the fence each time.

1. Loosen the hex bolt **d** and remove the 90° locator block **e**.
2. With the fence in the rear position, using a machinist square, repeat the alignment of the fence 90° to the straightedge against the blade, then lock the miter clamp **f**.
3. Slide the 90° locator block until it meets the stop pin **g**, then re-tighten the hex bolt.

Once the assembly and all alignment steps have been completed, reinstall the rip fence system on your table saw.


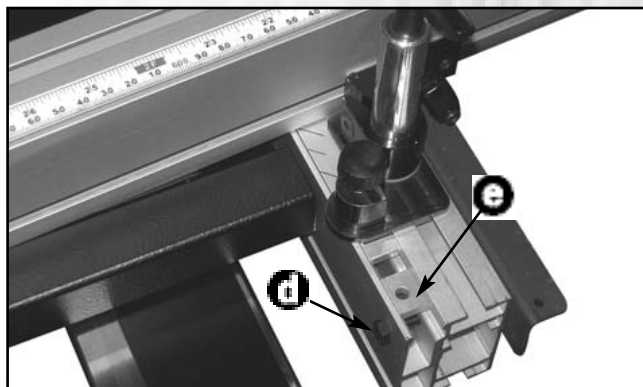


BASIC OPERATIONS


SETTING AND USING THE SLIDING SCALE

The sliding scale can be set to read left to right (from the blade onward) with the fence in either front or rear position.


- With the fence mounted to the front of the table:
Use the scale with the low numbers next to the blade **a**;
- With the fence mounted to the rear of the table:
 1. Loosen the locking bolt using a 10 mm **b**.
 2. Remove the sliding scale from the fence, swing it around 180° then re-install it in the same end of the fence so the low numbers will still be next to the blade **c**.
 3. Secure the sliding scale by tightening the locking bolt.

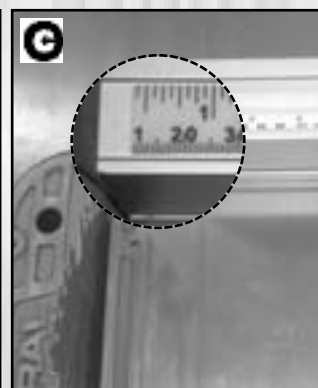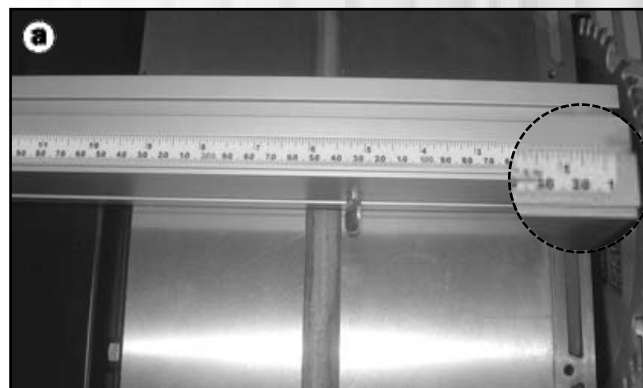

To set the sliding scale and permit accurate measurements using the flip stop:

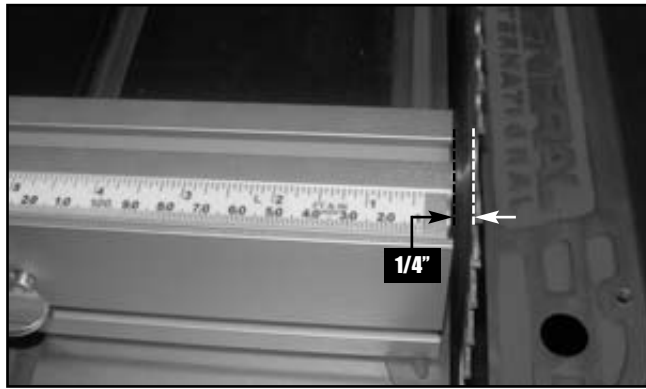


1. Set the fence to approximately 1/4" from the blade and secure it using the ratchet levers of both the miter clamp and pivot post.

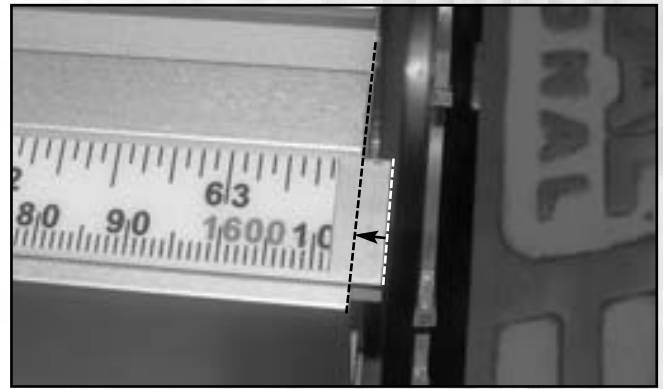


2. Align the sliding scale flush to the end of the fence.




3. Secure the sliding scale by tightening the locking bolt.

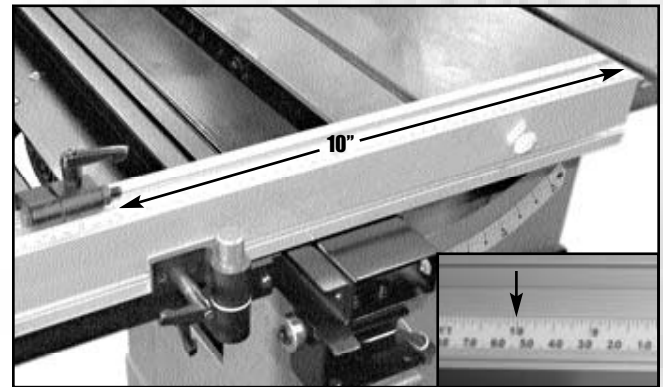

4. Position the sliding flip-up stop at any dimension on the scale, i.e. 10".

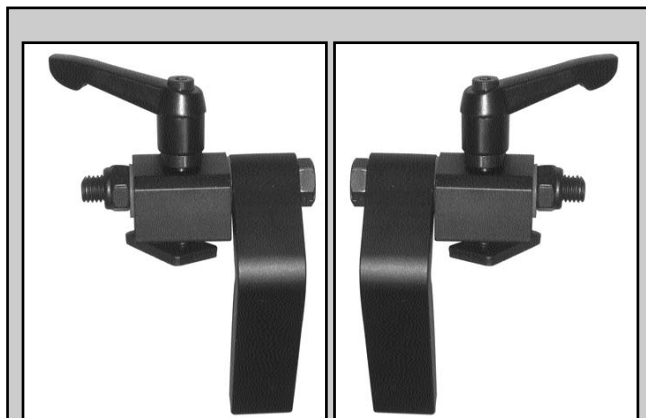

NOTE: The sliding flip-up stop is also reversible, allowing you to orient the leading edge to best suit your work habits or personal preferences.

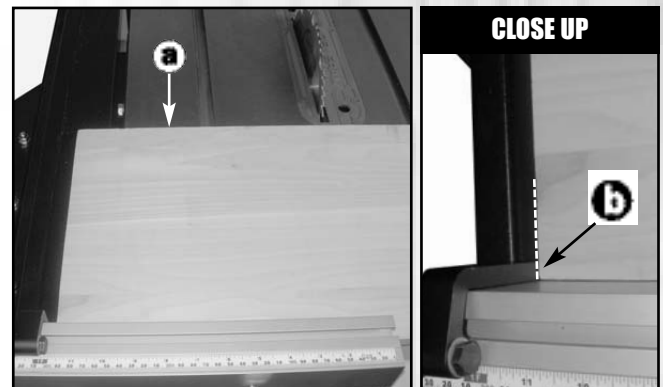


5. Draw the table to the front of the saw, providing space between the fence and the blade and place a piece of scrap material **a** against the sliding flip-up stop **b**.



VERIFY ALL FOLLOWING CHECK POINTS BEFORE TURNING ON THE SAW. FAILURE TO COMPLY CAN RESULT IN SERIOUS INJURIES.

CHECK POINTS

- Make sure that the arbor nut is secure and that the blade is firmly tightened snug on the arbor.
- Check that the blade angle and height lock knobs are tight.
- While using the saw, be sure to wear safety glasses at all times.
- Make sure that the blade guard/splitter assembly is properly installed and aligned with the blade, and that the anti-kickback pawls are functioning.
- Slide table front to back to make sure the fence completely clears the blade without touching.

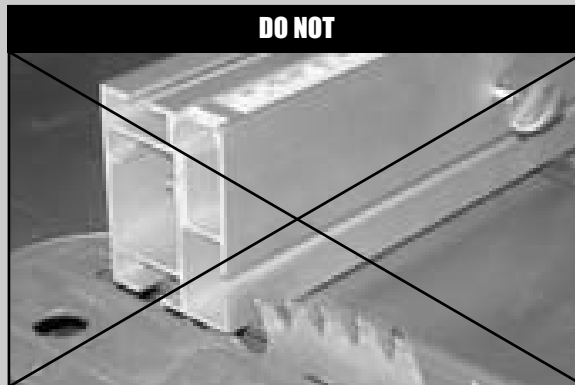

6. Turn on the saw and process the cut ensuring that the workpiece is held tight to the fence and against the stop.
7. To obtain an accurate dimension from the flip stop to the blade, measure the cut workpiece with a separate tape measure or scale.
8. Transfer this accurate dimension to the sliding scale. To do this, flip up the stop and adjust the sliding scale, aligning the dimension to the leading edge of the flip stop.
9. Lock the sliding scale in place.

PANEL CUTTING


With the cross-cut fence mounted on the rear of the table (rear position), you can cut a maximum cross cut of :



* Depending on the positioning of the quick mount bracket on your saw.



DO NOT USE RIP FENCE AS A GUIDE OR WORKPIECE STOP WHEN OPERATING THE SLIDING TABLE. TO AVOID POTENTIAL OF WORKPIECE BINDING WHICH WILL CAUSE KICKBACK, REMOVE THE RIP FENCE FROM THE SAW COMPLETELY.

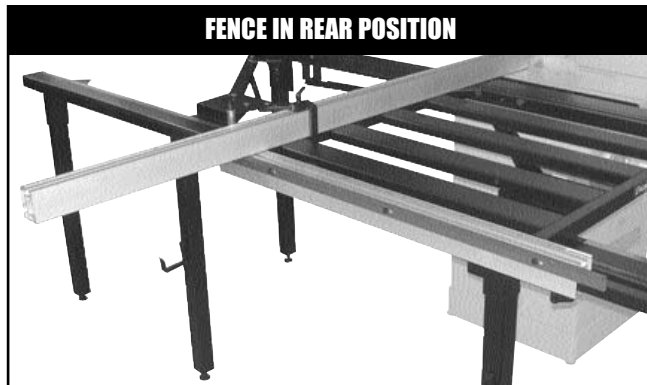


1. Set the cross-cut fence to the rear of the sliding table (Maximum capacity position).
3. Slide the cross-cut fence to within 1/4" of the blade **(b)**, then tighten the ratchet levers to secure the cross-cut fence so it does not move during the cut.
4. Draw the sliding table fully to the front of the saw.
5. Load the panel onto the sliding table.
6. Adjust the sliding extension and/or flip stop if needed.
7. With the panel flush to the cross-cut fence, align the cut line **(c)** on the panel with the blade.



Note: For repeat cuts, set the flip stop against the opposite end of the panel and lock it in place.

8. Turn on the saw.
9. Keeping a firm forward pressure against the panel **(d)** to hold it flush to the fence, walk the panel through the cut.

Tip: The table return handle **(e) can be used to help maintain pressure on the workpiece against the fence as you push it through the cut.**

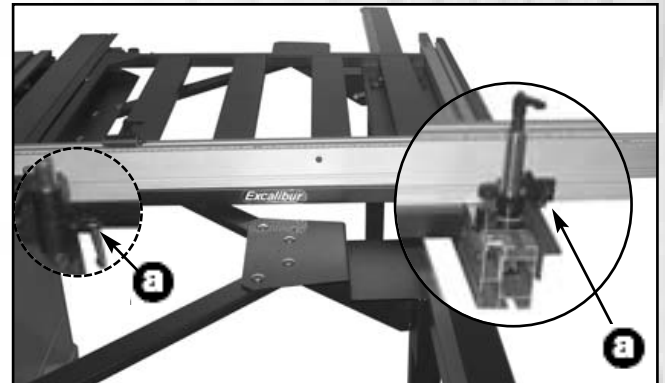

2. Loosen the two ratchet levers **(a)**.

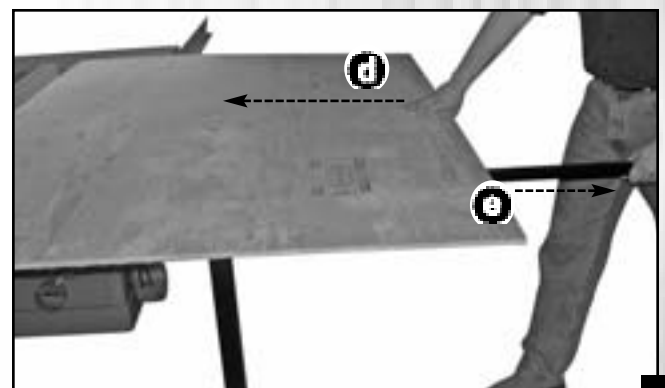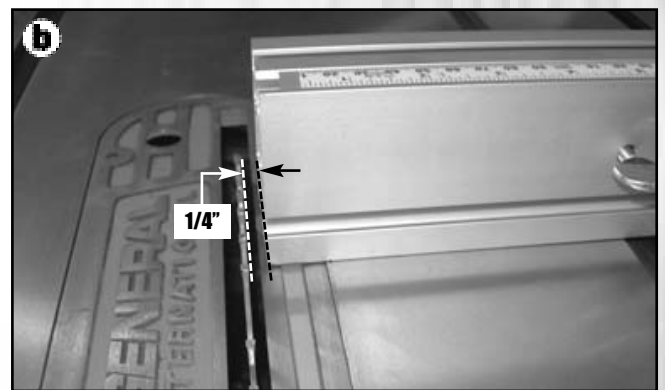


MITER CUTS

With the cross-cut fence positioned at the front of the table (front position), you can cut a maximum of 36"* and make miter cuts from 0° to 45°.


* Depending on the positioning of the quick mount bracket on your saw.

NOTE: To reposition cutting capacity, slide the quick mount bracket towards the front of the saw. See the explanatory note at the bottom of this page.

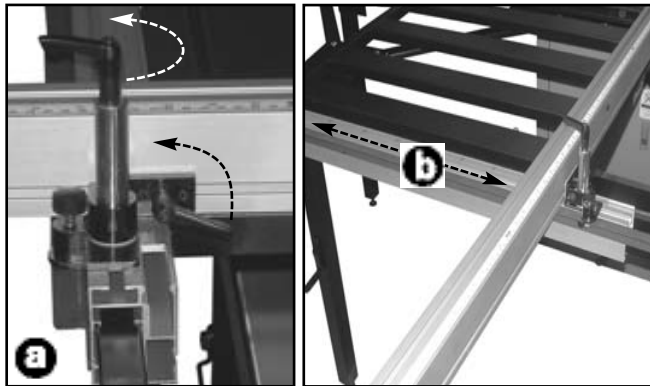


Loosen the miter clamp locking levers **a**, then slide the left end of the cross-cut fence along the angle indicator rail to the desired angle **b** and retighten the locking levers to securely lock the fence in position.

FENCE IN FRONT POSITION

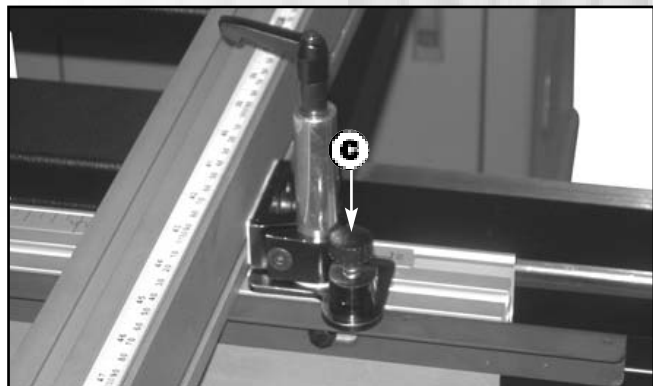


To set commonly used angles: 15°, 22.5°, 30°, 45° and 90°, loosen the miter clamp locking levers and position the fence in the vicinity of the desired angle. Compress the stop pin **c** until it seats in the hole then tighten the miter clamp locking levers.

USAGE TIPS

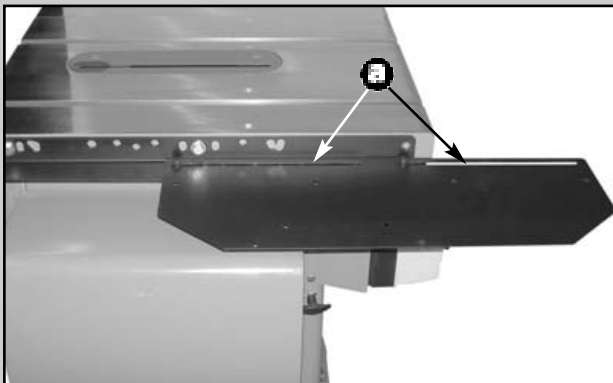

The two slots in the quick mount bracket **a** are for repositioning the cut capacities of this unit.

For maximum stability, use all four socket head cap screws.

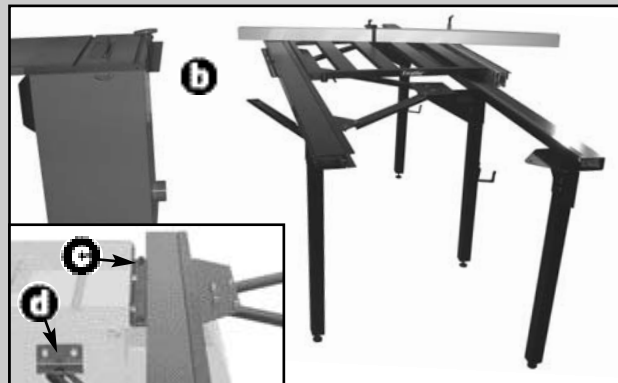

The sliding table can be detached from the saw and put aside **b**, simply by unscrewing the 4 cap screws which secure the quick mount bracket to the main mounting bracket **c** and by detaching the rear cross brace from the saw mounting bracket **d**.

RECOMMENDED OPTIONAL ACCESSORIES


Here are some of the optional accessories available from your local General International dealer.

For more information about our products, please visit our website at www.general.ca



SLIDING FLIP-UP WORKSTOP **#50-EXSTOP**

Sliding flip stop for cross cut fence on Excalibur sliding tables. Fits in the t-slot of the cross cut fence on your Excalibur sliding table. For applications where multiple repeat cuts are required, use several stops positioned where needed and flip up out of the way when not required.

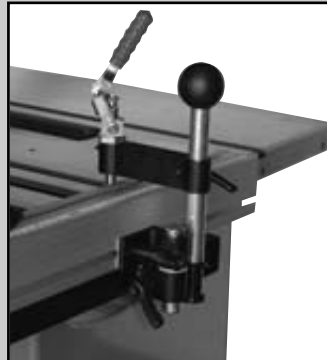

HOLD DOWN CLAMP **#50-EXHDC**

Hold down clamp for Excalibur sliding tables. Holds the workpiece down for consistent cuts and improved accuracy with your Excalibur sliding table.

Notes

SUPPORT SYSTEM



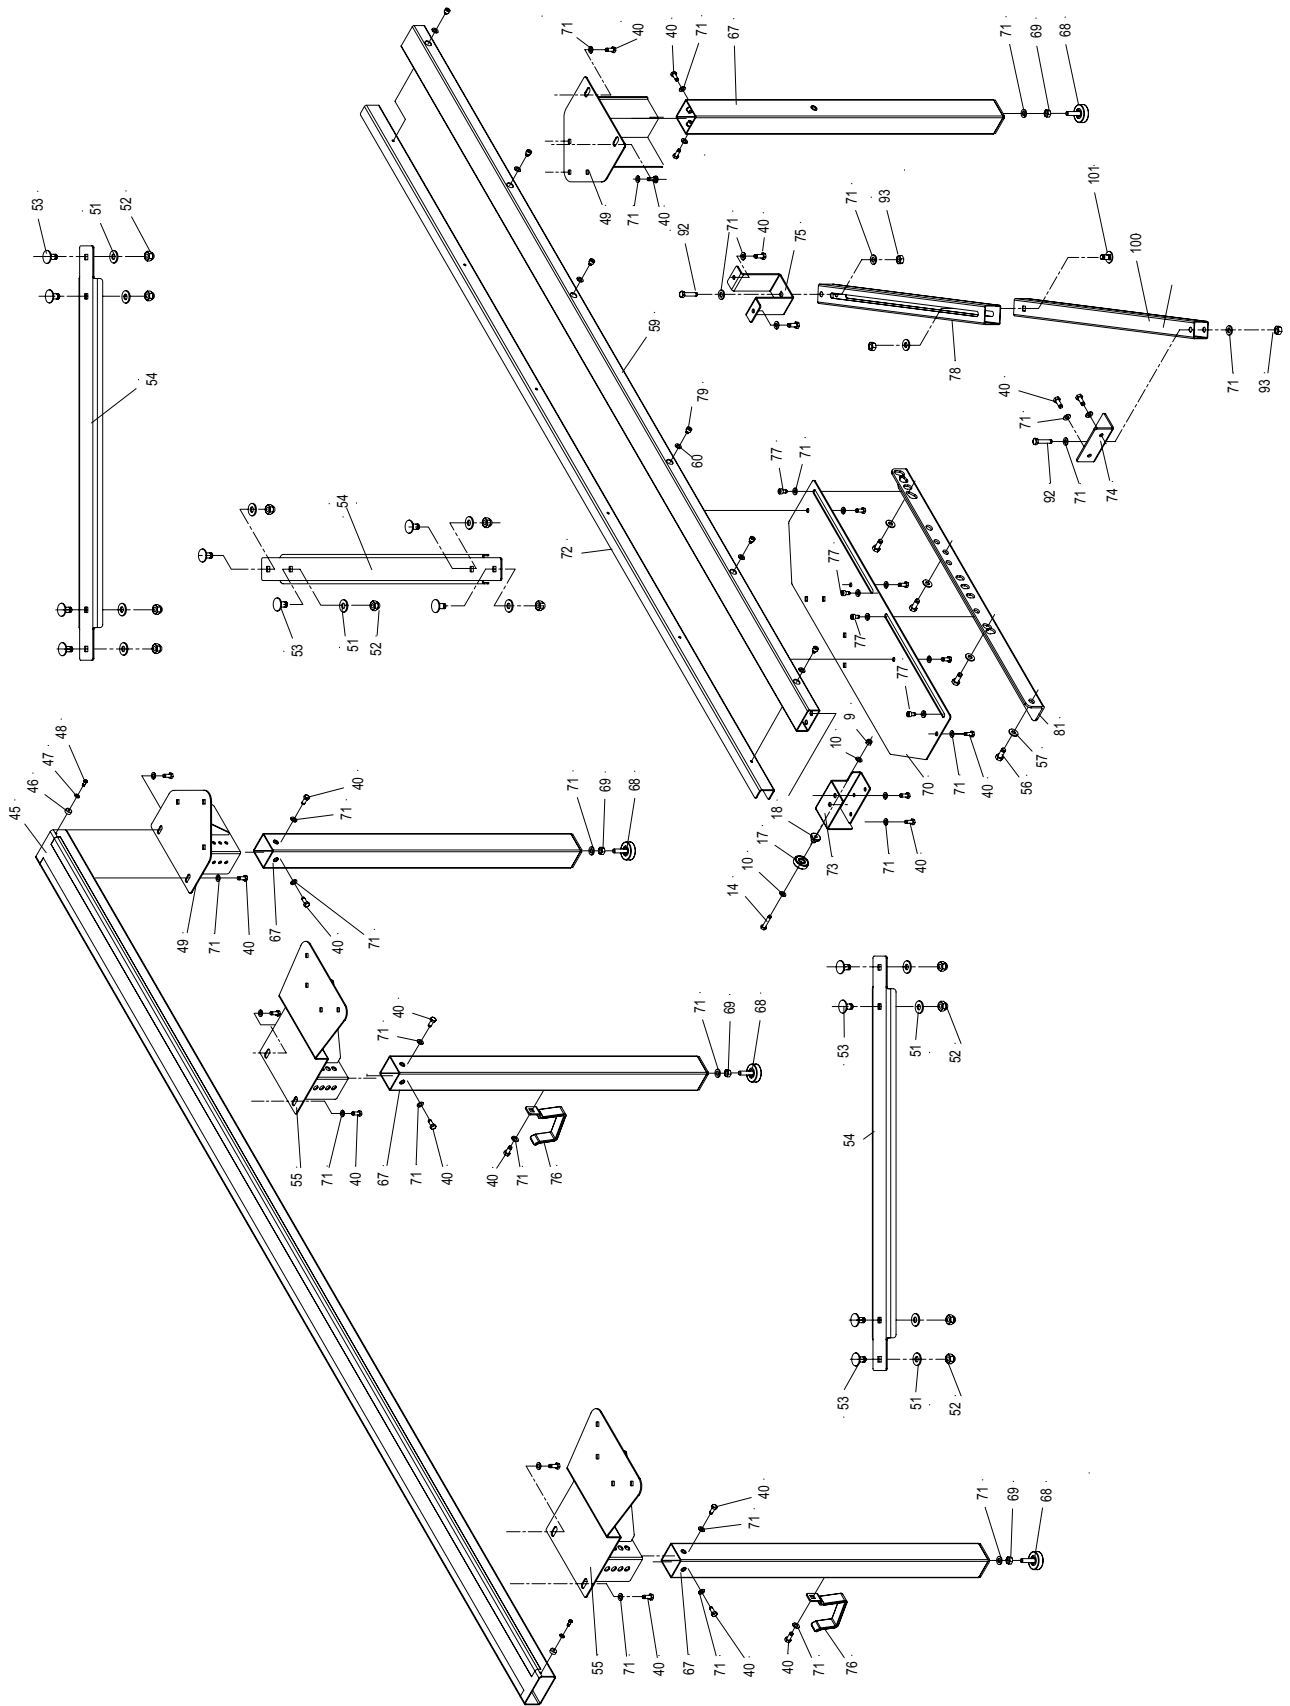


TABLE ASSEMBLY

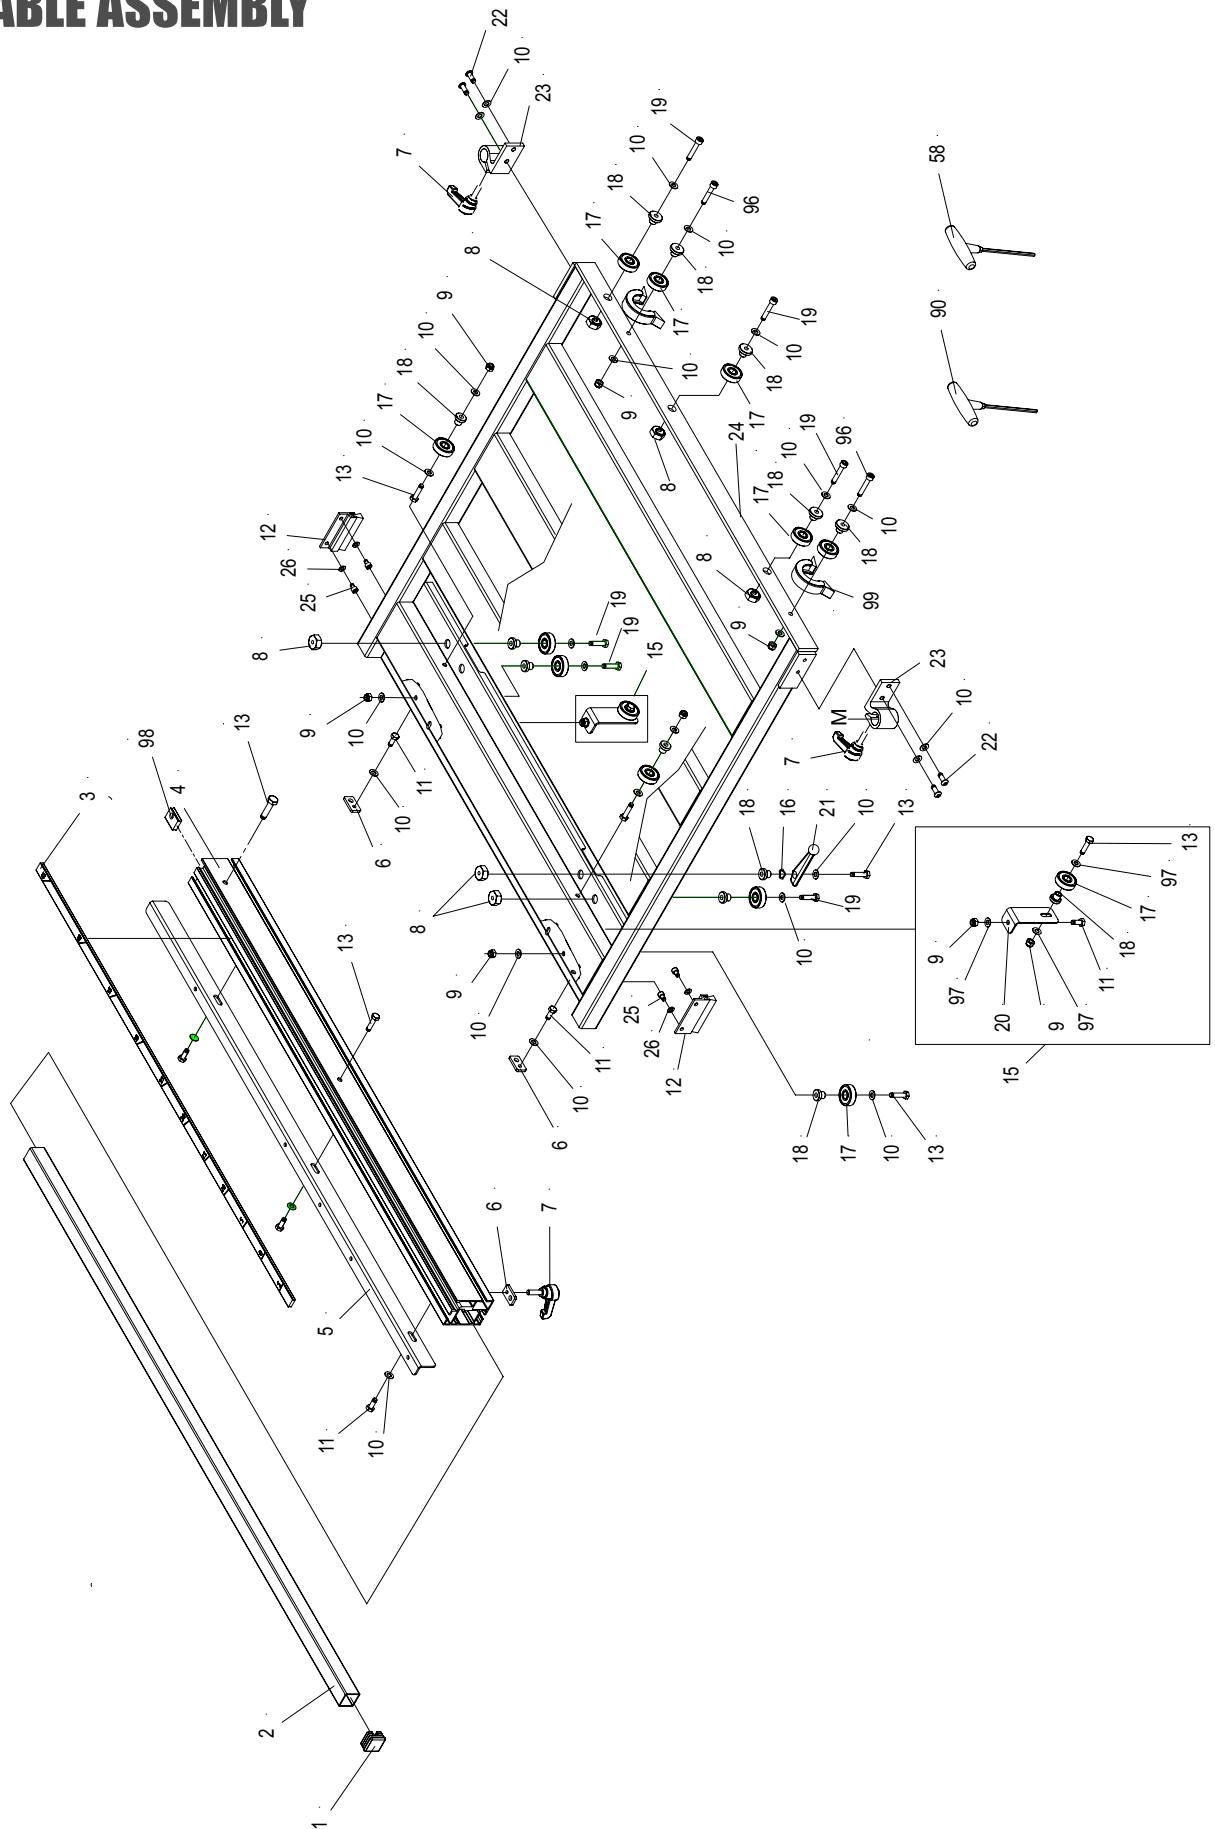

CROSS CUT FENCE

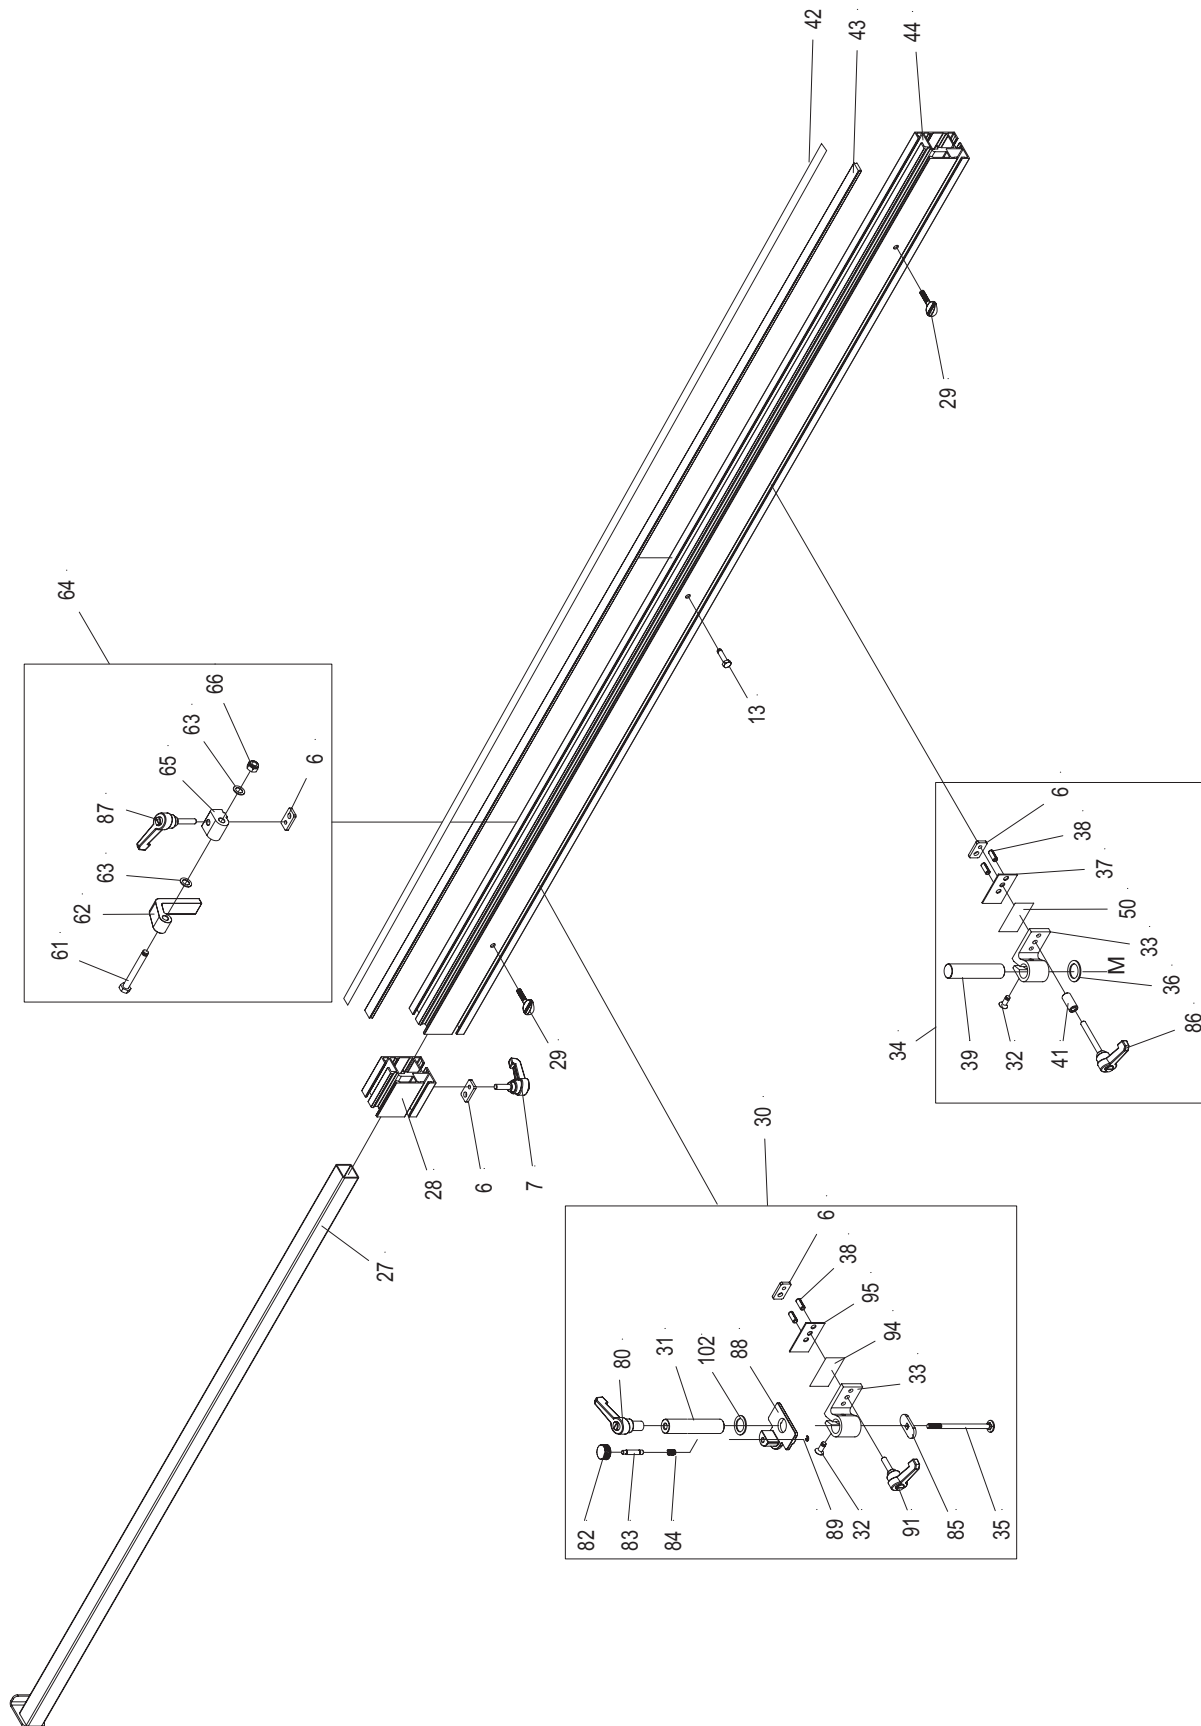

PARTS LIST 50-SLT60P

REF. NO.	PART NO.	DESCRIPTION	SPECIFICATION	QTY
1	50SLT60-01	PLUG		1
2	50SLT60-02	RETURN HANDLE		1
3	50SLT60-03	SLIDING ANGLE INDICATOR		1
4	50SLT60-04	ANGLE ADJUSTMENT RAIL		1
5	50SLT60P-05	POSITIVE STOP RAIL		1
6	50SLT60-06	T-NUT		7
7	50SLT60P-07	RATCHET LEVER		4
8	50SLT60-08	ECCENTRIC NUT		6
9	50SLT60-09	LOCK NUT	M6 X 1.0P (10B X 7H)	8
10	50SLT60P-10	FLAT WASHER	6.4 X 16X 1.6T	28
11	50SLT60-11	HEX. BOLT	M6 X 1.0P X 16	7
12	50SLT60P-12	BRUSH		2
13	50SLT60-13	HEX. BOLT	M6 X 1.0P X 25	11
14	50SLT60P-14	HEX. BOLT	M6 X 1.0P X 30	1
15	50SLT60P-15	GUIDE BEARING ASSEMBLY		2
16	50SLT60-16	WAVE WASHER	WW-10	1
17	50SLT60-17	BEARING	62002NK	14
18	50SLT60-18	BUSHING		15
19	50SLT60-19	CAP SCREW	M6 X 1.0P X 25	6
20	50SLT60-20	BEARING BRACKET		2
21	50SLT60-21	BRAKE LEVER		1
22	50SLT60-22	PAN HEAD SCREW	M6 X 1.0P X 16	4
23	50SLT60-23	PIVOT POST BRACKET		2
24	50SLT60P-24	TABLE		1
25	50SLT60P-25	CAP SCREW	M5 X 0.8P X 8	4
26	50SLT60P-26	FLAT WASHER	5.2 X 10 X 1.0T	4
27	50SLT60-27	FENCE EXTENSION POST	25.5 X 25.5	1
28	50SLT60-28	FENCE EXTENSION STOP MOUNT		1
29	50SLT60-29	THUMB SCREW		2
30	50SLT60P-30	MITER CLAMP ASSEMBLY		1
31	50SLT60P-31	SLEEVE		1
32	50SLT60-32	SCREW	M6 X 1.0P X 16	2
33	50SLT60P-33	SLIDING BRACKET		2
34	50SLT60P-34	FENCE PIVOT PIN ASSEMBLY		1
35	50SLT60-35	SHOULDER BOLT	M6 X P1.0 X 100L	1
36	50SLT60-36	WASHER	Ø28 X Ø19 X 2T	1
37	50SLT60-37	SLIDE PLATE	30 X 52 X 2T	1
38	50SLT60-38	SPRING PIN	6 X 20	4
39	50SLT60-39	PIVOT POST	Ø19 X 85	1
40	50SLT60P-40	BOLT	M8 X 1.25P X 16L	1
41	50SLT60-41	EXTENSION BUSHING	Ø12 X Ø6.5 X 25	1
42	50SLT60-42L	SCALE		1
43	50SLT60-43	SLIDING SCALE PLATE	14 X 63.5" X 5T	1
44	50SLT60-44	FENCE	49 X 64 X 64"L	1
45	50SLT60-45	OUTER GUIDE RAIL	80 X 40 X 93.5"	1
46	50SLT60-46	STOP RING	Ø13.5 X Ø4.5 X 5T	2
47	50SLT60-47	FLAT WASHER	4.3 X 12 X 1.0T	2
48	50SLT60-48	CAP SCREW	M4 X 0.7P X 12	2
49	50SLT60P-49	BRACKET		2
50	50SLT60-50	TAPE	3M VHB F-9473 PC T= 0.25MM	1
51	50SLT60-51	FLAT WASHER	8.5 X 16 X 2.0T	12

PARTS LIST 50-SLT60P

REF. NO.	PART NO.	DESCRIPTION	SPECIFICATION	QTY
52	50SLT60-52	CAP NUT	M8 X 1.25P	12
53	50SLT60-53	CARRIAGE BOLT	5/8 X 1.25P X 16	12
54	50SLT60P-54	CROSS BRACE		3
55	50SLT60P-55	BRACKET		2
56	50SLT60-56	HEX. BOLT	M8X 1.25P X 20	4
57	50SLT60P-57	FLAT WASHER	8.2 X 22 X 3.0T	4
58	50SLT60P-58	T-HANDLE ALLEN WRENCH	6 MM	1
59	50SLT60P-59	INNER GUIDE RAIL	80 X 40 X 76"	1
60	50SLT60P-60	FLAT WASHER	6.3 X 1.3 X 2.0	6
61	50SLT60-61	SHOULDER BOLT	M8 X 1.25P X 65	1
62	50SLT60-62	FLIP STOP		1
63	50SLT60-63	NYLON WASHER	10 X 16 X 1.0T	2
64	50-EXSTOP	FLIP STOP ASSEMBLY		1
65	50SLT60-65	SLIDE BLOCK		1
66	50SLT60-66	LOCK NUT	M8 X 1.25P(13B X 9H)	1
67	50SLT60P-67	SUPPORT LEG		4
68	50SLT60-68	LEVELING FOOT	M6 X P1.0 X 25	4
69	50SLT60-69	HEX. NUT	M8 X 1.25P(13B X 6.5H)	4
70	50SLT60P-70	QUICK MOUNT BRACKET		1
71	50SLT60P-71	FLAT WASHER	8.5 X 19 X 2.0T	39
72	50SLT60P-72	BEARING GUIDE CHANNEL		1
73	50SLT60P-73	SWITCH MOUNT BRACKET		1
74	50SLT60P-74	SAW MOUNTING BRACKET		1
75	50SLT60P-75	REAR BRACKET MOUNT		1
76	50SLT60P-76	STORAGE HOOK		2
77	50SLT60P-77	CAP SCREW	M8 X 1.25P X 12	4
78	50SLT60P-78	OUTER REAR BRACE		1
79	50SLT60P-79	CAP SCREW	M6 X 1.0P X 8L	6
80	50SLT60P-80	RATCHET LEVER		1
81	50SLT60P-81	MAIN MOUNTING BRACKET		1
82	50SLT60P-82	BUTTON		1
83	50SLT60P-83	INDEX PIN		1
84	50SLT60P-84	SPRING		1
85	50SLT60P-85	T-NUT		1
86	50SLT60P-86	RATCHET LEVER		1
87	50SLT60P-87	RATCHET LEVER		1
88	50SLT60P-88	INDEX PIN SEAT		1
89	50SLT60P-89	"S" CLIP	STW-6	1
90	50SLT60P-90	T-HANDLE ALLEN WRENCH	5 MM	1
91	50SLT60P-91	RATCHET LEVER		1
92	50SLT60P-92	HEX. BOLT	M8 X 1.25P X 50	2
93	50SLT60P-93	LOCK NUT	M8 X 12.5 X 50	3
94	50SLT60P-94	TAPE	3M VHB F-9473 PC T= 0.25MM	1
95	50SLT60P-95	SLIDE PLATE		1
96	50SLT60P-96	CAP SCREW	M8 X 1.25P	2
97	50SLT60P-97	FLAT WASHER	6.6 X 13 X 1.0T	6
98	50SLT60P-98	90° LOCATOR BLOCK		1
99	50SLT60P-99	SCRAPER		2
100	50SLT60P-100	REAR BRACE		1
101	50SLT60P-101	SHOULDER BOLT		1
102	50SLT60P-102	PLASTIC WASHER	P14	1

NOTES

MODEL 50-SLT60P



8360 Champ-d'Eau, Montreal (Quebec) Canada H1P 1Y3

Tel.: (514) 326-1161

Fax: (514) 326-5565 - Parts & Service / Fax: (514) 326-5555 - Order Desk

orderdesk@general.ca
www.general.ca

IMPORTANT

When ordering replacement parts, always give the model number, serial number of the machine and part number. Also a brief description of each item and quantity desired.