

euroflex®

# monster®



## SM088 STEAM MOP

INSTRUCTION MANUAL

Model #: SM088 G-B-R



For Authentic Monster Replacement Parts  
Call **888.896.8786**

# IMPORTANT SAFE

SAVE THESE INSTRUCTIONS

**When using an electrical appliance, basic safety precautions should always be observed, including the following:**

*Read all instructions before using this appliance.*

**WARNING:** To reduce the risk of fire, electrical shock, or injury:

1. This appliance is authorized for household/residential use only.
2. Do not use outdoors. Do not immerse the Steam Mop in water or other liquids.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Do not leave Steam Mop unattended. Always unplug unit when not in use.
4. Use only as described and for the uses described in this manual. Use only manufacturer's approved and supplied parts and accessories. Use of other accessories is not recommended and will void warranty.
5. Keep cord away from heated surfaces (e.g., cooking surfaces), and sharp edges and corners.
6. Do not use if power cord or plug has been damaged, or if any part of appliance has been dropped, damaged, left outdoors, or dropped in water. Do not attempt to disassemble or repair appliance. Return it to manufacturer or an authorized service center for examination or repair.
7. Do not wrap cord too tightly around appliance. Never carry by the cord, or yank to disconnect from an outlet. To unplug, always grasp plug to remove from outlet – do not pull on cord.
8. Do not handle cord or appliance with wet hands or without shoes on.
9. Look closely at Steam Mop and follow all labels and marking instructions.
10. Do not put any objects into openings. Do not use with any opening blocked.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Use caution near the Base of the appliance while in use. Contact with steam may cause burns.
13. Be sure Tank Cap is inserted and remains inserted during use.
14. Never use cleaning solutions, perfumes, oils or other chemical substances other than tap or distilled/demineralized water in the Steam Mop. Use of chemicals may damage Steam Mop and will void your warranty.
15. When in use, never turn the appliance on its side. Do not direct steam at people, animals or other electrical equipment (i.e. inside an oven).
16. Do not operate around flammable or combustible liquids such as gasoline, or in areas where fumes may be present.

# E TY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

17. Not for space heating purposes.
18. To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit. Plug in to a standard (120V, 60Hz) electrical outlet.
19. Do not use extension cords or outlets with inadequate voltage. Use only heavy duty, high-rated extensions cords.
20. Store appliance indoors in a cool, dry place.
21. If appliance is damaged, it must be repaired by manufacturer or its service agent or a similarly qualified person in order to avoid safety issues to the operator.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
23. Read and follow all important notices in this guide.

## CAUTIONS

- *Do not use your Steam Mop without a Microfiber Pad or Carpet Slide and Carpet Pad attached to the Mop Base.*
- *Never leave your Steam Mop in one spot on any surface for any period of time. Always keep the Steam Mop moving or unplug it when not in use.*


## \*IMPORTANT\*

*Please read all of the instructions for use and Important Safety Instructions carefully. Remove and discard all packaging materials and keep them out of the reach of children.*

## ● Save your back

No need to press hard


The steamer does the work for you

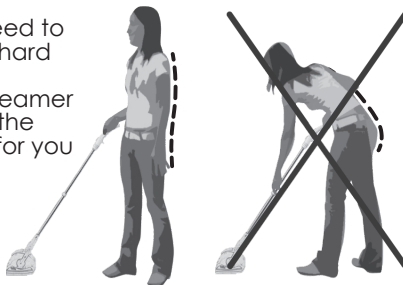

# Product Features

For Authentic Monster Replacement Parts  
Call **888-896-8786**

## One (1) Steam Mop

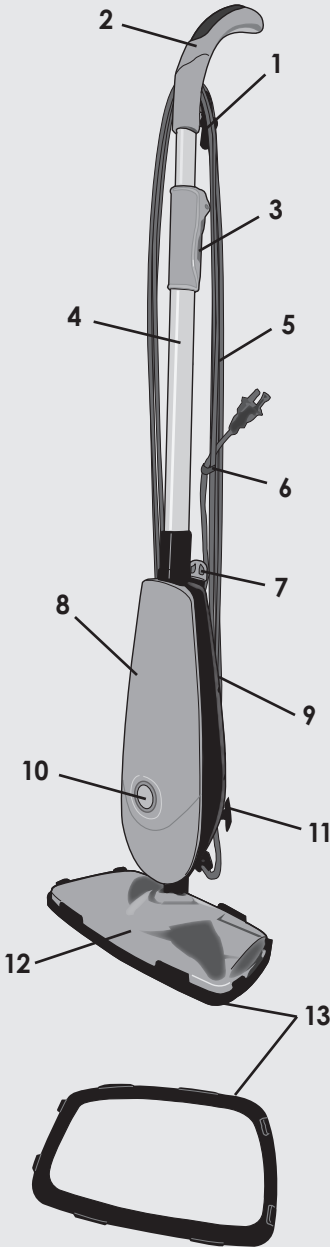

- 1 - Upper Cord Hook/Release
- 2 - Expandable Handle
- 3 - Handle Extension Lock
- 4 - Handle Extension Tube
- 5 - Power Cord
- 6 - Power Cord Clip
- 7 - Water Tank Cap
- 8 - Steam Mop Body/Water Tank
- 9 - Water Level Window
- 10 - Power Button/Indicator Light
- 11 - Lower Cord Hook
- 12 - Mop Base
- 13 - Carpet Slide
- 14 - Carpet Pad
- 15 - Microfiber Pad
- 16 - Water Cup

### Technical Data

**Adapter Input:** 120V~, 60Hz

**Power:** 1500 watts


**Tank Capacity:** 340 ml/11.5 oz

# 1 Steam Mop Assembly

**IMPORTANT:** FOLLOW THESE INSTRUCTIONS CAREFULLY!


## A. Assemble Handle

- Insert the Handle into the Handle Extension Tube. Be sure the Extension Handle Lock is open (as shown).

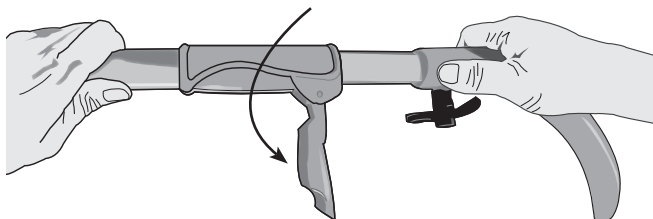

**NOTE:** Match the shape of the end of the Handle with the shape of the opening at the top of the Extension Tube. Do not force Handle into Extension Tube opening.

- Once the Handle is inserted, adjust it to the desired length.
- Snap the Extension Tube Lock down to secure the Handle in position.

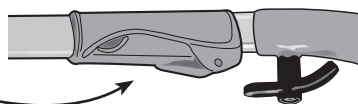

**HANDLE ASSEMBLY IS ONLY DONE ONE TIME. ONCE HANDLE IS INSERTED IN PLACE, YOU WILL NOT BE ABLE TO REMOVE IT.**


**FOR EASY STORAGE** – Open the Extension Tube Lock and push the Handle down to shorten. Snap Lock down to maintain Handle's position.

## B. Insert Handle/Extension Tube into Steam Mop Body/Water Tank

- Insert the open end of the Handle Extension Tube into the opening at the top of the Steam Mop Body/Water Tank.

**NOTE:** Be sure to match the shape of the end of the Extension Tube with the shape of the opening at the top of the Steam Mop Body. Do not force the Extension Tube into the Steam Mop Body opening.

- You will hear a "Click" when the Extension Tube is securely locked in place.

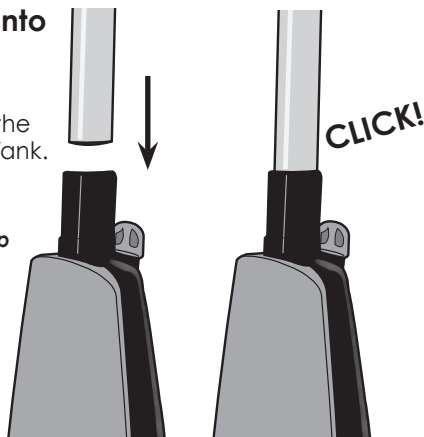



### C. Fill Water Tank with Water

We recommend filling the Water Tank before plugging in your Steam Mop and getting started. You can refill the Water Tank at any time during use.

**\*IMPORTANT\***

**Use tap water – distilled or demineralized water if tap water is too hard.** NEVER add detergents, perfumes, oils or other chemical substances to the Water Tank for regular operation.

- Remove Water Tank Cap by grasping it firmly and pulling it from the Tank opening.

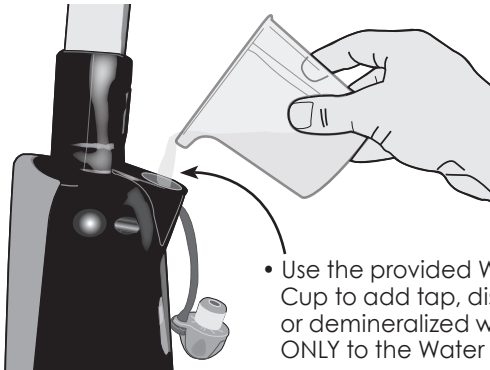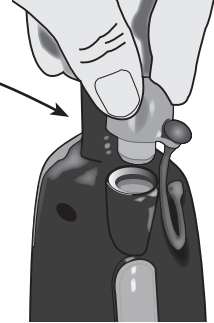

- Use the provided Water Cup to add tap, distilled or demineralized water ONLY to the Water Tank.

- Fill to the "MAX FILL" line on the Water Level Window. **DO NOT overfill Water Tank.**
- Replace Tank Cap by firmly pressing it back in the Tank opening.



**CAUTION**

**Do not plug in your Steam Mop until you are ready to begin cleaning.** Because the SM088 Steam Mop is equipped with a pump, the water heats up very quickly (approximately 25 seconds).

For Authentic Monster Replacement Parts  
Call **888-896-8786**

**REMEMBER**

- You can add water to the Water Tank at any time during operation.
- Be sure the Steam Mop is not seated on a painted or unsealed wood surface while it is heating up.
- Do not allow Steam Mop to sit in the same location for too long while it is in use, as this can cause damage to surfaces.

## 2 Accessories – Attachment and Usage


### A. The Steam Mop Base

**WARNINGS**

- To prevent floor damage, **ALWAYS** attach either the Microfiber Pad or the Carpet Slide with Carpet Pad to your Steam Mop. **NEVER** use Mop without one of these accessories affixed to the Base.
- To ensure a surface is suitable for steam cleaning, **ALWAYS** test a small, inconspicuous portion of the surface **BEFORE** using steam on it.

To use your accessories, you must affix the Microfiber Pad or Carpet Pad (and Carpet Slide) to the Base of the Steam Mop.

The Steam Mop Base has six (6) "grip strips" that hold the Accessory Pads in place.

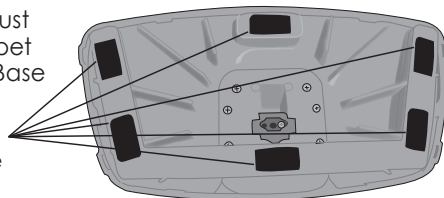

Bottom view of Steam Mop Base showing six (6) "grip strips"

**IMPORTANT CAUTIONS!**

**TO ENSURE A SURFACE IS SUITABLE FOR STEAM CLEANING, ALWAYS TEST A SMALL, INCONSPICUOUS PORTION OF THE SURFACE BEFORE USING STEAM ON IT.**

- **LINOLEUM FLOORS:** Pre-test all Linoleum floors, as steam can cause wax to be stripped from, and consequently damage some varieties of linoleum flooring.
- **PAINTED WOOD, GLOSSY LEATHER & PLASTIC SURFACES:** These surfaces may be dulled or bleached by the use of steam.
- **MISCELLANEOUS FABRICS:** Use caution with steam on fabrics as many fabrics are sensitive to heat and steam, and can be easily damaged.

For Authentic Monster Replacement Parts  
Call **888-896-8786**

## B. The Microfiber Pad


### WARNINGS

- To prevent floor damage, **ALWAYS** attach either the Microfiber Pad or the Carpet Slide with Carpet Pad to your Steam Mop. **NEVER** use Mop without one of these accessories affixed to the Base.
- To ensure a surface is suitable for steam cleaning, **ALWAYS** test a small, inconspicuous portion of the surface **BEFORE** using steam on it.

The Microfiber Pad can be used on it's own to clean any hard floor surface.

#### ATTACH MICROFIBER PAD TO MOP BASE

- Place Microfiber Pad face down on the floor, wide side forward. Hold Steam Mop about 2" above Pad and gently place Steam Mop on the Pad.
- Firmly press Steam Mop down to assure Pad is securely adhered to the Mop Base.

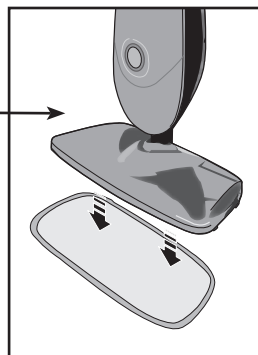


#### USE ON HARDWOOD FLOORS

For hardwood floors, use only on "sealed" hardwood surfaces. *Carefully control steam* – too much water could damage wood floors.

## C. The Carpet Pad and Carpet Slide

Use the Carpet Slide and Carpet Pad to clean carpets and rough surfaces. Placing the Carpet Slide over the Carpet Pad enables your Steam Mop to slide easily over rough, textured surfaces.

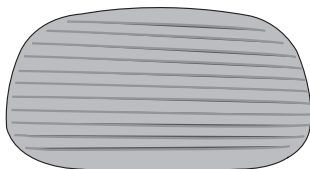

Carpet Pad




Carpet Slide

**ALWAYS TEST A SMALL, INCONSPICUOUS PORTION OF THE SURFACE BEFORE APPLYING STEAM.**



### ATTACH CARPET PAD AND CARPET SLIDE TO MOP BASE

- Place Carpet Slide face up on floor. Center and place Carpet Pad on top of Carpet Slide, wide side forward.
- Hold Steam Mop about 2" above Pad and gently place Steam Mop on the Pad.
- Firmly press down to assure Carpet Pad is attached to Steam Mop Base and Mop Base is securely seated on Carpet Slide.

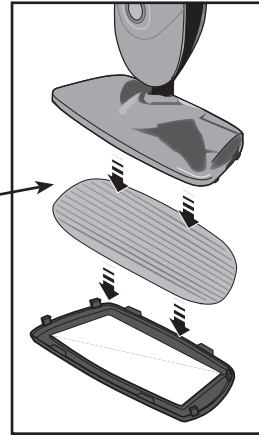


**NOTE:** See "Maintenance & Cleaning" for care and cleaning instructions for Microfiber Pads.

## 3 Using the SM088 Steam Mop

### A. Release the Power Cord for Use

Before using the Steam Mop, completely unwind the Power Cord. Release Power Cord using the Upper Cord Hook/Release.

Simply turn the Upper Cord Hook/Release right or left to release the Power Cord.

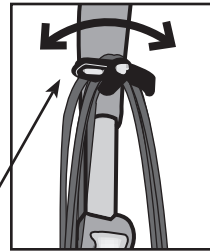

### B. Starting the Appliance


#### WARNINGS

- **ALWAYS** attach either the MICROFIBER PAD or the CARPET PAD with CARPET SLIDE to your Steam Mop. **NEVER** use Mop without one of these accessories affixed to the Base.
- To ensure a surface is suitable for steam cleaning, **ALWAYS** test a small, hidden portion of the surface **BEFORE** using steam on it.
- **Never** leave Steam Mop in the same location for too long while it is in use – this can cause damage to surfaces.
- **NEVER** add detergents, perfumes, oils or other chemical substances to the Water Tank.

Continued on Next Page

## B. Starting the Appliance *(continued)*

- Be sure the Water Tank is filled to “MAX FILL” with tap, distilled or demineralized water and the Water Tank Cap is securely in place (see “C” on page 6 of this manual for instructions).
- Plug in the SM088 Steam Mop.
- Press the Power Button on the front of the Steam Mop Body to turn unit “On”. The Power Indicator Light will illuminate (white) when the Mop is “On”.
- Press the Power Button again to turn unit “Off”.

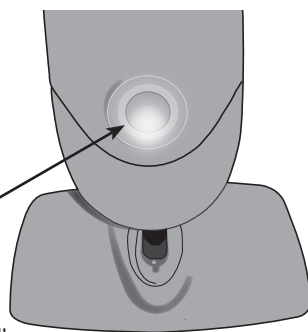

## C. Steam Cleaning Floors

- Be prepared for the Steam Mop to produce steam very quickly (approximately 25 seconds).
- Once Mop has heated, begin cleaning and disinfecting your pre-tested surface.
- Keep the Steam Mop moving in a slow and steady motion.

### For stubborn floor stains:

- Dampen the stain with a detergent that is compatible with the floor surface (check manufacturer’s recommendations).
- UNPLUG MOP WHILE APPLYING DETERGENT TO STAIN, then plug Steam Mop in and steam clean area.
- Wipe up any excess detergent with a damp cloth, and then dry the area with a clean, dry cloth.

**NOTE: Steam Mop will stop producing steam when the Water Tank is empty. When this happens refill Water Tank with water up to the “MAX FILL” line on the Water Level Window.**

## D. Steam Cleaning Carpets and Rough Surfaces

Use the Carpet Slide and Carpet Pad to clean carpets and rough surfaces. Placing the Carpet Slide over the Carpet Pad enables your Steam Mop to slide easily over rough, textured surfaces (see page 9 for installation instructions).

**ALWAYS TEST A SMALL, INCONSPICUOUS PORTION OF THE SURFACE BEFORE APPLYING STEAM.**

- Unplug the Steam Mop before placing it on the Carpet Slide.
- Once plugged in and Mop has heated, begin cleaning.
- Keep the Steam Mop moving in a slow and steady motion over carpets and rough surfaces.

## E. Refilling Water Tank During Use

- Remove Water Tank Cap.
- Fill Water Tank to "MAX FILL" with tap, distilled or demineralized water using the Water Cup provided.
- Firmly push Tank Cap in the Tank opening and allow about 25 seconds for steam to be produced, then resume steaming.


### REMINDERS

- Always use tap water – if tap water is too hard, use distilled or demineralized water to avoid damaging surfaces, and possibly the Steam Mop.
- NEVER add detergents, perfumes, oils or other chemical substances to the Water Tank for regular operation.

## F. The Upper Cord Hook/Release


Use the Upper Cord Hook/Release to quickly release and unwrap the Power Cord.

- Simply turn the Upper Cord Hook/Release right or left to release the Power Cord.
- When finished using your Steam Mop, wrap the cord up and around the Cord Hook/Release.

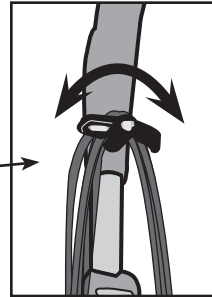

## G. The Power Cord Clip

Once the Power Cord has been wrapped around the Upper Cord Hook/Release, clip it to itself for convenient storage.

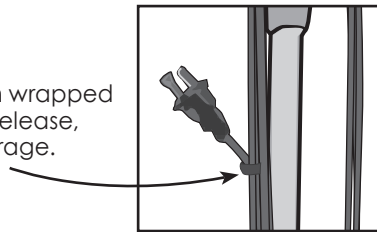

For Authentic Monster Replacement Parts  
Call **888-896-8786**

## 4 Cleaning and Rinsing Steam Mop

**If distilled or demineralized water is regularly used there is no need to clean the Water Tank.**

### Rinsing the Water Tank

We recommend you periodically rinse the Steam Mop to prevent the accumulation of calcium and sediment caused by hard water use.

After 10-15 uses:

- Fill Water Tank 3/4 full with hot tap water
- Shake unit several times.
- Plug in Steam Mop and flush out steam into a sink or bathtub.
- Wipe the Steam Mop Base with a damp cloth and wipe dry.

**NEVER HOLD THE STEAMER UNDER TAP TO FILL. Use the Water Cup provided to fill.**

### Cleaning the Water Tank

If you use tap water, we recommend cleaning the Water Tank every 3-4 months (depending on mineral buildup). Use a Hard Water Mineral Remover (found in most hardware or small appliance stores).

- Plug in and run Steam Mop in sink or bathtub until all water has flushed from the Water Tank.
- Follow manufacturer's instructions on cleaner package, and fill tank with specified amount of cleaner.
- Flush cleaner from Water Tank and fill with water. Rinse thoroughly and flush water from Tank. Repeat flushing with water until water from Tank comes out clear.
- Replace Tank Cap and store appliance properly.

***Cleaning of Water Tank and Steam Mop is the sole responsibility of appliance owner and is not covered by the product warranty.***

Before first use after cleaning the Water Tank, hold Steam Mop so it is facing downward and direct steam into a sink or standing shower to clear any leftover residue from Tank. When clean drops of water appear, wipe clean with soft cloth. Your Steam Mop is now ready for use.

## 5 Carpet Slide Care & Cleaning

Wash the Carpet Slide accessory using a mild detergent and warm water. Rinse thoroughly and dry completely before storing away.







## LIMITED WARRANTY

**Euroflex Americas** warrants this product to be free from defects in material and workmanship for a period of two (2) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

Should any defect covered by the terms of the limited warranty be discovered within two (2) year, Euroflex Americas will repair or replace any defective part provided the unit is returned by the original purchaser, freight prepaid, to:

**U.S.: Euroflex Americas**, 3795 Lamar Avenue, Memphis, TN 38118

**Canada: Euroflex Canada**, 391 Steelcase Road, W., Unit 16, Markham, ON., L3R 3V9, Canada

Proof of purchase and \$9.95 for handling and return packing/shipping charges must be included.

The liability of Euroflex Americas under this warranty is limited solely to the cost of the replacement parts or the complete unit at our option. LABOR CHARGES ARE NOT INCLUDED.

This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This warranty does not apply to any defect arising from misuse of the product, negligence, failure to follow Euroflex's instructions, use on current or voltage other than that stamped on the product, alteration or repair not authorized by Euroflex, or damage due to faulty packaging or mishandling in transit (by any common carrier). Repair or disassembly by anyone other than a Euroflex authorized service center will void the warranty.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of Euroflex Americas, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is Euroflex Americas liable for incidental or consequential damages of any nature whatsoever. Some States/Provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights which vary from state to state or province to province.

If you have questions or concerns regarding your Euroflex appliance, please contact Customer Service. Please **do not return any product without contacting Euroflex for return authorization.** Unauthorized returns, as well as C.O.D. shipments, will be refused.

\*Important: After receiving return authorization, carefully pack item to avoid damage in shipping. Be sure to include your name, complete address and phone number with note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".

**We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**

**For Authentic Monster Replacement Parts, call 888.896.8786**

You can register your product online at: **[www.euroflexusa.com](http://www.euroflexusa.com)**

