Smart Watch Phone User Guide

Please read the manual before use.

1. SAFFTY WARNING

- 1.1 The information in this document won't be modified or extended in accordance with any notice.
- 1.2 The watch should be charging 2 hours at least before use.

2. PRODUCT DETAILS:

2.1 Ouick Start Guide

You can enter into next page by sliding screen to the left, and return to last page by sliding screen right: It will be in mistake for a click if the drag distance too short

2.2 Clock Display







Method 1: Power on, when the phone in clock mode, please click middle screen and set different clock interfaces if you like.

Method 2: Power on, Main menu: setting--phone setting--standby menu display -unlocking type selection

3. PRODUCT OUICK USE

3.1 Download the Svnc software.

Scan QR code, download the APP which can match your android phone. This APP only use for the Sync between watch and phone, will not take your phone GPRS.



If you already download the related software, please check the version and use the newest related software in order to ensure all function normal use. Please update the software when it has new one.

3.2 Install and use the Sync software

Android Application installation :

Please install the android application in your smart phone. You can storage it into your phone memory or install by Sync assistant.

Android application usage (If you already installed)

(Smart phone) Setting -- Accessibility—Enter into Bluetooth

notice(service), enabled this service. (please choose "sure" when shown a warning notices) the application runs on the background automatically and sync function will be switched on.

Click the Bluetooth notices and choose the Notification service, select your Personal or System application in Notify application.

Telephone service is including SMS, incoming call and seek watch.

Notice :

Please don't shut the Bluetooth notify service when you are clearing software by background or close background application software. It will affect the Sync function between watch and phone if shut it.

3.3 Bluetooth Connection and Sync function

3.3.1 From phone to watch

Phone setting—turn on the Bluetooth --search for devices, please click pair devices when found the [GLK] or other, and also choose [yes] in your mobile phone, paired done.

Please choose [sure] when there is phone book request, meanwhile you'd better choose [no remind again], this is convenience when you connect next time (without remind again).

Notice: The Sync software can open in sync APP already installed and Accessibility, the mobile will show Bluetooth connected done after 2-5min; the watch will inform you the time of Sync with phone, then the Sync switched on. The message will sync to you watch when it incoming to mobile.

3.3.2 From watch to phone

BT Dialer on GLK—search new device—found your smart watch (such as Meizu Pro 5) -- connect. The processes of next are same with 3.3.1

3.4 Base function

3.4.1 Message Sync phone or watch message.

3.4.2 Bluetooth

Sets the Bluetooth status, turn on/off.

3.4.3 Calls records

You can check your phone call records after you connect with the Bluetooth.

Shown all records including miss call, dialed calls and receive call; You can check the date, time and phone number of the miss call after you choose it, but only can call this number.

3.4.4 BT dialer

Paired devices from smart watch

3.4.5 Remote notifier

When there is SMS, incoming messages from Facebook and other

applications on the connected phone, the watch will alert you to read.

3.4.6 Remote cameras

Use phone camera take photos, but remote by watch, its need switches on the camera of phone in advance.

3.4.7 Anti-lost

Watch seek phone, or phone seek watch.

3.4.8 Sedentary remind

You can set a time to remind you up to do some exercise, we suggest you this time could be one hours.

- 3.4.9 Pedometer

 It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data.
- measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise. If you want return to main menu but keep pedometer during the
 - exercise, please press the power button.
 - 3.4.10 Sleep monitor

 Show your sleep quality base on your sleep times.
 - 3.4.11 OR Code
- 3.4.12 Facebook
- Facebook need your phone has SIM card and can surf the Internet 3.4.13. Alarm
 - 3.4.14 Calendar
 - 3.4.15 File manager
 - 3.4.16 Audio player
- Can play music from local or smart phone after connect with Bluetooth
 - 3.4.17 Camera
 - 3.4.18 Image viewer
 - 3.4.19 Sounder recorder 3.4.20 Twitter
- Twitter need your phone has SIM card and can surf the Internet.
- 3.4.21 WhatsApp
 WhatsApp need your phone has SIM card and can surf the Internet.

4. NOTICE

- 4.1 Full charge before use, the time of charge need 1 or 2 hours.4.2 Use the accessories cable and charger, or your android phone
- accessories.

 4.3 Bluetooth will disconnect when the device exceeds the distances,
 - after switch on the Anti-lost, the smart search function can't be use before reconnect with Bluetooth.
- 4.4 Please reconnect with BT if it is disconnected occasionally (please Manual connect if the Bluetooth disconnect over 5.
- minutes). Please agree the phone book Sync otherwise there is no called phone book.
- 4.5 Because android phone is difference, when playing the music, some of music's name can show or not.

COMMON TROUBLE SHOOTING

Please refer below key function for any problems with the watch.

If the problem is still unsolved, please contact with our dealer or serviceman appointed.

5.1 Unable to switch on

The time of press the power button is too short, please keep it more than 3 seconds

Low power, please charge it.

5.2 Shut down automaticlly

Low power, please charge the watch

5.3 Using time too short.

Battery is not full, please make sure it is full power(full charge need 2hours at least).

During the use of SIM card, the power will be run off soon if the signal is too poor.

5.4 Unable to charge.

The battery's life will be reduce after few years, please check wheather the battery are work.

Change a new charger if it is unworkable.

Please check the USB slot connecting good, if no, please try again.

5.5 No caller's name when incoming call

Forgot to choose upload the phone book when connected with BT.or unselected keep upload the phone book.

Forgot to sync the phone book when reconnected, please pair the device and connect BT again.

5.6 Bad phone call voice.

Watch and phone are separated too far, please be closer. Bad signal of BT.

Bad signal of your own phone call place, please change a better place for phone call.

Warranty Card			
Customer Information			
Model		Selling company	(signature)
Customer Name		Phone NO.	
Sales Tel		Purchase Date	
Product IMEI code			
Customer Address			
Sale Address			
Summary			
Date	Symptoms	Servicing	Remark