





WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.



GENERAL INFORMATION:

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

AIR STRUT REMOVAL

- SET THE STEERING TO STRAIGHT AHEAD.
- 2. RAISE THE VEHICLE.
- REMOVE THE FRONT WHEEL.
- 4. DISCONNECT THE AIR SHOCK ADS CONTROL CABLE CONNECTOR (LOCATED IN THE FENDER WELL).
- DISCONNECT THE SWAY BAR ARM LINKAGE (FIGURE A).



FIGURE A



6. REMOVETHE LOWER SHOCK MOUNTING NUT AND BOLT. (FIGURE B)



FIGURE B

7. REMOVE THE BALL JOINT NUT AND SEPARATE FROM THE UPPER CONTROL ARM. (FIGURE C)



FIGURE C

8. REMOVETHE WIRE HARNESS MOUNT FROM SHOCK. (FIGURE D)

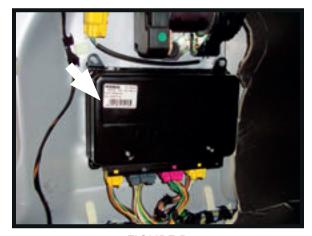


FIGURE D



9. DISCONNECTTHE AIR LINE. (FIGURE E)



FIGURE E

10. REMOVETHE AIR LINE FITTING. TO DOTHIS, REMOVETHE COLLET AND THE REMAINING FITTING WILL SLIDE OFF OF THE AIR HOSE. (FIGURE F)

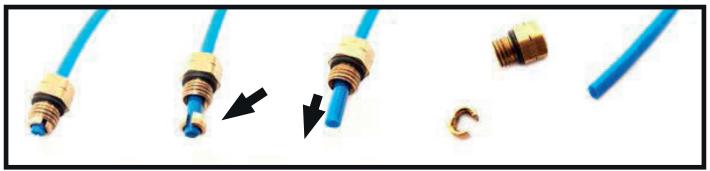


FIGURE F

11. REMOVETHETHREE (3) TOP FLANGE NUTS. (FIGURE G)

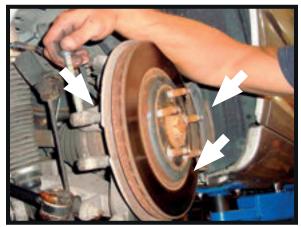


FIGURE G

- 12. REMOVE STRUT.
- 13. REMOVAL COMPLETE.



AIR SPRING REMOVAL

- OBTAIN FRONT SHOCK ASSEMBLY.
- 2. PLACE CAP REMOVAL TOOL ONTO THE STUDS OF THE TOP MOUNT OF THE SHOCK ASSEMBLY (THE BOLT OF THE CAP REMOVAL TOOL WILL REST ON THE CENTER OF THE TOP CAP), INSTALL THE THREE (3) NUTS THAT MOUNT THE SHOCK TO THE VEHICLE ON TOP OF THE CAP REMOVAL TOO. (FIGURE H)

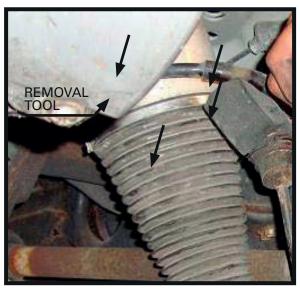


FIGURE H

3. EVENLY TIGHTEN THE THREE (3) NUTS UNTIL THE TOP CAP MOVES DOWNWARD (THIS WILL ALLOWTHE RETAINING RINGTO BE REMOVED). (FIGURE I)

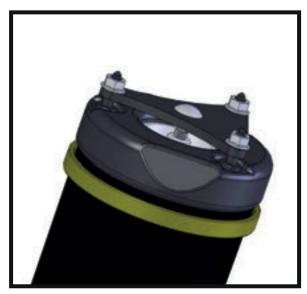


FIGURE I



6

SSA02575N DI.PA. SPORT FRONT AIR SPRING FOR 2005-2011 MERCEDES-BENZ ML-CLASS FOR 2007-2012 MERCEDES-BENZ GL-CLASS

4. WITHTHETOP CAP PUSHED DOWN, USE A SMALL FLATTIP SCREW DRIVERTO REMOVETHE RETAINING RING. (FIGURE J)



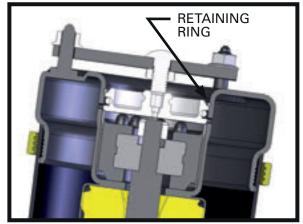


FIGURE J

- 5. REMOVETHE CAP REMOVALTOOL.
- 6. USING A PAIR OF LOCKING PLIERS REMOVETHETOP CAP. (FIGURE K)



FIGURE K

7. REMOVE THE NUT HOLDING THE AIR SPRING ASSEMBLY TO THE SHOCK. (FIGURE L)



FIGURE L



8. REMOVETHE OLD AIR SPRING AND O-RING, DISCARD. CLEANTHE AREA WHERETHE NEW AIR SPRING WILL BE INSTALLED. (FIGURE M)

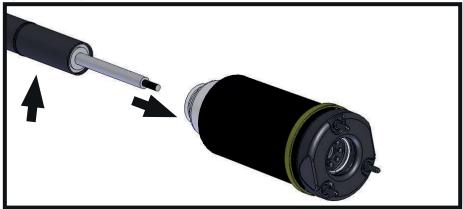


FIGURE M

AIR SPRING INSTALLATION

1. INSTALL SHOCK CAP INTO PLACE ON THE SHOCK. TAP LIGHTLY WITH A HAMMERTO FULLY SEAT THE CAP. (FIGURE N)

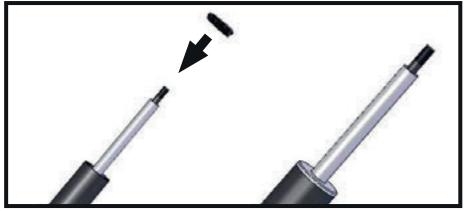


FIGURE N

2. OBTAINTHE NEW AIR SPRING, APPLY A LUBRICANT TO THE O-RINGS LOCATED IN THE BOTTOM OF THE AIR SPRING, INSTALL ONTO THE SHOCK. (FIGURE 0)

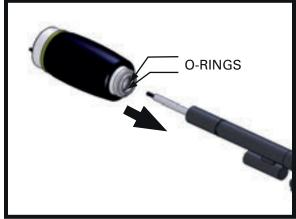


FIGURE O



3. INSTALL LOCKNUT ONTO SHAFT OF THE SHOCK AND TIGHTEN TO MANUFACTURERS SPECIFICATIONS. (FIGURE P)



FIGURE P

4. WITH THE NUT SECURED PROPERLY, LUBRICATE THE O-RING BEFORE INSERTING THE SUPPLIED CAP. (FIGURE Q)



FIGURE Q

5. PLACE THE RETAINING RING ONTOP OF THE CAP BEFORE REINSTALLING THE SUPPLIED TOOL. (FIGURE R)



FIGURE R



6. PROCEEDTOTIGHTENTHETHREE NUTS UNTILTHE CAP IS PRESSED FAR ENOUGH INSIDE OF THE AIR SPRING TO SECURELY SEATTHE RETAINING CLIP. REMOVE TOOL. (FIGURE S)

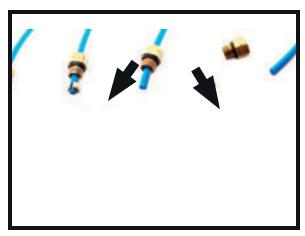


FIGURE S

7. AIR STRUT ASSEMBLY COMPLETE.

AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.

- INSTALLATION IS IN REVERSE ORDER OF AIR STRUT REMOVAL.
- 2. REMOVE THE WHITE SHIPPING PIN AND INSERT AIR LINE INTO THE NEW AIR LINE FITTING. (FIGURE T)



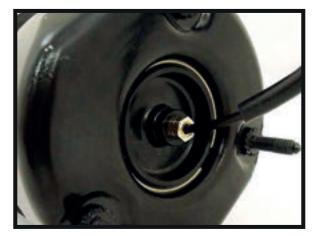


FIGURE T