
TECHNICAL MANUAL
UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR

TRUCK, UTILITY: CARGO/TROOP CARRIER, 1-1/4 TON, 4X4, M998 (2320-01-107-7155) (EIC: BBD);
M998A1 (2320-01-371-9577) (EIC: BBN);

TRUCK, UTILITY: CARGO/TROOP CARRIER, 1-1/4 TON, 4X4, W/WINCH, M1038 (2320-01-107-7156) (EIC: BBE);
M1038A1 (2320-01-371-9578) (EIC: BBP);

TRUCK, UTILITY: HEAVY VARIANT, 4X4, M1097 (2320-01-346-9317) (EIC: BBM);
M1097A1 (2320-01-371-9583) (EIC: BBU); M1097A2 (2320-01-380-8604) (EIC: BB6);
M1123 (2320-01-455-9593) (EIC: B6G);

TRUCK, UTILITY: TOW CARRIER, ARMORED, 1-1/4 TON, 4X4, M966 (2320-01-107-7153) (EIC: BBC);
M966A1 (2320-01-372-3932) (EIC: BBX); M1121 (2320-01-456-1282) (EIC: B6H);

TRUCK, UTILITY: TOW CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, M1045 (2320-01-146-7191);
M1045A1 (2320-01-371-9580) (EIC: BBR); M1045A2 (2320-01-380-8229) (EIC: BB5);

TRUCK, UTILITY: TOW CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, W/WINCH, M1046 (2320-01-146-7188);
M1046A1 (2320-01-371-9582) (EIC: BBT);

TRUCK, UTILITY: ARMAMENT CARRIER, ARMORED, 1-1/4 TON, 4X4, M1025
(2320-01-128-9551) (EIC: BBF); M1025A1 (2320-01-371-9584) (EIC: BBV); M1025A2 (2320-01-380-8233) (EIC: BB3);

TRUCK, UTILITY: ARMAMENT CARRIER, ARMORED, 1-1/4 TON, 4X4, W/WINCH, M1026 (2320-01-128-9552) (EIC: BBG);
M1026A1 (2320-01-371-9579) (EIC: BBQ);

TRUCK, UTILITY: ARMAMENT CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, M1043 (2320-01-146-7190);
M1043A1 (2320-01-372-3933) (EIC: BBY); M1043A2 (2320-01-380-8213) (EIC: BB4);

TRUCK, UTILITY: ARMAMENT CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, W/WINCH, M1044 (2320-01-146-7189);
M1044A1 (2320-01-371-9581) (EIC: BBS);

TRUCK, UTILITY: S250 SHELTER CARRIER, 4X4, M1037 (2320-01-146-7193) (EIC: BBK);

TRUCK, UTILITY: S250 SHELTER CARRIER, 4X4, W/WINCH, M1042 (2320-01-146-7187);

TRUCK, AMBULANCE, 2-LITTER, ARMORED, 4X4, M996 (2310-01-111-2275) (EIC: BBB);
M996A1 (2310-01-372-3935) (EIC: BB2);

TRUCK, AMBULANCE, 4-LITTER, ARMORED, 4X4, M997 (2310-01-111-2274) (EIC: BBA); M997A1
(2310-01-372-3934) (EIC: BBZ); M997A2 (2310-01-380-8225) (EIC: BB8);

TRUCK, AMBULANCE, 2-LITTER, SOFT TOP, 4X4, M1035 (2310-01-146-7194); M1035A1 (2310-01-371-9585) (EIC: BBW);
M1035A2 (2310-01-380-8290) (EIC: BB9).

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENTS OF THE ARMY,
THE AIR FORCE, AND MARINE CORPS**

MARCH 2001

**TECHNICAL MANUAL
NO. 9-2320-280-24P-1
NO. 2320-24P/8B**

**HEADQUARTERS, DEPARTMENTS
OF THE ARMY, THE
AIR FORCE, AND MARINE CORPS**

**TECHNICAL ORDER
NO. 36A12-1A-3044-1**

WASHINGTON, D.C. 30 March 2001

**TECHNICAL MANUAL
VOLUME 1 OF 2
UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

- TRUCK, UTILITY: CARGO/TROOP CARRIER, 1-1/4 TON, 4X4, M998 (2320-01-107-7155) (EIC: BBD);
M998A1 (2320-01-371-9577) (EIC: BBN);
- TRUCK, UTILITY: CARGO/TROOP CARRIER, 1-1/4 TON, 4X4, W/WINCH, M1038 (2320-01-107-7156) (EIC: BBE);
M1038A1 (2320-01-371-9578) (EIC: BBP);
- TRUCK, UTILITY: HEAVY VARIANT, 4X4, M1097 (2320-01-346-9317) (EIC: BBM);
M1097A1 (2320-01-371-9583) (EIC: BBU); M1097A2 (2320-01-380-8604) (EIC: BB6);
M1123 (2320-01-455-9593) (EIC: B6G);
- TRUCK, UTILITY: TOW CARRIER, ARMORED, 1-1/4 TON, 4X4, M966 (2320-01-107-7153) (EIC: BBC);
M966A1 (2320-01-372-3932) (EIC: BBX); M1121 (2320-01-456-1282) (EIC: B6H);
- TRUCK, UTILITY: TOW CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, M1045 (2320-01-146-7191);
M1045A1 (2320-01-371-9580) (EIC: BBR); M1045A2 (2320-01-380-8229) (EIC: BB5);
- TRUCK, UTILITY: TOW CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, W/WINCH, M1046 (2320-01-146-7188);
M1046A1 (2320-01-371-9582) (EIC: BBT);
- TRUCK, UTILITY: ARMAMENT CARRIER, ARMORED, 1-1/4 TON, 4X4, M1025
(2320-01-128-9551) (EIC: BBF); M1025A1 (2320-01-371-9584) (EIC: BBV); M1025A2 (2320-01-380-8233) (EIC: BB3);
- TRUCK, UTILITY: ARMAMENT CARRIER, ARMORED, 1-1/4 TON, 4X4, W/WINCH, M1026 (2320-01-128-9552) (EIC: BBG);
M1026A1 (2320-01-371-9579) (EIC: BBQ);
- TRUCK, UTILITY: ARMAMENT CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, M1043 (2320-01-146-7190);
M1043A1 (2320-01-372-3933) (EIC: BBY); M1043A2 (2320-01-380-8213) (EIC: BB4);
- TRUCK, UTILITY: ARMAMENT CARRIER, W/SUPPLEMENTAL ARMOR, 1-1/4 TON, 4X4, W/WINCH, M1044 (2320-01-146-7189);
M1044A1 (2320-01-371-9581) (EIC: BBS);
- TRUCK, UTILITY: S250 SHELTER CARRIER, 4X4, M1037 (2320-01-146-7193) (EIC: BBK);
- TRUCK, UTILITY: S250 SHELTER CARRIER, 4X4, W/WINCH, M1042 (2320-01-146-7187);
- TRUCK, AMBULANCE, 2-LITTER, ARMORED, 4X4, M996 (2310-01-111-2275) (EIC: BBB);
M996A1 (2310-01-372-3935) (EIC: BB2);
- TRUCK, AMBULANCE, 4-LITTER, ARMORED, 4X4, M997 (2310-01-111-2274) (EIC: BBA); M997A1
(2310-01-372-3934) (EIC: BBZ); M997A2 (2310-01-380-8225) (EIC: BB8);
- TRUCK, AMBULANCE, 2-LITTER, SOFT TOP, 4X4, M1035 (2310-01-146-7194); M1035A1 (2310-01-371-9585) (EIC: BBW);
M1035A2 (2310-01-380-8290) (EIC: BB9).

Current as of 1 January 2001

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeprs.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or E-mail your letter or DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

Approved for public release; distribution is unlimited.

* This manual supersedes TM 9-2320-280-24P-1, dated 31 January 1996.

TABLE OF CONTENTS
VOLUME 1 OF 2

		Page	Illus Figure
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST	1-1	
Group 01	Engine	1-1	1
	0100 Engine and container assembly	1-1	1
	0100 Engine mounting brackets	2-1	2
	0106 Engine oil dipstick and tube assembly	3-1	3
	0106 Engine oil pan, pump, and filler tube	4-1	4
	0106 Engine and transmission oil cooler and engine oil cooler lines	5-1	5
	0106 Oil filter, adapter, and oil line fittings.	6-1	6
	0106 Crankcase depression regulator valve and mounting hardware	7-1	7
	0108 Air intake and exhaust manifolds.	8-1	8
Group 03	Fuel system	9-1	9
	0302 Fuel pump and mounting hardware	9-1	9
	0302 Fuel injection pump and fuel filter lines	10-1	10
	0302 Fuel injection supply and return lines.	11-1	11
	0304 Air cleaner, air horn, and related parts.	12-1	12
	0306 Fuel tank supply and return lines, (Early models)	13-1	13
	0306 Fuel tank supply and return lines, (Current models)	14-1	14
	0306 Fuel tank assembly and mounting straps	15-1	15
	0306 Fuel tank assembly and mounting straps	16-1	16
	0306 Fuel filler pipe assembly and vent lines	17-1	17
	0306 Fuel tank vent line, filter, and mounting hardware	18-1	18
	0309 Fuel filter assembly/water separator and mounting hardware	19-1	19
	0311 Glow plug	20-1	20
	0312 Accelerator controls and hand throttle	21-1	21
	0312 Accelerator cable bracket and idle spring	22-1	22
Group 04	Exhaust system	23-1	23
	0401 Muffler, exhaust pipes, and related parts	23-1	23
	0401 Muffler, exhaust pipes, and related parts	24-1	24
	0401 Exhaust manifold heat shield.	25-1	25
Group 05	Cooling system	26-1	26
	0501 Radiator and mounting hardware.	26-1	26
	0501 Surge tank and related parts	27-1	27
	0502 Radiator shroud and related parts	28-1	28
	0503 Radiator hoses and related parts	29-1	29
	0503 Thermostat, water crossover, and attaching hardware	30-1	30
	0504 Water pump and attaching hardware	31-1	31
	0505 Fan assemblies and belts	32-1	32
	0505 Tensioner, idler pulley, and mounting hardware	33-1	33
	0505 Fan drive and pulley	34-1	34
Group 06	Electrical system	35-1	35
	0601 Generator, 60 AMP, 100 AMP, belts, pulley, and mounting hardware	35-1	35
	0601 100 AMP alternator (NIEHOFF) and mounting hardware	36-1	36
	0601 200 AMP alternator assembly, belts, pulley, guard, and mounting hardware, M996, M996A1, M997, M997A1, M1097, and M1097A1	37-1	37
	0601 200 AMP alternator (NIEHOFF) mounting hardware	38-1	38
	0601 200 AMP alternator, M996, M996A1, M997, M997A1, M1097, and M1097A1 (PRESTOLITE)	39-1	39

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
0601 200 AMP alternator, M996, M996A1, M997, M997A1, M997A2, M1097, M1097A1, M1097A2, and M1123 (NIEHOFF)	40-1	40
0601 A2 alternator wiring harness	41-1	41
0601 Kit, 60, 100, and 200 AMP alternator mounting hardware	42-1	42
0601 Generator assembly (60 AMP)	43-1	43
0603 Starter motor, cable assemblies, and mounting hardware. . . .	44-1	44
0603 Starter motor assembly	45-1	45
0607 Instrument panel assembly and mounting hardware	46-1	46
0607 Instrument cluster assembly	47-1	47
0607 Circuit breakers	48-1	48
0608 Directional control unit, protective control box, and directional flasher	49-1	49
0608 Transmission control module, circuit breaker, and relay	50-1	50
0608 Stoplight switch, time delay module, and high beam selector switch.	51-1	51
0608 Control box assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance.	52-1	52
0608 Control box assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance	53-1	53
0608 Air conditioner and heater control box, M997, M997A1, and M997A2 ambulance.	54-1	54
0608 Personnel heater/vent and A/C control panel, M997, M997A1, and M997A2 ambulance.	55-1	55
0608 Personnel heater/vent A/C control panel, M996 and M996A1 ambulance	56-1	56
0608 24V DC outlet, rear, M996, M996A1, M997, M997A1, and M997A2 ambulance.	57-1	57
0608 Front and rear blackout switches, M996, M996A1, M997, M997A1, and M997A2 ambulance.	58-1	58
0608 NBC control panel, M996, M996A1, M997, M997A1, and M997A2 ambulance.	59-1	59
0609 Front composite light and mounting hardware	60-1	60
0609 Rear composite light and mounting hardware	61-1	61
0609 Blackout lamp and headlight assembly.	62-1	62
0609 Clearance marker light assembly.	63-1	63
0609 Backup light assembly and mounting hardware.	64-1	64
0609 Blackout, dome, and spotlight, M996, M996A1, M997, M997A1, and M997A2 ambulance.	65-1	65
0610 Sending units	66-1	66
0610 Fuel pressure transducer, fuel level transmitter, parking brake, backup light switches, and transfer indicator switch.	67-1	67
0611 Horn and horn button assembly.	68-1	68
0612 Batteries, cables, and related parts.	69-1	69
0612 Buss bar and related parts	70-1	70
0612 Battery mounting components and related parts	71-1	71
0612 Slave receptacle and cable assemblies.	72-1	72
0612 Slave receptacle and cable assemblies.	73-1	73
0612 200 AMP umbilical power cable	74-1	74
0613 Engine wiring harness	75-1	75
0613 A2 engine wiring harness.	76-1	76
0613 A2 engine wiring harness installation.	77-1	77
0613 A2 transmission wiring harness	78-1	78
0613 STE/ICE wiring harness	79-1	79

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
0613 Hood wiring harness	80-1	80
0613 Body wiring harness and fuel tank jumper assembly	81-1	81
0613 Body wiring harness, ambulance	82-1	82
0613 Body wiring harness – partial view.	83-1	83
0613 Body wiring harness – partial view.	84-1	84
0613 Body wiring harness – partial view.	85-1	85
0613 A2 body wiring harness	86-1	86
0613 Ambulance body wiring harness, M997A2 and M1035A2	87-1	87
0613 A2 body wiring harness installation	88-1	88
0613 Air-conditioner jumper cable, M997, M997A1, and M997A2 ambulance	89-1	89
0613 Wiring harness, blackout jumper switch, M996, M996A1, M997, M997A1, and M997A2 ambulance.	90-1	90
0613 Main power cable assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance	91-1	91
0613 Interior lighting harness assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance.	92-1	92
0613 Heating/vent harness assembly, M996 and M996A1 ambulance	93-1	93
0613 Aspirator/resuscitator cable assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance.	94-1	94
0613 NBC wiring harness, M997, M997A1, and M997A2 ambulance.	95-1	95
0613 NBC wiring harness, M996 and M996A1 ambulance	96-1	96
Group 07 Transmission	97-1	97
0705 Transmission and transfer control assembly and shift rod	97-1	97
0705 Transmission shift control and neutral start switch.	98-1	98
0705 Transmission shift control and neutral start switch.	99-1	99
0705 Transmission shift controls and modulator	100-1	100
0705 Transmission shift lever, shift bracket, and rod.	101-1	101
0708 Torque converter	102-1	102
0710 Transmission mounting hardware, fluid dipstick, and tube assembly.	103-1	103
0710 Transmission assembly	104-1	104
0710 Transmission assembly	105-1	105
0710 Planetary gear carrier	106-1	106
0710 Planetary gear carrier	107-1	107
0710 Parking lock system	108-1	108
0713 Direct clutch assembly.	109-1	109
0713 Direct clutch assembly.	110-1	110
0713 Forward clutch	111-1	111
0713 Forward clutch	112-1	112
0713 Intermediate clutch and center support assembly	113-1	113
0713 Intermediate clutch and center support assembly	114-1	114
0713 Overrun, overdrive, and fourth clutch assembly.	115-1	115
0714 Front servo, rear servo, and governor assembly.	116-1	116
0714 Front servo, rear servo, and governor assembly.	117-1	117
0714 Control valve and related parts	118-1	118
0714 Control valve and related parts	119-1	119
0714 Control valve, accumulator, and related parts	120-1	120
0721 Transmission oil pump.	121-1	121
0721 Transmission oil pump.	122-1	122
0721 Transmission vent lines and attaching hardware.	123-1	123
0721 Transmission/transfer cooling lines.	124-1	124
0721 Transmission/transfer cooling lines.	125-1	125

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 08	Transfer assembly.	126-1	126
	0801 Transfer case, w/container	126-1	126
	0801 Transfer assembly.	127-1	127
	0801 Transfer case assembly, P/N 12340073-1.	128-1	128
	0801 Transfer case assembly, P/N 5937387, 12342643-1, 12447125 (front half)	129-1	129
	0801 Transfer case assembly, P/N 5937387, 12342643-1, 12447125 (rear half)	130-1	130
	0801 Transfer oil cooler assembly.	131-1	131
	0801 Transfer shift mechanisms.	132-1	132
	0803 Transfer shift controls	133-1	133
	0803 Transfer shift controls	134-1	134
	0804 Transfer case vent lines and related parts.	135-1	135
	Group 09	Propeller shafts	136-1
0900 Front propeller shaft assemblies		136-1	136
0900 Rear propeller shaft assemblies		137-1	137
Group 10	Front axle.	138-1	138
	1000 Front halfshaft assembly, left and right side	138-1	138
	1000 Front halfshaft assembly, left and right side	139-1	139
	1002 Front axle differential, mounting bracket, and hardware	140-1	140
	1002 Front axle differential and geared hub vent lines.	141-1	141
	1004 Front knuckle and geared hub assembly.	142-1	142
	1004 Front knuckle and geared hub assembly.	143-1	143
Group 11	1004 Front control arms, ball joints, and mounting hardware	144-1	144
	Rear axle	145-1	145
	1100 Rear halfshaft assembly, left and right side	145-1	145
	1100 Rear halfshaft assembly, left and right side	146-1	146
	1102 Rear axle differential, mounting brackets, and hardware	147-1	147
	1102 Axle differential	148-1	148
	1102 Rear axle differential and geared hub vent lines	149-1	149
	1104 Rear knuckle and geared hub assembly	150-1	150
Group 12	1104 Rear knuckle and geared hub assembly	151-1	151
	1104 Rear control arms, ball joints, and mounting hardware	152-1	152
	Brakes	153-1	153
	1201 Parking brake hand lever and cable	153-1	153
	1201 Parking brake rod and related parts.	154-1	154
	1201 Parking brake cables and mounting hardware.	155-1	155
	1201 Parking brake caliper, rotor, and mounting hardware	156-1	156
	1201 Rear parking brake and caliper assembly	157-1	157
	1202 Service brake caliper assembly and rotor	158-1	158
	1204 Front service brake lines and proportioning valve	159-1	159
	1204 Front service brake lines and proportioning valve	160-1	160
	1204 Rear brake lines and fittings	161-1	161
	1204 Rear brake lines and fittings	162-1	162
	1204 Master cylinder assembly.	163-1	163
	Group 13	1205 Hydro booster	164-1
1206 Service brake pedal assembly.		165-1	165
1206 Service brake pedal assembly.		166-1	166
Wheels.		167-1	167
1311 Wheel and runflat assembly.		167-1	167
1313 Tires.		168-1	168

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 14	Steering	169-1	169
	1401 Steering column, wheel, and intermediate shaft	169-1	169
	1401 Steering linkage	170-1	170
	1407 Power steering gear and mounting hardware	171-1	171
	1407 Power steering gear assembly	172-1	172
	1410 Power steering pump support bracket.	173-1	173
	1410 Power steering pump, pulley, and mounting hardware.	174-1	174
	1410 Power steering pump, pulley, and mounting hardware.	175-1	175
	1410 Power steering pump assembly	176-1	176
	1411 Power steering and hydro-booster hydraulic lines and fittings	177-1	177
	1411 Power steering oil cooler, hydro-booster, and fan clutch hydraulic lines and fittings	178-1	178
Group 15	Frame and towing attachments.	179-1	179
	1501 Frame assembly, body mount brackets, and transmission crossmember	179-1	179
	1501 Frame assembly, body mount brackets, and transmission crossmember	180-1	180
	1501 Air lift brackets, front upper control arm brackets, front spring seats, and mounting hardware.	181-1	181
	1501 Front suspension crossmembers, related parts, and mounting hardware.	182-1	182
	1501 Rear suspension crossmembers, related parts, and mounting hardware.	183-1	183
	1501 Upper control arm brackets, spring seats, related parts, and mounting hardware	184-1	184
	1501 Front bumper and lifting shackle	185-1	185
	1501 Front bumper and lifting shackle	186-1	186
	1501 Front bumper and lifting shackle, winch.	187-1	187
	1501 Rear bumper and lifting shackle	188-1	188
	1501 Brake protection guard (front)	189-1	189
	1501 Brake protection guard (rear)	190-1	190
	1503 Towing pintle assembly.	191-1	191
Group 16	Springs and shock absorbers.	192-1	192
	1601 Springs, front and rear	192-1	192
	1604 Shock absorbers, front and rear	193-1	193
	1605 Stabilizer bar and connecting links.	194-1	194
	1605 Rear radius rods.	195-1	195
Group 18	Body and hood	196-1	196
	1801 Body mounting components	196-1	196
	1801 Body assembly components, left hand.	197-1	197
	1801 Body assembly and related parts	198-1	198
	1801 Body assembly components, right hand.	199-1	199
	1801 Body insulation and cowl assemblies	200-1	200
	1801 Body insulation.	201-1	201
	1801 Hood assembly and mounting hardware	202-1	202
	1801 Hood assembly grille and related parts.	203-1	203
	1801 Hood assembly ballistic grilles and related parts.	204-1	204
	1801 Left hand splash shield, radiator side armor, and hood prop rod	205-1	205
	1801 Right hand splash shield and radiator side armor	206-1	206
	1801 Rear fixed doors and mounting hardware	207-1	207
	1801 Engine access cover assembly, "A" pillar insulation, and steering wheel lock.	208-1	208
	1801 Cargo bulkhead and mounting hardware	209-1	209

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
1801 Interior net assemblies, cargo bulkhead, and related items . . .	210-1	210
1801 Rear doors, M996 and M996A1 ambulance	211-1	211
1801 Rear doors, M997, M997A1, and M997A2 ambulance	212-1	212
1801 Bulkhead doors and related parts, M996 and M996A1 ambulance	213-1	213
1801 Bulkhead doors and related parts, M997, M997A1, and M997A2 ambulance	214-1	214
1801 NBC panel door and related hardware, M997, M997A1, and M997A2 ambulance	215-1	215
1801 NBC access door and related hardware, M996 and M996A1 ambulance	216-1	216
1801 Litter tray stowage door, M996, M996A1, M997, M997A1, and M997A2 ambulance	217-1	217
1801 Litter tray stowage, M997, M997A1, and M997A2 ambulance . .	218-1	218
1801 Rear cover assembly, left and right hand, M996 and M996A1 ambulance	219-1	219
1801 Cover assembly, medical stowage, left and right hand, M996 and M996A1 ambulance	220-1	220
1801 Heater access door and related hardware, M996 and M996A1 ambulance	221-1	221
1801 A/C and heater compartment panels and seals, M997, M997A1, and M997A2 ambulance	222-1	222
1801 Rear door seals, M996, M996A1, M997, M997A1, and M997A2 ambulance	223-1	223
1801 Medical stowage doors, lower heater louver, and related components, M997, M997A1, and M997A2 ambulance	224-1	224
1802 Windshield assembly, folddown	225-1	225
1802 Windshield assembly, ballistic	226-1	226
1805 Interior tunnel, cowl, floor insulation, mounting components (foam), and exterior insulation	227-1	227
1805 Insulation floorboard, front and rear	228-1	228
1805 Floor mat cover and related hardware, M996, M996A1, M997, M997A1, and M997A2 ambulance	229-1	229
1806 Seats and belts, front	230-1	230
1806 Commander's seat, driver's seat, and related parts	231-1	231
1806 Protective padding on "B" pillar for non-armored vehicles	232-1	232
1806 Protective padding on "B" pillar cover for armored vehicles . . .	233-1	233
1806 Front seatbelts, brackets, and mounting hardware	234-1	234
1806 Seats and belts, rear	235-1	235
1806 Seat cushions and mounting hardware, M996 and M996A1 ambulance	236-1	236
1806 Seat frame assembly and related hardware, M996 and M996A1 ambulance	237-1	237
1806 Attendant seat, M996, M996A1, M997, M997A1, and M997A2 ambulance	238-1	238
1806 Rear seatbelts, brackets, and mounting hardware	239-1	239
1808 Pioneer tool stowage tray assembly	240-1	240
1808 First aid kit and fire extinguisher mounting brackets	241-1	241
1808 TOW missile rack assembly and mounting hardware	242-1	242
1808 TOW missile rack assembly, upper rack, support, and mounting hardware	243-1	243
1808 TOW missile rack assembly, intermediate rack, and base assembly	244-1	244
1808 Traversing unit stowage and depression stop assembly	245-1	245

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
1808 TOW tripod, fuel can, M16 ammo stowage brackets, telephone cable reel, combat ration straps, and mounting components	246-1	246
1808 MGS battery stowage rack and related parts.	247-1	247
1808 Night sight, bore sight collimator, and camouflage pack stowage .	248-1	248
1808 TOW night sight batteries and coolant, radiac meter, night vision goggles stowage, and TAS carry bag stowage.	249-1	249
1808 M16/M203 rifle mount and gasoline burning stove stowage . . .	250-1	250
1808 Machine gun, night sight, and ammunition stowage and related components	251-1	251
1808 Armament tripod mount, ammunition, gun adapter mount, rear M16 rifle stowage, and related components	252-1	252
1808 Ammunition and water can stowage trays and related components, Army.	253-1	253
1808 Ammunition and water can stowage trays and mounting hardware	254-1	254
1808 Ammunition and water can stowage trays and related components, Air Force and Marine Corps	255-1	255
1808 Litter straps and fasteners, right hand, M996 and M996A1 ambulance	256-1	256
1808 Litter straps and fasteners, left hand, M996 and M996A1 ambulance	257-1	257
1808 Oxygen bottle mounting, litter bumpers, and litter frame plugs, right hand, M996 and M996A1 ambulance	258-1	258
1808 Oxygen bottle mounting, litter bumpers, and litter frame plugs, left hand, M996 and M996A1 ambulance	259-1	259
1808 Oxygen bottle holddown and bracket, spine board (short) w/straps, R.H., M997, M997A1, and M997A2 ambulance	260-1	260
1808 3-1/2 ton jack storage bracket and related items	261-1	261
1808 I.V. bag straps and hooks, oxygen bottle stowage, and spine board strap assemblies, M996, M996A1, M997, M997A1, and M997A2 ambulance	262-1	262
1808 Web shelf net assembly, M997, M997A1, and M997A2 ambulance	263-1	263
1808 Attendant seat stowage hardware, M996 and M996A1 ambulance	264-1	264
1808 Attendant seat stowage hardware, M997, M997A1, and M997A2 ambulance.	265-1	265
1810 Tailgate assembly and related parts	266-1	266
1812 Body armor panels and mounting hardware	267-1	267
1812 Cargo shell door, insulation, intermediate pillar, gas spring, and related components	268-1	268
1812 Cargo shell door assembly, basic and supplemental armor	269-1	269
1812 Cargo shell mounting components	270-1	270
1812 Cargo shell assemblies.	271-1	271
1812 Weapon station hatch assembly, latch, gunner's sling, and related components	272-1	272
1812 Weapon station tray assembly, reinforcement tube, and related components.	273-1	273
1812 Weapon station tray mounting, TOW carrier.	274-1	274
1812 Armament pintle and panel assemblies, and related parts	275-1	275
1812 Armament pintle and panel assemblies, and related parts	276-1	276
1812 Turret support ring assembly.	277-1	277
1812 Roof and mounting components	278-1	278

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
1812 Gunner's platform assembly and mounting hardware	279-1	279
1812 Crew door assembly, front, ballistic	280-1	280
1812 Crew door assembly, rear, ballistic	281-1	281
1812 TOW electrical cables and mounting hardware	282-1	282
1812 S250 shelter mounting components	283-1	283
1812 S250 shelter tailgate mounting components	284-1	284
1812 Litter assembly and mounting components	285-1	285
1812 Litter assembly	286-1	286
1812 Lower litter skids and upper litter mounting hardware, M997, M997A1, and M997A2 ambulance	287-1	287
1812 Litter tray extension assembly, M997, M997A1, and M997A2 ambulance	288-1	288
1812 Upper litter tray assembly, M997, M997A1, and M997A2 ambulance	289-1	289
1812 Litter skids and tracks, M996 and M996A1 ambulance	290-1	290
1812 Red Cross marking rear door, M996, M996A1, M997, M997A1, and M997A2 ambulance	291-1	291
1812 Rear step mounting hardware, M996, M996A1, M997, M997A1, and M997A2 ambulance	292-1	292
1812 Rear step assembly, M996, M996A1, M997, M997A1, and M997A2 ambulance	293-1	293
1812 Rear step latch, striker bracket, and blackout switch mounting hardware, M996, M996A1, M997, M997A1, and M997A2 ambulance	294-1	294
1812 Two and four litter ambulance body mounting hardware and seals, M996, M996A1, M997, M997A1, and M997A2 ambulance	295-1	295
1812 Two and four litter ambulance body mounting hardware and seals, M996, M996A1, M997, M997A1, and M997A2 ambulance	296-1	296
1812 Two and four litter ambulance body, Red Cross markings, M996, M996A1, M997, M997A1, and M997A2 ambulance	297-1	297
1812 Heater duct and grille, M996 and M996A1 ambulance	298-1	298
1812 Heating director housing assembly, M997, M997A1, and M997A2 ambulance	299-1	299
1812 Patient compartment heater and A/C ducts, M997, M997A1, and M997A2 ambulance	300-1	300
1812 Hose assembly, blower to filter, M996 and M996A1 ambulance	301-1	301
1812 NBC piping for #1, 2, & 3 heaters, M997, M997A1, and M997A2 ambulance	302-1	302
1812 NBC piping for #1, 2, & 3 heaters, M996 and M996A1 ambulance	303-1	303
1812 NBC piping for #4 & 5 heaters, M996 and M996A1 ambulance	304-1	304
1812 NBC piping for #4 & 5 heaters, M997, M997A1, and M997A2 ambulance	305-1	305
1812 NBC piping for #6 & 7 heaters, M997, M997A1, and M997A2 ambulance	306-1	306
1812 NBC blower and filter mounting hardware, M996 and M996A1 ambulance	307-1	307
1812 NBC blower and filter mounting hardware, M997, M997A1, and M997A2 ambulance	308-1	308
1812 NBC piping, blower box, and filter, M997, M997A1, and M997A2 ambulance	309-1	309
1812 NBC tubing from filters to heaters, M997, M997A1, and M997A2 ambulance	310-1	310

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
1812 NBC heater and mounting hardware, M997, M997A1, and M997A2 ambulance	311-1	311
1812 NBC heater and mounting hardware, M996 and M996A1 ambulance	312-1	312
Group 20 Hoist, winch, capstan, power control unit, and power take-off	313-1	313
2001 Winch assembly, mounting hardware, and related parts	313-1	313
2001 Winch assembly	314-1	314
2001 Winch control, storage box, and mounting hardware	315-1	315
Group 22 Body, chassis, and accessory items	316-1	316
2201 Two man crew soft top enclosure, top assembly, rear curtain, and door assemblies.	316-1	316
2201 Two man crew soft top enclosure, bow, and mounting components.	317-1	317
2201 Troop area soft top enclosure, bows, and mounting components	318-1	318
2201 Troop area soft top enclosure	319-1	319
2201 Four man crew soft top enclosure, top assembly, rear curtain, and door assemblies.	320-1	320
2201 Four man crew soft top enclosure, bows, and mounting components.	321-1	321
2201 Cargo area soft top enclosure, top assembly	322-1	322
2201 Cargo area soft top enclosure, bows, and mounting components	323-1	323
2201 Ambulance soft top enclosure, top curtain, and door assemblies.	324-1	324
2201 Ambulance soft top enclosure, bows, and mounting components.	325-1	325
2201 Ambulance soft top enclosure, rear bow, and mounting components	326-1	326
2202 Windshield wiper motor, wiper assembly, and washer bottle	327-1	327
2202 Rearview mirror and mounting hardware	328-1	328

VOLUME 2 OF 2

2202 Split rearview mirror and mounting hardware	329-1	329
2202 Reflectors	330-1	330
2202 Diverter assembly, defroster, and heater ducting.	331-1	331
2202 A2 diverter assembly, defroster, heater ducting, and radio brackets	332-1	332
2202 Heater assembly, water valve, and controls.	333-1	333
2202 Heater fuel lines, filter to tank, M996, M996A1, M997, M997A1, and M997A2 ambulance	334-1	334
2202 Fuel lines, personnel heater to fuel filter, M996 and M996A1 ambulance	335-1	335
2202 Fuel lines, personnel heater to fuel filter, M997, M997A1, and M997A2 ambulance	336-1	336
2202 Personnel heater assembly and attaching hardware, M996 and M996A1 ambulance	337-1	337
2202 Antenna and intercom cables and mounting hardware, M997, M997A1, and M997A2 ambulance.	338-1	338
2202 Antenna and intercom cables and mounting hardware, M996 and M996A1 ambulance.	339-1	339
2202 Antenna mount and mounting hardware, M996 and M996A1 ambulance	340-1	340
2202 Antenna mount and mounting hardware, M997, M997A1, and M997A2 ambulance.	341-1	341
2202 Heater blower assembly, M996 and M996A1 ambulance	342-1	342
2202 Heater, filter, and attaching hardware, M997, M997A1, and M997A2 ambulance.	343-1	343

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
2202 Air intake filter, M996 and M996A1 ambulance	344-1	344
2202 Heater assembly, multifuel, B-model, M996, M996A1, M997, M997A1, and M997A2 ambulance.	345-1	345
2202 Heater grille, exhaust pipe, and mounting hardware, M996 and M996A1 ambulance.	346-1	346
2202 Heater grille, exhaust pipe, and mounting hardware, M997, M997A1, and M997A2 ambulance.	347-1	347
2202 Heater assembly, multifuel, A-model, M997, M997A1, and M997A2 ambulance.	348-1	348
2202 Heater component bracket assembly, B-model, M996, M996A1, M997, M997A1, and M997A2 ambulance	349-1	349
2202 Burner assembly, B-model, M996, M996A1, M997, M997A1, and M997A2 ambulance.	350-1	350
2202 Burner assembly, A-model, M997, M997A1, and M997A2 ambulance	351-1	351
2202 Sun visor assembly and mounting hardware	352-1	352
2202 Ambulance spreader assembly	353-1	353
2210 Data plates, dash panel	354-1	354
2210 Data plates, battery cable and slave receptacle	355-1	355
2210 Data plates, surge tank, fan shroud, and cook stove.	356-1	356
2210 Data plates, generator, transfer case, and engine container . . .	357-1	357
2210 Data plates, winch.	358-1	358
2210 Data plates, TOW carrier.	359-1	359
2210 Data plates, TOW carrier.	360-1	360
2210 Data plates, sights, traversing unit, night vision goggles, and radiac meter.	361-1	361
2210 Data plates and identification tags, M996, M996A1, M997, M997A1, and M997A2 ambulance.	362-1	362
Group 33 Special purpose kits	363-1	363
3301 Engine shipping container assembly.	363-1	363
3303 Arctic kit, fuel injection pump, engine gaskets, and CDR tube . .	364-1	364
3303 Arctic kit, pan cover and heater tube	365-1	365
3303 Arctic kit, control box, gas cap, fuel pump, and fuel lines	366-1	366
3303 Arctic kit, control box assembly	367-1	367
3303 Arctic kit, heater assembly, plenum assembly, and related components.	368-1	368
3303 Arctic kit, battery box components, insulation, and control box connector	369-1	369
3303 Arctic kit, diverter box, defroster, heater ducting, and radio rack bracket	370-1	370
3303 Arctic kit, heater duct assembly	371-1	371
3303 Arctic kit, diverter box, ducting, insulation, and radio mounting brackets.	372-1	372
3303 Arctic kit, two man crew, bow, and mounting components	373-1	373
3303 Arctic kit, two man crew curtain fasteners	374-1	374
3303 Arctic kit, two man crew, top curtain, rear curtain, and door assemblies	375-1	375
3303 Arctic kit, four man crew, top enclosure, bows, and mounting components.	376-1	376
3303 Arctic kit, door hinges, and curtain channels.	377-1	377
3303 Arctic kit, four man crew, top curtain, rear curtain, and door assemblies	378-1	378
3303 Swingfire heater kit and related parts	379-1	379
3033 Swingfire heater kit, circuit breaker and related parts.	380-1	380

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
3303 Swingfire heater kit, harness assemblies	381-1	381
3303 Two door seat and floor covers	382-1	382
3303 Cargo floor cover and harness assembly	383-1	383
3303 Winterization kit, fuel pump and attaching hardware	384-1	384
3303 Fuel pump tube assembly	385-1	385
3303 Winterization kit, fuel line and jumper cable.	386-1	386
3303 Winterization kit, heater and exhaust diverter assembly	387-1	387
3303 Winterization kit, control box, filter, and cover assembly	388-1	388
3303 Seat support assemblies and mounting hardware	389-1	389
3303 Step assembly, support assembly, and mounting hardware	390-1	390
3303 Top plate support and attaching hardware	391-1	391
3303 Fuel can bracket, antenna mounting bracket, and composite light housing mounting hardware.	392-1	392
3303 Mounting plates and ventilator exhaust ducting	393-1	393
3303 Screw caps and winterization instruction plate	394-1	394
3303 Top cover assembly and mounting hardware.	395-1	395
3303 Wiring harness channel and hardware	396-1	396
3303 End closures, door assembly, and mounting hardware	397-1	397
3305 Deep water fording kit, intake and exhaust systems	398-1	398
3305 Deep water fording kit, selector valve, sensor cup, and vent lines.	399-1	399
3305 Deep water fording kit, hydro-boost vent line, engine and transmission dipstick, and tube assemblies.	400-1	400
3305 Supplemental deep water fording kit	401-1	401
3307 Troop seat kit, safety strap, and mounting hardware.	402-1	402
3307 Troop seat assembly, left and right.	403-1	403
3307 Alternator, 100 AMP kit (PRESTOLITE)	404-1	404
3307 Alternator, 100 AMP kit (NIEHOFF)	405-1	405
3307 Alternator, 100 AMP (PRESTOLITE)	406-1	406
3307 Alternator, 100 AMP (NIEHOFF).	407-1	407
3307 Alternator, 200 AMP kit	408-1	408
3307 Communications kit, radio rack assembly, and mounting hardware, AN/GRC-160 and TSEC/KY-57.	409-1	409
3307 Communications kit, radio cables, AN/GRC-160, AN/VRC-46, and TSEC/KY-57	410-1	410
3307 Communications kit, radio rack assembly, and mounting hardware, AN/GRC-160 and TSEC/KY-57, TOW carrier.	411-1	411
3307 Communications kit, radio cables, AN/GRC-160, AN/VRC-46, and TSEC/KY-57, TOW carrier	412-1	412
3307 Communications kit, radio rack assembly, AN/VRC-47 and (2) TSEC/KY-57 assemblies	413-1	413
3307 Communications kit, radio cables, AN/VRC-47 and (2) TSEC/KY-57 assemblies	414-1	414
3307 Communications kit, radio rack assembly, AN/VRC-49 and (2) TSEC/KY-57 assemblies	415-1	415
3307 Communications kit, radio cables, AN/VRC-49 and (2) TSEC/KY-57 assemblies	416-1	416
3307 Communications kit, radio rack assembly.	417-1	417
3307 Communications kit, radio rack assembly mounting hardware, AN/VRC-46.	418-1	418
3307 Communications kit, radio rack assembly mounting hardware, (2) AN/VRC-46	419-1	419
3307 Communications kit, radio rack assembly mounting hardware, (3) AN/VRC-46	420-1	420
3307 Communications kit, radio rack assembly mounting hardware, AN/VRC-47.	421-1	421

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
3307 Communications kit, radio rack assembly mounting hardware, AN/VRC-48	422-1	422
3307 Communications kit, radio rack assembly mounting hardware, AN/VRC-49	423-1	423
3307 Communications kit, radio cable, main power	424-1	424
3307 Communications kit, radio cables, AN/VRC-47 and AN/VRC-48	425-1	425
3307 Communications kit, radio cables, AN/VRC-46, (2) AN/VRC-46, (3) AN/VRC-46, AN/VRC-47, AN/VRC-48, and AN/VRC-49	426-1	426
3307 Communications kit, radio cables, (2) AN/VRC-46, (3) AN/VRC-47, and AN/VRC-49	427-1	427
3307 Communications kit, radio cables, (3) AN/VRC-46	428-1	428
3307 81 MM mortar kit, container assembly, and stowage rack	429-1	429
3307 81 MM mortar kit, equipment rack assembly, barrel stowage bracket, and bipod stowage tray assembly	430-1	430
3307 Traversing bar kit	431-1	431
3307 Rearview mirror mounting kit	432-1	432
3307 Cargo barrier extension kit	433-1	433
3307 Slave receptacle kit	434-1	434
3307 Slave receptacle with power cable assembly kit	435-1	435
3307 Power steering oil cooler kit	436-1	436
3307 Brushguard kit (Basic and A1 Series)	437-1	437
3307 Kit, S250 shelter mounting components	438-1	438
3307 Kit, S250 shelter tailgate mounting components	439-1	439
3307 Kit, camouflage rack and stowage rack assembly	440-1	440
3307 Kit, prime mover, lt. howitzer, 105MM L119, front bumper	441-1	441
3307 Kit, prime mover, lt. howitzer, 105MM L119, rear bumper	442-1	442
3307 Kit, prime mover, lt. howitzer, 105MM L119, winch	443-1	443
3307 Kit, prime mover, lt. howitzer, 105MM L119, winch control and storage box	444-1	444
3307 Kit, prime mover, lt. howitzer, 105MM L119, trailer receptacle and body wiring harness	445-1	445
3307 Kit, prime mover, lt. howitzer, 105MM L119, ammo rack and sight boxes stowage	446-1	446
3307 Kit, prime mover, lt. howitzer, 105MM L119, telephone, remote, and tripod stowage	447-1	447
3307 Kit, prime mover, lt. howitzer, 105MM L119, fuel can, water can, section chest, and spade stowage	448-1	448
3307 Kit, prime mover, lt. howitzer, 105MM L119, G.D.U. and G.D.U. battery stowage	449-1	449
3307 Kit, prime mover, lt. howitzer, 105MM L119, aiming post and cable reel stowage	450-1	450
3307 Kit, prime mover, lt. howitzer, 105MM L119, pioneer tool stowage tray hardware and parking brake hardware	451-1	451
3307 Kit, towed vulcan system	452-1	452
3307 Kit, pintle extension	453-1	453
3307 Kit, rear seat assembly	454-1	454
3307 Kit, man portable air-defense system (MANPADS)	455-1	455
3307 Kit, 9,000 lb winch	456-1	456
3307 Kit, 9,000 lb winch	457-1	457
3307 9,000 lb winch assembly	458-1	458
3307 Modification kit, sun visor	459-1	459
3307 Modification kit, windshield retainer	460-1	460
3307 Left rearview mirror relocation kit	461-1	461
3307 Brushguard kit	462-1	462
3307 Underbody protection kit with and without winch	463-1	463

TABLE OF CONTENTS (Cont'd)

	Page	Illus Figure
3307 Underbody protection kit, transercase, fuel tank shields, and sway bar link nuts	464-1	464
3307 Cover, access cargo floor modification kit	465-1	465
3307 FR12 refrigerant parts kit	466-1	466
3307 R-12 to FR12 refrigerant conversion retrofit kit.	467-1	467
3307 Hand throttle control kit	468-1	468
3307 10,500 lb hydraulic winch accessory kit.	469-1	469
3307 10,500 lb hydraulic winch winch accessory kit.	470-1	470
3307 10,500 lb hydraulic winch accessory kit.	471-1	471
3307 100 AMP dual voltage alternator and regulator mounting hardware kit.	472-1	472
3307 100/200 AMP dual voltage alternator and regulator mounting hardware kit	473-1	473
3307 100/200 AMP dual voltage alternator wiring harness.	474-1	474
3307 200 AMP dual voltage alternator and regulator mounting hardware kit.	475-1	475
3307 400 AMP alternator kit	476-1	476
3307 Power steering pump and hoses-400 AMP alternator kit	477-1	477
3307 Speedometer cable assembly-400 AMP alternator kit.	478-1	478
3307 Dipstick and dummy connector plug-400 AMP alternator kit . .	479-1	479
3307 400 AMP alternator wiring harness cable assemblies.	480-1	480
3307 Buss assembly-400 AMP alternator kit.	481-1	481
3307 Tachometer parts kit	482-1	482
3307 Tachometer parts kit	483-1	483
3307 Tachometer parts kit	484-1	484
3307 Precision Lightweight Global Positioning System Receiver (PLGR)	485-1	485
3307 Kit, intercom bracket.	486-1	486
3307 Kit, rear hatch support	487-1	487
Group 47 Gauges, weighing, and measuring devices	488-1	488
4701 Speedometer, speedometer drive, and related parts	488-1	488
4702 Air restriction indicator assembly.	489-1	489
Group 52 Refrigeration, air conditioner, heater, and air conditioning components.	490-1	490
5203 Air conditioner compressor and mounting hardware, M997 and M997A1 ambulance.	490-1	490
5203 Air conditioner compressor assembly, M997 and M997A1 ambulance	491-1	491
5217 Air conditioner lines and fittings, M997, M997A1, and M997A2, ambulance	492-1	492
5217 Air conditioner condenser and evaporator lines, M997, M997A1, and M997A2 ambulance.	493-1	493
5230 Heater and air conditioning condenser, M997, M997A1, and M997A2 ambulance.	494-1	494
5230 Heater and air conditioning condenser, M997, M997A1, and M997A2 ambulance.	495-1	495
5241 Air conditioning evaporator and mounting hardware, M997, M997A1, and M997A2 ambulance.	496-1	496
5243 Evaporator blower motor assembly covers, M997, M997A1, and M997A2 ambulance.	497-1	497
5243 Evaporator blower motor assembly, M997, M997A1, and M997A2 ambulance	498-1	498

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 94	Repair parts kits.	Kits 1	
	9401 Repair parts kits.	Kits-1	
Group 95	Bulk material.	Bulk-1	
	9501 Bulk.	Bulk-1	
Section III	SPECIAL TOOLS LIST.	499-1	
Group 26	Tools and test equipment	499-1	499
	2604 Special tools, drive belts and transmission	499-1	499
	2604 Special tools, transmission.	500-1	500
	2604 Special tools, transfer case.	501-1	501
	2604 Special tools, axle differential.	502-1	502
	2604 Special tools, geared hub and steering	503-1	503
	2604 Special tools, steering pump, body, and speedometer drive.	504-1	504
	2604 Special tools, multipurpose.	505-1	505
	2604 Special tools, air conditioner compressor.	506-1	506
	2604 Special tools, air conditioner compressor.	507-1	507
	2604 Special tools, air conditioner compressor.	508-1	508
	2604 Special tools, air conditioner compressor tool kit.	509-1	509
	2604 Special tools, transmission, transfer case, and engine A2.	510-1	510
	2604 Special tools, transmission, transfer case, and engine A2.	511-1	511
	2604 Pinion setting kit.	512-1	512
Section IV	CROSS-REFERENCE INDEXES.	I-11	
	National Stock Number Index	I-1	
	Part Number Index.	I-100	