


TORC LLC

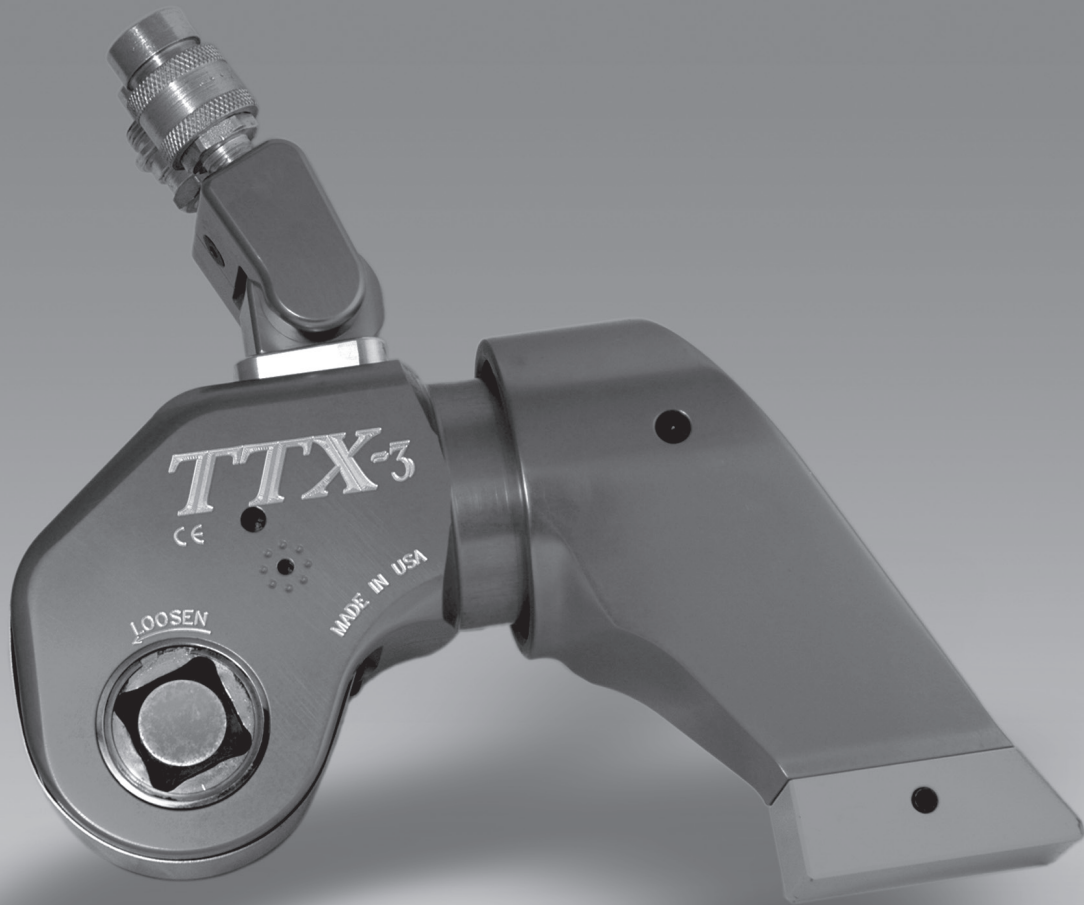

TTX SERIES

OPERATIONAL AND SPARE PARTS MANUAL

This manual applies to all tool part numbers in the TTX Product Families. The complete part number matrix which applies to this manual can be found in Appendix A and B respectively. It is recommended the manual is kept up-to-date by checking the edition and date code at the bottom of this page by utilizing the TORC, LLC. website and downloading a copy of the most recent edition as needed.

TTX PRODUCT FAMILY:

TTX-1, TTX-3, TTX-5, TTX-7, TTX-11, TTX-21,
TTX-30

EN, EN-ISO, ISO Compliant

For a complete EC declaration of conformity or if you require any further assistance please contact your local TORC, LLC. representative or 1-888-444-TORC (1-888-444-8672) or on the web at www.TORC.com.

TORC LLC

218 Island Road,
Mahwah, New Jersey 07430 U.S.A.

Notice: *The information contained in this document is subject to change without notice. TORC, LLC. makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. TORC, LLC. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. It is further recommended that the end-user or repair technician insure they have obtained and are familiar with the latest revision of the manual for the equipment outlined in this document.*

Restricted Rights Legend: *Use and duplication of the information contained within this manual is limited to the purchaser, end user, or licensed TORC, LLC. representative. It is recommended that proper training for the equipment outlined in this manual be conducted by a TORC, LLC. authorized training representative for any person who is operating or repairing the equipment outlined in this document. Modification, or disclosure by any other agency or representative is strictly forbidden.*

Product Modifications: **TORC, LLC. DOES NOT ALLOW** any of the products listed in this manual to be modified by any end user without exception. Should an application require a modification to the tool, or any of the standard accessories please consult with your local TORC, LLC. representative and they will be able to obtain the assistance for any modification that may be required.

© Copyright TORC, LLC. 2016: *All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.*

2nd Edition. Printed in USA. January 2016

Complies with standards publication BS EN 82079-1:2012

THANK YOU FOR PURCHASING



FREE SAFETY TRAINING

PLEASE READ THE SAFETY INSTRUCTIONS HEREIN. To ensure safe tool operation, please request a FREE Safety Training prior to use by calling your local TORC, LLC. Representative 1-888-444-8672 or www.TORC.com. We recommend one Safety Training every 6 months. These trainings are free of charge. Just call us.

SYSTEM INSPECTION

Prior to any use, please inspect the entire tool system, including hoses, gauge, sockets and backup wrenches. Do not use kinked hoses, oversized or heavily worn sockets, backup wrenches, damaged tools, pumps, connectors or gauges. Connect system to operate from a safe distance. Ensure fasteners are in good shape. Check tool function with drive or hex ratchet turning in one direction only and check out gauge from a safe distance that needle is on zero at no pressure and at 10,000 psi at high pressure. Keep high pressure on and check system visually for leaks. Please keep in mind that hydraulic tools are very strong and work at high pressure.

FREE LOANER TOOLS

In case of tool failure during the warranty or rental period, please contact your local TORC, LLC. Agent for a free loaner tool - 24/7.

HYDRAULIC OIL REPLACEMENT

We recommend that the oil be changed every three months

HOSE REPLACEMENT

Hose replacement is recommend every three years, however we recommend yearly hose inspections.

HELP

If you require any further assistance, please call your local TORC, LLC. Representative or 1-888-444-TORC (1-888-444-8672), on the web at www.TORC.com - 24/7!

**PLEASE REVIEW THESE SAFETY
TIPS BEFORE EVERY TOOL USE**

CONTENTS

TTX SERIES

OPERATIONAL AND SPARE PARTS MANUAL

INTRODUCING TORC, LLC.	6
<i>SECTION I</i>	
IMPORTANT SAFETY INSTRUCTIONS	7
<i>SECTION II</i>	
INSTRUCTIONS BEFORE USE	9
2-1 Working Pressure	
2-2 Hydraulic Connections	
2-3 Electrical Connections	
2-4 Air Connections	
<i>SECTION III</i>	
OPERATION	11
3-1 General	
3-2 Connecting the System	
3-3 Drive Direction Change	
3-4 Reaction Arm	
3-5 Setting Torque	
3-6 Setting Pressure	
3-7 Applying Torque	
3-8 Operating the Torque Machine	
3-9 Loosening Procedures	
<i>SECTION IV</i>	
HYDRAULIC POWER PACKS	16
4-1 General	
4-2 Remote Control	
4-3 Operation	
<i>SECTION V</i>	
PREVENTIVE MAINTENANCE	18
5-1 Preventive Maintenance - Torque Machines	
5-2 Preventive Maintenance - Hydraulic Power Packs	
<i>SECTION VI</i>	
TROUBLESHOOTING	20
<i>SECTION VII</i>	
ASSEMBLY/DISASSEMBLY INSTRUCTIONS	24
APPENDICES	25
A Parts Breakdown	
B TTX Dimensional Data	
C Square/Allen Drive Working Torque	

INTRODUCING TORC, LLC.

THANK YOU FOR BUYING TORC!

This manual is designed to provide you with the basic knowledge required to operate and maintain your TORC, LLC. tool. Please read this manual carefully and follow the instructions provided. If you have any questions regarding your TORC, LLC. tool, please call us directly at 888-444-8672 or fax 888-505-8672.

Finally, your purchase of this TORC, LLC. tool entitles you to the following FREE services:

- **Free annual tool inspection**
- **Free loaner tools in case of failure**
- **Free engineering assistance by calling 1-888-444-TORC.**

Your local TORC, LLC. office was informed of the delivery of this equipment. Should you require immediate training, please feel free to call us directly to arrange an appointment with you at your convenience.

For additional information please visit our website at www.TORC.com

Again, thank you and welcome to TORC, LLC.!

Worldwide Warranty

TORC, LLC. equipment is engineered to the latest technological standards and is backed by our exclusive 13-month no questions asked warranty.

If a TORC, LLC. Tool cannot be repaired, FREE loaner TORC, LLC. equipment will be made available to you upon request.

TORC, LLC. OR ITS DEALERS SHALL NOT BE LIABLE FOR LOSS OF PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS INCURRED BY THE BUYER OR THE USER.

SECTION I

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Your TORC, LLC. TORQUE MACHINE is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS**
- **KEEP WORK AREA CLEAN AND WELL LIT**
- **CONSIDER WORK AREA ENVIRONMENT**
Electrical Pumps should never be used in any atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Note: metal to metal contact can cause sparks, precautions should be taken.
- **AVOID PREMATURE TOOL STARTING**
The Pump Remote Control is for the TOOL OPERATOR only. Avoid separate pump and tool operator.
- **STAY CLEAR DURING OPERATION**
If the tool must be held or steadied during operation, use alternative means of securing the tool to the application.
- **GUARD AGAINST ELECTRIC SHOCK**
Ensure the pump is properly grounded and the proper voltage is being used.
- **STORE IDLE TOOLS**
When not in use, tools and accessories should be properly stored to avoid deterioration.
- **USE THE RIGHT TOOL**
Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
- **PROPER SAFETY ATTIRE**
When handling/operating hydraulic equipment, use work gloves, hard hats, safety shoes, hearing protection and other applicable clothing.
- **USE SAFETY GLASSES**
- **MOVING EQUIPMENT**
Do not use hydraulic hoses, uniswivels, pump power or remote cords as means of moving the equipment.

- **HOSES**
Do not kink hoses. Inspect and replace if damaged.
- **SHROUDS AND COVER PLATES**
All tools are equipped with shrouds and/or cover plates to cover up moving internal parts. Do not use tools without shrouds but contact your local TORC, LLC. office to fix.
- **MAINTAIN TOOLS WITH CARE**
For top performance, inspect tool powerpack, hoses, connectors, electric lines and accessories for visual damage frequently. Always follow instructions for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification.
- **STAY ALERT**
Watch what you are doing. Use common sense. Do not use power equipment under the influence of any mood altering substances.
- **PRIOR TO OPERATION**
Ensure that all hydraulic connections are securely connected. Verify that the hydraulic hoses are not kinked. Insure the square drive and its retainer are fully and securely engaged.
- **PRIOR TO USE**
Cycle tool to ensure proper function. Locate a solid, secure reaction point. Be sure the reaction arm retaining clamp is fully engaged. Be sure the hydraulic hoses are free of the reaction point. Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.
- **ALWAYS USE QUALITY ACCESSORIES**
Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, **so stay clear of sockets during operation.**
- **DO NOT USE FORCE**
Do not hammer on socket or tool to enhance performance. If the nut will not turn with the wrench you are using, use a larger size TORC, LLC. tool.
- **REACTION ARM**
Proper reaction is required. Adjust reaction arm or plate accordingly. Avoid excessive play. In case of questions, consult with your local TORC, LLC. office.



SECTION II
**INSTRUCTIONS
BEFORE
USE**

READ CAREFULLY: Most malfunctions in new equipment are the result of improper operation and/or set-up assembly.

PREPARATION: Remove the TORC Torque Machine from shipping container.

INSPECTION: Visually inspect all components for shipping damage. If any damage is found, notify carrier immediately.

2-1

Working Pressure

The tool's maximum working pressure is 10,000 PSI (700 bar)

Make sure that all hydraulic equipment used with this tool is rated for 10,000 PSI Operating Pressure.

2-2

Hydraulic Connections

With older style pumps, the retract side of the system may remain pressurized after the pump has been switched "off". This trapped pressure makes it impossible to loosen the retract-side fittings by hand.

To release the pressure, find the 5/16" manual override holes in the end of the black solenoids on the pump. With a welding rod, allen key or similar device, push in on the ends of both solenoids, each in turn, and the residual pressure will be released. All fittings will then be hand tight again.

Newer style pumps (HIGHFLOW, HIGHFLOW AIR or DYNAMIC) are equipped with an auto-pressure relief.

Never disconnect or connect any hydraulic hoses or fittings without first unloading the wrench and the pump. If the system includes a gauge, double check the gauge to assure pressure has been released.

When making connections with quick disconnect couplings, make sure the couplings are fully engaged. Threaded connections such as fittings, gauges etc. must be clean and securely tightened and leak free.

CAUTION: Loose or improper threaded fittings can be potentially dangerous if pressurized, yet, severe over tightening can cause premature thread failure. Fittings need to be only tightened secure & leak free. Never grab, touch or in any way come in contact with a hydraulic pressure leak. Escaping oil can penetrate the skin and cause injury.

2-3 Electrical Connections

Ensure proper power availability to prevent motor failure or dangerous electrical overloading. Compare the motor nameplate for required amperage.

Do not use electric pump if the 3-prong electrical plug is not whole.


Minimize the length of extension cords and be sure they are of adequate wire size, with ground connections. Extension cord should be #10 AWG gauge.

WARNING: Electric motors may spark. Do not operate in an explosive atmosphere or in the presence of conductive liquids. Use an air motor pump Instead.

2-4 Air Connections

Ensure that you have sufficient air flow (in cfm) to operate your pneumatic pump. If in doubt, compare the pump manufacturer's recommended air flow rating prior to pressurizing pump. Improper air flow may damage the pump motor. For best results use airhoses larger than 3/4" I.D. diameter.

Use of a filter regulator lubricator (FRL) is highly recommended. (Pictured below.)

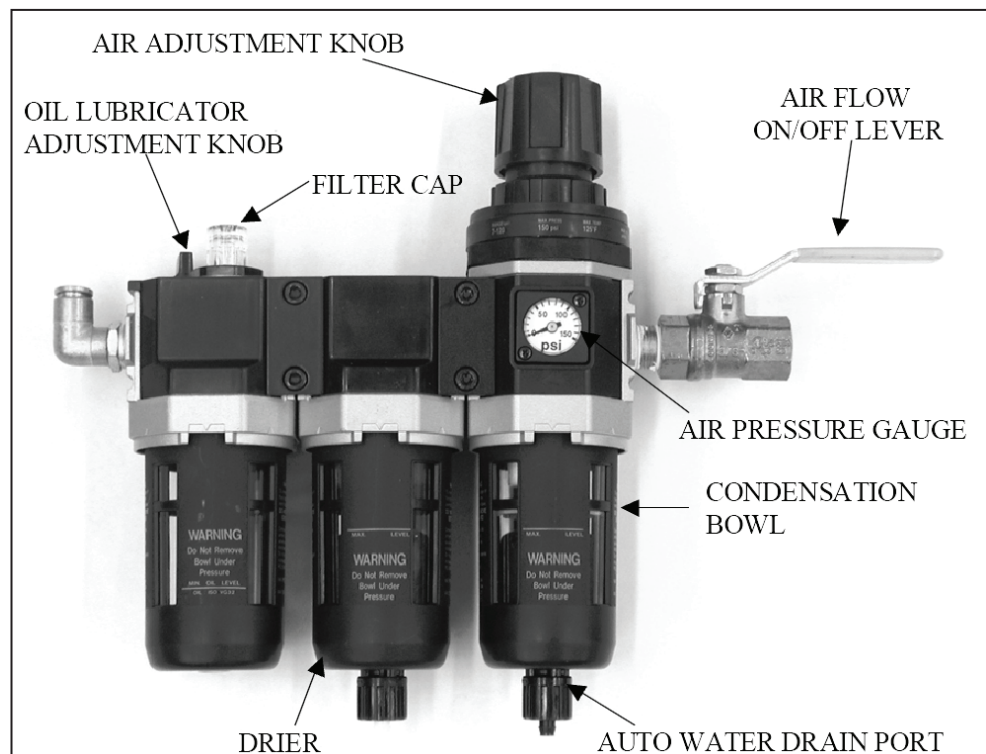

1. Adjust flow to one drop per 60 - 90 seconds
2. Fill half way with grade 46 hydraulic oil supplied

SECTION III

OPERATION

3-1 General

All TORC, LLC. Torque Machines are supplied completely assembled, ready for use. A TORC, LLC. Hydraulic Power Pack, for use with your TORC, LLC. machine, is recommended to provide the speed, pressure and portability that makes your TORC, LLC. System efficient and accurate.

The System accuracy of your TORC, LLC. tool is +/- 3% based upon manufacturer's specifications. This accuracy may be certified through calibration by TORC, LLC. or any other qualified calibration facility whose program is traceable to the National Institute of Standards and Technology (N.I.S.T.).


Using a calibrated gauge enhances the accuracy of your TORC, LLC. System.

3-2 Connecting the System

The wrench head and power pack are connected by a 10,000 PSI operating pressure, (40,000 PSI burst) twinline hose assembly. Each end of the hose will have one male and one female connector to assure proper interconnection between pump and wrenchheads.

IMPORTANT: To avoid tool malfunction. do not reverse connectors.



Connect the twinline hose to the uniswivel as shown below:

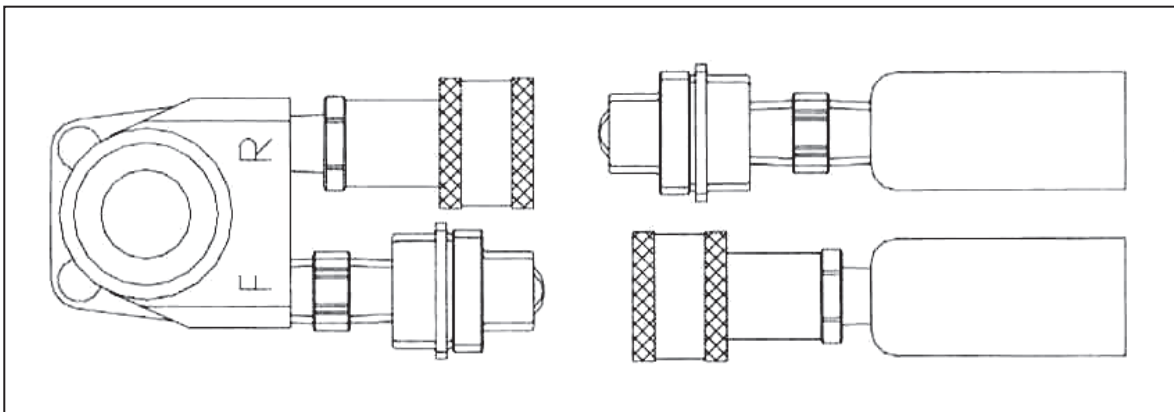

Ensure the connectors are fully engaged and screwed snugly and completely together.

3-3 **Drive Direction Change**

To change drive direction, simply push the square drive from one side to the other.

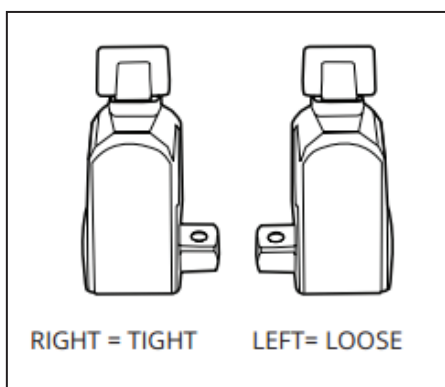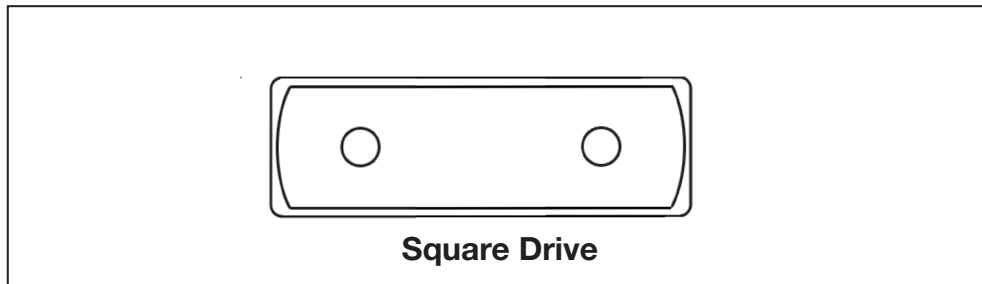

**RIGHT IS TIGHT.
LEFT IS LOOSE.**

The above diagram illustrates the direction the square drive should face for loosening and tightening of a standard right hand fastener.

3-4 **Reaction Arm**


All TORC, LLC. Torque machines are equipped with a universal reaction arm. These reaction arms are employed to absorb and counteract forces created as the unit operates. The reaction arm should extend in the same direction of the square drive; however, slight adjustments may be made to suit your particular application.

The TTX Reaction Arm is made of TITAL 399 and is 360 degree adjustable.

NOTE: The standard TTX reaction arm cannot be welded on and should not be modified.

The reaction arm for all TTX Series tools are splined to slide over the rear (cylinder) portion of the tool.

In operation, the reaction arm must be fully engaged and secured by inserting the spring loaded reaction arm clamp at the base of the housing into the groove of the reaction arm.

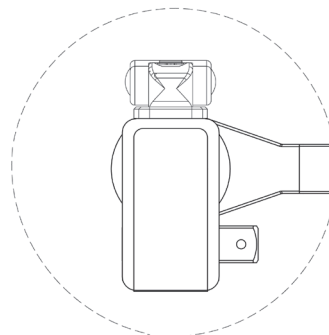

3-5 Setting Torque

Once the system is fully connected and the proper power supply available, it is time to adjust the pump pressure to the level needed on your job.

When tightening, use the manufacturer's specifications to determine the torque value which you will ultimately require.

Torc.com/en/support/torque-conversion-charts - gives typical torque values specified for the most commonly encountered fasteners.

Torque sequence may vary from plant to plant and even within individual plants, depending upon the gasket material, etc. Always abide by local procedures.

Next, find the pressure-torque conversion table applicable to the tool which you intend to use. A complete copy of that chart appears in torc.com/en/support/torque-conversion-charts.

An EXAMPLE of finding the desired torque required is as follows:

Assume you are going to use a TORC TTX-3 tool to torque a 1-1/4" bolt to 1,265 ft lbs.

Start by going to the chart on the following pages and read left-to-right across the top line to the column TTX.

Read straight down to the number closest to 1,265 ft lbs, which in this case is 1,280 - about 1.1% over the targeted torque value.

Now, using 1,280, read back to the left on that same line and read the pump pressure, under the PSI column, 4,000 PSI.

To be technically correct, you should diminish that 4,000 PSI by 1.5% (to 3940), but 1,280 is well within the tool's +/- 3% accuracy range, so proceed to set 4,000 PSI on your pump's regulator valve.

**Log on to torc.com to view proper torque values for the most commonly encountered fasteners*

3-6


Setting the Pressure on the Pump

To set the pressure on the pump, follow this procedure:

1. Loosen the knurled locking ring below the “T” handle on the pump’s external pressure regulator. Then turn the “T” handle (shown in figure 6) counterclockwise (CCW) until it turns freely and easily.
2. Turn the pump “on”. Using the pump’s remote control pendant, push down the advance switch (or button on air pumps) and hold it.
3. While holding the pump in the advance mode, slowly turn the “T” handle clockwise and observe the pump pressure gauge rise.

NOTE: Always adjust the regulator pressure up - never down.

4. When your gauge reaches 4,000 PSI, stop turning the “T” handle and let the gauge settle out.
5. If the pressure continues to rise (above 4,000), release the advance button and back off your pressure slightly - by turning CCW on the “T” handle. Then re-depress the advance switch on your remote and slowly bring pressure up to 4,000 again.
6. When the pressure is correct, turn the pump “off” and tighten the knurled lock nut provided under the “T” handle. This sets pump pressure, which determines torque tool output.
7. Once your target pressure is set and locked, cycle the pump once more to ensure that your pressure setting did not change as you turned down the knurled knob.

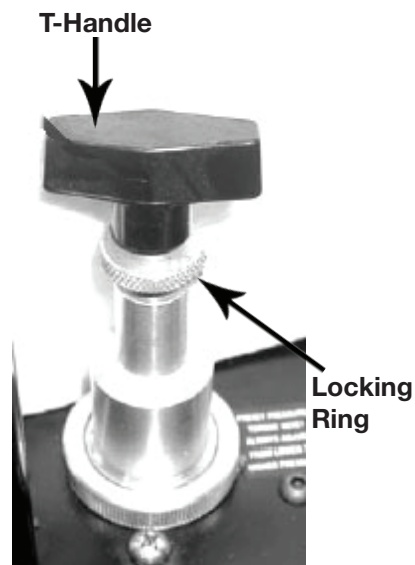

3-7

Applying the Torque Machine - the Tightening Process

1. Having set your target pressure, cycle the tool three or four times to full pressure prior to putting it on the application. Cycling the tool ensures that the system is operating properly and removes trapped air, if any.
2. Place the proper size impact socket on the square drive and secure properly with a locking ring and pin.
3. Place the tool and the socket on the nut, making sure that the socket has fully engaged the nut. Further ensure that the drive retainer is engaged.
4. Make sure the reaction arm is firmly abutted against a stationary object (i.e. an adjacent nut, flange, equipment housing etc.)
5. When positioning the wrench, make sure that the hose connections are well clear of any obstructions, and that all body parts are safely out of harm’s way.
6. THEN, AND ONLY THEN, apply momentary pressure to the system to ensure proper tool placement. If it doesn’t look or act right, stop and re-adjust the reaction arm.

3-8

Operating the Torque Machine

1. By pushing down on the remote control button in the advance position, the rear of the tool will be pushed back until its reaction arm will contact its reaction point.
2. Continue to hold down the button as the socket turns until you hear an audible “click” which will signify the hydraulic cylinder inside the tool is fully extended and will not turn the socket further.
3. Continuing to hold down the remote control button will result in a rapid buildup of pressure to the point of where the gauge reads what was preset prior to applying the wrench.

IMPORTANT: The reading of full preset pressure after the cylinder is extended DOES NOT INDICATE that this pressure (torque) is applied to the bolt. It only indicates that the cylinder is fully extended and cannot turn the socket further until the tool automatically resets itself.

Releasing the remote control button will retract the cylinder. The tool will automatically reset itself and the operator will hear an audible “click” indicating he can again push the remote control button and the socket will turn. Each time the cylinder is extended and retracted, it is called a cycle. Successive cycles are made until the tool “stalls” at the pre-set Torque/PSI with an accuracy of + 1- 3%. Repeatability is + 1- 1 %.

IMPORTANT: ALWAYS ATTEMPT ONE FINAL CYCLE TO INSURE THE “STALL” POINT HAS BEEN REACHED.

3-9

Loosening Procedures

First, set the pump to 10,000 PSI. Change the drive and the reaction arm to the loosening mode, assuring the reaction arm abuts squarely off a solid reaction point. Press and hold the remote control button down. Pressure will decrease as the socket begins to turn. As the cylinder extends fully, you will hear an audible “click”. Release the remote control button, and the cylinder automatically retracts, at which time you again hear the audible “click”. Repeat this process until the fastener can be removed by hand.

NOTE: IF THE BOLT DOES NOT LOOSEN WITH THE ABOVE PROCEDURE. IT IS AN INDICATION THAT YOU REQUIRE THE NEXT LARGER SIZE TOOL TO LOOSEN THE BOLT.

SECTION IV

TORC POWER PACKS

4-1

General Information

All TORC, LLC. Power Packs operate at a pressure range from 500 to 10,000 PSI and are fully adjustable. They have been engineered and designed for portability and high flow for increased speed. Before using your TORC, LLC. power pack, check the following points:

- Is the reservoir filled with oil?
- Where is the closest electrical outlet at the job site?
- Is there enough air pressure (100 PSI) and flow at the job site? (Air units only)
- Is the gauge mounted and rated for 10,000 PSI?
- Is the oil filler plug securely in place?

4-2

Working Pressure

The Pump's maximum working pressure is 10,000 PSI(700 bar). Make sure all hydraulic equipment and accessories are rated for 10,000 PSI operating pressure.

4-3

Hydraulic Connections

Never disconnect or connect hydraulic hoses or fittings without first unloading the wrench. Unplug the electrical cord of the pump, and open all hydraulic controls several times to assure that the system has been depressurized. If the system includes a gauge, double check the gauge to assure pressure has been released.

When making a connection with quick disconnect couplings, make sure the couplings are fully engaged. Threaded connections such as fittings, gauges etc. must be clean and securely tightened and leak free.

CAUTION: Loose or improperly threaded couplers can be potentially dangerous if pressurized. However, severe over tightening can cause premature thread failure. Fittings need to be only tightened secure and leak free. Never grab, touch, or in any way come in contact with a hydraulic pressure leak. Escaping oil could penetrate the skin and cause injury.

Do not subject the hose to potential hazards such as sharp surfaces, extreme heat or heavy objects. Do not allow the hose to kink and twist. Inspect the hose for wear before it is used.

4-4

Electrical Power

1. CHECK FOR PROPER ELECTRICAL SUPPLY BEFORE CONNECTING.

2. THIS MOTOR MAY SPARK. DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE OR IN PRESENCE OF CONDUCTIVE LIQUIDS.
 - a. Do not use a power or extension cord that is damaged or has exposed wiring.
 - b. All single phase motors come equipped with a three prong grounding type plug to fit the proper grounded type electrical outlet. Do not use a two prong ungrounded extension cord as the pump's motor must be grounded.

3. COMPARE MOTOR NAMEPLATE AGAINST POWER AVAILABILITY TO PREVENT MOTOR BURN OUT OR DANGEROUS ELECTRICAL OVERLOADING.

4-5

Prior to Use

Check hydraulic oil level to prevent possible pump burnout. Open the filler plug located on the reservoir plate. Look at oil fill level on the oil sight gauge. The oil level should be approximately 2" from the top of the reservoir plate with motor off. Add TORC, LLC. oil as necessary. Do not mix different grades of oil.

Make sure all desired gauge, valve, hose and quick coupler connections are tight and secure before operating.

The use of a pressure gauge is required for normal pump operation. Mounted on the manifold, the gauge permits the operator to monitor the load on the wrench. 1/4" calibrated gauges are available for most applications.

4-6

Operation

Before starting your electric pump, connect your hydraulic hoses to both the pump and torque wrench.

Place the toggle switch in the ON position and the rocker switch on the hand control pendant in the OFF position. To start the pump, depress and release the yellow safety button.

NOTE: The safety button is an added feature designed to prevent premature starting and should only be depressed by the tool operator.

Push the rocker switch to advance and release. This will start your pump and place it in the retract position.

NOTE: Read the section labeled TORC, LLC. OPERATIONS and SETTING TORQUE prior to installing the torque wrench onto the application.

Your TORC hydraulic pump has been designed with an auto shut off system. The pump will shut off after approximately 30 seconds of non-cycling. This will prevent overheating and unnecessary wear which will prolong the life of your pump. To restart the pump, the yellow safety button must again be depressed prior to use.

SECTION V

PREVENTIVE MAINTENANCE

5-1

Preventive Maintenance - Torque Machines

Tool failure, although rare, does occur. Such failure is most often in the hydraulic couplers or hoses. These items are repairable or replaceable immediately, since they are available universally. Failure of structural members of the tool are quite rare, but replacement parts are available from stock. All repairs to TORC, LLC. tools may be made by reasonably experienced individuals according to the aforementioned instructions.

- **Lubrication**

All moving parts should periodically be coated with a good quality NLGI #2 molybdenum disulfide grease. Under harsh environmental conditions, cleaning and lubricating should be performed more frequently.

- **Hydraulic Hoses**

Hoses should be checked for cracks and leaks after each job. Hydraulic fittings can become plugged with dirt and should be flushed periodically.

- **Quick-Connects**

Fittings should be kept clean and not allowed to be dragged along the ground or floor, as even small particles of dirt can cause the internal valves to malfunction.

- **Springs**

Springs are used for the drive assembly and for accuracy assurance. These springs can be replaced if necessary.

- **Cylinder Seals**

If the cylinder requires disassembly, it is recommended that the cylinder seals be replaced at the same time. Seal kits are readily available.

- **Structural Members**

All structural parts on the tool should be inspected once a year to determine if there are any cracks, chips or deformities. If so, immediate replacement is required.

5-2 Preventive Maintenance - Hydraulic Power Packs

TORC, LLC. Hydraulic Power Packs are precision-built units and, as such, do require a certain amount of care and maintenance.

- **Hydraulic Oil**

Oil should be completely changed after every 40 hours of operation, or at least twice a year. Always make sure the reservoir is filled with fluid. If additional oil is required, use only high-grade hydraulic oil.

- **Quick-Disconnects**

Fittings should be checked periodically for leaks. Dirt or foreign materials should be kept away from fittings. Clean before use.

- **Hydraulic Gauge**

Some gauges are liquid filled. Should this liquid level drop, it indicates external leakage, and replacement is necessary. Should the gauge fill with hydraulic oil, it indicates internal failure and it should be discarded.

- **Filter on Pump**

The filter should be replaced twice a year in normal use and more often if the pump is used daily or in a dirty, harsh environment.

- **Remote Control**

(Air Unit) The air line to the remote control unit should be checked for obstructions or kinks in the line periodically. If there is a bend or break in the line, it must be replaced. The spring-loaded buttons on the remote handle should be checked in the event of operating difficulties. (Electric Unit) The rocker switch should be checked periodically if any indication of problems exist.

- **Air Valve**

This valve should be checked twice a year.

- **Brushes and Brush Holders**

(Electric Unit) Check and replace, if worn.

- **Armature**

(Electric Unit) Check yearly.

SECTION VI **TROUBLESHOOTING**

SYMPTOM	PROBABLE CAUSE	REQUIRED ACTION
Gauge shows pressure build-up but the tool will not cycle	<ol style="list-style-type: none"> 1. Couplings loose or inoperative 2. Solenoid inoperative 	<ol style="list-style-type: none"> 1. Tighten and/or replace couplings. Use Test #1 listed below to isolate problem. 2. Check using test #2 below. If solenoid is bad, replace.
Cylinder will not retract.	<ol style="list-style-type: none"> 1. See above 2. Voltage to electric pump is too low to line drop or inadequate amperage is available. 3. Linkage between piston rod and drive arms are broken. 	<ol style="list-style-type: none"> 1. See Above 2. Get shorter extension cord or upgrade to 12AWG, 25 amp rating or better. If shop power is adequate, draw power from welding machine or cal rod transformer. 3. Replace parts as necessary.
Cylinder pressure will not build.	<ol style="list-style-type: none"> 1. Oil blow by in tool (Piston seal leak, blown O-ring, cracked piston) 2. Pump Problem 	<ol style="list-style-type: none"> 1. Replace defective parts. SHOP JOB 2. Check to see if sub-plate is worn by; a) Remove screws from pump motor to reservoir, slide Pump motor to the side, tum pump on and while holding down on the button, put your finger on the dump tube (round tube under the directional control valve) - if you feel pressure, then replace the sub-plate and shear seals. <ul style="list-style-type: none"> 2A. Check to see if you have leaks from the external relief valve and the 2 oil line connections (bottom of relief valve and connection into pump body's other end, of oil line. If leaking, retighten with 9/16" open end wrench. SHOP JOB 2B. If pump sounds like alot of pebbles in a tin can, the problem may be a worn motor coupling - remove motor from base plate - using a pair of needle nose pliers remove the motor coupling - if worn replace. SHOP JOB 2C. AIR PUMPS - Faulty Air Valve due to excessive moisture and/or dirt in air supply. Disassemble air valve and wipe any residue from air valve piston-spray brake cleaner into air valve body, dry thoroughly. Disassemble all small air lines and blow Out with compressed air. Lubricate both air valve piston and body with hydraulic oil (sparingly) andreassemble. SHOP JOB 2D. Air pumps - Faulty remote control valve cartridge. Replace.

SYMPTOM	PROBABLE CAUSE	REQUIRED ACTION
Cylinder/Tool leaks	1. Safety relief valve on swivel has lifted. 2. Blown O-ring in cylinder 3. Defective gland seal.	1A. Tighten all hose and couplers. If leak continues, adjust safety setting - Test #4 1B. Check to see if the system is properly plumbed by running test #5 (high pressure on retract side will lift the safety relief valve) 2. Replace O-Ring with proper high pressure O-Ring. SHOP JOB 3. Replace gland seal. SHOP JOB
Tool operates backwards	1. Couplings reversed 2. Multiple hoses in even numbers	1. Run test #5. Replumb system as necessary. 2. As plumbed, TORC, LLC. hoses may only be joined together in odd numbers ONLY. If it is necessary to use 2,4,6 hoses - make an adapter from spare high pressure couplings and nipples.
Ratchet returns with retract stroke	1. Broken or otherwise inoperable drive segment.	1. Replace drive segment and/or spring. SHOP JOB.
Ratchet will not take successive strokes	1. Broken or otherwise inoperative drive segment I or spring 2. Cylinder not retracting completely 3. Linkage between piston rod and drive plates is broken	1. Replace drive segment and/or spring. SHOP JOB 2. Remove tool from nut and cycle freely for several strokes. If problem persists, check pawls. 2A. Operator not allowing adequate time for cylinder to retract fully. 3. Replace parts as necessary - SHOP JOB.
Tool locks onto nut	1. Drive segment is loaded when the tool is max' d out in torque 2. Tool is operating backwards 3. Tool is wedged under a fixed object	1. Press advance button on remote and build pressure - continue to press down on remote while pulling back on one of the accuracy assurance levers - release remote while continuing to hold back on levers 2. Push advance button down - tool should immediately fall free- Run test #5 3. Remove shroud from around ratchet. Using any tool available, pry the drive segment out of the ratchet and at the same time pull back on the accuracy assurance levers. Tool should swing free or burn away the socket or obstruction.

SYMPTOM	PROBABLE CAUSE	REQUIRED ACTION
Gauge records no pressure	<ol style="list-style-type: none"> 1. Gauge connection is loose 2. Bad gauge 3. Pump will not build pressure 4. Tool seals are blown 	<ol style="list-style-type: none"> 1. Tighten coupling. 2. Replace gauge 3. See cylinder pressure will not build pressure-above 4. Replace defective seals. SHOP JOB
Pump will not build pressure	<ol style="list-style-type: none"> 1. Air or electric supply is low 2. Defective relief or regulator valve 3. Low oil or clogged filter 4. Internal leak in oil line from external relief valve to pump body. 5. Worn sub-plate 	<ol style="list-style-type: none"> 1. Check air pressure or voltage. 2. Replace valve. SHOP JOB 3. Fill reservoir and clean filter. 4. Open reservoir, inspect oil line while trying to build pressure - if leaking tighten fittings or replace. 5. See cylinder pressure will not build pressure-above
Motor sluggish and inefficient "sounds sick" slow to build pressure	<ol style="list-style-type: none"> 1. Air or electric supply is low 2. Clogged filter 	<ol style="list-style-type: none"> 1. See #1 in preceding block 2. Clean or replace filter
Pump heats up	<ol style="list-style-type: none"> 1. Improper use 2. Remote control is left in "on" position when pump is not actively in use. 	<ol style="list-style-type: none"> 1. Operator is continuing to hold down Pump heats up on the advance stroke after the cylinder has reached end of stroke - this causes a lot of oil to go through a very small hole in relief-valve - causing heat build-up. Have operator release advance stroke after accuracy assurance levers spring forward. 2. Turn pump off whenever not actually being used. DO NOT leave pump running when tool is not in use.
Hose or tool fitting is damaged or leaks	<ol style="list-style-type: none"> 1. Broken or melted plastic outer covering 2. Frayed Kevlar or steel strands 3. Oil leaks through fibers 4. Broken fittings 	<ol style="list-style-type: none"> 1. If underlying Kevlar or steel is still intact continue operation. Inspect frequently. 2. Cut hose in half and discard. Replace Hose. 3. Cut hose in half and discard. Replace hose. 4. Remove old fitting and replace with STEEL high pressure fittings only. After changing fittings, always run test #5 to insure proper plumbing.
Electric pump will not run	<ol style="list-style-type: none"> 1. Loose electric connections in control box. 2. Bad brushes 3. Motor burned up 	<ol style="list-style-type: none"> 1. Open control box and visually inspect for loose threaded or push-on connectors. Reconnect loose wires. If in doubt check wiring diagram. DANGER- BOX CONTAINS HIGH VOLTAGE- ALWAYS UNPLUG PRIOR TO TOUCHING ANYTHING IN CONTROL BOX. 2. Change brushes. SHOP JOB 3. Replace motor or components whichever is necessary. SHOP JOB .

TEST #1

Attach hoses to pump and tool in the normal manner. Press the advance button and hold it down. If the pump pressure builds and the hoses “flex” but the tool still refuses to cycle, the problem is most likely a loose or defective coupling connection. To find out where the bad coupling is, remove the tool from the hoses and marry the loose ends together and cycle the pump. If the gauge pressure reads no more than 500 PSI, then the bad fitting is on the tool. A significantly greater pressure indicates that the problem is in either the pump or a hose fitting.

TEST #2

Place a welding rod or thin screwdriver in the opening of either side of the solenoid. Press and then release the advance button. Repeat this process on the opposite side of the solenoid. You should feel the solenoids moving back and forth. If either side is “dead” the solenoid is bad and needs to be replaced. Note: if in an urgent situation, the tool may be cycled manually by pushing the solenoids back and forth through these access holes.

TEST #3

Remove tool from hoses. Cycle pump. If pump fails to build pressure, the problem is with the pump. If it does build pressure, the problem is with hydraulic blow-by in the tool.

TEST #4

Connect tool, pump and hoses together normally and turn pump “on”. As oil leaks from the small port under the uni-swivel, use a proper size Allen wrench and slowly tighten (clockwise) the set screw positioned between the couplings on the uni-swivel. Continue to tighten until the flow stops plus a quarter turn.

TEST #5

THIS TEST SHOULD BE RUN PRIOR TO EVERY USE OF A TORC, LLC. TOOL

Connect the tool, pump and hoses together as normal. Cycle the pump several times. Cycle the system once more and observe the sequence of operation. As you depress the advance button, the tool drive should turn about 24 degrees and you should hear an audible “click”. On square drive tools, you will also notice that the accuracy assurance levers will move to the rear of the tool and spring forward. At this point, release the advance button. You should see no further movement and after a moment you will hear another audible “click”. This is how the tools are designed to operate. If you observe any other sequence of operation, the system is out of order and cannot deliver more than 10% of its designed capacity, Take immediate corrective action. For reference, tools and pumps are designed from the factory plumbed as follows. This ensures that the tool, pump and ONE hose cannot possibly be connected up incorrectly.

Tool	Advance Side - Male Retract Side - Female
Hose	Advance Side - Female to Female Retract Side - Male to Male
Pump	Advance Side - Male Retract Side - Female

Note that connecting two (or any EVEN number) of hoses together creates “one” hose which is plumbed backwards! Male to Female and Female to Male. This will cause the system to operate backwards per Test #5 above. If your hose isn’t long enough. connect 3 hoses together. move your pump or call TORC, LLC. for a longer hose assembly.


SECTION VII

DISASSEMBLY

1. Make sure the tool is fully retracted.
2. Remove the reaction arm.
3. Remove shroud by removing the 4 button head screws at the base and top of the tool housing.
4. To remove the square drive, remove the retaining rings on the outside TTX of the drive sleeve and slide the drive sleeves out with the square drive.
5. Line up the rod pin with the access hole in the housing, and punch rod pin through the housing.
6. The drive assembly can be removed complete from the housing.
7. Remove the end cap by using the tool end cap remover.
8. Remove the piston rod assembly from the cylinder with the aid of a punch, to pull it out.
9. To change the seals, refer to the diagram below.


Note: For assembly, follow the instructions in reverse. Be sure to properly lubricate all components prior to use.

APPENDIX A
TTX TOOL SCHEMATIC

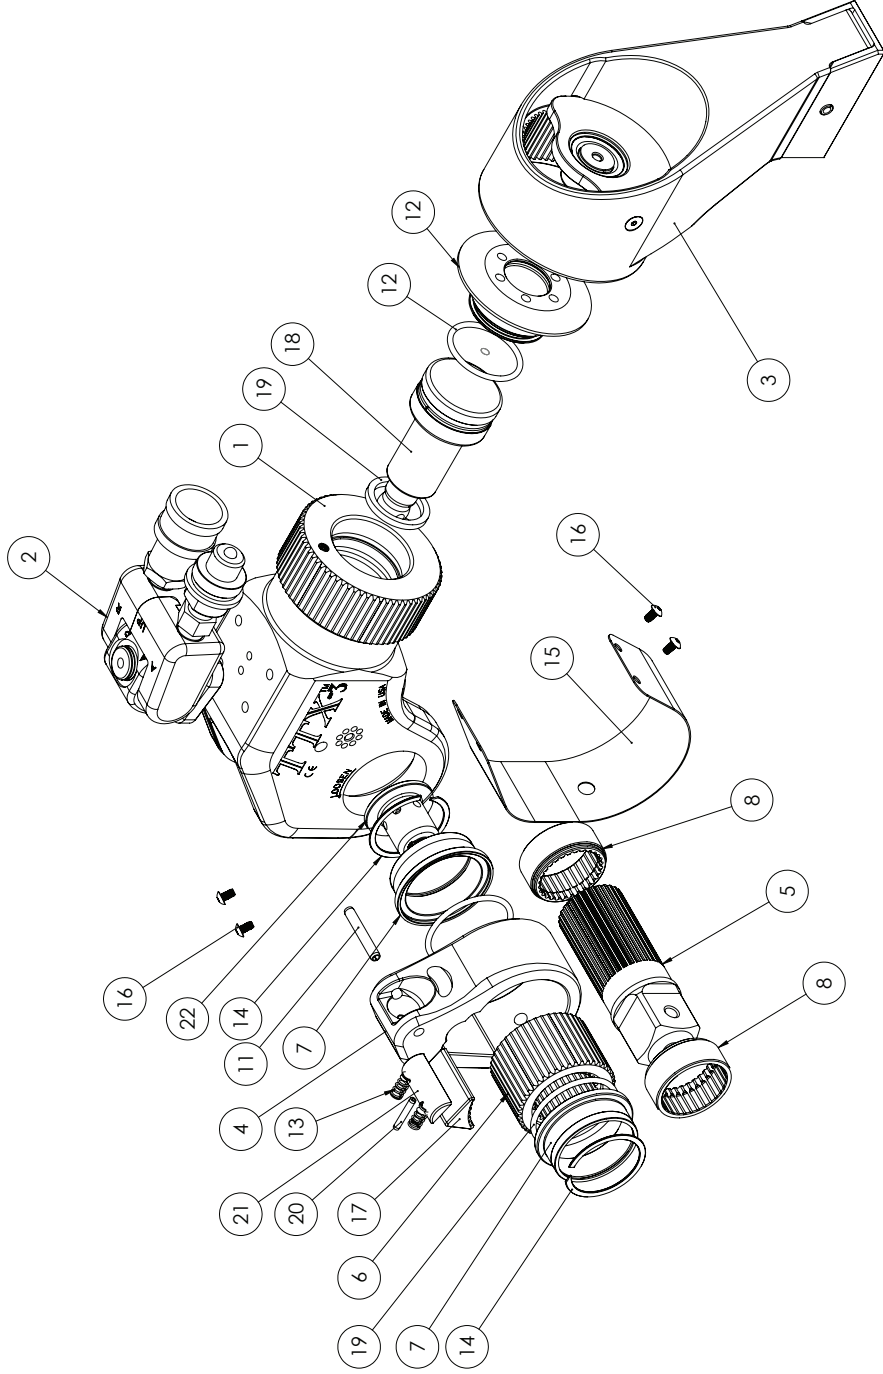


APPENDIX A TTX TOOL SCHEMATIC

Reaction Arm Assembly

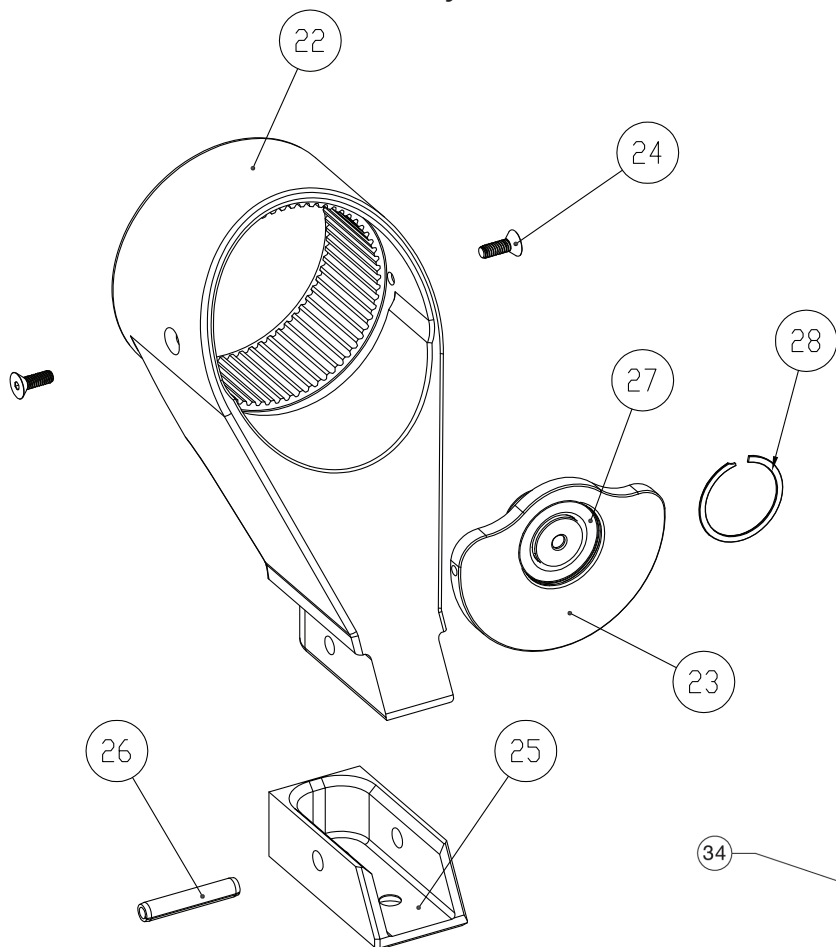

Uniswivel Assembly

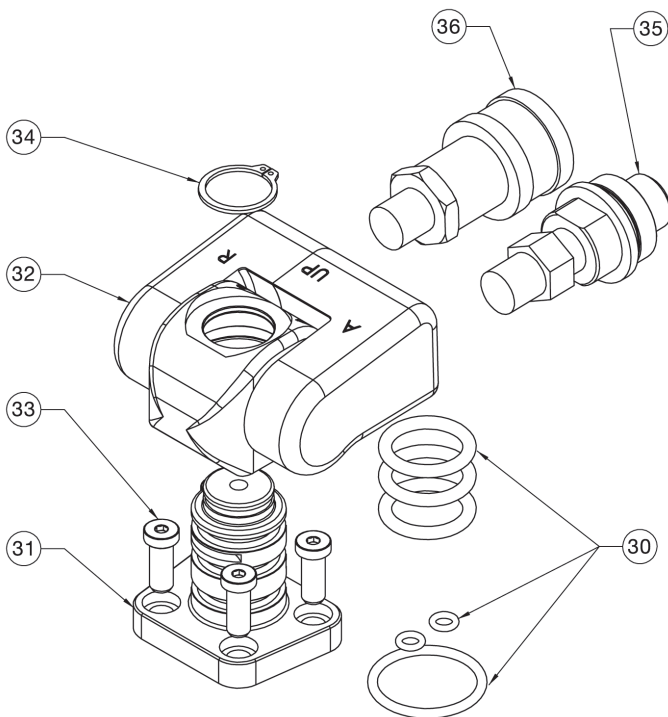

APPENDIX A

TTX TOOL PARTS LIST

ITEM	DESCRIPTION	TTX-1	TTX-3	TTX-5	TTX-7	TTX-11	TTX-21	TTX-30
1	HOUSING COMPLETE	TTX-01-01	TTX-03-01	TTX-05-01	TTX-07-01	TTX-11-01	TTX-21-01	TTX-30-01
2	UNISWIVEL ASSEMBLY	TTX-02B	TTX-02B	TTX-02B	TTX-02B	TTX-02B	TTX-02B	TTX-02B
3	REACTION ARM ASSEMBLY	TTX-01-03	TTX-03-03	TTX-05-03	TTX-07-03	TTX-11-03	TTX-21-03	TTX-30-03
4	DRIVE PLATE	TTX-01-04	TTX-03-04	TTX-05-04	TTX-07-04	TTX-11-04	TTX-21-04	TTX-30-04
5	SQUARE DRIVE	TTX-01-05S	TTX-03-05S	TTX-05-05S	TTX-07-05S	TTX-11-05S	TTX-21-05S	TTX-30-05S
6	DRIVE RATCHET	TTX-01-06S	TTX-03-06S	TTX-05-06S	TTX-07-06S	TTX-11-06S	TTX-21-06S	TTX-30-06S
7	DRIVE BUSHING (x2)	TTX-01-07	TTX-03-07	TTX-05-07	TTX-07-07	TTX-11-07	TTX-21-07	TTX-30-07
8	DRIVE SLEEVE (x2)	TTX-01-08S	TTX-03-08S	TTX-05-08S	TTX-07-08S	TTX-11-08S	TTX-21-08S	TTX-30-08S
9	SET SCREW FOR RATCHET	TTX-01-09	TTX-03-09	N/A	TTX-07-09	TTX-11-09	N/A	N/A
10	PLUNGER FOR RATCHET	TTX01-10	TTX-03-10	TTX-05-10	TTX-07-10	TTX-11-10	N/A	N/A
11	DRIVE PLATE ROLL PIN	TTX-01-19	TTX-03-19	TTX-05-19	TTX-07-19	TTX-11-19	TTX-21-19	TTX-30-19
12	END CAP SLEEVE W/SEAL	TTX-01-26	TTX-03-26	TTX-05-26	TTX-07-26	TTX-11-26	TTX-21-26	TTX-30-26
13	DRIVE SEGMENT SPRING (x2)	TTX-01-27	TTX-03-27	TTX-05-27	TTX-07-27	TTX-11-27	TTX-21-27	TTX-30-27
14	DRIVE SLEEVE RETAINING RING (x2)	TTX-01-30	TTX-03-30	TTX-05-30	TTX-07-30	TTX-11-30	TTX-21-30	TTX-30-30
15	SAFETY SHROUD	TTX-01-31	TTX-03-31	TTX-05-31	TTX-07-31	TTX-11-31	TTX-21-31	TTX-30-31
16	SHROUD SCREW (X4)	TTX-01-32	TTX-03-32	TTX-05-32	TTX-07-32	TTX-11-32	TTX-21-32	TTX-30-32
17	DRIVE SEGMENT	TTX-01-60	TTX-03-60	TTX-05-60	TTX-07-60	TTX-11-60	TTX-21-60	TTX-30-60
18	PISTON ROD ASSEMBLY	TTX-01-61	TTX-03-61	TTX-05-61	TTX-07-61	TTX-11-61	TTX-21-61	TTX-30-61
19	SEAL KIT	TTX-01-62	TTX-03-62	TTX-05-62	TTX-07-62	TTX-11-62	TTX-21-62	TTX-30-62
20	SEGMENT GUIDE-ROLL PIN	TTX-01-65	TTX-03-65	TTX-05-65	TTX-07-65	TTX-11-65	TTX-21-65	TTX-30-65
21	SEGMENT SLIDER	TTX-01-66-CY	TTX-03-66-CY	TTX-05-66-CY	TTX-07-66-CY	TTX-11-66-CY	TTX-21-66-CY	TTX-30-66-CY
22	DRIVE RETAINER	TTX-01-11	TTX-03-11	TTX-05-11	TTX-XX-11	TTX-XX-11	TTX-21-11	TTX-30-11

Breakdown of Reaction Arm Assembly

ITEM	DESCRIPTION	TTX-1	TTX-3	TTX-5	TTX-7	TTX-11	TTX-21	TTX-30
22	REACTION ARM	TTX-01-43	TTX-05-43	TTX-05-43	TTX-07-43	TTX-11-43	TTX-21-43	TTX-21-43
23	REACTION ARM THRUST PLATE	TTX-01-44 (x1)	TTX-03-44 (x1)	TTX-5-44 (x1)	TTX-07-44 (x2)	TTX-11-44 (x2)	TTX-21-44 (x2)	TTX-21-44 (x2)
24	THRUST PLATE SCREWS (x2)	TTX-01-509	TTX-03-509	TTX-05-509	TTX-07-509	TTX-11-509	TTX-21-509	TTX-21-509
25	REACTION ARM BOOT	TTX-01-328	TTX-03-328	TTX-05-328	TTX-07-328	TTX-11-328	TTX-21-328	TTX-21-328
26	REACTION ARM BOOT PIN	TTX-01-367	TTX-03-367	TTX-05-367	TTX-07-367	TTX-11-367	TTX-21-367	TTX-21-367
27	REACTION ARM RETAINER ASSEMBLY	TTX-01-503	TTX-03-503	TTX-05-503	TTX-07-503	TTX-11-503	TTX-21-503	TTX-21-503
28	REACTION ARM RETAINER RETAINING RING	TTX-01-508	TTX-03-508	TTX-05-508	TTX-07-508	TTX-11-508	TTX-21-508	TTX-21-508


Breakdown of Uniswivel Assembly

ITEM	DESCRIPTION	TTX-1	TTX-3	TTX-5	TTX-7	TTX-11	TTX-21	TTX-30
30	UNISWIVEL SEAL KIT	TTX-01-02-SK	TTX-03-02-SK	TTX-05-02-SK	TTX-11-02-SK	TTX-11-02-SK	TTX-11-02-SK	TTX-11-02-SK
31	SWIVEL POST	TTX-01-02-2	TTX-03-02-2	TTX-05-02-2	TTX-11-02-2	TTX-11-02-2	TTX-11-02-2	TTX-11-02-2
32	SWIVEL BLOCK ASSEMBLY	TTX-001	TTX-003	TTX-005	TTX-011	TTX-011	TTX-011	TTX-011
33	SWIVEL BLOCK SCREW (x4)	TTX-01-02-3	TTX-03-02-3	TTX-05-02-3	TTX-11-02-3	TTX-11-02-3	TTX-11-02-3	TTX-11-02-3
34	SWIVEL POST RETAINING CLIP	TTX-01-02-4	TTX-03-02-4	TTX-05-02-4	TTX-11-02-4	TTX-11-02-4	TTX-11-02-4	TTX-11-02-4
35	MALE COUPLER	TCM-1/8	TCM-1/4	TCM-1/4	TCM-1/4	TCM-1/4	TCM-1/4	TCM-1/4
36	FEMALE COUPLER	TTCF-1/8	TTCF-1/4	TTCF-1/4	TTCF-1/4	TTCF-1/4	TTCF-1/4	TTCF-1/4

APPENDIX B

DIMENSIONAL DATA

IMPERIAL

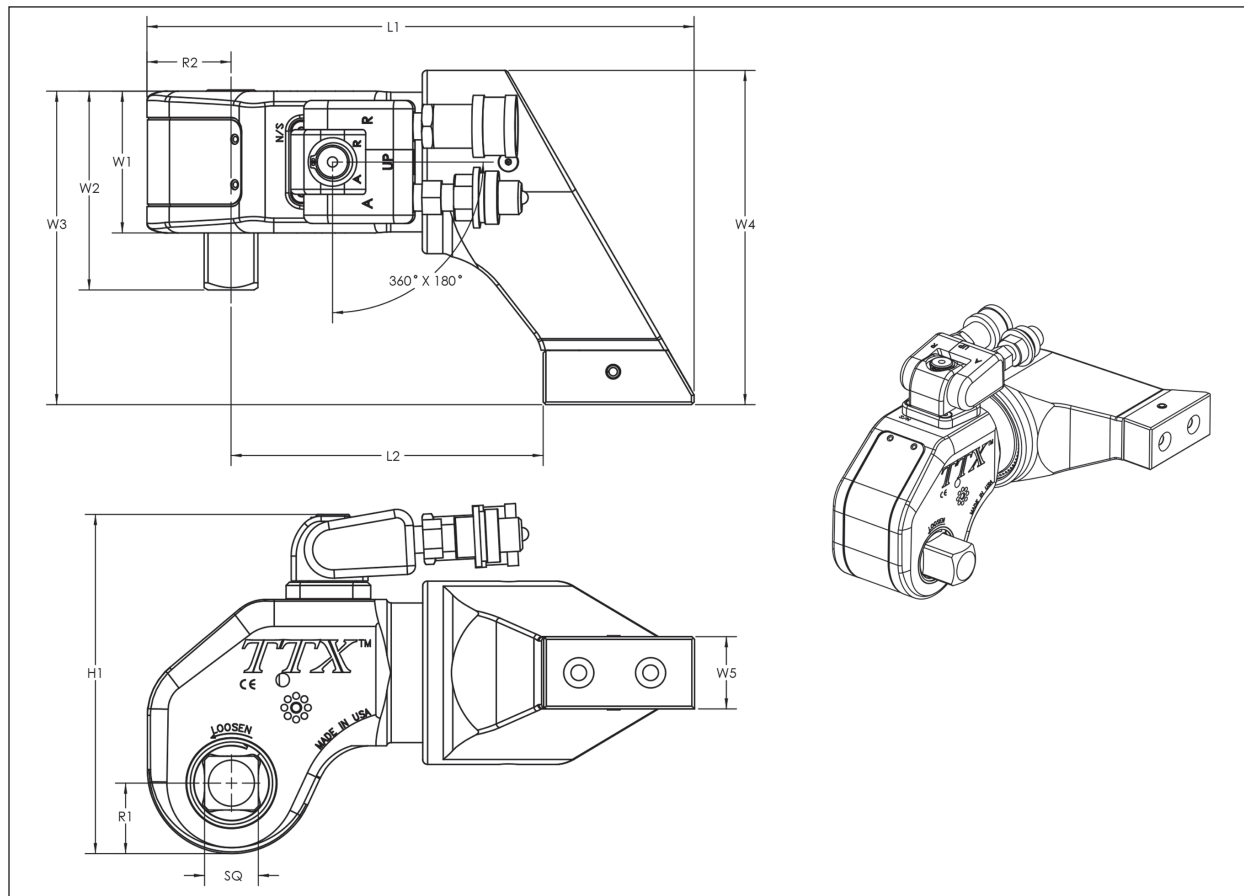


MODEL	R1	R2	L1	L2	H1	W1	W2	W3	W4	W5
TTX-1	.99"	1.17"	7.74"	4.46"	4.92"	1.97"	2.75"	4.36"	4.65"	1.00"
TTX-3	1.31"	1.56"	10.15"	5.79"	6.39"	2.63"	3.69"	5.82"	6.20"	1.34"
TTX-5	1.57"	1.81"	11.88"	6.73"	7.62"	3.16"	4.94"	6.98"	7.47"	1.61"
TTX-7	1.85"	2.12"	13.49"	7.56"	8.51"	3.57"	5.07"	7.86"	8.38"	1.81"
TTX-11	1.97"	2.35"	15.01"	8.51"	9.08"	3.95"	5.50"	8.72"	9.30"	2.00"
TTX-21	2.29"	2.72"	18.31"	10.51"	10.46"	4.73"	7.13"	10.46"	11.10"	2.39"

	TTX-1	TTX-3	TTX-5	TTX-7	TTX-11	TTX-21
Square Drive	¾"	1"	1-½"	1-½"	1-½"	2-½"
Torque Range (ft.lbs.)	168-1,235	446-3,100	893-6,241	1,178-8,437	1,516-10,945	2,716-19,116
Accuracy	± 3%	± 3%	± 3%	± 3%	± 3%	± 3%
Swivel 360° x 180°	STANDARD					
Uni-Body Housing	STANDARD					
Click-On Reaction Arm	STANDARD 60-POINT ADJUSTABLE					

APPENDIX B

DIMENSIONAL DATA
METRIC

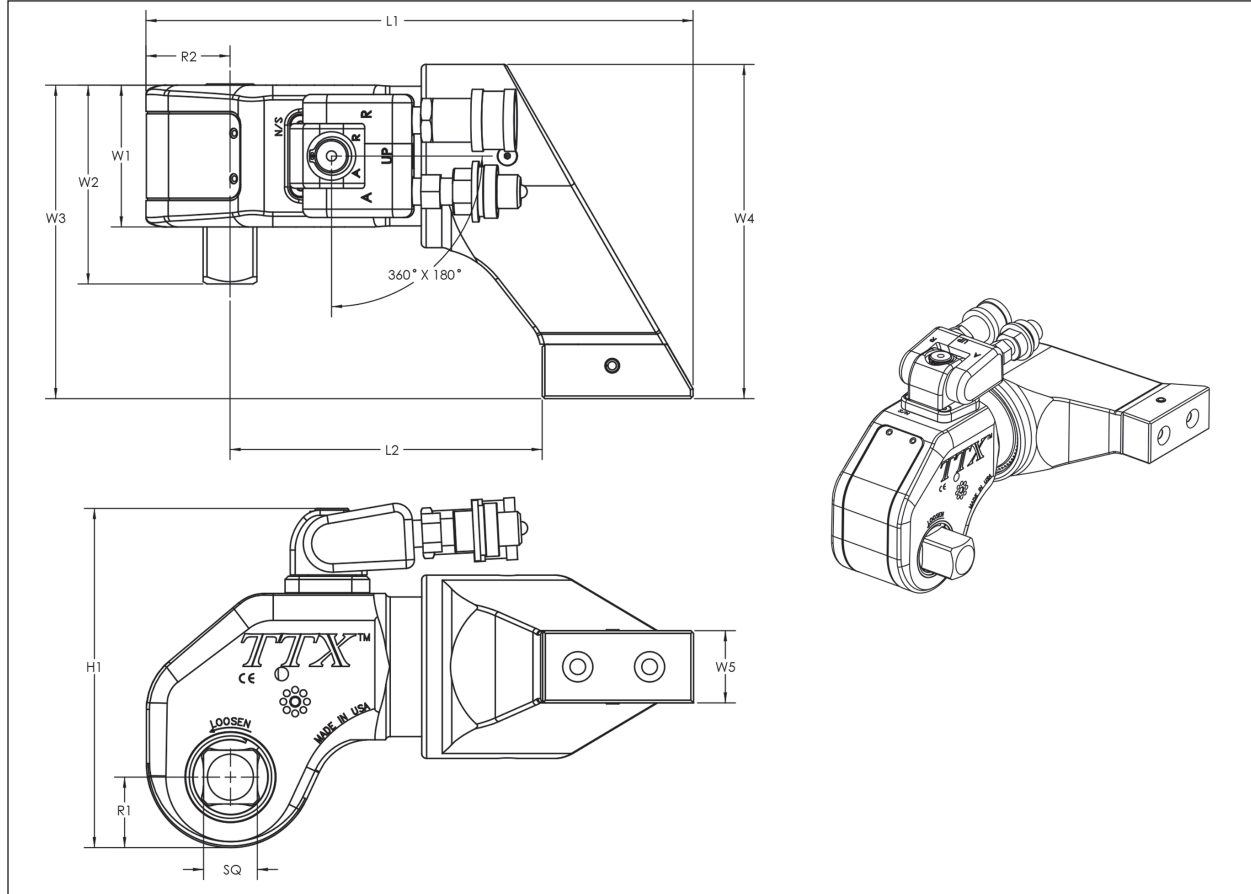

MODEL	R1	R2	L1	L2	H1	W1	W2	W3	W4	W5
TTX-1	25.1mm	29.7mm	196.6mm	13.3mm	124.9mm	50.0mm	69.7mm	110.7mm	118.1mm	25.4mm
TTX-3	33.3mm	39.6mm	257.8mm	5.7.1mm	162.3mm	66.8mm	93.7mm	147.8mm	157.5mm	34.0mm
TTX-5	1.57"	46.1mm	11.88"	70.8mm	193.5mm	3.16mm	125.5mm	177.3 mm	189.6mm	40.8mm
TTX-7	47.0mm	53.8mm	342.6mm	92.0mm	216.2mm	90.7mm	128.9mm	199.6mm	212.9mm	46.0mm
TTX-11	50.0mm	59.7mm	381.3mm	16.5mm	230.6mm	100.3mm	139.7mm	221.5mm	236.2mm	50.8mm
TTX-21	58.2mm	69.1mm	465.1mm	66.9mm	265.7mm	120.1mm	181.1mm	265.7mm	281.9mm	60.8mm

	TTX-1	TTX-3	TTX-5	TTX-7	TTX-11	TTX-21
Square Drive	¾"	1"	1-½"	1-½"	1-½"	2-½"
Max. Torque (Nm)	228-1,674	605-4,203	1,211-8,461	1,597-11,493	2,055-14,839	19,116-25,917
Accuracy	± 3%	± 3%	± 3%	± 3%	± 3%	± 3%
Swivel 360° x 180°	STANDARD					
Uni-Body Housing	STANDARD					
Click-On Reaction Arm	STANDARD 60-POINT ADJUSTABLE					

APPENDIX C

SQUARE/ALLEN DRIVE WORKING TORQUE

DRIVE SIZE: The square or hex drive of each TORC, LLC. is limited in its maximum output by its material and its engagement area. Since your TORC, LLC. uses a specially suited alloy-steel for its drive members, the following maximum torque output can be achieved without drive failure, provided the reaction member abuts close to the same plane as the nut to be turned.

DRIVE SIZE	MAXIMUM WORKING TORQUE	PROBABLE FAILURE
1/2" Allen	350 ft./lbs.	380 ft./lbs.
1/2" Square	385 ft./lbs.	425 ft./lbs.
5/8" Allen	685 ft./lbs.	750 ft./lbs.
3/4" Allen	1,185 ft./lbs.	1,300 ft./lbs.
3/4" Square	1,310 ft./lbs.	1,485 ft./lbs.
7/8" Allen	1,880 ft./lbs.	2,065 ft./lbs.
1" Allen	2,810 ft./lbs.	3,100 ft./lbs.
1" Square	3,100 ft./lbs.	3,400 ft./lbs.
1-1/8" Allen	4,000 ft./lbs.	4,400 ft./lbs.
1-1/4" Allen	5,500 ft./lbs.	6,100 ft./lbs.
1-3/8" Allen	7,300 ft./lbs.	8,000 ft./lbs.
1-1/2" Allen	9,500 ft./lbs.	10,400 ft./lbs.
1-1/2" Square	10,460 ft./lbs.	11,475 ft./lbs.
1-5/8" Allen	12,000 ft./lbs.	13,200 ft./lbs.
1-3/4" Allen	15,000 ft./lbs.	16,500 ft./lbs.
1-7/8" Allen	18,500 ft./lbs.	20,300 ft./lbs.
2" Allen	22,500 ft./lbs.	24,700 ft./lbs.
2-1/4" Allen	32,000 ft./lbs.	35,100 ft./lbs.
2-1/2" Allen	44,000 ft./lbs.	48,200 ft./lbs.
2-1/2" Square	48,440 ft./lbs.	63,625 ft./lbs.

If the reaction arm cannot abut on the same plane as the nut to be turned. less torque should be applied, as the additional side load has to be taken into consideration.

When torque requirements are close or in excess of the values listed above. use TORC, LLC.'s Socket Hex - Drive with replaceable Hex Insert Bits.

FOR MAINTENANCE IN EVERY INDUSTRY

TORC LLC

Characterized by

PERFORMANCE

Durability and Looks!

TORC LLC

218 Island Road,
Mahwah, NJ 07430 USA
Tel: 1-888-444-TORC (8672)
E-Mail: INFO@TORC.COM

CALL: 1-888-444-TORC (8672)