




Two-Way Radio Model MT 975

ENGLISH

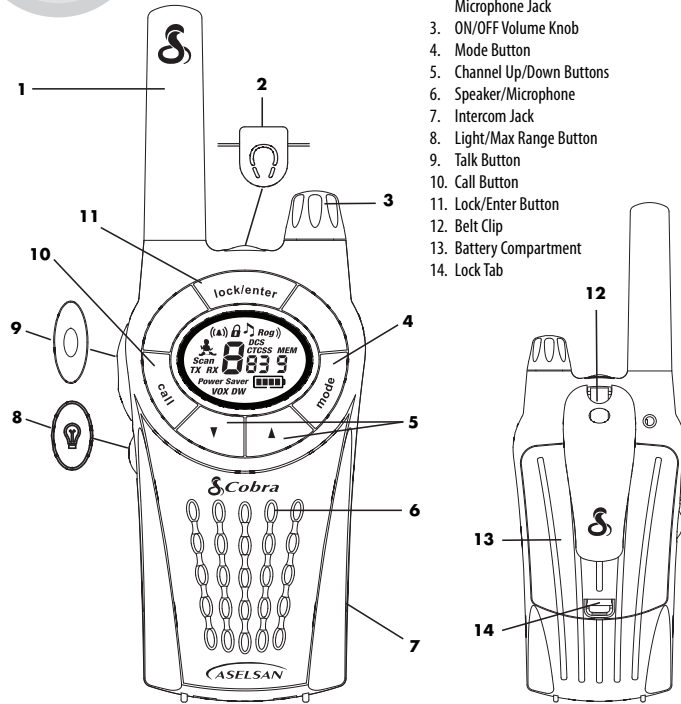


1. Antenna
2. External Speaker/
Microphone Jack
3. ON/OFF Volume Knob
4. Mode Button
5. Channel Up/Down Buttons
6. Speaker/Microphone
7. Intercom Jack
8. Light/Max Range Button
9. Talk Button
10. Call Button
11. Lock/Enter Button
12. Belt Clip
13. Battery Compartment
14. Lock Tab

Product Features

- **Two-Way Radio**
with up to a 12 km (7.5 mile) range
- **8 Channels***
- **38 CTCSS Privacy Codes**
- **83 DCS Privacy Codes**
- **10 Channel Memory**
- **Backlit LCD Display**
- **Battery Saver Circuitry**
- **Battery Level Meter**
- **Maximum Range Extender**
- **VOX Mode for Hands-Free Transmissions**
- **Intercom Capable**
- **Baby Monitor Function**
- **VibrAlert™ Silent Paging**
- **Call Alert** 10 Selectable Tones
- **Scan Channels, Privacy Codes, Memory**
- **Dual Watch** Programmable 2-Location Scan
- **Key Lock**
- **Auto Squelch**
- Selectable ON/OFF **"Roger Beep"** Confirmation Tone
- Selectable ON/OFF **Keystroke Tone**
- **Combination Speaker/Microphone Jack**
- **Belt Clip**

**You are not allowed to use channels 1 and 2 in France.
This situation can change; please contact the French radio
licensing authority for more information.*

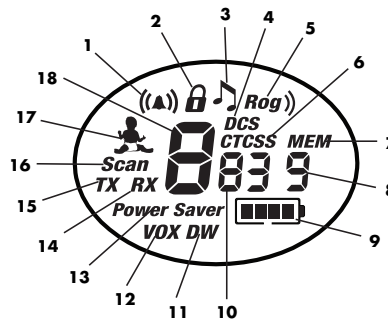

1. Call Alert and VibrAlert Icon
2. Lock Icon
3. Keystroke Tone Icon
4. DCS Icon
5. Roger Beep Icon
6. CTCSS Icon
7. Memory Channel Icon
8. Memory Location Number
9. Battery Level Meter
10. Privacy Code Numbers
11. Dual Watch Icon
12. VOX Icon
13. Power Saver Icon
14. Receive Icon
15. Transmit Icon
16. Scan Icon
17. Baby Monitor Icon
18. Main Channel Number

OPERATION

English

Product Information

This microTALK® radio has been manufactured to meet all required standards for radio equipment using PMR 446 frequencies as authorized. The use of this two-way radio product involves the public airways and its use may be subject to local laws or regulations. Contact your radio licensing authority for more information.

Caring for Your Radio

 
Your microTALK® radio will give you years of trouble-free service if cared for properly. Here are a few suggestions:

- Handle the radio gently.
- Keep it away from dust.
- Never put the radio in water or in a damp place.
- Avoid exposure to extreme temperatures.

Rapid Desktop Charger and Rechargeable Batteries

To Insert Batteries in Radio:

1. Remove belt clip by releasing belt clip latch and sliding clip up.
2. Pull up on lock tab to remove battery cover (on back of radio).
3. Insert batteries according to polarity markings.
4. Replace the battery compartment cover and belt clip.



Printed in China Part No. 480-441-P Version A

NOTE: Estimated operation time on full charge: 12 hours.

 
These rechargeable batteries must be recycled or disposed of properly in compliance with all applicable laws. They must not be thrown in the rubbish bin. Some countries and local authorities require recycling and have established collection programs. Please contact your local waste disposal authority for instructions.

WARNING: Do not put batteries into fire or expose to high heat. They may explode.

For Charging microTALK® Radio(s):

1. Check to see that the batteries have been inserted properly. See above for battery installation instructions.
2. Insert radio(s) into rapid desktop charger as shown.
3. Insert round connector of adapter into jack on back of charger.
4. Plug adapter into electrical outlet. The wall charger should be installed near the equipment and easily accessible.

If charging light (one light per charging well) is not ON, check position of radio. Radio should be upright. The charge indicator light will stay ON until the batteries are fully charged, then go out.



Use only the supplied rechargeable batteries and rapid desktop charger for recharging your microTALK® radio. Non-rechargeable alkaline batteries can also be used.

Cobra recommends your radio is turned OFF while being charged.

Radio Power and Volume

 
To Turn Your Radio ON:

Rotate the ON/OFF Volume knob clockwise to turn ON your radio and adjust the volume. A series of tones will indicate the radio is ON.

Your microTALK® radio is now in LISTENING MODE, ready to receive transmissions. The radio is always in LISTENING MODE, except when the TALK, CALL or MODE buttons are pressed.

To Turn Your Radio OFF:


- Rotate the ON/OFF Volume knob counterclockwise past the click.



Battery Level Meter

The Battery Level Meter will show a Battery icon containing four bars to indicate the batteries are fully charged.

 
When battery power is low, the Battery Level Meter will show a blinking Battery icon containing only one bar to indicate that the batteries should be recharged or replaced.



NOTE: Only the supplied NiMH batteries can be recharged.


Battery/Power Saver

 If there are no transmissions within 10 seconds, the unit will automatically switch to BATTERY SAVE MODE and POWER SAVER will appear in the display. This will not affect the unit's ability to receive incoming transmissions.



Communicating with Another Person

 1. Press and hold the TALK button.
2. With the microphone about 5 cm (2 inches) from your mouth, speak in a normal voice.
3. Release the button when you have finished talking and listen for a response.



You cannot receive incoming calls while pressing the TALK button.

NOTE: Both radios must be tuned to the same channel and privacy code to communicate.

OPERATION

English

Listening for a Response

Release the TALK button to receive incoming transmissions. Your microTALK® is always in LISTENING MODE except when the TALK, CALL or MODE buttons are pressed.



To Adjust Volume

Rotate the ON/OFF Volume knob clockwise to increase volume and counterclockwise to reduce it.



Call Button

Press and release the CALL button.

The other person will hear a two (2) second ringing tone. You cannot receive transmissions while sending a call.



NOTE: Both radios must be tuned to the same channel and privacy code to communicate.

To Illuminate Display

Press and release the LIGHT/MAX RANGE button to illuminate the display for 10 seconds.



Auto Squelch/ Maximum Range Extender

Your microTALK® radio is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise resulting from terrain, conditions, or from reaching your maximum range limit.

You can temporarily turn OFF Auto Squelch or turn ON Maximum Range Extender, allowing all signals to be received and extending the maximum range of your radio.

To Temporarily Turn OFF Auto Squelch:

- Press the LIGHT/MAX RANGE button for less than five (5) seconds.

If you hear two (2) beeps, you have turned the Maximum Range Extender ON (see below).

To Turn Maximum Range Extender ON:

- Press and hold the LIGHT/MAX RANGE button for at least five (5) seconds until you hear two (2) beeps, indicating that the Maximum Range Extender is ON.

To Turn Maximum Range Extender OFF:

- Press and release the LIGHT/MAX RANGE button or change channels.

Channels

With the radio ON, select any of the 8 channels by pushing the CHANNEL UP or CHANNEL DOWN button.

You can press and hold the CHANNEL UP or CHANNEL DOWN button for fast advance.

NOTE: Both radios must be tuned to the same channel and privacy code (see "CTCSS Privacy Codes" or "DCS Privacy Codes") to communicate.



Lock Function

The LOCK/ENTER button locks the CHANNEL UP, CHANNEL DOWN, and MODE buttons to prevent accidental operation.

To Use the Lock Function:

- Press and hold the LOCK/ENTER button for two (2) seconds to turn the Lock ON or OFF.

A double beep sound is used to confirm your Lock ON or OFF request. When the radio is in LOCK MODE, the Lock icon will be displayed.



microTALK® Range

Your microTALK® radio has a range of up to 12 kilometres (7.5 miles). Your range will vary depending on terrain and conditions.

In flat, open country, your radio will operate at maximum range.

Buildings and foliage in the path of the signal can reduce the range.

Dense foliage and hilly terrain will further reduce the signal.

Remember, you can achieve maximum range by using Maximum Range Extender.

See above for details.



OPERATION and MODE FUNCTIONS

English

External Speaker/Microphone Jack

Your microTALK® radio can be fitted with an external speaker/microphone, freeing your hands for other tasks.

 
To Attach the External Speaker/Microphone:

1. Open the tab on top of the radio.
2. Insert the plug into the jack.



Intercom

With the optional intercom adapter and two external speaker/microphone attachments, a single microTALK® radio can be used as an intercom system. (Ideal for motorcyclists.) Contact your local dealer for availability and pricing.



Privacy Codes

Your microTalk radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. This provides a total of 121 Privacy Codes. Either system can be used on all channels, but both systems cannot be used on the same channel at the same time.

NOTE: To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.

NOTE: The privacy code 00 is not a privacy code, but allows all signals to be heard on a channel that is set to 00 both on the CTCSS and DCS systems.

CTCSS Privacy Codes

CTCSS (Continuous Tone Coded Squelch System) is an advanced tone coding system allowing you to select one of 38 privacy codes to reduce incoming transmissions from other users on the channel.

NOTE: If you are using a CTCSS privacy code, both radios must be tuned to the same channel and CTCSS privacy code to communicate. Each channel will remember the last privacy code you selected.

Scrolling Through Mode Functions

 
By scrolling through the MODE functions, you will be able to select or change preferred features of your microTALK® radio. While you are scrolling through the MODE functions, your radio features will be displayed in the same predetermined order.

Whenever the radio is in a MODE function, it will revert to LISTENING MODE and save the most recently selected settings if no buttons are pressed for 15 seconds.

- Set CTCSS Privacy Codes
- Set DCS Privacy Codes
- Set VOX ON/OFF
- Set VOX Sensitivity Level
- Set Memory Locations
- Set Channel Scan
- Set CTCSS Privacy Code Scan
- Set DCS Privacy Code Scan
- Set Memory Location Scan
- Set VibrAlert and/or Call Alert
- Set Dual Watch ON/OFF and Program Dual Watch Location
- Set Baby Monitor
- Set Call Alert Tone Signal
- Set Roger Beep ON/OFF
- ▼ Set Keystroke Tones ON/OFF

To Select a CTCSS Privacy Code:

1. After selecting a channel, press and release the MODE button until the CTCSS icon flashes on the display. In addition to the CTCSS icon, either OFF or the small numbers next to the channel number will also flash on the display.
2. If CTCSS and OFF are flashing, press the CHANNEL UP or CHANNEL DOWN button to exit OFF and proceed to select a privacy code. Or, if CTCSS and the small numbers next to the channel number are flashing, press the CHANNEL UP or CHANNEL DOWN button to select a privacy code.
3. Choose one of the following:
 - a. Press the MODE button to enter the new setting and proceed to other functions.
 - b. Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.



MODE FUNCTIONS



English

DCS Privacy Codes

DCS (Digital Coded Squelch) is an advanced digital coding system allowing you to select one of 83 privacy codes to reduce incoming transmissions from other users on the channel.

NOTE: If you are using a DCS code, both radios must be tuned to the same channel and DCS privacy code to communicate. Each channel will remember the last privacy code you selected.


To Select a DCS Privacy Code:

- After selecting a channel, press and release the MODE button until the DCS icon flashes on the display. In addition to the DCS icon, either OFF or the small numbers next to the channel number will also flash on the display.
 

- If the DCS and OFF are flashing, press the CHANNEL UP or CHANNEL DOWN button to exit OFF and proceed to select a privacy code. Or, if DCS and the small numbers next to the channel number are flashing, press the CHANNEL UP or CHANNEL DOWN button to select a privacy code.
- Choose one of the following:
 - Press the MODE button to enter the new setting and proceed to other function.
 - Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.


Voice Activated Transmit (VOX)

In VOX MODE, your microTALK® radio can be used "hands-free," automatically transmitting when you speak. You can set the VOX sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise.

To Turn VOX MODE ON or OFF:

- Press the MODE button until the VOX icon flashes on the display. The current ON or OFF setting is displayed.
 
- Press the CHANNEL UP or CHANNEL DOWN button to turn VOX ON or OFF.
- Choose one of the following:
 - Press the MODE button to enter the new setting and proceed to other functions.
 - Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.

To Set the VOX Sensitivity Level:

- Press the MODE button until the VOX icon flashes and the current sensitivity level is displayed.
 


The current sensitivity level is displayed with the letter "L" and a number 1 to 5, 5 being the most sensitive level and 1 being the least sensitive level.
- Press the CHANNEL UP or CHANNEL DOWN button to change the setting.

- Choose one of the following:
 - Press the MODE button to enter the new setting and proceed to other functions.
 - Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.

10 Memory Locations

Your microTALK® radio has 10 Memory Locations for storing your most frequently used channels and channel/privacy code combinations. These Memory Locations can be selected individually or can be scanned.

To Program a Memory Location:

- Press the MODE button until the Memory icon and the memory location flash on the display.
 
- Press the CHANNEL UP or CHANNEL DOWN button to select the memory location (0 through 9).

NOTE: If a location has been programmed before, its associated channel/privacy code will be shown on the display.
- Press the LOCK/ENTER button to enter a new memory location or edit an already programmed memory location. The channel numbers will flash on the display.
- Press the CHANNEL UP or CHANNEL DOWN button to select a channel (1 through 8).

- Press the LOCK/ENTER button. The CTCSS icon and privacy code numbers will flash on the display.
- Choose one of the following:
 - Press the CHANNEL UP or CHANNEL DOWN button to select a CTCSS privacy code (01 through 38) for the channel.
 - Press the LOCK/ENTER button to switch from CTCSS to DCS. The DCS icon and privacy code numbers will flash on the display. The CHANNEL UP or CHANNEL DOWN button can then be used to select a DCS privacy code (01 through 83) for the channel.

NOTE: If "OFF" flashes in place of the privacy code numbers, a privacy code is already set in the opposite (CTCSS or DCS) system. Press the CHANNEL UP or CHANNEL DOWN button to cancel the opposite code and select a privacy code from the active system for the selected channel.
- Choose one of the following:
 - Press the LOCK/ENTER button to enter the channel/privacy code in the selected memory location. Radio then proceeds to next Memory location, which will blink.
 - Press the MODE button to enter the channel/privacy code in the selected memory locations and proceed to other functions on the channel/privacy code displayed before you entered MODE functions.

MODE FUNCTIONS

English

- c. Press the TALK button to enter the channel/privacy code in the selected memory location and exit MODE functions. Upon release of the TALK button, the radio will enter LISTENING MODE on the channel/privacy code just entered.

To Recall a Stored Memory Channel Location:

1. Press the MODE button until the Memory icon and the memory location number flash on the display.
2. Press the CHANNEL UP or CHANNEL DOWN button to select a memory location (0 through 9).

NOTE: If a location has been programmed before, its associated channel/privacy code will be shown on the display.

3. Press the TALK button to return to LISTENING MODE on the selected memory location.

NOTE: A memory location can be reprogrammed at any time it is displayed and flashing. Press the LOCK/ENTER button to begin.

While recalling a stored memory location, if you do not press any buttons for 15 seconds, your radio will automatically return to LISTENING MODE on the channel/privacy code displayed before you entered MODE functions.

To De-Program a Memory Location:

1. Press the MODE button until the Memory icon and the memory location flash on the display.

2. Press the CHANNEL UP or CHANNEL DOWN button to select the memory location (0 through 9).

NOTE: If a location has been programmed before, its associated channel/privacy code will be shown on the display.

3. Press the LOCK/ENTER button. The channel numbers will flash on the display.
4. Press the CHANNEL UP or CHANNEL DOWN button to select Channel 0.

5. Choose one of the following:

- a. Press the LOCK/ENTER button to enter the channel/privacy code in the selected memory location and return to the beginning of memory location options.
- b. Press the MODE button to enter the channel/privacy code in the selected memory location and proceed to other functions on the channel/privacy code displayed before you entered MODE functions.

While de-programming a memory location, if you do not press any buttons for 15 seconds, your radio will automatically return to LISTENING MODE on the channel/privacy code displayed before you entered MODE functions.

 
Channel Scan

Your microTALK® radio can automatically scan channels (1 to 8).

NOTE: The radio ignores specific CTCSS or DCS privacy codes while scanning channels.

To Scan Channels:

1. Press the MODE button until the Scan icon and the channel number flash on the display.
2. Press the CHANNEL UP or CHANNEL DOWN button to begin scanning channels.



The Scan icon will continue to be displayed when channel scan is ON. Your radio will continue to scan all channels and stop if an incoming transmission is detected. Your radio will remain on that channel for 10 seconds.

During An Incoming Transmission, You Can Choose From The Following:

- a. Press and hold the TALK button to communicate on that channel. Your radio will remain on that channel and return to LISTENING MODE.
- b. Press the CHANNEL UP or CHANNEL DOWN button to resume scanning channels.

 
If you do not press any button within 10 seconds, your radio will automatically resume scanning channels.

Privacy Code Scan

Your microTALK® radio can automatically scan the Privacy Codes (either CTCSS 01 through 38 or DCS 01 through 83) within one channel. Only one set of privacy codes (CTCSS or DCS) can be scanned at a time.

To Scan Privacy Codes:

1. While in LISTENING MODE, press the CHANNEL UP or CHANNEL DOWN button to choose the channel on which you wish to scan privacy codes.
2. Press the MODE button until either the CTCSS or the DCS icon appears on the display and the Scan icon and the small numbers next to the channel number flash on the display.
3. Press the CHANNEL UP or CHANNEL DOWN button to begin scanning privacy codes within the channel you selected.



The Scan icon will continue to be displayed when privacy code scan is ON. Your radio will continue to scan privacy codes and stop as an incoming transmission is detected. Your radio will remain on that channel/privacy code for 10 seconds.

MODE FUNCTIONS

English

While setting privacy code scan, if you do not press any buttons for 15 seconds your radio will automatically return to LISTENING MODE on the channel/privacy code that was displayed before you entered MODE functions.

During An Incoming Transmission, You Can Choose From The Following:

- a. Press and hold the TALK button to communicate on that channel/privacy code. Your radio will remain on that channel/privacy code and return to LISTENING MODE.
- b. Press the CHANNEL UP or CHANNEL DOWN button to resume scanning privacy codes.

If you press the TALK button while scanning, but more than 10 seconds after receiving a transmission, you will transmit on the privacy code on which, during scanning, you last received a transmission.

If you do not press any button within 10 seconds, your radio will automatically resume scanning privacy codes.

During Memory Location Scan (While Receiving An Incoming Transmission), You Can Choose From The Following:

- a. Press and hold the TALK button to communicate on that memory location.
- b. Your radio will remain on that memory location and return to LISTENING MODE. Press the CHANNEL UP or CHANNEL DOWN button to resume scanning memory locations.


If you press the TALK button while scanning, but more than 10 seconds after receiving a transmission, you will transmit on the memory location on which, during scanning, you last received a transmission.

Memory Location Scan

Your microTALK® radio can automatically scan up to 10 programmed Memory Locations.

NOTES: If there are one or fewer memory locations programmed in your radio, the scan memory locations option will not be available. To program at least two memory locations, see program memory locations.

To Scan Memory Locations:

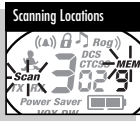1. Press the MODE button until the Scan icon, Memory icon and the memory location number flash on the display. 
 2. Press the CHANNEL UP or CHANNEL DOWN button to begin scanning memory locations.
- The Scan icon and the Memory icon will continue to be displayed when memory location scan is ON. Your radio will continue to scan memory locations and stop if an incoming transmission is detected. Your radio will remain on that memory location for 10 seconds.

 
While setting memory location scan, if you do not press any buttons for 15 seconds, your radio will automatically return to LISTENING MODE on the channel/privacy code displayed before your entered MODE functions.

VibrAlert and Call Alert

Your microTALK® radio can alert you to incoming signals by sounding an audible call tone, by vibrating silently or both.

To Change Call Settings:

1. Press the MODE button until the Call Settings icon flashes on the display. The current setting ("01" vibrate + tone, "02" vibrate only or "00" tone only) is displayed.
2. Press the CHANNEL UP or CHANNEL DOWN button to change the call setting.
3. Choose one of the following:
 - a. Press the MODE button to enter the new setting and proceed to other functions.
 - b. Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.



MODE FUNCTIONS

English


Dual Watch


Dual Watch allows you to simultaneously monitor any two (2) Dual Watch Locations:

Dual Watch Location 1 — is always the channel/privacy code displayed before you entered MODE functions. See “Channels,” “CTCSS Privacy Codes” and “DCS Privacy Codes” sections for further details.

Dual Watch Location 2 — will be stored in the radio. It can be edited and/or recalled for future engagements of DUAL WATCH MODE.

To Program or Edit Dual Watch Location 2 And Engage Dual Watch Mode:

1. Press the MODE button until the Dual Watch icon and the channel number flash on the display.
 
2. Choose one of the following:
 - a. Select or edit a channel:
 - 1) Press the CHANNEL UP or CHANNEL DOWN button to select a channel (1 to 8).
 - b. Select or edit a channel/privacy code:
 - 1) Press the CHANNEL UP or CHANNEL DOWN button to select a channel (1 to 8).
 - 2) Press the MODE button to set the channel. The small numbers next to the channel number will flash on the display.
 - 3) Press the CHANNEL UP or CHANNEL DOWN button to select a CTCSS privacy code (01 to 38) or DCS privacy code (01 to 83).

 
3. Press the LOCK/ENTER button to set Dual Watch Location 2 and engage DUAL WATCH MODE (see below for further details).
 

NOTES: To terminate Dual Watch and proceed to the next available MODE function, press the MODE button.

While setting Dual Watch Location 2, if you do not press any buttons for 15 seconds your radio will automatically return to LISTENING MODE on Dual Watch Location 1.

To Turn Dual Watch ON:

NOTE: Dual Watch Location 2 must be programmed to turn Dual Watch ON.

1. Set the first Dual Watch Location (channel/privacy code) you wish to monitor (see “Channels,” “CTCSS Privacy Codes” and “DCS Privacy Codes” sections for further details).
 
2. Press the MODE button until the Dual Watch icon and the channel number flash on the display.

NOTE: While setting Dual Watch, if you do not press any buttons for 15 seconds your radio will automatically return to LISTENING MODE on the last channel or channel/privacy code displayed before you entered MODE functions.
3. Press the LOCK/ENTER button to engage DUAL WATCH MODE.

During An Incoming Transmission, You Can Choose From The Following:

- a. Press and hold the TALK button to communicate on that Dual Watch Location. Your radio will remain on that Dual Watch Location and return to LISTENING MODE.
- b. Press the CHANNEL UP or CHANNEL DOWN button to resume Dual Watch.

If you press the TALK button while in Dual Watch and not within 10 seconds of receiving a transmission, you will transmit on the last Dual Watch Location on which you received a transmission. This will return the radio to LISTENING MODE.

If you do not press any button within 10 seconds, your radio will automatically resume Dual Watch.

To Terminate Dual Watch:

Choose one of the following:

- a. Press the LOCK/ENTER button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.
- b. Press the TALK button to return to LISTENING MODE on either Dual Watch Location 1 or the last Dual Watch Location on which, during Dual Watch, you last received a transmission.
- c. Press the MODE button and proceed to the next available MODE function.

MODE FUNCTIONS

 
English

Baby Monitor

With the Baby Monitor Function ON, a radio left near a baby will transmit to another unit on the same channel and privacy code whenever a sound is detected. Baby Monitor uses the same sensitivity level you set for the VOX Function. If you have not set a VOX sensitivity level (see the "Voice Activated Transmit [VOX]" section of this manual), the maximum sensitivity, level 5, will automatically be used.

To Turn Baby Monitor ON:

1. Press MODE button until the Baby Monitor icon flashes on the display. The current OFF setting is displayed.
2. Press the CHANNEL UP or CHANNEL DOWN button to change the setting to ON.
3. Press the LOCK/ENTER button to enter the ON setting and enter BABY MONITOR MODE.



NOTES: Pressing the MODE button will enter the BABY MONITOR MODE setting as OFF and proceed to other MODE functions.

Not pressing any buttons for 15 seconds will enter the BABY MONITOR MODE setting as OFF and return the radio to LISTENING MODE.

NOTE: Both radios must be tuned to the same channel and privacy code to communicate.

To Terminate Baby Monitor Mode:

Choose one of the following:

- a. Press the TALK button and return to LISTENING MODE.
- b. Press the LOCK/ENTER button and return to LISTENING MODE.
- c. Press the MODE button and proceed to the next available MODE function.

10 Call Tone Settings

You can choose between 10 different call tone settings to transmit a unique call alert.

To Change a Call Tone Setting:

1. Press the MODE button until the letter "C" and the current call tone number (1 to 10) is displayed. The current call tone will sound for two (2) seconds.
2. Press the CHANNEL UP or CHANNEL DOWN button to hear the other call tone settings.
3. Choose one of the following:
 - a. Press the MODE button to enter the new setting and proceed to other functions.
 - b. Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.



 
"Roger Beep" Confirmation Tone

Your listener will hear an audible tone when you release the TALK button. This alerts the other party that you have finished talking and that it is OK for them to speak. This feature can be turned ON or OFF.

To Turn "Roger Beep" ON or OFF:

When you turn ON your microTALK® radio for the first time, "Roger Beep" will be ON.

1. Press and release the MODE button until the "Roger Beep" icon flashes on the display. The current ON or OFF setting is displayed.
2. Press the CHANNEL UP or CHANNEL DOWN button to select "Roger Beep" ON or OFF.
3. Choose one of the following:
 - a. Press the MODE button to enter the new setting and proceed to other functions.
 - b. Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.



The setting you select will be saved when you turn your radio OFF and ON again. When the "Roger Beep" is ON, the "Roger Beep" icon will be displayed.

MODE FUNCTIONS

English

Keystroke Tones

With Keystroke Tones turned ON, your radio will sound beeps each time you press a button or change a setting.

To Turn Keystroke Tones ON or OFF:

When you turn ON your microTALK® radio for the first time, Keystroke Tones will be ON.

1. Press the MODE button until the Keystroke Tones icon flashes on the display. The current ON or OFF setting is displayed.
2. Press the CHANNEL UP or CHANNEL DOWN button to turn Keystroke Tones ON or OFF.



3. Choose one of the following:

- a. Press the MODE button to enter the new setting and return to LISTENING MODE.
- b. Press the LOCK/ENTER button to enter the new setting and return to LISTENING MODE.

The setting you select will be saved when you turn your radio OFF and ON again. When Keystroke Tones are ON, the Keystroke Tone icon will be displayed.

İthalatçı Firma ve Türkiye Genel Distribütörü
ASELSAN ELEKTRONİK SAN. ve TİC. A.Ş.



Mehmet Akif Ersoy Mah. 16. Cadde No: 16
Yenimahalle 06370 ANKARA, Türkiye

D.O.C., WARRANTY & CUSTOMER SERVICE

English

THIS PAGE TO INCLUDE

D.O.C., WARRANTY & CUSTOMER SERVICE

INFORMATION WHEN COMPLETE.