

IP Remote

User Guide

Table of Contents

Introduction	3
1. Overview	4
2. Required Environment	5
3. Preparation	6
4. Screen Components	8
4.1. No Device Selected Screen/Remote Screen	8
4.2. Menu Screen (Side Menu)	9
4.3. Remote Screen - TV (BRAVIA)	10
4.4. Remote Screen - PJ (ADCP)	11
4.5. Remote Screen - PJ (PJ Talk)	13
4.6. Remote Screen - Group: TV (BRAVIA) Only	15
4.7. Remote Screen - Group: PJ (ADCP) Only	16
4.8. Remote Screen - Group: PJ (PJ Talk) Only	17
4.9. Remote Screen - Group: TV (BRAVIA) & PJ (ADCP)	18
4.10. Remote Screen - Group: TV (BRAVIA) & PJ (PJ Talk)	19
4.11. Remote Screen - Group: PJ (ADCP) & PJ (PJ Talk)	20
4.12. Remote Screen - Group: TV (BRAVIA) & PJ (ADCP) & PJ (PJ Talk)	21
5. How to Use	22
5.1. Launch the IP Remote App	22
5.2. Display the Menu Screen (Side Menu)	23
5.3. Add a New Operating Device (BRAVIA/Projector)	24
5.4. Delete a Registered Device (BRAVIA/Projector)	25
5.5. Turn On the TV Power With the Wake on LAN Function [BRAVIA Only]	26
5.6. Designate an HTML App to Launch by the App Launcher Button [BRAVIA Only]	27
5.7. Designate a Device (BRAVIA/Projector) for When IP Remote App Launches	28
5.8. Change the Order of the Device List	29
5.9. Operate BRAVIA	31
5.10. Operate the Projector	31
5.11. Operate Multiple Devices (BRAVIA/Projector) Simultaneously	32
5.12. When Device Authorization is Enabled to Prevent Operation by Unspecified Users	33
5.13. Display End User License Agreement	34
5.14. Display License Information	35
5.15. Disable the Customize Function	36
6. Troubleshooting	37
Change History	38

Introduction

Package

The package offered is made up of the following apps. Confirm which one you will use.
Install the correct IP Remote app from below.

IP Remote	Android app
IP Remote for Professional Displays and Projectors	iOS app

1. Overview

The IP Remote app can be used to operate BRAVIA from a mobile device via the network. In addition to performing basic operations like controlling power and changing inputs, it can also instruct HTML5 apps to launch and operate multiple BRAVIA units simultaneously. In Ver 1.1.0, the app could also operate the projector.

2. Required Environment

A mobile device and either eligible BRAVIA model or projector are required to operate the app. This section explains the environment required to use the IP Remote app.

<Mobile device>

OS	Android 4.x or higher, iOS 6.x or higher
Display	640 x 960 or higher resolution (recommended)

3. Preparation

You must prepare the following hardware and software prior to use.

<Mobile device>

Mobile device	Refer to " 2. Required Environment "	Required
IP Remote app	Install the IP Remote app from the corresponding app store.	Required

<BRAVIA>

BRAVIA	Refer to " 2. Required Environment "	Required
	<p>Set the method of authentication. This setting is required to operate BRAVIA using the IP Remote app.</p> <ul style="list-style-type: none"> • Enable authentication <ul style="list-style-type: none"> ◦ Network > Home network setup > IP control > Authentication Set authentication to "Pre-Shared Key" or "Normal and Pre-Shared Key". ◦ Network > Home network setup > IP control > Pre-Shared Key Set your preferred character string. • Disable authentication <ul style="list-style-type: none"> ◦ Network > Home network setup > IP control > Authentication Set to "None". <p>Enable Simple IP Control. Enabling Simple IP Control is required to turn power on with the IP Remote app.</p> <ul style="list-style-type: none"> • Android TV model <ul style="list-style-type: none"> ◦ Network > Home network setup > IP control > Simple IP control Set to "On". 	Required

<Projector>

<p>Projector</p>	<p>Refer to "2. Required Environment"</p>	<p>Required</p>
	<p>For your projector's setting details, refer to the applicable instruction manual of your projector.</p> <p>Enable the ADCP service. Enabling ADCP service is required to operate a compatible projector with the IP Remote app. It is not possible to operate projectors that are not compatible with ADCP service. Access the URL http://xxx.xxx.xxx.xxx (xxx.xxx.xxx.xxx: projector's IP address) in a web browser and conduct settings.</p> <ul style="list-style-type: none"> • Enable "start ADCP Service" in ADCP Set Port No. to "53595" and Timeout to "60" <ul style="list-style-type: none"> ◦ Enable authentication <ul style="list-style-type: none"> ▪ Enable "Requires Authentication" in ADCP ▪ Set the administrator password in PSK of the IP Remote app ◦ Disable authentication <ul style="list-style-type: none"> ▪ Disable "Requires Authentication" in ADCP ▪ Do not designate PSK of the IP Remote app <p>Enable the PJ Talk service. Enabling PJ Talk service is required to operate a compatible projector with the IP Remote app. It is not possible to operate projectors that are not compatible with PJ Talk service. Access the URL http://xxx.xxx.xxx.xxx (xxx.xxx.xxx.xxx: projector's IP address) in a web browser and conduct settings.</p> <ul style="list-style-type: none"> • Enable "Start PJ Talk Service" in PJ Talk Set Community to "SONY", Port No. to "53484", and Timeout to "30" <p>Set standby mode to standard. Setting the standby mode to standard is required to turn power on with the IP Remote app.</p> <ul style="list-style-type: none"> • Set the standby mode to "Standard" from the menu of the projector 	<p>Required</p>

<Other>

<p>Network environment</p>	<p>Connect the mobile device and the operating device (BRAVIA/projector) over the same local area network.</p> <div data-bbox="411 1279 1136 1809" style="border: 1px solid blue; padding: 10px; text-align: center;"> <p>Displays over the same LAN</p> <p>The diagram illustrates a network setup where a mobile device (a smartphone) is connected to a wireless router via Wi-Fi. The wireless router is then connected to three projectors, all of which are connected to the same local area network (LAN). The title of the diagram is 'Displays over the same LAN'.</p> </div>	<p>Required</p>
-----------------------------------	---	-----------------

 
4. Screen Components

This section explains the names and functions of the IP Remote app major screen components.


4.1. No Device Selected Screen/Remote Screen

Either one of these screens is displayed when the IP Remote app launches.

No Device Selected Screen

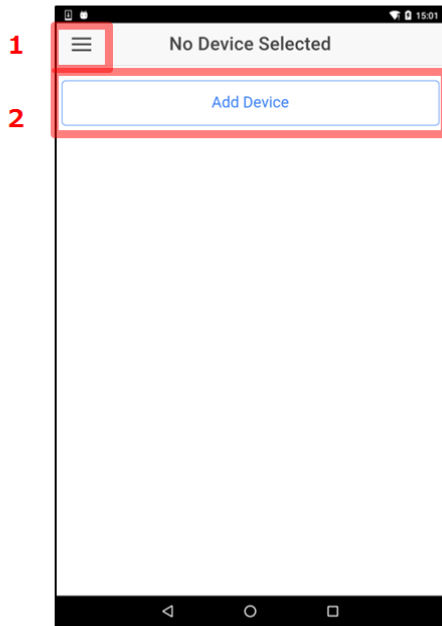

Remote Screen

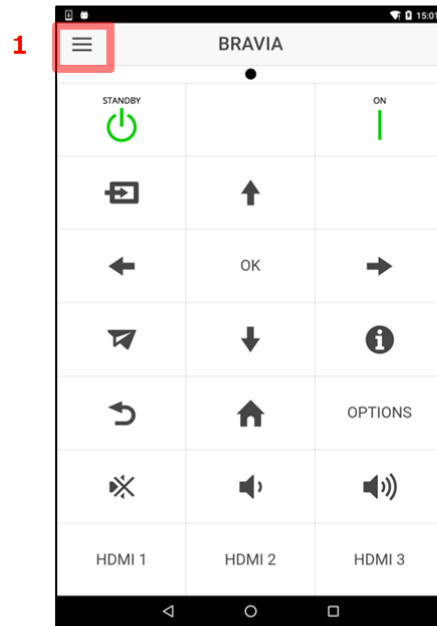 


GUI	Name	Function
1	Side Menu button	Displays the Menu screen (side menu).
2	Add Device button	Adds a new operating device (BRAVIA/projector).


4.2. Menu Screen (Side Menu)

You can use this screen for device management, including adding, deleting, and reordering devices.

 Menu Screen (Side Menu) [Device Edit Mode]

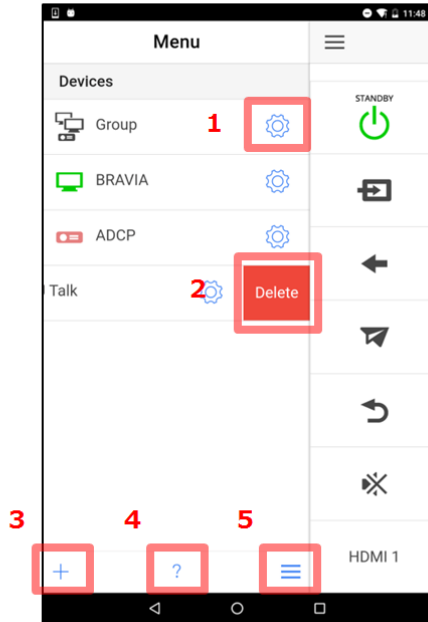

 
Menu Screen (Side Menu) [Devices Reorder Mode]

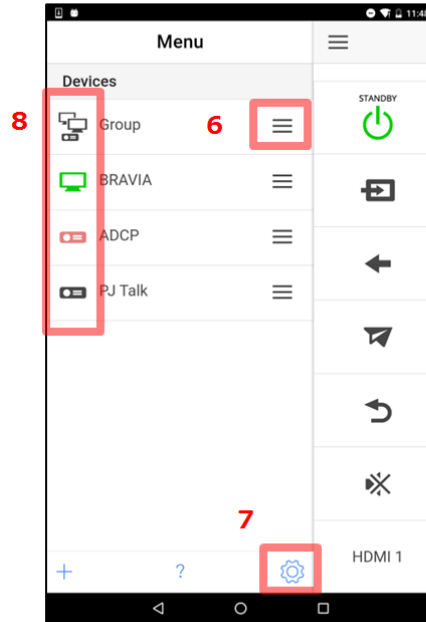

GUI	Name	Function
1	Settings button	Displays the Edit Device dialog box.
2	Delete button	Deletes a registered device (BRAVIA/projector).
3	Add Device button	Adds a new operating device (BRAVIA/projector).
4	Option Menu button	Displays the Option Menu dialog box.
5	Devices Reorder button	Switches to Devices Reorder mode.
6	Reorder Item icon	Click here to select a device, then swipe up and down to reorder it.
7	Devices Settings button	Switches to Devices Edit mode.
8	Devices icon	Displays the power state of each device. States: ON (green), OFF (red), unknown (black) If Devices Type is set to "Group", the power state is not displayed.

4.3. Remote Screen - TV (BRAVIA)

  
The Remote screen displayed when Devices Type is set to “TV (BRAVIA)”.

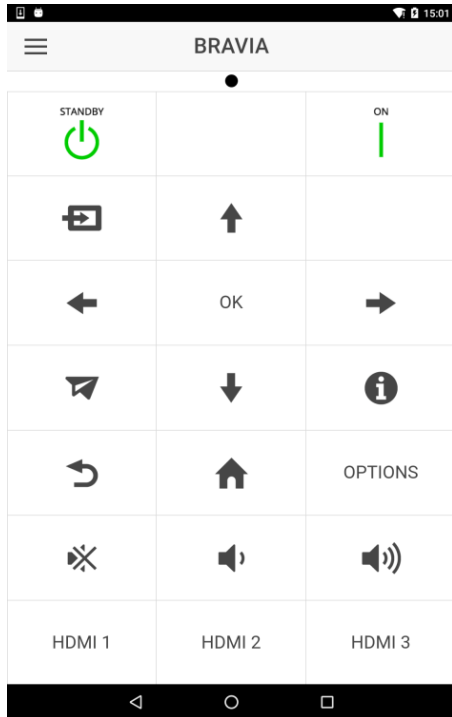





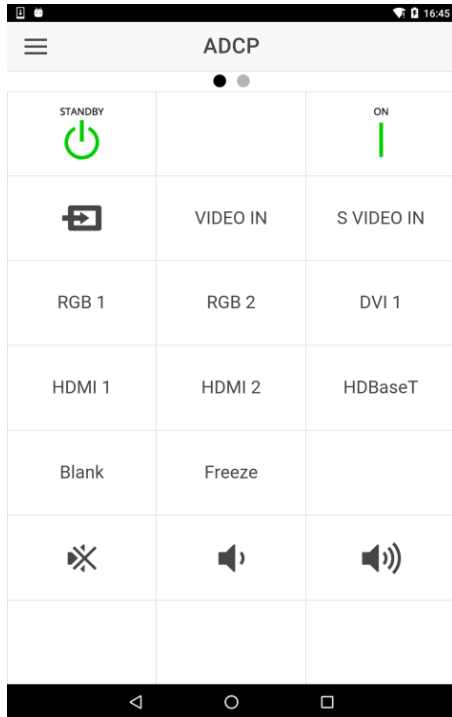

Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.	OK	OK	Confirms a selection.
	Up	Selects items on the screen. (Long press possible)		Down	Selects items on the screen. (Long press possible)
	Left	Selects items on the screen. (Long press possible)		Right	Selects items on the screen. (Long press possible)
	App Launcher	Launches the HTML app. (Disabled on some models)		Info	Toggles the display of channel and program information, the clock, etc. on and off.
	Return	Returns to the previous screen.		Home	Displays the Home menu to determine a selection.
	OPTIONS	Displays the Option menu to determine a selection.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)
	HDMI 1	Switches to HDMI 1.		HDMI 2	Switches to HDMI 2.
	HDMI 3	Switches to HDMI 3.			


4.4. Remote Screen - PJ (ADCP)

The first Remote Screen displayed when Devices Type is set to “PJ (ADCP)”.



Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.	VIDEO IN	VIDEO IN	Switches input to VIDEO IN.
S VIDEO IN	S VIDEO IN	Switches input to S VIDEO IN.	RGB 1	RGB 1	Switches input to RGB 1.
RGB 2	RGB 2	Switches input to RGB 2.	DVI 1	DVI 1	Switches input to DVI 1.
HDMI 1	HDMI 1	Switches to HDMI 1.	HDMI 2	HDMI 2	Switches to HDMI 2.
HDBaseT	HDBaseT	Switches input to HDBaseT.	Blank	Blank	Temporarily blanks the screen. Press again to reset the screen to normal.
Freeze	Freeze	Temporarily freezes the screen. Tap again to reset the screen to normal. Can be used during computer signal input.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)

  
The second Remote Screen displayed when the Devices Type is set to “PJ (ADCP)”.

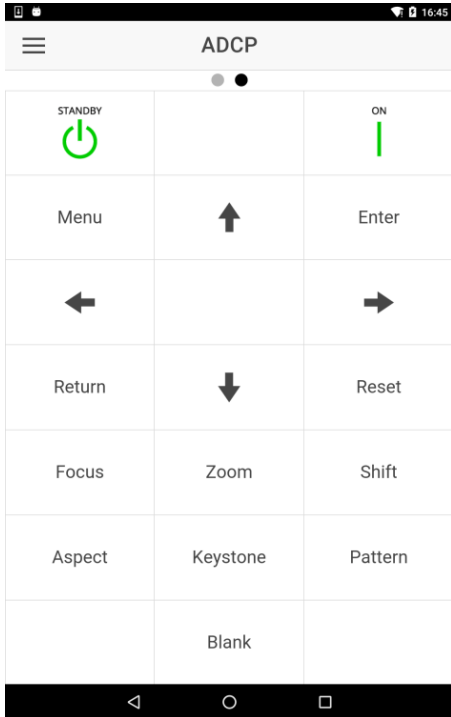







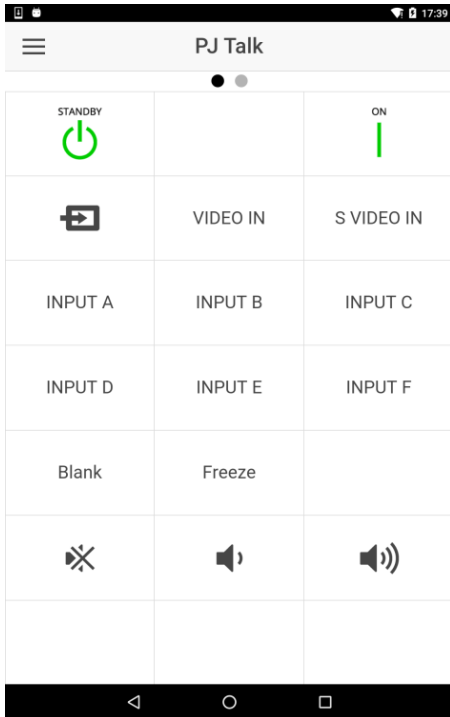









Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
Menu	Menu	Confirms a selection.	Enter	Enter	Confirms a selection.
	Up	Selects items on the screen. (Long press possible)		Down	Selects items on the screen. (Long press possible)
	Left	Selects items on the screen. (Long press possible)		Right	Selects items on the screen. (Long press possible)
Return	Return	Returns to the previous screen.	Reset	Reset	Resets to the initial state.
Focus	Focus	Adjusts the lens focus.	Zoom	Zoom	Adjusts the lens zoom.
Shift	Shift	Adjusts the lens shift.	Aspect	Aspect	Changes the aspect ratio of the projected screen.
Keystone	Keystone	Adjusts the keystone.	Pattern	Pattern	Displays the adjustment pattern.
Blank	Blank	Temporarily blanks the screen. Tap again to reset the screen to normal.			


4.5. Remote Screen - PJ (PJ Talk)

The first Remote Screen displayed when the Devices Type is set to “PJ (PJ Talk)”.



Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.		VIDEO IN	Switches input to VIDEO IN.
	S VIDEO IN	Switches input to S VIDEO IN.		INPUT A	Switches input to INPUT A.
	INPUT B	Switches input to INPUT B.		INPUT C	Switches input to INPUT C.
	INPUT D	Switches input to INPUT D.		INPUT E	Switches input to INPUT E.
	INPUT F	Switches input to INPUT F.		Blank	Temporarily blanks the screen. Tap again to reset the screen to normal.
	Freeze	Temporarily freezes the screen. Tap again to reset the screen to normal. Can be used during computer signal input.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)

 
The second Remote Screen displayed when the Devices Type is set to “PJ (PJ Talk)”.

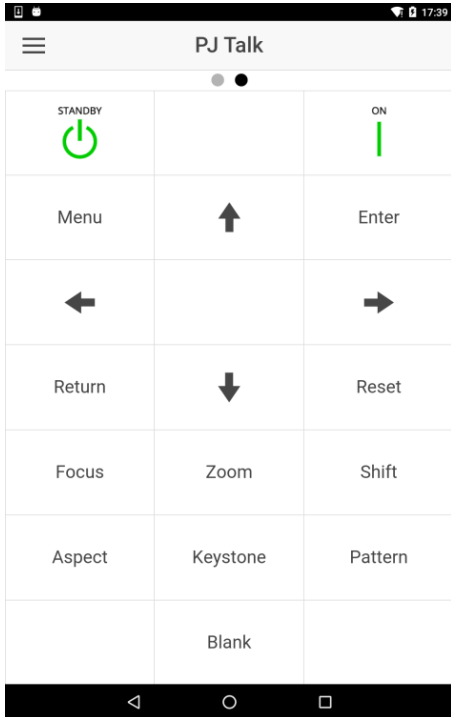

Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
Menu	Menu	Confirms a selection.	Enter	Enter	Confirms a selection.
	Up	Selects items on the screen. (Long press possible)		Down	Selects items on the screen. (Long press possible)
	Left	Selects items on the screen. (Long press possible)		Right	Selects items on the screen. (Long press possible)
Return	Return	Returns to the previous screen.	Reset	Reset	Resets to the initial state.
Focus	Focus	Adjusts the lens focus.	Zoom	Zoom	Adjusts the lens zoom.
Shift	Shift	Adjusts the lens shift.	Aspect	Aspect	Changes the aspect ratio of the projected screen.
Keystone	Keystone	Adjusts the keystone.	Pattern	Pattern	Displays the adjustment pattern.
Blank	Blank	Temporarily blanks the screen. Tap again to reset the screen to normal.			

4.6. Remote Screen - Group: TV (BRAVIA) Only

 
The Remote screen displayed when the Devices Type is set to “Group” and only “TV (BRAVIA)” is selected.

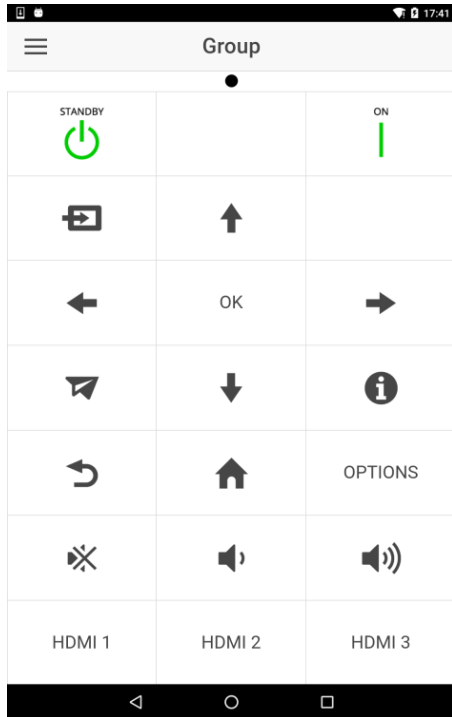

Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.	OK	OK	Confirms a selection.
	Up	Selects items on the screen. (Long press possible)		Down	Selects items on the screen. (Long press possible)
	Left	Selects items on the screen. (Long press possible)		Right	Selects items on the screen. (Long press possible)
	App Launcher	Launches the HTML app. (Disabled on some models)		Info	Toggles the display of channel and program information, the clock, etc. on and off.
	Return	Returns to the previous screen.		Home	Displays the Home menu to determine a selection.
OPTIONS	OPTIONS	Displays the Option menu to determine a selection.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)
HDMI 1	HDMI 1	Switches to HDMI 1.	HDMI 2	HDMI 2	Switches to HDMI 2.
HDMI 3	HDMI 3	Switches to HDMI 3.			

4.7. Remote Screen - Group: PJ (ADCP) Only

  
The Remote screen is displayed when the Devices Type is set to “Group” and only “PJ (ADCP)” is selected.

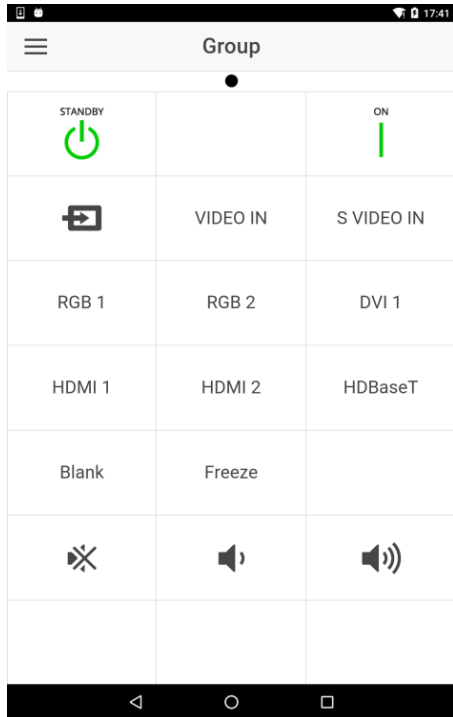



 
 
 
 


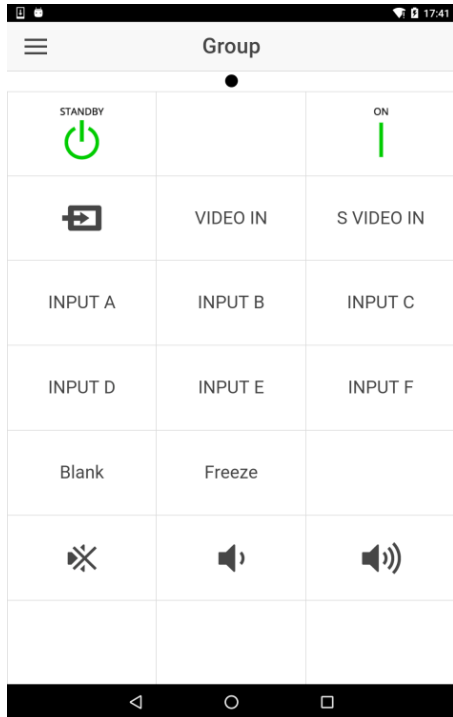

 

 
 


Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.		VIDEO IN	Switches input to VIDEO IN.
	S VIDEO IN	Switches input to S VIDEO IN.		RGB 1	Switches input to RGB 1.
	RGB 2	Switches input to RGB 2.		DVI 1	Switches input to DVI 1.
	HDMI 1	Switches to HDMI 1.		HDMI 2	Switches to HDMI 2.
	HDBaseT	Switches input to HDBaseT.		Blank	Temporarily blanks the screen. Press again to reset the screen to normal.
	Freeze	Temporarily freezes the screen. Tap again to reset the screen to normal. Can be used during computer signal input.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)

4.8. Remote Screen - Group: PJ (PJ Talk) Only


The Remote screen is displayed when the Devices Type is set to “Group” and only “PJ (PJ Talk)” is selected.








Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.		VIDEO IN	Switches input to VIDEO IN.
	S VIDEO IN	Switches input to S VIDEO IN.		INPUT A	Switches input to INPUT A.
	INPUT B	Switches input to INPUT B.		INPUT C	Switches input to INPUT C.
	INPUT D	Switches input to INPUT D.		INPUT E	Switches input to INPUT E.
	INPUT F	Switches input to INPUT F.		Blank	Temporarily blanks the screen. Tap again to reset the screen to normal.
	Freeze	Temporarily freezes the screen. Tap again to reset the screen to normal. Can be used during computer signal input.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)

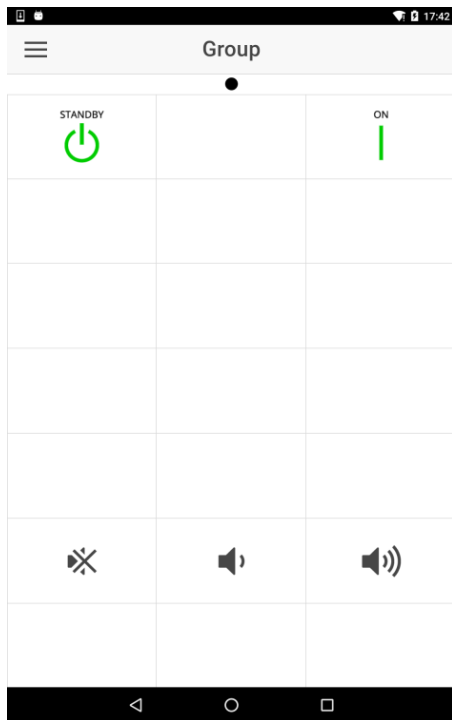 4.9. Remote Screen - Group: TV (BRAVIA) & PJ (ADCP)


The Remote screen is displayed when the Devices Type is set to “Group” and both “TV (BRAVIA)” and “PJ (ADCP)” are selected.








Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Mute Toggle	Mutes audio. Tap again to turn audio on.		Vol Down	Reduces volume. (Long press possible)
	Vol Up	Increases volume. (Long press possible)			

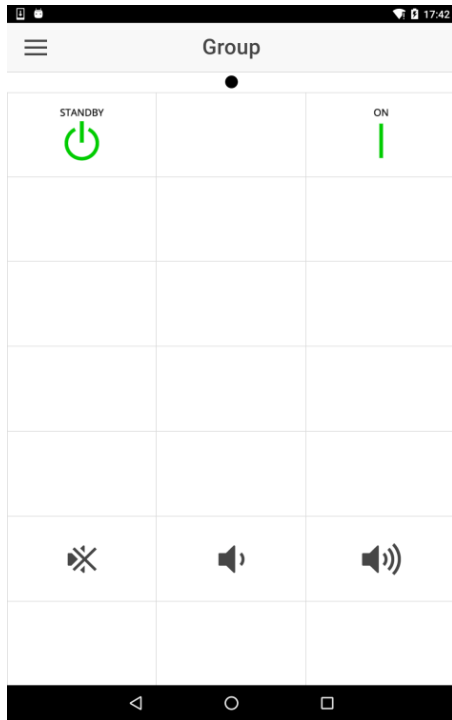 4.10. Remote Screen - Group: TV (BRAVIA) & PJ (PJ Talk)


The Remote screen is displayed when the Devices Type is set to “Group” and both “TV (BRAVIA)” and “PJ (PJ Talk)” are selected.



Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Mute Toggle	Mutes audio. Tap again to turn audio on.		Vol Down	Reduces volume. (Long press possible)
	Vol Up	Increases volume. (Long press possible)			

4.11. Remote Screen - Group: PJ (ADCP) & PJ (PJ Talk)

 
The Remote screen is displayed when the Devices Type is set to “Group” and both “PJ (ADCP)” and “PJ (PJ Talk)” are selected.

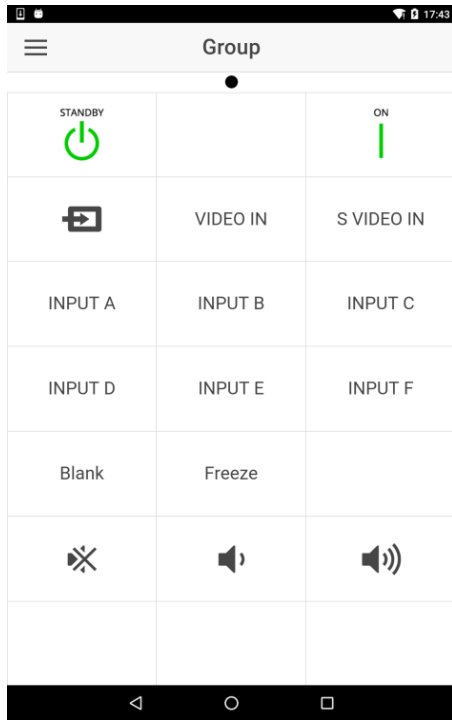






Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Input	Changes the input.		VIDEO IN	Switches input to VIDEO IN.
	S VIDEO IN	Switches input to S VIDEO IN.		INPUT A	Switches input to INPUT A.
	INPUT B	Switches input to INPUT B.		INPUT C	Switches input to INPUT C.
	INPUT D	Switches input to INPUT D.		INPUT E	Switches input to INPUT E.
	INPUT F	Switches input to INPUT F.		Blank	Temporarily blanks the screen. Tap again to reset the screen to normal.
	Freeze	Temporarily freezes the screen. Tap again to reset the screen to normal. Can be used during computer signal input.		Mute Toggle	Mutes audio. Tap again to turn audio on.
	Vol Down	Reduces volume. (Long press possible)		Vol Up	Increases volume. (Long press possible)

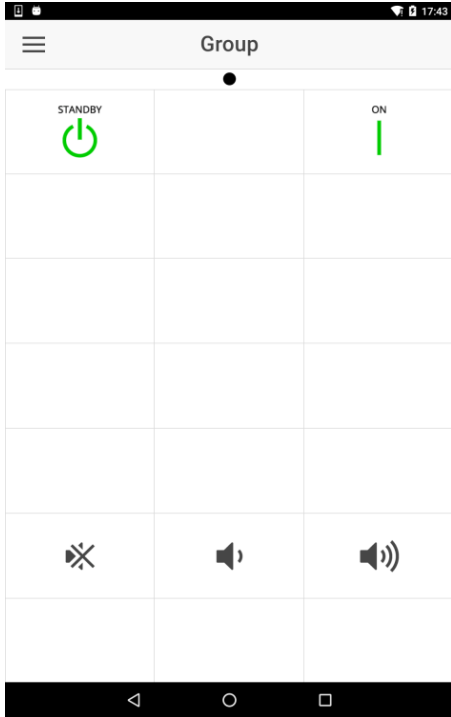 4.12. Remote Screen - Group: TV (BRAVIA) & PJ (ADCP) & PJ (PJ Talk)

The Remote screen is displayed when the Devices Type is set to “Group” and “TV (BRAVIA)”, “PJ (ADCP)”, and “PJ (PJ Talk)” are selected.



Button	Name	Function	Button	Name	Function
	Power Off	Turns power off.		Power On	Turns power on.
	Mute Toggle	Mutes audio. Tap again to turn audio on.		Vol Down	Reduces volume. (Long press possible)
	Vol Up	Increases volume. (Long press possible)			

5. How to Use

This section explains how to use the IP Remote app.



5.1. Launch the IP Remote App

Tap the IP Remote app icon in the app list of your mobile device to launch the IP Remote app.

Icon Image	Mobile Device
	Android
	iOS



5.2. Display the Menu Screen (Side Menu)

  1. Tap the Side Menu button on the No Device Selected screen or the Remote screen.
You can also display the side menu by swiping right on the screen's header.

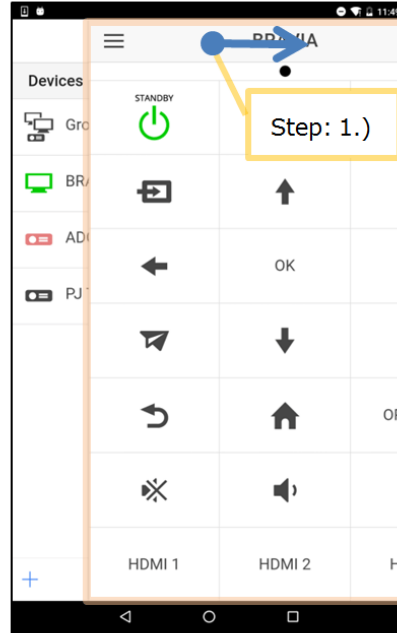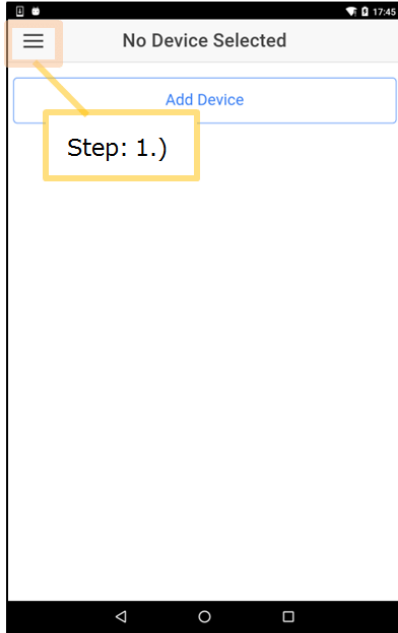



5.3. Add a New Operating Device (BRAVIA/Projector)

  1. On the No Device Selected screen, tap the Add Device button. Or on the Menu screen (side menu), tap the Add Device button.
2. This displays the Enter Device Name dialog box. Enter your preferred device's name and tap the OK button.
3. On the device list of the Menu screen (side menu), tap the Settings button of the device added.
4. Enter the IP of your operating device in the Edit Device dialog box. Enter the PSK (pre-shared key) when device authorization is enabled so that it cannot be operated by an unspecified user. Refer to the following for details.
 - “5.12. When Device Authorization is Enabled to Prevent Operation by Unspecified Users ”
5. Select Device Type.
 - Select “TV (BRAVIA)” for a BRAVIA unit.
 - Select “PJ (ADCP)” or “PJ (SDCP)” for a projector.
6. Tap the Close button on the top right of the Edit Device dialog box.

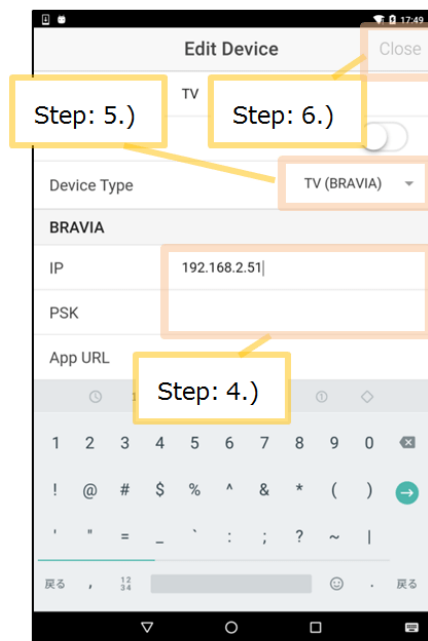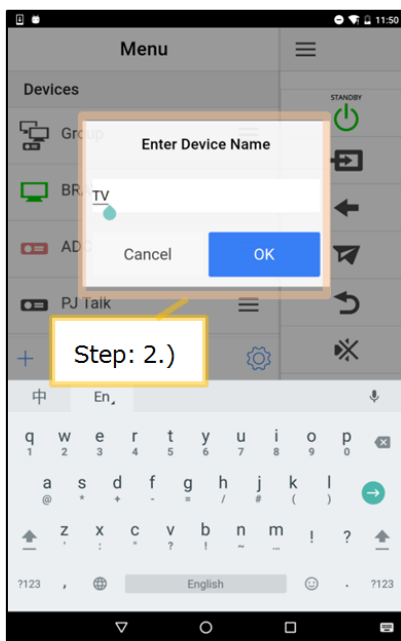



5.4. Delete a Registered Device (BRAVIA/Projector)

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. Swipe left on the device that you want to delete in the device list on the Menu screen (side menu) to display the Delete button.
3. Tap the Delete button.

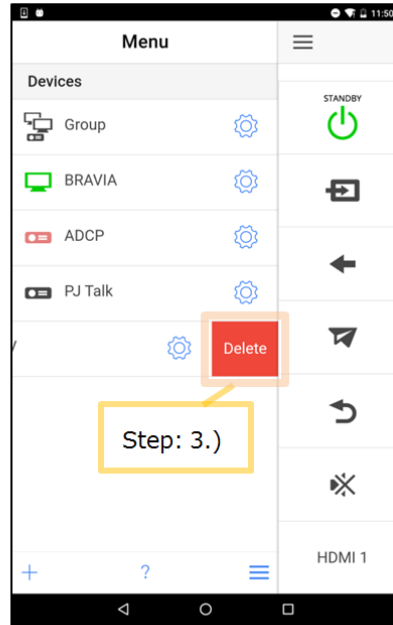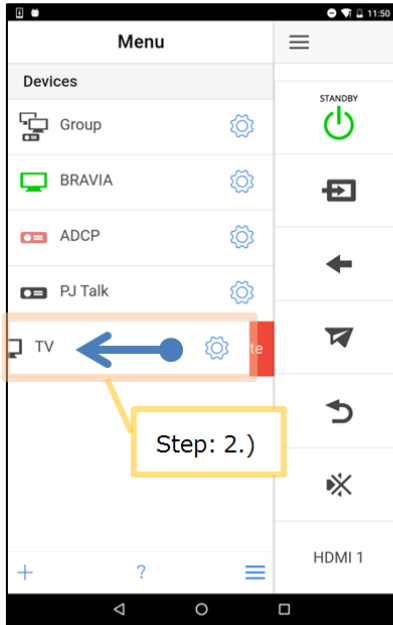



5.5. Turn On the TV Power With the Wake on LAN Function [BRAVIA Only]

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. On the device list of the Menu screen (side menu), tap the Settings button of the device you want to turn on with the Wake on LAN function.
3. Enter the IP of your operating device in the Edit Device dialog box.
4. Tap the Wake on LAN toggle button in the Edit Device dialog box to enable the function.
The operating device MAC address is displayed.
5. Tap the Close button on the top right of the Edit Device dialog box.
6. Tap the Power On button of the Remote screen and turn on the TV power.

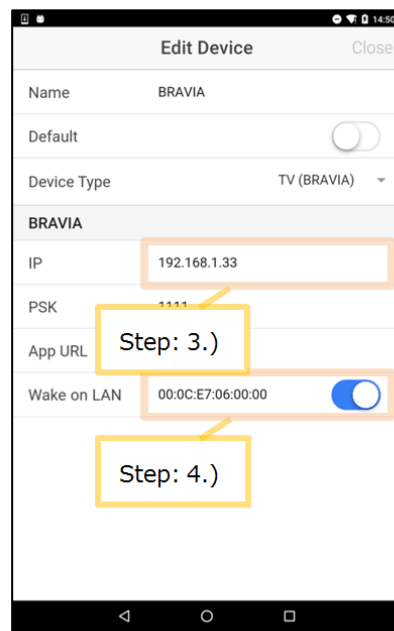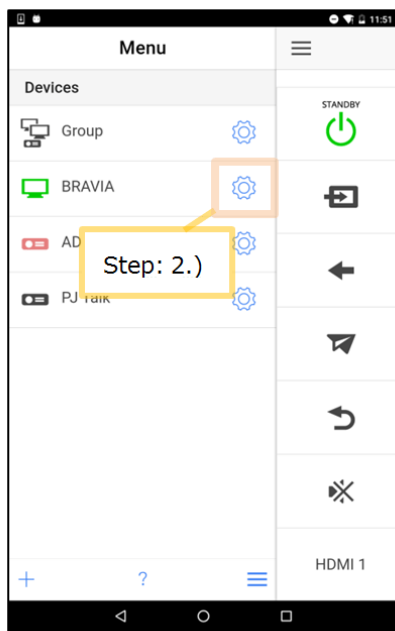



5.6. Designate an HTML App to Launch by the App Launcher Button [BRAVIA Only]

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. On the device list of the Menu screen (side menu), tap the Settings button of the device that you want to perform App Launcher button settings for.
3. In the App URL space of the Edit Device dialog box, set the HTML app URL that you want to launch with the App Launcher button.

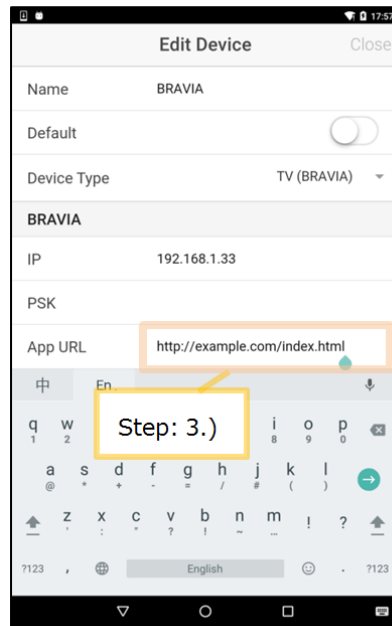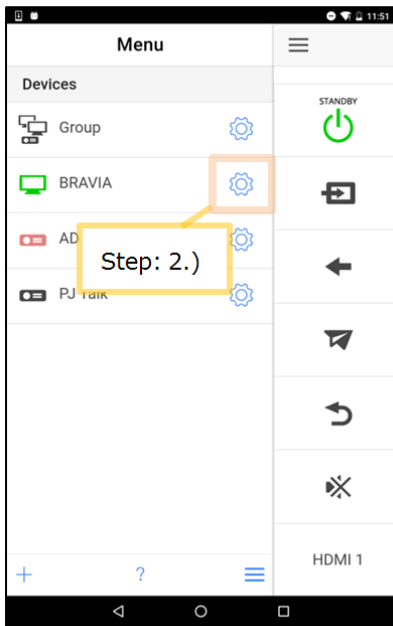



5.7. Designate a Device (BRAVIA/Projector) for When IP Remote App Launches

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. On the device list of the Menu screen (side menu), tap the Settings button of the device that you want to designate as the device for when IP Remote app launches.
3. Tap the Default toggle button in the Edit Device dialog box to enable the function.

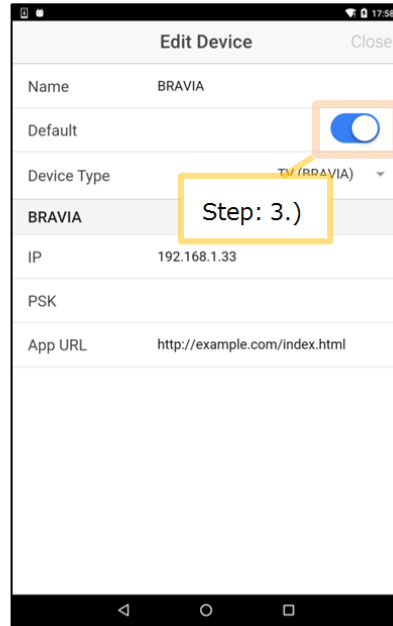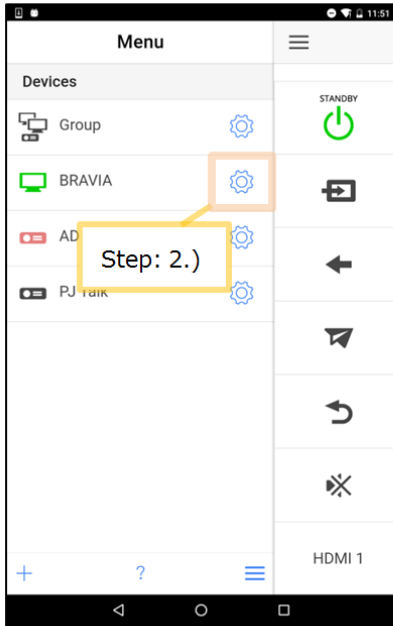



5.8. Change the Order of the Device List

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. Tap the Devices Reorder button on the Menu screen (side menu) to display the Reorder Item icon of each device in the device list.
3. Swipe the Reorder Item icons up and down to reorder the device list.
4. Tap the Devices Settings button to finish reordering.

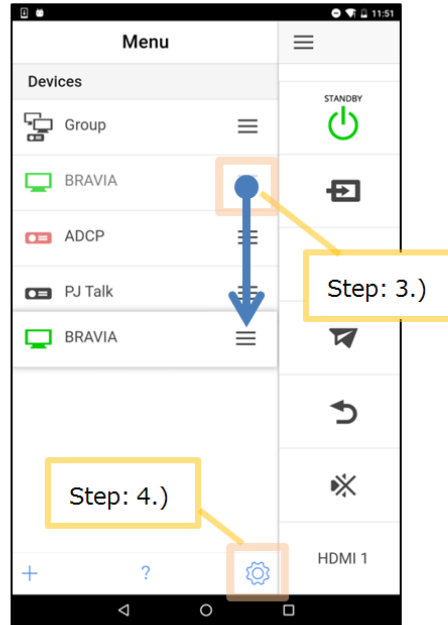
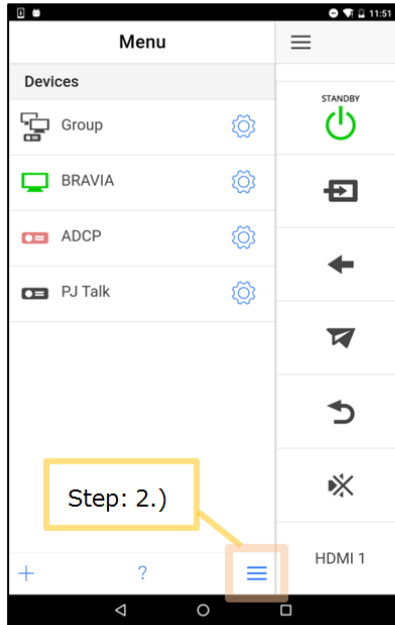


- Reordering explanation

  When moving a device down, it will be inserted below another device when it overlaps that device at least halfway.

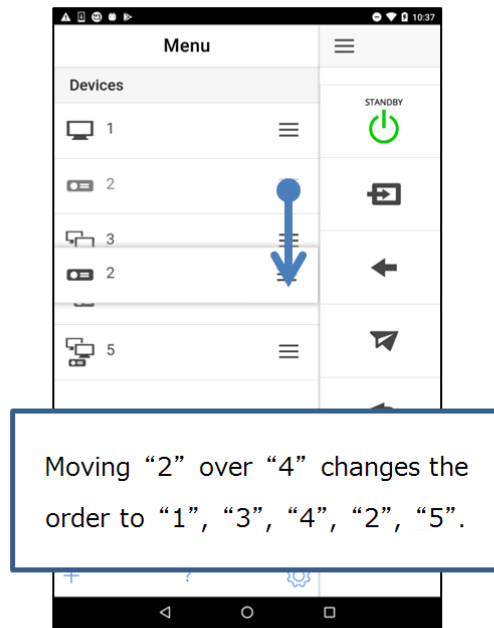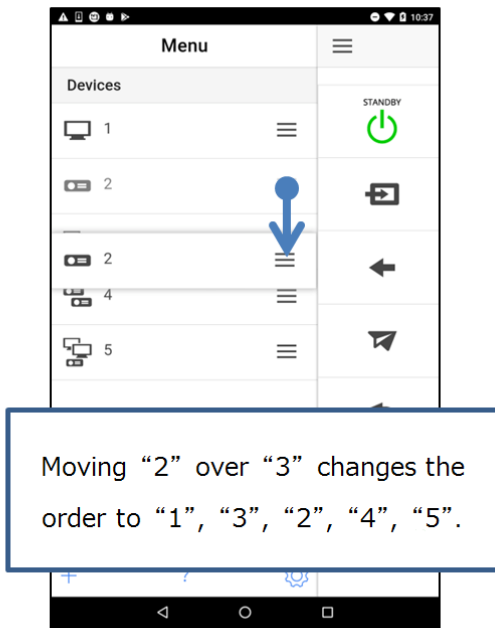

  When moving a device up, it will be inserted above another device when it overlaps that device at least halfway.

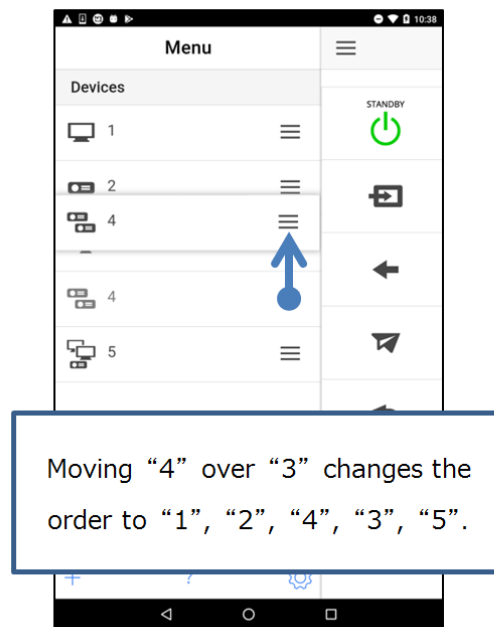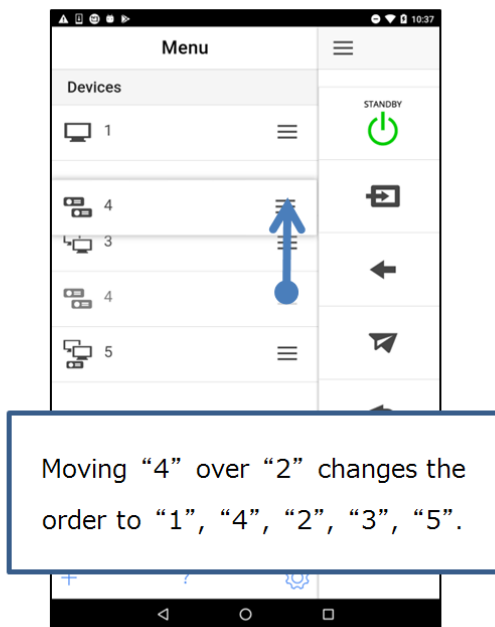

5.9. Operate BRAVIA

 
 
1. Display Remote screen - TV (BRAVIA) and tap the buttons.
Refer to the following for the function of each button.
 - [“4.3 Remote Screen - TV \(BRAVIA\)”](#)

5.10. Operate the Projector

1. Display Remote screen - PJ (ADCP) or Remote screen - PJ (SDCP) and tap the buttons.
Refer to the following for the function of each button.
 - [“4.4 Remote Screen - PJ \(ADCP\)”](#)
 - [“4.5 Remote Screen - PJ \(PJ Talk\)”](#)



5.11. Operate Multiple Devices (BRAVIA/Projector) Simultaneously

1. On the No Device Selected screen, tap the Add Device button.
Or on the Menu screen (side menu), tap the Add Device button.
2. This displays the Enter Device Name dialog box. Enter your preferred device's name (group name) and tap the OK button.
3. On the device list of the Menu screen (side menu), tap the Settings button of the device added.
4. Change the Device Type setting to Group in the Edit Device dialog box.
5. The Group Devices list will be displayed at the bottom of the screen. Tap the check boxes of the devices you want to include in your group and enable it.
6. Tap the Close button on the top right of the Edit Device dialog box.
7. Display Remote screen - Group and tap the button.
 - Refer to the following for the function of each button.
 - “5.6 Remote Screen - Group: TV (BRAVIA) Only”
 - “5.7 Remote Screen - Group: PJ (ADCP) Only”
 - “5.8 Remote Screen - Group: PJ (PJ Talk) Only”
 - “5.9 Remote Screen - Group: TV (BRAVIA) & PJ (ADCP)”
 - “5.10 Remote Screen - Group: TV (BRAVIA) & PJ (PJ Talk)”
 - “5.11 Remote Screen - Group: PJ (ADCP) & PJ (PJ Talk)”
 - “5.12 Remote Screen - Group: TV (BRAVIA) & PJ (ADCP) & PJ (PJ Talk)”

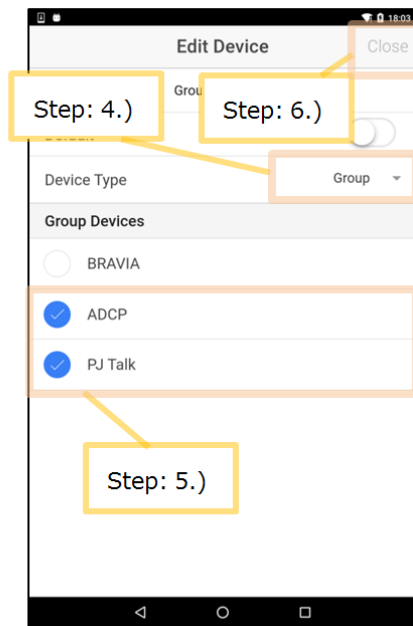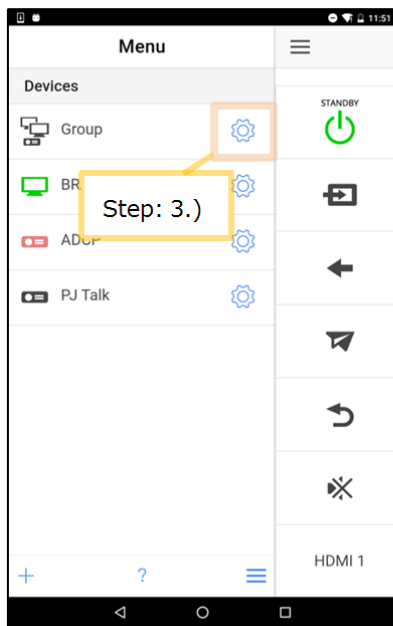



5.12. When Device Authorization is Enabled to Prevent Operation by Unspecified Users

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. On the device list of the Menu screen (side menu), tap the Settings button of the device that is set to prevent unspecified users from operating it.
3. Enter the PSK of your device in the Edit Device dialog box.
 - When Device Type is “TV (BRAVIA)”
Enter the pre-shared key value set by BRAVIA.
 - When Device Type is “PJ (ADCP)”
Enter the administrator password value set on the projector.

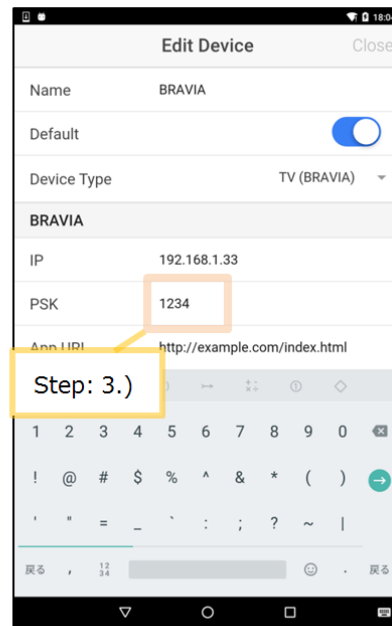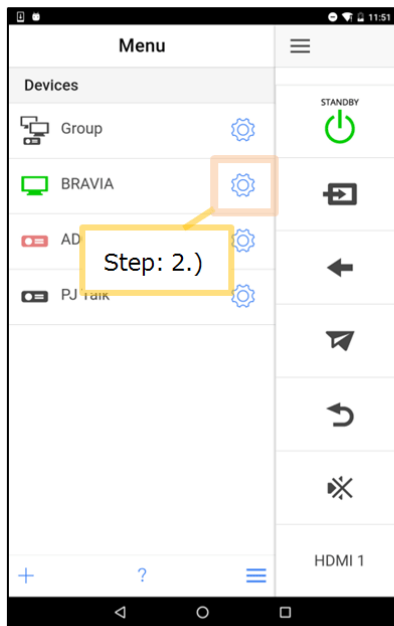


5.13. Display End User License Agreement

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. Tap the Option Menu button on the Menu screen (side menu) to display the Option Menu dialog box.
3. Tap the “End user license agreement” button in the Option dialog box to display the “End user license agreement” screen.

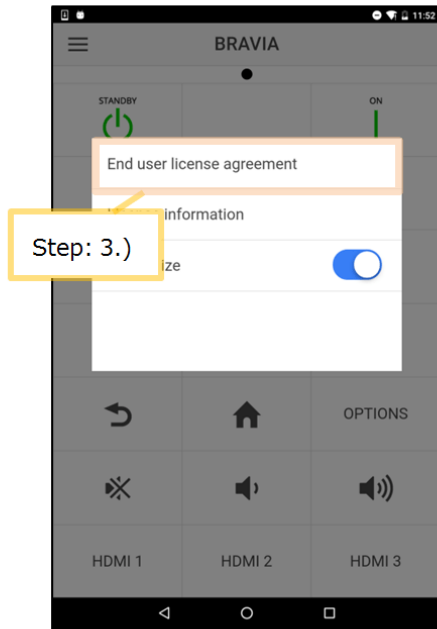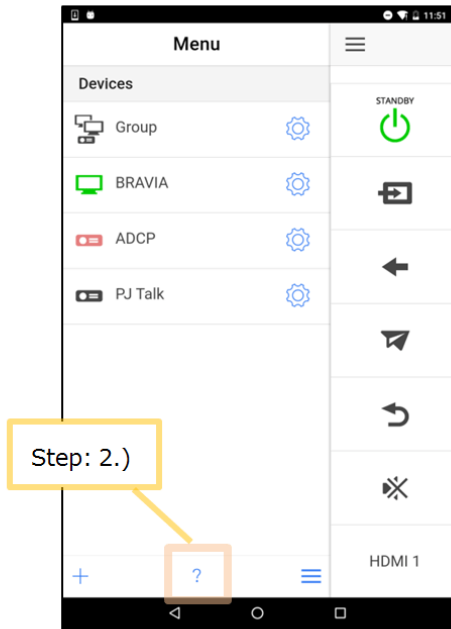



5.14. Display License Information

 1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. Tap the Option Menu button on the Menu screen (side menu) to display the Option Menu dialog box.
3. Tap the “License information” button in the Option dialog box to display the “License information” screen.

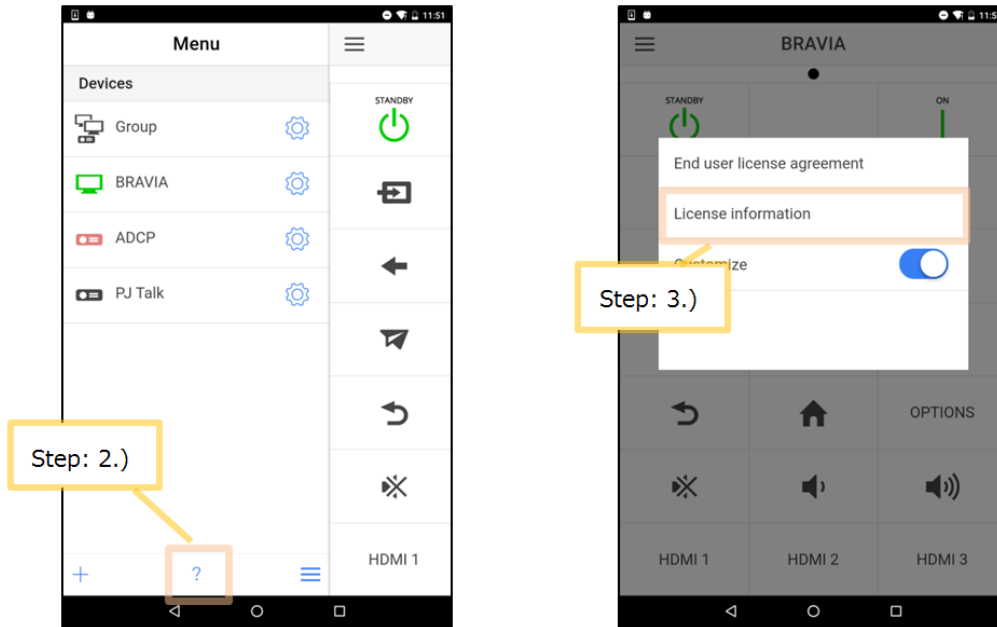

5.15. Disable the Customize Function

  1. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
2. Tap the Option Menu button on the Menu screen (side menu) to display the Option Menu dialog box.
3. Tap the Customize toggle button in the Option dialog box to disable the function.
4. Tap outside the Option dialog box to close it.
5. Tap the Side Menu button on the Remote screen to display the Menu screen (side menu).
Disabling the Customize function hides the icons for adding, deleting, setting, and reordering icons.

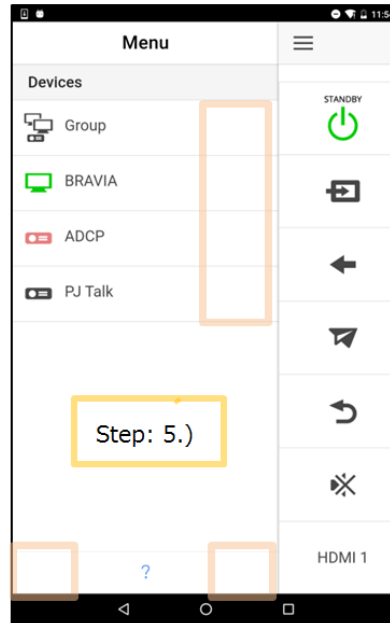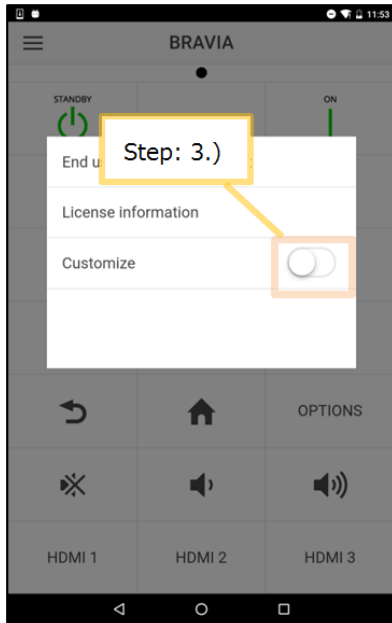

6. Troubleshooting

<Projector>

- **Sometimes, ADCP operation is not available for several moments**
 - Shorten the “Timeout” value in the ADCP service settings of the projector. This will shorten the amount of inoperable time.
- **Sometimes, PJ Talk operation is not available for several moments**
 - Shorten the “Timeout” value in the PJ Talk service settings of the projector. This will shorten the amount of inoperable time.

Change History

V1.2.0

- Whole document: Information on the following new functions added.
 - Wake on LAN function
- 5. How to Use
 - Reordering explanation added.

V1.1.1

- Whole document: Information on the following new functions added.
 - Power state display function
 - Button long press function
 - Customize function

V1.1.0

- Whole document: First edition.