

# User Manual

 
## Digital Calendar Clock

# CONTENT

1.Product Introduction	5
1)Main Feature	5
2)Product Illustration	5
2.Keys Function Introduction	7
1)Keys Illustration	7
2)Keys Functions	8
3.Battery Installation	9
4.Setting Time & Date	9
5.Change Display	11
6.Setting Alarm Clock	12
7.Snooze Function	13
8.Temperature Display	14
9.Other Operation	14
1)Key Sound	14
2)NOW	15

3)Alarm Ring Off	15
4)Caution	15
5)Disposal Advice	15
10.Trouble Shooting Guide	16
1) The numbers are not clear	17
2) The alarm clock didn't ring up at set time	17
3) How to set alarm clock	18
4) How to close alarm clock function	18
5) How to exit today's alarm clock ring	18
6) How to distinguish the clock is at the status of time display mode or it is at alarm clock mode	18
7) How to check my alarm clock time	19
8) How to correctly set time and date	19
9) What is the snooze time	19
10) How to change time display format	19
11) It only moves calendar, cannot set time	20

12) Cannot set time, not work	20
13) I move it to the calendar, it returns back to 2010 the default year	20
14) How to change to Fahrenheit Temperature display	21

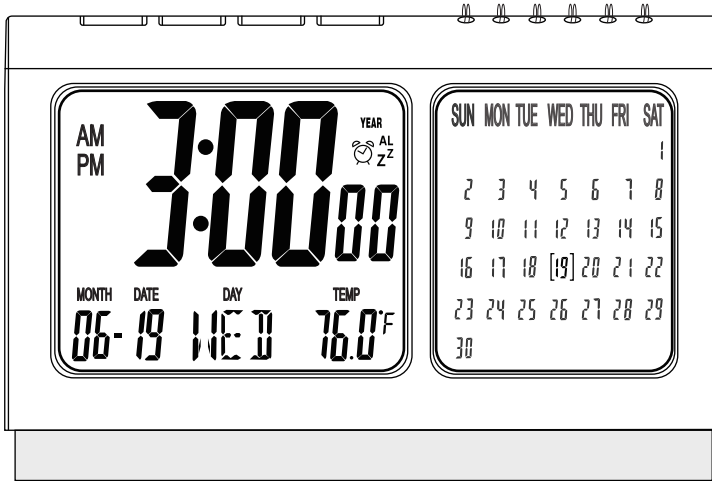

## User Manual

 
If there is any issue, don't be hesitated to contact us by [support@ronyworld.com](mailto:support@ronyworld.com)  
Or visit our website for more help <http://www.ronyworld.com>

# 1.Product Introduction

## 1)Main Feature

- 1.Display Time Range: from 1900-2099
- 2.Display Date: date, Month, Calendar, day
- 3.Time Format: 12/24 for option
- 4.Temperature:  $^{\circ}\text{C}$  /  $^{\circ}\text{F}$  for option
- 5.Key sound: each operation (press key), it will have key sound feedback


## 2)Product Illustration

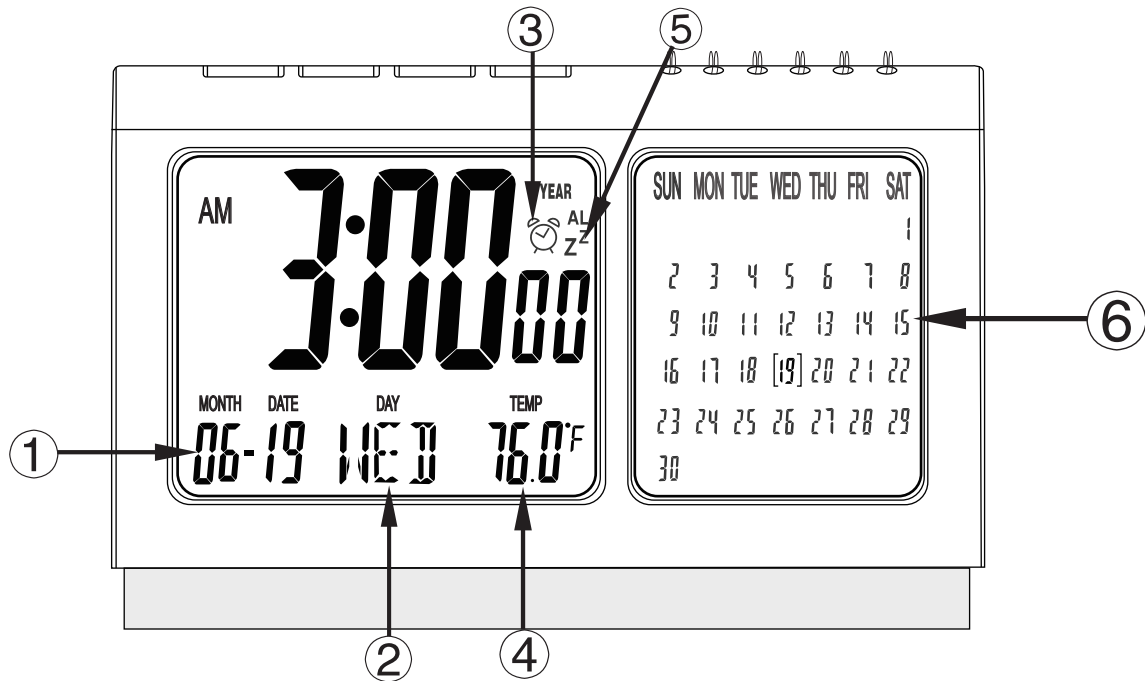

- ① Month & date    ② day    ③ Alarm    ④ Temperature    ⑤ Snooze    ⑥ Calendar

# 2.Keys Function Introduction
 
## 1)Keys Illustration

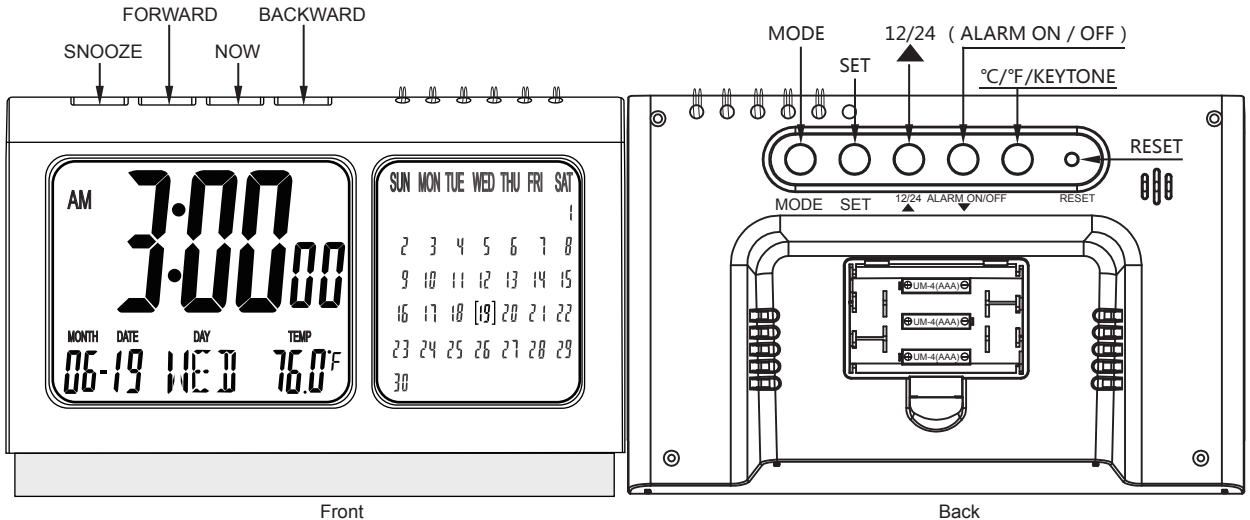



## 2)Keys Functions

1.[MODE]: switch between time mode and alarm mode

2.[SET]: Press and hold for enter into setting mode

3.[▲ / (12/24)]:

At time display mode, press ▲ to switch time format 12 / 24 hours display mode

At setting mode, press ▲ to increase the number of digit

4.[▼ / (ALARM ON / OFF) ]:

At time display mode, press ▼ to open alarm clock or close alarm clock

At setting mode, press ▼ decrease the number of digit

5. °C/°F: Change temperature display format / Press and hold it switch off /on the key sound

6. [◀]: Move the monthly calendar forward

7. [▶]: Move the monthly calendar backward

8. [NOW]: move the monthly calendar to the current month

9.[SNOOZE]:press to shut alarm sound off and enter into snooze mode

10.[RESET]: reset the calendar & clock to system default time

2017/1/1 12:00:00

### 3.Battery Installation

Open the battery compartment at the machine back side. Insert 3 pieces brand new AAA battery in correct way.

Then the screen will be on all numbers, and after you hear a long ticking sound, it will display system default time 2017/1/1 12:00:00

### 4.Setting Time & Date

1.Press MODE, switch to time display mode

2.Press & hold SET button, you will hear beep sound, and then the hour will blink

3.SET "HOUR":

press [ ▲ / (12/24)] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust hours

#### 4.SET “MINUTE”:

after you set “hours”, press SET again, the “minute” will blink, press [ ▲ / (12/24)] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust minutes

#### 5.SET “YEAR”:

after you set “minute”, press SET again, the “year” will blink (4 digit ), press [ ▲ / (12/24)] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust year

#### 6.SET “MONTH”:

after you set “year”, press SET again, the “month” will blink, press [ ▲ / (12/24)] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust month

#### 7.SET “DATE”:

after you set “month”, press SET again, the “date” will blink, press[ ▲ / (12/24)] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust date  
8.Press SET again, finish time and date setting

## 5.Change Display

### 1.Time Display Format

At the time display mode: [ ▲ ( / 12/24) ] it will switch the time display format between 12/24

### 2.Temperature Display Format

At the time display mode: press [ °C / °F ] button to switch temperature display between Celsius Degree and Fahrenheit Degree

### 3.Alarm ON/OFF Display

At the time display mode: Press the [ ▼ / (ALARM ON / OFF) ] button to switch ON/OFF alarm clock. When alarm clock is ON, it will display the alarm clock ICON on the screen

## 6. Setting Alarm Clock

1. Press MODE, switch to alarm clock display mode (alarm mode has a “AL” icon, and only display HOUR and MINUTE on screen)
2. Press & hold SET button, you will hear beep sound, and then the hour will blink
3. SET “HOUR”:  
Press [ ▲ / (12/24) ] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust Hour
4. SET “MINUTE”:  
after you set “hours”, press SET again, the “minute” will blink, Press [ ▲ / (12/24) ] or [ ▼ / (ALARM ON / OFF) ] button at the back side to adjust minutes
5. Press SET again, finish alarm clock setting

6. Press MODE, switch back to time display mode, check if there is an ALARM CLOCK icon displayed on the screen or not. If not, press [ ▼ / (ALARM ON / OFF) ] button at the back side to switch on ALARM, so your alarm clock will work at your set time

## 7. Snooze Function

Snooze:

When the alarm ring is ringing, press snooze button, the alarm ring will be off, it enter SNOOZE mode

Snooze could work 5 times, each time it will snooze 5 minutes, and alarm rings 1 minutes

During snooze mode, no operation, it will return to time display within 1 minutes

For example:

If set alarm clock at 8:01, and it rings. Now press **【SNOOZE】** button, it will not ring, enter the snooze mode. At 8:06, the alarm will ring again.  
Repeat 5 times

## 8. Temperature Display

Temperature display range from  $-9.9^{\circ}\text{C} \sim 50^{\circ}\text{C}$  ( $-49.8^{\circ}\text{F} \sim 122^{\circ}\text{F}$ )

When temperature under  $-9.9^{\circ}\text{C}$ , display “Lo  $^{\circ}\text{C}$ ”; above  $50^{\circ}\text{C}$ , display “Hi  $^{\circ}\text{C}$ ”

Accuracy:  $\pm 1^{\circ}\text{C}$  at  $10 \sim 40^{\circ}\text{C}$ ; other  $\pm 2^{\circ}\text{C}$

$^{\circ}\text{C}/^{\circ}\text{F}$ : press  $^{\circ}\text{C}/^{\circ}\text{F}$  change temperature display format

## 9. Other Operation

### 1. Key Sound

Press and hold  $^{\circ}\text{C}/^{\circ}\text{F}$  button, you will hear 2 beep sound, it will close the key

sound function. Vice versa, it will open the key sound function

## 2.NOW

Press the NOW button, it will display currently calendar

## 3.ALARM RING OFF

When the alarm clock is ringing, press any buttons except the SNOOZE button, it will close today's alarm ring

## 4.Caution

The product and battery is not a toy, should keep it away from children, be especially careful if children are around

Do not immerse the unit in water

Do not subject the unit to excessive force , shock, dust, high or low temperature or humidity environment which may result in malfunction, short electronic life span, damaged battery or distorted parts

## 5.Disposal Advice

When the operating life of this device and battery has ended, it must not



be disposed as domestic waste, but in accordance with national environmental guidelines. Please take it to special collection points as indicated by your local authorities

## 10. Trouble Shooting Guide

### 1) The numbers are not clear

If the clock display numbers are not clear, it means battery is low, please kindly replace it with 3 pieces brand new AAA battery

### 2) The alarm clock didn't ring up at set time

At the time display status, check whether there is an ALARM CLOCK icon displayed or not, if not press ALARM ON/OFF button at the clock back side to switch on alarm clock function, and then the alarm clock will ring up at set time

### 3) How to set alarm clock

For correctly set alarm clock, you need to press MODE button to enter

alarm clock mode. And then press and hold SET button till you hear a beep sound, the hour is blinking, now it is ready to set alarm clock time

#### 4)How to close alarm clock function

Press ALARM ON/OFF button close alarm clock function, when screen don't have the ALARM CLOCK icon, it means alarm clock function was closed

#### 5)How to exit today's alarm clock ring

Press any button except snooze button, you will exit today's alarm clock ring

#### 6)How to distinguish the clock is at the status of time display mode or it is at alarm clock mode

At the status of time display: screen will show seconds

At the status of alarm display: screen will show "AL" icon, and it only display HOUR, MINUTE

#### 7)How to check my alarm clock time

Press MODE button, switch to alarm clock mode, it will display the alarm clock time

#### 8)How to correctly set time and date

First, you must check it is displayed at time display or not ,If not, press MODE button, switch to time display

And the Press and hold SET button to enter time setting mode, you could set HOUR, MINUTE, YEAR,MONTH, DATE in sequence

#### 9)What is the snooze time

When alarm is ringing up, you could press snooze to sleep 5 minutes more; snooze works 5 times, each snooze is 5 minutes




#### 10)How to change time display format

Press 12/24 button, switch between 12/24 time format display

#### 11)It only moves calendar, cannot set time

The set time button was at the back side of the clock; please refer to




Setting Time & Date chapter to set time

   This 3 buttons are only calendar move in monthly, it doesn't perform any time set function

12) Cannot set time, not work

please refer to Setting Time & Date chapter to set time, enter time display mode correctly and use [ ▲ / (12/24) ] or [ ▼ / (ALARM ON / OFF) ] button for time adjust

13) I move it to the calendar, it returns back to 2010 the default year

   This 3 buttons are only calendar move in monthly, it doesn't perform any time setting function

Because the default time is 2017/1/1 12:00:00, if you didn't set time, it will return back to 2017

14) How to change to Fahrenheit Temperature display

Press  $^{\circ}\text{C} / ^{\circ}\text{F}$  change temperature display format