



User's manual

1040

**4-Line small business
system with
speakerphone**



Congratulations

on purchasing your
new AT&T product.

Before using this AT&T product, please read the **Important product information** on pages 50-51 of this user's manual.

Please thoroughly read the user's manual for all the feature operation and troubleshooting information you need to install and operate your new AT&T product. You can also visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.

A large black octagonal sign with a thick black border and the word "STOP!" in bold, black, sans-serif capital letters in the center. The sign is centered on a horizontal grey bar that spans the width of the page.

STOP!

Do you receive DSL, (Digital subscriber line,) service for high-speed internet access through your telephone line(s) from your telephone company? If so, you will need to add either DSL splitters and/or microfilters to your installation. See page 9 of the installation guide.

For customer service or product information, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.



CAUTION: To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully:

- Use only alkaline 9V batteries (size 1604A, purchased separately).
- Do not dispose of the battery in a fire. Like other batteries of this type, it could explode if burned. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit. Do not allow conductive materials such as rings, bracelets, or keys to touch the battery. The battery or conductor may overheat and cause harm.
- Use the battery identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Observe proper polarity orientation between the battery and metallic contacts.
- Do not disassemble your telephone. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.

1040

4-Line small business system with speakerphone



Table of contents

Getting started

| | |
|-------------------------------|---|
| Introduction..... | 1 |
| Telephone Overview | 2 |
| Display screen messages..... | 4 |
| LCD CONTRAST..... | 4 |
| Indicator lights & tones..... | 6 |
| Indicator lights..... | 6 |
| Alert tones..... | 7 |
| Directory card..... | 8 |

Telephone operation

| | |
|---|----|
| Basic phone operation | 9 |
| Lit line indicators..... | 9 |
| Making and answering calls..... | 9 |
| Switching among handset, speakerphone and headset mode..... | 12 |
| Timer..... | 12 |
| Volume control..... | 13 |
| RINGER ON/OFF..... | 14 |
| RINGER TYPE..... | 14 |
| DO NOT DISTURB..... | 15 |
| Last number redial..... | 16 |
| Redial stack..... | 17 |
| Auto-redial..... | 18 |
| Call waiting..... | 19 |
| MUTE..... | 19 |
| Temporary tone dialing..... | 19 |
| HOLD..... | 20 |
| Switching between lines..... | 21 |
| Call privacy..... | 21 |
| Conference calls..... | 22 |
| Call transfer..... | 23 |
| Transfer a call..... | 23 |
| Blind transfer..... | 23 |
| Transfer a call and speak to the receiving party..... | 24 |
| Answer a transferred call..... | 24 |

Intercom operation

| | |
|---|----|
| Intercom overview | 25 |
| Intercom | 26 |
| Make an intercom call with the handset..... | 26 |
| Make an intercom call with the speakerphone or headset..... | 27 |
| Answer an intercom call..... | 28 |
| End an intercom or page call..... | 28 |
| Voice page..... | 29 |
| Page a specific extension (single-phone page)..... | 29 |
| Answer a single-phone page..... | 30 |
| Page all (system-wide page)..... | 31 |
| Answer a system-wide page..... | 32 |
| Room monitor | 33 |
| Make an intercom conference call | 33 |

One-touch setup and operation

| | |
|--|----|
| One-touch overview | 34 |
| One touch..... | 35 |
| PREFERENCE | 35 |
| One-touch storage | 36 |
| To dial a one-touch number | 38 |
| To view or delete a one-touch number | 39 |
| To view a one-touch number | 39 |
| To delete a one-touch number..... | 39 |
| To modify a one-touch number | 40 |

Using a 1080 mailbox

| | |
|---|----|
| Forwarding to DTAD mailbox..... | 42 |
| About forwarding to DTAD..... | 42 |
| To setup call forwarding..... | 43 |
| To turn call forwarding on | 43 |
| To set call forwarding delay time..... | 43 |
| Listening to messages - internal access | 44 |

| | |
|-----------------------------------|----|
| Appendix A, Glossary | 45 |
|-----------------------------------|----|

| | |
|------------------------------------|----|
| Appendix B, Time/date | 46 |
|------------------------------------|----|

| | |
|--|----|
| Appendix C, Centrex operation | 47 |
| Set ring delay duration | 47 |
| Answer a delayed ring | 47 |
| Pick up another station's line..... | 47 |
| Centrex service call example | 48 |

| | |
|---|----|
| Appendix D , General product care | 49 |
| Appendix E , Important product information | 50 |
| Safety information | 50 |
| Especially about corded telephones | 51 |
| Especially about telephone answering systems..... | 51 |
| Appendix F , FCC and ACTA information..... | 52 |
| Appendix G , Part 15 of FCC rules..... | 54 |
| Appendix H , Limited warranty..... | 55 |
| Appendix I , Technical specification..... | 58 |
| Appendix J , In case of difficulty..... | 59 |
| Index | 66 |

Introduction

This AT&T Small Business System is expandable to a 16-extension telephone system. The 1040 telephone is compatible with 1070 and 1080 telephones. For details, see the **Installation Guide**. This system is not compatible with any other AT&T 4-line small business telephones, except for the 1070 and 1080 telephones.

The 1040 telephone is hearing-aid compatible and can be connected to up to four incoming telephone lines. This telephone features a speakerphone for handsfree use and a headset jack compatible with most two-band 2.5mm headsets (sold separately). There are two additional ports, known as AUX jacks or data ports, available for connecting the telephone to another device such as a fax machine or modem.

The 1040 allows paging, intercom and call transfers between system telephones and is capable of connecting three parties in the same conference call.

This telephone also features a 32-number one- and two-touch memory for faster dialing.

If there is a 1080 telephone in your system that is an auto attendant, it may record messages for your set.


The 1040 telephone is compatible with Centrex service. Centrex is a special subscriber service which may be available from your local telephone company for a fee. If you subscribe to Centrex service, refer to the **Centrex operation** section (page 47).

This user's manual contains detailed instructions for using your AT&T Small Business System 1040 telephone. Please read this manual before using this 1040 telephone.

Telephone overview

LINE BUTTONS, 1-4

Press to make or answer a call on the desired line (page 9).
While on a call, press to release the call privacy feature (page 21).

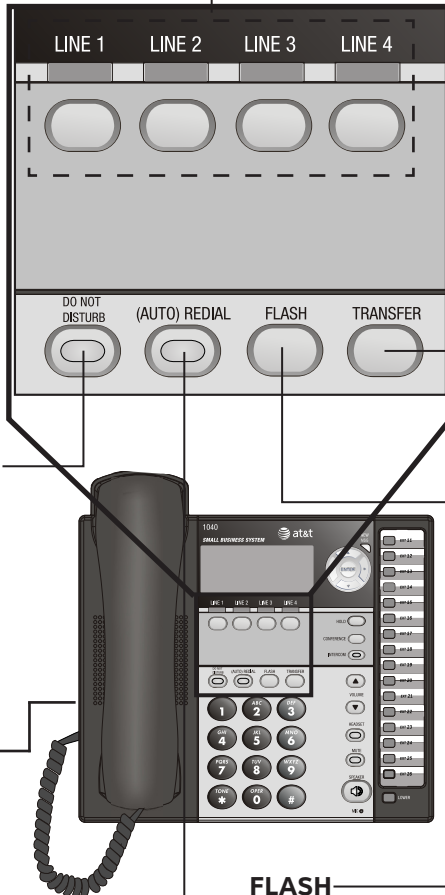

DO NOT DISTURB

Press twice to activate the Do Not Disturb feature (page 15).
Press again to resume normal use (page 15).

HEADSET JACK

(Beneath the small rubber flap,) for 2.5mm headset.

(AUTO) REDIAL

Press to view the redial stack (page 18).
Press again to quit.

TRANSFER

Press to transfer an outside call to another 1040, or a 1070, or a 1080 (page 23).

FLASH

During a call, press to receive an incoming call if call waiting service is activated (page 19).

Telephone overview

Navigation keys
Press to scroll up, down, left or right while in the menu.

ENTER
Press until you see the main menu. Once in the menu, press to select an item or save an entry or setting.
Press and hold to exit the menu.

HOLD
Press to place an outside call on hold (page 20).

CONFERENCE
Press to create a three-way conversation (page 22).

INTERCOM
Press to intercom or page another extension (pages 25-33).

SPEAKER
Press to turn on the speakerphone. Press again to turn off (page 10).


One-touch keys
Press to make an intercom call (page 26) or a one-touch outside call (page 38).

VOLUME
While the telephone is not in use, press to adjust ringer volume (page 13).
During a call, press to adjust listening volume (page 13).


HEADSET
Press to turn on the headset (page 11).

MUTE
Press so that the other party cannot hear you.
Press again to resume the conversation (page 19).

LOWER
Press to dial a telephone number stored in the lower location of a one-touch key (page 38).

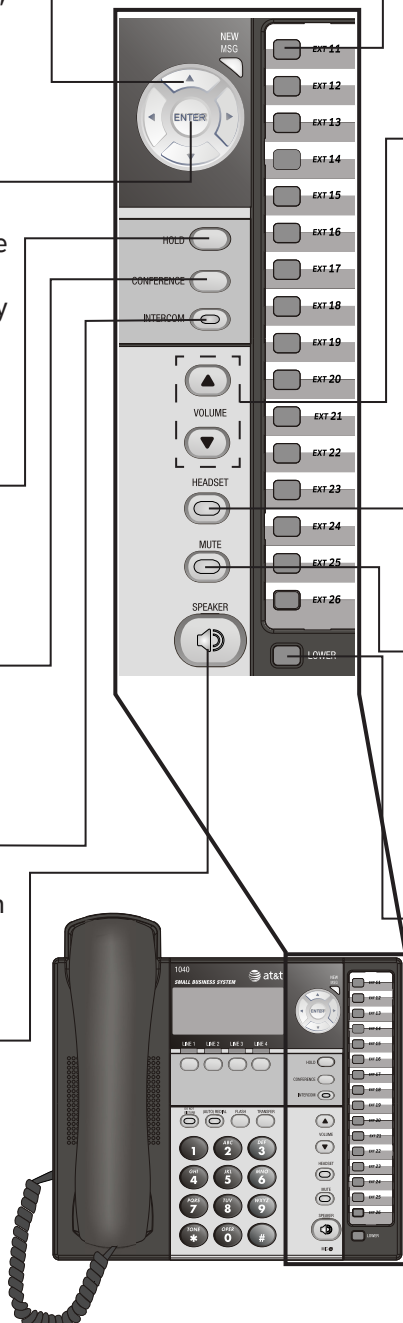

Display screen messages

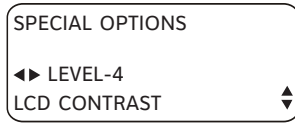

LCD CONTRAST

Your set's display provides important information. You can adjust the screen contrast to one of eight levels to optimize readability in different lighting conditions.

1. Press [**ENTER**].
2. Press [**▲**] or [**▼**] until you see **SPECIAL OPTIONS**. Press [**ENTER**].
3. Press [**▲**] or [**▼**] until you see **LCD CONTRAST**.
4. Press [**◀**] or [**▶**] to select the screen contrast level (1-8).
5. To move to the next feature, press [**▼**].

-OR-

To exit setup, press and hold [**ENTER**].

AC FAIL

There is no AC power to the set. If a good battery is installed, basic phone operation is supported, (such as making and answering calls on the handset.) Speakerphone, headset and call privacy are not supported. The handset volume will be at the minimum level and only the two lowest levels will be available for the ringer volume.

DND

The Do Not Disturb mode is on.

DTAD: XX/YY

Flashes when the mailboxes of the DTAD mailbox 1080 telephone are full or when the auto attendant of the DTAD mailbox 1080 telephone is off. (XX is the total number of new system extension messages recorded for this 1040 telephone. YY is the total number of all system extension messages recorded for this 1040 telephone.)

(EMPTY)

The one-touch location is empty.

EXT XX RING

There is an incoming Centrex call.

continued on next page


Display screen messages

continued from previous page

| | |
|-------------------------------------|---|
| INITIALIZING. . | The telephone is warming up. |
| INTERCOM FROM XX | Another system telephone XX is calling (XX is the extension number). |
| (LIST EMPTY) | The redial memory is empty. |
| LOW BATT | There is no spare battery in the telephone or the battery power is low. |
| LOWER | The [LOWER] key is pressed for the lower section of a one-touch key. |
| PAGE FROM XX | The telephone is on a single page call with another system telephone XX (XX is the extension number). |
| PAGE ALL FROM XX [ENTER]: ANSWER | The telephone is on a system-wide page call with another system telephone XX (XX is the extension number). |
| SAVED ! | The entry was saved to the one-touch location successfully. |
| TRANSFER FROM XX | There is an incoming call transferred from another system telephone XX (XX is the extension number) or the auto attendant system. |

Indicator lights & tones

Indicator lights

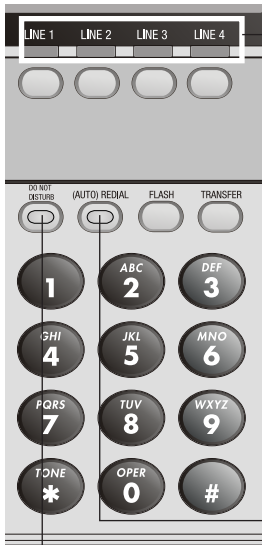

LINE

Green:

- On when the line is in use.
- Flashing slowly when the line is on hold.
- Flashes quickly when a person has transferred a call on that line.
- Flashes quickly when there is an incoming auto attendant transferred call on the line.
- Flashes rapidly when there is an incoming call.

Red:

- On when another telephone in the system is using the line.
- Flashes slowly when the line is on hold by another telephone in the system.

(AUTO) REDIAL

When auto-redial is active:

- Flashes when the telephone is dialing the desired number.
- On between dialing attempts.


DO NOT DISTURB

- On when the **Do Not Disturb** function is on.

continued on next page

Indicator lights & tones

continued from previous page

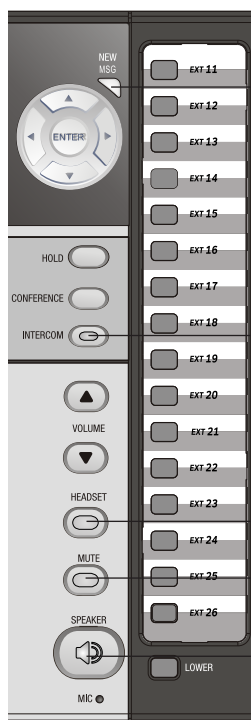

NEW MSG

- Flashes when there are new system extension messages. The screen will display "DTAD: XX/YY", with "XX" greater than zero."

INTERCOM

- On when the telephone is on an intercom call or a paged call.
- On when the system is busy and the intercom is unavailable.
- Flashes during an incoming intercom call's ringing.

HEADSET

- On when the headset is in use.
- Flashes when there is an auto-redial call with the headset.

MUTE

- On when the microphone is muted.

▶ SPEAKER

- On when the speakerphone is in use.
- Flashes when there is an auto-redial call with the speakerphone.

Alert tones

Confirmation tone

Programming command completed successfully.

One double-beep every 30 seconds

When the hold reminder feature is on and there is a line on hold.


A triple-beep

During volume adjustment, the volume level is at the maximum or minimum.

Directory card

To write names and/or phone numbers on the directory card, follow the steps below:

1. Remove the clear plastic cover by inserting a small item such as paperclip into the hole on the lower right corner.
2. Pull out the directory card.
3. Write the information on the directory card.
4. Replace the directory card and then the plastic cover.

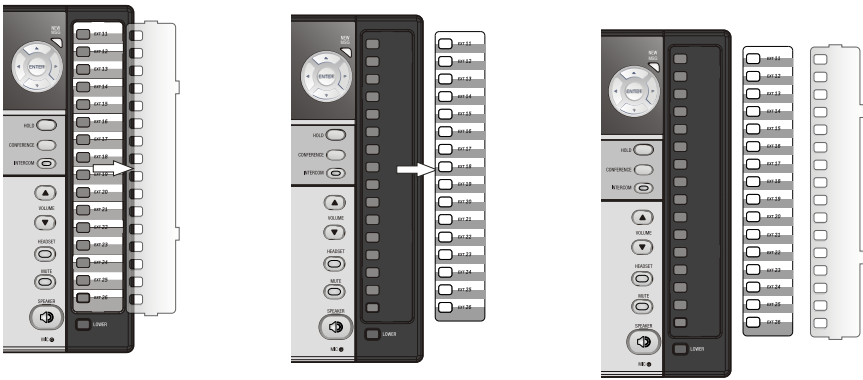

NOTE: There is a replacement directory card in the telephone package. You can use it to replace the current one on the telephone if necessary.

Basic phone operation



This phone comes programmed to use line 1 (default prime line) for calls if you do not press a line button. (To change the prime line, see **PRIME LINE** on page 39 of the installation guide.) When you answer a call, the phone automatically selects the ringing line.

Lit line indicators

The four indicators above the [**LINE**] keys will indicate the state of the corresponding phone line.

The four **LINE** lights have two colors:

- Green is for outside calls.
 - a. On when the line is in use on this phone.
 - b. Flashes slowly when the line is on hold.
 - c. Flashes rapidly when there is a transferred call on the line.
 - d. Flashes quickly when there is an incoming auto attendant transferred call on the line.
 - e. Flashes rapidly when there is an incoming call on that line.
- Red is for the state of the phone system.
 - a. On when another phone is using the line.
 - b. Flashes slowly when the line is held by another phone on the same system.

Making and answering calls

This phone will automatically make and answer calls in the mode (speakerphone or headset) you programmed (see **AUTOMATIC MODE** on page 39 of the installation guide). Follow the direction on the next page to choose a mode manually. If the phone is in use on one line, any other calls made or answered will use the same mode already in use.

continued on next page

Basic phone operation

continued from previous page




Handset

- To make a call:
 1. Lift the handset.
 2. Dial a number.
- To override automatic line selection, press the **LINE** button for the line you wish to select, then lift the handset.
- To answer a call, lift the handset.
- To hang up, place the handset on the base.

Speakerphone

- To make a call:
 1. Press and release the desired **LINE** button or [**▶ SPEAKER**]. The **▶ SPEAKER** light goes on.
 2. Wait for a dial tone, then dial the number.
- To answer a call, press [**▶ SPEAKER**] or press the **LINE** button of the incoming call.
- To end the call, press [**▶ SPEAKER**].

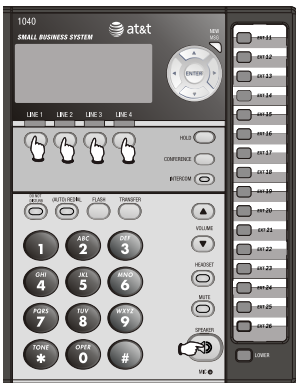

NOTES:

- If **SPEAKERPHONE** is selected in the **AUTOMATIC MODE** menu (page 39 of the installation guide), pressing any line key will select the line and activate the speakerphone. If **HEADSET** is selected in the **AUTOMATIC MODE** menu and a headset is connected, pressing any **LINE** key will select the line and activate the headset.
- If **HEADSET** is programmed as the default mode, you must press [**▶ SPEAKER**] to activate the speakerphone.

continued on next page

Basic phone operation

continued from previous page



Headset (purchased separately)

You can use this phone hands-free when you install any industry-standard two-band 2.5mm headset or other compatible, electronically isolated headset (see page 17 of the installation guide). The headsets must be purchased separately.

- To make a call:
 1. Press [**HEADSET**] (if a headset is connected to the telephone base).
 2. Wait for a dial tone, then dial the number.
- To answer a call, press [**HEADSET**].
- To hang up, press [**HEADSET**].

Make sure the headset is plugged into the **HEADSET** jack. You will hear a triple-beep if you press [**HEADSET**] when the headset is not plugged in.

i NOTE: If **SPEAKERPHONE** is selected in the **AUTOMATIC MODE** menu (page 39 of the installation guide), pressing any line key will select the line and activate the speakerphone. If **HEADSET** is selected in the **AUTOMATIC MODE** menu and a headset is connected, pressing any [**LINE**] key will select the line and activate the headset.

Basic phone operation

Switching among handset, speakerphone and headset mode



To switch from handset to headset or speakerphone, press [**HEADSET**] or [**SPEAKER**], then replace the handset. (In order to use the headset, it must be plugged in.)

To switch from speakerphone to handset, lift the handset. (Do not press [**SPEAKER**] or the call will be disconnected.)

To switch from speakerphone to headset, insert the headset plug into the jack on the side of the telephone base, and press [**HEADSET**].

To switch from headset to handset when the handset is in the telephone base, lift the handset.

To switch from headset to handset when the handset is off-hook, press [**HEADSET**] again.

To switch from headset to speakerphone, press [**SPEAKER**].

To override automatic line selection, press and release a line button. This activates the speakerphone or headset, whichever is programmed as the default mode.

Timer


10:01AM 11/23
00:30
5550100■

When you make or answer a call, the timer automatically starts. The screen displays the elapsed time in minutes and seconds for the first hour (up to 59:59) and then begins again. The timer stops automatically when you hang up and the recorded time is displayed for about 10 seconds. The timer also stops when you place a call on hold and resets to 00:00 when you release the hold.

Basic phone operation

Volume control

The volume keys control the level of the incoming voice as well as the ringer volume.

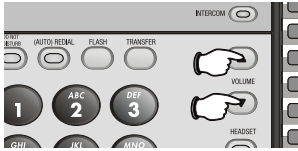

Handset/speakerphone/headset volume

- While using the handset, press [**▲VOLUME**] to adjust the listening volume (1-5).
- While using the speakerphone, press [**▲VOLUME**] to adjust the listening volume (1-8).
- While using the headset, press [**▲VOLUME**] to adjust the listening volume (1-5).

While using the volume control, you will hear a triple-beep when you reach the minimum or maximum level.

Your 1040 remembers the volume setting for each mode.

Ringer volume

- When the telephone is idle, press [**▲ VOLUME**] to sample and select the desired volume (1-4) for all ringers. When changing the volume, the new setting is saved.
- While the phone is ringing, press [**▲VOLUME**] to adjust the ringer volume (1-4). As you adjust the ringer, you will hear the change in volume.

i NOTE: You can turn the external ringer off separately for each line (page 14).

Basic phone operation

RINGER ON/OFF

RINGER ON/OFF

◀▶ ON

L1 RINGER



This feature controls whether there is an audible alert for outside calls on the designated line.

1. Press **[ENTER]**.
2. Press **[▲]** or **[▼]** until you see **PHONE SETTINGS**. Press **[ENTER]**.
3. Press **[▲]** or **[▼]** until you see **RINGER ON/OFF**. Press **[ENTER]**.
4. Press **[▲]** or **[▼]** to select the desired line (**L1 RINGER**, **L2 RINGER**, **L3 RINGER** or **L4 RINGER**).
5. Press **[◀]** or **[▶]** to turn the ringer **ON** or **OFF**. **ON** is the default setting.
6. To move to the next line, press **[▼]**.

-OR-

To exit setup, press and hold **[ENTER]**.

RINGER TYPE

RINGER TYPE

◀▶ TYPE 1

L1 RINGER TYPE



Use this feature to choose one of the four ringer types for incoming calls. You can choose different ringer types for the different lines so you can easily identify which line is ringing.


1. Press **[ENTER]**.
2. Press **[▲]** or **[▼]** until you see **PHONE SETTINGS**. Press **[ENTER]**.
3. Press **[▲]** or **[▼]** until you see **RINGER TYPE**. Press **[ENTER]**.
4. Press **[▲]** or **[▼]** to highlight the desired line (**L1 RINGER TYPE**, **L2 RINGER TYPE**, **L3 RINGER TYPE** or **L4 RINGER TYPE**).
5. Press **[◀]** or **[▶]** to highlight the desired ringer type (**TYPE 1**, **TYPE 2**, **TYPE 3** or **TYPE 4**).
6. To move to the next line, press **[▼]**.

-OR-

To exit setup, press and hold **[ENTER]**.

Basic phone operation

DO NOT DISTURB

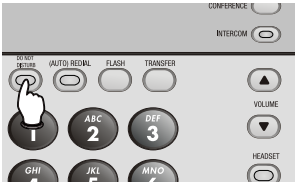

When you activate the do not disturb (**DND**) function, you will not hear paging tones, voice paging, or incoming call rings.


Instead, the **LINE** light flashes to signal an incoming call. If you receive an intercom call, the **[INTERCOM]** light flashes, and the number of the incoming intercom call appears on the display.

1. Press **[DO NOT DISTURB]** twice to prevent interruptions. The **DO NOT DISTURB** light goes on and the screen includes **DND**.
2. Press **[DO NOT DISTURB]** again to resume normal call alerts. The **DO NOT DISTURB** light goes off and the screen no longer shows **DND**.

Callers will hear very long beeps, the same tone as if the system phone is ringing normally.

Basic phone operation

Last number redial

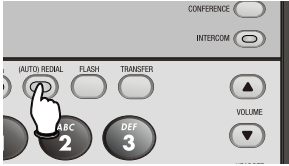


The last number dialed from this extension (up to 32 digits) is stored in the redial memory until you dial another number. Press **[(AUTO) REDIAL]** you will see the most recently dialed number (up to 32 digits).

- You must go off hook (lift the handset or press a **[LINE]** button or press **[SPEAKER]** or **[HEADSET]**) before you press **[(AUTO) REDIAL]**. If you press **[(AUTO) REDIAL]** without going off hook, the screen displays the redial memory stack. (See **Redial stack** on page 17.)
- You will experience a one-second delay before the call is dialed when using the redial feature. This is normal.

See **Redial stack** on the next page to learn how to delete redial numbers and store them into memory locations.

Basic phone operation

Redial stack

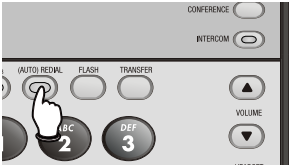

NOTE: If the desired redial number is longer than 16 digits, the screen will only display the first 14 digits.

The last six numbers dialed from this extension are automatically stored in the redial memory stack. You can review the numbers in the redial memory and dial one if you wish.

1. When the phone is idle, press **[(AUTO) REDIAL]**.
2. Press **[▲]** or **[▼]** to scroll through the last six numbers dialed at this extension.
3. When the desired number is displayed, press **[ENTER]** twice to dial the call.

NOTE: While reviewing the numbers in the redial stack, if you want to place a new call other than the displayed number, you need to press and hold **[ENTER]** or wait for 30 seconds to return to idle.

- **To delete a redial number:**

1. While the redial number is displayed, press **[ENTER]**.
2. Press **[▲]** or **[▼]** to highlight **REMOVE**.
3. Press **[ENTER]** to delete the number. Once deleted, the entry cannot be retrieved.

- **To store a redial number in a one-touch key:**

1. While the number is displayed, press **[ENTER]**.
2. Press **[▲]** or **[▼]** until you see **COPY TO 1-TOUCH**. Press **[ENTER]**.
3. Press a one-touch key or press **[LOWER]**, then a one-touch key (page 36).

- **To exit**, press **[(AUTO) REDIAL]**.

Basic phone operation

Auto-redial

This phone can automatically redial a number up to ten times. When the phone automatically redials the number, if the prime line is available, it uses it to dial the call.

1. Follow the instructions under **Redial stack** (page 17) to find the number you want to call.
2. Press a **[LINE]** button.

-OR-

Press **[ENTER]**. Scroll to **AUTO REDIAL** and then press **[ENTER]** again.

3. The telephone will activate the speakerphone or headset (depending on the **AUTOMATIC MODE** you set, page 39 of the installation guide) to call the desired number automatically. The **[(AUTO) REDIAL]** light will flash.
4. When the other party answers, you will need to take an action to speak with the other party and stop the auto-redial attempts. Lift the handset.

-OR-


Press **[SPEAKER]**.

-OR-

Press **[HEADSET]** if the headset is connected to speak with the other party.

While auto-redial is active:

- The telephone will activate the speakerphone or headset (depending on the **AUTOMATIC MODE** you set, page 39 of the installation guide) and call the desired number automatically. The **[(AUTO) REDIAL]** light will flash.
- After a call is placed, if the line is busy, you will hear a busy tone for approximately 9 seconds before the set hangs up. Thirty seconds later, the call will be redialed. The **[(AUTO) REDIAL]** light will remain on during that 30-second waiting time.
- This process will be repeated up to 10 times or until the called number is no longer busy. If the line is still busy after 10 attempts, no more attempts will be made.
- If the line is not busy two times in a row, no more attempts will be made.
- If you want to turn off the auto-redial feature during the 30-second waiting time, press **[(AUTO) REDIAL]**.

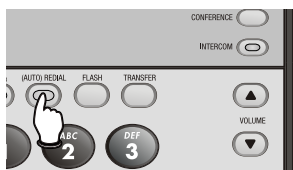

i NOTES:


- While reviewing the numbers in the redial stack, if you want to place a new call other than the displayed number, you need to press **[(AUTO) REDIAL]** to exit the redial list.
- If the prime line is in used, the phone will automatically select another idle line to dial the call. Once the auto-redial is active, the phone always uses the line you originally used to dial the call.
- Once the other person answers, you must lift the handset, or press **[SPEAKER]** or **[HEADSET]** if you want to stay in the call, otherwise, the line will hang up and redial again.

Basic phone operation

Call waiting

If you subscribe to call waiting service with your local telephone company, there will be a beep if there is an incoming call when you are already on a call on the same line.

1. Press **[FLASH]** to put your current call on hold and take the new call.
2. Press **[FLASH]** anytime to switch back and forth between calls.

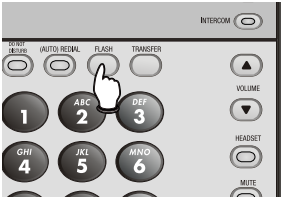

MUTE

During a telephone conversation, press **[MUTE]** to silence the microphone. You will be able to hear the other party, but the other party will not be able to hear you until you press **[MUTE]** again and resume speaking. Mute is automatically cancelled when you end a call.

When mute is active, the **MUTE** light will be on.

i NOTE: Switching from handset to speakerphone or headset, or from speakerphone or headset to handset, changing lines, or putting a call on hold also cancel the mute function.



Temporary tone dialing


If you have dial pulse (rotary) service only, you can temporarily switch dial pulse to touch-tone dialing during a call by pressing **[*TONE]**.

1. Dial the number.
2. Press and release **[*TONE]**. Buttons pressed after this send touch-tone signals.
3. After you hang up, the phone automatically returns to pulse dial mode.



Basic phone operation

HOLD

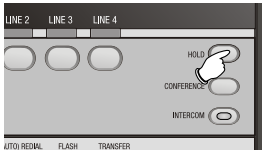

You can use the hold feature to hold one line while accessing another, or as part of the conference and call transfer features.

While on a call, press and release **[HOLD]**. The **LINE** light for the line on hold flashes slowly in green, and a double-beep sounds every 30 seconds to remind you that the call is on hold. (To turn off the reminder beep, see **HOLD REMINDER** on page 36 of the installation guide.)

If you were using the handset, you can place the handset in the telephone base without disconnecting the call. If you were using the speakerphone, the speakerphone is automatically turned off when you press **[HOLD]**.

 
To release the hold, press and release the **[LINE]** button of the call on hold.

NOTES:

- The phone automatically disconnects a call on hold after 20 minutes. To keep a call on hold longer than 20 minutes, release hold within 20 minutes and then place the call on hold again.
- You cannot put an intercom call on hold.
- If a line is in use, pressing **[INTERCOM]** will place the line on hold and activate the intercom (page 24).

Basic phone operation

Switching between lines




During an outside call:

1. Press and release **[HOLD]** to maintain the connection to the call on the active line.
2. Press and release the **LINE** button of another line to make or answer another call.
3. To return to the first call, press **[HOLD]** to put the current call on hold. Then press the **[LINE]** button of the original line.

Call privacy

 To ensure call privacy, this phone allows only one set at a time to use a line.



Cancel call privacy

During the call, press the **[LINE]** button for the call. You'll hear a short beep. Others can now join the call by pressing the appropriate line button.

Restore call privacy


Press the **[LINE]** button again during the call. You'll hear a double-beep. The other phones will be dropped from the call.

NOTES:

- Call privacy is automatically restored when you end the call.
- When a non-system phone answers a call, any other system phone can pick up the call by pressing the **[LINE]** button. Once a system phone picks up the call, call privacy is activated and no other system phones can listen to the call unless call privacy is canceled, but non-system phones which share that line can still join the call.

Basic phone operation

Conference calls

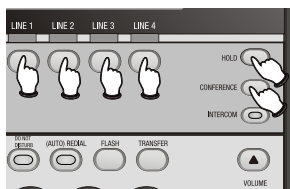

This feature lets you set up a three-party call by using two lines at the same time. You can also join an intercom call with a call on an outside line. The outside line call must be established first because an intercom call cannot be placed on hold.

1. Make or answer an outside call.
2. Press and release **[HOLD]**.
3. Call someone on another line, or intercom someone.
4. When this call is answered, press **[CONFERENCE]**. The three-party conference begins immediately.

To talk privately with one party (two-line conference only):

1. Press **[HOLD]** to place both lines on hold.
2. Press a **[LINE]** button to talk privately with the person on that line.
3. Press **[CONFERENCE]** to resume the conference call.

To drop one line:

Press the **[LINE]** button of the party you want to keep. The other line will be dropped.

To drop an extension:

Press the **[LINE]** button twice. The other system extension will hang up.

To end a two-line conference call, hang up. All parties will disconnect.

To end a two-extension conference call, hang up on both system extensions. All parties will disconnect.


NOTES:

- Occasionally, the far-end parties on a conference call might not hear one another.
- If you are experiencing difficulty in using the conference features on this phone, please consider using AT&T's complete line of teleconference services to find a solution that best meets your needs. AT&T TeleConference Services reduces travel time and expense while increasing productivity wherever people are located allowing you to host truly virtual meetings and share important information in real time. To sign up for AT&T TeleConference Services, go to: www.att.com/orderconference for details.

Call transfer

Transfer a call

You can transfer a call to any other system phone. Once you transfer a call, it can be picked up at any other system phone, not just at the extension you called.

 **NOTE:** If a transferred call is not picked up within 20 minutes, the phone will automatically disconnect the call.

Blind transfer

While on a call:

10:01AM 11/23
00:30
■

10:01AM 11/23
00:30
TRANSFER LINE#1
TO ■

10:01AM 11/23
EXT 11
TRANSFER LINE #1
TO 12

1. Press [**TRANSFER**]. The outside call will automatically be put on hold. You will see **TRANSFER LINE#Y TO** (with Y being the line in use) on the third line of the display.


2. Press the one-touch button for the destination extension for the call.

-OR-

Dial the destination extension number to which you're transferring the call. You will see the extension number in the fourth line of the display.

3. Hang up.

Your phone reminds you with a double-beep every 30 seconds when a transferred call has not been answered (To turn off the reminder beep, see **HOLD REMINDER** on page 36 of the installation guide).

 **NOTE:** If you do not dial an extension within 10 seconds, the transfer is automatically canceled. The call is still on hold. Press the corresponding **LINE** key to resume the call.

Call transfer

Transfer a call and speak to the receiving party

10:01AM 11/23
00:30
■

10:01AM 11/23
EXT 11
INTERCOM TO ■
PAGE ▾

10:01AM 11/23
EXT 11
INTERCOM TO 12

10:01AM 11/23
EXT 11
TRANSFER LINE #1
TO 12

10:01AM 11/23
EXT 12
TRANSFER FROM 11


While on a call:

1. Press [**INTERCOM**]. The outside call will automatically be put on hold, and you will see **INTERCOM TO XX**, with **XX** being the destination extension number.
2. Press the one-touch button for the extension to which you're transferring the call.

-OR-

Dial the extension number to which you're transferring the call. You will see the extension number in the third line of the display.

3. When the other party answers by pressing [**INTERCOM**], you can announce the call.
4. Press [**TRANSFER**].
5. Hang up.

 **NOTE:** If you do not dial an extension within 10 seconds, the transfer is automatically canceled. The call is still on hold. Press the corresponding **LINE** key to resume the call.

Answer a transferred call

When you hear a long transfer ring, pick up the handset or press the [**LINE**] button of the call to use the speakerphone or headset.

Intercom overview

This 1040 telephone is fully compatible with any AT&T Four-Line Small Business System Speakerphone 1070 or 1080 phones you may have installed. You can use a total of 16 1080/1070/1040 phones together as extensions in your phone system.

Each individual phone in your telephone system **MUST** be assigned a unique extension number for the intercom feature to work. See **EXTENSION NUMBER** on page 32 of the installation guide for instructions.

This intercom features both a single-phone page and a system-wide page (PAGE ALL).

A single-phone page alerts only one phone. A system-wide page (PAGE ALL) alerts all system phones. Any phone with the **Do Not Disturb (DND)** feature activated will not receive a page.

An intercom call rings at the destination extension with a repeating double-ring pattern.

A single-phone page automatically activates the speakerphone on the receiving phone. You can deactivate the speakerphone by lifting the handset.

NOTES:


- If a line is in use, pressing [**INTERCOM**] will place the line on hold and activate the intercom (page 24).
- If you subscribe to DSL service, please read DSL users beginning on page 6 of installation guide for information about minimizing problems with this phone caused by DSL signals.

Basic intercom operations

| Operation: | Function: |
|-------------------|--|
| INTERCOM | Lets any two extensions connected to line 1 ring each other (page 26). |
| PAGE | Lets you announce over the speaker of the destination phone (page 29). |
| PAGE ALL | Lets you announce to all phones in the system at the same time (system-wide page) (page 31). |
| CONFERENCE | Lets you connect an intercom call with an outside line (page 22). |

Intercom

 Use this feature for calls between system phones.



10:01AM 11/23
EXT 11
INTERCOM TO ■
PAGE

10:01AM 11/23
EXT 11
INTERCOM TO 12

Make an intercom call with the handset

1. If One-touch preference is set to **INTERCOM** (page 35), skip to step 2.

-OR-

If One-touch preference is set to **TELEPHONE** (page 35), press [**INTERCOM**].

2. Press the one-touch button for the destination party, then lift the handset. The screen will display **INTERCOM TO XX**, with XX being the destination extension number.

If the extension you called is idle or set to Do Not Disturb, you will hear long beeps. If the other extension is on a call, you will hear a busy signal.

i **NOTE:** The intercom call is automatically canceled if you do not press a one-touch button within 10 seconds.

Intercom

Make an intercom call with the speakerphone or headset

10:01AM 11/23
EXT 11
INTERCOM TO ■
PAGE

10:01AM 11/23
EXT 11
INTERCOM TO 12

With the handset in the telephone base:


1. If One-touch preference is set to **INTERCOM**, skip to step 2.

-OR-

If One-touch preference is set to **TELEPHONE**, press [**INTERCOM**]. The phone will automatically activate the intercom call in the mode (headset or speakerphone) you programmed (see **AUTOMATIC MODE** on page 39 of the installation guide).

2. Press the one-touch button. The screen will display **INTERCOM TO XX**, with XX being the destination extension.

If the extension is idle or set to Do Not Disturb, you will hear long beeps. If the other extension is busy, you will hear a busy signal.


 **NOTE:** The intercom call is automatically canceled if you do not press a one-touch button within 10 seconds.

Intercom

Answer an intercom call

10:01AM 11/23
EXT 12
INTERCOM FROM 11

When you receive an intercom call, you will hear a repeating double-ring pattern and your screen will display **INTERCOM FROM** with the extension number of the caller. Answer the intercom call by lifting the handset, or by pressing **[INTERCOM]**, **[SPEAKER]** or **[HEADSET]** to take the call hands-free.

 **NOTE:** If you press **[INTERCOM]** to answer the call, the phone will automatically use the mode (speakerphone or headset) you programmed as the automatic mode (see **AUTOMATIC MODE** on page 39 of the installation guide).

End an intercom or page call


To end the intercom or page call, press **[INTERCOM]**.

-OR-

Hang up or press **[SPEAKER]** or **[HEADSET]** again.

Voice page

Page a specific extension (single-phone page)

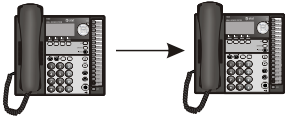

10:01AM 11/23
EXT 11
INTERCOM TO ■
PAGE

10:01AM 11/23
EXT 11
PAGING ■
INTERCOM

10:01AM 11/23
EXT 11
PAGE 12

Sends your voice to the speaker of the destination phone. The person you've called may be able to respond just by talking. See **AUTO MUTE** on page 35 of the installation guide.

1. Press [**INTERCOM**].
2. Press [**ENTER**] to select **PAGE**.
3. Enter the destination extension number (11-26).
4. Your telephone will display **PAGE** and the called extension number. Now the speakerphone on the destination telephone is activated automatically.

To end the page:

- Press [**INTERCOM**] on either telephone.

NOTES:

- Refer to page 32 of the installation guide to get more information on extension numbers.
- Pressing [**INTERCOM**] while on an external call will initiate a call transfer (page 24).
- If the destination telephone is in the Do Not Disturb mode, on an intercom call or on an outside call, your telephone will sound a busy signal.
- The auto-mute feature may be set to **ON** on the destination telephone to protect privacy (page 35 of the installation guide). The person at the destination extension will have to press [**MUTE**] to re-activate the microphone (page 19).

Voice page

Answer a single-phone page

10:01AM 11/23
EXT 12
PAGE FROM 11

Auto-mute off

When your extension receives a page, the phone beeps and the speakerphone is automatically activated. Answer the call simply by speaking.


If you are on the headset, you can answer the page by pressing **[HEADSET]** and speaking through the the microphone of the headset.

Auto-mute on

The **[MUTE]** light will be on. Lift the handset or press **[MUTE]** to temporarily de-activate auto-mute and answer the page.


Voice page

Page all (system-wide page)

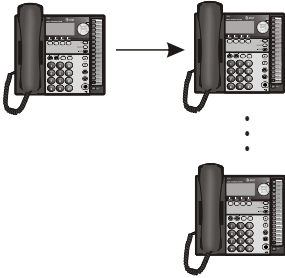

Sends your voice to the speakers of all phones in the system.

 1. Press [**INTERCOM**] then [**▼**] to show **PAGE ALL**.
2. Press [**ENTER**]. The screen will display **PAGE ALL**. Once the page is automatically answered, speak and your voice will be heard at all idle extensions in your phone system.




Page-all shortcut

1. Press [**INTERCOM**], then press [**#**].
2. Your telephone will display **PAGE ALL**. You will be heard at all idle extensions.

NOTES:

 - Pressing [**INTERCOM**] while on an external call will initiate a call transfer (page 24).
- If a system telephone is in the **Do Not Disturb (DND)** mode, on an external or intercom call, the system-wide page will not be heard there.
- During a page all, the people at all extensions will be able to hear you, but you are not able to hear them.
- During a page all, if [**ENTER**] is pressed on any system telephone, the system-wide page will be terminated and the person on that telephone will join the intercom call with you.




To end the page all:

- Press [**INTERCOM**] on your telephone.

Voice page

Answer a system-wide page

10:01AM 11/23
EXT 12
PAGE ALL FROM 11
[ENTER]: ANSWER

 **NOTE:** Only one extension can answer a system-wide page.

10:01AM 11/23
EXT 12
INTERCOM FROM 11

When you receive a system-wide page, your phone beeps and the screen shows **PAGE ALL FROM XX**, with XX being the originating extension number.

1. Press **[ENTER]** to answer the page. The screen displays **INTERCOM FROM XX**, where XX is the calling extension number.
2. Press **[INTERCOM]** to end the call on either telephone.

Voice page

Room monitor

10:01AM 11/23
EXT 11
PAGING ■
INTERCOM

Make a single-page call to a system phone to monitor the sounds from that room. To use the room monitor feature, the destination telephone auto-mute feature must be turned off (page 35 of the installation guide).

10:01AM 11/23
EXT 11
PAGE 12

1. Press **[INTERCOM]**.
2. Press **[ENTER]** to select **PAGE**.
3. Enter the destination extension number (20).
4. After your telephone displays **PAGE XX**, press **[MUTE]**. The destination telephone will beep, then activate its speakerphone automatically. Now, you can monitor the room of the destination telephone without being heard.

To end room monitoring, press **[INTERCOM]** on your telephone.

Make an intercom conference call

Someone at a system phone having a two-way conversation on an outside line can invite someone at an extension to join the conversation. Follow the directions under **Conference calls** on page 22, making sure to establish the non-intercom call first.



NOTE: You cannot put an intercom conference call on hold.


One-touch overview

i NOTE: The one-touch buttons are also used to place intercom calls. See **Intercom operation** beginning on page 25 for details.

This telephone has 32 one-touch locations (speed dial locations) where you can store phone numbers you wish to dial using fewer keys than usual. You can store up to 24 digits in each location. The steps used to dial numbers stored in one-touch locations vary according to how you programmed the one-touch preference. See **PREFERENCE** on page 35 and **To dial a one-touch number** on page 38 for more details.

The first 16 locations can be accessed using only the one-touch buttons. To access the remaining 16 locations, press **[LOWER]** and then the one-touch button for the desired location.

You may wish to write the names or telephone numbers of the one-touch entries on the directory card, using the light gray spaces for the first 16 locations and the dark gray spaces for the second 16 locations (page 16 of the installation guide).

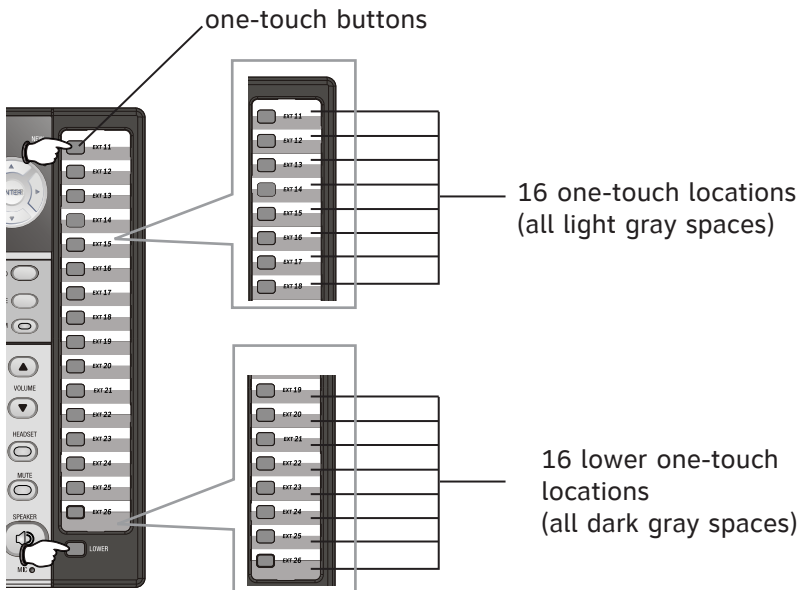

One touch

Assign the buttons on the right side of the phone, the one-touch keys, as intercom or outside call shortcut keys, and enter and view the outside phone numbers.

ONE TOUCH

◀▶ TELEPHONE
PREFERENCE ▶

PREFERENCE

 
Assign the one-touch keys as intercom or outside-call shortcut keys.

1. Press **[ENTER]**.
2. Press **[ENTER]** again to enter the **ONE TOUCH** menu.
3. Press **[▲]** or **[▼]** until you see **PREFERENCE**.
4. Press **[◀]** or **[▶]** to highlight **INTERCOM** or **TELEPHONE**. **INTERCOM** is the default setting.
5. To move to the next feature, press **[▼]**.

-OR-

To exit setup, press and hold **[ENTER]**.

One-touch storage



1. Press [ENTER]. The screen displays **ONE TOUCH**.
2. Press [ENTER].
3. Press [▲] or [▼] repeatedly until you see **PROGRAM**.
4. Press [ENTER]. The screen includes **(ENTER NUMBER)**.
5. Use the dial pad to enter up to 24 digits.

-OR-

- **To copy the most recently dialed number** from redial, press [(AUTO) REDIAL]. Only the last number dialed from this extension can be copied to a one-touch location. The other numbers on the redial list cannot be copied.
- **If you need to store a two-second dialing pause** for accessing banking or long distance services, press [▲] or [▼], scroll to **PAUSE**, then press [ENTER]. A **P** will appear on the screen.
- **If you need to store a signal** for switching to temporary tone dialing, press [▲] or [▼] until you see **TONE**, then press [ENTER]. A **T** will appear on the screen.
- **If you need to store a flash signal** for using the service supplied by your telephone company, press [▲] or [▼] until you see **FLASH**, then press [ENTER]. An **F** will appear on the screen.
- **To erase the last digit**, press [▼] to scroll to **DELETE CHAR** then press [ENTER].
- **To cancel programming**, scroll to **CANCEL** and then press [ENTER].

continued on next page

One-touch storage

continued from previous page

6. Press the desired one-touch key to store the telephone number in the normal location.

-OR-

Press [**LOWER**], then the desired one-touch key to store the telephone number in the lower location.




NOTES:

- If the desired one-touch key location was empty, the screen will display **SAVED!** If there is a already telephone number in it, the screen will display **REPLACE SPD#XX?** (**XX** is the desired one-touch location number.) You can replace the current entry by pressing [**ENTER**] or keep the current entry by pressing [**▲**] or [**▼**] until you see **NO REPLACE?** Press [**ENTER**]. Then choose another one-touch key location.
- Only the last number dialed from this extension can be copied to a one-touch location. The other numbers in the redial stack cannot be copied.
- Press and hold [**ENTER**] to exit one-touch setup.

To dial a one-touch number

This phone comes with one-touch preference preset to **INTERCOM**.

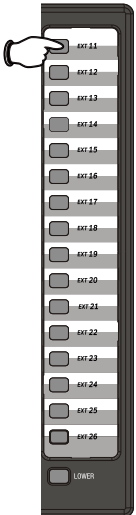

i NOTE: To change one-touch preference, see **PREFERENCE** on page 35 of this manual.

If one-touch preference is set to **INTERCOM**:

1. Lift the handset.

-OR-

Press [**SPEAKER**].

-OR-

Press [**HEADSET**] and listen for the dial tone.

2. Press the one-touch button.

-OR-

Press [**LOWER**], then press the one-touch button for the destination number you want to call. The screen displays the number as it is dialed.

If one-touch preference is set to **TELEPHONE**:

You do not need to go off hook and listen for a dial tone before dialing a one-touch number. You can simply:

Press the **one-touch button**.

-OR-

Press [**LOWER**], then press the **one-touch button** for the desired number to call.

The screen displays the number as it is dialed using the speakerphone or headset as programmed for automatic mode. (See **AUTOMATIC MODE** on page 39 of the installation guide.)

To view or delete a one-touch number

To view a one-touch number

| | |
|-----------------|--------|
| VIEW 5550100 | SPD#15 |
| CANCEL | ◆ |

Normal location: SPD# 1-16


Lower location: SPD# 17-32

1. Press [**ENTER**].
2. Press [**▲**] or [**▼**] until you see **ONE TOUCH**. Press [**ENTER**].
3. Press [**▲**] or [**▼**] until you see **VIEW**. Press [**ENTER**].
4. Press the desired one-touch key to view the telephone number stored in the normal location.
-OR-
Press [**LOWER**], then the desired one-touch key to view the telephone number stored in the lower location.
-OR-
Press [**▲**] or [**▼**] to view the entries.
5. Press and hold [**ENTER**] to exit.

To delete a one-touch number

When a one-touch telephone number is displayed, press [**◀**] or [**▶**] to highlight **REMOVE** and then press [**ENTER**] to delete the number. Once deleted, an entry cannot be retrieved.

To modify a one-touch number

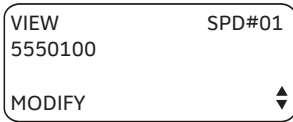

1. When a one-touch telephone number is displayed, press [◀] or [▶] to highlight **MODIFY**.
2. Press [ENTER].
3. Press the dial pad keys to enter up to 24 digits.
 - **You can include a pause** while modifying a dialing sequence which requires one during actual dialing. Press [▲] or [▼] until you see **PAUSE**, then press [ENTER] when storing a pause. The screen will display **P**. Each pause counts as one digit. Continue storing the number as usual.
 - **Store a signal for switching to temporary tone dialing**, required for some special services, if you have dial pulse (rotary) service. Press [▲] or [▼] until you see **TONE**, then press [ENTER]. A **T** will appear on the screen. All numbers entered after this will send touch tone signals during dialing.
 - **You can store the flash** signal required by some special services as part of a dialing sequence. Press [▲] or [▼] until you see **FLASH**, then press [ENTER]. An **F** will appear on the screen. Continue storing the number as usual.
 - **To erase the last digit**, scroll to **DELETE CHAR** and then press [ENTER].
 - OR-
 - Press [REMOVE].
 - **To copy the most recently dialed number** from redial, press [(AUTO) REDIAL]. Only the last number dialed from this extension can be copied to a one-touch location. The other numbers in the redial shack cannot be copied.
 - **To cancel programming**, scroll to **CANCEL** and then press [ENTER].

continued on next page

To modify a one-touch number

continued from previous page

4. Press the desired one-touch key to store the telephone number in a location.


-OR-

Press [**LOWER**], then the desired one-touch key to store the telephone number in the lower location.

5. Press [**◀**] or [**▶**] to select **CANCEL**. Press [**ENTER**] to exit the **VIEW** feature. To move to the next feature, press [**▼**].


-OR-

Press and hold [**ENTER**] to exit.

 **NOTE:** If the desired one-touch key location was empty, the screen will display **SAVED!** If there is a telephone number in it, the screen will display **REPLACE SPD#XX?** (**XX** is the desired one-touch location number.) You can replace the current entry by pressing [**ENTER**], or keep the current entry by pressing [**▲**] or [**▼**] until you see **NO REPLACE?** Press [**ENTER**], then choose another one-touch key location.

Forwarding to DTAD mailbox

About forwarding to DTAD

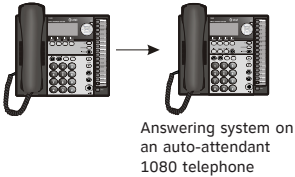

If at least one 1080 telephone is designated to be used as an auto-attendant (if you have the 1080 user's manual, read it for more details), you can designate the auto-attendant telephone as a DTAD (Digital Telephone Answering Device) mailbox for the 1070 or 1040 telephones in the same system.

 
When the DTAD mailbox is designated, the answering system of the DTAD mailbox 1080 telephone can answer calls transferred by the auto-attendant system and record caller's messages for its DTAD system extensions. These messages are called system extension messages. For more details, refer to the 1080 user's manual.

If the DTAD mailbox is designated, a DTAD system extensions will display its messages counter **DTAD:XX/YY** on its screen. The person on a DTAD system extension 1040 telephone can access the DTAD mailbox 1080 telephone to play back messages and record memos (see **Listening to messages - internal access** on page 44).

To set up call forwarding

To turn call forwarding on

Use this feature to turn the call forwarding to DTAD mailbox function on or off.



1. Press **[ENTER]**.
2. Press **[▲]** or **[▼]** to scroll to **SYS EXT MAILBOX**. Press **[ENTER]**.
3. Press **[▲]** or **[▼]** to display **CALL FORWARD**.
4. Press **[◀]** or **[▶]** to choose **FWD TO DTAD** or **OFF**.
5. Press and hold **[ENTER]** to save the selection and exit.

To set call forwarding delay time

Use this feature to choose the delay time before an auto-attendant transferred call is forwarded to the DATD mailbox 1080 telephone.



1. Press **[ENTER]**.
2. Press **[▲]** or **[▼]** to scroll to **SYS EXT MAILBOX**. Press **[ENTER]**.
3. Press **[▲]** or **[▼]** to display **FWD DELAY TIME**.
4. Press **[◀]** or **[▶]** to choose the desired time (2-40 seconds).
5. Press and hold **[ENTER]** to save the selection and exit.

Listening to messages - internal access

If a 1040 phone is assigned to a 1080 system extension mailbox, the screen will display the number of new and all messages you have. You will see DTAD: XX/YY, with XX being the number of new, (unplayed,) messages, and YY the number of all messages. Follow the steps below to access the 1080 system extension mailbox to play back your messages.

i **NOTE:** If there is no command entered for 10 seconds, "Remote operation" will be announced. If there is no command entered for another 10 seconds, the internal access call will end automatically.

1. Press **[INTERCOM]**, then **[0]** on a 1040 system extension.

-OR-

If you want to alert the person at the 1080 mailbox extension before starting internal access on a 1040 extension, you can make a single page to the 1080 mailbox (page 29).

2. Enter the three-digit remote access code (111 unless you have changed it, see the installation guide).
3. Enter commands (See the list below).
4. Press **[INTERCOM]** on the 1040 system extension to end the internal access and save all undeleted messages.

Play all messages
[1] [*]

Press to play all extension messages for this 1040 extension.

Play new messages
[1]

Press to play new extension messages for this 1040 extension.

Replay current message and replay previous message
[2]

Press within 3 seconds of the message playing to go back to the previous message. Press after 3 seconds of the message playing to repeat the message currently playing.

Skip to next message
[3]

Press during playback to skip the current message and advance to the next message.

Delete message(s)
[#] [#]

Press during playback to delete the current message.

Delete all message(s)
[#] [*]

Press to delete all messages for this 1040 extension.

Stop
[8]

Press to stop any operation (e.g. stop playback, stop recording).

Record a memo
[9] to begin recording
[8] to stop recording

Press **[9]**, wait for beep then begin speaking. Press **[8]** to stop recording.

Glossary

Auto Attendant: If there is at least one 1080 telephone in your system, it may be set up to be an auto attendant. The auto attendant is assigned to pick up a ringing line automatically after a selected number of rings. It may also be set up to record messages for your extension. The auto attendant plays the selected auto attendant message and redirects the call if the caller enters an extension number.

Central message: If a 1080 telephone is assigned as an auto attendant, when a call is answered by the auto attendant, and a caller presses [9], a central message, one not intended for any particular extension, is created.

Centrex service: This is a special subscriber service which may be available from your local telephone company for a fee. This 1040 telephone can be used with Centrex service.

DND: When activated, the Do Not Disturb (DND) feature prevents interruptions during a call.

DSL: Digital subscriber line, (DSL) service is available from your telephone company for a fee. It allows you to receive high-speed internet through your telephone line(s). Some special equipment, splitters and/or filters, are required for the telephone and data service to work properly together.

DTAD: The Digital Telephone Answering Device is a sophisticated, tapeless answering system built into the 1080 telephone. In some installations, messages for your phone can be recorded on a 1080 in your system.

Line group: A group of system telephones sharing some lines within a multi-telephone system.

Mailbox: A place to store answering system messages. A 1080 phone can store system extension messages for your extension.

Memory loss protection: Even if the telephone has no AC power or a battery, all programming and messages are retained.

Navigation keys: These are the buttons used when programming your 1040 phone and for scrolling through feature options ([ENTER], [▲], [▼], [◀], [▶]).

Prime line: This is the line on the telephone you assign to be selected automatically when you lift the handset, press [SPEAKER] or press [HEADSET] to answer or make a call.

System extension message: The messages recorded for individual 1070 and 1040 telephones that are associated with a 1080 phone's auto attendant mailbox (page 42).

System telephone: Any 1080, 1070 or 1040 telephone in your telephone system (also called an extension).

Telephone system (or business system): Two or more system telephones combined to form an interacting system of shared lines. You can have up to 16 system telephones in the system.

Time/date

When the telephone is idle, the screen will display the date and time. To set the time follow the steps below.



TIME/DATE

= 2007

YEAR



1. Press **[ENTER]**.
2. Press **[▲]** or **[▼]** until you see **TIME/DATE**.
3. Press **[ENTER]** to see **YEAR**. Press the dialpad keys to enter the correct year.
4. Press **[▼]** until you see **MONTH**. Press the dialpad keys to enter the correct month.
5. Press **[▼]** until you see **DATE**. Press the dialpad keys to enter the correct date.
6. Press **[▼]** until you see **HOUR**. Press the dialpad keys to enter the correct hour (12-hour clock format).
7. Press **[▼]** until you see **MINUTE**. Press the dialpad keys to enter the correct minute.
8. Press **[▼]** until you see **AM/PM**. Press **[◀]** or **[▶]** to highlight **AM** or **PM**.
9. To move to **MAIN MENU**, press **[▼]**.

-OR-

To exit setup, press and hold **[ENTER]**.

Centrex operation


Set ring delay duration

This feature allows other system telephones' calls to ring at the console phone. After a specified ring delay, the calls will ring at the console phone. (See **CSL DELAY RING** on page 75 of the installation guide.)

Answer a delayed ring

The console phone rings and the screen displays the extension number of the intercom sending the delayed ring.

1. Select an idle line.
2. Enter the Centrex pickup code.
3. Enter the seven- or ten-digit phone number (as directed by your phone company) of the extension sending the delayed ring.

 **NOTE:** If the console is using another line and receives a delayed ring, the console phone can put the other line on hold and follow steps 1–3. If the console is on an intercom call, the intercom call should be ended before picking up the ringing phone.

Pick up another station's line

1. Choose an idle Centrex line.
2. Enter the Centrex pickup code.
3. Enter the seven- or ten-digit phone number (as directed by your phone company) of the desired line you want.

Centrex operation

Centrex service call example

If you subscribe to Centrex service provided by your local telephone company, you need to set up the system telephones first: Here is an example of one setup.

EXT 11 (console)
CONSOLE is **ON**.
CSL DELAY RING is **OFF**.

EXT 12
CONSOLE is **OFF**.
CSL DELAY RING is set to 20 seconds.

EXT 13
CONSOLE is **OFF**.
CSL DELAY RING is set to 16 seconds.

EXT 14
 Both **CONSOLE** and **CSL DELAY RING** menus are **OFF**. (This telephone does not use the Centrex service.)

In the example on the left, when the calls coming from 555-1237 or 555-1238 are not answered, if you subscribe to the Centrex service provided by your local telephone company, these calls will be switched to the console telephone (EXT 11 in the example).

1. An external call comes in on line 4 (telephone number 555-1237 or 555-1238) on the original system telephone (EXT 12 or EXT 13).
2. If the call is not answered during the CSL delay time set on the original extension, (20 seconds for EXT 12 or 16 seconds for EXT 13), the console telephone (EXT 11) will ring and display **EXT XX RING**.
3. Press the **[LINE 4]** key if line 4 is idle on the console telephone (EXT 11). Dial the Centrex access code (provided by your telephone company) then the ringing line's seven- or ten-digit phone number, (as directed by your phone company).

NOTES:

- If no one answers the call at the console telephone for 10 seconds, the originating extension will ring again.
- Outside calls will be answered by the auto attendant (see the 1080 user's manual for details).
- Contact your telephone company for more details about Centrex service.

General product care

To keep your phone working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the phone and/or other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this can damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

Important product information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- **Read and understand all instructions in the user's manual. Observe all markings on the product.**
- **Avoid using a telephone during a thunderstorm.** There may be a slight chance of electric shock from lightning.
- **Do not use a telephone in the vicinity of a gas leak.** If you suspect a gas leak, report it immediately, but use a telephone away from the area where gas is leaking. If this product is a cordless model, make sure the base is also away from the area.
- **Do not use this product near water, or when you are wet.** For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- **Install this product in a protected location** where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- **If this product does not operate normally, read Troubleshooting in this user's manual.** If you cannot solve the problem, or if the product is damaged, refer to the limited warranty. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- **If this product has user-replaceable batteries, replace batteries only as described in your user's manual.** Do not burn or puncture batteries—they contain caustic chemicals.
- **If this product has a three-prong (grounding) plug or a polarized plug with one wide prong, it may not fit in non-polarized outlets.** Do not defeat the purpose of these plugs. If they do not fit in your outlet, the outlet should be replaced by an electrician.



CAUTION: Use only the power adapter provided with this product. To obtain a replacement, visit our website at www.telephones.att.com, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Important product information

Especially about corded telephones

- **Electrical power:** The telephone base must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. **Calls cannot be made from the handset if the telephone base is unplugged or switched off, or if the electrical power is interrupted.**
- **Power adapter:** The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Especially about telephone answering systems

Two-way recording: This unit does not sound warning beeps to let the other party know that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the call.

SAVE THESE INSTRUCTIONS

FCC and ACTA information

If this equipment was approved for connection to the telephone network prior to July 23, 2001, it complies with Part 68 of the Federal Communications Commission (FCC) rules. If the equipment was approved after that date, it complies with the Part 68 rules and with the Technical Requirements for Connection of Equipment to the Telephone Network adopted by the Administrative Council for Terminal Attachments (ACTA). We are required to provide you with the following information.

1. Product identifier and REN information

The label on the back or bottom of this equipment contains, among other things, an identifier indicating product approval and the Ringer Equivalence Number (REN). This information must be provided to your local telephone company upon request. For equipment approved prior to July 23, 2001, the product identifier is preceded by the phrase "FCC Reg No." and the REN is listed separately. For equipment approved after that date, the product identifier is preceded by "US" and a colon (:), and the REN is encoded in the product identifier without a decimal point as the sixth and seventh characters following the colon. For example, the product identifier US:AAAEQ03T123XYZ would indicate an REN of 0.3.

The REN is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. In most, but not all areas, the sum of all RENS should be five (5.0) or less. You may want to contact your local telephone company for more information.

2. Connection and use with the nationwide telephone network

The plug and jack used to connect this equipment to the premises wiring and the telephone network must comply with the applicable part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines, see installation instructions in the user's manual. This equipment may not be used with coin telephone lines or with party lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone company or qualified installer.

3. Repair instructions

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the limited warranty.

FCC and ACTA information

4. Rights of the telephone company

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

5. Hearing aid compatibility

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

6. Programming/testing of emergency numbers

If this product has memory dialing locations, you may choose to store police, fire department and emergency medical service telephone numbers in these locations. If you do, please keep three things in mind:

- a. We recommend that you also write the telephone number on the directory card (if applicable), so that you can still dial the emergency number manually if the memory dialing feature doesn't work.
- b. This feature is provided only as a convenience, and the manufacturer assumes no responsibility for customer reliance upon the memory feature.
- c. Testing the emergency telephone numbers you have stored is not recommended. However, if you do make a call to an emergency number:
 - You must remain on the line and briefly explain the reason for the call before hanging up.
 - Programming/testing of emergency numbers should be performed during off-peak hours, such as in the early morning or late evening, when the emergency services tend to be less busy.

Part 15 of FCC rules

Some telephone equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used properly, may cause interference to radio and television reception. This product has been tested and found to meet the standards for a class B digital device, as specified in part 15 of the FCC rules.

These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this product causes interference to radio, VCR or television reception when it is in use, you might correct the interference with any one or all of these measures:

- Where it can be done safely, re-orient the receiving radio, VCR or television antenna.
- To the extent possible, relocate the radio, VCR, television or other receiver with respect to the telephone equipment.
- If this telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as one used by your radio, VCR or television.

Modifications to this product, not expressly approved by the manufacturer, could void the user's authority to operate the equipment.

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to: In the United States of America call **1 (800) 222-3111** or visit **www.telephones.att.com**; In Canada, call **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase (“CONSUMER” or “you”) that the product and all accessories provided in the sales package (“PRODUCT”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period (“materially defective PRODUCT”)?

During the limited warranty period, the manufacturer’s authorized service representative will repair or replace at the manufacturer’s option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain the defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer’s option, is your exclusive remedy. The manufacturer will return the repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

Limited warranty


4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- PRODUCT returned without valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service in the United States of America, call **1 (800) 222-3111**; in Canada, please dial **1 (866) 288-4268**.

 **NOTE:** Before calling for service, please review the user's manual. A check of the PRODUCT controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you, transportation, delivery or handling charges prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

Limited warranty

6. What must you return with the PRODUCT to get warranty service?

You must:

- a. Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- b. Include “valid proof of purchase” (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- c. Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer’s responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specification

| | |
|---------------------------------------|----------------------------|
| Operating temperature | 32°F — 122°F 0°C — 50°C |
| Power adapter input | AC120V 60Hz |
| Power adapter output | DC12V 500mA |
| Backup battery (purchased separately) | Alkaline 9V, size 1604A |
| Headset jack | 2.5mm, 32 - 150ohm |
| Wiring limitation | No more than 600 feet |
| REN | 0.3B |
| System signal carrier frequency | 1.7 MHz |

In case of difficulty

If you have difficulty with your telephone, please try the suggestions below. For Customer Service, visit our website at **www.telephones.att.com**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**. Have the serial number, found on the underside of your phone, available when contacting customer service. Please retain your receipt as your proof of purchase.

To purchase accessories or replacement parts, please contact customer service by visiting our website at **www.telephones.att.com** or calling **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

My telephone appears to be dead.

- Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cords are plugged firmly into the telephone base and the jack.
- Unplug the telephone's electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the telephone to synchronize.
- This system is not compatible with any other AT&T 4-line small business telephones, except for the 1040, 1070 and 1080 telephones.

System features, (intercom, transfer, hold release, etc.) do not work with my old AT&T 4-line telephones (984, 974, 945, etc.).

- This system is not compatible with any other AT&T 4-line small business telephones, except for the 1040, 1070 and 1080 telephones.

Intercom, hold, call privacy or other advanced features do not work properly.

- If you have fiber optic service, (digital service to the building, analog service within the building,) VoIP (Voice over the Internet) service, or cable telephone service, the router that the system uses may interfere with system communication.
- If Line 1 is a DSL line, have a professional install a splitter on the telephone line. See the installation guide and contact your DSL service provider for more information.

In case of difficulty

- If the wiring for your system is greater than 600 feet, some of the advanced features may not work properly. You may have to remove some of the phones from remote areas.
- Check to make sure that each telephone set has a unique extension number. If the sets receive AC power at the same time, either at initial installation or after a power failure, the extension numbers may be the same. Refer to the **EXTENSION NUMBER** section on page 32 of the installation guide.

There is no dial tone.

- First, try all the suggestions of **My telephone appears to be dead** on page 59.
- The telephone line cord might be malfunctioning. Try installing a new telephone line cord.
- Disconnect the telephone base from the telephone jack and connect a different telephone. If there is no dial tone on the telephone either, the problem is in your wiring or local service. Contact your local telephone company.
- Make sure a line is selected. Press a line button or speakphone.
- Make sure the **[HOLD]** key is not pressed.
- If there is no dial tone when the **[HEADSET]** key is pressed, make sure the headset is firmly connected in the **HEADSET** jack.

I cannot dial out.

- First, try all the above suggestions in **There is no dial tone** on this page.
- Make sure there is a dial tone before dialing. It is normal if the telephone takes a second or two to synchronize before producing a dial tone. Wait an extra second before dialing.
- Check that all the telephones connected to the same telephone line are hung up.
- Make sure the telephone is set to the correct dial mode (pulse dial or tone dial) for the service in your area. Refer to the **TONE/PULSE** section, on page 36 of the installation guide, to set the dial mode.

In case of difficulty

- If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact your local telephone company (charges may apply).
- If you are using the speakerphone, eliminate any background noise. Noise from a television, radio, or other appliances may cause the telephone to not dial out properly. If you cannot eliminate the background noise, first try muting the telephone before dialing, or dialing from another room in your home with less background noise.

I cannot page or make intercom calls.

- Make sure you dialed the extension correctly.
- Make sure Line 1 is connected and has the same phone number on all system phones.
- The destination telephone may be on an external call. Wait and try again.
- Make sure the Do Not Disturb function is turned off on the destination system telephone (page 15).
- Make sure the **[INTERCOM]** light is off before you make a page or Intercom call. If the light is on, the system is busy or the intercom is unavailable. Try again when the intercom light goes out.
- Make sure the telephone line cord connected to line jack **L1/L2** was provided with the telephone.
- Check to make sure that each telephone set has a unique extension number. If the sets receive AC power at the same time, either at initial installation or after a power failure, the extension numbers may be the same. Refer to the **EXTENSION NUMBER** section on page 32 of the installation guide.

In case of difficulty

I cannot transfer outside calls.

- If you are on a conference call with another telephone in the same system (page 22), the call cannot be transferred.
 - If the destination telephone is on an outside call or intercom call with another system telephone, the call cannot be transferred.
 - All extensions must have the same outside telephone line connected to Line 1.
 - Make sure the telephone line cord connected to line jack **L1/L2** was provided with the telephone.
 - Make sure that the **LINE GROUP** assignment is correct. See page 43 of the installation guide.
 - Check to make sure that each telephone set has a unique extension number. If the sets receive AC power at the same time, either at initial installation or after a power failure, the extension numbers may be the same. Refer to the **EXTENSION NUMBER** section on page 32 of the installation guide.
-

LOW BATT is displayed on screen.

- No spare battery is installed or the spare battery needs to be replaced.
 - Remove and re-install the battery.
-

The telephone does not ring when there is an incoming call.

- Make sure the ringer is on (page 14).
- Make sure the telephone line cord(s) and the power adapter are plugged in properly (see the installation guide).
- There may be too many extension telephones on the telephone line to allow all of them to ring simultaneously. Try unplugging one phone at a time until the phones start ringing.
- Test a working telephone at the same telephone jack. If another telephone has the same problem, the problem is in the telephone jack. Contact your local telephone company (charges may apply).

In case of difficulty

- The telephone line cord might be malfunctioning. Try installing a new telephone line cord.
- Make sure the **Do Not Disturb** feature is not activated (page 15).
- If you are on a call, there will be a beep to alert you of incoming calls on the other lines.

Cannot join a conversation in progress.

- The call privacy feature prevents another set on the system from interrupting a conversation.
- Make sure you press the **LINE** button to release privacy. (See **Call privacy** on page 21.)

Display screen is blank.

- Make sure the power cord is connected to both the phone and an electrical outlet not controlled by a wall switch.

The call privacy feature does not work.

- In some installations that have fiber optic service (digital service to the building, analog service within the building) the signals to the extensions may not support the call privacy feature.

Error tone (fast busy signal) when making a page call.

- The **Do Not Disturb** feature is activated at the extension you are calling.

A double beep sounds every 30 seconds.

- There is a call on hold at this extension. Press and release the **LINE** button of the call on hold to return to the call and turn off the reminder beep.

Operation during a power failure.

- This phone will operate during a power failure if a working battery has been installed. You will be able to answer calls with the handset and dial calls using the dial pad keys and the one-touch or redial features. No other features will work until power is restored. All programming is retained during a power failure.

In case of difficulty

The screen displays **AC FAIL**.

- The phone has been disconnected from AC power. When AC power is restored, the screen will return to the usual display. One-touch and redial numbers are retained until power is restored.
-

My calls fade out or cut in and out when I am using the telephone.

- If you have a headset plugged into the telephone, try unplugging it and firmly plugging it in again.
 - Disconnect the telephone base from the modular jack and plug in another corded telephone. If calls are still not clear, the problem is probably in the wiring or local service. Contact your local service company (charges may apply).
 - If you are using the speakerphone when this problem occurs, eliminate any background noise. Noise from the television, radio, or other appliances may cause the speakerphone to cut in and out. Try engaging the **[MUTE]** button when you are not speaking or eliminating the background noise.
 - If you have Digital Subscriber Line, (DSL,) service, and you have more than three telephone sets, and you have installed microfilters, you may need to have a DSL splitter installed by your DSL service provider.
-

The sound quality of the headset is poor.

- Unplug it and and firmly plug it in again.
-

I hear other calls when using the telephone.

- Disconnect the telephone base from the telephone jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or local service. Call your local telephone company.
- Make sure you are using the round black cords that came with the phone. These cords help prevent crosstalk (hearing other calls.)

In case of difficulty

Common cure for electronic equipment:

If the telephone is not responding normally, try the following (in the order listed):

1. Disconnect the power to the telephone base.
2. Disconnect the spare battery (if the set has one).
3. Wait a few minutes before connecting power to the telephone base.
4. Re-install the spare battery (if the set has one).
5. Wait for the telephone to synchronize its connection. This may take up to one minute.

The answering system does not respond to internal access commands.

- Make sure your remote access code is correct (see the installation guide for more details).
- If you access the extension mailbox through a single page call, make sure the extension number of the extension mailbox telephone is entered correctly.
- The extension mailbox is in use. Or the two intercom paths are in use. Wait for a few minutes then try again.
- There may be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.

Some messages for specific extensions were not recorded.

- Check the central (general) mailbox(es) for the messages.
- Check Line Group setting (see page 43 of the installation guide for directions).

My phone beeps for no reason.

- If someone is trying to assign your phone's extension number to another phone, your phone will sound a warning beep, and display, "IS ALREADY USED."

Index

A

AC fail, 4
Alert tones, 7
Answering calls, 9
Auto-mute, 30
Auto-redial, 18

C

Call privacy, 21
Call forwarding delay time, 43
Call transfer, 23
Conference call, 22

D

Delete redial entries, 17
Dialing
 one-touch dialing, 38
Directory card, 8
Do not disturb, 15
DTAD, 45

E

Ending calls, 10, 11

F

FCC and ACTA, 52
Flash, 19
Forward to DTAD, 42

H

Handset, 10, 12
Hands-free use, 10, 12
Headset, 11, 12
Hold a call, 20

I

Important product information,
50-51
In case of difficulty, 59-65
Incoming calls answering, 9-11
Indicator light, 6-7
Intercom, 25-33
Internal access, 44

L

Last number redial, 16
LCD contrast, 4
Listen to message, 44
Low battery, 5, 62
Lower location, 34

M

Making calls, 9-11
Memo, 44
Message playback, 44
Mute, 19

Index

N

Navigation keys, 3

O

One-touch keys, 3, 34
delete entries, 39
dial number, 38
new entries, 36-37
preference, 35

P

Page all, 31
Pause, 36, 40
Prime line, 9

R

Receiving calls, 9-11
Redial stack, 17
Ringer on or off, 14
Ringer type, 14
Ringer volume, 13
Room monitor, 33

S

Screen display messages, 4-5
Single-phone page, 29, 30
Speakerphone, 7, 10
System extension message, 42, 44
System extension mailbox, 42-44
Switch lines, 21
Switch speaking mode, 12

T

Technical specifications, 58
Temporary tone dialing, 19

V

Volume control, 13
Voice page, 29-33

W

Warranty, 55-57



www.telephones.att.com