

VHF/FM DIGITAL AIRBORNE TRANSCEIVER MODEL TDFM-136



Installation and Operating Instructions

TiL Document No.
99RE255
Rev. D Issue 8

APRIL 2004

Software Release 2.0.0

Technisonic Industries Limited

240 Traders Boulevard, Mississauga, Ontario L4Z 1W7
Tel: (905) 890-2113 Fax: (905) 890-5338
www.til.ca

| REVISIONS for 99re255 Sections 1 – 3 | | | | |
|--------------------------------------|---|--|-----------|----------|
| REV | SECTION - PAGE - | DESCRIPTION | DATE | APPROVAL |
| A | Section 2 (all pages) | Change Section 2 to reflect operating instructions for ROV20 software. | MAR 2000 | R.R. |
| B | Section 2 (all pages) | Change Section 2 to reflect operating instructions for ROV44 software. | JUNE 2000 | R.R. |
| C | page 3-8 Section 2 (all pages) | Change figure 3-4 to reflect new jumper locations. Change Section 2 to reflect operating instructions for R1V00 software. | SEPT 2000 | R.R. |
| D ISSUE 1 | Section 2 (all pages) | Expand descriptions of commands | OCT 2000 | A.M. |
| D ISSUE 2 | 3-7, 3-8 Section 2 all pages Section 3 pg. 3-7, 3-8 | Update Fig 3-4 & 3-5 Added 'Set Command Permissions', L4-1. Moved: Upload, Download, Side tone adjust commands from L4-2, -8, -7 to L3-2, -8, -7 Moved: Edit Noise Squelch L4-9 to L2-9 Fixed typo's , added information for clarity | MAY 2001 | A.M. |
| D ISSUE 3 | Front matter pg. ii, iii Section 2 2-10 to 2-12 | Version 2 software TiL Address change Added STC Approval notice | JUNE 2003 | A.M. |
| D ISSUE 4 | Section 1 Section 2 all | Section 1 & 2 – re done for 2.0.0 software | FEB 2004 | A.M. |
| D ISSUE 5 | Front Section 2 | Add section number to TOC page references 2-17, 2-21, 2-23, 2-34 | APR 2004 | A.M. |
| D ISSUE 6 | Overall | CR#08295 - Issue updated. File formatting may cause pages to be re-sequenced by adding headers, footers, etc. Correct typing errors as found. | SEPT 2008 | |
| Chgs to D Issue 6 | 2-3 2-4 | Table 2, 2-1 renamed, simplified (improved upon). New table added as Table 2-2, S2-4 Section 2 pages re-sequenced as a result. | | |
| D Issue 7 | 2-1 to 2-35 2-2 L4-3, L4-9 3-7,3-8 | Section 2 Changed Operator Level x to Command/Operator Level x Example paragraph corrected added the line "To access the ... " Fig 3-4, 3-5 updated (locate J6-J4) Added this CR#08428 on revision page | DEC 2008 | |
| D Issue 8 | 2-15 2-30 | CR#09763 Note added Fig 2-4.1 changed, 2.6 I added info regarding keyloader (for future use) | MAY 2009 | |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

ESD CAUTION



This unit contains static sensitive devices. Wear a grounded wrist strap and/or conductive gloves when handling printed circuit boards.

FCC COMPLIANCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet or circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications not expressly approved by Technisonic Industries could void the user's authority to operate the equipment.

WARRANTY INFORMATION

The Model TDFM-136, VHF/FM Transceiver is under warranty for one year from date of purchase. Failed units caused by defective parts, or workmanship should be returned to:

Technisonic Industries Limited
240 Traders Boulevard
Mississauga, Ontario L4Z 1W7

Tel: (905) 890-2113
Fax: (905) 890-5338

NOTICE: The above stated address supersedes all others that may appear otherwise in this manual.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

STC APPROVAL NOTE

Presently, no TSO standard exists for airborne FM transceivers. To make it easier for installation agencies to provide their customers with an approved installation supported by an effective Airworthiness Approval, Technisonic has secured Supplemental Type Certificate (STC) Approvals (both US and Canadian) on its Airborne FM products for many helicopters currently being delivered in the US and Canada as well as a number of single engine fixed wing aircraft. The above referenced DO-160C test data is also on file and available from Technisonic to support approval requirements in airframes for which Technisonic does not possess an STC.

Approved aircraft types are listed in the attachments to the formal STC documents. These STC's are the exclusive property of Technisonic and require the written authority of Technisonic for their use. To assist Factory Authorized Technisonic Dealers in the certification process, we have placed copies of our Canadian and US STC's on our web site along with a letter of authorization for their use. These documents may be downloaded and used as support for the technical submission to FAA or Transport Canada. Only authorized factory dealers/installers are permitted to download and make use of these documents on behalf of their customers (end users) in support of regulatory agency approval. Please refer to the Technisonic web site www.til.ca for the latest issue of available STC's and letter of authorization for use.

COPYRIGHT NOTICE

This document contains designs and other information which are the property of Technisonic Industries Ltd. Except for rights expressly granted by contract to the Canadian Government, or to the United States Government, this document may not, in whole or in part, be duplicated or disclosed or used for manufacture of the part disclosed herein, without the prior permission of Technisonic Industries Ltd.

WARNING AND DISCLAIMER

This manual is designed to provide information about the TDFM-136. Every effort has been made to make this manual as complete and accurate as possible.

TABLE OF CONTENTS

| SECTION | TITLE | PAGE |
|---------|-------------------------|------|
| | Table of Contents | i |
| | List of Figures | iv |
| | List of Tables | v |

SECTION 1 GENERAL DESCRIPTION

| | | |
|------------|--|-----|
| 1.1 | Introduction | 1-1 |
| 1.2 | Description | 1-1 |
| 1.3 | Purpose of Equipment | 1-1 |
| 1.4 | Model Variation | 1-2 |
| 1.5 | Technical Characteristics | 1-2 |
| 1.6 | Certification Summary | 1-4 |

SECTION 2 OPERATING INSTRUCTIONS

| | | |
|--------------|---|------|
| 2.1 | Command Methodology | 2-1 |
| 2.2.1 | Programming Guide | 2-3 |
| 2.2 | Operator Level 1 Commands | 2-5 |
| L1-1 | Increase Display Brightness | 2-5 |
| L1-2 | Increase Display Brightness | 2-5 |
| L1-3 | Edit or Select Channel Operating Mode | 2-5 |
| L1-4 | Scroll Backwards through Available Memories | 2-6 |
| L1-5 | Start/Stop Scan | 2-6 |
| L1-6 | Scroll Forward through Available Memories | 2-6 |
| L1-7 | Edit Channel Operating Frequency | 2-7 |
| L1-8 | Decrease Display Brightness | 2-7 |
| L1-9 | Edit Channel Squelch Mode | 2-8 |
| L1-9.1 | Edit Noise Squelch Value | 2-8 |
| L1-9.2 | Select CTCSS Tone | 2-9 |
| L1-9.3 | Select DCS Code | 2-9 |
| L1-9.4 | Edit Project 25 Talkgroup Value | 2-10 |
| L1-9.5 | Edit Project 25 NAC Value | 2-10 |
| L1-9.6 | Edit Project 25 ID Call Value | 2-11 |
| L1-0 | Command Level Up | 2-11 |
| L1-# | Not Used | 2-11 |
| L1-* | Not Used | 2-11 |
| 2.3 | Operator Level 2 Commands | 2-12 |
| L2.1 | Create/Edit All Channel Information | 2-12 |
| L2-1.1 | Entering a Memory Number | 2-12 |
| L2-1.2 | Enter a Scan Zone & Enabling/Disabling Scan | 2-12 |
| L2-1.3 | Enter a Text Description | 2-13 |
| L2-1.4 | Enter an Operating Mode | 2-13 |
| L2-1.5 | Enter a Frequency | 2-13 |
| L2-1.6 | Enter the Squelch Parameters | 2-13 |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

| SECTION | TITLE | PAGE |
|------------|---|-------------|
| L2-2 | Copy Guard to Main | 2-13 |
| L2-3 | Lock Keypad | 2-13 |
| L2-4 | Not Used | 2-13 |
| L2-5 | Edit Scan List & Enable/Disable Scan | 2-14 |
| L2-6 | Edit Channel Text Description | 2-14 |
| L2-7 | Create Shadow Channel | 2-15 |
| L2-7.1 | Selecting a Primary Number to Base the Shadow On | 2-15 |
| L2-7.2 | Selecting a Primary Number to Base the Shadow On | 2-16 |
| L2-8 | Copy Main to Guard | 2-16 |
| L2-9 | Edit Unit ID Value | 2-17 |
| L2-0 | Command Level Up | 2-17 |
| L2-* | Command Level Down | 2-17 |
| L2-# | Not Used | 2-17 |
| 2.4 | Operator Level 3 Commands | 2-18 |
| L3-1 | Select Boot Channel | 2-18 |
| L3-2 | Unused | 2-18 |
| L3-3 | Select Hex/Decimal Edit Mode | 2-18 |
| L3-4 | Display Software Release and Version Information | 2-19 |
| L3-5 | Edit Scan Parameters | 2-19 |
| L3-5.1 | Setting the Revert Mode default: last contacted | 2-19 |
| L3-5.2 | Setting the Reply-Timer Range: 0-20s, Default: 3 seconds | 2-20 |
| L3-5.3 | Setting the Monitor-Timer Range: 1-90s, Default: 10 seconds | 2-20 |
| L3-5.4 | Setting the Delay-Timer Range: 0-15s, Default: 5 seconds | 2-21 |
| L3-6 | Configure the PTT Timer | 2-22 |
| L3-7 | Side tone Audio Level Adjust | 2-22 |
| L3-8 | PC Data Upload/Download | 2-22 |
| L3-9 | Display Channel Squelch Parameters | 2-23 |
| L3-0 | Command Level Up | 2-23 |
| L3-* | Command Level Down | 2-23 |
| L3-# | Unused | 2-23 |
| 2.5 | Maintenance Commands | 2-24 |
| | Accessing the Maintenance Commands | 2-24 |
| L4-1 | Set Default Record | 2-25 |
| L4-2 | Unused | 2-26 |
| L4-3 | Set Command Permissions | 2-26 |
| L4-4 | Unused | 2-27 |
| L4-5 | Unused | 2-27 |
| L4-6 | Unused | 2-27 |
| L4-7 | Unused | 2-27 |
| L4-8 | Unused | 2-27 |
| L4-9 | Set Squelch Restrictions | 2-28 |
| L4-9.1 | Restricting the Squelch Modes Available to Select | 2-28 |
| L4-9.2 | Restricting the Squelch Modes Value Edit | 2-29 |
| L4-9.3 | Restricting the CTCSS Tone and DCS Code Values | 2-29 |
| L4-0 | Unused | 2-29 |
| L4-# | Unused | 2-29 |
| L4-* | Command Level Down | 2-29 |

| SECTION | TITLE | PAGE |
|------------|--------------------------------------|------|
| 2.6 | Understanding Radio Operation | 2-30 |
| | Basic Radio Operation | 2-30 |
| | Channels and Memories | 2-31 |
| | Memory Parameters | 2-31 |
| | Operating Modes | 2-31 |
| | Squelch Modes | 2-32 |
| | IDCall Operation | 2-33 |
| | Scan Operation | 2-33 |
| | Mixed Mode Operation | 2-34 |

SECTION 3 INSTALLATION INSTRUCTIONS

| | | |
|-------------|---|-----|
| 3.1 | General | 3-1 |
| 3.2 | Equipment Packing Log | 3-1 |
| 3.3 | Transceiver Installation | 3-1 |
| 3.4 | Installation Kit – Contents | 3-1 |
| 3.5 | Antenna Installation | 3-1 |
| 3.6 | Installation - Pin Locations and Connections | 3-2 |
| 3.7 | Wiring Instructions | 3-4 |
| 3-7.1 | Main Power +28VDC | 3-4 |
| 3-7.2 | Main Ground | 3-4 |
| 3-7.3 | PTT (Ground Keying) | 3-4 |
| 3-7.4 | Front Panel Back Lighting | 3-4 |
| 3-7.5 | Audio Outputs (600 ohms and 4 Ohms) | 3-4 |
| 3-7.6 | Audio Output Ground | 3-4 |
| 3-7.7 | Mic Signal Input | 3-4 |
| 3-7.8 | Memory Up/Memory Down | 3-6 |
| 3-7.9 | Data Input/Output | 3-6 |
| 3.8 | Transmitter Side Tone Level Adjustment | 3-6 |
| 3.9 | Main and Guard Noise Squelch Adjustment | 3-6 |
| 3.10 | Reference Layouts | 3-7 |

APPENDICES

| | | |
|-------------------|--|-----|
| APPENDIX A | CTCSS TONES and DCS CODES | A-1 |
| APPENDIX B | Post Installation EMI Test Instructions | B-1 |
| | PURPOSE | B-1 |
| | TEST CONDITIONS | B-1 |
| | METHODOLOGY | B-1 |
| | RESULTS | B-1 |
| | PROCEDURE | B-2 |

LIST OF FIGURES

| FIGURE | TITLE | PAGE |
|--------|--|------|
| 2-1 | User Screen showing the Command Level Display Position | 2-1 |
| 2-2 | User Screen to Enter a Memory Number | 2-5 |
| 2-3 | User Screen to Edit the Operating Mode | 2-5 |
| 2-4 | User Screen during Scan | 2-6 |
| 2-5 | Selecting a Memory/Channel that Doesn't Support Scan | 2-6 |
| 2-6 | User Screen to Edit the frequency | 2-7 |
| 2-7 | User Screen to Edit the Squelch Mode | 2-8 |
| 2-8 | User Screen to Edit the Squelch Value | 2-8 |
| 2-9 | User Screen to Edit the CTCSS Tone Value | 2-9 |
| 2-10 | User Screen to Edit the DCS Code Value | 2-9 |
| 2-11 | User Screen to Edit the P25 TalkGroup Value | 2-10 |
| 2-12 | User Screen to Edit the P25 NAC Valu | 2-10 |
| 2-13 | User Screen to Edit the P25 ID Call Value | 2-11 |
| 2-14 | User Screen to Enter a Scan List or Enable/Disable Scan | 2-14 |
| 2-15 | User Screen Showing Scan Disabled for this Memory | 2-14 |
| 2-16 | User Screen to Edit the Text Description | 2-14 |
| 2-17 | User Screen to Enter a Primary Memory for the Shadow Channel | 2-15 |
| 2-18 | User Screen to Enter a Shadow Channel Memory Number | 2-16 |
| 2-19 | User Screen to Edit the Shadow Channel Parameters (text) | 2-16 |
| 2-20 | User Screen to Select Main Channel Boot Mode | 2-18 |
| 2-21 | User Screen to Select the Numeric Edit Mode | 2-18 |
| 2-22 | User Screen Showing the Code Release Information | 2-19 |
| 2-23 | User Screen to Select the Scan Revert Mode | 2-19 |
| 2-24 | User Screen to Set the Scan Reply Timer Value | 2-20 |
| 2-25 | User Screen to Set the Scan Monitor Timer Value | 2-20 |
| 2-26 | User Screen to Set the Scan Delay Timer Value | 2-21 |
| 2-27 | User Screen to Set the PTT Timer Value | 2-21 |
| 2-28 | User Screen to Set the Sidetone Audio Level | 2-22 |
| 2-29 | User Screen to Upload/Download Memory Data to the PC | 2-22 |
| 2-30 | User Screen to Display the Receive Squelch Parameter Values | 2-23 |
| 2-31 | User Screen to Display the Transmit Squelch Parameter Values | 2-23 |
| 2-32 | The Screw positions to remove the Left-hand Side Panel | 2-24 |
| 2-33 | The Shunt Position to Enable Level 4 Access | 2-24 |
| 2-34 | The Screen to Edit the Level 1 Permissions | 2-26 |
| 2-35 | The Screen to Edit the Level 2 Permissions | 2-26 |
| 2-36 | User Screen to Edit the Level 3 Permissions | 2-26 |
| 2-37 | The Screen to Set Available Squelch Modes for Analog Receive | 2-28 |
| 2-38 | The Screen to Restrict Editing of the Squelch Mode Value | 2-29 |
| 2-39 | The Screen to Restrict Available CTCSS Tones | 2-29 |
| 2-40 | The Screen to Restrict Available DCS Codes | 2-29 |
| 2-41 | The TDFM-136 Front Panel Layout | 2-30 |
| 2-42 | Identifying Graphic for Primary Channel with Shadows | 2-35 |
| 2-43 | Identifying Graphic for Shadow Channel | 2-35 |
| 3-1 | Transceiver Mounted View of the 15-Pin Connector | 3-2 |
| 3-2 | Outline Drawing for TDFM-136 Transceiver | 3-3 |
| 3-3 | Wiring Connections for TDFM-136 Transceiver | 3-5 |
| 3-4 | Control Points for TDFM-136 Main RF Board | 3-7 |
| 3-5 | Control points for the TDFM-136 MCU Board | 3-8 |

LIST OF TABLES

| TABLE | TITLE | PAGE |
|-------|---|------|
| 1-1 | TDFM-136 – General Characteristics | 1-2 |
| 1-2 | TDFM-136 – Operational Characteristics | 1-3 |
| 1-3 | TDFM-136 – Receiver Characteristics – Main and Guard | 1-3 |
| 1-4 | TDFM-136 – Transmitter Characteristics | 1-4 |
| 1-5 | TDFM-136 – Environmental Testing Summary | 1-4 |
| 2 | Command Levels | 2-1 |
| 2-1 | Command Level Reference | 2-3 |
| 2-2 | Abbreviations and Symbols Used | 2-4 |
| 2-3 | Channel Operating Modes | 2-5 |
| 2-4 | Receive and Transmit Squelch Modes | 2-8 |
| 2-5 | Extra Characters for Text Edit | 2-15 |
| 2-6 | Channel Template Factory Defaults | 2-25 |
| 2-7 | Permission Applicability with respect to Command Levels | 2-27 |
| 2-8 | Squelch Modes that can be Restricted | 2-28 |
| 2-9 | Receive and Transmit Squelch Modes | 2-32 |
| 3-1 | TDFM-136 - Rear Connector Pin Assignments | 3-2 |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

This page left intentionally blank.

SECTION 1 - GENERAL DESCRIPTION

1.1 INTRODUCTION

This publication provides operating and installation information for the TDFM-136, Digital Transceiver manufactured by Technisonic Industries Limited. The TDFM-136 is Project 25 (P25), Phase 1 compliant. The unit offers digital or conventional analog FM communications over an extended frequency range with selectable channel spacing and is intended for use (in the U.S.) only by government agencies or contractors thereto, who have obtained licensing for operation in the 136-150 MHz portion of the band. If the TDFM-136 transceiver is used in CANADA, operation is restricted to the following sub bands: 138-144, 148-148.99, 149.005-150.005 and 150.05-174 MHz. Furthermore the frequency agile transceiver is restricted to airborne use and must not be operated as a base station in Canada.

1.2 DESCRIPTION

The TDFM-136, Transceiver is a frequency agile, fully synthesized airborne transceiver capable of operating in the 136.000 MHz to 174.000 MHz frequency range in 2.5 kHz increments with either 25 kHz analog, 12.5 kHz analog channel spacing and P25, 12.5 kHz digital modulation on a channel by channel basis. The Transceiver can operate without restriction on any split frequency pair in the band and also incorporates a two channel synthesized guard receiver.

The TDFM-136 Transceiver provides 230 operator accessible memory positions. Each of which is capable of storing Scan List membership information, up to eight (8) character alphanumeric identifier, and Operating Mode information. In addition each memory position contains information for both transmit and receive including: frequency, CTCSS tone, DCS (DPL) code, P25 TalkGroup, and P25 Network Access Code (NAC) information.

Channel operating parameters, including frequency and other related data, are presented on a 48-character, two-line LED matrix display. Data entry and function control takes place via a 12-button keypad.

1.3 PURPOSE OF EQUIPMENT

The TDFM-136, Digital VHF/FM Transceiver is designed to provide secondary airborne communications to facilitate operations which are typically performed in a low altitude environment. The transmitter section of this unit has a minimum of 8 watts and does not exceed 10 watts output power, which may be reduced by a front panel switch to 1 watt, in order to reduce interference to land based systems.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

1.4 MODEL VARIATION

There are four variations of the Model TFM-403 Transceiver. All units offer identical features and performance except for the following differences:

| | |
|-----------------------------|--|
| TDFM-136, P/N 981087-1 | GREEN display and 28 Volt back lighting. |
| TDFM-136, P/N 981087-1 (5V) | GREEN display and 5 Volt back lighting. |
| TDFM-136, P/N 981087-2 | RED display and 28 Volt back lighting. |
| TDFM-136, P/N 981087-2 (5V) | RED display and 5 Volt back lighting. |

Both P/N's 981087-1 and 981087-2 are always provided with 28 Volt back lighting unless a specific request is made for 5 Volt AC operation.

1.5 TECHNICAL CHARACTERISTICS

The tables below provide the technical characteristics for the Technisonic Industries Ltd. Model TDFM-136.

| TABLE 1-1 TDFM-136 – General Characteristics | |
|--|--|
| Characteristic | Specification |
| Dimensions (including heat sink) | Approx. 8.0" X 3.0" X 5.75" |
| Weight | Approx. 3.5 Lbs (1.6 Kg) |
| Mounting | Panel Mount via DZUS fasteners |
| Power Requirement: Voltage Current | 28.0 VDC, $\pm 15\%$ Receive - 0.7 A Max. Transmit Low Power (1W) - 1.3 A Max. Transmit High Power (8-10W) - 2.0 A Max. |
| Audio Output Power: Headset Speaker Output | 0.5 Watts into 600 ohms 2.5 Watts min. into 4 ohms |
| Back Lighting | 28 Volts (standard) 5 Volts (specify) |
| Display Colour | Green (standard) Red (specify) NVG (optional) |
| Temperature Range: Operating Storage | -45°C to +70°C -55°C to +85°C |
| Altitude | 50,000 feet |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

| TABLE 1-2 TDFM-136 – Operational Characteristics | |
|--|---|
| Characteristic | Specification |
| Frequency Range: | 136.000 to 174.000 MHz |
| Operating Modes: | Conventional analog: 12.5 / 25 kHz. P25 CAI: 12 KBPS FSK, 9.6 KBPS C4FM |
| Channel Spacing: | 25 kHz. or 12.5 kHz |
| Programmable Memories: Scan Lists Description Operating Modes Frequency Squelch Modes | 230 memories 15 scan lists Up to 8 characters, alpha-numeric Analog Wide, Analog Narrow, P25 Digital Rx/Tx (Simplex/Duplex), 136.0000 – 174.0000 Rx/Tx (Simplex/Duplex), CTCSS Tones, DCS Codes, P25 TalkGroup, P25 NAC |
| Guard Receiver: Description Operating Modes Frequency Squelch Modes | 2 channels programmed with: Up to 8 characters, alpha-numeric Analog Wide, Analog Narrow, Digital Rx/Tx (Simplex/Duplex), 136.0000 – 174.0000 MHz. Rx/Tx (Simplex/Duplex), CTCSS Tones, DCS Codes, P25 TalkGroup, P25 NAC |
| CTCSS Tones | 42 CTCSS tones, including all standard tones. |
| DCS Codes | All standard DCS (DPL ¹) codes |
| P25 TalkGroup | \$0000 to \$FFFF (0 to 65535) |
| P25 Network Access Code (NAC) | \$000 to \$FFF (0 to 4095) |

DPL¹ is a trademark of Motorola Corporation

| TABLE 1-3 TDFM-136 – Receiver Characteristics – Main and Guard | |
|---|------------------------|
| Characteristic | Specification |
| Sensitivity at 12 dB SINAD | -116dBm |
| Adjacent Channel Selectivity | -60dB (25 or 12.5 kHz) |
| Spurious Attenuation | -70 dB |
| Third Order Intermodulation | -70 dB |
| Image Attenuation | -80 dB |
| FM Acceptance | ± 6 kHz |
| Hum and Noise | better than 45dB |
| Audio Distortion | less than 5% |
| Antenna Conducted Emission | less than -57dBm |

| TABLE 1-4 TDFM-136 – Transmitter Characteristics | |
|--|---|
| Characteristic | Specification |
| RF Output Power: Low High | 100mW to 1W (internal adjustment). 10 watts. |
| Output Impedance | 50 ohms |
| Maximum Deviation: Wide (25 kHz) Narrow (12.5 kHz) | ± 5 kHz ± 2.5 kHz |
| Maximum Deviation – Narrow | ± 2.5 kHz (12.5 kHz mode) |
| Spurious Attenuation | -90 dB below carrier level |
| Frequency Stability | ± 2.5 ppm |
| Microphone Circuit | Carbon or equivalent |
| Sidetone Output | 0.5W (max) into 600 ohms |
| Harmonic Attenuation | -65 dB below carrier level |
| FM Hum And Noise | -40 dB |
| Audio Input | 50 mV at 2.5 into 200 Ω input circuit for ± 3.5 deviation, adjust. |
| Audio Distortion | Less than 5% |

1.6 CERTIFICATION SUMMARY

The following table gives a summary of DO-160D Environmental Testing for Technisonic Model TDFM-136, VHF Digital Transceiver.

| TABLE 1-5 TDFM-136 – Environmental Testing Summary | | |
|---|----------------|---|
| Conditions | Section | Description of Conducted Tests |
| Temperature and Altitude | 4.0 | Equipment tested to categories B2 and D1. |
| Temperature Variation | 5.0 | Category B. |
| Humidity | 6.0 | Category A. |
| Operational Shock and Crash Safety | 7.0 | Category A. |
| Vibration | 8.0 | Equipment is tested without shock mounts to categories S and U. |
| Magnetic Effect | 15.0 | Equipment is class A. |
| Power Input | 16.0 | Category B. |
| Voltage Spike | 17.0 | Category B. |
| Audio Frequency Susceptibility | 18.0 | Category B. |
| Induced Signal Susceptibility | 19.0 | Category A. |
| Radio Frequency Susceptibility | 20.0 | Category U. |
| RF Emission (DO-160D) RF Emission (DO-160C) | 21.0 | Category B. Category Z. |
| Electrostatic Discharge | 25.0 | Category A. |

SECTION 2 – OPERATING INSTRUCTIONS

This section provides the user with a reference of the keypad accessible programming features of the Technisonic TDFM-136 VHF/FM Digital Transceiver.

This section is divided into subsections as follows:

- 2.1 command structure overview and terms
- 2.2, 2.3, 2.4 and 2.5 detailed command descriptions by level
- 2.6 detailed operating description

2.1 COMMAND METHODOLOGY

This section describes how the TDFM-136 command structure is organized.

Command Levels

In order to accommodate the necessary commands, the commands have been divided into different levels, each command level has up to 12 commands numbered 0-9, # and *; the zero (0), and the ESC (*) key are functions for every level, they allow the user to move between levels as follows:



step up through command levels



step down through command levels

When stepping through command levels, the indicated level is shown in subscript in the 4th character position on the lower line of the display. Note that this display position is left blank for the default level (level1). Table 2-1 shows the command levels and the associated display character.

| Table 2 Command Levels | |
|-------------------------------|----------------|
| COMMAND LEVEL | DISPLAY |
| Command/Operator L1 | blank |
| Command/Operator L2 | 2 |
| Command/Operator L3 | 3 |
| Command/Maintenance L4 | 4 |

Figure 2-1 below shows the front panel display for different Command levels.

| | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | D | 1 | 3 | 4 | . | 0 | 0 | 0 | 0 | R | g |
| G | D | 2 | 3 | G | u | a | r | d | 2 | | | w | 1 | 7 | 4 | | 0 | 0 | 0 | 0 | R | t |

FIGURE 2-1 User Screen showing the Command Level Display Position

In addition to the 3-operator available command levels, the unit can be put into a mode that allows access for Maintenance. This 4th command level (L4) allows authorized personnel to set operating policy for the radio through the use of 'Permissions'. These are explained in section 2-8. *This command level should NEVER be enabled in flight.*

In order to restrict access to the Command/Maintenance Level 4, the side cover must be removed, and a maintenance jumper must be installed on the MCU board (see **Figure 2-33**).

Command Types

There are two basic command types: Inherent and Edit. An **Inherent** command is one that requires no additional input from the user, such as the 'memory brightness' or 'scroll memory' commands. An **Edit** command requires further input from the user.


Command Scope


The Main or the Guard Channel can be affected by most, but not all, edit commands. The channel to be edited depends on the position of the **MN/GD** and the **G1/G2** front panel switches. In this manual, the scope of the command is given on the command title line as follows:

(MN/GD) for a command that is valid in both Main and Guard,
(MN) for a command that is valid for Main only
Blank for a command that is not subject to channel restrictions.




Command Conventions

After selecting the command, the system expects further input from the user. All edit commands may be terminated in the same way:


 accept the entry and return

 abandon the entry and exit

The commands that allow the user to choose an option from a list will always use the up/down arrows (**key 2** and **key 8** to step UP and DOWN respectively through the available choices). In addition, the key that was used to enter the function can be used to step UP through the available choices.

Example: The L1-3 Mode command allows the user to select the radio's operating mode (analog wide, analog narrow, or P25 digital). Once the user has selected the command,  they can press  to step up, or  to step down through the choices. The advantage of the 'entry key' step method is that the user does not have to move their finger to a different key to make the choice once the command has been selected.

2.2.1 Programming Guide

- The channel to be edited depends on the position of the **MN/GD** and the **G1/G2** front panel switches. Table 2-1 below shows the commands divided into command levels: one, two, three, and four.
- Radio’s default Command/Operator Level 1 is the only command level not displayed in the 4th character position on the lower row of the display.
- To step through the Command Level, press the  key (refer to Table 2-1). The radio defaults back to the command level 1 in approximately 5 seconds.

FOR ABBREVIATION AND SYMBOL CHART see Table 2.2

| TABLE 2-1 Command Level Reference | | | | |
|-----------------------------------|------------------------------|------------------------------|------------------------------|---|
| Key | Command/ Operator Level 1 | Command/ Operator Level 2 | Command/ Operator Level 3 | ¹ Command/ Maintenance Level 4 |
| 1 CHAN | Select Main Memory | Program New Memory | Select Boot Memory | Set Default Record |
| 2 up | Display – Brighter | Copy Guard to Main | n/u | n/u |
| 3 MODE | Edit Mode | Lock Keypad | Select HEX/Decimal Edit | Set Cmd Permissions |
| 4 back | Scroll Memory Down | n/u | Display Software rev | n/u |
| 5 SCAN | Scan ON/OFF | Edit Scan | Set Scan Parameters | n/u |
| 6 fwd | Scroll Memory Up | Edit Description | Set PTT timer | n/u |
| 7 FREQ | Edit Frequency | Create Shadow Channel | Set Side tone Audio | n/u |
| 8 down | Display – Dimmer | Copy Main to Guard | PC Communications | n/u |
| 9 SQL | Edit Squelch | Set Unit ID | Display Squelch Values | Set SQL Permissions |
| 0 PROG | Go to next level | Go to next level | Go to next level | n/u |
| # ENTER | n/u | n/u | n/u | n/u |
| * ESC | n/u | Go to Previous level | Go to Previous level | Go to Previous level |

¹ Command/Maintenance Level 4 allows qualified personnel to configure Access Permissions for the TDFM-136 radio.


¹ NEVER FLY having the radio with Level 4 commands enabled. This Level 4 is for maintaining the radio only, the radio may not respond in real time, or as expected when the Maintenance (Level 4) is enabled!

NOTE: n/u indicates command keys that are not currently implemented.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

TABLE 2-2 ABBREVIATIONS AND SYMBOLS USED

| Abbreviation & Symbols | Section / paragraph | DESCRIPTION |
|---|----------------------------|---|
| MN/GD | 2-1 | Command that is valid in both Main and Guard |
| MN | 2-1 | Command that is valid for Main only |
| Blank | 2-1 | Command that is not subject to channel restrictions |
| # | 2-2 | Accept the entry and return |
| * | 2-2 | Abandon the entry and exit |
| w | L1-3 | Channel Operating mode Analog Wide (25 kHz) |
| n | L1-3 | Channel Operating mode Analog Narrow (12.5 kHz) |
| D | L1-3 | Channel Operating mode Digital (12.5 kHz) |
|  | L1-5, L2-3 | The lock symbol indicates that all keypad keys are disabled. |
| \$ | L1-9.1, L3-3 | (\$) symbol is used when indicating a Hexadecimal number, 0-16 (\$0-\$F). |
| ● | 2-26 | Shows a command that has a distinct permission. |
| ● | 2-26 | Shows a command that is available in Guard, but permission is controlled by Main. |
| X | 2-26 | Shows a command that is NOT available for the channel. |
| Rx, Tx | L1-9, L2-9, L3-9, L4-9 | Analog squelch mode 'x' is the default squelch mode (noise squelch). |
| Rt, Tt | L1-9, L2-9, L3-9, L4-9 | Analog squelch mode 't' indicates that both receive and transmit use CTCSS tone selective squelch. The tones may be the same or different for receive or transmit. |
| Rc, Tc | L1-9, L2-9, L3-9, L4-9 | Analog squelch mode 'c' indicates that both receive and transmit use DCS (digitally coded squelch) code selective squelch. The codes may be the same or different for receive or transmit. |
| T- | L1-9, L2-9, L3-9, L4-9 | Analog squelch mode '-' is valid for transmit only, and indicates that transmit is disabled for this memory. |
| Rm | L1-9, L2-9, L3-9, L4-9 | Digital squelch mode 'm' is valid for receive only, and indicates that any non-encrypted P25 compliant digital signal, regardless of NAC or TalkGroup setting, will be received. |
| Rn | L1-9, L2-9, L3-9, L4-9 | Digital squelch mode 'n' is valid for receive only, and indicates that any non-encrypted P25 compliant digital signal, having the correct NAC, will be received. |
| Rg, Tg | L1-9, L2-9, L3-9, L4-9 | Digital squelch mode 'g' is valid for receive and transmit only. For receive it indicates that any non-encrypted P25 compliant digital signal, having the correct NAC, and the correct TalkGroup will be received. For transmit it indicates that the specified NAC and TalkGroup codes will be transmitted. |
| Ti | L1-9, L2-9, L3-9, L4-9 | Digital squelch mode 'i' is valid for transmit only, and indicates that the transmitted signal will carry the ID of a specific radio. Only a radio with that ID programmed as its UNIT ID, should be able to receive that signal. |
| T- | L1-9, L2-9, L3-9, L4-9 | Digital squelch mode '-' is valid for transmit only, and indicates that transmit is disabled for this memory. |

2.2 COMMAND/OPERATOR LEVEL 1

This section lists the commands available to the user in Level 1. The availability of the commands is subject to the restrictions set by the Permissions policy (see section 2.5, L4-3). Default level – no display is shown



L1-1 Select the Operating Memory for the Main Channel (MN)

This command allows the user to select the MAIN channel that the radio is operating on. Upon selecting this command the cursor will appear at the first digit in the channel number as shown:

| | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|--|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|--|--|--|--|--|--|
| 0 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| E | n | t | e | r | | N | u | m | b | e | r | | (| 0 | - | 9 | , | # | * |) | | | | | | |

FIGURE 2-2 User Screen to Enter a Memory Number

Now, select a number from 001 to 230 as follows:



to



decimal mode: enter number, cursor automatically advances



accept the entry and return



abandon the entry and exit

Note: If the channel number selected is out of range then the cursor will remain until the user enters a valid number. If there is no information programmed for the channel, the editor will return to the previously displayed channel.



L1-2 Increase Display Brightness

Press and hold the up arrow (2) key to increase the brightness of the LED display, it stops at maximum.



L1-3 Edit / Select Channel Operating Mode (MN/GD)

This command will edit the Operating Mode of the selected channel. Upon selecting this command the cursor will appear at the MODE position. Table 2-3 showing the available Operating Modes.






| TABLE 2-3 Channel Operating Modes | |
|-----------------------------------|--------------------------|
| INDICATOR | OPERATING MODE |
| 'w' | Analog Wide (25 kHz) |
| 'n' | Analog Narrow (12.5 kHz) |
| 'D' | Digital (12.5 kHz) |

Note: If an Operating Mode is selected that is incompatible with the current Squelch Mode, then the Squelch mode will automatically be changed to one that is acceptable for that Operating Mode (e.g. 'x' for analog, 'm' for Digital Rx and 'g' for Digital Tx).

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| 0 | 0 | 1 | | M | a | i | n | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g | |
| E | d | i | t | | M | o | d | e | | (| ↑ | ↓ | 3 | , | # | * |) | | | | | | | |

FIGURE 2-3 User Screen Edit / Select Mode with Indicator in Digital Mode

You may now edit the Operating Mode as follows:

-    step through the available entries
-  accept the entry and return
-  abandon the entry and exit



L1-4 Scroll Backwards through Available Memories

This command will scroll the Main Channel BACK, or down, through the programmed memories until reaching the lowest memory programmed, it will then wrap around and restart from the top. Once the user releases the button the displayed characteristics will be programmed. The scroll speed will increase as the button is held.



L1-5 Start/Stop Scan (MN)

This command allows the user to start and stop Scan operation. The system will scan the channels that are in the same scan list that the currently displayed Main channel is a member of. Note that the channels in the scan list must have scan enabled (see command L2-5) to be scanned. If the memory scan has been enabled then the following screen appears:


 
| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|--|--|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | 1 | M | a | i | n | | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| G | D | 1 |  | G | u | a | r | d | 1 | | | | | n | 1 | 5 | 4 | . | 0 | 0 | 0 | 0 | R | t |

FIGURE 2-4 User Screen during Scan

Once scan has started the scan list digit flashes to indicate that the unit is in SCAN mode. Also note that the key level indicator position has the lock symbol  indicating that all keypad keys are disabled except for:

-   stop scan
-   display brightness

Front panel switch operation is modified as well.

Operation of **MN/GD** or **G1/G2** will terminate scan and restore normal operation of keys and switches. The front panel **Squelch** button is disabled. The **HI/LO** power switch is unaffected.

If the user tries to start scan on a channel or memory that doesn't support scan, you will see:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| E | r | r | o | r | : | | N | O | N | - | S | c | a | n | n | e | d | | C | h | a | n | | |

FIGURE 2-5 Selecting a Memory/Channel that Doesn't Support Scan



L1-6 Scroll Forward through Available Memories (MN)

This command will scroll FORWARD, or up, through the programmed channels, scroll speed will increase as the button is held and the scroll will wrap around and restart from the bottom. Once the user releases the button the displayed characteristics will be programmed.



L1-7 Edit Channel Operating Frequency (MN/GD)

This command allows the user to edit the **Operating Frequency** of the selected channel. The frequency will be edited in duplex mode: first Receive, then Transmit. Once the receive parameter is entered, the 2nd last character in the display will switch from "R" to "T", the user can now enter the transmit value. Note that the receive value is automatically entered, so to get simplex operation, simply accept this entry. The edit screen appears as follows:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| 0 | 0 | 1 | | M | a | i | n | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g | |
| E | d | i | t | | F | r | e | q | u | e | n | c | y | | (| 0 | - | 9 | , | # | * |) | |

FIGURE 2-6 User Screen to Edit the Frequency

Upon start, the cursor appears at the second character in the Frequency field of the channel to be edited. The user may now enter the desired operating frequency as follows:



to



decimal mode: enter number, cursor automatically advances



accept the entry and return



abandon the entry and exit

The editor will not accept a value outside the limits of 136.0000 MHz. to 174.0000 MHz. In addition frequency selection is limited to 2.5 kHz increments in all Operating modes.



L1-8 Decrease Display Brightness

Press and hold the down arrow (8) key to decrease the brightness of the LED display, it stops at minimum.

9
SQL


 



L1-9 Edit Channel Squelch Mode (MN/GD)

This command will edit the **Squelch Mode** of the selected channel, and then allow the user to edit the associated Squelch Mode Value. As with the Frequency Edit function above, the Squelch Edit is in duplex mode, Receive followed by Transmit. The edit screen appears as follows:

| | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| E | d | i | t | | S | q | l | | M | o | d | e | (| ↑ | ↓ | 9 | , | # | * |) | | |

FIGURE 2-7 User Screen to Edit the Squelch Mode

Upon start, the cursor appears at the Squelch Mode indicator position of the channel to be edited. The user may now select the desired Squelch mode from the list, as follows:

-   step up through available Squelch modes (see table below)
-  step down through available Squelch modes
-  accept the entry and return
-  abandon the entry and exit

The available options are constrained by the operating mode, that is, different Squelch Modes are available for the analog Operating Modes (wide and narrow) than for the P25 operating mode. See the table below.

| TABLE 2-4 Receive and Transmit Squelch Modes | | | | | | | |
|--|-------------|-----------|-------------|------------|-----------------|------------|-----------------|
| Analog Rx | | Analog Tx | | Digital Rx | | Digital Tx | |
| Rx | Noise | Tx | Noise | Rg | TalkGroup + NAC | Tg | TalkGroup + NAC |
| Rt | CTCSS Tones | Tt | CTCSS Tones | Rn | NAC Only | Ti | ID Call |
| Rc | DCS Code | Tc | DCS Code | Rm | Monitor | T- | Inhibit |
| | | T- | Inhibit | | | | |

Once the Squelch Mode has been selected, the user will be allowed to edit the value of the selected mode (subject to restrictions imposed by the Squelch Permissions – see L4-3). The Squelch Modes that may be edited are: Noise, CTCSS Tones, and DCS Codes for analog operating modes, and TalkGroup, NAC, and ID Call for digital operating mode.

L1-9.1 Edit Noise Squelch Value


 


Scope: analog only, receive only, range 0-16 (\$0-\$F)

If Noise (Rx) is chosen, the prompt line will display the current value for noise squelch level and place the cursor on the first digit available for the user to edit:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 5 | | T | e | s | t | | | | | n | 1 | 5 | 6 | . | 0 | 0 | 0 | 0 | R | x | |
| N | o | i | s | e | | L | e | v | e | : | | | | | | | | | | | | 1 | 0 |

FIGURE 2-8 User Screen to Edit the Squelch Value

The user may edit the Noise Squelch value as follows:

-  to  decimal mode: enter number, cursor automatically advances
-  accept the entry and return
-  abandon the entry and exit

L1-9.2 Select CTCSS Tone





Scope: analog only, receive & transmit, 42 tones (67Hz to 254.8Hz)

If CTCSS Tones are chosen, the prompt line will display the current value for that tone:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 5 | | T | e | s | t | | | | | n | 1 | 5 | 6 | . | 0 | 0 | 0 | 0 | R | t | | |
| C | T | C | S | S | | T | o | n | e | | (| ↑ | ↓ | , | # | * |) | : | | | 6 | 7 | . | 0 |

FIGURE 2-9 User Screen to Edit the CTCSS Tone Value

The user may select from the available tones (Appendix A lists the available choices), as follows:

-   step up/down through available CTCSS Tones
-  accept the entry and return
-  abandon the entry and exit

L1-9.3 Select DCS Code





Scope: analog only, receive only, 83 codes (23 to 754)

If DCS Codes are chosen, the prompt line will display the current value for that code:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|--|---|---|---|---|--|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 5 | | T | e | s | t | | | | | n | 1 | 5 | 6 | . | 0 | 0 | 0 | 0 | R | c | |
| D | C | S | | C | o | d | e | | | (| ↑ | ↓ | , | # | * |) | : | | | | | 2 | 3 |

FIGURE 2-10 User Screen to Edit the DCS Code Value

The user may select from the available choices (Appendix A lists the available choices), as follows:

-   step up/down through available DCS Tones
-  accept the entry and return
-  abandon the entry and exit

L1-9.4 Edit Project 25 Talkgroup Value

Scope: digital only, receive and transmit, range 0-65535 (\$0000-\$FFFF)

If the P25 TalkGroup was chosen the, the prompt line will display the current TalkGroup value, the cursor will be on the first digit:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| P | 2 | 5 | | T | a | l | k | G | r | o | u | p | : | | | | | | 0 | 0 | 0 | 1 | |

FIGURE 2-11 User Screen to Edit the P25 TalkGroup Value

This parameter may be edited in either HEX or in Decimal (see command L3-3). The edit keys are as follows:



hex edit: step up/down through hex digits (0-9, A-F)



hex edit: move cursor forward / backward



to



decimal mode: enter number, cursor automatically advances



accept the entry and return



abandon the entry and exit

Note: If P25 Talkgroup was chosen, the editor will drop into Edit NAC upon accepting the Talkgroup value.

L1-9.5 Edit Project 25 NAC Value

Scope: digital only, receive and transmit, range 0-4095 (\$000-\$FFF)

If the P25 NAC was chosen (or after entering the P25 TalkGroup) the prompt line will display the current NAC value, with the cursor on the first digit:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|--|---|---|---|---|--|--|--|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | n |
| P | 2 | 5 | | N | A | C | : | | | | | | | | | | | | 0 | 0 | 1 | | |

FIGURE 2-12 User Screen to Edit the P25 NAC Value

This parameter may be edited in either HEX or in Decimal (see command L3-3). The edit keys are as follows:



hex edit: step up/down through hex digits (0-9, A-F)



hex edit: move cursor forward / backward



to



decimal mode: enter number, cursor automatically advances



accept the entry and return



abandon the entry and exit

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

L1-9.6 Edit Project 25 ID Call Value

Scope: digital only, transmit only, range 0-9,999,999


 
If the P25 ID Call was chosen, the prompt line will display the current ID Call value. This parameter may only be edited in decimal, as follows:


| | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|--|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | T | i |
| P | 2 | 5 | | C | a | l | l | | U | n | i | t | # | : | | 0 | 0 | 0 | 0 | 0 | 0 | 1 |


FIGURE 2-13 User Screen to Edit the P25 ID Call Value

This transmit-only mode allows the user to try to contact a specific radio by transmitting that radio's user ID. If no radio has that ID then this will fail.

The keys used to edit the ID call parameter are:

 to  decimal mode: enter number, cursor automatically advances

 accept the entry and return

 abandon the entry and exit



L1-0 Command Level Up

This key selects the next HIGHER Command Level. The Command Level is indicated by a subscript digit in the 4th character position on the lower row of the display. See table 2-1.

Upon pressing this key, the radio will remain in the new Command Level for 5 seconds, if there is no further user input within this time then the radio will revert to Level 1. The Direct Command Level (level 1) is the normal operating mode for the radio and is indicated by a blank space.



L1-# Not Used



L1-* Not Used

2.3 COMMAND/OPERATOR LEVEL 2

Access the **Command/Operator Level 2** by pressing the '**PROG**' key from the **Command/Operator Level 1** once. The Command Level is indicated in the 4th character position on the lower row of the display indicating a subscript '2'.

The Command/Operator Level 2 maps the keys to provide a new set of functions for the operator as shown below.

Note: The system is time limited in command levels above level 1. The system will automatically return to level 1 if a command has not been selected in five (5) seconds!



L2-1 Create/Edit All Channel Information (MN/GD restricted)

This command allows the user to create a new memory position (for Main channel only) or to edit all the parameters of an existing memory position (Main or Guard channels). The editor steps through the channel parameters in sequence from left to right across the screen. The edit functions here match those used to edit an individual parameter; in this case however selecting the ENTER key accepts the data and proceeds to the next step, rather than returning. Only after the last step does selecting enter save the data and exit. The ESC key will abandon the entire edit session without changing an existing channel or creating a new one.



accept the entry and return



abandon the entry and exit

L2-1.1 Entering a Memory Number (refer to L1-1 for details)

When the Create/Edit All command is selected, the first step is to enter the number of the memory position that you wish to Create or Edit. Note that if the Radio is on a Guard channel then the editor starts at the "Edit Text" prompt (step 3 below) as the memory number and scan cannot be edited for Guard channels. The valid range is (001 to 230)

Once a number has been entered, the system checks to see if the memory location has already been programmed, if so, then the existing data will be loaded, if the location has NOT been previously programmed then the default template data will be loaded. In each case the user can edit the channel parameters in the same way as shown in the following steps.

L2-1.2 Enter a Scan List & Enabling/Disabling Scan (refer to L2-5 for details)

The cursor will move to the third (3rd) position on the top line, the default scan list is shown in subscript. If there is a bar over top of the character, this indicates that scan is disabled for this memory, if there is no bar, scan has been enabled. The 'PROG' key (key 0) toggles the scan enabled/disabled state.

L2-1.3 Enter a Text Description (refer to L2-6 for details)

After SCAN, the cursor moves to the first position in the eight (8) character text description field, the user may now edit the existing test as desired. The editor allows you to select all upper and lower (A-Z, a-z) case alphabetic characters, the numbers from zero to nine (0-9), and a selection of extra characters including the space.

L2-1.4 Enter an Operating Mode (refer to L1-3 for details)

After TEXT, the cursor is positioned on the one (1) character Operating Mode field. This single character represents the operation of the radio, analog wide, analog narrow, or digital.

L2-1.5 Enter a Frequency (refer to L1-7 for details)

The frequency parameter is a seven (7) digit decimal parameter, though the first digit is always one so the user cannot edit that digit. The frequency parameter may be edited to any number between 136.0000 and 174.0000 in 2.5 kHz steps (e.g. 150.0025 is valid, 150.0046 is not).

This is a duplex parameter, that is, the user has a chance to edit both the receive value followed by the transmit value. Once the receive value has been accepted, pressing 'ENTER' again will accept the same value for transmit.



L2-1.6 Enter the Squelch Parameters (refer to L1-9 for details)

When the Create/Edit All command is selected, the first step is to enter the number of the memory position below) as the memory number and scan cannot be edited for Guard channels.

Once the user is finished and selects 'ENTER' then the newly edited channel parameters are selected and displayed for the appropriate channel. This may take a moment as the information is programmed into the appropriate RF module at this time as well.



L2-2 Copy Guard to Main

Copy current Channel Parameters from Guard to Main (e.g.  + ). Be sure you wish to do this, for it cannot be copied back from Main to Guard. This command is disabled from the factory as a safety precaution (L4-3 Command Permissions).



L2-3 Lock Keypad

This command locks the keypad to prevent accidental change to parameters of the radio unbeknownst to the operator. This will disable all keyboard functions (except keyboard unlock and display luminance). To unlock the keyboard, press and hold the 'ESC' key for three seconds.



lock the keypad, display 'locked' until key release



unlock the keypad (after 3 seconds), display 'unlocked' until key release



L2-4 Not Used



L2-5 Edit Scan List & Enable/Disable Scan (MN)

This command allows the user to select which of the **SCAN LISTS** (if any) that the selected channel is included in. The memory must be a member of one of the fifteen (15) scan lists that are supported. In addition, it allows the user to select whether or not the scan is enabled for the current memory.

The cursor will move to the fourth (4th) position on the top line, the default scan list is shown in subscript. If a bar is over the top of the character, this indicates that scan is disabled for this memory. If there is no bar, then scan has been enabled.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|----------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| 0 | 1 | 5 | <u>1</u> | D | e | s | c | | | | | w | 1 | 4 | 1 | . | 0 | 0 | 0 | 0 | R | x | |
| E | d | i | t | | Z | o | n | e | / | S | c | a | n | | (| ↑ | ↓ | 0 | , | # | * |) | |

FIGURE 2-14 User Screen to Enter a Scan List or Enable/Disable Scan

The user may select the scan zone for the memory as follows:



step up through available scan lists



step down through available scan lists



toggle the scan enable / disabled (bar = disabled)



accept the entry and return



abandon the entry and exit

Note: If a scan list is full, it will NOT appear in the list. This includes the default list, if this happens, the unit will display the next higher available list, this will stop at list 15 and then loop back to list 1.

| | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|----------|---|---|---|---|---|---|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 5 | <u>2</u> | D | e | s | c | | | | | w | 1 | 4 | 1 | . | 0 | 0 | 0 | 0 | R | x |
| G | D | 2 | | G | u | a | r | d | 2 | | | w | 1 | 7 | 4 | . | 0 | 0 | 0 | 0 | R | t |

FIGURE 2-15 User Screen Showing Scan Disabled for this Memory










L2-6 Edit Channel Text Description (MN/GD)

This command allows the user to edit the text description for the selected channel. There are four groups of characters that may be used; upper case (A-Z), lower case (a-z), numbers (0-9), and 16 extra characters (shown in table 2-6 below). The user can change character groups *at any time* and as many times as desired during a description edit session.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 6 | | D | e | s | c | | | | | w | 1 | 4 | 1 | . | 0 | 0 | 0 | 0 | R | x | |
| E | d | i | t | | T | e | x | t | | (| ↑ | ↓ | ← | ← | 0 | , | # | * |) | | | A | Z |

FIGURE 2-16 User Screen to Edit the Text Description

The keys for the text editor operate as follows:

-  step through available edit groups (A-Z, a-z, 0-9, + extra characters – see table 2-6)
-   scroll up/down through available characters
-   move cursor forward / backward
-  accept the entry and return
-  abandon the entry and exit

Note that the up/down arrow keys are scroll enabled, that is, if you hold them you will scroll through the character set rather than having to press each time you want to advance.

| Table 2-5 Extra Characters for Text Edit | | | | | | | | | | | | | | | |
|--|---|---|---|----|---|---|---|---|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |

Note that the first character in the table is a blank space.

L2-7 Create Shadow Channel

This command allows the user to create a shadow channel, the steps are the same as for creating a regular channel, except that the user must pick a primary channel on which to base the shadow channel first, and some parameters are not valid for shadow channels so the user is not given the opportunity to enter or edit these.

NOTE: Shadow channels can only be created through the front panel as well as the TDP software. However, it can only be deleted through the delete function in the TDP software.

 
 

L2-7.1 Selecting a Primary Number to Base the Shadow On


Upon selecting the Create Shadow Channel command the user is prompted to enter the primary channel upon which the shadow channel is based, the screen displays the current memory number as a default:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|
| 0 | 0 | 6 | | P | r | i | m | a | r | y | | C | h | a | n | n | e | l | | | | | | |
| E | n | t | e | r | | N | u | m | b | e | r | | (| 0 | - | 9 | , | # | * |) | | | | |

FIGURE 2-17 User Screen to Enter a Primary Memory for the Shadow Channel

Now, you must select an already existing channel from within the 001 to 230 limits as follows:

-  to  decimal mode: enter number, cursor automatically advances
-  accept the entry and return

 abandon the entry and exit

Assume that the user entered a primary of '006'.



L2-7.2 Selecting a Primary Number to Base the Shadow On


Next the user is prompted to enter the number for the shadow channel:


| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|--|--|--|--|
| 0 | 0 | 6 | | S | h | a | d | o | w | | C | h | a | n | n | e | l | | | | | | | | | | | |
| E | n | t | e | r | | N | u | m | b | e | r | | (| 0 | - | 9 | , | # | * |) | | | | | | | | |

FIGURE 2-18 User Screen to Enter a Shadow Channel Memory Number

Now, you must not select a number already in use:

 to  decimal mode: enter number, cursor automatically advances

 accept the entry and return

 abandon the entry and exit

Assume that the user entered '061' as the desired shadow channel number. The radio will now display the data from the chosen Primary channel:

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|--|
| 0 | 6 | 1 | | C | h | a | n | 6 | | | D | 1 | 6 | 6 | . | 0 | 0 | 0 | 0 | R | g | | | | | | | |
| E | d | i | t | | T | e | x | t | | (| ↑ | ↓ | ← | → | 3 | , | # | * |) | | | A | Z | | | | | |

FIGURE 2-19 User Screen to Edit the Shadow Channel Parameters (text)

The user may now edit those data fields that are valid for a shadow channel. These are:

- Text Description
- Operating Mode
- Squelch Mode and associated value



The editor functions and keys are the same as for any of the independent editor operation, the difference, as with Create New / Program All (L2-1), is that the ENTER key will advance to the next editor until all valid fields have been entered, then the ENTER key accepts an exits.

Note that there are some parameters that cannot be edited:

- Frequency is fixed to that of the Primary channel
- Shadow channels cannot be scanned.
- Shadow channels cannot use the Digital Squelch Mode IDcall (i).



L2-8 Copy Main to Guard

Copy current Channel Parameters from Main to the selected Guard (e.g.  + ). Be sure you wish to do this, for it cannot be copied back from Guard to Main. This command is disabled from the factory as a safety precaution (L4-3 Command Permissions).



L2-9 Edit Unit ID Value (MN/GD)

The Unit ID is a number from 0 to 9,999,999 that is given to the RF module, this number should be unique within the operating group of radios, but this is NOT a universally mandated number (e.g. the number is NOT assigned by any P25 umbrella group, or even by the manufacturer), the user may edit this number as desired.

This command allows the user to Edit the Unit ID, note that the system has two (2) unit ID's one for the Main, and one for the Guard. The value is editable in decimal only.



to



decimal mode: enter number, cursor automatically advances



accept the entry and return



abandon the entry and exit



L2-0 Command Level Up

This key selects the next HIGHER Command Level, the Command Level is indicated by a subscript digit in the 4th character position on the lower row of the display (see Section 2.1 above).



L2-* Command Level Down)

This key selects the next LOWER Command Level, the command Level is indicated by a subscript digit in the 4th character position on the lower row of the display (see Section 2.1 above).



L2-# Not Used)

2.4 COMMAND/OPERATOR LEVEL 3

The Command/Operator Level 3 commands are configuration commands that allow the operator to configure many of the default parameters of the radio, in addition, level 3 has the PC upload and download commands.

1
CHAN

L3-1 Select Boot Channel






This command allows the user to select which method will be used to determine the memory that will be used for the Main Channel when the unit is turned on.

The available choices are: *the last Selected channel* or *the last Programmed channel*.
The default is: *last Selected channel*.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|
| 3 | - | 1 | | S | e | t | | B | o | o | t | | M | e | m | o | r | y | | | | | |
| B | o | o | t | | O | n | : | | L | a | s | t | | S | e | l | e | c | t | e | d | | |

FIGURE 2-20 User Screen to Select Main Channel Boot Mode

The user may select the boot memory for the main channel as follows:

-    toggle the boot mode
-  accept the entry and return
-  abandon the entry and exit

2
↑

L3-2 Unused

3
MODE

L3-3 Select Hex/Decimal Edit Mode



 


This command allows the user to select whether to edit the TalkGroup and the NAC numbers as Hexadecimal (Hex) or as Decimal numbers. The other parameters are edited in decimal only.

The default is: *Hex Edit Mode (HEX is indicted by a preceding dollar sign: \$)*

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|
| 3 | - | 3 | | S | e | t | | H | e | x | / | D | e | c | i | m | a | l | | E | d | i | t |
| E | d | i | t | | i | n | : | | H | e | x | | | | | | | | | | | | |

FIGURE 2-21 User Screen to Select the Numeric Edit Mode

The user may select the TalkGroup and NAC Edit mode as follows:

-    toggle the Hex/Decimal edit mode
-  accept the entry and return
-  abandon the entry and exit



L3-4 Display Software Release and Version Information

This command allows the user to see the current software release and version number for both the Main code, and the Boot loader code. This information is displayed on the bottom row as follows:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|--|--|--|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | | M | a | i | n | | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | n |
| M | a | i | n | | C | o | d | e | | | | | | | | | | | | 2 | . | 0 | . | 0 |

FIGURE 2-22 User Screen Showing the Code Release Information

The user may select which information is displayed as follows:



toggle the Main/boot loader code version display



exit

The number format is as follows: Release. Version. Revision

So the number: 2.0.0 reads as Release 2, Version 0, Revision 0

Release refers to the fundamental software architecture (i.e. big things)

Version refers to the feature set operating within this architecture

Revision refers to bug fixes and minor updates



L3-5 Edit Scan Parameters (MN)

This command allows the user to edit the parameters that govern the SCAN operation. There are 4 (four) parameters that may be configured: Revert Mode, Reply Timer, Monitor Timer, and Delay Timer. As with the Create/Edit All command (L2-1), this command is sequential, allowing the user to move between parameters using the enter key, at the last parameter, this key accepts all and exits.

L3-5.1 Setting the Revert Mode default: last contacted

The Revert Mode refers to whether the radio will, when keyed, transmit on the selected memory channel, or on the last contacted memory channel. The radio will only respond on the last contacted channel for a time determined by the Delay timer setting, once the Timer times out, the unit will then always transmit on the selected channel.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 3 | - | 5 | | E | d | i | t | | S | c | a | n | | P | a | r | a | m | e | t | e | r | s |
| R | e | v | e | r | t | | M | o | d | e | : | | C | o | n | n | e | c | t | e | d | | |

FIGURE 2-23 User Screen to Select the Scan Revert Mode

The user can select the REVERT mode as follows:



toggle the revert mode



advance to next screen



abandon the entry and exit





L3-5.2 Setting the Reply Timer Range: 0-20s, Default: 3 seconds

The next screen allows the user to set the scan Reply time. This is the time that the radio will monitor a channel on which RF was received, after all activity on the channel has ended (Rx or Tx). If there is further receive or transmit activity on the channel, the timer will reset, and start again once the activity has ended. When the timer times-out the unit will resume scan. If set to zero (0), the unit will resume scan immediately upon end of channel activity.

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|
| 3 | - | 5 | | E | d | i | t | | S | c | a | n | | P | a | r | a | m | e | t | e | r | s | |
| R | e | p | l | y | | T | i | m | e | r | : | | | | | | | | | | | | 0 | 3 |

FIGURE 2-24 User Screen to Set the Scan Reply Timer Value

The user can set the Scan Reply Timer value as follows:

-  to  to decimal mode: enter number, cursor automatically advances
-  advance to next screen
-  abandon the entry and exit





L3-5.3 Setting the Monitor Timer Range: 1-90s, Default: 10 seconds

The next screen allows the user to set the scan Monitor time, this is the time that the radio will monitor a channel on which RF was received, before resuming scanning. Once the timer expires, the unit will break and resume scan, if the value is set to zero (0) then the unit will monitor the signal as long as it is received. The edit screen is as follows:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 3 | - | 5 | | E | d | i | t | | S | c | a | n | | P | a | r | a | m | e | t | e | r | s | |
| M | o | n | i | t | o | r | | T | i | m | e | r | : | | | | | | | | | | 1 | 0 |

FIGURE 2-25 User Screen to Set the Scan Monitor Timer Value

The user can set the Scan Monitor Timer value as follows:

-  to  to decimal mode: enter number, cursor automatically advances
-  advance to next screen
-  abandon the entry and exit


 
L3-5.4 Setting the Delay Timer Range: 0-15s, Default: 5 seconds


The Delay time is the time that the radio will remain monitoring a channel after receiving on that channel has ended. If the timer is set to zero (0), then the unit will resume scanning immediately after the receive activity ends. This is the timer that affects the Revert Mode 'Contacted'.


| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|---|---|---|---|
| 3 | - | 5 | | E | d | i | t | | S | c | a | n | | P | a | r | a | m | e | t | e | r | s | |
| D | e | l | a | y | | T | i | m | e | r | : | | | | | | | | | | | | 0 | 5 |

FIGURE 2-26 User Screen to Set the Scan Delay Timer Value

The user can set the Scan Delay Timer value as follows:

 to  to decimal mode: enter number, cursor automatically advances

 advance to next screen

 abandon the entry and exit





L3-6 Configure the PTT Timer


The PTT time will run whenever the user holds PTT. The PTT timer duration may be set using this command: scroll through the available selections: OFF, 30 seconds, 60 seconds and 90 seconds.


| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|--|--|--|--|--|--|
| 3 | - | 6 | | S | e | t | | P | T | T | | T | i | m | e | r | | | | | | | |
| T | i | m | e | r | | S | e | t | : | | 9 | 0 | | s | e | c | | | | | | | |


FIGURE 2-27 User Screen to Set the PTT Timer Value

The user can set the PTT Timer value as follows:

 to  step up through available timer values

 step down through available

 advance to next screen

 abandon the entry and exit

7
FREQ

L3-7 Sidetone Audio Level Adjust

This command allows the user to adjust the level of side tone. The screen shows the currently selected level as shown:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|--|--|--|--|--|--|
| 3 | - | 7 | | S | i | d | e | t | o | n | e | | A | u | d | i | o | | | | | | |
| A | u | d | i | o | | L | e | v | e | l | : | | | | | | | | | | | | |

FIGURE 2-28 User Screen to Set the Sidetone Audio Level

The user may edit the side tone audio level as a decimal number from 0 to 16 as follows:



to



to decimal mode: enter number, cursor automatically advances



advance to next screen



abandon the entry and exit

Default Level: 10

8

L3-8 PC Data Upload/Download

This command allows a user to exchange TDFM-136 channel memory files (records) between a PC and the transceiver. The unit must be connected to a PC running Windows 95, 98 or NT 4.0 and the TiL TDP-136 Radio Communications Software package. To exchange record data the Transceiver must be in this mode, then the communication is controlled by the PC software. The transceiver will wait for 25 seconds to receive a valid record before timing out. The radio will indicate which memory is being transferred, and when the transfer is complete.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|--|---|---|--|--|--|
| C | o | m | m | u | n | i | c | a | t | i | o | n | | w | i | t | h | | P | C | | | |
| R | e | a | d | y | | | | | | | | | | | | | | | | | | | |

FIGURE 2-29 User Screen to Upload/Download Memory Data to the PC

The transceiver may have to swap memory space during the download, if this happens the activity will be displayed on the front panel and the download will be completed after a SWAP and ERASE cycle is finished.

There is one user key function:



abandon PC communications mode

9
SQL

L3-9 Display Channel Squelch Parameters

Display the Squelch parameters for the channel. The data are displayed as follows:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|--|---|---|---|---|--|----|---|---|---|---|--|----|---|---|---|--|
| R | x | : | | T | o | n | e | | C | o | d | e | | T | a | l | k | G | | N | A | C | | |
| | A | | 1 | 6 | 7 | . | 0 | | | 2 | 3 | | | \$ | 0 | 0 | 0 | 1 | | \$ | 2 | 9 | 3 | |





FIGURE 2-30 User Screen to Display the Receive Squelch Parameter Values

When displaying the receive parameters, the noise squelch level appears beneath the “Rx” that starts the line, this space is blank in the transmit parameters display:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|--|---|---|---|---|--|----|---|---|---|---|--|----|---|---|---|--|
| T | x | : | | T | o | n | e | | C | o | d | e | | T | a | l | k | G | | N | A | C | | |
| | | | 1 | 6 | 7 | . | 0 | | | 2 | 3 | | | \$ | 0 | 0 | 0 | 1 | | \$ | 2 | 9 | 3 | |

FIGURE 2-31 User Screen to Display the Transmit Squelch Parameter Values

The user can switch between displaying receive and transmit parameters as follows:

-    toggle the squelch parameter display Rx/Tx
-  exit the command

9
SQL

L3-0 Command Level Up

This key selects the next HIGHER Command Level, the Command Level is indicated by a subscript digit in the 4th character position on the lower row of the display (see section 2.1 above).

9
SQL

L3-* Command Level Down

This key selects the next LOWER Command Level, the command Level is indicated by a subscript digit in the 4th character position on the lower row of the display (see section 2.1 above).

9
SQL

L3-# Unused

2.5 COMMAND/MAINTENANCE LEVEL 4

The Command/Maintenance Level 4 is available to allow authorized personnel to set policy for the radio use, by granting or restricting access to system commands and features.

This command level does not preserve the Normal Operating display characteristics, that is: the Main and Guard displays are replaced by suitable command prompt information.

Accessing the Maintenance Commands

Access to the Level 4 commands is restricted to bench use only, in order to achieve this, the command level requires that a shunt be placed on a specific set of jumper pins on the MCU board of the radio. To do so refer to Figures 2-32 and 2-33, and follow these steps:

1. Ensure that the power to the unit is OFF.
2. Remove the left hand side cover (10 Philips screws)
3. Locate the 6-pin jumper field (approximately half way between the front and rear of the radio).
4. Place a 0.1" shunt on the set of jumper pins closest to the front of the radio.

The user can now select level 4 (maintenance mode).

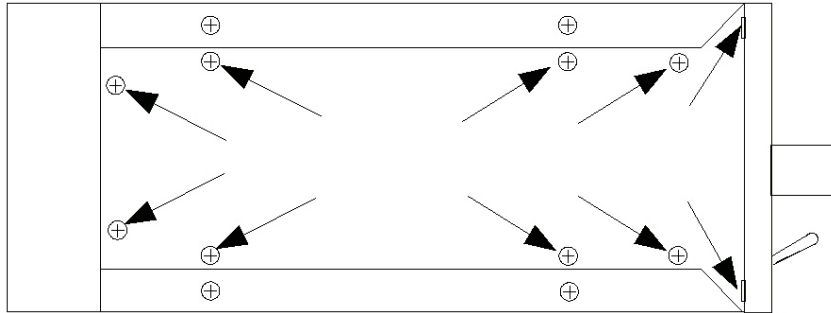


FIGURE 2-32 Screw positions to remove the Left-hand Side Panel

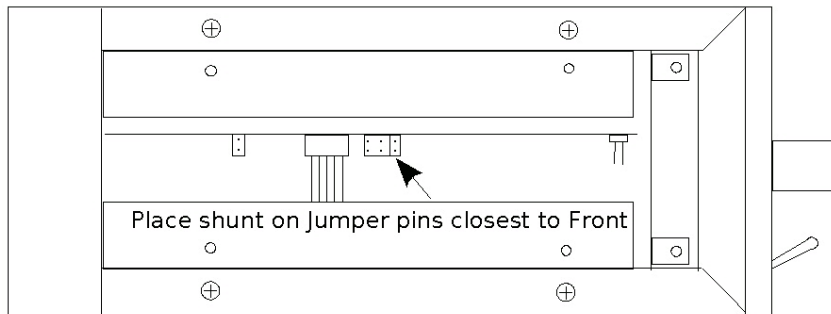


FIGURE 2-33 Shunt Position to Enable Level 4 Access

NOTE: Jumper access to this command level MUST BE DISABLED when the radio is used in flight, maintenance mode commands are NOT required for flight operation.

The commands available in this command level are:

1
CHAN

L4-1 Set Default Record

This command allows the user to set up the default record that is used when a user selects Create New/ Edit All (command 2-1). This allows those responsible for setting policy to determine what parameters they wish to have as system defaults. Some of the parameters are subject to restrictions set out in L4-9.

NOTE: If these values are set first, and the restrictions are set after, it is possible for the user to end up using a parameter that you wish to restrict!

The Default Record editor works just like the Create New/ Edit All command (L2-1) except that it takes you through all the possible squelch combinations so that each selection can be edited.

From the factory, the default channel parameters are as follows:

| Table 2-6. The Channel Template Factory Defaults | |
|---|--------------|
| Parameter | Value |
| Basic Parameters | |
| Scan List | 1 |
| Text Description | "Desc " |
| Operating Mode | w |
| Rx Parameters | |
| Rx Frequency | 141.0000 |
| Rx Squelch Mode | x |
| Rx Squelch TalkGroup Value | \$0001 |
| Rx Squelch Tone Value | 67.0 |
| Rx Squelch Code Value | 23 |
| Rx NAC Value | \$293 |
| Tx Parameters | |
| Tx Frequency | 141.0000 |
| Tx Squelch Mode | x |
| Tx Squelch TalkGroup Value | \$0001 |
| Tx Squelch Tone Value | 67.0 |
| Tx Squelch Code Value | 23 |
| Tx NAC Value | \$293 |
| Tx ID Call Value | 0000001 |



L4-2 Unused



L4-3 Set Command Permissions

This command allows those responsible for setting policy to select which commands in the command set will be accessible in the Command/Operator Levels (levels 1, 2, and 3). All the commands in those three levels are affected EXCEPT: 'PROG' (0) and 'ESC' (*).

The factory default configuration has all the commands enabled, *except L2-2 and L2-8*. Figures 2-34,2-35 and 2-36 are factory default positions.

The Set Permissions screen shows the level being affected (L1, L2, or L3), followed by the command number, and an optional 'g' indicating Guard channel operation for that command (if applicable). The character directly under each number (or associated 'g') indicates whether or not the command may be accessed. The character is a solid round dot if the command is to be accessible (enabled). The character is an empty dot or donut if the command is to be restricted (disabled).



To access the command permissions.

The 'Set Permissions' for command level 1,2 and 3 screens appear below:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|--|---|--|---|---|---|--|---|--|---|--|---|---|---|--|---|---|--|--|--|
| L | 1 | : | 1 | | 2 | | 3 | g | 4 | | 5 | | 6 | | 7 | g | 8 | | 9 | g | | | |
| | | | • | | • | | • | • | • | | • | | • | | • | • | • | | • | • | | | |

FIGURE 2-34 User Screen to Edit the Level 1 Permissions

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|--|---|--|--|--|---|--|---|---|---|--|---|--|---|---|--|--|--|
| L | 2 | : | 1 | g | 2 | | 3 | | | | 5 | | 6 | g | 7 | | 8 | | 9 | g | | | |
| | | | • | • | o | | • | | | | • | | • | • | • | | o | | • | • | | | |

FIGURE 2-35 User Screen to Edit the Level 2 Permissions

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|--|--|--|
| L | 3 | : | 1 | | 2 | | 3 | | 4 | | 5 | | 6 | | 7 | | 8 | | 9 | | | | |
| | | | • | | • | | • | | • | | • | | • | | • | | • | | • | | | | |

FIGURE 2-36 User Screen to Edit the Level 3 Permissions

The user may edit these permissions as follows:



toggle the permission (• = enabled, o = disabled)



step up/down through command levels



move cursor forward / backward through commands



accept the entry and return



abandon the entry and exit

Note that the cursor will automatically jump to the next valid column, the cursor will wrap. The 'g' indicates a separate Guard option; for the commands that support this, the Main and Guard can be enabled / disabled separately. In addition, some of the commands are either channel agnostic, or specific to the Main channel only and can thus be invoked for Main even when the radio front panel switches are in the Guard position.


For example, with the switches in the Guard position, the user can still scroll through the


Main memories using the  and  keys. These types of commands are


available in the Guard mode, but the permissions are determined by the Main permission. The table below indicates all the available user commands, and shows the permission mode as follows:


- Shows a command that has a distinct permission.
- Shows a command that is available in Guard, but permission is controlled by Main.
- X Shows a command that is NOT available for the channel.


| TABLE 2-7 Permission Applicability with respect to Command Levels | | | | | | | | | |
|---|-----------------------|---|---------|-----------------|---|---|----------------------|---|---|
| Cmd Num | Level 1 | | Level 2 | | | | Level 3 | | |
| | Command | M | G | Command | M | G | Command | M | G |
| 1 | Select MN Memory | ● | ● | Create/Prog All | ● | ● | Set Main Boot Memory | ● | ● |
| 2 | Brighter | ● | ● | Copy GD to Main | ● | ● | Upload to PC | ● | ● |
| 3 | Edit Op Mode | ● | ● | Lock Keypad | ● | ● | Set Hex/Decimal | ● | ● |
| 4 | Scroll MN Memory Down | ● | ● | Not Used | ● | X | Show Version | ● | ● |
| 5 | Scan | ● | X | Edit Scan List | ● | X | Edit Scan Params | ● | ● |
| 6 | Scroll MN Memory Up | ● | ● | Edit Text | ● | ● | Set PTT Timer | ● | ● |
| 7 | Edit Frequency | ● | ● | Create Shadow | ● | X | Set Sidetone Level | ● | ● |
| 8 | Dimmer | ● | ● | Copy Main to GD | ● | ● | Download from PC | ● | ● |
| 9 | Edit Squelch | ● | ● | Edit Unit ID | ● | ● | Show Squelch | ● | ● |

 **L4-4 Unused**

 **L4-5 Unused**

 **L4-6 Unused**

 **L4-7 Unused**

 **L4-8 Unused**



L4-9 Set Squelch Restrictions

This command allows those responsible for setting policy for radio use to control what access the user has to manipulate the Squelch modes. The restrictions are as follows:

- squelch mode *select* restrict – limit the user's access to certain squelch modes
- squelch mode *edit* restrict – chose which squelch modes the user may edit the values
- squelch mode *value* restrict - limit specific parameters for a particular squelch mode



To access the squelch restrictions.

These features are described in the sections below. Editor operates as follows:



toggle the enabled/disabled state of the displayed parameter



step up/down through the parameter for each screen



move forward / backward through restriction screens



accept the entry and return



abandon the entry and exit

L4-9.1 Restricting the Squelch Modes Available to Select

You can restrict the Squelch Modes that the user can select for each of Analog Rx, Analog Tx, Digital Rx, and Digital Tx operation. Note that not all Squelch Modes can be restricted, table 2-8 below shows the available Squelch Mode for each Operating Mode and shows which can be restricted.

| Table 2-8 Squelch Modes that can be Restricted | | | |
|--|-----------|------------|------------|
| Analog Rx | Analog Tx | Digital Rx | Digital Tx |
| Tone | Tone | NAC | IDcall |
| Code | Code | Talkgroup | Inhibit |
| | Inhibit | | |

The screen shown below is an example of the screens that allow you to restrict which Squelch Modes appear to the user when 'Edit Squelch' is selected (L1-9, or in L2-1, or L2-7).

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|
| S | q | u | e | l | c | h | | R | e | s | t | r | i | c | t | : | | S | e | l | e | c | t |
| A | n | a | i | o | g | | R | x | : | | T | o | n | e | | | | | | | | | • |

FIGURE 2-37 Screen to Set Available Squelch Modes for Analog Receive

Here, the user can restrict the individual Squelch Modes that will appear to the user in the Analog Squelch mode selector for receive, the same can be done for analog transmit.

L4-9.2 Restricting the Squelch Modes Value Edit

This screen allows you to restrict which Squelch Modes can have their *values* edited by the user. The access to selecting these modes is not affected here. Example, if Noise mode is disabled here, then the user can *select* Noise (for analog Rx operation), but *cannot change* the Noise Squelch level.

The screen shown below allows you to restrict which Squelch Modes can be edited by the user, these modes can be selected, but the parameter value cannot be changed from the default.

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|--|---|
| S | q | u | e | l | c | h | | R | e | s | t | r | i | c | t | : | | E | d | i | t | | |
| V | a | l | u | e | | E | d | i | t | : | | N | o | i | s | e | | | | | | | ● |

FIGURE 2-38 Screen to Restrict Editing of the Squelch Mode Value

L4-9.3 Restricting the CTCSS Tone and DCS Code Values

The list of both CTCSS Tones and DCS Codes, that are available to the user in the related Squelch Mode Editor, can be restricted so that only certain Tones and Codes are available to the user during the edit session. The CTCSS Tone value restrict screen appears as below:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|---|---|---|---|---|---|
| S | q | u | e | l | c | h | | R | e | s | t | r | i | c | t | : | | V | a | l | u | e | |
| C | T | C | S | S | | T | o | n | e | : | | | 6 | 7 | . | 0 | | | | | | | ● |

FIGURE 2-39 Screen to Restrict Available CTCSS Tones

Here, you can step through the list of all the CTCSS Tones, and restrict individual tone values from appearing to the user in the CTCSS Tone selection list.

The DCS Code value restrict screen appears as below:

| | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|----|---|--|---|---|---|---|---|--|---|---|---|---|---|---|---|---|
| S | q | u | e | l | c | h | | - | | V | a | l | u | e | | R | e | s | t | r | i | c | t |
| D | C | S | | C | o | d | e: | | | | | 2 | 3 | | | | | | | | | | ● |

FIGURE 2-40 Screen to Restrict Available DCS Codes

Here, you can step through the list of all the DCS Codes, and restrict individual code values from appearing to the user in the DCS Code selection list.

L4-0 Unused

L4-# Unused

L4-* Command Level Down

Return to the next lower Command Level (Command/Operator Level 3).

2.6 UNDERSTANDING RADIO OPERATION

Basic Radio Operation

The basic operation of the TDFM-136 radio is accomplished through the front panel user interface. The front panel layout is shown in figure 2-41 below.

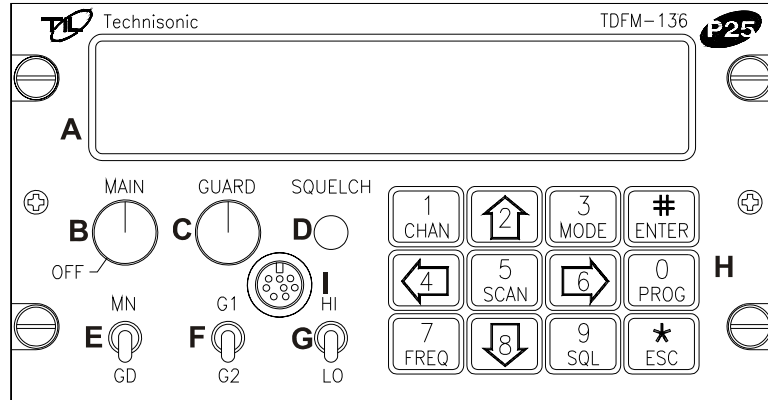


FIGURE 2-41 The TDFM-136 Front Panel Layout

The front panel comprises the following:

- | | |
|---|---|
| A) LED display, two line x 24 character | F) Toggle switch (two position: G1/G2) |
| B) Rotary volume control (with on/off switch) | G) Toggle switch (two position: HI/LO) |
| C) Rotary volume control | H) Keypad, twelve button (numbers 0-9, # and *) |
| D) Push button switch (momentary contact) | I) Keyloader (for future use). |
| E) Toggle switch (two position: MN/GD) | Only found on newer Front Panels. |

- A** The display provides two lines of text information—in the normal operating mode, the top line provides information about the Main channel, the bottom line information about the selected Guard channel.
- B & C** The rotary potentiometers control the audio level for each of the Main and Guard channels respectively. The Main volume control also contains the radio power switch.
- D** The single pushbutton provides the squelch defeat function and opens the squelch in analog modes, and sets the receive squelch to accept all in digital modes (though this will not open the squelch unless there is a valid P25 digital signal present).
- E, F** The three toggle switches allow the user to select:
- & G** Main and Guard channels, Guard 1 or Guard 2 channel, and High or Low RF power.
Note that the channel select switches (MN/GD and G1/G2) will control which channel is active for any channel editing command (see Sections 2.1 through 2.5).
- H** The 12 button keypad allows the user access to the system commands including commands for selecting channels, editing channel parameters, and for system configuration.
- I** Keyloader (for future use). Not used with software version 2.x.x.
PTT keying is provided via the back connector, and is part of a correctly installed system.

Channels and Memories

The radio supports 2 channels: Main, and Guard. The currently selected channel (ie that channel that the radio will transmit on when PTT is asserted) is determined by the position of the MN/GD, and G1/G2 switches.

The Main channel supports multiple memory positions, that is, the user can select Main channel parameters by switching to a different memory position. The radio supports up to 230 memories for the Main channel.

The Guard channel supports only two memory positions: G1 and G2 these memories are only accessible via the front panel switches.

Memory Parameters (L1-3,7,9, L2-1,5,6, L4-1)

Each memory has a variety of parameters that may be edited by the user, some are restricted under certain operating conditions:

Example: while scan is available for any Main channel memory, the user may not set scan parameters for either Guard channel or for 'shadow' channels on the Main channel.

The user can manipulate the memory parameters by using the editing commands described in sections 2.2 (Level1) and 2.3 (Level2). User accessible parameters include:

- memory number
- scan list
- text description
- operating mode
- frequency
- squelch mode and squelch mode value

In addition to editing the memory parameters, the user can create new memories or edit all the parameters of a memory, using the command L2-1. When started, this command displays the contents of the memory (if currently programmed), or displays the default memory parameters, if creating a new memory (for Main channel only). The memory parameter defaults can be edited using the command L4-1.

Operating Modes (L1-3)

The unit supports three operating modes: Analog wide, analog narrow, and P25 digital. In the analog wide mode, the radio is operating on 25 kHz channel spacing, on both analog narrow, and in P25 digital mode, the radio operates with 12.5 kHz channel spacing. The user can easily switch between modes on any memory for any channel (e.g. any Main memory, and both Guard1 and Guard2). Since the squelch modes are not common across analog and digital operating modes, if you change across these modes, the Squelch Mode will be affected.

The user can select the operating mode using the L1-3 command.

Squelch Modes (L1-9, L2-9, L3-9, L4-9)

The radio supports a variety of squelch modes for both analog and digital operation, these are shown in table 2-8 below.

| TABLE 2-9 Receive and Transmit Squelch Modes | | | | | | | |
|--|-------------|-----------|-------------|------------|-----------------|------------|-----------------|
| Analog Rx | | Analog Tx | | Digital Rx | | Digital Tx | |
| Rx | Noise | Tx | Noise | Rg | TalkGroup + NAC | Tg | TalkGroup + NAC |
| Rt | CTCSS Tones | Tt | CTCSS Tones | Rn | NAC Only | Ti | ID Call |
| Rc | DCS Code | Tc | DCS Code | Rm | Monitor | T- | Inhibit |
| | | T- | Inhibit | | | | |

Squelch modes are non-orthogonal, that is, they are not the same across differences in Operating Mode or for receive and transmit operation. While the user might never use certain squelch modes for certain channels, the associated parameters are always there.

Example: the user may keep a certain channel in analog narrow mode only, with no selective squelch chosen, but that channel does have a CTCSS tone, a DCS code, a TalkGroup and a NAC assigned, it is just that these parameters are not used.

Each squelch parameter exists for each channel, and each has a default value, these default values, like all user editable channel parameters, can be set using the Maintenance Level command (L4-3).

In addition, Squelch use may be restricted according to: which Squelch Modes may be selected for any Operating Mode, which Squelch Modes may be edited (e.g. change value), and – in the case of Tones and Codes – which values are available to be selected. See command L4-9.

Analog Mode 'x' The analog squelch mode 'x' is the default squelch mode, in the case of the TDFM-136, the default receive mode is noise squelch. In the case of transmit, there is no special selective squelch signal added.

Analog Mode 't' The analog squelch mode 't', indicates that both receive and transmit use CTCSS tone selective squelch. The tones may be the same or different for receive or transmit.

Analog Mode 'c' The analog squelch mode 'c', indicates that both receive and transmit use DCS (digitally coded squelch) code selective squelch. The codes may be the same or different for receive or transmit.

Analog Mode '-' The analog squelch mode '-', is valid for transmit only, and indicates that transmit is disabled for this memory.

Digital Mode 'm' The digital squelch mode 'm', is valid for receive only, and indicates that any non-encrypted P25 compliant digital signal, regardless of NAC or TalkGroup setting, will be received.

Digital Mode 'n' The digital squelch mode 'n', is valid for receive only, and indicates that any non-encrypted P25 compliant digital signal, having the correct NAC, will be received.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- Digital Mode 'g'** The digital squelch mode 'g', is valid for receive and transmit only. For receive it indicates that any non-encrypted P25 compliant digital signal, having the correct NAC, and the correct TalkGroup will be received. For transmit it indicates that the specified NAC and TalkGroup codes will be transmitted.
- Digital Mode 'i'** The digital squelch mode 'i', is valid for transmit only, and indicates that the transmitted signal will carry the ID of a specific radio. Only a radio with that ID programmed as its UNIT ID (see command L2-9), should be able to receive that signal.
- Digital Mode '-'** The digital squelch mode '-', is valid for transmit only, and indicates that transmit is disabled for this memory.

ID Call Operation

The radio can be configured, in digital mode, to use ID call as a selective squelch method, in this mode the transmitting unit sets it's TalkGroup to zero (0), and transmits the intended Unit ID number (decimal 0 to 9,999,999), upon seeing the '0' talkgroup, the receiver ignores everything except the ID number.

Of course the receiver will have to be on the correct frequency, and in digital mode.

The TDFM-136 has two (2) distinct RF modules (Main and a dedicated Guard receiver). Unit ID's are not selected at the factory (all units ship with default IDs of 1 for Main and 2 for Guard), so each of these needs to have a Unit ID programmed.

Scan Operation (L1-5, L2-5, L3-5)

The radio supports a basic scan mode that operates on the *Main channel only*. The scan function allows users to monitor up to 16 channels at a time. All memories must be a member of one, and only one, scan list; each scan list can hold up to 16 memories. Each memory in a scan list can be enabled for scan or disabled (see command L2-5).

To scan a particular list: the radio must have a memory, with its scan enabled, selected for the Main channel.

Example: There are seven (7) memories assigned to scan list three (3), channels 5, 6, 13, 15, 23, 34, and 51 are all members of scan list 3. Channels 6 and 15 have scan disabled, the rest have scan enabled. If the user is on channel 6 or 15 and tries to start scan (command L1-5), there will be an error message: "Error: Non-Scanned Chan" and nothing will happen. If the user is on any other channel in scan list three, then the five scan-enabled channels in list three will be scanned.

You can enable or disable scan for the displayed memory (for Main channel only) by using the command L2-5.

You can affect the scan operational parameters by using command L3-5. This command allows you to affect the following four (4) parameters:

- Revert Mode
- Reply Timer
- Monitor Timer
- Delay Timer

Revert Mode The Revert Mode refers to whether the radio will, when keyed, transmit on the currently *selected* memory channel, or on the last *contacted* memory channel. The radio will only respond on the last contacted channel for a time determined by the Delay Timer setting, once the Timer times out, the unit then always transmits on the selected channel.
Default: last contacted

Reply Timer The scan Reply time is the time that the radio will monitor a channel on which RF was received, *after all activity on the channel has ended (Rx or Tx)*. If there is further receive or transmit activity on the channel, the timer will reset, and start again once the activity has ended. When the timer times-out the unit will resume scan. If set to zero (0), the unit will resume scan immediately upon the end of channel activity.
Range: 0-20s, Default: 3 seconds

Monitor Timer This is the time that the radio will monitor a channel on which RF was received, before resuming scanning. Once the timer expires, the unit will break and resume scan, if the value is set to zero (0) then the unit will monitor the signal as long as it is received.
Range: 1-90s, Default: 10 seconds

Delay Timer The Delay time is the time that the radio will remain monitoring a channel after receiving on that channel has ended. If the timer is set to zero, (0), then the unit will resume scanning immediately after receive activity has ended. This is the timer that affects the Revert Mode 'Contacted'.
Range: 0-15s, Default: 5 seconds

Mixed Mode Operation (L2-7)

The radio supports a mode of operation that allows mixing of analog and digital operating modes. In effect, this mode allows one memory position to be set up as though it has up to 8 sets of parameters associated with it. This mode is also referred to as 'multi-mode' or 'shadow channel' operation.

The user invokes this mode by creating a 'shadow' memory (using command L2-7) and assigning it to an existing memory (known as the 'primary').

Any 'primary' can have up to seven (7) 'shadows' for a total of eight (8) sets of operating parameters (1 primary + 7 shadows). Each 'shadow' takes up one memory position, just like a normal memory.

The shadows have certain restrictions:

- a shadow must have the same frequency as the primary
- a shadow cannot have scan enabled
- a shadow cannot transmit in digital ID call (i) mode

You can mix analog and digital Operating Modes, you can configure different shadows to have different squelch parameters.

Shadow operation is much like scan in last contacted mode, once a signal has been received, the user has a set amount of time to key the radio, the unit will transmit with the parameters of the shadow that decoded the signal: in other words you will respond to the person who called you.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

When mixing analog noise squelch with analog selective squelches, the noise squelch shadow will delay decode for a short time to allow the selective squelch channels time to decode, if none of the selective squelch channels decode a valid signal, then squelch is broken on the noise squelch channel.

The radio will operate in Mixed Mode when the Main channel has *any* memory in the shadow group selected (e.g. either Primary or any shadow). The only difference between selections is that if the user keys the radio, other than to respond to a received transmission, then the radio will transmit using the displayed parameters.

Primary channels with shadows are identified with a large diamond in the 4th character position:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|--|--|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | ◇ | M | a | i | n | | | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| G | D | 1 | | G | u | a | r | d | 1 | | | | | n | 1 | 5 | 4 | . | 0 | 0 | 0 | 0 | R | t |

FIGURE 2-42 Identifying Graphic for Primary Channel with Shadows

Shadow channels are identified with a small diamond in the 4th character position:

| | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|--|--|--|--|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 1 | ◇ | M | a | i | n | | 1 | | | | | D | 1 | 3 | 6 | . | 0 | 0 | 0 | 0 | R | g |
| G | D | 1 | | G | u | a | r | d | 1 | | | | | n | 1 | 5 | 4 | . | 0 | 0 | 0 | 0 | R | t |

FIGURE 2-43 Identifying Graphic for Shadow Channel

This page left intentionally blank.

SECTION 3 – INSTALLATION INSTRUCTIONS

3.1 GENERAL

This section contains information and instructions for the correct installation of the TDFM-136, VHF/FM Digital Transceiver.

Make certain that the correct frequencies are pre-programmed in accordance with the equipment user's valid FCC operator's license, prior to installation.

3.2 EQUIPMENT PACKING LOG

Unpack the equipment and check for any damage that may have occurred during transit. Save the original shipping container for returns due to damage or warranty claims. Check that each item on the packing slip has been shipped in the container. Verify that the equipment display and back-lighting configuration are the same as those ordered.

3.3 TRANSCEIVER INSTALLATION

The TDFM-136 Transceivers are designed to be Dzus mounted and should be installed in conjunction with an IN-150 installation kit. See Figure 3-1 for an outline drawing of the unit with dimensions to facilitate the installation.

3.4 INSTALLATION KIT - CONTENTS

The IN-150 installation kit consists of:

1. One 15-pin (female) Cannon D-mating connector complete with crimp pins and hoods.
2. One BNC antenna mating RF connector (male) and hood.

3.5 ANTENNA INSTALLATION

Antenna, P/N ATM-150 may be obtained from Technisonic Industries Limited or a suitable equivalent 0dB gain antenna may be used with the TDFM-136 transceivers. The antenna should be mounted on the bottom of the aircraft whenever possible and must be located at least 20 cm (8 inches) from any occupant in the airframe. Consult with instructions provided with the antenna. Connect RF cable from antenna to the back of the TDFM-136 unit by utilizing the BNC mating connector provided in the installation kit.

3.6 INSTALLATION - PIN LOCATIONS AND CONNECTIONS

A single 15 pin DSUB connector, mounted on the rear of the unit, provides the means to connect all power, control and audio signals between the TDFM-136 and the airframe. The pin numbers and locations for the 15 pin DSUB connector are shown in figure 3-1 below. The view shown is of the connector mounted in the unit, select mating connector appropriately.

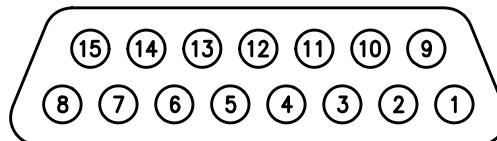


FIGURE 3.1 Transceiver mounted view of 15-pin male connector

Table 3-1 provides the description of the pin connections for the transceiver.

| TABLE 3-1 TDFM-136 - Rear Connector Pin Assignments | | |
|--|------------------------|--------------------------------|
| Pin # | Description | Notes |
| 1 | Audio - Headset | Output - 600 Ohms |
| 2 | Serial Data Out | Output - RS232 |
| 3 | Power - Panel Lighting | 28 VDC Standard, 5VDC Optional |
| 4 | Signal - Memory Up | Input - active low |
| 5 | Signal - Memory Down | Input - active low |
| 6 | Audio - Microphone | Input |
| 7,14 | Power - Main +28VDC | Power |
| 8,15 | Power - Main Ground | Power |
| 9 | Audio - Speaker | 4-Ohm Speaker Output |
| 10 | Signal Ground | 4-Ohm / 600-Ohm Output Ground |
| 11 | Serial Data In | Input - RS232 |
| 13 | Signal - PTT | Input - active low |

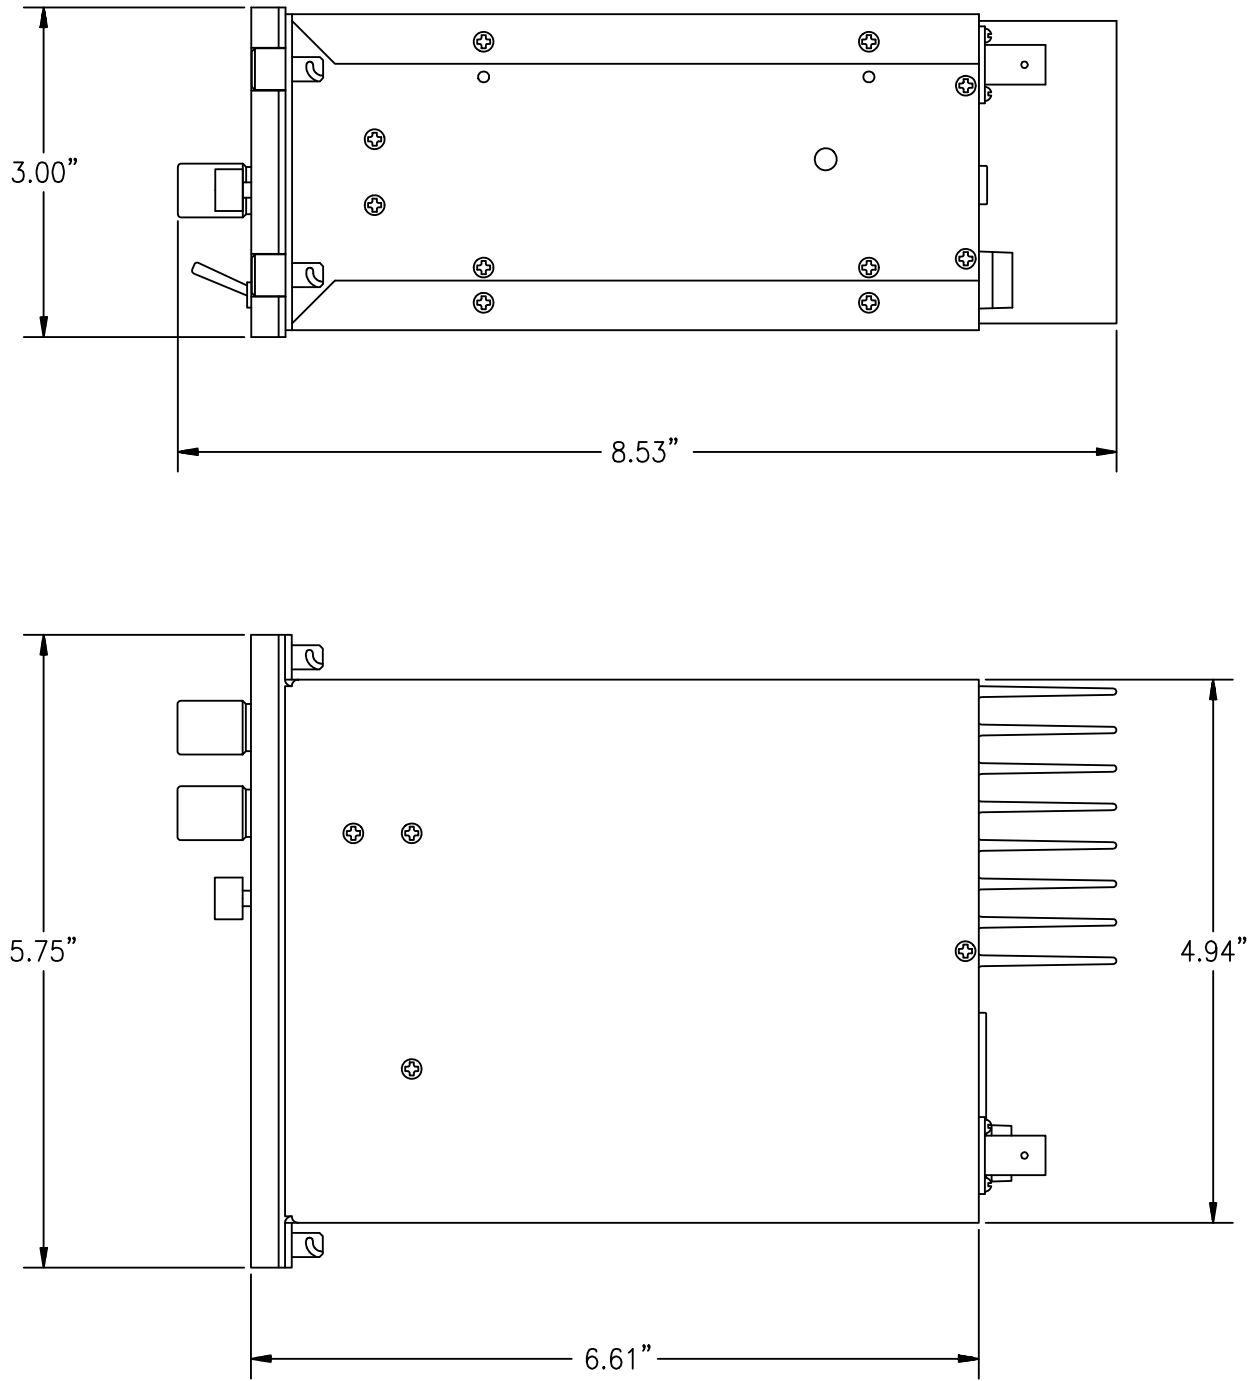


FIGURE 3-2 Outline Drawing for Model TDFM-136 Transceiver

3.7 WIRING INSTRUCTIONS – 15-PIN D-CONNECTOR

Figure 3-3 shows all required connections and recommended wire sizes for the TDFM-136 Transceiver operation in the airframe.

3.7.1 Main Power +28 VDC

The main power +28VDC ($\pm 15\%$) is connected to pins 7 and 14 of the 15-pin D-connector on the transceiver. Both pins should be connected.

3.7.2 Main Ground

Ground connections for the transceiver are made on pins 8 and 15. Both pins should be connected.

3.7.3 PTT (Ground Keying)

The PTT line is connected to pin 13 and should be floating when the transceiver is in receive mode, and grounded during transmit mode.

3.7.4 Front Panel Back Lighting

Front panel back lighting connection should be made on pin 3 of the transceiver. The opposite end of this lead should be connected to the panel lighting system of the aircraft. Before connecting, verify the required panel lighting voltage (28 VDC or 5 VAC) on the transceiver configuration control label.

3.7.5 Audio Outputs (600 Ohms and 4 Ohms)

The audio output from pin 9 can be used to drive a 4 ohm speaker up to 2.5 watts. Audio output from pin 1 is 600 Ohms, 0.5 watts maximum.

3.7.6 Audio Output Ground

Pin 10 is the ground for both the 4 and 600 Ohms audio output signals on pins 9 and 1.

3.7.7 Mic Signal Input


The microphone input signal is to be provided on pin 6, utilizing shielded wire with the shield grounded to pin 10.

3.7.8 Memory Up/Memory Down

Remote scrolling through the 25 memory positions can be achieved by providing a ground to pins 4 (up) and 5 (down) through a momentary contact cyclic switch.

3.7.9 Data Input

Channel data may be transferred to and from the unit using RS-232 communications protocol via pins 2 and 11.

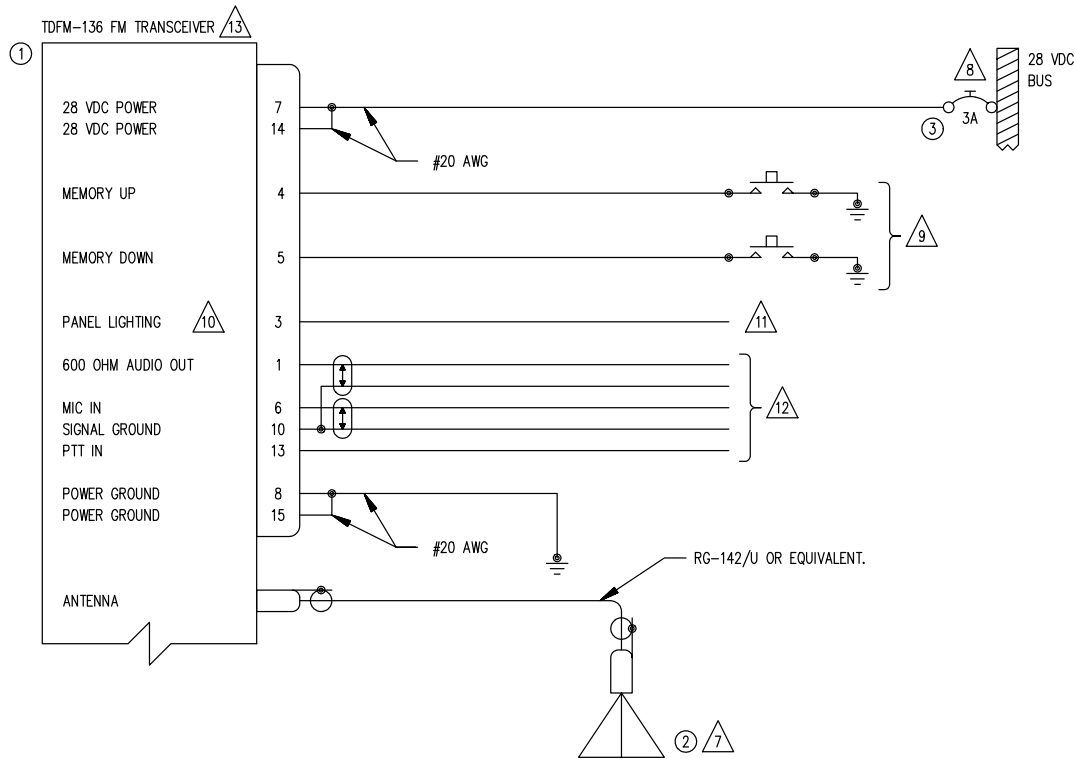

| QTY | ITEM | PART NUMBER | DESCRIPTION | SPEC | MATERIAL |
|-----|------|-------------|------------------------------------|--------------------------------|----------|
| 1 | 1 | TDFM-136 | VHF/FM COMMUNICATIONS TRANSCEIVER. | TECHNISONIC INDUSTRIES LIMITED | |
| 1 | 2 | CI-292-3 | ANTENNA | COMANT | |
| 1 | 3 | 7274-11-3 | CIRCUIT BREAKER, 3 AMPS | KLIXON | |

NOTES:

- 1) ALL WIRE IAW MIL-W-22759 UNLESS OTHERWISE SPECIFIED.
- 2) ALL CABLE IAW MIL-C-27500 UNLESS OTHERWISE SPECIFIED.
- 3) COAXIAL CABLE IAW MIL-C-17 UNLESS OTHERWISE SPECIFIED. DO NOT USE COAX WITH PVC INSULATION.
- 4) FABRICATION & INSTALLATION OF WIRING HARNESS IAW AC 43.13-1A CHAPTER 11, SECTION 3, PARA 445 TO 462 AND SECTION 7.
- 5) GROUNDING AND BONDING IAW AC 43.13-1A CHAPTER 11, SECTION 3, PARA 452.
- 6) ALL SINGLE WIRE TO BE #22 AWG MINIMUM AND ALL SHIELDED WIRE TO BE #24 AWG MINIMUM, UNLESS OTHERWISE SPECIFIED.
- 7) INSTALLATION OF ANTENNA IAW AC 43.13-1A CHAPTER 2, SECTION 3, CHAPTERS 5 & 6, AND AC 43.13-2A CHAPTER 3. IF POSSIBLE, THE ANTENNA SHOULD BE LOCATED A MINIMUM OF 12 FT FROM AIRCRAFT NAVIGATION RECEIVER ANTENNAS AND A MINIMUM OF 4 FEET FROM AIRCRAFT COMMUNICATIONS AND ELT ANTENNAS. BE CAREFUL NOT TO CHOSE SEPARATIONS THAT CLOSELY APROXIMATE 1/4 OR 1/2 OR WHOLE NUMBER MULTIPLES OF THE NAVIGATION OR COMMUNICATIONS SYSTEM WAVELENGTH.
- 8) AN EQUIVALENT CIRCUIT BREAKER OR FUSE MAY BE USED.
- 9) THE MEMORY UP/DOWN PUSH BUTTONS ARE OPTIONAL.
- 10) THE TDFM-136 IS AVAILABLE WITH 28V OR 5V PANEL LIGHTING. CHECK THE CONFIGURATION CONTROL LABEL FOR THE CORRECT VOLTAGE.
- 11) CONNECT TO THE APPROPRIATE AIRCRAFT DIMMING BUSS.
- 12) CONNECT TO THE AIRCRAFT AUDIO SYSTEM OR STAND-ALONE HEADSET JACKS.
- 13) INSTALLATION OF TRANSCEIVER IAW AC 43.13-1A CHAPTER 2, SECTION 3 AND AC 43.13-2A, CHAPTER 2. PR 3 1/2 DZUS RAIL OR EQUIVALENT MAY BE USED.
- 14) TEST THE SYSTEM IN ACCORDANCE WITH THE POST-INSTALLATION TEST PROCEDURE IN THE INSTALLATION AND OPERATING INSTRUCTIONS MANUAL.
- 15) REFER TO THE AIRCRAFT STRUCTURAL REPAIR MANUAL AND THE MAINTENANCE MANUAL FOR INSTRUCTIONS AND INFORMATION PERTINENT TO THIS INSTALLATION.
- 16) THE USE OF RED DISPLAYS SHOULD BE MINIMIZED OR AVOIDED SO AS NOT TO DETRACT FROM THE ATTENTION GETTING CHARACTERISTICS NEEDED IN WARNING AND CAUTION ANNUNCIATORS. RED SHOULD BE USED TO ANNUNCIATE EMERGENCY CONDITIONS REQUIRING IMMEDIATE RESPONSE BY THE FLIGHT CREW. UNITS WITH RED DISPLAYS SHOULD NOT BE LOCATED IN CLOSE PROXIMITY TO WARNING AND CAUTION ANNUNCIATORS. THE INSTALLATION OF UNITS WITH RED DISPLAYS MUST BE EVALUATED ON A CASE BY CASE BASIS TO ENSURE THAT THE EFFECTIVENESS OF THE WARNING AND CAUTION ANNUNCIATORS IS NOT ADVERSELY AFFECTED.

Figure 3-3 Wiring Connections for TDFM-136 Transceiver

3.8 TRANSMITTER SIDE TONE LEVEL ADJUSTMENT

The side tone level is set at the factory; however, this level can be altered to suit local conditions as follows:

1. Set the transceiver operating frequency to 155.000 MHz and connect an appropriate test receiver to the RF output connector. Ensure that the output of the transceiver is terminated into a proper dummy load.
2. Key the transmitter and input a 1 kHz audio signal @ -10 dBm (0.25 VRMS) into the microphone input.
3. Select the side-tone adjust command (L3-7) and then adjust the side-tone level using the up/down arrows (keys 2 & 8) to produce a +3.0 dBm (1.0 VRMS) 600 Ohm audio output.

3.9 MAIN AND GUARD NOISE SQUELCH ADJUSTMENT

The squelch (on both the main and guard receivers) is factory set to open at approximately 0.5 micro-volts. This adjustment can be altered to suit local conditions as follows:

1. Set the main receiver of the transceiver to 155.000 MHz. Connect a signal generator to the antenna input of the transceiver.
2. Set the signal generator to produce a ± 3 deviation with a 1 kHz tone on 156.000 MHz. Increase the signal generator RF level from 0.1 uV until the squelch indicator LED is on. Verify the receiver SINAD ratio is between 12 and 14 dB.
3. If not, re-adjust main receiver squelch via the main receiver squelch software command.
4. Repeat the above procedure to adjust the guard receiver squelch setting using guard receiver squelch adjustment software command.

3.10 REFERENCE LAYOUTS

Reference layouts are given in the following Figures 3-4 and 3-5. These show the position of control points for both the Main RF Interface, and the MCU boards.

- J1: Antenna connector
- J6: P25 Module RF output to RF Amplifier - factory installed
- J7: RF Amplifier output stage to Antenna filter - factory installed
- J8: RF Amplifier power supply select – factory installed
- J9: Leave open

- C23: RF Power bandwidth compensation - factory set

- TP1: RF Power Transistor DC bias monitoring point.

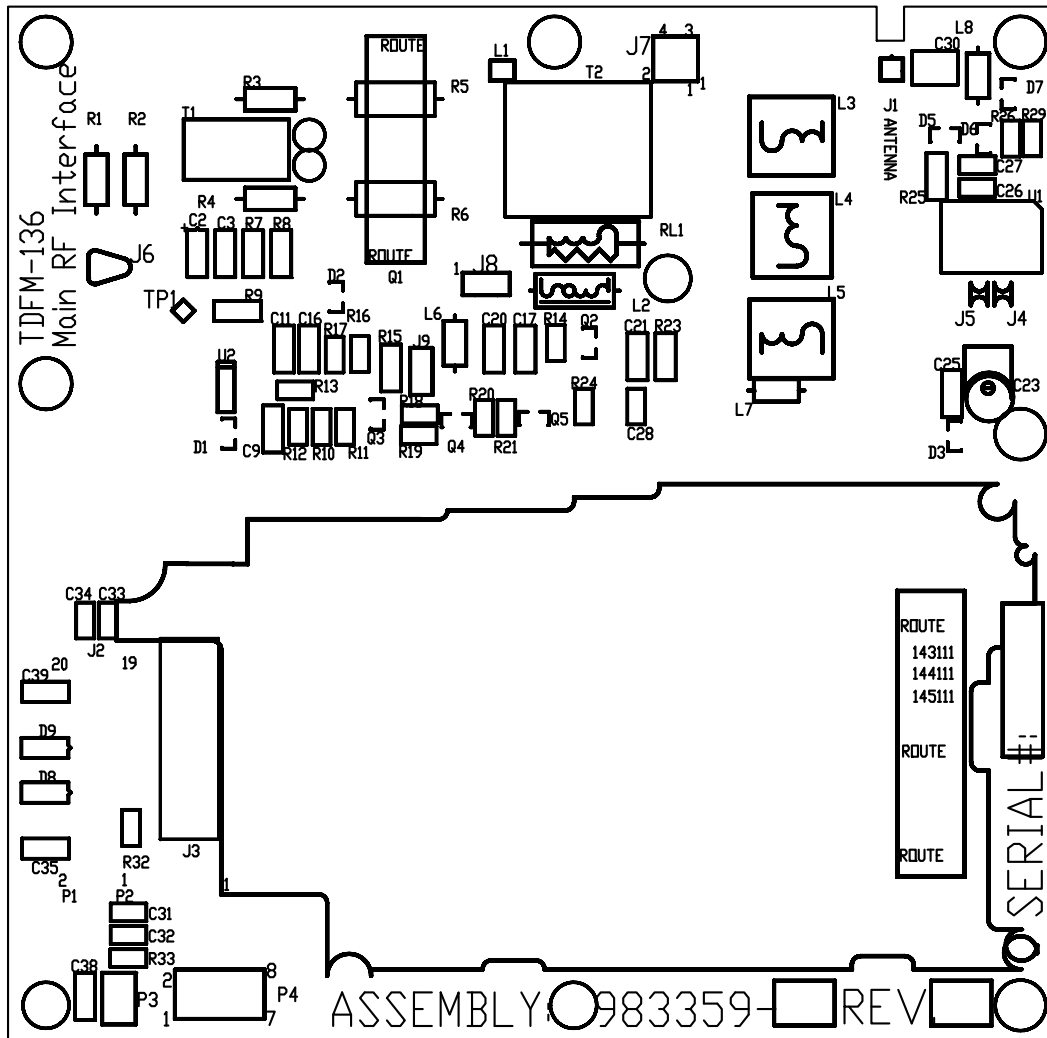


FIGURE 3-4 Control Points for TDFM-136 Main RF Board

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- J2: Boot Program Enable - factory set **DO NOT INSTALL**
- J4: Option Jumpers:
 - 1-2 Maintenance Mode Enable - **DO NOT INSTALL IN AIRFRAME, BENCH ONLY**
 - 3-4 **Factory Use Only – DO NOT INSTALL**
 - 5-6 n/u reserved
- R8: Main Rx Audio adjust - factory set
- R10: Tx Mic Audio Level Adjust – factory set
- R11: Guard Rx Audio adjust – factory set
- R17: RF Low power adjust – factory set
- R18: RF High power adjust – factory set
- R56: DTMF Level Adjust – factory set

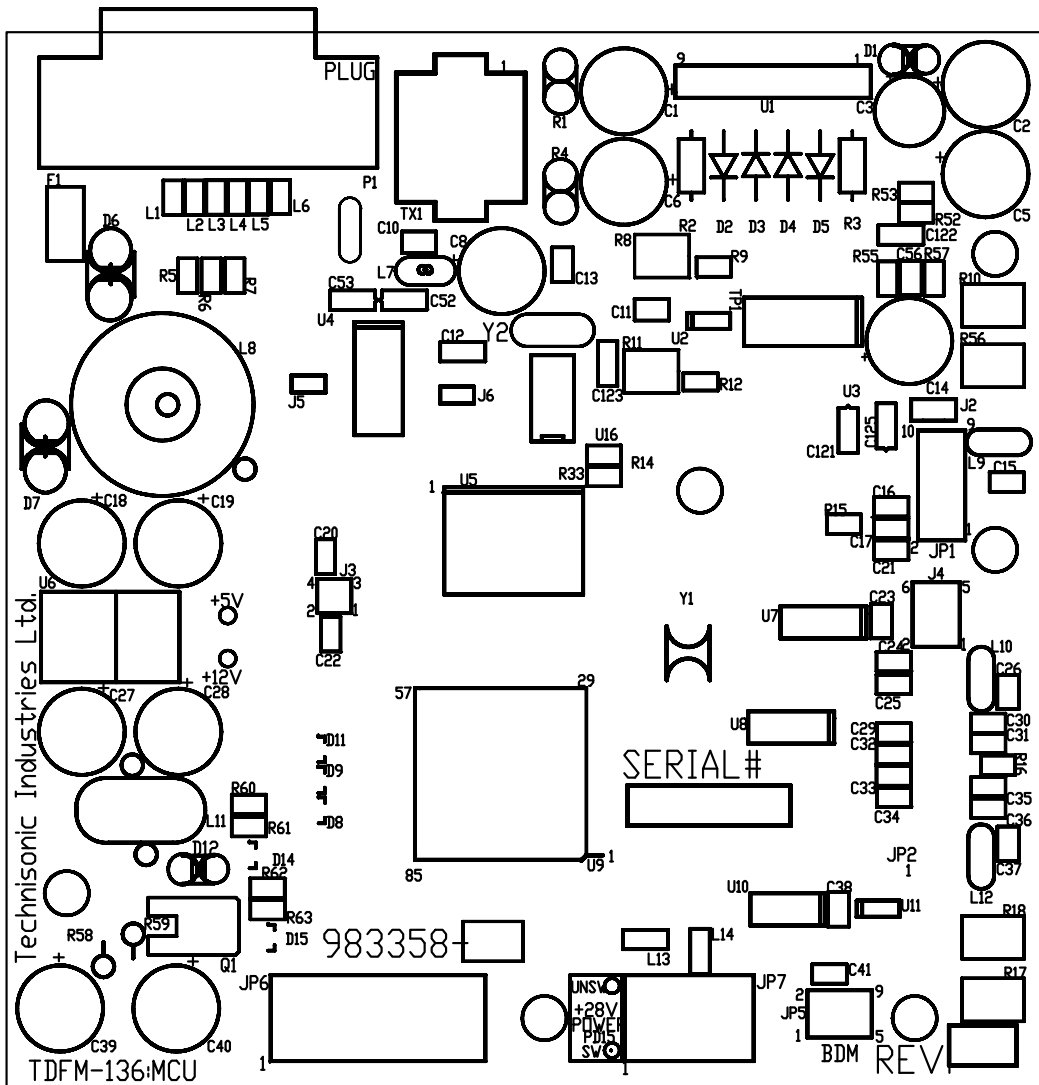


FIGURE 3-5 Control points for the TDFM-136 MCU Board

APPENDIX A – CTCSS TONES and DCS CODES

| Available CTCSS TONES | Available DCS CODES | |
|--------------------------|------------------------|-------|
| TONES | CODES | CODES |
| 67.0 | 23 | 315 |
| 69.3 | 25 | 331 |
| 71.9 | 26 | 343 |
| 74.4 | 31 | 346 |
| 77.0 | 32 | 351 |
| 79.7 | 43 | 364 |
| 82.5 | 47 | 365 |
| 85.4 | 51 | 371 |
| 88.5 | 54 | 411 |
| 91.5 | 65 | 412 |
| 94.8 | 71 | 413 |
| 97.4 | 72 | 423 |
| 100.0 | 73 | 431 |
| 103.5 | 74 | 432 |
| 107.2 | 114 | 445 |
| 110.9 | 115 | 464 |
| 114.8 | 116 | 465 |
| 118.8 | 125 | 466 |
| 123.0 | 131 | 503 |
| 127.3 | 132 | 506 |
| 131.8 | 134 | 516 |
| 136.5 | 143 | 532 |
| 141.3 | 152 | 546 |
| 146.2 | 155 | 565 |
| 151.4 | 156 | 606 |
| 156.7 | 162 | 612 |
| 162.2 | 165 | 624 |
| 167.9 | 172 | 627 |
| 173.8 | 174 | 631 |
| 179.9 | 205 | 632 |
| 186.2 | 223 | 654 |
| 192.8 | 226 | 662 |
| 203.5 | 243 | 664 |
| 206.5 | 244 | 703 |
| 210.7 | 245 | 712 |
| 218.1 | 251 | 723 |
| 225.7 | 261 | 731 |
| 229.1 | 263 | 732 |
| 233.6 | 265 | 734 |
| 241.8 | 271 | 743 |
| 250.3 | 306 | 754 |
| 254.1 | 311 | |

Page left intentionally blank.

APPENDIX B – POST INSTALLATION EMI TEST INSTRUCTIONS”

PURPOSE

The purpose of these tests is to identify any interference that the TDFM-136 may cause with existing aircraft systems.

TEST CONDITIONS

The TDFM-136 transceiver should be installed and function tested. The antenna VSWR should be checked. A forward/reverse power check with an in-line wattmeter should show no more than 10% reflected power. For the following tests, insure that the power switch is in the high position.

METHODOLOGY

Most of the EMI tests can be accomplished on the ground. In some cases flight testing is required or is easier. If the aircraft is approved for IFR operations, then it is mandatory that interference between the TDFM-136 Airborne FM and the approach aids be checked in flight.

The GPS should be operational and navigating with at least the minimum compliment of satellites. The VHF COMM should be set to the frequencies indicated with the squelch open. VOR/DME receivers should be set to the frequencies indicated and selected for display. If possible, set up a DME ramp test set on the frequencies indicated and adjust the output until the flags are out of view. The transponder and encoder should be monitored with ramp test equipment. Set the output of the transponder test set to 3db above the output necessary to achieve 90% reply. If possible set the ADF to a nearby navigation station.

Modulate the TDFM-136 transmitter on the indicated frequencies for at least 20 seconds. Observe the GPS for any degradation in satellite status or availability or flags. Listen for any noise or detected audio signals on the VHF COMM(s). Listen for any noise or detected audio signals on the VOR/LOC receiver audio; look for any movement of flags or needles on the VOR/LOC/GS navigation display(s). Observe the transponder for any loss of reply or spurious reply.

List the power plant, fuel and other electric instruments in the chart provided and note any anomalies that occur while transmitting. Assess the results.

If the aircraft is equipped with an auto-pilot or a stability augmentation system, then test fly the aircraft and verify that operation of the TDFM-136 transceiver does not have adverse effects on these systems. After checking for gross effects at a safe altitude, fly an approach with each of the different navigation systems coupled to the auto-pilot (ILS, GPS etc.) and look for any anomalies.

RESULTS

If the installed system passes all of the applicable EMI tests, then no further action is required. If interference is observed, then the interference must be assessed against the appropriate standards of airworthiness for the system in question. For example, it is permissible for a VFR certified GPS to lose navigation capability while the TDFM-136 is transmitting providing that it recovers properly and promptly, but is not permissible for an IFR approach certified GPS to be affected in the same way. A complete discussion of all the standards of airworthiness to be applied in assessing EMI effects is beyond the scope of this document.

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

PROCEDURE

- A.** Operate the TDFM-136 transmitter on the following frequency for at least 20 seconds. Observe the GPS for any degradation in satellite status or availability or flags.

| FREQUENCIES | GPS #1 | | GPS #2 | |
|--------------------|---------------|-------------|---------------|-------------|
| TDFM-136 | PASS | FAIL | PASS | FAIL |
| 143.1800 MHz | | | | |
| 143.1825 MHz | | | | |
| 157.5000 MHz | | | | |
| 157.5425 MHz | | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- B.** Determine if the image frequency for the VHF COMM falls within the range of the TDFM-136. If so, select a set of frequencies that will cause the TDFM-136 to be set as close as possible to the image frequency. Any one of the many possible sets will suffice. Record those values in the spaces provided in the following chart. Modulate the TDFM-136 transmitter on the following frequencies for at least 20 seconds. Listen for any noise or detected audio signals on the VHF Comm.

EXAMPLE: Bendix/King KY 196A.

The first IF frequency is 11.4 MHz. The LO is above the receive frequency (high side injection). Therefore, the image frequency is 22.8 MHz above the selected frequency. Set the KY 196A to 120.000 MHz and the TDFM-136 to 142.8000 MHz.

| FREQUENCIES | | RESULTS | |
|-------------|-------------|---------|------|
| VHF #1 | TDFM-136 | PASS | FAIL |
| 135.975 MHz | 135.975 MHz | | |
| 121.150 MHz | 121.150 MHz | | |
| 131.250 MHz | 131.250 MHz | | |
| Image | | | |

| FREQUENCIES | | RESULTS | |
|--------------|--------------|---------|------|
| VHF #2 | TDFM-136 | PASS | FAIL |
| 138.0000 MHz | 138.0000 MHz | | |
| 157.5000 MHz | 157.5000 MHz | | |
| 157.5000 MHz | 157.5000 MHz | | |
| Image | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- C. Determine if the image frequency for the VOR/ILS Nav falls within the range of the TDFM-136. If so, select two sets of frequencies that will cause the TDFM-136 to be set as close as possible to the image frequency. Choose one set in the localizer frequency range and one in the VOR frequency range. Record those values in the spaces provided in the following chart. Modulate the TDFM-136 transmitter on the following frequencies for at least 20 seconds. Listen for any noise or detected audio signals on the receiver audio; look for any moment of flags or needles on the navigation display.

| FREQUENCIES | | RESULTS | |
|--------------|--------------|---------|------|
| VOR / ILS #1 | TDFM-136 | PASS | FAIL |
| 108.000 MHz | 162.0000 MHz | | |
| 108.100 MHz | 162.1500 MHz | | |
| Image | | | |
| Image | | | |

| FREQUENCIES | | RESULTS | |
|--------------|--------------|---------|------|
| VOR / ILS #2 | TDFM-136 | PASS | FAIL |
| 108.000 MHz | 162.0000 MHz | | |
| 108.100 MHz | 162.1500 MHz | | |
| Image | | | |
| Image | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- D.** Modulate the TDFM-136 transmitter on the following frequencies for at least 20 seconds. Observe the Glide Slope displays. Look for any movement of flags or needles on the Navigation display.

| FREQUENCIES | | RESULTS | |
|----------------|--------------|---------|------|
| Glide slope #1 | TDFM-136 | PASS | FAIL |
| 334.7 (108.1) | 167.3500 MHz | | |
| | | | |
| | | | |

| FREQUENCIES | | RESULTS | |
|----------------|--------------|---------|------|
| Glide slope #2 | TDFM-136 | PASS | FAIL |
| 334.7 (108.1) | 167.3500 MHz | | |
| | | | |
| | | | |

NOTES:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

For the following tests (E & F), select a frequency at the top, middle and bottom of the band of the TDFM-136 Transceiver.

| VHF Band (138 to 174 Mhz) | |
|----------------------------------|--|
| Frequency No. 1 | |
| Frequency No. 2 | |
| Frequency No. 3 | |

- E.** At a safe altitude engage the autopilot or stability augmentation system. Modulate the TDFM-136 on the above frequencies for at least 20 seconds. Observe any effect on the autopilot or stability augmentation system.

Observations:

- F.** Perform a coupled ILS approach to the aircraft's certified limits. Modulate the TDFM-136 transmitter on the above frequencies for at least 20 seconds. Observe any effect on the autopilot. Repeat for second flight director/autopilot if so equipped.

Observations:

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

- G.** List the power plant, fuel and other electric instruments in the chart provided and note any anomalies that occur while transmitting. Assess the results.

| STEP | SYSTEM | PASS | FAIL | NOTES |
|-------------|-------------------------|-------------|-------------|--------------|
| 1 | COMM 1 and 2 | | | |
| 2 | Transponder and Encoder | | | |
| 3 | ADF 1 and 2 | | | |
| 4 | Vertical Gyro | | | |
| 5 | Glide slope 1 and 2 | | | |
| 6 | VOR/LOC 1 and 2 | | | |
| 7 | Directional Gyro | | | |
| 8 | Compass | | | |
| 9 | Fuel Pressure | | | |
| 10 | Oil Temperature | | | |
| 11 | Ammeter | | | |
| 12 | Bus Voltage | | | |
| 13 | Fuel | | | |
| 14 | Nt | | | |
| 15 | TOT | | | |
| 16 | % Torque | | | |
| 17 | Digital Clock | | | |
| 18 | Oil Pressure | | | |
| 19 | Annunciators | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

TECHNISONIC INDUSTRIES LIMITED

www.til.ca

| STEP | SYSTEM | PASS | FAIL | NOTES |
|------|--------|------|------|-------|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

NOTES: