

# 1080p Full HD Action Camera (VMS50)

# VALORE

Thank you for purchasing Valore 1080p Full HD Action Camera.

Capture your action-packed moments with rich colour in superior 1080p full HD image quality.

**Important:** Please read the user manual thoroughly before using your action camera.

## Specifications:

- Image sensor: CMOS sensor
- LCD: 1.5 inch
- Lens: 140° wide-angle
- Resolution:
  - 1920 x 1080 at 30fps
  - 1440 x 1080 at 30fps
  - 1280 x 720 at 30fps
  - 848 x 480 at 30fps
  - 640 x 480 at 30fps
- Input: DC5V/1A
- Battery type: Built-in 3.7V Lithium battery 900mAh
- Video format: AVI
- Video codec: H.264
- Photo resolution: 12M/10M/8M/5M/3M/2M/1.3M/VGA
- Photo format: JPEG
- Dimension (L x W x D): 59 x 41 x 29mm
- Weight: 50g (with waterproof case 191g)

 
## Package Contents:

- Action camera
- Waterproof housing
- Protective backdoor
- Adhesive x 2
- Bicycle holder
- Base
- Mount
- Clip x 2
- Switch support x 3 sets
- Lens cloth
- USB cable
- Helmet base x 2
- Bandages x 4
- Ribbon x 4
- Wire rope

## UNDERSTANDING THE PRODUCT





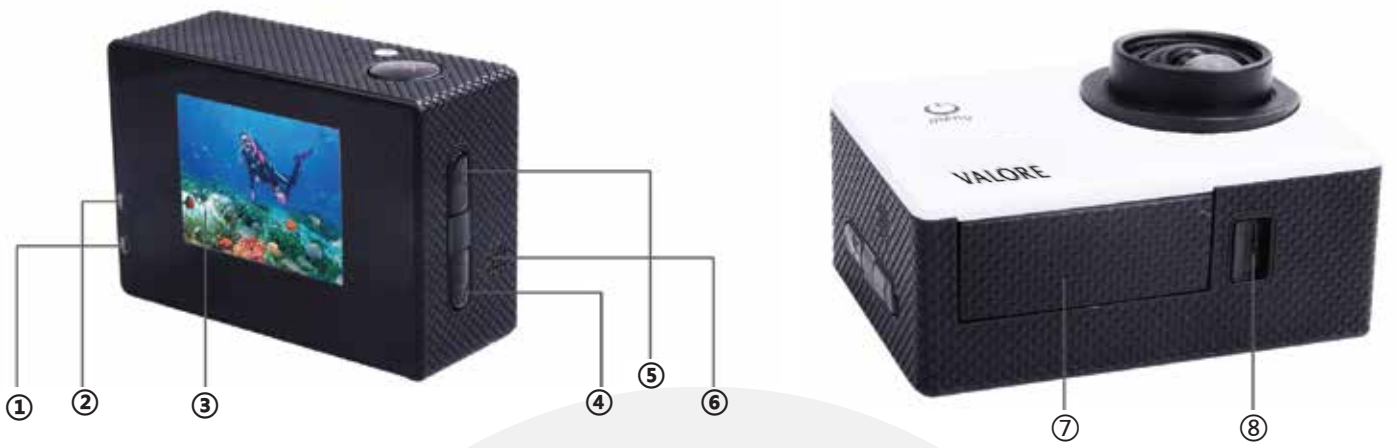

















- ① OK button
- ② Mode/Power
- ③ Indicator
- ④ Micro HDMI port
- ⑤ Lens
- ⑥ Micro USB port
- ⑦ Mic
- ⑧ Micro SD card slot



- ① Charging indicator (Red)
- ② Operation indicator (Blue)
- ③ Screen
- ④ Down
- ⑤ Up
- ⑥ Speaker
- ⑦ Battery cover
- ⑧ Battery cover lock

## START USING THE ACTION CAMERA

### Accessories

						
Waterproof Housing	Bicycle Holder	Mount 1	Mount 2	Mount 3	Switch Support 1	Switch Support 2
						
Switch Support 3	Mount 4	Clip 1	Clip 2	Helmet Base	Bandages	Battery
						
Adhesives	Ribbon	Wire Rope	Protective Backdoor	USB Cable	Lens Cloth	

# Mounting



# Mounting



+



+

=



+



+



=



## **1) Installing and removing battery**

- a) Pull back the back cover lock to release the battery cap.
- b) Correctly install battery into action camera as indicated by +/- symbols and direction of arrowed marked on battery.

## **2) Charging**

- a) While charging, a red indicator will be lit.
- b) When the battery is full charged, the red indicator will go off.

## **3) Switching On/Off**

- a) Press and hold onto Mode/Power button for 3 - 5 seconds till welcome screen appears.

## **4) Mode switching**

- a) After the action camera is switched on, short press the Mode/Power button to switch between video recording / photo shooting / playback & menu.
- b) Symbols of mode will be displayed on the top left of the screen.

## **5) Video recording & photo shooting**

- a) Insert micro SD card, when in video recording mode, press OK button to start recording, the recording icon on the top left will start to flash. Press OK button again to stop recording.
- b) When in photo shooting mode, press OK button to take photos.

## **6) File storage & playing**

- a) Micro SD card have to be Class 10 or above.
- b) Use a USB cable to export the videos into a computer, the action camera will prompt Mass Storage / PC camera. Click on Mass Storage to play and store image.
- c) Use a card reader to access the image data on the micro SD card.

Note: Make sure the action camera is turned off properly before removing the micro SD card.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the action camera in a high temperature environment.
- Do not place the action camera near a fire or other excessively hot environments.
- Do not expose this action camera to moisture or submerge it in liquid. Keep action camera dry at all times.
- Do not attempt to charge the action camera using any other method or connection other than the action camera's provided charging cable.
- Do not disassemble this action camera or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this action camera. If there is any damage to the action camera such as dents, punctures, tears, deformities or corrosion, stop using the action camera and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)