

材质:128g铜版纸
折好成品尺寸105x143mm
折法:装骑马钉


SKG
Beauty & Health

www.skgelectric.com

SKG

**WIDE CHUTE SLOW
MASTICATING JUICER**

INSTRUCTION MANUAL

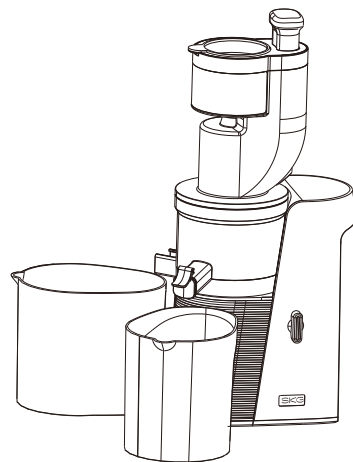

Model A10

- Thank you for your purchase. Please read the instruction book carefully before using this product, and please use the machine according to the instruction book. Please properly retained for reference because the continuous improvement of products is subject to change without notice.
- The picture diagram only and could be similar to the product.
- The product is applicable to family use, and it is inapplicable to commercial use, otherwise, the service life of the product becomes shorter.

Content

Instructions.....	01
Safety Precautions.....	01
Product Part Name.....	03
Product Assessory.....	04
Product Specifications.....	04
Circuit Principle.....	04
Before Use.....	05
How To Use.....	07
How To Disassemble	09
Cleaning And Maintenance.....	10
Trouble Shooting.....	11

Instructions

Product Features

- Non-grinding juicing method featured by slow squeezing is adopted for the product, so the natural flavor and nutrient elements of fruits and vegetables are well retained. The product has multiple functions, including making vegetable juice and fruit juice etc.
- The juice container can separate with the mainframe, and it is convenient for cleaning.
- Dual-switch design makes the product safer (make the juice container installed onto the mainframe; apply the juicer cap of squeezing body, and then turn on the switch to make the product run).

Safety Precautions

- In order to ensure the safety use of this product, avoiding any harm or property damage to you or others, you must observe the following safety precautions; if you fail to comply with the safety warnings and use the machine improperly, you may cause accidents.
- This product does not take the following situations into consideration: when it is used by unattended young children and disabled persons, or played by young children.

Icon Meanings:



**The content of
[Prohibition]**



**Items associated
with casualties**



**The content of
[Compulsion]**




**Items associated with
minor injuries or losses.**

- ⊘ This product is only used for families and is prohibited for commercial use.
- ⊘ Please do not allow children to use it themselves, ensure that this product will not be treated as a toy, and keep it out of the reach of babies. Elderly or handicapped persons, as well as those without any experience to use this product, should use it under supervision and guidance.

- ⊘ The continuous time to use this product should be controlled within 20 minutes.
- ⊘ This product is strictly prohibited from running without load or overload.
- ⊘ When the product is working, do not move it or touch any moving parts in case of accidental injuries.
- ⊘ The power wire is not allowed to be hung on sharp objects and cannot be attached to movable objects.
- ⊘ Do not use this product on sloping or unstable surfaces.
- ⊘ All parts are strictly prohibited to be heated at high temperatures in a sterilizer or oven. Please do not clean each part with the water over 40°C.
- ⊘ It is prohibited to put vegetables and fruits into the inlet with fingers, spoons, chopsticks and so on; Only the pushing bar can be used to push the vegetables and fruits into the inlet.
- ⚠ If the plug or other parts are damaged, do not use the product. Please go to the designated repair site and ask professionals to replace or repair in case of possible damages.
- ⚠ Please ensure that the power is cut before cleaning and dismantling the product.
- ⚠ If the power wire is damaged, it must be replaced by professionals from its manufacturer, maintenance department or similar department to avoid the risk of danger.
- ⚠ Please do not use attachments or fittings not attached with this product so as to avoid fire and personal injuries.
- ⚠ Please do not use this product unattended.
- ⚠ For safety's sake, before use, please make sure that the voltage is consistent with that of this product (120V~, 60Hz), so as not to cause danger and damages.
- ⚠ After use, please clean where the food is placed in case that the residues may emit bad smell if the product is not used for a long time.
- ⚠ If the rotating strainer is damaged, please do not use it. After use, please unplug the power wire and clean the product in time.
- ⚠ When the product cannot be started, please refer to the "Exception analysis and handling" guidance on the back page. If the product still cannot be started, send it to the designated repair site of our company for repair, and please do not disassemble yourself.
- ⚠ This product is not suitable for crushing hard food such as cereals, ice cubes, crystal sugar, sugar cane, nuts and so on (which is easily to jam the machine and cause mechanical failures).
- ⚠ Do not use or store this product near any heating appliances.
- ⚠ Please do not put anything into this product except for normal foods.

Product Part Name

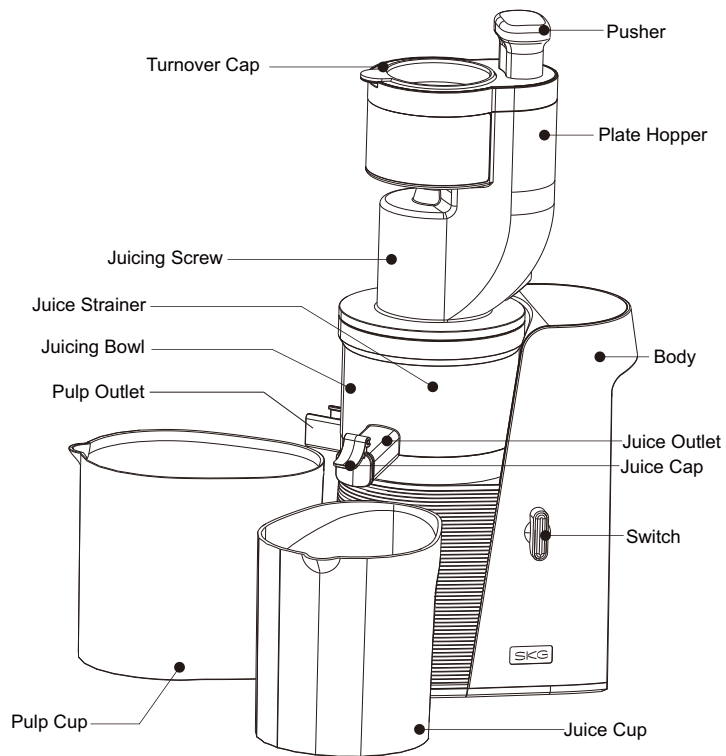

03

product Assessory


Remark: The actual product may a little different to the illustration.

Name	Quantity	Name	Quantity
Cup	2	Pusher	1
Cleaning Brush	1	Juice Cap	1
Instructions	1	Juice Strainer	2

Prouduct Specifications

Model	A10	Rated Voltage	120V~
Rated Power	250W	Rated Frequency	60Hz

Circuit Principle

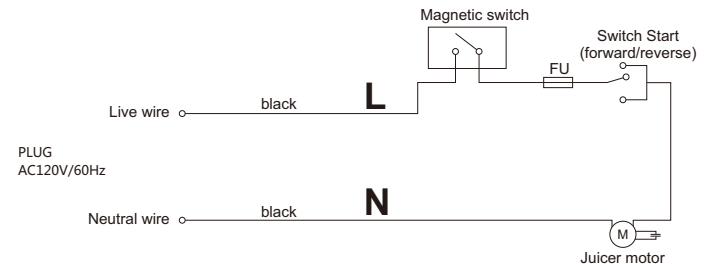


04


Before Use

1. Before installing the juice cup assembly, please ensure that the sealing ring of the pulp outlet has been installed correctly on the base of bowl.

- ① Please insert the sealing ring of the pulp outlet into the rectangular narrow hole.
- ② Make sure the sealing ring plugs up the hole tightly.

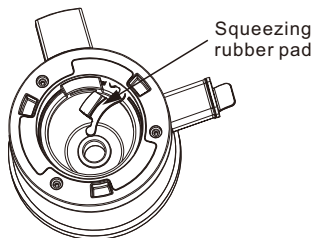


①

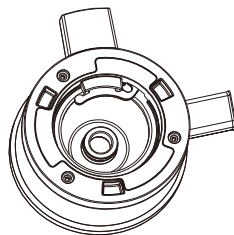


②


2. Install the bowl on the main body.
Please insert it into the fixed point of the main body.
When installing the bowl downwards, the sign "▼" on it and "▲" on the main body should be kept in line.

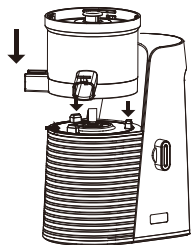


3. Assembling method of the juice cap
The juice cap is packaged separately. Before use, align the bayonet of the juice cap with the fixed columns on the juice outlet and gently snap in.

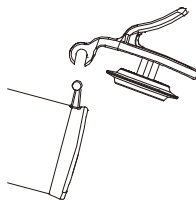


4. Connect the auger to the fine strainer.
With the small head of fine strainer upwards, insert the auger and turn clockwise until you hear sound of "click".

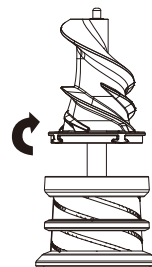


5. Then insert the bottom of the assembled auger into the hole of the bowl.

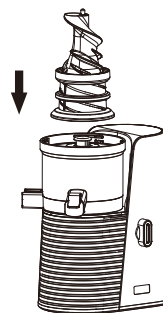

6. Install the plate hopper.
When installing the plate hopper, the unlocking label and "▲" on it should be kept in line.
Then rotate it to make sure that the locking pattern keeps in alignment with the "▲".

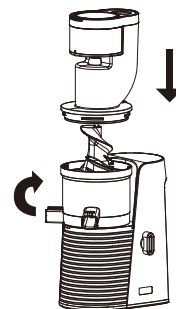

7. Place two cups. One is used to contain juice and the other is used to contain pulp.

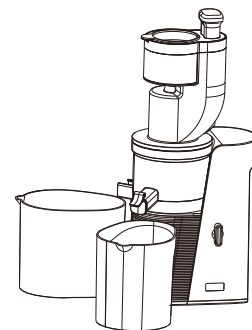

How To Use


1. Turn on the switch (Forward)

Forward: push down fruits and vegetables for juicing.

Reverse: fruits and vegetables up return, to avoid stuck phenomenon occurs when it is working.

Warning:


- 1) Do not touch the switch with wet hands.
- 2) Prohibit idling before putting fruits and vegetables.

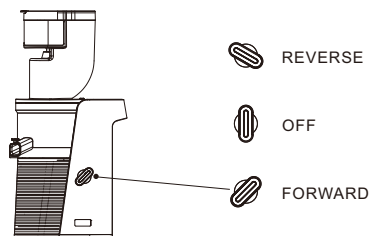

2. Put the clean fruits and vegetables (size of fruits and vegetables should be cut into appropriate size) into the inlet, push with the pusher.

Warning:

- 1) Please choose the fresh fruits and vegetables.
- 2) Fruits and vegetables stored in the refrigerator for a long time should soak in cold water for 10 minutes before use.
- 3) Fruits with hardcore nucleus must be removed.

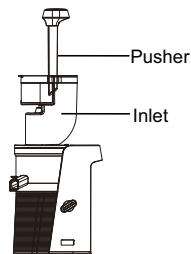


07

3. If the machine shutdowns suddenly when it is running, press the "OFF" button first and then press the "REVERSE" button. To make the food in the squeezing screw can up release and then press the "FORWARD" button (Repeated 3 times).

When the machine is in reverse, gently press the lid with your hand (to prevent the lid loose).

If the machine still not work, disassembling the machine and then wash before use. Please be sure to cut the food into thin strips like carrots and other hard materials, otherwise it may cause stuck, and even damage to the product (stuck and mechanical failure).

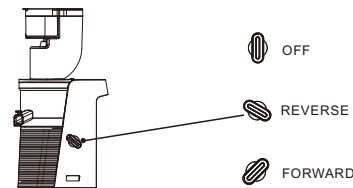

4. Click the "OFF" button and unplug the power after juicing.


Warning:

- 1) Please drink the juice immediately.
- 2) Must not apply to crush grain, sugar cane and hard fruit (easily cause motor stuck and mechanical failure).

5. How to use the Material Inlet:

Put the fruit of suitable size in the Material Inlet, and then turn the turnover cap, the fruit will fall into the Squeezing Tank, as shown in Figure ① and Figure ②.

How to use small Material Inlet: Irregular fruit and vegetables or fruit and vegetables that are much more harder should be firstly cut into small strips and then put them into the small Material Inlet, as shown in Figure ③ .

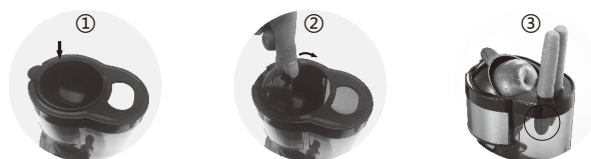

08

How To Disassemble



Step1-2



Step3



Step4



Step5

Step1: Power off the machine, unplug the power cord.

Attention: When finished juicing, please press the button of "REVERS" for easy to cleaning.

Step2: Catch hopper in one hand and the other one in the bowl and counterclockwise rotate, then it can be isolated.

Step3: Catch the juice mouth of the bowl and counterclockwise rotate then it can be isolated.

Step4: Take out the squeezing screw, fine strainer.

Step5: Disperse the auger, rotation squeezing screw and fine strainer.

Cleaning and Maintenance

Cleaning

1. Wash the disassembled parts with flowing water, if the meshes are blocked up by dreg, please use the cleaning brush for the cleaning.

Attention:

Please do not use the iron wire brush, abrading or sharp cleaning tool for the cleaning.


2. Do not make the mainframe put into water for cleaning and be sure to use wrung soft cloth to clean it.

3. After cleaning, please dry the cleaned parts and store them in a clean and ventilating place.

Attention:

① Please wash the machine in time after use, otherwise the dreg will attach to the container, which will affect the assembly and cleaning, and even result in performance reduction.

② The rubber pad at the bottom of the machine can be washed.

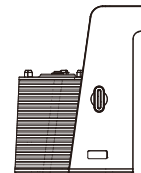

Maintenance

1. This product should be regularly used so as to keep the motor dry.

2. If the product is not used for a long time, please keep it in a dry and ventilated place in case that the motor gets damp and mildewed.

Trouble Shooting

Faults	Analysis of possible reasons	Solutions
Running machine suddenly stops	Whether the attaching plug is plugged properly?	Plug the plug into the socket.
	Whether there are too many material to be squeezed at one time ?	Press the "Reverse" button for 2-3 seconds to return inside materials, and then press the "Forward" button (this can be repeated for 3 times or so). If the machine still stops, please wash it before use.
	Whether hard fruits or vegetables are not properly chopped?	First, chop the fruits and vegetables with hard fibers into thin matchsticks, such as carrots, and then squeeze.
	Whether the safety switch is loose?	Put the lid of the juice cup in place again.
Can't get enough juice	Use drier material stored in the fridge to make juice.	At first, soak the materials in clean water, and when the water is fully absorbed, there will be more juice.
Juice flows out of the main engine	The rubber pad on the bottom of the juice cup is not properly installed.	Please refer to the installation of juice rubber sheet in "Assembly Method", and install the rubber sheet again.
Abnormal noises	The rubber pad on the bottom of the juice cup is not properly installed.	Stop the machine, and check whether the fittings are properly installed.
	The machine is on a sloping ground.	Please use the machine on a level and horizontal surface.
	Squeezing noises can heard when the machine is working.	Stop the machine, and check whether the fittings are properly installed.

The container and fittings are colored when the machine is used	Residues are adhered to the container.	Clean the machine in time after use.
	Pigmented materials like carrots and spinach are used to make juice, so the container and fittings are easily to be dyed.	First wash the machine with edible oil, and then a detergent.

Exception handling

- Please immediately cut off the power and stop using the machine if any of the following exceptions occurs: abnormal noise, smell, smoke and so on.
- If the machine does not work: please check whether the power is properly connected, whether the switch is on, and whether the lid of the juice cup is installed in place.
- If the machine still doesn't work after the above inspections, please go to the designated repair center for maintenance and consultation.