


smartlabs Technology

A SmartLabs, Inc. Company

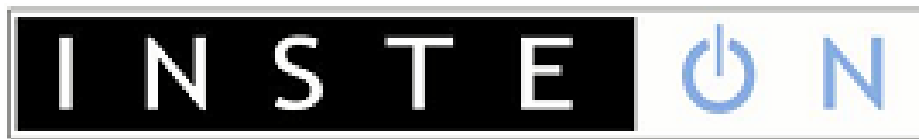

Command Tables

Revision: 20070927a
Printing Date: 9/27/07
Author: Paul Darbee

Information in this specification is subject to change without notice and does not represent a commitment on the part of SmartLabs Technology. This document contains information that is the property of SmartLabs Technology. For questions regarding the specification contact SmartLabs Technology, 16542 Millikan Avenue, Irvine CA 92606-5027, 949-221-9200, www.insteon.net, www.smartlabsinc.net.

Table of Contents

1	INTRODUCTION	1
2	INSTEON COMMAND SET TABLES.....	1
2.1	INSTEON DIRECT COMMANDS	2
2.1.1	INSTEON Standard-length Direct Commands.....	2
2.1.2	INSTEON Extended-length Direct Commands.....	17
2.2	INSTEON ALL-LINK COMMANDS	31
2.2.1	INSTEON Standard-length ALL-Link Commands.....	31
2.2.2	INSTEON Extended-length ALL-Link Commands.....	34
2.3	INSTEON BROADCAST COMMANDS	35
2.3.1	INSTEON Standard-length Broadcast Commands.....	35
2.3.2	INSTEON Extended-length Broadcast Commands	37

SmartLabs, Smarthome, INSTEON, Dual Mesh, BiPHY, ALL-Link, Powerline Modem, PowerLinc, ControlLinc, LampLinc, SwitchLinc, RemoteLinc, Electronic Home Improvement, SmartLabs Device Manager, Home Network Language, and Plug-n-Tap are trademarks of SmartLabs, Inc. INSTEON networking technology is covered by issued and pending U.S. and foreign patents.

© Copyright 2006, 2007 SmartLabs, Inc. 16542 Millikan Ave., Irvine, CA 92606-5027
949-221-9200, www.insteon.net, www.smartlabsinc.com

Change Log

Date	Description	Author
20060508a	Separated from INSTEON Conformance Spec.	Paul Darbee
20060512a	Renamed required 0x11 SA command <i>ALL-Link Recall 1</i> .	Paul Darbee
20060515a	Renamed <i>Product Key Request / Response</i> as <i>Product Data Request / Response</i> .	Paul Darbee
20060516a	Added <i>Set ALL-Link Command Alias</i> ED Command.	Paul Darbee
20060517a	Added <i>Set ALL-Link Command Alias Extended Data</i> ED Command.	Paul Darbee
20060517a	Renamed <i>Enter Linking Mode</i> and <i>Enter Unlinking Mode</i> SD Commands.	Paul Darbee
20060519a	Renamed ALL-Link commands <i>ALL-Link Recall N</i> , with SD command defaults for lighting DevCats 0x01 and 0x02.	Paul Darbee
20060524a	Renamed <i>ALL-Link Recall 2-9</i> as <i>ALL-Link Alias 1-5 High/Low</i> .	Paul Darbee
20060526a	Underlined required DevCat-specific Direct commands.	Paul Darbee
20060530a	Reserved 0x0000 SD and ED commands.	Paul Darbee
20060602a	Updated <i>Ping</i> SD command description.	Paul Darbee
20060606a	Restored SD <i>Peek One Byte Internal</i> and <i>Poke One Byte Internal</i> .	Paul Darbee
20060607a	Updated document properties.	Paul Darbee
20060619a	Released for internal review.	Paul Darbee
20060715a	Renamed SD <i>Ping</i> as <i>ID Request</i> .	Paul Darbee
20060719a	Released as draft specification.	Paul Darbee
20060831a	Noted legacy device exception for SA commands 0x17 and 0x18 . Clarified <i>Command 2</i> field for SA commands. Rewrote Introduction. Changed requirement date for <i>INSTEON Product Key Request / Response</i> to 2/1/07.	Paul Darbee
20060913a	Added SD 0x58 <i>Door Move</i> and SD 0x59 <i>Door Status Report</i>	Paul Darbee
20060924a	Added SD 0x60 <i>Window Covering</i> and SD 0x61 <i>Window Covering Position</i>	Paul Darbee
20061018a	Added I/O Module commands SD 0x46 through SD 0x4F , and ED 0x4B and ED 0x4C	Paul Darbee
20061019a	Added SB 0x27 <i>Device Status Changed</i>	Paul Darbee
20061028a	Added SB 0x03 <i>Test Powerline Phase</i>	Paul Darbee
20061028a	Added SB 0x04 <i>Heartbeat</i>	Paul Darbee
20061028a	Added SD 0x0D <i>Get INSTEON Engine Version</i>	Paul Darbee
20061028a	Added SD 0x0F <i>Ping</i>	Paul Darbee
20061028a	Made SD 0x19 <i>Light Status Request</i> , SD 0x1F <i>Get Operating Flags</i> , SD 0x20 <i>Set Operating Flags</i> , and ED 0x2E <i>Extended Set/Get</i> SubCat-specific.	Paul Darbee
20061028a	Added ED 0x2F <i>Read/Write ALL-Link Database</i> .	Paul Darbee
20061028a	Added SubCat column to tables.	Paul Darbee
20061110a	Updated to reflect official command acceptance.	Paul Darbee
20061115a	Added SD 0x4407 to 0x440F <i>Sprinkler Control</i> . Moved SD 0x48 to 0x4B <i>Thermostat</i> Commands to 0x68 to 0x6B	Paul Darbee
20061128a	Added SD 0x6C to 0x6F <i>Thermostat</i> Commands Added ED 0x68 to 0x6F <i>Thermostat</i> Commands Added SD 0x6B09 to 0x6B0D <i>Thermostat</i> Commands	Paul Darbee
20061128a	Modified SD 0x4D and 0x4F I/O Commands Added SD 0x70 <i>Leak Detector Announce</i> Command	Paul Darbee
20061219a	Changed SD 0x6B06 through 0x6B0E <i>Thermostat</i> Commands to 0x6B07 through 0x6B0E to remove duplicate 0x6B06 command	Paul Darbee
20070127a	Removed SD 0x6E , SD 0x6F , ED 0x6E , and ED 0x6F <i>Thermostat</i> Commands (these should be manufacturer-specific FX commands) Added SD 0x6B0F through 0x6B17 <i>Thermostat</i> Commands (set/get Temperature Units, set/get Fan-On Speed, enable/disable Status Changed broadcast)	Paul Darbee
20070127a	Added SD 0x2008 and 0x2009 <i>Lighting LED Off/On</i> for DevCats 0x01 and 0x02. Added SD 0x1F00 Bit 4 <i>Lighting LED Status</i> for DevCats 0x01 and 0x02.	Paul Darbee
20070205a	Defined arguments in SD 0x68 , 0x69 , 0x6A , 0x6C , and 0x6D as unsigned bytes.	Paul Darbee
20070501a	Corrected command number of SD 0x25 (was erroneously listed as 0x26). Corrected Bits 4-7 of SD 0x2E to read <i>On-Level</i> + 0x0F (was + 1)	Paul Darbee
20070501a	Approved proposed commands	Paul Darbee
20070508a	Added Note Keys	Paul Darbee

Date	Description	Author
20070515a	Added SD 0x45 Flash LED	Paul Darbee
20070619a	Added ED 0x30 Execute ALL-Link Command. ED 0x2E for DevCat 01 returns <i>Signal-to-Noise Threshold</i> in D9. ED 0x2F D5 sets number of ALDB records to return.	Paul Darbee
20070717a	Updated ED 0x30 Trigger ALL-Link Command.	Paul Darbee
20070810a	Removed KeypadLinc and KeypadLinc Relay SD 0x1F02 to 0x1F06 , and 0x2Fxx to 0x33xx , added same functionality to ED 0x2E00 . Added KeypadLinc and KeypadLinc Relay SD 0x1F02 Get Signal-to-Noise Value.	Paul Darbee
20070814a	Made ED 0x2F00 Read/Write ALDB required for i2.	Paul Darbee
20070924a	Added SD 0x2Fxx Light OFF at Ramp Rate.	Paul Darbee
20070925a	Added SD 0x1F Get Operating Flags, SD 0x20 Set Operating Flags, and ED 0x2E Extended Set/Get for SmartLabs 2476ST SwitchLinc i2 Relay Countdown Timer. Checked and corrected bit senses for SD 0x1F Get Operating Flags and SD 0x20 Set Operating Flags for other products.	Paul Darbee
20070927a	Modified SD 0x20 Set Operating Flagst for SmartLabs 2473W OutletLinc to show default conditions.	Paul Darbee

1 Introduction

This document lists all currently defined INSTEON Commands in a collection of tables. SmartLabs maintains this document separately, not only to allow for frequent updating, but also because it forms an integral part of *two* larger documents, the *INSTEON Developer's Guide* and the *INSTEON Conformance Specification*. Please refer to those master documents for a thorough understanding of proper INSTEON command usage.

2 INSTEON Command Set Tables

The tables in the following six sections list all of the currently defined INSTEON Commands. The tables contain:

- **SD**, Standard-length Direct Commands
- **ED**, Extended-length Direct Commands
- **SA**, Standard-length ALL-Link Commands
- **EA**, Extended-length ALL-Link Commands
- **SB**, Standard-length Broadcast Commands
- **EB**, Extended-length Broadcast Commands

The tables utilize Note Keys, text conventions, and color-codes to designate the following conditions:

Note Key	Text Sample	Description
Req-All	Enter Linking Mode	Required Commands for INSTEON conformance
Req-Ex	(Required after 2/1/07)	Required Commands with exceptions
Req-DC	Light ON	Required Commands for specific DevCats
-	Light ON Fast	Optional Commands
DataTr	Peek One Byte	Data Transfer Commands
FX	FX Commands	FX Commands
-	Reserved	Reserved for future use, currently unassigned
Dupl	0x45	Duplicated command number definitions for different DevCats
Prop	0x2F	Proposed command does not yet have final approval
NClar	Get Temperature	Needs further clarification
Depr	Deprecated	Deprecated command—do not use in the future

2.1 INSTEON Direct Commands

This section lists **SD** Standard-length and **ED** Extended-length INSTEON Direct Commands in two separate tables.

2.1.1 INSTEON Standard-length Direct Commands

The table below lists the existing INSTEON **SD** Standard-length Direct Commands.

The Note Key **Req-All** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories. **Req-All** command names appear in **bold type**.

The Note Key **Req-Ex (...)** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories except as noted within the parentheses. **Req-Ex** command names appear in **bold type**.

The Note Key **Req-DC** denotes INSTEON commands that shall be supported only by those INSTEON devices in the Device Categories given in the **DevCat** and **SubCat** columns. **Req-DC** command names appear in underlined type.

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00	0x00	Must be undefined in all INSTEON devices because this is the default command to execute using ED 0x0304 <i>Set ALL-Link Command Alias</i>
Reserved			0x00	0x01 ⇒ 0xFF	
Assign to ALL-Link Group	All	All	0x01	0x00 ⇒ 0xFF Group Number	Req-All Used during INSTEON device linking session.
Delete from ALL-Link Group	All	All	0x02	0x00 ⇒ 0xFF Group Number	Req-All Used during unlinking session.
Product Data Request	All	All	0x03	0x00	Req-All, Req-Ex (Required after 2/1/07) Addressee responds with an ED 0x0300 <i>Product Data Response</i> message
FX Username Request	All	All	0x03	0x01	Req-Ex (Only required for devices that support FX Commands) , FX Addressee responds with an ED 0x0301 <i>FX Username Response</i> message
Device Text String Request	All	All	0x03	0x02	Addressee responds with an ED 0x0302 <i>Device Text String Response</i> message
Reserved			0x03	0x03 ⇒ 0xFF	
Reserved			0x04 ⇒ 0x08		
Enter Linking Mode	All	All	0x09	0x00 ⇒ 0xFF Group Number	Req-All Same as holding down <i>SET Button</i> for 10 seconds NOTE: Not supported by i1 devices
Enter Unlinking Mode	All	All	0x0A	0x00 ⇒ 0xFF Group Number	Req-All NOTE: Not supported by i1 devices
Reserved			0x0B ⇒ 0x0C		

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Get INSTEON Engine Version	All	All	0x0D	0x00	Req-All Returned ACK message will contain the INSTEON Engine Version in Command 2. 0x00 = i1 (default echo for legacy devices) 0x01 = i2
Reserved			0x0D	0x01 ⇒ 0xFF	Do not use so that legacy devices will echo 0x00 in Command 2
Reserved			0x0E		
Ping	All	All	0x0F	0x00 (0x01 ⇒ 0xFF Not Parsed in legacy devices. Use only 0x00 in the future.)	Req-All Addressee returns an ACK message but performs no operation.
ID Request	All	All	0x10	0x00 (0x01 ⇒ 0xFF Not Parsed in legacy devices. Use only 0x00 in the future.)	Req-All Addressee first returns an ACK message, then it sends an SB 0x01 SET Button Pressed Responder or SB 0x02 SET Button Pressed Controller Broadcast message, but it does not enter Linking Mode.
<u>Light ON</u>	0x01	All	0x11	0x00 ⇒ 0xFF On-Level	Req-DC Go to <i>On-Level</i> at saved <i>Ramp Rate</i>
<u>Light ON</u>	0x02	All	0x11	0x00 ⇒ 0xFF Not Parsed	Req-DC Switch to full on
Light ON Fast	0x01	All	0x12	0x00 ⇒ 0xFF On-Level	Go to saved <i>On-Level</i> instantly
Light ON Fast	0x02	All	0x12	0x00 ⇒ 0xFF Not Parsed	Switch to full on
<u>Light OFF</u>	0x01	All	0x13	0x00 ⇒ 0xFF Not Parsed	Req-DC Go to full off at saved <i>Ramp Rate</i>
<u>Light OFF</u>	0x02	All	0x13	0x00 ⇒ 0xFF Not Parsed	Req-DC Switch to full off
Light OFF Fast	0x01	All	0x14	0x00 ⇒ 0xFF Not Parsed	Go to full off instantly
Light OFF Fast	0x02	All	0x14	0x00 ⇒ 0xFF Not Parsed	Switch to full off
<u>Light Brighten One Step</u>	0x01	All	0x15	0x00 ⇒ 0xFF Not Parsed	Req-DC Brighten one step. There are 32 steps from off to full brightness.
<u>Light Dim One Step</u>	0x01	All	0x16	0x00 ⇒ 0xFF Not Parsed	Req-DC Dim one step. There are 32 steps from off to full brightness.
Light Start Manual Change	0x01	All	0x17	Direction 0x00 Down 0x01 Up 0x02 Unused ⇒ 0xFF	Begin changing <i>On-Level</i> .
Light Stop Manual Change	0x01	All	0x18	0x00 ⇒ 0xFF Not Parsed	Stop changing <i>On-Level</i> .
Light Status Request (SmartLabs 2486D KeypadLinc Dimmer, SmartLabs 2886D Icon In-Wall Controller)	0x01	0x09 0x0A	0x19	0x00	Returned ACK message will contain the <i>On-Level</i> in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.
				0x01	Returned ACK message will contain the <i>LED Bit Flags</i> in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Light Status Request	0x01	All But 0x09 0x0A	0x19	0x00 ⇒ 0xFF Not Parsed	Returned ACK message will contain the <i>On-Level</i> in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.
Light Status Request (SmartLabs 2486S KeypadLinc Relay)	0x02	0x0F	0x19	0x00	Returned ACK message will contain the <i>On-Level</i> (0x00 or 0xFF only) in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.
				0x01	Returned ACK message will contain the <i>LED Bit Flags</i> in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.
Light Status Request	0x02	All But 0x0F	0x19	0x00 ⇒ 0xFF Not Parsed	Returned ACK message will contain the <i>On-Level</i> (0x00 or 0xFF only) in Command 2. Command 1 will contain an <i>ALL-Link Database Delta</i> number that increments every time there is a change in the addressee's ALL-Link Database.
Reserved			0x1A ⇒ 0x1E		
Get Operating Flags (SmartLabs 2430 ControLinc and 2830 Icon Tabletop Controller)	0x00	0x04 0x06	0x1F	Flags Requested	Returned ACK message will contain the requested data in Command 2.
				0x00 Bit 0	
				Bit 1	
				Bit 2	
Get Operating Flags (SmartLabs 2843 RemoteLinc)	0x00	0x05	0x1F	Flags Requested	Returned ACK message will contain the requested data in Command 2.
				0x00 Bit 0	
				Bit 1	
				Bit 2	
				Bit 3	
				Bit 4	

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2			Note Keys, Description	
					Bit 5	0 = Allow Heartbeat 1 = No Heartbeat		
					Bit 6-7 = Unused			
			0x01	ALL-Link Database Delta number				
			0x02 ⇒ 0xFF	Unused				
Get Operating Flags (SmartLabs 2486D KeypadLinc Dimmer, SmartLabs 2886D Icon In-Wall Controller)	0x01	0x09 0x0A	0x1F	Flags Requested			Returned ACK message will contain the requested data in Command 2.	
			0x00	Bit 0	0 = Program Lock Off 1 = Program Lock On			
				Bit 1	0 = LED Off During Transmit 1 = LED On During Transmit			
				Bit 2	0 = Resume Dim Disabled 1 = Resume Dim Enabled			
				Bit 3	0 = 6 Keys 1 = 8 Keys			
				Bit 4	0 = Backlight On 1 = Backlight Off			
				Bit 5	0 = Key Beep Off 1 = Key Beep On			
				Bit 6-7 = Unused				
			0x01	ALL-Link Database Delta number				
			0x02 ⇒ 0xFF	Unused				
Get Operating Flags	0x01	All But 0x09 0x0A	0x1F	Flags Requested				Returned ACK message will contain the requested data in Command 2.
			0x00	Bit 0	0 = Program Lock Off 1 = Program Lock On			
				Bit 1	0 = LED Off During Transmit 1 = LED On During Transmit			
				Bit 2	0 = Resume Dim Disabled 1 = Resume Dim Enabled			
				Bit 3 = Unused				
				Bit 4	0 = LED Enabled 1 = LED Off			
				Bit 5	0 = Load Sense Off 1 = Load Sense On			
				Bit 6-7 = Unused				
			0x01	ALL-Link Database Delta number				
			0x02	Signal-to-Noise Value				

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2		Note Keys, Description
				0x03 ⇒ 0xFF	Unused	
Get Operating Flags (SmartLabs 2476ST SwitchLinc i2 Relay Countdown Timer)	0x02	0x0E	0x1F	Flags Requested <div>0x00<div>Bit 0<div>0 = Program Lock Off 1 = Program Lock On</div><div>Bit 1<div>0 = LED Off During Transmit 1 = LED On During Transmit</div><div>Bit 2<div>0 = Countdown Timer Enabled 1 = Countdown Timer Disabled</div><div>Bit 3<div>0 = ED 0x30 Trigger ALL-Link Command Enabled 1 = ED 0x30 Trigger ALL-Link Command Disabled</div><div>Bit 4<div>0 = LED Enabled 1 = LED Off</div><div>Bit 5<div>0 = Enable 1-Minute Warning (Flash the Load) 1 = Disable 1-Minute Warning</div><div>Bit 6-7 = Unused</div></div><div>0x01<div>ALL-Link Database Delta number</div></div><div>0x02 ⇒ 0xFF</div></div></div></div></div></div></div>		Returned ACK message will contain the requested data in Command 2.
Get Operating Flags (SmartLabs 2486S KeypadLinc Relay)	0x02	0x0F	0x1F	Flags Requested <div>0x00<div>Bit 0<div>0 = Program Lock Off 1 = Program Lock On</div><div>Bit 1<div>0 = LED Off During Transmit 1 = LED On During Transmit</div><div>Bit 2<div>0 = Resume Dim Disabled 1 = Resume Dim Enabled</div><div>Bit 3<div>0 = 6 Keys 1 = 8 Keys</div><div>Bit 4<div>0 = Backlight On 1 = Backlight Off</div><div>Bit 5<div>0 = Key Beep Off 1 = Key Beep On</div><div>Bit 6-7 = Unused</div></div><div>0x01<div>ALL-Link Database Delta number</div></div></div></div></div></div></div></div>		Returned ACK message will contain the requested data in Command 2.

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
				0x02 Signal-to-Noise Value 0x03 Unused ⇒ 0xFF	
Get Operating Flags	0x02	All But 0x0E 0x0F	0x1F	Flags Requested 0x00 Bit 0 0 = Program Lock Off 1 = Program Lock On Bit 1 0 = LED Off During Transmit 1 = LED On During Transmit Bit 2 0 = Resume Dim Disabled 1 = Resume Dim Enabled Bit 3 = Unused Bit 4 0 = LED Enabled 1 = LED Off Bit 5 0 = Load Sense Off 1 = Load Sense On Bit 6-7 = Unused 0x01 ALL-Link Database Delta number 0x02 Unused ⇒ 0xFF	Returned ACK message will contain the requested data in Command 2.
Set Operating Flags (SmartLabs 2430 ControLinc and 2830 Icon Tabletop Controller)	0x00	0x04 0x06	0x20	Flag to Alter 0x00 Program Lock On 0x01 Program Lock Off 0x02 LED On 0x03 LED Off 0x04 Beeper On 0x05 Beeper Off 0x06 Unused ⇒ 0xFF	Defaults given in bold .
Set Operating Flags (SmartLabs 2843 RemoteLinc)	0x00	0x05	0x20	Flag to Alter 0x00 Program Lock On 0x01 Program Lock Off 0x02 LED Enabled 0x03 LED Off 0x04 Beeper Enabled 0x05 Beeper Off 0x06 Stay Awake On 0x07 Stay Awake Off 0x08 Listen Only On 0x09 Listen Only Off 0x0A No I'm Alive On 0x0B No I'm Alive Off 0x0C Unused ⇒ 0xFF	Defaults given in bold .
Set Operating Flags	0x01	0x09	0x20	Flag to Alter	Defaults given in bold .

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
(SmartLabs 2486D KeypadLinc Dimmer, SmartLabs 2886D Icon In-Wall Controller)				0x00 Program Lock On	
				0x01 Program Lock Off	
				0x02 LED On during TX	
				0x03 LED Off during TX	
				0x04 Resume Dim On	
				0x05 Resume Dim Off	
				0x06 8-Key KeypadLinc	
				0x07 6-Key KeypadLinc	
				0x08 LED Backlight Off	
				0x09 LED Backlight On	
				0x0A Key Beep Enabled	
				0x0B Key Beep Off	
				0x0C Unused ⇒ 0xFF	
Set Operating Flags	0x01	All But 0x09 0x0A	0x20	Flag to Alter	Defaults given in bold .
				0x00 Program Lock On	
				0x01 Program Lock Off	
				0x02 LED On during TX Default for SubCat 0x00 (SmartLabs LampLinc V2 Dimmer 2456D3)	
				0x03 LED Off during TX Default for SubCat 0x01 (SmartLabs SwitchLinc V2 Dimmer 2476D)	
				0x04 Resume Dim On	
				0x05 Resume Dim Off	
				0x06 Load Sense On	
				0x07 Load Sense Off	
				0x08 LED Off	
				0x09 LED Enabled	
				0x0A Unused ⇒ 0xFF	
Set Operating Flags	0x02	0x0E	0x20	Flag to Alter	Defaults given in bold .
(SmartLabs 2476ST SwitchLinc i2 Relay Countdown Timer)				0x00 Program Lock On	
				0x01 Program Lock Off	
				0x02 LED On during TX	
				0x03 LED Off during TX	
				0x04 Countdown Timer Disabled	
				0x05 Countdown Timer Enabled	
				0x06 ED 0x30 Trigger ALL-Link Command Disabled	
				0x07 ED 0x30 Trigger ALL-Link Command Enabled	
				0x08 LED Off	
				0x09 LED Enabled	
				0x0A 1-Minute Warning Disabled	
				0x0B 1-Minute Warning Enabled (Flash the Load)	

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
				0x0C ⇒ 0xFF	Unused
Set Operating Flags (SmartLabs 2486S KeypadLinc Relay)	0x02	0x0F	0x20	Flag to Alter 0x00 Program Lock On 0x01 Program Lock Off 0x02 LED On during TX 0x03 LED Off during TX 0x04 Resume Dim On 0x05 Resume Dim Off 0x06 8-Key KeypadLinc 0x07 6-Key KeypadLinc 0x08 LED Backlight Off 0x09 LED Backlight On 0x0A Key Beep Enabled 0x0B Key Beep Off 0x0C Unused ⇒ 0xFF	Defaults given in bold .
Set Operating Flags	0x02	All But 0x0F	0x20	Flag to Alter 0x00 Program Lock On 0x01 Program Lock Off 0x02 LED On during TX Default for SubCat 0x09 (SmartLabs ApplianceLinc 2456S3) 0x03 LED Off during TX Default for SubCat 0x0A (SmartLabs SwitchLinc Relay 2476S) and SubCat 0x08 (SmartLabs OutletLinc) 0x04 Resume Dim On 0x05 Resume Dim Off 0x06 Load Sense On Default for all SubCats except 0x08 0x07 Load Sense Off Default for SubCat 0x08 (SmartLabs OutletLinc) 0x08 LED Off 0x09 LED Enabled 0x0A Unused ⇒ 0xFF	Defaults given in bold .
Light Instant Change	0x01	All	0x21	0x00 ⇒ 0xFF On-Level	Set light to <i>On-Level</i> at next zero crossing. [Added 20060420]
Light Manually Turned Off	0x01	All	0x22	0x00 ⇒ 0xFF Not Parsed	Indicates manual load status change.
Light Manually Turned Off	0x02	All	0x22	0x00 ⇒ 0xFF Not Parsed	Indicates manual load status change.
Light Manually Turned On	0x01	All	0x23	0x00 ⇒ 0xFF Not Parsed	Indicates manual load status change.
Light Manually Turned On	0x02	All	0x23	0x00 ⇒ 0xFF Not Parsed	Indicates manual load status change.

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reread Init Values (SmartLabs 2486D KeypadLinc Dimmer, SmartLabs 2886D Icon In-Wall Controller)	0x01	0x09 0x0A	0x24	0x00 ⇒ 0xFF Not Parsed	Depr Deprecated (do not use in the future). For KeypadLinc only, reread initialization values from EEPROM, so that they will take effect after being poked.
Reread Init Values (SmartLabs 2486S KeypadLinc Relay)	0x02	0x0F	0x24	0x00 ⇒ 0xFF Not Parsed	Depr Deprecated (do not use in the future). For KeypadLinc only, reread initialization values from EEPROM, so that they will take effect after being poked.
Remote SET Button Tap	0x01	All	0x25	Number of Taps	Cause a device to respond as if its SET Button were tapped once or twice.
				0x00 Unused	
				0x01 1 Tap	
				0x02 2 Taps	
				0x03 ⇒ 0xFF Unused	
Reserved			0x26		
Light Set Status	0x01	N/A	0x27	0x00 ⇒ 0xFF On-Level	Updates SwitchLinc Companion's LEDs.
Set Address MSB	All	All	0x28	0x00 ⇒ 0xFF High byte of 16-bit address	DataTr, Depr Deprecated (do not use in the future). Set Most-significant Byte of EEPROM address for peek or poke.
Poke One Byte	All	All	0x29	0x00 ⇒ 0xFF Byte to write	DataTr, Depr Deprecated (do not use in the future). Poke Data byte into address previously loaded with <i>Set Address MSB</i> and <i>Peek</i> commands (<i>Peek One Byte</i> sets LSB).
Reserved	All	All	0x2A	0x00 ⇒ 0xFF	DataTr, Depr These are the Block Data Transfer commands in ED messages.
Peek One Byte	All	All	0x2B	0x00 ⇒ 0xFF LSB of address to peek or poke	DataTr, Depr Deprecated (do not use in the future). The returned ACK message will contain the peeked byte in Command 2. <i>Peek One Byte</i> is also used to set the LSB for <i>Poke One Byte</i> .
Peek One Byte Internal	All	All	0x2C	0x00 ⇒ 0xFF LSB of internal memory address to peek or poke	DataTr, Depr Deprecated (do not use in the future). Works like <i>Peek One Byte</i> , except only used to read from internal EEPROM of a Smarthome ControlLinc V2.
Poke One Byte Internal	All	All	0x2D	0x00 ⇒ 0xFF Byte to write	DataTr, Depr Deprecated (do not use in the future). Works like <i>Poke One Byte</i> , except only used to write into internal EEPROM of a Smarthome ControlLinc V2.
Light ON at Ramp Rate	0x01	All	0x2E	0x00 ⇒ 0xFF On-Level and Ramp Rate Combined	Bits 0-3 = 2 x <i>Ramp Rate</i> + 1 Bits 4-7 = <i>On-Level</i> + 0x0F
Light OFF at Ramp Rate	0x01	All	0x2F	0x00 ⇒ 0x0F Ramp Rate (On-Level field is ignored, always interpreted as 0)	Bits 0-3 = 2 x <i>Ramp Rate</i> + 1 Bits 4-7 = <i>On-Level</i> (ignored, always = 0)
Reserved			0x30 ⇒ 0x3F		
Sprinkler Valve ON	0x04	All	0x40	0x00 ⇒ 0xFF Valve Number	
Sprinkler Valve OFF	0x04	All	0x41	0x00 ⇒ 0xFF Valve Number	
Sprinkler Program ON	0x04	All	0x42	0x00 ⇒ 0xFF Program Number	

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Sprinkler Program OFF	0x04	All	0x43	0x00 ⇒ 0xFF Program Number	
Sprinkler Control	0x04	All	0x44	Subcommand	
				0x00 Load Initialization Values	
				0x01 Load EEPROM from RAM	Load RAM parameters from RAM EEPROM
				0x02 Get Valve Status	ACK contains 1-byte valve status in Command 2 0 = Off 1 = On
				0x03 Inhibit Command Acceptance	Stop accepting commands
				0x04 Resume Command Acceptance	Resume accepting commands
				0x05 Skip Forward	Turn off active valve and continue with next valve in program
				0x06 Skip Back	Turn off active valve and continue with previous valve in program
				0x07 Enable Pump on V8	Enable pump control on V8
				0x08 Disable Pump on V8	Disable pump control on V8
				0x09 Broadcast ON	Enable SB 0x27 Device Status Changed broadcast on valve status change
				0x0A Broadcast OFF	Disable SB 0x27 Device Status Changed broadcast on valve status change
				0x0B Load RAM from EEPROM	Load RAM parameters from EEPROM
				0x0C Sensor ON	Enable sensor reading
				0x0D Sensor OFF	Disable sensor reading
				0x0E Diagnostics ON	Put device in self-diagnostics
				0x0F Diagnostics OFF	Take device out of self-diagnostics
				0x10 Unused ⇒ 0xFF	
Flash LED (SmartLabs 2676D-B ICON Dimmer)	0x01	0x13	0x45	Subcommand	Dupl
				0x00 Cancel LED Flashing	
				0x01 Begin LED Flashing ⇒ 0xFF	Device's LED flashes ½ second on, ½ second off, until canceled
Flash LED (SmartLabs 2676R-B ICON Relay)	0x02	0x13	0x45	Subcommand	Dupl
				0x00 Cancel LED Flashing	
				0x01 Begin LED Flashing ⇒ 0xFF	Device's LED flashes ½ second on, ½ second off, until canceled
Sprinkler Get Program Request	0x04	All	0x45	0x00 ⇒ 0xFF Program Number	Dupl Added 5/05/06 Addressee responds with ED 0x41xx Sprinkler Get Program Response
I/O Output On	0x07	All	0x45	0x00 ⇒ 0xFF Output Number	Dupl Turns <i>Output Number</i> On
I/O Output Off	0x07	All	0x46	0x00 ⇒ 0xFF Output Number	Turns <i>Output Number</i> Off
I/O Alarm Data Request	0x07	All	0x47	0x00	Addressee responds with an ED 0x4C00 Alarm Data Response message
Reserved			0x47	0x01 ⇒ 0xFF	
I/O Write Output Port	0x07	All	0x48	0x00 ⇒ 0xFF Value to store (only output bits are affected)	ACK contains byte written to Output Port in Command 2
I/O Read Input Port	0x07	All	0x49	0x00	ACK contains byte read from Input Port in Command 2

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
I/O Get Sensor Value	0x07	All	0x4A	0x00 ⇒ 0xFF Sensor number	ACK contains Sensor Value in Command 2
I/O Set Sensor 1 Nominal Value	0x07	All	0x4B	0x00 ⇒ 0xFF Nominal Value	Set Nominal Value for Sensor 1 to reach. Other sensors can be set with ED 0x4Bxx <i>Set Sensor Nominal</i>
I/O Get Sensor Alarm Delta	0x07	All	0x4C	Bits 0-3 Sensor number Bits 4-6 Delta from nominal Bit 7 Delta Direction (+ if 0)	Dupl When added to or subtracted from midpoint, these are the values to trigger SB 0x27 <i>Device Status Changed</i> alarm messages
Fan Status Report	0x05	0x00 0x02	0x4C	Fan Capacity 0x00 ⇒ 0x7F Bits 0 - 6 = Fan Capacity in CFM Bit 7 = 0 0x80 ⇒ 0xFF Bits 0 - 6 = Fan Capacity in CFM Bit 7 = 1, fan was turned off, Fan Capacity is removed from total airflow	Dupl Sent to controller when fan state changes.
I/O Write Configuration Port	0x07	All	0x4D	Bits 0-1 00 Analog Input not used 01 Analog Input used, convert upon command 10 Analog Input used, convert at fixed interval 11 Unused Bit 2 If 1, send SB 0x27 <i>Device Status Changed</i> broadcast on Sensor Alarm Bit 3 If 1, send SB 0x27 <i>Device Status Changed</i> broadcast on Input Port change Bit 4 If 1, Enable 1-Wire port (Sensors 1-8) Bit 5 If 1, Enable ALL-Link aliasing to default set Bit 6 If 1, send SB 0x27 <i>Device Status Changed</i> broadcast on Output Port change Bit 7 If 1, Enable Output Timers	Modifies command responses
I/O Read Configuration Port	0x07	All	0x4E	0x00	ACK contains byte read from Configuration Port in Command 2. See SD 0x4Dxx <i>Write Configuration Port</i> above for port bit definitions.
I/O Module Control	0x07	All	0x4F	Subcommand 0x00 Load Initialization Values 0x01 Load EEPROM from RAM 0x02 Status Request 0x03 Read Analog Once 0x04 Read Analog Always 0x05 ⇒ 0x08 Unused 0x09 Enable Status Change message	Reset to factory default settings Makes permanent any changes to settings such as those made to parameters with a Poke command ACK contains state of outputs in Command 2 Starts the A/D conversion once Starts the A/D conversion at preset intervals Enables SB 0x27 <i>Device Status Changed</i> broadcast message each time the Input Port status changes

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
				0x0A Disable Status Change message	Disables SB 0x27 <i>Device Status Changed</i> broadcast message each time the Input Port status changes
				0x0B Load RAM from EEPROM	Moves parameters from EEPROM into RAM
				0x0C Sensor On	Enable sensor reading
				0x0D Sensor Off	Disable sensor reading
				0x0E Diagnostics On	Put device in self-diagnostics mode
				0x0F Diagnostics Off	Take device out of self-diagnostics mode
				0x10 ⇒ 0xFF Unused	
Pool Device ON	0x06	All	0x50	0x00 ⇒ 0xFF Device Number	0 = Unused 1 = Pool 2 = Spa 3 = Heat 4 = Pump 5 - 255 Aux
Pool Device OFF	0x06	All	0x51	0x00 ⇒ 0xFF Device Number	0 = All OFF 1 = Pool 2 = Spa 3 = Heat 4 = Pump 5 - 255 Aux
Pool Temperature Up	0x06	All	0x52	0x00 ⇒ 0xFF Temperature Change	Increase current temperature setting by <i>Temperature Change</i> x 0.5
Pool Temperature Down	0x06	All	0x53	0x00 ⇒ 0xFF Temperature Change	Decrease current temperature setting by <i>Temperature Change</i> x 0.5
Pool Control	0x06	All	0x54	Subcommand	
				0x00 Load Initialization Values	
				0x01 Load EEPROM from RAM	
				0x02 Get Pool Mode	ACK contains 1-byte thermostat mode in Command 2 0 = Pool 1 = Spa 2 - 255 Unused
				0x03 Get Ambient Temperature	NCIar ACK contains ambient temperature in Command 2
				0x04 Get Water Temperature	NCIar ACK contains water temperature in Command 2
				0x05 Get pH	ACK contains pH value in Command 2
				0x06 ⇒ 0xFF Unused	
Reserved			0x55 ⇒ 0x57		
Door Move	0x0F	All	0x58	Subcommand	
				0x00 Raise Door	
				0x01 Lower Door	
				0x02 Open Door	
				0x03 Close Door	
				0x04 Stop Door	
				0x05 Single Door Open	
				0x06 Single Door Close	

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
				0x07 ⇒ 0xFF	Unused
Door Status Report	0x0F	All	0x59	Subcommand	
				0x00	Raise Door
				0x01	Lower Door
				0x02	Open Door
				0x03	Close Door
				0x04	Stop Door
				0x05	Single Door Open
				0x06	Single Door Close
				0x07 ⇒ 0xFF	Unused
Reserved			0x5A ⇒ 0x5F		
Window Covering	0x0E	All	0x60	Subcommand	
				0x00	Open
				0x01	Close
				0x02	Stop
				0x03	Program
				0x04 ⇒ 0xFF	Unused
Window Covering Position	0x0E	All	0x61	0x00 ⇒ 0xFF Position	0x00 is closed, 0xFF is open.
Reserved			0x62 ⇒ 0x67		
Thermostat Temperature Up	0x05	All	0x68	0x00 ⇒ 0xFF Temperature Change x 2 (unsigned byte)	Increase current temperature setting by <i>Temperature Change</i> x 0.5
Thermostat Temperature Down	0x05	All	0x69	0x00 ⇒ 0xFF Temperature Change x 2 (unsigned byte)	Decrease current temperature setting by <i>Temperature Change</i> x 0.5
Thermostat Get Zone Information	0x05	All	0x6A	Bits 0-4 Zone Number 0-31	ACK contains Zone Temperature, Setpoint, Deadband, or Humidity as an unsigned byte in Command 2
				Bits 5,6	
				00 = Temperature	
				01 = Setpoint	
				10 = Deadband	
				11 = Humidity	
				Bit 7 Unused	
Thermostat Control	0x05	All	0x6B	Subcommand	
				0x00	Load Initialization Values
				0x01	Load EEPROM from RAM
				0x02	Get Thermostat Mode
					ACK contains 1-byte thermostat mode in Command 2 0x00 = Off 0x01 = Heat 0x02 = Cool 0x03 = Auto 0x04 = Fan 0x05 = Program 0x06 = Program Heat 0x07 = Program Cool 0x08 ⇒ 0xFF Unused

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
				0x03 Get Ambient Temperature	NCIar ACK contains ambient temperature in Command 2
				0x04 ON Heat	Set mode to Heat
				0x05 ON Cool	Set mode to Cool
				0x06 ON Auto	Set mode to Auto
				0x07 ON Fan	Turn fan on
				0x08 OFF Fan	Turn fan off
				0x09 OFF All	Turn everything off
				0x0A Program Heat	Set mode to Program Heat
				0x0B Program Cool	Set mode to Program Cool
				0x0C Program Auto	Set mode to Program Auto
				0x0D Get Equipment State	Bit 0 = Cool active Bit 1 = Heat active Bit 2 = Programmable output available Bit 3 = Programmable output state Bits 4-7 Unused
				0x0E Set Equipment State	Bit 0 = Programmable output state Bits 1-7 Unused
				0x0F Get Temperature Units	ACK contains Units in Command 2 0x00 = Fahrenheit 0x01 = Celsius 0x02 ⇒ 0xFF Unused
				0x10 Set Fahrenheit	Set Temperature Units to Fahrenheit
				0x11 Set Celsius	Set Temperature Units to Celsius
				0x12 Get Fan-On Speed	ACK contains speed fan will run at when turned on, in Command 2 0x00 = Single-speed Fan 0x01 = Low Speed 0x02 = Medium Speed 0x03 = High Speed 0x04 ⇒ 0xFF Unused
				0x13 Set Fan-On Speed Low	Fan will run at low speed when on (ignored by single-speed fans)
				0x14 Set Fan-On Speed Medium	Fan will run at medium speed when on (Ignored by single-speed fans)
				0x15 Set Fan-On Speed High	Fan will run at high speed when on (Ignored by single-speed fans)
Thermostat Set Cool Setpoint	0x05	All	0x6C	0x00 ⇒ 0xFF Temperature Setpoint x 2 (unsigned byte)	Set current cool temperature setpoint to <i>Temperature Setpoint</i> x 0.5
				0x00 ⇒ 0xFF Temperature Setpoint x 2 (unsigned byte)	Set current heat temperature setpoint to <i>Temperature Setpoint</i> x 0.5
Reserved			0x6E ⇒ 0x6F		
Leak Detector Announce	0x09	All	0x70	0x00 Leak Detected	
				0x01 No Leak Detected	
				0x02 Battery Low	
				0x03 Battery OK	
Reserved			0x70	0x04 ⇒ 0xFF	

SD Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x71 ⇒ 0x80		
Assign to Companion Group	0x01	0x01 0x04	0x81	0x00 ⇒ 0xFF Not Parsed	Deprecated (do not use in the future). For SwitchLinc only, allows Slaves of a Master to follow the Master when the Master is controlled by a companion device.
Reserved			0x82 ⇒ 0xEF		
FX Commands	All	All	0xF0 ⇒ 0xFF	User-specific	FX These commands only function if <i>FX Usernames</i> in a Controller and Responder device match during linking.

2.1.2 INSTEON Extended-length Direct Commands

The table below lists the existing INSTEON **ED** Extended-length Direct Commands.

The Note Key **Req-All** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories. **Req-All** command names appear in **bold type**.

The Note Key **Req-Ex (...)** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories except as noted within the parentheses. **Req-Ex** command names appear in **bold type**.

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00	0x00	Must be undefined in all INSTEON devices because this is the default Command to execute using ED 0x0304 Set ALL-Link Command Alias
Reserved			0x00	0x01 ⇒ 0xFF	
Reserved			0x01 ⇒ 0x02		
Product Data Response [Response to SD 0x0300 Product Data Request]	All	All	0x03	0x00	Req-All, Req-Ex (Required after 2/1/07)
					D1 0x00 Reserved (always set to 0x00)
					D2 0x00 ⇒ 0xFF INSTEON Product Key MSB
					D3 0x00 ⇒ 0xFF INSTEON Product Key 2MSB
					D4 0x00 ⇒ 0xFF INSTEON Product Key LSB
					D5 0x00 ⇒ 0xFF Device Category (DevCat)
					D6 0x00 ⇒ 0xFF Device Subcategory (SubCat)
					D7 0xFF Reserved (always set to 0xFF) (Matches byte in LSB of <i>To Address</i> of SB 0x01 SET Button Pressed Responder or SB 0x02 SET Button Pressed Controller commands)
					D8 0xFF Reserved (always set to 0xFF) (Matches byte in Command 2 of SB 0x01 SET Button Pressed Responder or SB 0x02 SET Button Pressed Controller commands)
					D9 ⇒ D14 User-defined
FX Username Response [Response to SD 0x0301 FX Username Request]	All	All	0x03	0x01	Req-Ex (Only required for devices that support FX Commands), FX
					D1 ⇒ D8 0x00 ⇒ 0xFF FX Command Username Used for <i>FX Commands</i> , which are user-specific SD or ED commands numbered 0xFF00 ⇒ 0xFFFF
					D9 ⇒ D14 User-defined

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description	
Device Text String Response [Response to SD 0x0302 Device Text String Request]	All	All	0x03	0x02	D1 ⇒ D14 ASCII Text string describing device Null (0x00) terminated unless 14 bytes long	
Set Device Text String	All	All	0x03	0x03	D1 ⇒ D14 ASCII Text string describing device Null (0x00) terminated unless 14 bytes long	
Set ALL-Link Command Alias	All	All	0x03	0x04	D1 0x11 ⇒ 0xFF ALL-Link Command Number to replace with SD or ED Direct Command in D2, D3.	
					D2, D3 0x0000 ⇒ 0xFFFF SD or ED Direct Command to execute in place of ALL-Link Command in D1. Set to 0x0000 to ignore ALL-Link Command.	
					D4 0x00, 0x01 Flag	
					0x00	Direct Command is SD (Standard-length).
					0x01	Direct Command is ED Extended-length), ED 0x0305 Set ALL-Link Command Alias Extended Data message follows.
D5 ⇒ D14 Unused						
Set ALL-Link Command Alias Extended Data	All	All	0x03	0x05	D1 ⇒ D14 0x00 ⇒ 0xFF Data field of ED Command to execute in place of ALL-Link Command in D1 of previous ED 0x0304 Set ALL-Link Command Alias message.	
Reserved			0x03	0x06 ⇒ 0xFF		
Reserved			0x04 ⇒ 0x29			
Block Data Transfer	All	All	0x2A	0x00 Transfer Failure	DataTr	
					D1 0x00 ⇒ 0xFF Source address MSB	
					D2 0x00 ⇒ 0xFF Source address LSB	
					D3 ⇒ D14 Unused	
				0x01 Transfer Complete, 1 byte in this last message	DataTr	
					D1 0x00 ⇒ 0xFF Source address MSB	
					D2 0x00 ⇒ 0xFF Source address LSB	
					D3 Final 1 byte	
				0x02 Transfer Complete, 2 bytes in this last message	DataTr	
					D1 0x00 ⇒ 0xFF Source address MSB	
					D2 0x00 ⇒ 0xFF Source address LSB	
					D3 ⇒ D4 Final 2 bytes	
				0x03 Transfer Complete, 3 bytes in this last message	DataTr	
					D1 0x00 ⇒ 0xFF Source address MSB	
					D2 0x00 ⇒ 0xFF Source address LSB	
					D3 ⇒ D5 Final 3 bytes	
0x04 Transfer Complete, 4 bytes in this last message	DataTr					
	D1 0x00 ⇒ 0xFF Source address MSB					
	D2 0x00 ⇒ 0xFF Source address LSB					
	D3 ⇒ D6 Final 4 bytes					

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D7 ⇒ D14 Unused
				0x05 Transfer Complete, 5 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D7 Final 5 bytes
					D8 ⇒ D14 Unused
				0x06 Transfer Complete, 6 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D8 Final 6 bytes
					D9 ⇒ D14 Unused
				0x07 Transfer Complete, 7 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D9 Final 7 bytes
					D10 ⇒ D14 Unused
				0x08 Transfer Complete, 8 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D10 Final 8 bytes
					D11 ⇒ D14 Unused
				0x09 Transfer Complete, 9 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D11 Final 9 bytes
					D12 ⇒ D14 Unused
				0x0A Transfer Complete, 10 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D12 Final 10 bytes
					D13 ⇒ D14 Unused
				0x0B Transfer Complete, 11 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D13 Final 11 bytes
					D13 Unused
				0x0C Transfer Complete, 12 bytes in this last message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D14 Final 12 bytes
				0x0D Transfer Continues, 12 bytes in this message	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 ⇒ D14 12 bytes
				0x0E ⇒ 0xFE Reserved	
				0xFF Request Block Data Transfer	DataTr
					D1 0x00 ⇒ 0xFF Source address MSB
					D2 0x00 ⇒ 0xFF Source address LSB
					D3 0x00 ⇒ 0xFF Destination addr MSB
					D4 0x00 ⇒ 0xFF Destination addr LSB
					D5 0x00 ⇒ 0xFF Block length MSB
					D6 0x00 ⇒ 0xFF Block length LSB

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D7 0x00 ⇒ 0xFF Destination ID MSB
					D8 0x00 ⇒ 0xFF Destination ID 2MSB
					D9 0x00 ⇒ 0xFF Destination ID LSB
					D10 ⇒ D14 Unused
Reserved			0x2B ⇒ 0x2D		
Extended Set/Get (SmartLabs 2430 ControlLinc and 2830 Icon Tabletop Controller)	0x00	0x04 0x06	0x2E	0x00	D1 0x00 ⇒ 0xFF Button/Group Number
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]
					D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]
					D3 0x00 ⇒ 0x0F X10 House Code #1 (0x20 = none)
					D4 0x00 ⇒ 0x0F X10 Unit Code #1
					D5 0x00 ⇒ 0x0F X10 House Code #2 (0x20 = none)
					D6 0x00 ⇒ 0x0F X10 Unit Code #2
					D7 0x00 ⇒ 0x0F X10 House Code #3 (0x20 = none)
					D8 0x00 ⇒ 0x0F X10 Unit Code #3
					D9 0x00 ⇒ 0x0F X10 House Code #4 (0x20 = none)
					D10 0x00 ⇒ 0x0F X10 Unit Code #4
					D11 0x00 ⇒ 0x0F X10 House Code #5 (0x20 = none)
					D12 0x00 ⇒ 0x0F X10 Unit Code #5
					D13 ⇒ D14 Unused
					D2 0x02 ⇒ 0x03 Unused
					D2 0x04 Set X10 Address
					D3 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
					D4 0x00 ⇒ 0x0F X10 Unit Code
					D5 ⇒ D14 Unused
Extended Set/Get (SmartLabs 2843 RemoteLinc)	0x00	0x05	0x2E	0x00	D2 0x05 ⇒ 0xFF Unused
					D1 0x00 ⇒ 0xFF Button/Group Number
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]
					D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data</i>
					D3 0x00 ⇒ 0xFF Awake Time Upon Heartbeat, seconds

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description	
					<i>Request</i>	D4 0x00 ⇒ 0xFF Heartbeat Interval X 755.2 seconds (12.5 minutes)
						D5 0x00 ⇒ 0xFF Number of SB 0x04 <i>Heartbeat</i> messages to send upon Heartbeat
						D6 0x00 ⇒ 0xFF Button Trigger-ALL-Link Bitmap If bit = 0, associated button sends normal Command If bit = 0, associated button sends ED 0x30 <i>Trigger ALL-Link</i> Command to first device in ALDB
						D7 ⇒ D14 Unused
					D2 0x02 Set Awake Time Upon Heartbeat	D3 0x00 ⇒ 0xFF Awake Time Upon Heartbeat, seconds D4 ⇒ D14 Unused
					D2 0x03 Set Heartbeat Interval	D3 0x00 ⇒ 0xFF Heartbeat Interval X 755.2 seconds (12.5 minutes) D4 ⇒ D14 Unused
					D2 0x04 Set Number of SB 0x04 <i>Heartbeat</i> messages to send upon Heartbeat	D3 0x00 ⇒ 0xFF Number of SB 0x04 <i>Heartbeat</i> messages to send upon Heartbeat D4 ⇒ D14 Unused
					D2 0x05 Set Trigger-ALL-Link State for Button	D3 0x00 ⇒ 0x01 0 = Button sends normal Command 1 = Button sends ED 0x30 <i>Trigger ALL-Link</i> Command to first device in ALDB D4 ⇒ D14 Unused
					D2 0x06 ⇒ 0xFF Unused	
					D2 0x06 ⇒ 0xFF Unused	
Extended Set/Get (SmartLabs 2486D KeypadLinc Dimmer, SmartLabs 2886D Icon In-Wall Controller)	0x01	0x09 0x0A	0x2E	0x00	D1 0x00 ⇒ 0xFF Button/Group Number	
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]	D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]	D3 0x00 ⇒ 0xFF Button's LED-Follow Mask
						D4 0x00 ⇒ 0xFF Button's LED-Off Mask
						D5 0x00 ⇒ 0xFF Button's X10 House Code

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D6 0x00 ⇒ 0xFF Button's X10 Unit Code
					D7 0x00 ⇒ 0x1F Button's <i>Ramp Rate</i>
					D8 0x00 ⇒ 0xFF Button's <i>On- Level</i>
					D9 0x11 ⇒ 0x7F Global LED Brightness
					D10 0x00 ⇒ 0xFF Non-toggle Bitmap If bit = 0, associated button is Toggle If bit = 1, associated button is Non-toggle
					D11 0x00 ⇒ 0xFF Button-LED State Bitmap If bit = 0, associated button's LED is Off If bit = 1, associated button's LED is On
					D12 0x00 ⇒ 0xFF X10-All Bitmap If bit = 0, associated button sends X10 On/Off If bit = 1, associated button sends X10 All-On/All-Off
					D13 0x00 ⇒ 0xFF Button Non-toggle On/Off Bitmap If bit = 0, associated button, if Non-toggle, sends Off If bit = 1, associated button, if Non-toggle, sends On
					D14 0x00 ⇒ 0xFF Button Trigger-ALL-Link Bitmap If bit = 0, associated button sends normal Command If bit = 1, associated button sends ED 0x30 <i>Trigger ALL-Link</i> Command to first device in ALDB
				D2 0x02 Set LED-Follow Mask for Button	D3 0x00 ⇒ 0xFF If bit = 0, associated button's LED is not affected If bit = 1, associated button's LED follows this button's LED
					D4 ⇒ D14 Unused

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D2 0x03 Set LED-Off Mask for Button D3 0x00 ⇒ 0xFF If bit = 0, associated button's LED is not affected If bit = 1, associated button's LED turns off when this button is pushed D4 ⇒ D14 Unused
					D2 0x04 Set X10 Address for Button D3 0x00 ⇒ 0xFF X10 House Code D4 0x00 ⇒ 0xFF X10 Unit Code D5 ⇒ D14 Unused
					D2 0x05 Set Ramp Rate for Button D3 0x00 ⇒ 0x1F Ramp Rate (0.1 second to 9 minutes) D4 ⇒ D14 Unused
					D2 0x06 Set On-Level for Button D3 0x00 ⇒ 0xFF On-Level D4 ⇒ D14 Unused
					D2 0x07 Set Global LED Brightness (ignores D1) D3 0x11 ⇒ 0x7F Brightness for all LEDs when on D4 ⇒ D14 Unused
					D2 0x08 Set Non-toggle State for Button D3 0x00 ⇒ 0x01 0 = Button is Toggle 1 = Button is Non-toggle D4 ⇒ D14 Unused
					D2 0x09 Set LED State for Button D3 0x00 ⇒ 0x01 0 = Turn button's LED Off 1 = Turn button's LED On D4 ⇒ D14 Unused
					D2 0x0A Set X10 All-On State for Button D3 0x00 ⇒ 0x01 0 = Button sends X10 On/Off 1 = Button sends X10 All-On/All-Off D4 ⇒ D14 Unused
					D2 0x0B Set Non-toggle On/Off State for Button D3 0x00 ⇒ 0x01 0 = If Non-toggle, Button sends Off Command 1 = If Non-toggle, Button sends On Command D4 ⇒ D14 Unused
					D2 0x0C Set Trigger-ALL-Link State for Button D3 0x00 ⇒ 0x01 0 = Button sends normal Command 1 = Button sends ED 0x30 Trigger ALL-Link Command to first device in ALDB D4 ⇒ D14 Unused
					D2 0x0D ⇒ 0xFF Unused
Extended Set/Get	0x01	All	0x2E	0x00	D1 0x00 ⇒ 0xFF Button/Group Number

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description	
		But 0x09 0x0A			D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]	D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]	D3 Unused
						D4 Unused
						D5 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
						D6 0x00 ⇒ 0x0F X10 Unit Code
						D7 0x00 ⇒ 0x1F Ramp Rate
						D8 0x00 ⇒ 0xFF On-Level
						D9 0x00 ⇒ 0xFF Signal-to-Noise Threshold
						D10 ⇒ D14 Unused
					D2 0x02 ⇒ 0x03 Unused	
					D2 0x04 Set X10 Address	D3 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
						D4 0x00 ⇒ 0x0F X10 Unit Code
						D5 ⇒ D14 Unused
					D2 0x05 Set Ramp Rate	D3 0x00 ⇒ 0x1F Ramp Rate (0.1 second to 9 minutes)
						D4 ⇒ D14 Unused
					D2 0x06 Set On-Level	D3 0x00 ⇒ 0xFF On-Level
						D4 ⇒ D14 Unused
					D2 0x07 ⇒ 0xFF Unused	
Extended Set/Get (SmartLabs 2476ST SwitchLinc i2 Relay Countdown Timer)	0x02	0x0E	0x2E	0x00	D1 0x00 ⇒ 0xFF Button/Group Number	
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]	D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]	D3 Unused
						D4 0x00 ⇒ 0xFE Default On-time minutes per button push
						D5 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
						D6 0x00 ⇒ 0x0F X10 Unit Code
						D7 0x00 ⇒ 0xFE If load is on, hours until it will turn off
						D8 0x00 ⇒ 0xFF If load is on, minutes until it will turn off

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D9 0x00 ⇒ 0xFF <i>Signal-to-Noise Threshold</i>
					D10 ⇒ D14 Unused
					D2 0x02 ⇒ 0x03 Unused
					D2 0x04 Set X10 Address
					D3 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
					D4 0x00 ⇒ 0x0F X10 Unit Code
					D5 ⇒ D14 Unused
					D2 0x05 Set Ramp Rate
					D3 0x00 ⇒ 0x1F <i>Ramp Rate</i> (0.1 second to 9 minutes)
					D4 ⇒ D14 Unused
Extended Set/Get (SmartLabs 2486S KeypadLinc Relay)	0x02	0x0F	0x2E	0x00	D2 0x06 Set On-Level
					D3 0x00 ⇒ 0xFF <i>On-Level</i>
					D4 ⇒ D14 Unused
					D2 0x07 ⇒ 0xFF Unused
					D1 0x00 ⇒ 0xFF Button/Group Number
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]
					D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]
					D3 0x00 ⇒ 0xFF Button's LED-Follow Mask
					D4 0x00 ⇒ 0xFF Button's LED-Off Mask
					D5 0x00 ⇒ 0xFF Button's X10 House Code
					D6 0x00 ⇒ 0xFF Button's X10 Unit Code
					D7 0x00 ⇒ 0x1F Button's <i>Ramp Rate</i> (ignore for relay)
					D8 0x00 ⇒ 0xFF Button's <i>On-Level</i>
					D9 0x11 ⇒ 0x7F Global LED Brightness
					D10 0x00 ⇒ 0xFF Non-toggle Bitmap If bit = 0, associated button is Toggle If bit = 1, associated button is Non-toggle
					D11 0x00 ⇒ 0xFF Button-LED State Bitmap If bit = 0, associated button's LED is Off If bit = 1, associated button's LED is On

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					<p>D12 0x00 ⇒ 0xFF X10-All Bitmap If bit = 0, associated button sends X10 On/Off If bit = 1, associated button sends X10 All-On/All-Off</p> <p>D13 0x00 ⇒ 0xFF Button Non-toggle On/Off Bitmap If bit = 0, associated button, if Non-toggle, sends Off If bit = 0, associated button, if Non-toggle, sends On</p> <p>D14 0x00 ⇒ 0xFF Button Trigger-ALL-Link Bitmap If bit = 0, associated button sends normal Command If bit = 0, associated button sends ED 0x30 <i>Trigger ALL-Link</i> Command to first device in ALDB</p>
				D2 0x02 Set LED-Follow Mask for Button	<p>D3 0x00 ⇒ 0xFF If bit = 0, associated button's LED is not affected If bit = 1, associated button's LED follows this button's LED</p> <p>D4 ⇒ D14 Unused</p>
				D2 0x03 Set LED-Off Mask for Button	<p>D3 0x00 ⇒ 0xFF If bit = 0, associated button's LED is not affected If bit = 1, associated button's LED turns off when this button is pushed</p> <p>D4 ⇒ D14 Unused</p>
				D2 0x04 Set X10 Address for Button	<p>D3 0x00 ⇒ 0xFF X10 House Code</p> <p>D4 0x00 ⇒ 0xFF X10 Unit Code</p> <p>D5 ⇒ D14 Unused</p>
				D2 0x05 Set Ramp Rate for Button	<p>D3 0x00 ⇒ 0x1F <i>Ramp Rate</i> (0.1 second to 9 minutes)</p> <p>D4 ⇒ D14 Unused</p>
				D2 0x06 Set On-Level for Button	<p>D3 0x00 ⇒ 0xFF <i>On-Level</i></p> <p>D4 ⇒ D14 Unused</p>
				D2 0x07 Set Global LED Brightness (ignores D1)	<p>D3 0x11 ⇒ 0x7F Brightness for all LEDs when on</p> <p>D4 ⇒ D14 Unused</p>

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
					D2 0x08 Set Non-toggle State for Button
					D3 0x00 ⇒ 0x01 0 = Button is Toggle 1 = Button is Non-toggle
					D4 ⇒ D14 Unused
					D2 0x09 Set LED State for Button
					D3 0x00 ⇒ 0x01 0 = Turn button's LED Off 1 = Turn button's LED On
					D4 ⇒ D14 Unused
					D2 0x0A Set X10 All-On State for Button
					D3 0x00 ⇒ 0x01 0 = Button sends X10 On/Off 1 = Button sends X10 All-On/All-Off
					D4 ⇒ D14 Unused
					D2 0x0B Set Non-toggle On/Off State for Button
					D3 0x00 ⇒ 0x01 0 = If Non-toggle, Button sends Off Command 1 = If Non-toggle, Button sends On Command
					D4 ⇒ D14 Unused
					D2 0x0C Set Trigger-ALL-Link State for Button
					D3 0x00 ⇒ 0x01 0 = Button sends normal Command 1 = Button sends ED 0x30 Trigger ALL-Link Command to first device in ALDB
					D4 ⇒ D14 Unused
					D2 0x0D ⇒ 0xFF Unused
Extended Set/Get	0x02	All But 0x0F	0x2E	0x00	D1 0x00 ⇒ 0xFF Button/Group Number
					D2 0x00 Data Request [Addressee responds with <i>Data Response</i>]
					D3 ⇒ D14 Unused
					D2 0x01 Data Response [Response to <i>Data Request</i>]
					D3 Unused
					D4 Unused
					D5 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
					D6 0x00 ⇒ 0x0F X10 Unit Code
					D7 ⇒ D14 Unused
					D2 0x02 ⇒ 0x03 Unused
					D2 0x04 Set X10 Address
					D3 0x00 ⇒ 0x0F X10 House Code (0x20 = none)
					D4 0x00 ⇒ 0x0F X10 Unit Code
					D5 ⇒ D14 Unused
					D2 0x05 ⇒ 0xFF Unused
Reserved			0x2E	0x01 ⇒ 0xFF	

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Read/Write ALL-Link Database (ALDB)	All	All	0x2F	0x00	Req-All, Req-Ex, DataTr (Required for all i2 devices) Not implemented in i1 devices
					D1 Unused
					D2 0x00 ALDB Record Request [Addressee responds with ALDB Record Response(s)]
					D3 0x00 ⇒ 0xFF Address High Byte
					D4 0x00 ⇒ 0xFF Address Low Byte
					D5 0x00 Dump all records D5 0x01 ⇒ 0xFF Dump one record
					D6 ⇒ D14 Unused
					D2 0x01 ALDB Record Response [Response to ALDB Record Request]
					D3 0x00 ⇒ 0xFF Address High Byte
					D4 0x00 ⇒ 0xFF Address Low Byte
Reserved			0x2F	0x01 ⇒ 0xFF	D5 Unused
					D6 ⇒ D13 0x00 ⇒ 0xFF Returned 8-byte Record
					D14 Unused
					If D5 of ALDB Record Request was 0x00, return one record, else return all records until end of ALDB is reached. (Flag Byte in last record will be 0x00).
					Address is automatically decremented by 8 for each record returned.
					D2 0x02 Write ALDB Record
					D3 0x00 ⇒ 0xFF Address High Byte
					D4 0x00 ⇒ 0xFF Address Low Byte
					D5 0x01 ⇒ 0x08 Number of Bytes (0x09 ⇒ 0xFF is the same as 0x08)
					D6 ⇒ D13 0x00 ⇒ 0xFF 8-byte Record to Write
Trigger ALL-Link Command (SmartLabs 2476D SwitchLinc i2 Dimmer 600 W, 2476DH SwitchLinc i2 Dimmer 1000 W, 2486D KeypadLinc Dimmer,	0x01	0x01 0x04 0x09 0x0A	0x30	0x00	D1 0x00 ⇒ 0xFF Button/Group Number
					D2 On-Level Switch 0x00 Use On-Level stored in ALDB 0x01 Use On-Level in D3 0x02 ⇒ 0xFF Unused
					D3 0x00 ⇒ 0xFF On-Level if D2 = 0x01
					D4 0x00 ⇒ 0xFF SA Command 1 to send
					D5 0x00 ⇒ 0xFF SA Command 2 to send
					D2 0x03 ⇒ 0xFF Unused

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
2886D Icon In-Wall Controller)					D6 Ramp Rate Switch 0x00 Use Ramp Rate stored in ALDB 0x01 Use instant Ramp Rate 0x02 ⇒ 0xFF Unused D7 ⇒ D14 Unused
Trigger ALL-Link Command (SmartLabs 2476S SwitchLinc i2 Relay, 2476ST SwitchLinc i2 Relay Countdown Timer, 2486S KeypadLinc Relay)	0x02	0x0A 0x0E 0x0F	0x30	0x00	D1 0x00 ⇒ 0xFF Button/Group Number D2 On-Level Switch 0x00 Use On-Level stored in ALDB 0x01 Use On-Level in D3 0x02 ⇒ 0xFF Unused D3 0x00 ⇒ 0xFF On-Level if D2 = 0x01 D4 0x00 ⇒ 0xFF SA Command 1 to send D5 0x00 ⇒ 0xFF SA Command 2 to send D6 Ramp Rate Switch 0x00 Use Ramp Rate stored in ALDB 0x01 Use instant Ramp Rate 0x02 ⇒ 0xFF Unused D7 ⇒ D14 Unused
Reserved			0x31 ⇒ 0x3F		
Set Sprinkler Program	0x04	All	0x40	0x00 ⇒ 0xFF Program Number (0x00 is Default Program)	D1 to D14 contain program data to set
Sprinkler Get Program Response [Response to SD 0x45xx Sprinkler Get Program Request]	0x04	All	0x41	0x00 ⇒ 0xFF Program Number (0x00 is Default Program)	Added 5/05/06 D1 to D14 contain program data
Reserved			0x42 ⇒ 0x4A		
I/O Set Sensor Nominal	0x07	All	0x4B	0x00 ⇒ 0xFF Sensor Number	D1 0x00 ⇒ 0xFF Sensor Nominal Value D2 ⇒ D14 Unused
I/O Alarm Data Response [Response to SD 0x4700 I/O Alarm Data Request]	0x07	All	0x4C	0x00	D1 ⇒ D14 Alarm 1-14 Data
Reserved			0x4C	0x01 ⇒ 0xFF	
Reserved			0x4D ⇒ 0x4F		
Pool Set Device Temperature	0x06	All	0x50	0x00	D1 0x00 Unused D1 0x01 Pool D1 0x02 Spa D1 0x03 ⇒ 0xFF Unused D2 0x00 ⇒ 0xFF Temperature D3 ⇒ D14 Unused
Pool Set Device Hysteresis	0x06	All	0x50	0x01	D1 0x00 Unused D1 0x01 Pool D1 0x02 Spa D1 0x03 ⇒ 0xFF Unused D2 0x00 ⇒ 0xFF Hysteresis D3 ⇒ D14 Unused
Reserved			0x50	0x02 ⇒ 0xFF	
Reserved			0x51 ⇒ 0x67		

ED Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Thermostat Zone Temperature Up	0x05	All	0x68	0x00 ⇒ 0xFF Zone Number	D1 0x00 ⇒ 0xFF Temperature Change x 2 D2 ⇒ D14 Unused
Thermostat Zone Temperature Down	0x05	All	0x69	0x00 ⇒ 0xFF Zone Number	D1 0x00 ⇒ 0xFF Temperature Change x 2 D2 ⇒ D14 Unused
Reserved			0x6A ⇒ 0x6B		
Thermostat Set Zone Cool Setpoint	0x05	All	0x6C	0x00 ⇒ 0xFF Zone Number	D1 0x00 ⇒ 0xFF Temperature Setpoint x 2 D2 0x00 ⇒ 0xFF Deadband x 2 D3 ⇒ D14 Unused
Thermostat Set Zone Heat Setpoint	0x05	All	0x6D	0x00 ⇒ 0xFF Zone Number	D1 0x00 ⇒ 0xFF Temperature Setpoint x 2 D2 0x00 ⇒ 0xFF Deadband x 2 D3 ⇒ D14 Unused
Reserved			0x6E ⇒ 0xEF		
FX Commands	All	All	0xF0 ⇒ 0xFF	User-specific	FX These commands only function if <i>FX Usernames</i> in a Controller and Responder device match during linking. D1 to D14 are user-specific.

2.2 INSTEON ALL-Link Commands

This section lists **SA** Standard-length and **EA** Extended-length INSTEON ALL-Link Commands in two separate tables. Because **EA** commands are not currently used, the **EA** table is blank.

SA ALL-Link Commands are sent twice, first in an **SA** ALL-Link Broadcast message to all of the members of an ALL-Link Group, followed by separate **SC** ALL-Link Cleanup messages sent to each individual member of the ALL-Link Group.

In the **SA** ALL-Link Broadcast message, the ALL-Link Group Number appears in the *To Address* field, and the *Command 2* field contains 0x00 (with one exception for certain legacy devices as noted in the table below for the *Light Start Manual Change* Command **0x17**).

In **SC** ALL-Link Cleanup messages, the ALL-Link Group Number moves to the *Command 2* field, because the *To Address* field contains the INSTEON Address of the individual ALL-Link Group member.

2.2.1 INSTEON Standard-length ALL-Link Commands

The table below lists the existing INSTEON **SA** Standard-length ALL-Link Commands.

The Note Key **Req-All** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories. **Req-All** command names appear in **bold type**.

These same commands are used in both **SA** ALL-Link Broadcast messages and **SC** ALL-Link Cleanup messages.

SA Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00 ⇒ 0x10	0x00 for initial SA Broadcast, 0x00 ⇒ 0xFF (Group Number) for SC Cleanups	
ALL-Link Recall (Used as <i>ALL-Link Light ON</i> by legacy controllers)	All	All	0x11	0x00 for initial SA Broadcast, 0x00 ⇒ 0xFF (Group Number) for SC Cleanups	Req-All Responder reverts to state remembered during ALL-Linking.
ALL-Link Alias 2 High (Used as <i>Light ON Fast</i> by legacy controllers)	All	All	0x12	0x00 for initial SA Broadcast, 0x00 ⇒ 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1200 Light ON Fast , which goes to saved <i>On-Level</i> instantly.
ALL-Link Alias 1 Low (Used as <i>Light OFF</i> by legacy controllers)	All	All	0x13	0x00 for initial SA Broadcast, 0x00 ⇒ 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1300 Light OFF , which goes full off at saved <i>Ramp Rate</i> .

SA Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
ALL-Link Alias 2 Low (Used as <i>Light OFF Fast</i> by legacy controllers)	All	All	0x14	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1400 Light OFF Fast , which goes full off instantly.
ALL-Link Alias 3 High (Used as <i>Light Brighten One Step</i> by legacy controllers)	All	All	0x15	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1500 Light Brighten One Step . There are 32 steps from off to full brightness.
ALL-Link Alias 3 Low (Used as <i>Light Dim</i> by legacy controllers)	All	All	0x16	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1600 Light Dim One Step . There are 32 steps from off to full brightness.
ALL-Link Alias 4 High (Used as <i>Light Start Manual Change</i> by legacy controllers)	All	All	0x17	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups NOTE: Certain legacy SmartLabs Controllers and Responders (ControlLinc V2, SwitchLinc V2, KeypadLinc V2, and LampLinc V2) use this <i>Command 2</i> field to hold a <i>direction</i> parameter during the SA Broadcast. 0x01 means <i>Increase</i> and 0x00 means <i>Decrease</i> . Those legacy Controllers do <i>not</i> follow up the SA Broadcast of this Command with an SC Cleanup sequence.	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1700 Light Start Manual Change , which starts changing the <i>On-Level</i> .
ALL-Link Alias 4 Low (Used as <i>Light Stop Manual Change</i> by legacy controllers)	All	All	0x18	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups NOTE: Certain legacy SmartLabs Controllers (ControlLinc V2, SwitchLinc V2, and KeypadLinc V2) do <i>not</i> follow up the SA Broadcast of this Command with an SC Cleanup sequence.	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x1800 Light Stop Manual Change , which stops changing the <i>On-Level</i> .
Reserved			0x19 \Rightarrow 0x20	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	Do not add any new commands in this interval because legacy devices do not parse message type flags or DevCats.

SA Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
ALL-Link Alias 5	All	All	0x21	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	Ignore Command unless, if previously set up by default or by using ED 0x0304 Set ALL-Link Command Alias , then execute substitute Direct Command. For DevCats 0x01 and 0x02 , defaults to SD 0x2100 Light Instant Change , which restores light to <i>On-Level</i> in ALL-Link Database at next zero crossing. [Added 20060420]
Reserved			0x22 \Rightarrow 0xFF	0x00 for initial SA Broadcast, 0x00 \Rightarrow 0xFF (Group Number) for SC Cleanups	

2.2.2 INSTEON Extended-length ALL-Link Commands

The table below lists the existing INSTEON **EA** Extended-length ALL-Link Commands. Because **EA** commands are not currently used, this table is blank.

EA Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00 ⇒ 0xFF	0x00 for initial EA Broadcast, 0x00 ⇒ 0xFF (Group Number) for EC Cleanups	

2.3 INSTEON Broadcast Commands

This section lists **SB** Standard-length and **EB** Extended-length INSTEON Broadcast Commands in two separate tables. Because **EB** commands are not currently used, the **EB** table is blank.

2.3.1 INSTEON Standard-length Broadcast Commands

The table below lists the existing INSTEON **SB** Standard-length Broadcast Commands.

The Note Key **Req-All** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories. **Req-All** command names appear in **bold type**.

The Note Key **Req-Ex (...)** denotes INSTEON commands that shall be supported by INSTEON devices in all Device Categories except as noted within the parentheses. **Req-Ex** command names appear in **bold type**.

The Note Key **Req-DC** denotes INSTEON commands that shall be supported only by those INSTEON devices in the Device Categories given in the **DevCat** and **SubCat** columns. **Req-DC** command names appear in underlined type.

SB Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00		
SET Button Pressed Responder	All	All	0x01	Reserved (Set to 0xFF)	Req-Ex (Required for Responder-only or Controller/Responder devices) Possible Linking Mode for a Responder or Controller/Responder device. Every INSTEON device must send <i>either</i> SB 0x01 or SB 0x02
SET Button Pressed Controller	All	All	0x02	Reserved (Set to 0xFF)	Req-Ex (Required for Controller-only devices) Possible Linking Mode for a Controller-only device. Every INSTEON device must send <i>either</i> SB 0x01 or SB 0x02
Test Powerline Phase (Only sent by i2/RF devices, with <i>Max Hops</i> = 0)	All	All	0x03	0x00	Sender is on powerline phase A (low cycle). Receiver blinks LED fast for 10 seconds if on same phase. Receiver blinks LED slow for 10 seconds if on opposite phase.
				0x01	Sender is on powerline phase B (high cycle). Receiver blinks LED fast for 10 seconds if on same phase. Receiver blinks LED slow for 10 seconds if on opposite phase.
Reserved			0x03	0x03 ⇒ 0xFF	
<u>Heartbeat</u> (SmartLabs 2843 RemoteLinc)	0x00	0x05	0x04	0x00 ⇒ 0xFF Battery Level	Req-DC Periodic broadcast set up using ED 0x2E Extended Set/Get
Reserved			0x05 ⇒ 0x26		
Device Status Changed	All	All	0x27	Reserved (Set to 0xFF)	Sent by a device when its status changes
Reserved			0x28 ⇒ 0x48		

SB Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
SALad Debug Report	All	All	0x49	0x00 ⇒ 0xFF Not Parsed	Req-Ex (Only required for SALad-enabled devices) The two low bytes of the <i>To Address</i> contain the high and low bytes of the Program Counter for a SALad program being remotely debugged.
Reserved			0x4A ⇒ 0xFF		

2.3.2 INSTEON Extended-length Broadcast Commands

The table below lists the existing INSTEON **EB** Extended-length Broadcast Commands. Because **EB** commands are not currently used, this table is blank.

EB Commands	Dev Cat	Sub Cat	Cmd 1	Cmd 2	Note Keys, Description
Reserved			0x00 ⇒ 0xFF		