

**Fisher-Price®**

# Open Top Take-Along Swing™



Product features and decoration may vary from the picture above.

**Model Numbers: 79028, B2479, B2106, B2107**

Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

Requires four "C" (LR14) **alkaline** batteries for operation (not included).

Weight Limit: 20 lbs (9 kg).

**IMPORTANT!** The maximum weight limit for this product is 20 lbs. If your child weighs less than 20 lbs., but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

Discover what's possible™... [www.fisher-price.com](http://www.fisher-price.com)

## *Warning and Caution*



### **WARNING**

- To prevent serious injury or death from falls and being strangled in the restraint system:
  - Always use the restraint system.
  - Never use with an active child who may be able to climb out of the seat.
- Never leave child unattended.
- Never use on any elevated surface.



### **CAUTION**

This package contains small parts  
in its unassembled state.  
Adult assembly is required.

## *Consumer Information*


Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

# Parts

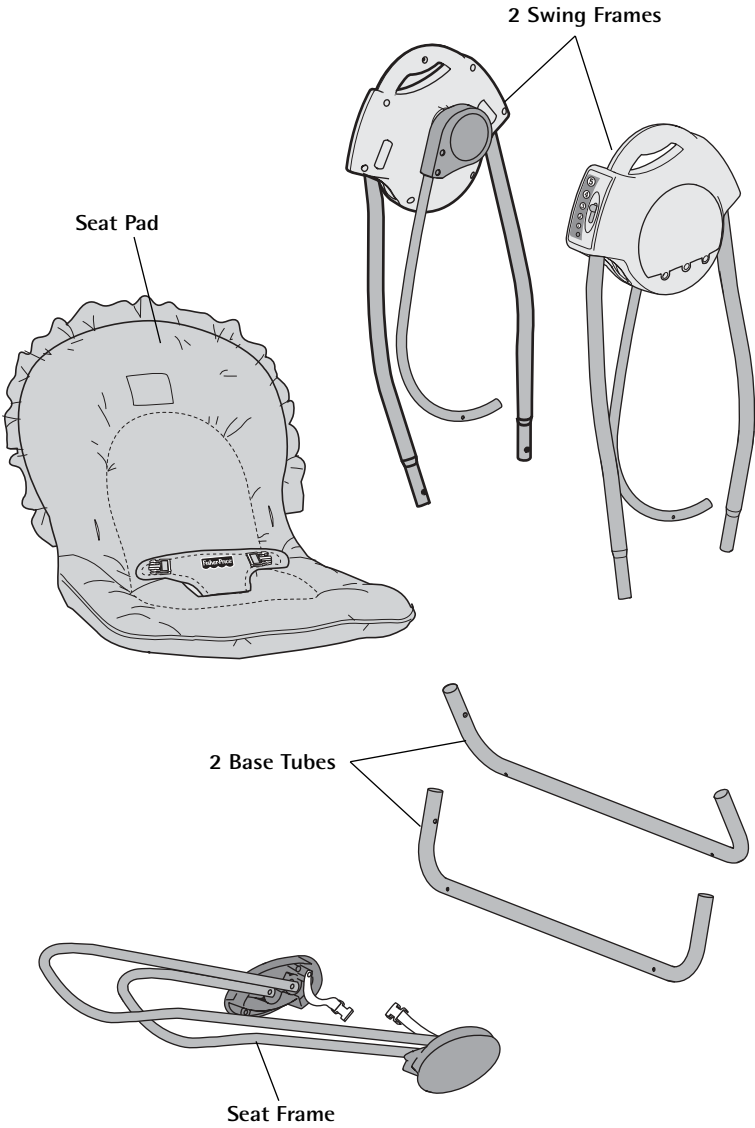


#6 x 3/4" Screw - 2

Shown Actual Size


# Assembly

**IMPORTANT!** Before assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

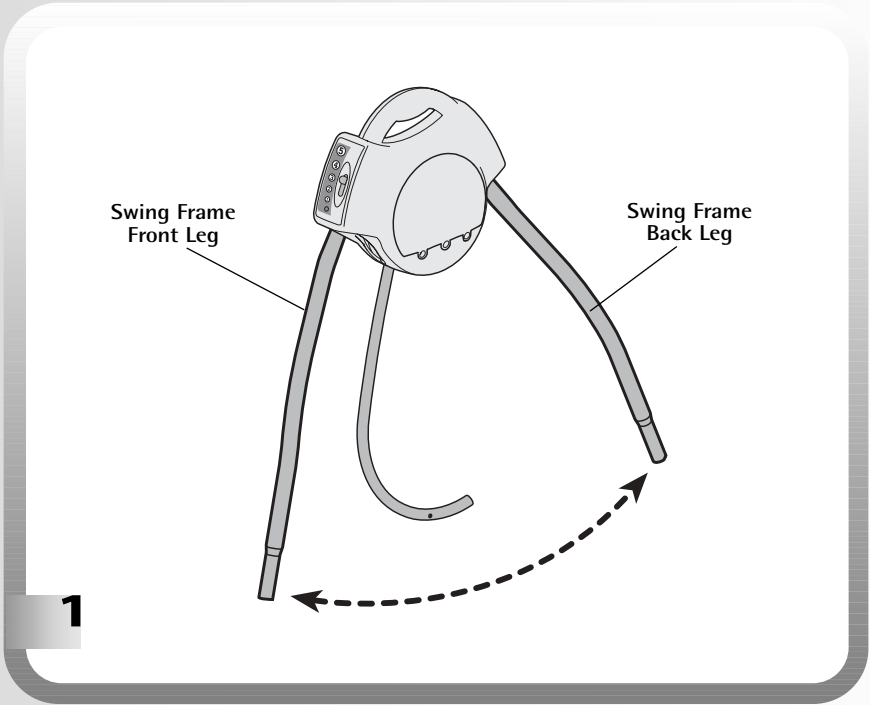


- Slide the front and back legs on the swing frame outward until they “click” into place.
- Repeat this procedure to open the other swing frame.

# Assembly

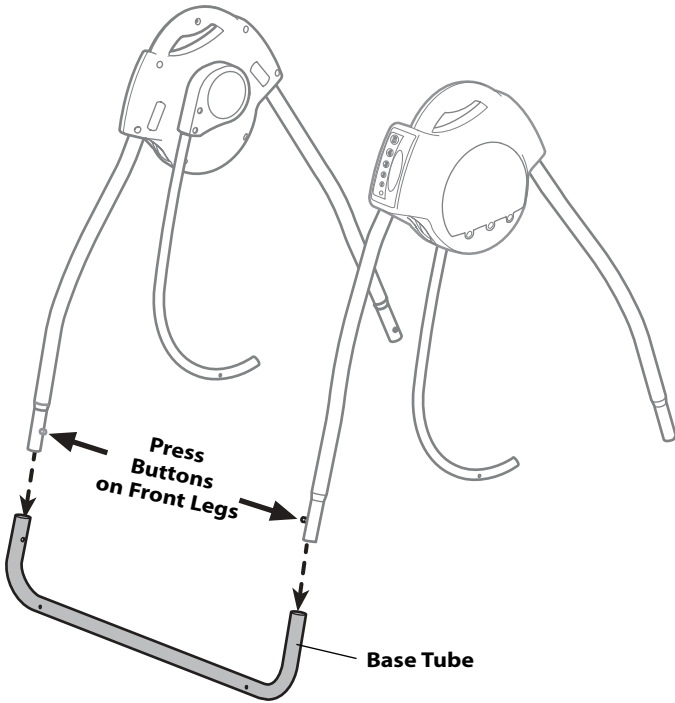


- While pressing the buttons on the end of each front leg, insert the front legs into the ends of one of the base tubes.
- Push the front legs down into the base tube until the buttons **“click”** into place.

# Assembly

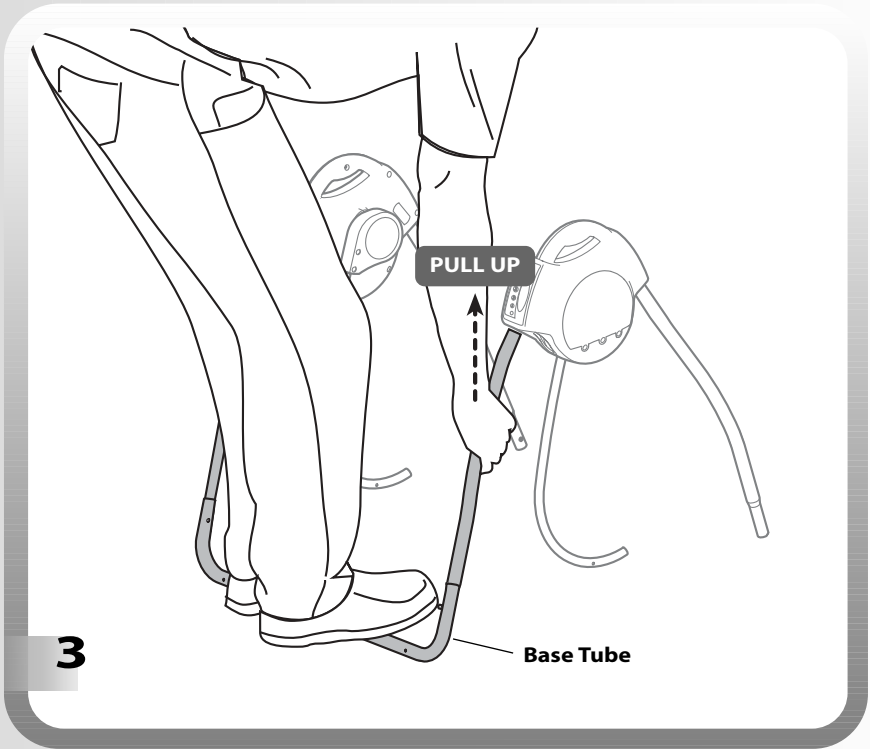


- While standing on the base tube, pull the front legs up. The front legs **should remain secured** to the base tube. If you can remove the front legs, you have not assembled them correctly to the base tube. Re-read and repeat assembly step 2.

# Assembly

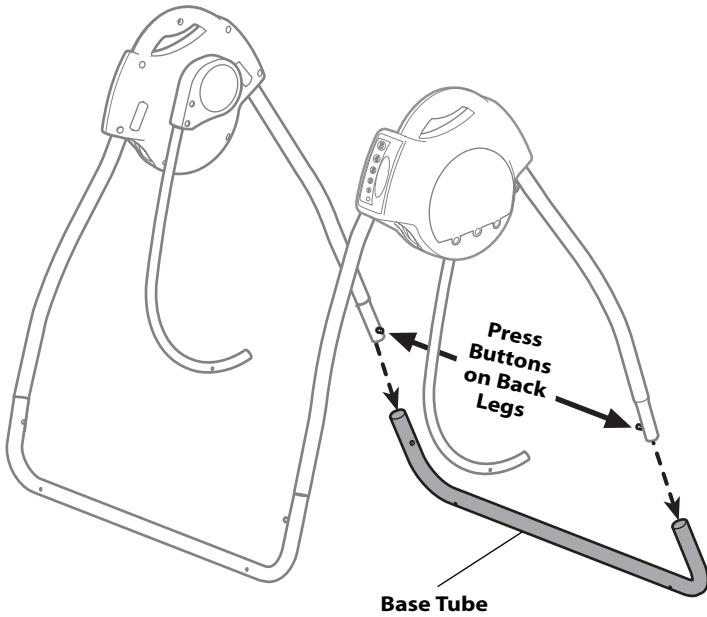

- While pressing the buttons on the end of each back leg, insert the back legs into the ends of the remaining base tube.
- Push the back legs down into the base tube until the buttons **“click”** into place.


# Assembly

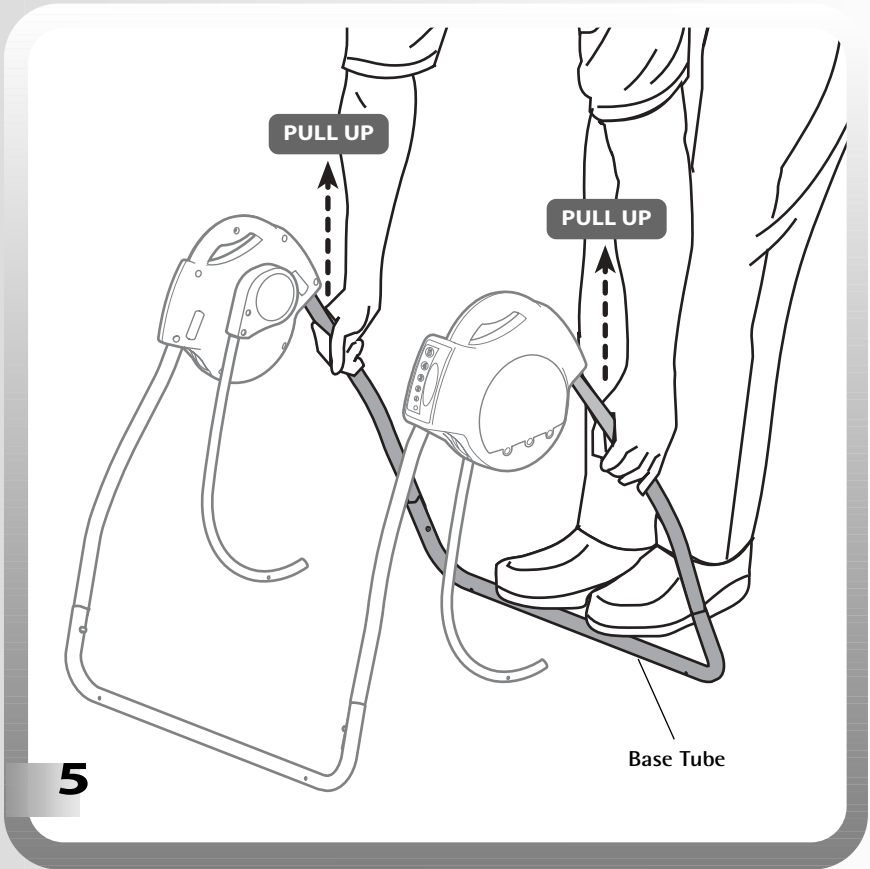

- While standing on the base tube, pull the back legs up. The back legs **should remain secured** to the base tube. If you can remove the back legs, you have not assembled them correctly to the base tube. Re-read and repeat assembly step 4.



# Assembly

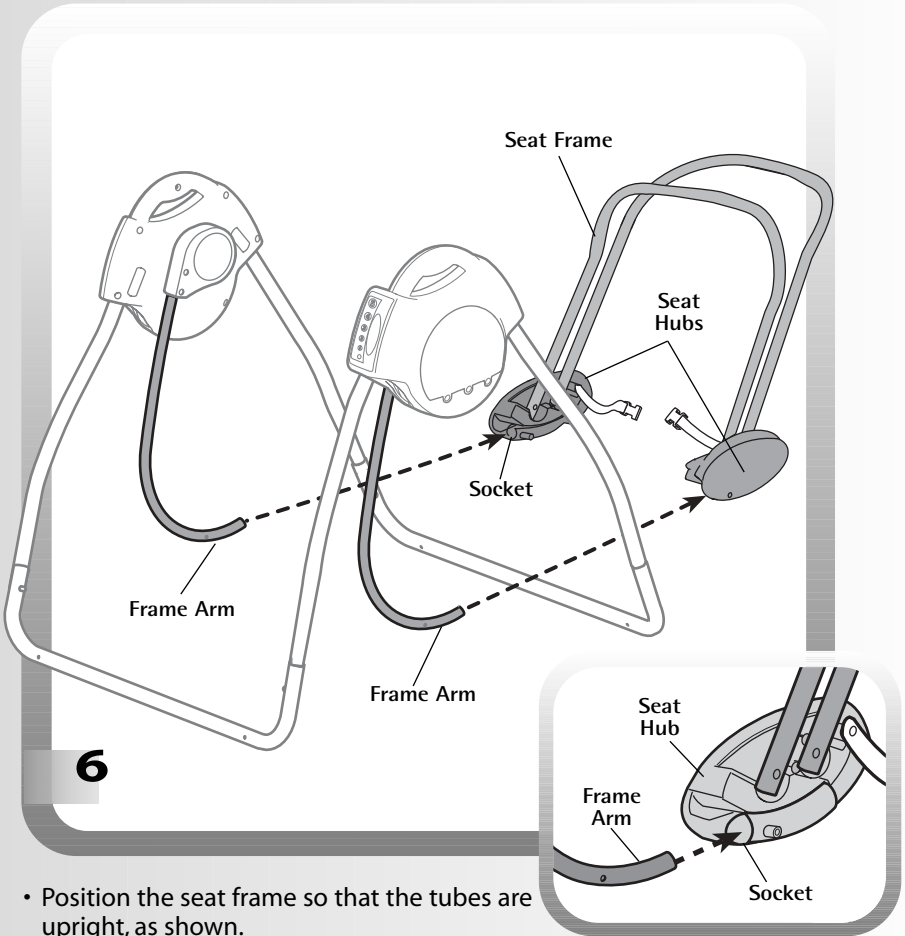


- Position the seat frame so that the tubes are upright, as shown.

**Hint:** Note the location of the socket inside each seat hub. The ends of the frame arms will be inserted into these sockets.

- Fit the end of each frame arm into the socket in each seat hub.


# Assembly

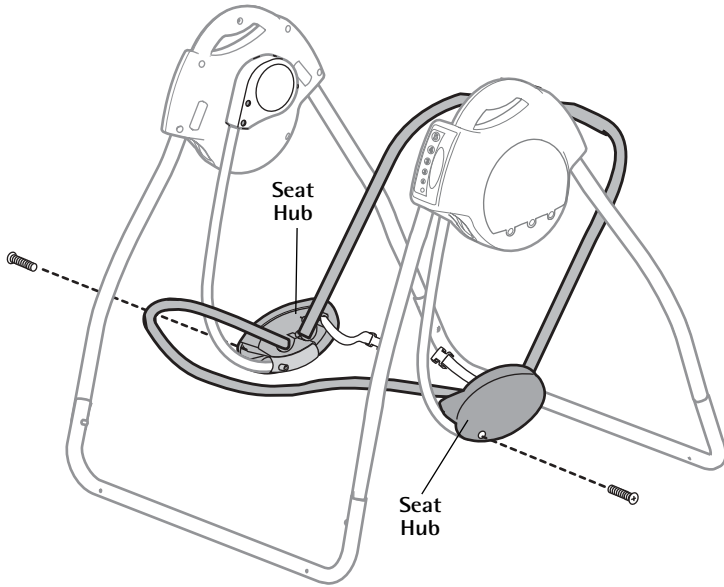

7


- Insert a screw through the outside of each seat hub and into each frame arm. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

# Assembly

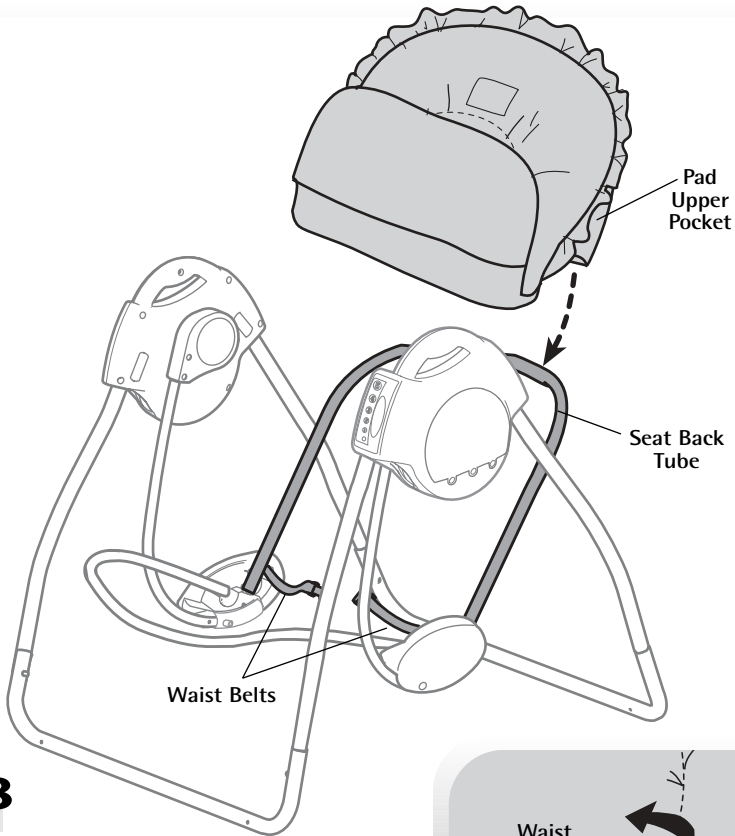


**8**

- Fit the pad upper pocket onto the seat back tube, as shown.
- Insert the waist belts on the seat hubs through the slots in the pad.

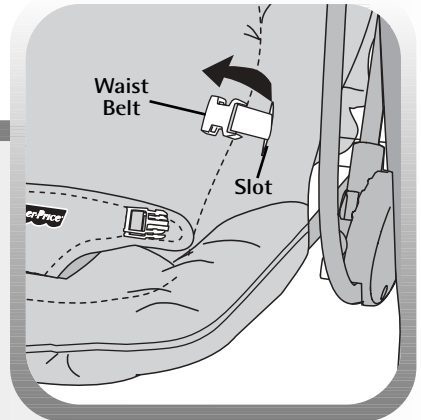


# Assembly

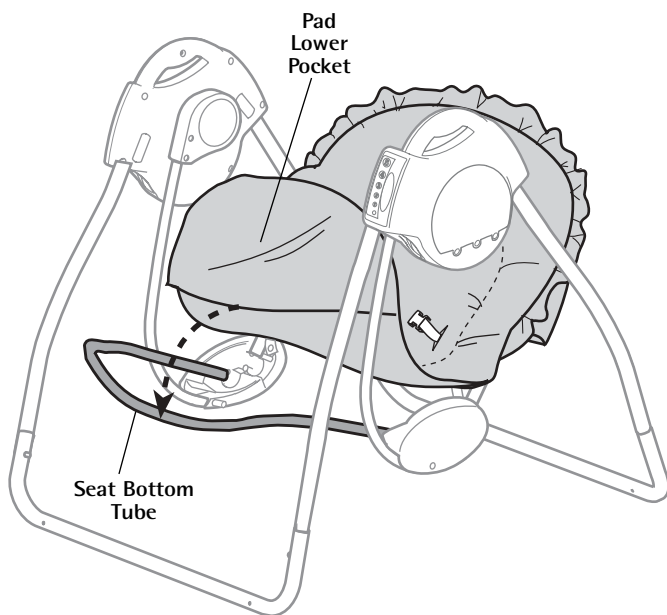

9

- Fit the pad lower pocket onto the seat bottom tube, as shown.  
**Assembly is now complete.**

# Battery Installation

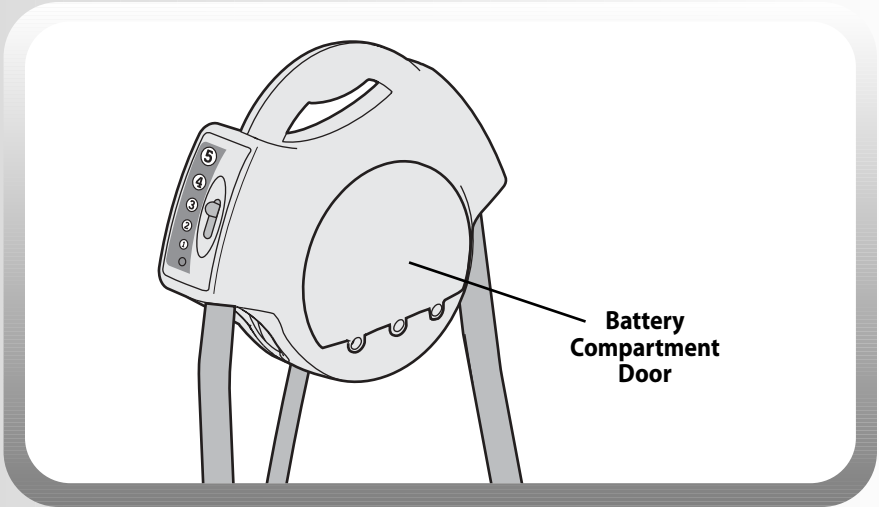


- Locate the battery compartment door on the frame.
- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door.
- Insert four "C" (LR14) **alkaline** batteries as indicated inside the battery compartment.

**Hint:** *We recommend using **alkaline** batteries for longer battery life.*

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

# Battery Safety Information

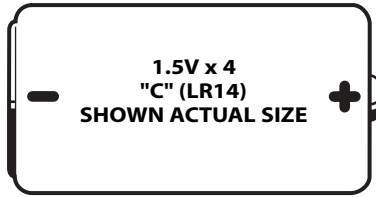

**Batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:**


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Securing Your Child



## WARNING


- To prevent serious injury or death from falls and being strangled in the restraint system:
  - Always use the restraint system.
  - Never use with an active child who may be able to climb out of the seat.
- Never leave child unattended.
- Never use on any elevated surface.

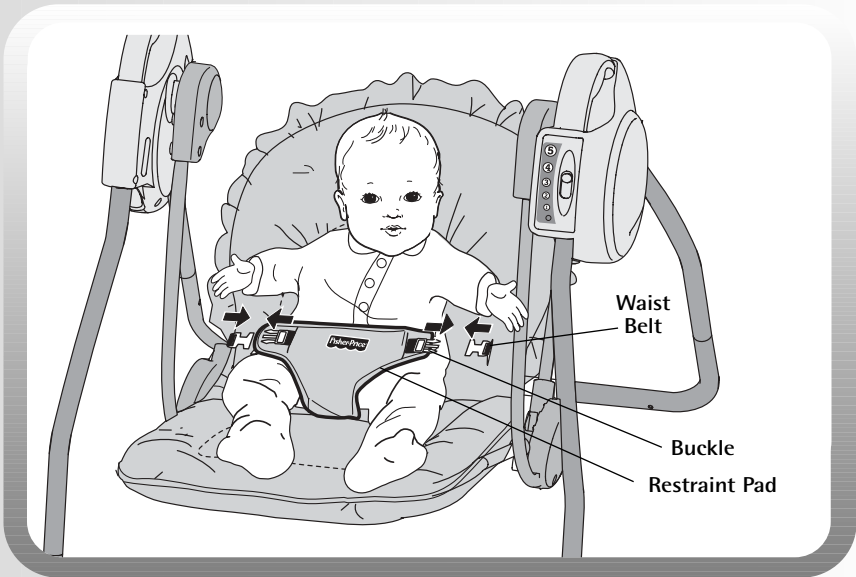

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten both waist belts to the buckles on each side of the restraint pad. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint should remain attached.

**IMPORTANT!** The maximum weight limit for this product is 20 lbs. If your child weighs less than 20 lbs., but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

# Securing Your Child

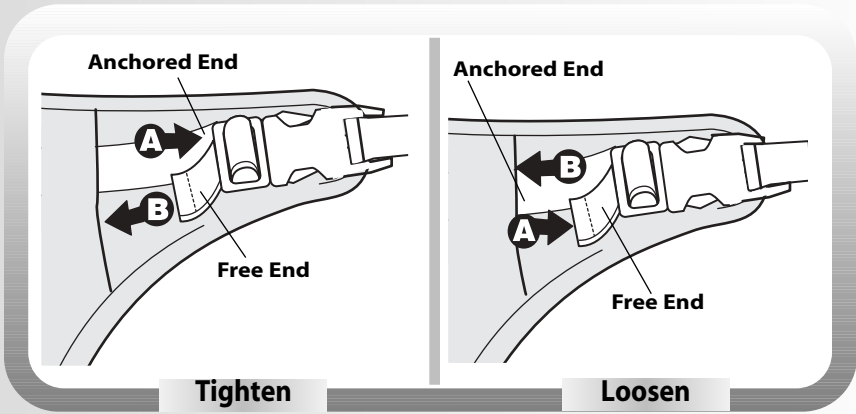

## To tighten the belts:

- Feed the anchored end of the belt up through the buckle to form a loop **A**.
- Pull the free end of the belt **B**.
- Repeat this procedure to tighten the other belt.

## To loosen the belts:


- Feed the free end of the belt up through the buckle to form a loop **A**.  
Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the belt to shorten the free end of the belt **B**.
- Repeat this procedure to loosen the other belt.

**Please Note:** After adjusting the belts to fit your child, make sure you pull on them to be sure they are securely fastened.



# Starting the Swing

**IMPORTANT!** Before each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

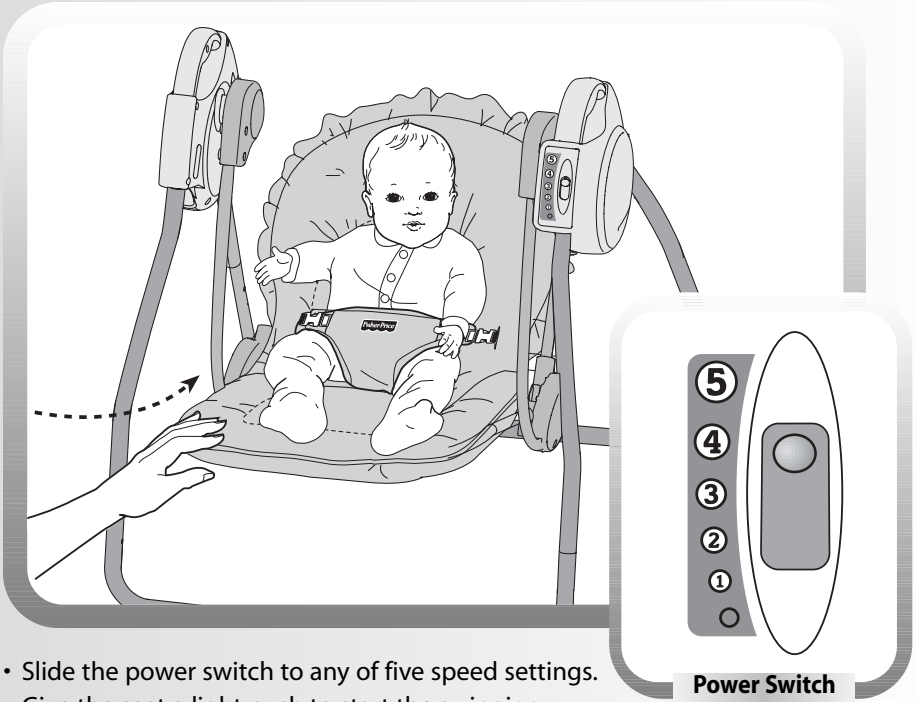

- Slide the power switch to any of five speed settings.
- Give the seat a light push to start the swinging motion. Adjust the power switch to the desired swing motion setting.

**Hint:** As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child.

- If swinging stops while using a lower setting, try a higher setting. Give the seat a light push to start the swinging motion again.
- Be sure to turn this product off when not in use. Slide the power switch to the off setting ○.

# Room-to-Room Portability


## **WARNING**

- To prevent serious injury or death from falls and being strangled in the restraint system, always use the restraint system.
- Never use on any elevated surface.




- Make sure your child is properly secured in the swing seat.
- Grasp both handles, as shown, and lift.
- Carefully carry the swing to another room. Be sure to set the swing down on a **non-elevated, flat surface**.

# Storage

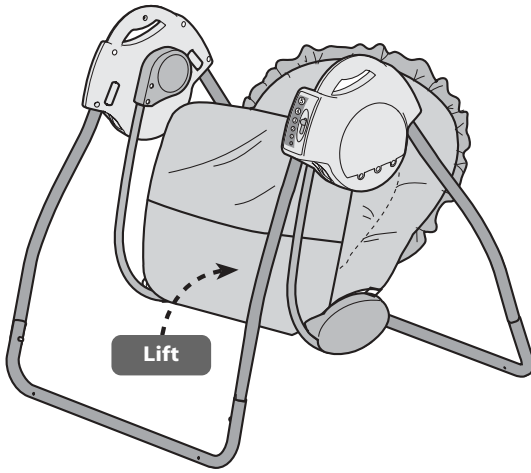

- Lift the seat bottom.

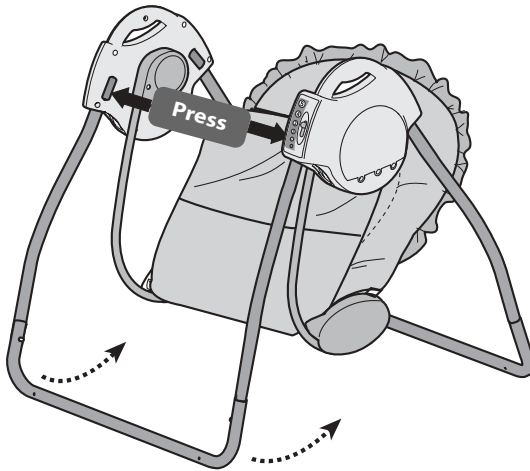

- Press the frame release buttons on the inside of the frames and push the front legs inward.
- Press the frame release buttons on the inside of the frames and push the back legs inward.

# Care

The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame can be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the frame.

## **To remove the pad:**

- Lift the footrest and remove the pad lower pocket
- Push the waist belts back through the pad.
- Slide the pad upper pocket off the seat back tube.

## **To re-assemble the pad:**

- Refer to assembly steps 8 and 9.

## *FCC Note (United States Only)*

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### **For other countries, outside the United States:**

**Canada:** call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.