



Set-Top Box Configuration Guide

Amino x4x, x5x and x0xx set-top boxes

August 2018

Document no. AM-000500-TC v121

Copyright

Set-top box Configuration Guide

August 2018

version 121

© Amino Communications Ltd. 2018

At the time of issue this guide applies to the set-top boxes (STBs) and software versions listed below:

Platform	Software version	Notes
x4x STBs		
A129 A140 H140 A540PVR M540	3.3.2	Software version 3.3.2 is an upgrade that runs on all STBs listed under x4x STBs
x5x STBs		
A150	5.7.4	
x0xx STBs		
L1050	4.4.12	

Amino, AmiNET, and the Amino logo are trademarks of Amino Communications Ltd. All other trademarks are the property of their respective owners.



Important Note

Modifying the product configuration or hardware may result in the product being in a state whereby local laws are violated. Amino Communications Ltd cannot be held responsible for user changes that result in the product violating local laws.

This guide describes components that undergo continual development. The information in this guide is subject to change without notice at any time.

There may be visual deviations between graphics in the guide and the released software.

Comments about the documentation are welcome. Please submit feedback to docs@aminocom.com.

For further information about Amino or Amino products, please e-mail info@aminocom.com.



This guide is to be used in conjunction with the STBs and software versions listed above. It does not refer to older STBs, unless required for clarification of a particular instruction.

Amino currently supports the Opera browser version 11 (for x4x STBs) and version 12 (for x5x STBs from v4.0.0 and x0xx STBs from v3.4.0).

Contents

Introduction	11
Chapter 1— Configuring STBs	15
1.1 Configuration files	16
1.1.1 Settings file	16
1.1.2 Hostname file	16
1.1.3 DHCP server	16
1.1.4 Password	17
1.1.5 NOR Flash	17
1.1.6 Usersettings file	17
1.2 Configuration techniques	17
Chapter 2— STB configuration files	21
2.1 The STB settings file	22
2.1.1 How to view or change settings	22
2.1.2 Example settings file	22
2.1.3 Settings file contents	23
2.2 NOR Flash configuration	23
2.2.1 How to view or change settings	23
2.2.2 Example script to set NOR Flash settings	23
2.2.3 NOR Flash - list of settings	23
2.3 Channel changer application	24
2.4 Trusted domains file	24
2.4.1 How to view or change settings	24
2.4.2 Example trsdmns.txt file	25
2.4.3 Trusted domains file contents	25
2.5 Usersettings file	25
2.5.1 How to view or change settings	26
2.5.2 Example usersettings file	26
2.5.3 Usersettings file contents	26
2.6 Hostname file	26
2.6.1 How to view or change settings	26
2.6.2 Example Hostname file	27
2.6.3 Hostname file contents	27
2.7 Function keys file	27
2.7.1 How to view or change settings	27
2.7.2 Example fkeys.conf file	28

2.8	Browser configuration files	28
2.8.1	How to view or change settings for Opera	28
2.8.2	Using the Ekioh browser with Beenius middleware	29
2.9	The no_analog file	29
2.10	HDCP policy file	29
2.11	Dynamic DHCP settings file	30
2.11.1	How to view settings	30
2.11.2	DHCP - list of settings	30
2.12	File access policy	31
2.12.1	The policy file	31
Chapter 3	Using STBremoteconf	33
3.1	STBremoteconf	34
3.1.1	How it works	34
3.2	Installation	35
3.2.1	Before you start	35
3.2.2	Installing STBremoteconf	35
3.2.3	Installing prerequisite Perl modules	36
3.2.4	Upgrading STBremoteconf	36
3.2.5	Removing STBremoteconf	37
3.3	Sending commands with STBremoteconf	37
3.3.1	To send a command at the command line	37
3.4	Using scripts to control STBremoteconf	38
3.5	STBremoteconf parameter syntax	39
3.5.1	<host> argument	40
3.5.2	Save	40
3.5.3	<command_options> argument	40
3.5.4	Overview of command options	41
3.6	List of commands	42
3.7	STBremoteconf key changing	57
3.7.1	Requirements	57
3.7.2	Preparing a new STBrc-KEY	58
3.7.3	PC configuration	58
3.7.4	Testing STBremoteconf with the new keys	58
Chapter 4	Using libconfig	61
4.1	Before you start	62
4.2	libconfig configuration areas	62
4.2.1	NOR Flash configuration	62
4.2.2	Settings configuration	62
4.2.3	Hostname configuration	63
4.2.4	Usersettings configuration	63
4.2.5	DHCP configuration	63
4.3	Using libconfig to get and set values	63
4.3.1	libconfig-set command syntax	63
4.3.2	To set a value via Telnet	64
4.3.3	To set a value using commands in a script	65
4.3.4	To set a value using the JMACX API	65
Chapter 5	Customising a software upgrade image	67
5.1	Configuring image components	68

5.1.1	To configure image components	68
5.2	Editing the flashcontents file	69
5.2.1	flashcontents file	69
5.2.2	File naming	69
5.3	Creating an upgrade script	69
5.3.1	To use an upgrade script	70
5.4	Enabling remote log-in tools	70
5.4.1	Remote log-in tool availability	70
5.5	Customising graphics	71
5.5.1	Graphics used by the STB	71
5.5.2	Replacing the default graphics with your own	71
Chapter 6—	STB configuration pages for Opera 11 onwards	73
6.1	About the STB configuration pages	74
6.2	Getting started	75
6.2.1	Using a keyboard or remote control with the configuration pages.....	76
6.3	Preferences pages	76
6.3.1	Changing the Preferences pages settings	76
6.3.2	Using the Preferences pages.....	78
6.3.3	Video	78
6.3.4	Audio	81
6.3.5	Subtitles	82
6.3.6	RF (not available on all models)	82
6.3.7	Info	83
6.3.8	Restart.....	83
6.3.9	Sys Prefs (H140)	83
6.4	Management pages	83
6.4.1	Using the Management pages	84
6.4.2	Hardware	85
6.4.3	Software	86
6.4.4	Browser.....	87
6.4.5	Video	88
6.4.6	IR	89
6.4.7	Network	90
6.4.8	DHCP	91
6.4.9	Upgrade.....	92
6.4.10	Restart.....	93
6.4.11	TVI (H140).....	93
6.4.12	User Prefs	94
6.5	Configuration page settings for Opera 11	94
6.5.1	Preferences pages	94
6.5.2	Management pages	95
Appendix A—	NOR Flash settings	99
A.1	NOR Flash settings	100
A.2	Primary and Secondary video outputs	108
A.2.1	OUTPUT_RESOLUTION.....	108
Appendix B—	Settings file contents	111
B.1	Available settings	112
B.2	Remote layout options	145

B.3	LED Configuration operation by STB product	146
B.3.1	STB in ACTIVE mode	146
B.3.2	STB in STANDBY mode	146
B.4	Volume control	146
Appendix C	DHCP file contents	149
C.1	DHCP file settings	150
Appendix D	Media source URLs and HLS	153
D.1	Media source types	154
D.1.1	RTSP	154
D.1.2	IGMP	155
D.1.3	HTTP	155
D.1.4	Streaming MP3s	156
D.1.5	UDP	156
D.2	Media source attributes	156
D.3	HTTP Live Streaming (HLS)	158
D.3.1	Overview of HLS	158
D.3.2	HLS playback using JMACX functions	160
D.3.3	HLS Debug	161
Appendix E	Using the configuration techniques	163
E.1	Configuring image components	164
E.1.1	How to configure image components	164
E.2	Configuring a large deployment	165
E.2.1	Prerequisites	165
Appendix F	Recovery from invalid video mode	167
F.1	Invalid video modes	168
F.2	Invalid video mode recovery	168
F.2.1	How it works	168
Appendix G	Video output formats	169
G.1	A129, A140, H140, A540PVR, A150	170
Appendix H	Pairing an IR remote control with an STB	171
H.1	On the grey Amino IR remote control	172
H.2	On the AVC 'Boat' IR remote control	173
H.2.1	Pairing the STB to the remote control	173
H.3	On the SRC 'Willow' IR remote control	174
Appendix I	STBremoteconf stats command	175
I.1	Usage	176
I.2	Example	176
I.3	Terms explained	176
I.4	MAC address	176
I.5	AVCore	176
I.6	Netstat	179
I.7	Meminfo	179
I.8	Example of a stats output	181
Appendix J	Frequently Asked Questions (FAQs)	183
J.1	Leds	184
J.2	STBremoteconf	184
J.3	Recovery image	184

J.4	IR and remotes	184
J.5	Miscellaneous	185
J.6	Using VLC	186
J.7	Hard Disk Drives and recording	186
J.8	Debug	187
Index	189

Introduction

About this document

This guide applies to all current set-top boxes (STBs) listed on the [Copyright](#) page. STB management offers various means of editing and reading the STB configuration, and controlling STB operation. This guide describes the configurable settings and options available. It assumes you have an STB and access to a suitable software release. It also assumes a basic understanding of the technologies involved, which include Linux command line operation.



Important Note

Modifying the product configuration or hardware may result in the product being in a state whereby local laws are violated. Amino Communications Ltd cannot be held responsible for user changes that result in the product violating local laws.

For information on installing and upgrading Amino software, see the *Software Installation and Upgrade Guide* (AM-000501-TC).

Many of the control and customisation options described in this guide can also be implemented using JavaScript Media Access Control Extensions (JMACX) or C API calls using the AmiNET SDK. For more information refer to the *JMACX API specification* (AM-000502-TC) and the *SDK User Guide* (AM-001394-TC).



For information on functionality and STBs that are no longer supported, refer to earlier versions of this guide.

Structure of this document

Chapter	Outline
Introduction	General introduction.
Chapter 1, "Configuration methods"	This chapter introduces the options available for configuring STBs, and details how to configure certain configuration areas.
Chapter 2, "STB configuration files"	This chapter lists some of the main STB configuration settings.
Chapter 3, "Using STBremoteconf"	This chapter introduces <code>STBremoteconf</code> and explains how to use it to configure and control an STB.
Chapter 4, "Using libconfig"	This chapter introduces <code>libconfig</code> and explains how to construct commands to view and/or edit STB configuration.
Chapter 5, "Customising a software upgrade image"	This chapter describes how to customise the software upgrade before it is signed and loaded to the STB.
Chapter 6, "STB configuration pages for Opera 11 onwards"	This chapter introduces the Management and Preferences pages for Opera 11 builds and describes how to use them to configure and control an STB.
Appendices	
Appendix A, "NOR Flash settings"	Provides configuration examples and other supporting information for NOR Flash.
Appendix B, "Settings file contents"	Provides configuration examples and other supporting information for Settings file instructions.
Appendix C, "DHCP file contents"	Provides configuration examples and other supporting information for <code>dhcp</code> instructions.
Appendix D, "Using the configuration techniques"	Gives methods of using the configuration techniques.
Appendix E, "Media source URLs and HLS"	Provides information on constructing media stream URLs, plus information about HTTP Live Streaming (HLS).
Appendix F, "Recovery from invalid video mode"	Describes a method of recovering from setting an invalid video mode.
Appendix G, "Video output formats"	Lists the video output formats for the STBs.
Appendix H, "Pairing an IR remote control with an STB"	Describes the method of pairing an IR remote control with an STB.
Appendix I, "STBremoteconf STATS command"	Describes the descriptors returned by the <code>STBremoteconf stats</code> command.
Appendix J, "Frequently Asked Questions (FAQs)"	

Audience

This guide is intended for computer-literate people, who have a working knowledge of computing and networking principles. It assumes you have an STB and can obtain a suitable software release from the Amino support site, and that you have already performed a basic installation of an Amino STB. It also assumes a basic understanding of the technologies involved, which include:

- IP networking
- DHCP servers
- HTTP servers
- Multicast and unicast

and the following Linux usage and administration skills:

- Performing a SSH login.
- Contrasting full and relative pathnames.
- Understanding the file system hierarchy.
- Handling files with `cp` and `mv`.
- Making and navigating directories.
- Listing attributes with `ls`.
- Identifying multiple users and groups.
- Interpreting file and directory modes.
- Adjusting access permissions: `chmod`.
- Raising privilege with `su`, `sudo` and `setuid`.
- Extracting lines with GNU `grep`.
- Saving command output into files.
- Creating and modifying files with `vi` or `emacs`.
- Exporting variables to the environment.
- Calling scripts as a command.
- Monitoring processes with `ps`.
- Mounting storage devices.
- Measuring free space.
- Working with `tar` archives.

Operating System

The operating system required is a 32 bit x86 (ia32) Debian Squeeze, with bash as the default shell and Linux kernel 2.6.

It is possible to get the tools working on 64 bit Linux operating systems as long as the 32 bit compatibility libraries are installed (ia32-libs), however this is not a configuration supported by Amino.

Likewise, it is possible to use variations of x86 Linux other than Debian and to use a virtual machine such as VMWare or VirtualBox. Again, these configurations are not officially supported by Amino. Distributions other than Debian may have different pre-requisites: they may require a certain cluster package or the addition of optional packages. Amino is currently unable to advise further on this subject.



This is **not** the embedded operating system in the STB.

Document conventions

The following document conventions are used:

Formatting	Usage
<...>	Indicates a value that you need to replace with a system specific value (except where used in HTML or XML examples, where it is used in tags, as normal).
[...]	Indicates optional parameters - for example in commands or functions.
... ...	Indicates choices – for example where an input can take one of a number of values.
<code>code font</code>	Indicates input and output values (for example, at a command line), as well as function, configuration, parameter and file names.
bold text	Used for emphasis and to indicate specific key presses. For example: Press the Esc key.
grey text	Commands or settings which are not in general use (for example, configuration settings that are reserved for Amino internal use).
blue text	Cross-reference (this is a “clickable” hyperlink if you are viewing the document electronically).

Document history

Issue	Date issued	Changes
121	November 2017	Changes and updates for x5x releases 4.5.0 to 5.7.1. Changes and updates for x0xx releases 4.4.6 to 4.4.12. Added new settings <code>PROVISIONING_INFO</code> and <code>THINK_BOOTMODE</code> .
120	October 2016	Changes and updates for x4x release 3.3.2. Changes and updates for x5x releases 4.1.2 to 4.4.3. Changes and updates for x0xx releases 4.3.3 and 4.4.4.
119	July 2014	Changes and updates for x4x releases 3.2.1 to 3.3.1. Information relating to x5x release 4.0.0 and x0xx release 3.3.5 added. References to x3x STBs now removed.
118	May 2013	Changes and updates for x4x releases 2.9.0.
117	April 2013	Changes and updates for x4x releases 2.7.1, 2.7.2, 2.8.1 and 2.8.2
116	October 2012	Changes and updates for x4x release 2.6.2. Changes and updates for x3x release 0.18.10. Chapter on using configuration pages for Opera 9 now removed (classed as legacy information).
115	February 2012	Corrections: <code>stbremoteconf SETCONFIG</code> and <code>GETCONFIG</code> syntax corrected. <code>NOR FLASH</code> typo corrected to <code>NORFLASH</code> in code examples syntax.
114	December 2011	Changes and updates for x4x releases 2.2.0 - 2.2.6, 2.3.0 - 2.3.5 and 2.4.2 - 2.4.3. Changes and updates for x3x releases 0.18.3 - 0.18.6.
113	January 2011	Added RTSP server source address filtering information (settings file)
112	December 2010	Changes and updates for version 0.17.5 and 0.17.6 (for x3x STBs) releases and version 2.0.0 and 2.1.0 releases (for x4x STBs).
111	November 2010	Changes and updates for version 0.17.3 (for x3x) and version 1.0.0 (for x4x) releases. Not issued - incorporated into issue 112.
110	August 2010	Changes and updates for version 0.17.2 release.
109	April 2010	New settings options added.
108	March 2010	General updates and corrections.
107	November 2009	New appendix listing <code>DHCPD</code> options added. <code>Netconf</code> appendix updated. Galio support information removed. Please see earlier version of this guide for information relating to the Galio browser.

Issue	Date issued	Changes
106	November 2009	Chapter 7 added describing the new management and preference pages Configuration page settings are now included in Chapters 6 and 7. Appendix A, B and C have been updated. Guide updated for Opera 9 builds. Appendix G and H are both new. Support information for the AmiNET 120 and 124 removed. Please see earlier version of this guide for information relating to those platforms.
105	June 2009	Removed confidentiality requirement. Password protection warnings added.
104	June 2009	Appendix G updated. Minor corrections.
103	May 2009	General Updates. Board Revision Numbers updated. STBremoteconf REFORMAT added.
102	January 2009	File Access Policy information added. OUTRES info updated. Summary tables updated. Scripts to control STBremoteconf added. SAVE command info corrected.

Chapter 1—Configuration methods

In this Chapter:

[1.1 Configuration methods](#)

This chapter provides an outline of the configuration techniques. More detailed descriptions will be provided in later chapters.



Not all settings described in this document are available to all STBs. An STB may or may not use a particular configuration option depending on the software build used to create the software image.

1.1 Configuration methods

STB management offers various means of configuring and controlling basic STB operation, for example initiating a software upgrade or a reboot. The techniques that make this possible are described below:

- **STBremoteconf** – A remote configuration tool that enables you to send configuration and control commands across the network to one or more STBs.
- **Configuration pages** – The local configuration pages can be accessed using an Amino Infra-red (IR) keyboard and television display to change configuration settings and carry out simple commands such as rebooting and initiating software upgrades. The term “Configuration pages” encompasses both the Management pages (for administrators) and the Preferences pages (for users). Some software releases with certain middlewares have their own configuration pages.
- **Imagecomponents** – The imagecomponents are the set of files that a software upgrade image is built from. These include configuration files and graphics files (for example, those used in the display to show that the STB is loading new software). In [Table 1.2](#) below, changing `imagecomponents` means editing the contents of the `imagecomponents` directory before creating and signing a new upgrade image. If new files are added they should be added to the `flashcontents` file.
- **libconfig commands (via Telnet/SSH)** – If an STB has either the Telnet or SSH component installed this can be used to log in to it remotely and carry out configuration using `libconfig` commands.



These components are usually not installed for security reasons, so you will need to add them to the software image installed on the STB if you want to use them.

- **JMACX (JavaScript)** – The JavaScript Media Access Control Extensions (JMACX) API offers a full set of functions for controlling STB operation via JavaScript embedded in web pages. See the *JMACX API specification* (AM-000502-TC) for more information on using JMACX.

[Table 1.1](#) summarises which configuration files are used with which techniques.

Configuration files	Technique				
	STBremoteconf	libconfig commands	JMACX API	Configuration pages	Image components
SETTINGS	Y	Y	Y	Y	Y
HOSTNAME			Y	Y	Y
DHCP (see note below)					
TRUSTED DOMAINS			Y	Y	Y
CHANNELS			Y	Y	Y

Table 1.1:

Configuration files	Technique				
	STBremoteconfig	libconfig commands	JMACX API	Configuration pages	Image components
FUNCTION KEYS			Y		Y
BROWSER CONFIGURATION			Y	Y	Y
PASSWORD					Y
NOR Flash	Y	Y	Y	Y	Y

Table 1.1:



The use of DHCP is as an ON/OFF configuration: configuration values supplied by the DHCP server are read only.

The configuration techniques described in the tables below are each suited to particular circumstances and contexts. For example, the Configuration pages offer local configuration, while `STBremoteconf` enables remote configuration. Editing image component files before the software is upgraded enables the same configuration to be set on multiple STBs, whereas changes via Telnet can only apply to a single STB.

Context	STBremoteconf	libconfig commands	JMACX API	Configuration pages	Image components
Before software is loaded					Y
After software is loaded	Y	Y	Y	Y	
Remote	Y	Y			Y
Local			Y	Y	
Single STB	Y	Y	Y	Y	Y ^a
Large deployment	Y ^b		Y		Y
Test settings	Y	Y		Y	

Table 1.2:

- a. Not generally recommended, unless performing operations that cannot be done another way, for example, adding a client program.
- b. Not recommended – settings are only received if the STB is powered.

In [Table 1.3](#) below:

- *Reflash* refers to deleting all the contents of the NAND flash and completely replacing the main software image. All configuration options, except those stored in NOR Flash, will be replaced with the configuration contained in the new software image.

- *Upgrade* refers to replacing just the main software image. In this case, some of the configuration files, for example the user settings, can be preserved. This can be controlled when the software image is built.

Operation	STBremoteconf	libconfig commands	JMACX API	Configuration pages	Image components
read configuration	Y	Y	Y	Y	Y
write configuration	Y	Y	Y	Y	Y
reboot	Y		Y	Y	
upgrade software	Y		Y	Y	
reflash	Y		Y	Y	

Table 1.3:

Chapter 2—STB configuration files

In this Chapter:

- 2.1 The settings file
- 2.2 NOR Flash configuration
- 2.3 Channel changer application
- 2.4 Trusted domains file
- 2.5 User settings file
- 2.6 Hostname file
- 2.7 Function keys file
- 2.8 Browser configuration files
- 2.9 The no_analog file
- 2.10 HDCP policy file
- 2.11 Dynamic DHCP settings file
- 2.12 File access policy
- 2.13 Password

This chapter describes the configurable settings and options available.



In all the following instructions, `<release_name>` indicates the full name of the software release image directory that contains your software release. For example, `Ax5x-4.3.3-Opera12` installs in `4.3.3-Ax5x-opera12`, hence `<release_name>` is `4.3.3-Ax5x-opera12`.

Configuration settings that remain during STB reboots and power-cycles are generally stored in configuration files that can be read or edited via the provided APIs (SDK or JMACX), administration tools or in some cases by directly editing the files. The exception is the NOR Flash, which can only be configured via the administration tools.



You cannot reconfigure files that are already on the STB. If you need to change a file you must reconfigure it then load it onto the STB.

2.1 The settings file

The `settings` file contains most STB configuration items. The file provides various default settings for the STB software. Some of these can then be over-ridden by user settings held in the `usersettings` file. Configuration held in the `usersettings` file takes precedence over the `settings` file contents, but not all items in the `settings` file can be over-ridden. See details on `usersettings` and which configuration items it supports in the `usersettings` section of this document.

The upgrade system can be configured to specify whether, on an upgrade, the settings file on the STB should be retained or replaced by one held in the new software upgrade image. See the *Installation and Upgrade Guide* (AM-000501-TC) for information on how to control this behaviour.

2.1.1 How to view or change settings

An initial settings file is supplied as part of a software release, in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

You can edit the `settings` file directly or replace it before creating a software upgrade image. Alternatively, you can use the various administration tools available to change settings once software is loaded to the STB. Management pages, `STBremoteconf` and `libconfig` (for example, via Telnet/SSH) can all change values in this file.

Once loaded on the STB, the settings file is stored in the following location:

```
/mnt/nv/
```



The settings used depends on the software and hardware build.

2.1.2 Example settings file

```
DOLBY_RF=" "
REMOTECONF=" "
IGMP_END_TIMEOUT="30"
IGMP_START_TIMEOUT="30"
```

```

RTSP_SCALE="6"
BROWSER_ENABLECOOKIES="Y"
BROWSER_HOMEPAGE="about:/start.htm"
BROWSER_HELPPAGE=""
HTTP_PROXY_IGNORE=""
HTTPS_PROXY=""
HTTP_PROXY=""
USE_PROXY="Y"
TOOLBAR_STATE="1"
#####DISPLAY_MODE="letterbox"
DISPLAY_MODE="panscan"
RTSP_END_TIMEOUT="6"
RTSP_START_TIMEOUT="4"
RTSP_SERVER="ncube"
DELAY_FACTOR="4"
REPEAT_RATE="8"
MAXIMUM_VOLUME="100"
MINIMUM_VOLUME="0"
DEFAULT_VOLUME="100"
FULLSCREEN="N"

```

2.1.3 Settings file contents

See [Appendix B, "Settings file contents"](#).

2.2 NOR Flash configuration

The NOR Flash contains settings required by the ROM. In some cases, this can include static network settings.

2.2.1 How to view or change settings

NOR Flash settings are not edited via a separate configuration file, instead, they can be accessed via the administration tools.

If you want to define values before loading the software image to the STB, you can do so by adding `libconfig` calls to the `upgrade.sh` file. This is an upgrade script that the STB executes when the new software image is loaded. If this file does not already exist, create it in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

The file will then be included when you create a software upgrade image. The NOR Flash settings example below gives an example of how to add `libconfig` calls to the upgrade script. See [Chapter 4, "Using libconfig"](#) for general information on using `libconfig`.

Alternatively, you can use the administration tools available to change settings once software is loaded onto the STB.



The settings used depend on the software and hardware build.

For more information on which settings are used by Opera, see [Appendix A, "NOR Flash settings"](#).

2.2.2 Example script to set NOR Flash settings

NOR Flash settings cannot be edited via a configuration file, instead they need to be changed directly. The following example shows how to add `libconfig` calls that change NOR Flash settings to the upgrade script (`upgrade.sh`). This is included in the software upgrade image, and executed when the software is loaded on the STB.

The settings in this example define static multicast values:

```
#!/bin/sh
libconfig-set NORFLASH.MULTICAST_BOOTSTRAP_GROUP 239.255.1.1
libconfig-set NORFLASH.MULTICAST_BOOTSTRAP_PORT 11111
libconfig-set NORFLASH.MULTICAST_UPGRADE_GROUP 239.255.1.2
libconfig-set NORFLASH.MULTICAST_UPGRADE_PORT 11111
```

2.2.3 NOR Flash - list of settings

For further information see [Appendix A, "NOR Flash settings"](#).

2.3 Channel changer application

If you need a basic channel changer application, some example HTML code is available for download from the Amino Support Site at [Online Support > Downloads > JMACX and Application Development > channel_changer.tgz](#)

The easiest way to use this is to install it on a webserver editing the `init` function (below) to include your stream addresses:

```
function init()
{
    /* Setup channel list */
    add(0, "igmp://239.1.1.1:11111", "description1");
    add(1, "igmp://239.1.1.2:11111", "description2");
    add(2, "igmp://239.1.1.3:11111", "description3");
    add(3, "igmp://239.1.1.4:11111", "description4");
    add(4, "igmp://239.1.1.5:11111", "description5");
    addChannelList(0,5); // the 5 should be replaced with the number
of channels you are adding above
    //addChannelList();
    /* Select initial stream */
    start(0);
}
```

Set the homepage on your STB to point to this page when they boot up.

2.4 Trusted domains file

The `trsdmns.txt` file is not normally supplied as part of a software release, instead, you will need to create this manually, as shown in [2.4.1](#). The `trsdmns.txt` file defines trusted domains and specifies whether JMACX and Macrovision are enabled for each. The `trsdmns.txt` file can be edited manually on the STB using the VI text editor.



The trusted domains file is only used with the Opera browser.

2.4.1 How to view or change settings

For further details, see

[Chapter 6, "STB configuration pages for Opera 11 onwards"](#)

If you want to define trusted domains before loading the software image to the STB, you can do so by creating the file in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

The file will then be included when you create a software upgrade image.

Alternatively, you can use the various administration tools available to change settings once software is loaded to the STB.

Once created or loaded on the STB, the `trsdmns.txt` file is stored in the following location:

```
/mnt/nv/
```

2.4.2 Example trsdmns.txt file

```
3 macrovision.aminocom.com
2 *.bbc.co.uk
2 *.aminocom.com
0 *
```

2.4.3 Trusted domains file contents

The file contains a list of trusted domains, each one on a separate line, with a code that indicates what is enabled. The format for each line is as follows:

```
<code> <url>
```

where:

<code>	Code that indicates what is enabled for the specified domain. Values can be as follows: 0 – neither Macrovision nor JMACX enabled 1 – Macrovision enabled, JMACX disabled (unlikely to need setting) 2 – JMACX enabled, Macrovision disabled 3 – Both JMACX and Macrovision enabled
<url>	The URL for the trusted domain. This can use asterisks as wildcards. For example: <pre>3 *.aminocom.com</pre>

Important: The rules specified in the `trsdmns.txt` file are applied in the order they are stated, so when adding domains ensure that the rules are applied as you intend.

For example, in the following file, 3 specifies that Macrovision and JMACX are enabled for the `macrovision.aminocom.com` domain, and 2 specifies that only JMACX is enabled for any other `aminocom.com` domain:

```
3 macrovision.aminocom.com
2 *.aminocom.com
```

In the following alternative example - with the same settings re-ordered - only JMACX is enabled for any aminocom.com domain, and so Macrovision is not enabled for macrovision.aminocom.com, even though 3 would normally enable Macrovision - since Macrovision for this domain has already been ruled out in the previous line:

```
2 *.aminocom.com
3 macrovision.aminocom.com
```

2.5 Usersettings file

The `usersettings` file contains settings that the STB user can control (through the Preferences pages).



These override the values specified for the same settings in the `settings` file.

2.5.1 How to view or change settings

The `usersettings` file is not normally supplied as part of a software release, instead, it is created when the user first configures preferences via the Preferences pages.

If you want to define local user settings before loading the software image to the STB, you can do so by creating the file in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

The file will then be included when you create a software upgrade image.

Alternatively, you can use the various administration tools available to change settings once software is loaded to the STB. Preferences pages and `libconfig` (via Telnet/SSH) can be used to change values in this file.



Values set via the `usersettings` file override the value for the same configuration setting elsewhere, for example, in the `settings` file.

Once created or loaded on the STB, the `usersettings` file is stored in the following location:

```
/mnt/nv/
```



The settings used depend on the software build.

For more information about which settings are used by Opera 11, see [Chapter 6, "STB configuration pages for Opera 11 onwards"](#)

2.5.2 Example usersettings file

```
DOLBY_RF=""
DISPLAY_MODE="panscan"
SUBTITLES_SECOND_LANG="ita/it"
SUBTITLES_PREF_LANG="eng/en"
SECONDARY_LANG="fra/fre/fr"
PREFERRED_LANG="eng/en"
```

2.5.3 Usersettings file contents

The `usersettings` file can contain any of the settings normally specified in the `settings` file. Software builds for some browsers write certain settings to the `usersettings` file.

2.6 Hostname file

The `hostname` file contains just a single value, specifying the name of the STB.

2.6.1 How to view or change settings

The `hostname` file is not normally supplied as part of a software release. It is created when you specify a hostname via the Management pages.

If you want to define a hostname before loading the software image to the STB (not recommended), you can do so by creating the file in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

The file will then be included when you create a software upgrade image. Alternatively, you can use the various administration tools available to change settings once software is loaded to the STB. Management pages and `libconfig` (via Telnet/SSH) can be used to change values in this file.

Once created or loaded on the STB, the `hostname` file is stored in the following location:

```
/etc
```

2.6.2 Example Hostname file

The `hostname` file contains just a single word that specifies the name of the STB, for example `stb001` or the default `AMINET`.

2.7 Function keys file

The `fkeys.conf` file specifies how the STB responds to remote control keys. If you want to change the configuration, you are not recommended to edit this file directly. Instead, it is recommended that a JavaScript key handler is used to determine the functionality of the remote control keys. Although the JMACX `SetKeyFunction` and `SaveKeyFunction` commands can be used (see [How to view or change settings](#) below), these two commands are now deprecated.



`fkeys.conf` was deprecated in software version 2.5.7, but has been reinstated from version 2.6.1. If you are using version 2.5.7 you should use the standard JavaScript key handling mechanisms to provide equivalent functionality in your portals. Alternatively, the Opera `user.js` file can be used to provide system-wide key handling.

2.7.1 How to view or change settings

An initial `fkeys.conf` file is supplied as part of a software release, in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

Use the JMACX functions to set the key functions:

```
ASTB.SetKeyFunction
ASTB.SaveKeyFunction
```

See the *JMACX API specification* (AM-000502-TC) for more information, and for a list of the functionality that can be mapped to keys.

2.7.2 Example fkeys.conf file

The following section shows a **partial** example of a `fkeys.conf` file, containing entries for IR keyboard and the Amino IR remote control.

<...> shows where several lines have been removed to reduce the size of this example. For a complete list of all the remote control key codes, see the *JMACX API specification* (AM-000502-TC).

```
# First, the keyboard mappings
0x40000072 1      # Browser Home
0x40000007 17     # Help
0xC0000001 1      # Browser Home
0x40000066 3      # Browser Back
0x40000067 4      # Browser Forwards
0x40000068 6      # Browser Reload
0x40000069 5      # Browser Stop
0x4000006A 2      # Browser Goto
<...>

# Now the amino remote mappings
0x40000003 0      # Last Ch
0x4000012C 18     # Channel Up= Browser Ch Up
0x4000012E 19     # Channel Down= Browser Ch Down
0x4000012F 41     # Volume up
0x40000130 42     # Volume down
0x40000131 40     # Mute
0x40000132 43     # Power
0x40000144 16     # Menu= Browser Preferences
<...>
```

2.8 Browser configuration files

Software releases will normally include the configuration file for the browser. For Opera it is `opera.ini`. In some builds, the STB reads some of its settings from this file. Refer to the documentation for your browser for details of the browser configuration file settings.

2.8.1 How to view or change settings for Opera

The browser configuration file for Opera is the `opera.ini` file. This is located in the `opera_home.tgz` in `<release_name>/upgradeimage/imagecomponents/`.

Once created or loaded on the STB, the browser configuration file is stored in `/mnt/nv`.

Also see [Appendix B, "Settings file contents"](#) for browser configuration settings that the configuration pages read from and write to. For a full explanation of the Opera Settings File see <http://www.opera.com/support/usingopera/operaini/>

2.8.2 Using the Ekioh browser with Beenius middleware

The following parameters are mandatory for running the Ekioh browser. If omitted, performance may be degraded or SSL connectivity affected (At present, SSL is not used).

STB vendors should include these parameters in the `ekioh.cfg` file, included in the STB software image:

```
browser.image.accelerate.all:true
browser.image.rendering.quality:medium
font.accelerate:true
font.cache.capacity:1MB
graphics.filters.accelerate:true
svg.image.accelerate.png:true
svg.image.accelerate.jpg:true
svg.image.accelerate.bmp:true
svg.image.load.timeout:0
svg.jsheap.full.warning:1MB
svg.jsheap.size:16MB
ssl.cacpath:/<path_to_permanent_storage>/ekioh/ssl
ssl.cacfile:/<path_to_permanent_storage>/ekioh/ssl/<ca_pem_file>
ssl.certs.js.install:true
ssl.validate.hostname:false
ssl.verify:false
svg.database.path:/<path_to_permanent_storage>/ekioh
svg.webstorage.database:/<path_to_permanent_storage>/ekioh/ekioh.db
```

For first time users who are not familiar with modifying software images, there is a publicly available pre-signed Ekioh image with these changes made here:

<http://stbsupport.aminocom.com/upgrade/3.2.1.beenius.mcfs>

2.9 The no_analog file

If you add the `no_analog` file to your image components it will disable video from the analogue output of the STB after upgrading. Disabling the analogue output can be a requirement for some hospitality deployments, or for content providers who require that content can only be played via HDMI.



If you add a `no_analog` file to your image and upgrade, you can only remove the no analogue feature by removing the file from your image, re-signing the image and upgrading again without the file present.

2.10 HDCP policy file

The `hdcp_policy` file allows you to override the default state of HDCP authentication.

For x4x STBs, the default state of HDCP authentication is off.

For x5x and x0xx STBs the default state of HDCP authentication is on.

The `hdcp_policy` file is a binary file that may contain either a 1 or 0 value and must be added to the `upgradeimage/imagecomponents` directory of an AmiNET software release. The `hdcp_policy` file must be read-only.

The setting used within the HDCP policy file indicates that HDCP is either always on or always off (but note that HDCP may be dynamically enabled or disabled by the middleware using an SDK).

This file should contain:

“0” to disable HDCP

“1” to enable HDCP and restrict component output to SD

“2” to control HDCP via the media control API

2.11 Dynamic DHCP settings file

The dynamic network and multicast upgrade settings retrieved from the DHCP server are stored in a file called `dhcpcd-eth0.info`. These values are only set if the STB uses dynamic network settings, otherwise, the static values are defined in the NOR Flash. The DHCP values are shown in [Appendix C, “DHCP file contents”](#) and are read-only.

2.11.1 How to view settings

The DHCP values are stored in the following location on the STB:

```
/var/dhcpc/dhcpcd-eth0.info
```

The values can be accessed via `libconfig` commands (using Telnet/SSH) or JMACX calls.

2.11.2 DHCP - list of settings

The full list of DHCP settings available depends on the DHCP server installed and the vendor options configured, that is, it depends on what values the DHCP server sends to the STB. The following table describes the main settings that are generally available.

All values are read-only.

Setting	Description
BROWSER_HOMEPAGE	The address of the page set as the homepage.
DI	The deployment index.
DIMIN	The minimum deployment index
DNS	The IP address of the DNS that the STB should be using.
DOMAIN	The network domain.
GATEWAY	The gateway for the STB.
IPADDR	The IP address of the STB.
LEASE	The DHCP lease time.
MULTICAST_FS_ADDR	The multicast file system IP address.
MULTICAST_FS_PORT	The multicast file system port.
NETMASK	The netmask for the STB.

Setting	Description
REBIND	The DHCP rebind time.
RENEWAL	The DHCP renewal time.

2.12 File access policy

The file access policy is a security feature used to control which files the user can access through the web browser. The default policies shown in [Section 2.12.1](#) are hard coded in the system. For additional policies a file is created called `policy.def` in which you add any other local files that you might want to access – if they are not in the 'default' list (such as the Management pages).

All access policies are loaded from the file `/mnt/nv/policy.def` to avoid conditional compilation.

This approach means that the only changes to default policy are needed in the policy file and in some cases the policy file will not be needed at all.

2.12.1 The policy file

Each line of this file is treated as separate policy `<ACCESS_POLICY> : <ACCESS_URL>`, unless it begins with `#` in which case it will be treated as a comment.

`ACCESS_POLICY` has to be one of the following:

- `REJECT`: Access to URL should be rejected
- `ACCEPT`: Access to URL should be accepted
- `PASSWORD`: Access to URL should be accepted only if a valid password was entered
- `FIRST_PAGE_ACCEPT`: Access to URL should be accepted only if it is first page accessed by a browser
- `FIRST_PAGE_PASSWORD`: Access to URL should be accepted only if it is first page accessed by a browser **and** a valid password was entered
- `IGNORE`: Access to URL will be granted, but policy will not invalidate password-protection on entering new URL.

All policies are checked in the same order in which they are located in the policy file, the first `ACCESS_POLICY` from matching policy is returned.

If all policies are checked and no match was found, then the `REJECT` is returned.

A policy is matching if its `ACCESS_URL` is the same as the URL that is being checked, unless `ACCESS_URL` ends with `*` in which case all URLs that begin with `ACCESS_URL` (without `*`) are also found as matched.

2.12.1.1 Default policies

```
#Anything not in this file will be automatically rejected
ACCEPT:file:///etc/htdocs/preference.html
ACCEPT:file:///etc/htdocs/keyboard.html
ACCEPT:file:///etc/htdocs/subtitles.html
ACCEPT:file:///etc/htdocs/video-pref.html
ACCEPT:file:///etc/htdocs/audio-pref.html
ACCEPT:file:///etc/htdocs/pvr.html
ACCEPT:file:///opt/fresco/htdocs/dvbt*
ACCEPT:file:///opt/fresco/htdocs/ozone*
```

```
#  
#Password protect rest of the docs  
PASSWORD:file:///etc/htdocs/*
```

2.12.1.2 Example policy file

```
ACCEPT:file://mnt/nv/startup.html  
ACCEPT:file://mnt/nv/nonetaccess.html
```

2.13 Password

Software releases store the passwords in encrypted form in `/mnt/nv/passwd` and `/mnt/nv/shadow`. During STB boot these are copied to `/etc/passwd` and `/etc/shadow`.

Warning:

Amino strongly recommends that you change the default passwords when deploying our STBs.
See the *Installation and Upgrade Guide* for information on changing these default passwords.

Chapter 3—Using STBremoteconf

In this Chapter:

- 3.1 STBremoteconf
- 3.2 Installation
- 3.3 Sending commands with STBremoteconf
- 3.4 Using scripts to control STBremoteconf
- 3.5 STBremoteconf parameter syntax
- 3.6 List of commands
- 3.7 STBremoteconf key changing

This chapter describes how to set up and use the STBremoteconf Linux client to control and manage your STBs. It assumes a basic multicast upgrade system is installed and that the user is familiar with simple Linux command line functionality. For information on how to set up and manage the multicast upgrade system, see the *Installation and Upgrade Guide* (AM-000501-TC).

3.1 STBremoteconf

STBremoteconf provides a mechanism for remotely configuring and controlling a local network of STBs. It can be run on the command line by sending commands individually to one or more STBs, or commands can be collected into a script to save time. Commands are signed when they are created, so that the STB can check that the command has been sent by an authorised source.

Example functions include rebooting, modifying output modes or updating software, as well as viewing information about the STB.



Information in this chapter relates to STBremoteconf version 1.29 which is the latest version at time of writing. Earlier versions of STBremoteconf may not contain all the features described in this chapter.

3.1.1 How it works

STBremoteconf consists of a client application on a local PC and a server application `STBrcd` installed on the STB. STBremoteconf is operated by entering commands at the command line or by collecting commands into a script.

A normal operational sequence is as follows:

1. **Enter command:** The user enters a command at the command line on the PC. This includes specifying whether the command is to be sent to a single STB, sent to a multicast group, or saved for later use.
2. **Sign command:** The user is prompted to enter the passphrase for the configuration key, and then STBremoteconf signs the command. It also adds an expiry time after which the command will no longer be valid. By default this is 30 seconds after the time at which the command was signed.
3. **Send command:** If the command is to be sent to a single STB or to a multicast group, it is sent immediately. If the command is saved to be sent later, a confirmation confirms that it has been saved, and a separate STBremoteconf command allows saved commands to be sent.
4. **Verify command:** When the STB receives a command, the STB also uses its stored public configuration key to check that the command has been authorised, and rejects commands that are not authorised. It then checks the expiry time for the command against its internal clock. If the current time is later than the expiry time, it rejects it. This ensures that even if signed commands are used in a capture and replay attack, replaying them later will have no effect on the STBs. **For this reason, the STB and the PC on which the STBremoteconf client is installed must use correct date and time settings.**
5. **Execute command:** The STB executes the command using `STBrc`, and generates the appropriate response.
6. **Command response:** A response containing the information requested or confirmation that the command was executed (or an error report) is returned to the sending PC for display.

3.2 Installation

STBremoteconf is normally installed as part of an multicast system. If a multicast system is not installed, follow the multicast system installation instructions in the *Installation and Upgrade Guide* (AM-000501-TC).

3.2.1 Before you start

The instructions in this section assume that STBremoteconf and other components are to be installed as part of a multicast system. You will need the following:

- You will need to know the passphrase for the configuration key that you will be using to sign commands. For the Amino engineering key this is `stbrckey`. For more information on the use of passkeys, see the *Installation and Upgrade Guide* (AM-000501-TC).
- To send commands via STBremoteconf, you will need to know the IP address of individual STBs, or the IP address for a multicast group. STBs must be powered and connected to the network.
- For some of the commands (for example, multicasting commands), the DHCP server and multicast server must be running, and appropriate upgrade images must be available.
- You will need to log in as `root` or have `sudo` rights to send commands via STBremoteconf.

3.2.2 Installing STBremoteconf

You will need the following:

1. Operating system.

STBremoteconf is supplied for use on Linux. The recommended platform is Debian Squeeze available from <http://www.debian.org/releases/>. The instructions here assume the use of this platform.

2. Installation files

You will need the following files to install and use STBremoteconf:

- `STBremoteconf`
- `imgcfg`
- `commands`

These files are normally supplied in the `utils/` subdirectory of a full software release, and are installed as part of the multicast system set-up. If this has already been done, then there is nothing else to do to complete the installation.

3. To sign commands that you send with STBremoteconf, you will also need:

- A private configuration key file – if you are using the Amino engineering keys, this is `STBrc-KEY.private` (this must match the public key file on the STB)
- Perl modules

The STBremoteconf client has dependencies on various external Perl modules. If the required modules are not installed on your system, you will see errors similar to the following when you try to use STBremoteconf for the first time:

```
Can't locate IO/Socket/Multicast.pm in @INC (@INC contains:
/usr/lib/perl5/5.8.1/i386-linux-thread-multi...
```

If this happens, you can download and install the required files.



Important note

The pc on which STBremoteconf is installed must use correct date and time settings. This is a fundamental requirement for proper operation of the STB and STBremoteconf. If no time is provided to the STB then the time will be incorrect which may create problems, for example the STBremoteconf commands will time-out after 30 secs (see [STBremoteconf parameter syntax](#)) for security reasons, so timings within your system must be synchronised.

3.2.3 Installing prerequisite Perl modules

The STBremoteconf client has dependencies on various external Perl modules. You can either install these before you start installing STBremoteconf, or try using STBremoteconf and then install the Perl modules that are required only if errors are reported.

3.2.3.1 To install the Perl modules required by STBremoteconf

The following procedure assumes that you have the Perl CPAN module installed and have internet connectivity. You must be logged in as root or have `sudo` rights.

1. Enter the following command:
`sudo perl -MCPAN -e shell`
2. If the `cpan>` prompt is not displayed, then you are asked if you want to configure automatically. Press **Enter** or type `yes`.
3. If you are prompted to install any modules, press **Enter** or type `yes`.
4. Enter the following command:
`install Bundle::CPAN`
If you are prompted to install dependencies, enter `yes`.
5. Enter the following command:
`install Date::Manip`
If you are prompted to install dependencies, enter `yes`.
6. Enter the following command:
`install MIME::Base64`
If you are prompted to install dependencies, enter `yes`.
7. Enter the following command:
`install File::Copy`
If you are prompted to install dependencies, enter `yes`.
8. Enter the following command:
`install IO::Socket::Multicast`
If you are prompted to install dependencies, enter `yes`.
9. Enter the following command:
`quit`

You now have all of the required Perl modules installed and your STBremoteconf client should now work.



If you have a recent Debian-based platform installed you **may** be able to replace the above stages with the following:

Enter the following command:

```
apt-get install libdate-manip-perl libmime-base64-
perl libio-socket-multicast-perl
```

3.2.4 Upgrading STBremoteconf

STBremoteconf client can be installed or upgraded separately from upgrades to STB software, but if the client and STB applications are at different versions, only the functionality of the older version will be available. For

example, if the new STBremoteconf client application includes commands that are not yet implemented in the STB software, then the commands will not be available until the STB software is also upgraded.



In all the following instructions, `<release_name>` indicates the full name of the software release image directory that contains your software release. For example, `Ax5x-4.3.3-Opera12` installs in `4.3.3-Ax5x-opera12`, hence `<release_name>` is `4.3.3-Ax5x-opera12`.

1. Log in as root, and copy the `imgcfg` to a directory in your path (the other binaries, including `mcastbootd` must also be in this location).

For example:

```
cp <release_name>/utils/imgcfg /usr/local/bin
```

2. Copy the `STBremoteconf` and `commands` files to the location you want to run them from. This can be in the system path or in another location, but the two files must be stored in the same directory as each other.

For example, to copy the files to a directory in the path:

```
cp <release_name>/utils/STBremoteconf /usr/local/bin
```

```
cp <release_name>/utils/commands /usr/local/bin
```

3. Copy the key file to an accessible location. Instructions in this guide assume it is in the following subdirectory of your software release: `/utils/keys/amino/`.

The upgrade is now complete.

3.2.5 Removing STBremoteconf

In order to remove `STBremoteconf` you will need to delete the following files:

- `STBremoteconf`
- `imgcfg`
- `commands`

These files are normally supplied in the `utils` subdirectory of a full software release.

3.3 Sending commands with STBremoteconf

The following steps outline an example command line interaction with `STBremoteconf`.

3.3.1 To send a command at the command line

The following steps assume you have **not** copied the `STBremoteconf` files to a directory in the system path (for example, `/usr/local/bin`). If you **have** copied the files, you do not need to navigate to the directory that the `STBremoteconf` file is stored in, and you do not need to enter `./` at the start of each command.

1. Set the `STBKEY` environment variable by entering a command in the following format:

```
export STBKEY=<release_name>/utils/keys/amino/STBrc-KEY.private
```



In order to set `STBKEY` as a permanent environment variable, add the above `export` command to your `.bashrc` file.

2. Navigate to the directory that the `STBremoteconf` file is located in.

For example:

```
cd <release_name>/utils
```

3. Enter a command in the following format:

```
./STBremoteconf [<optional_arguments>] <host>
                  <command_option [parameter]>
```

See [Example commands](#) for examples of this syntax in use.

4. You are prompted to enter the passphrase for the configuration key. For the Amino engineering configuration key this is `stbrckey`.



The passphrase can be set as the environment variable `STBPASS`, in the same way as for the `STBKEY` variable

If the command syntax and IP address(es) entered are valid, the client command is sent. For unicast operations (that is, commands sent to a single STB) a confirmation message is displayed which includes a status code returned by the STB. For multicast operations, only some commands will receive a confirmation message, for example `GETVERSION`.

If you have your own keys then you will have your own, different, passphrase.

You can now enter further commands as required.

3.3.1.1 Example commands

For example, enter the following commands to find out the software version on an A540 STB:

Unicast

```
./STBremoteconf -p 540 10.172.247.235 GETVERSION
```

Multicast

```
./STBremoteconf -p 540 225.10.10.10 GETVERSION
```

To find out the software version on an M540 STB:

Multicast

```
./STBremoteconf -p M540 225.10.10.10 GETVERSION
```

3.4 Using scripts to control STBremoteconf

STBremoteconf typically reads the location of the private key file from an environment variable, and the passphrase associated with it from input from the user when a message is sent. In some cases, such as where some degree of autonomy may be required, it is desirable not to be prompted for a passphrase. To do so, the value of the passphrase required can be stored in the `STBPASS` variable. For example, assuming that the Amino engineering keys are being used, the commands required to set this up would be:

```
export STBKEY=/usr/local/amino/keys/amino/STBrc-KEY.private
export STBPASS=stbrckey
```

These environment settings would only remain valid in the current shell session. For complete autonomy, these export statements could be added to the user's `.bashrc` file, or other shell settings file, depending on the Linux distribution being used.

If the two export variables were set, no request for a passphrase would be made by STBremoteconf when sending a message. Anyone using this feature should be aware of the potential security implications of storing the passphrase for the private key in this unprotected form.

3.5 STBremoteconf parameter syntax

STBremoteconf is operated by entering commands with the following syntax:

```
./STBremoteconf [-p <product_list>] [-e <expiry>] [-P <port>] <host> <command_options [<parameters>...]>
```

Argument	Usage
-p <product_list>	A comma-separated list of product codes that you want the command to apply to. For example: -p 140,140H (cannot be used in conjunction with -m or -s)
-e <expiry>	Time at which the message will expire. If you do not include this argument, it defaults to 30 seconds from the current time. The time specified should be acceptable to the ParseDate Perl command. For example: "today" "1st Thursday in June 2008" "05/10/07" "12:30 Dec 12th 1880" "8:00pm December tenth"
-P <port>	Port to send the command on. For unicast, the default port is 54321. For multicast, the default port is 22222.
<host>	The host argument that specifies where the command will be sent or enables you to save the command for use later. See below for more information.
-m	optional mac address in format 00:02:02:xx:xx:xx (cannot be used in conjunction with -s or -p). A maximum of five STBs can be contacted using MAC addresses.
<command_options [<parameters>...]>	The command that will be executed (see <command_options> argument)
-t	optional TTL value for multicast (defaults to 10).
-s	optional serial number (cannot be used in conjunction with -m or -p).
-u	optional UDP response timeout (number 1-999) (defaults to 10).

Alternatively, you can enter the command `./STBremoteconf` without any arguments to display help at the command line.



If you have copied the STBremoteconf file to a directory in the system path (for example, /usr/bin), you can enter the commands without the ./ at the start.

3.5.1 <host> argument

The <host> argument must be included in all commands. It can be set with one of the following values, depending on where you want the command to be sent:

```
<multicast_group>
```

To send the command to all STBs listening on a particular multicast group, enter the IP address of the group (for example, as defined in the configuration of the STB or the DHCP server configuration). If no group has been configured on the STB, the default address 225.10.10.10 is used.



Use the multicast option with care to ensure that you are sending the command to the multicast group you have specified.

```
<unicast_IPAddress>
```

To send the command to a single STB listening on the network, enter the IP address for that STB. Alternatively, you can enter a valid name (which has a DNS entry). You should send commands to a single STB in this way if you want to configure settings for a single STB, or if the command returns information such as status or version.

If the IP address is invalid, then the following error is returned:

```
Couldn't convert to internet address: Resource temporarily unavailable.
```

If the IP address is valid, but the STB does not respond to the command (for example, the STB is not connected or the address has not been allocated by the DHCP server), then the following error is returned:

```
Couldn't connect: Connection refused
```

3.5.2 Save

To sign a command and save it for multicasting or unicasting later, replace <host> with `SAVE`. This is useful as it allows you to collect multiple signed commands together to be transmitted altogether later, or to give a signed command to a third party that it is not appropriate to give keys to.

STBremoteconf saves the signed command to a `SAVEFILE.msg` file in the current directory, and you can send it later using the `SIGNEDCMD` command option.



Although the `SAVE` command can be used to create a batch of multicast or unicast commands, the expiry time from when the command is signed still applies (default is 30 seconds). This means that each command must be multicast/unicast before its expiry time is reached. The `-e` parameter can be used to specify a longer expiry time.

For example:

```
STBremoteconf -e "December 16th 2009" SAVE REBOOT
```

3.5.3 <command_options> argument

The <command_options> argument must be included in all commands, and specifies the operation you want to execute. Some options also require additional parameters. See [Overview of command options](#) for a list of available options.

3.5.4 Overview of command options

You can add one of the following to the STBremoteconf command. Alternatively, enter the command without adding any options to view STBremoteconf version information and a full list of available commands at the command line (see the full command list for details of when they should be used). You should only use these if you are fully aware of the implications for your STB



Not all commands will give a response.

Command	Usage
CEC_TVON	Switches on the TV using CEC*
CEC_TVOFF	Switches off the TV using CEC*
CEC_CMD	Sends a CEC command*
	*See the <i>JMACX API specification</i> (AM-000502-TC) for more information about CEC commands.
CHANGEPAGE <url>	Displays the page specified on the STB browser.
CUSTOMCMD	
DUMPCONFIG <location to store output file> <optional prefix>	Requests a dump of the libconfig settings.
EAS <message>	Sends an EAS (Emergency Alert System) message.
ETHERNET <value>	Sets the Ethernet speed.
GETCONFIG see SETCONFIG	Allows a key defined by libconfig to be obtained.
GETDI	Returns the deployment index.
GETSTAT	Returns STB statistics (not currently supported on x0xx STBs).
GETVERSION	Returns the current software version on the STB.
HWINFO	Returns information about the STB hardware.
LOGREAD	Returns last few entries from syslog.
OUTFMT <format>	Sets the output format of the STB.
OUTRES	Sets the output resolution. (HD-capable STBs only)
PING <remote_host> <count> <backoff_secs>	Instructs the STB to send ICMP echo (ping) requests to a remote host.
PROC <proc_entry>	Sends specified <code>proc</code> entry to the STB.
PS	Runs the <code>ps</code> process on the STB.
REBOOT	Reboots the STB.
REFLASH	Wipes the NAND flash on the STB, then downloads new software.
REFORMAT (Minerva and Evo only)	Sets a flag on the STB to reformat the hard drive after a reboot. The STB will reboot to perform this command.
RFMODE <option>	Enables/disables or resets the RF modulator (if present) on the STB.

Command	Usage
SETCONFIG	Allows setting of a key defined by libconfig (except MAC address, Serial ID or Lock value.)
SIGNEDCMD	Sends a pre-prepared signed command out.
SNAPSHOT	Runs a script to obtain debugging information from the STB.
STATS	Returns status information about the STB.
TVSYSTEM <option>	Sets the TV standard to be used.
UPGRADE http://<host>/mc2.mcfs	Instructs the STB to upgrade to software available at the host address specified.
VOD <option>	Executes Video-on-Demand operations (not currently supported on x0xx STBs).

3.6 List of commands

The following is a list of the STBremoteconf commands supported at present.

CEC_TVON

Switches on the TV using CEC source and destination codes.

Usage

```
./STBremoteconf <host> CEC_TVON [source] [destination]
```

Example

```
./STBremoteconf 10.172.227.145 CEC_TVON
```

CEC_TVOFF

Switches off the TV using CEC source and destination codes.

Usage

```
./STBremoteconf <host> CEC_TVOFF [source] [destination]
```

Example

```
./STBremoteconf 10.172.227.145 CEC_TVOFF
```

CEC_CMD

Sends a CEC command.

Usage

```
./STBremoteconf <host> CEC_CMD <cmd byte string> [source] [destination]
```

Examples

To mute the TV

```
./STBremoteconf 10.172.227.145 CEC_CMD 43
```

To bring the TV from standby (an alternative to CEC_TVON)

```
./STBremoteconf 10.172.227.145 CEC_CMD 04
```

To send the TV to standby (an alternative to CEC_TVOFF)

```
./STBremoteconf 10.172.227.145 CEC_CMD 36
```

CHANGEPAGE

Instructs the web browser to go to a specific URL. Whatever the user is viewing at the time will be interrupted.

Usage

```
./STBremoteconf <host> CHANGEPAGE <url>
```



This does not currently work for igmp urls when using Ekioh 3.4.0.

Example

```
./STBremoteconf 225.10.10.10 CHANGEPAGE "http://www.aminocom.com"
```



The CHANGEPAGE command was previously unable to use fragment identifiers (#) in URLs. The fragment identifier # has now been replaced by a space character.

For example, instead of sending:

```
"#|change page|http://www.jsperf.com/faq#autorun|#1380642103#"
```

the command sent is:

```
" |change page|http://www.jsperf.com/faq autorun| 1380642103 "
```

CUSTOMCMD

Sends a custom command

Usage

```
./STBremoteconf <host> CUSTOMCMD.sh <url>
```

Example

```
./STBremoteconf 225.10.10.10 XXXXXXXXXXXX
```

DUMPCONFIG

Requests a dump of the libconfig settings.

Usage

```
./STBremoteconf <host> DUMPCONFIG <location to store output file> <optional prefix>
```

Example

```
./STBremoteconf 225.10.10.10 DUMPCONFIG /tmp/tempfile
```

EAS

Sends an EAS (Emergency Alert System) message. It is the responsibility of the middleware running on the STB to act on this message and perform any required operations.

Usage:

```
./STBremoteconf <host> EAS <message>
```

Example:

```
./STBremoteconf 225.10.10.10 EAS "<XML><Message>
                                     This is a message</Message><XML>"
```

To receive the message on the STB you need to use the AminoGeneric class. The service number for the STBremoteconf EAS service is 13.

Usage example

```
// The event handler itself
function eventhandler(xml_event_string)
{
  alert ("Message sent to eventhandler - " +
  xml_event_string) ;
}
// Register the event handler for unique service identifier ID of 13 (EAS)
AminoGeneric.onEvent13="eventhandler";
```

For further information see TN024 - Using AminoGeneric.



Certain characters cannot be used in the EAS message:

A message containing # or | will fail to get through.

A message containing ' will fail to get through and will change the AminoGeneric.onEvent13 registration to *undefined* which causes all following EAS messages to fail to get through.

ETHERNET

Restricted: Not for use with OTP STBs.

Sets the Ethernet speed to one of the following values:

AUTO
10HD
10FD
100HD
100FD



10BaseT Ethernet is not supported by x4x STBs.

Usage

```
/STBremoteconf <host> ETHERNET <value>
```

Example

```
/STBremoteconf 225.10.10.10 ETHERNET 100FD
```

GETCONFIG see [SETCONFIG](#)

GETDI

Returns the deployment index. This command is only useful via unicast.

Usage

```
./STBremoteconf <host> GETDI
```

Example

```
./STBremoteconf 10.172.227.145 GETDI
```

GETSTAT

Returns the following statistics:

maximum, minimum and current temperature, system uptime and HDD self-monitoring (SMART)



Not currently supported on x0xx STBs

Usage (Non x4x STBs)

```
./STBremoteconf <host> GETSTAT System.Uptime  
./STBremoteconf <host> GETSTAT System.TotalUptime  
./STBremoteconf <host> GETSTAT Fan.OffDuration
```

```
./STBremoteconf <host> GETSTAT Fan.SlowDuration
./STBremoteconf <host> GETSTAT Fan.OnDuration
./STBremoteconf <host> GETSTAT Fan.TotalOffDuration
./STBremoteconf <host> GETSTAT Fan.TotalSlowDuration
./STBremoteconf <host> GETSTAT Fan.TotalOnDuration
```

Usage (x4x STBs only)

```
./STBremoteconf <host> GETSTAT Temp.Current
./STBremoteconf <host> GETSTAT Temp.Max
./STBremoteconf <host> GETSTAT Temp.Min
./STBremoteconf <host> GETSTAT System.Uptime
```

Usage (all HDD STBs)

```
./STBremoteconf <host> GETSTAT HardDrive0.SMART
```

Example

```
./STBremoteconf 10.172.227.145 GETSTAT Temp.Current
```

GETVERSION

Returns the software version of an STB. This command is only available via unicast.

Usage

```
./STBremoteconf <host> GETVERSION
```

Example

```
./STBremoteconf 10.172.227.145 GETVERSION
```

Example response

```
Got back: 2.7.1-operall
```

HWINFO

Returns the product, board revision and ROM type of the STBs. For unicast only.

Usage

```
./STBremoteconf <host> HWINFO
```

Example

```
./STBremoteconf 10.172.227.145 HWINFO
```

Example response

```
aminet130 (revision 2) ROM type: 0xc222-SS-S4
```

LOGREAD

Returns the last few entries from syslog. This command is only useful via unicast.

Usage

```
./STBremoteconf <host> LOGREAD
```

Example

```
./STBremoteconf 10.172.227.145 LOGREAD
```

OUTFMT

Sets the output format.

Restricted: Not for use with OTP STBs.

Usage

```
./STBremoteconf <host> OUTFMT <new output format>
```

Example

```
./STBremoteconf 225.10.10.10 OUTFMT CVBS-LC
```

The options are:

Value	Meaning
"CVBS-RGBOFF"	Enable composite output without RGB (where available)
"CVBS-RGBON"	Enable composite output with RGB (where available)
"LC-RGBOFF"	Enable S-video output without RGB (where available)
"LC-RGBON"	Enable S-video output with RGB (where available)
"CVBS-LC"	Enable composite with S-Video (where available)
"CVBS-LBR"	Enable composite and component (YPbPr) (where available)
"LBR-CVBS-LC"	Enable composite, S-video and component (YPbPr) (where available)
"RGB-CVBS-LC"	Enable RGB with composite with S-video outputs (where available)

OUTRES

Sets the output resolution. This command is only supported by HD-capable STBs.

The correct frequencies for these settings are detected using `TVSYSTEM`. This is done to try and limit accidental misconfiguration.

The output resolution will be one of the following:

```
SD
480p
576p
720p
1080i
```

Usage

```
./STBremoteconf <host> OUTRES <new output resolution>
```

Example

```
./STBremoteconf 225.10.10.10 OUTRES 720p
```

PING

Instructs the STB to send a number of ICMP echo (ping) requests to a remote host. In a network with multiple STBs, this command can be multicast and then the network can be monitored for replies, to determine which STBs received the message.

Usage

```
./STBremoteconf <host> PING <remote_host> <count> <backoff_secs>
```

where

<code><count></code>	Specifies the number of echo requests to send.
<code><backoff_secs></code>	Specifies how long to wait before sending the first request (in seconds). If you specify a <code>backoff_secs</code> parameter of zero, the STB sends the ICMP echo requests as soon as it receives the message. If <code>backoff_secs</code> is greater than zero, the STB waits a random time interval between zero and <code>backoff_secs</code> seconds before sending the first ICMP echo, followed by one second between each request.

Example

```
./STBremoteconf 225.10.10.10 PING 139.255.1.1 10 0
```

PROC

Queries the STB for the value of the specified `proc` entry, for example, to query memory usage.



The Linux command `cat /proc/<proc_entry>` will give the same information as using `PROC <proc_entry>`. This command is only useful via unicast.

Usage

```
./STBremoteconf <host> PROC <proc_entry>
```

Example

```
./STBremoteconf 10.172.227.145 PROC meminfo
```

PS

Performs a linux `ps` on the STB. This command is only useful via unicast.

`ps` displays information about a selection of the active processes.

Usage

```
./STBremoteconf <host> PS [option]
```



The only option presently available is the `-w` switch, which increases the number of characters displayed on each line of output from the `ps` command from 79 to 255.

Example

```
./STBremoteconf 10.172.227.145 PS -w
```

REBOOT

Triggers a reboot of the STB, which is most useful when restarting the device after making configuration changes in unicast mode. The command returns a status code indicating whether the command was accepted. Not permitted in multicast mode.



The STB automatically reboots after some commands, such as a `MCAST_UPGRADE`.

Usage

```
./STBremoteconf <host> REBOOT
```

Example

```
./STBremoteconf 10.172.227.145 REBOOT
```

REFLASH

Requests a reflash of the STB. Reflashing refers to deleting all the contents of the NAND flash and replacing the main software image (`mcs.mfs`). The update is done by using the Recovery Image (RI) stored in the NAND flash.

Before using this command, ensure that valid software exists, and that no attempt is made to interact with the device (such as disconnecting mains power) during the update process. This command wipes any persistent setting stored in the NAND flash (/mnt/nv).



If an upgrade is required rather than a reflash then see the [UPGRADE](#) or command. For further information on the differences between upgrading and reflashing the STB see the *Install and Upgrade Guide AM-000501-TC*.

Usage

```
./STBremoteconf <host> REFLASH
```

Example

```
./STBremoteconf 225.10.10.10 REFLASH
```

REFORMAT

The REFORMAT command is for Minerva and Evo clients only. It sets a flag on the STB to reformat the hard drive after a reboot.

STBs that do not have a hard drive will not be affected.

The STB will reboot to perform this command.

The command returns a status code indicating whether the command was accepted.

Warning:

All the content of the hard drive will be erased if you issue this command



This command is not permitted in multicast.

Usage

```
./STBremoteconf <host> REFORMAT
```

Example

```
./STBremoteconf 10.172.247.235 REFORMAT
```

RFMODE

Enables or disables the RF modulator (if present) and/or changes the current RF channel.

The following options are available:

Option	Description
<channel> ENABLE	Sets the RF channel to <channel> and enables the RF modulator.
<channel> DISABLE	Sets the RF channel to <channel> and disables the RF modulator.

Option	Description
<channel> PRESERVE	Sets the RF channel to <channel> and does not change the current setting of the RF modulator.
<channel>	Sets the RF channel to <channel> and does not change the current setting of the RF modulator.
ENABLE	Enables the RF modulator for the current RF channel.
DISABLE	Disables the RF modulator for the current RF channel

Usage

```
./STBremoteconf <host> RFMODE <option>
```

Example

This sets the RF channel to 38 and enables the RF modulator.

```
./STBremoteconf 225.10.10.10 RFMODE 38 ENABLE
```

SETCONFIG, GETCONFIG

Sets or gets a key defined by libconfig



You cannot use SETCONFIG to change the MAC address, Serial ID or Lock value.

Usage

```
./STBremoteconf <host> SETCONFIG <config option> <value>
```

```
./STBremoteconf <host> GETCONFIG <config option>
```

Unicast example

```
./STBremoteconf 10.172.247.78 GETCONFIG NORFLASH.OUTPUT_RESOLUTION
```

```
Got back: HD720P
```

Multicast example

```
./STBremoteconf 225.10.10.10 SETCONFIG NORFLASH.OUTPUT_RESOLUTION HD720P
```

```
Command Set $Revision: 1.25 $
```

```
Multicasting...
```

```
This command will affect every box listening on this network
```

```
Are you sure? [Y/N]: y
```

```
Sending following command: #|setconfig|NORFLASH.OUTPUT_RESOLUTION|#1329299052#
```

```
copying from '/tmp/STBremoteconf.24757/TMPFILE' to '/tmp/STBremoteconf.24757/TMPFILE.signed'
```

```
Signed image written to '/tmp/STBremoteconf.24757/TMPFILE.signed'
```

```

Awaiting response(s) on port 22223 (timeout = 10)
Response from STB: "MAC:00:02:02:2c:f5:46 SERIAL:GB2510D0000168 REPLY:OK"
Response from STB: "MAC:00:02:02:2d:db:3e SERIAL:GF2710D0005377 REPLY:OK"

```

Multicast example using a command option

In this multicast example the command argument `-p <product_list>` is used to get the output resolution from a group of A140 STBs:

```

./STBremoteconf -p A140 225.10.10.10 GETCONFIG NORFLASH.OUTPUT_RESOLUTION
Amino STBremoteconf $Revision: 1.29 $:
Command Set $Revision: 1.25 $
Multicasting...
This command will affect every box listening on this network
Are you sure? [Y/N]: y
Sending following command:
#|getconfig|NORFLASH.OUTPUT_RESOLUTION|#1327318039#|A140|#
copying from '/tmp/STBremoteconf.31324/TMPFILE' to '/tmp/STBremoteconf.31324/
TMPFILE.signed'
Signed image written to '/tmp/STBremoteconf.31324/TMPFILE.signed'
Awaiting response(s) on port 22223 (timeout = 10)
Response from STB: "MAC:00:02:02:2c:f5:46 SERIAL:GB2510D0000168 REPLY:HDNONE"
Response from STB: "MAC:00:02:02:2d:db:3e SERIAL:GF2710D0005377 REPLY:HDAUTO"
Response from STB: "MAC:00:02:02:37:07:d8 SERIAL:GB1011D0035194 REPLY:HDNONE"
Response from STB: "MAC:00:02:02:37:6e:dd SERIAL:GB1611D0058168 REPLY:HD720P"
Response from STB: "MAC:00:02:02:2c:f4:d6 SERIAL:GB2510D0000056 REPLY:HDAUTO"
Response from STB: "MAC:00:02:02:2c:f5:49 SERIAL:GB2510D0000171 REPLY:HDAUTO"
Response from STB: "MAC:00:02:02:2c:f4:eb SERIAL:GB2510D0000077 REPLY:HD720P"

```

SIGNEDCMD

Sends a pre-prepared signed command out. This requires a file generated by STBremoteconf using the SAVE command and allows the user to send out a command without needing a password or a private key, so it can be useful to allow untrusted parties to submit commands.

Usage

```
./STBremoteconf <host> SIGNEDCMD <file>
```

Example

```
./STBremoteconf 10.172.227.145 SIGNEDCMD <command>.msg
```

SNAPSHOT

Runs a script to obtain debugging information from the STB. This provides a selection of information about the STB:

* the product, chipset, firmware revision, stb time

- * the zmiddleware/browser, CA client
- * common settings files (norflash, settings, usersettings, logread)
- * kernel modules
- * ps, memory, disk usage, df, uptime, proc files
- * ifconfig, eth settings, sockets, netstat

Usage

```
./STBremoteconf <host> SNAPSHOT <path/filename>
```

Example

```
./STBremoteconf 10.172.227.145 SNAPSHOT <path/tmp>
```

STATS

Returns a set of status values for the STB. This command is only useful via unicast. The STBremoteconf stats command returns information which can be accessed by looking at specific directories on the STB. The MAC address is returned, and also selected information from `/proc/avcore`, `/proc/meminfo` and from running an `ifconfig` command on the STB.



Further information about the `stats` command and a description of the returned parameters is available in [Appendix I, "STBremoteconf STATS command"](#).

Usage

```
./STBremoteconf <host> STATS
```

Example

```
./STBremoteconf 10.172.227.145 STATS
```

TVSYSTEM

Changes the TV standard to one of a predefined set of values.

The following options are available:

Value	Example region
PAL-I	UK
PAL-M	Brazil
PAL-N	Argentina
PAL-G	Europe
PAL-B	Australia, Ghana
PAL-H	Belgium
NTSC-J	Japan
NTSC-M	USA

A complete list of the Worldwide TV Standards can be found in the *TV Standards Guide* (AM-000503-TC).

Usage

```
./STBremoteconf <host> TVSYSTEM <option>
```

Example

```
./STBremoteconf 225.10.10.10 TVSYSTEM PAL-I
```

UPGRADE

The UPGRADE command is used with x4x STBs, and instructs an STB to upgrade to the software offered at a particular address.

Usage

Unicast upgrade

```
./STBremoteconf <host> UPGRADE http://<location>/mc2.mcfs
```

Multicast upgrade

```
./STBremoteconf <host> UPGRADE igmp:// <Multicast Upgrade address>: <Upgrade port number>
```

Examples

Unicast upgrade

```
./STBremoteconf 10.172.227.145 UPGRADE http://10.172.227.145/mc2.mcfs
```

Multicast upgrade

```
./STBremoteconf 10.172.227.145 UPGRADE igmp://239.255.230.100: 12345
```

VOD

Allows remote video on demand operations to be executed. For example, a PAUSE operation may be required before you can send another command.



Not currently supported on x0xx STBs

The following video on demand operations are supported:

```
PLAY
PAUSE
STOP
FF
RW
```



VOD PLAY should only be used to resume from a PAUSE state. To initiate a new video on demand session remotely, use the CHANGEPAGE command to point to the required video on demand resource.

Usage

```
./STBremoteconf <host> VOD <option>
```

Example

```
./STBremoteconf 225.10.10.10 VOD PAUSE
```

3.7 STBremoteconf key changing

It is possible to generate your own STBremoteconf key on x4x STBs from software version 2.7.1. Having your own key will therefore allow you to change the STBrc key for units in the field without involving Amino.

Before STBrc key changing:

for sending STBremoteconf commands
you will have:

STBrc-KEY.public:
the public Amino engineering key,
installed on the STB at manufacture

and

STBrc-KEY.private:
the private Amino engineering key,
stored on the management hosts,
used for signing STBremoteconf
commands.


After STBrc key changing:

for sending STBremoteconf commands
you will have:

STBrc-KEY.public:
which is now changed to your own
specific key

and

STBrc-KEY.private:
which is now changed to your own
specific key

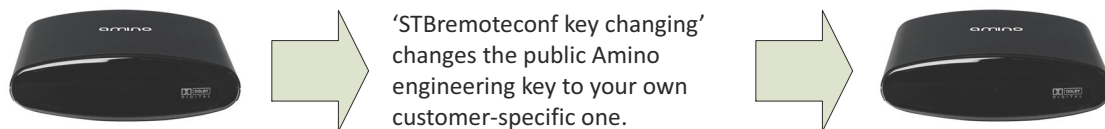

3.7.1 Requirements

- A Linux Debian system with configured Amino utilities (`imgcfg`, `rsakey`)
- Amino keys on your system (`KEY.private`, which is delivered with each software build).

3.7.2 Preparing a new STBrc-KEY

1. Generate a new keyfile and passphrase using the RSA key generating utility `rsakey`:
`$ rsakey -g -f STBrc-KEY.`
2. Enter your own passphrase when prompted (twice). The result will be 2 files:

```
STBrc-KEY.public
```

```
STBrc-KEY.private
```

Sign the new public key with your Customer key (this example uses the generic Amino customer key):

```
$ imgcfg sign -f STBrc-KEY.public -o STBrc-KEY.public.signed -k /usr/local/  
keys/amino/KEY.private -w "markskey"
```

3. Copy the newly generated `STBrc-KEY.public.signed` into your software image (in this example `Ax4x-2.7.1-opera11` is used):

```
$ cp STBrc-KEY.public.signed Ax4x-2.7.1-opera11/upgradeimage/  
imagecomponents/bin
```
4. Copy the `STBrc-KEY.private` into `/usr/local/keys/MYKEYS/` on your PC.
5. Run the signupgrade image as normal and copy the result to the usual place.
6. Flash the STB. View the serial debug log - you will see the following message confirming your key is being installed:

Chapter 4—Using libconfig

In this Chapter:

[4.1 Before you start](#)

[4.2 libconfig configuration areas](#)

[4.3 Using libconfig to get and set values](#)

The `libconfig` configuration tool enables you to interact with the STB configuration. In most cases, you can retrieve or set any of the available configuration settings.

4.1 Before you start

The instructions in this guide assume that the STBs you want to communicate with are powered and connected to the network. You will need the following:

- To send commands via `libconfig` you will need to know the IP address of individual STBs that you want to communicate with.
- To send commands via `libconfig` you will need a command line directly onto the STB. This can either be via a `telnet/ssh` session or using a debug cable.
- You will need to know the password for the `root` user on the STB. This is `root2root` if you have not changed the default.

If you want to follow the instructions here on using Telnet to send `libconfig` commands you will need to have software with Telnet enabled. See [Enabling remote log-in tools](#) for more information on including Telnet. Both Telnet and SSH are normally disabled for roll-out, so you will need to enable it by adding it to the software image on the STB.

4.2 libconfig configuration areas

`libconfig` can be used to access various areas of configuration, using a unique prefix for each area. In most cases, `libconfig` can read or write settings, but there are a few exceptions for which `libconfig` access is read-only.

4.2.1 NOR Flash configuration

The NOR Flash contains settings required by the ROM. In some cases, this can include static network settings.

4.2.1.1 libconfig prefix

To create the key for use in `libconfig` commands, prefix the setting name with `NORFLASH`. For example, for the `DI` setting, the `libconfig` key is `NORFLASH.DI`.

4.2.2 Settings configuration

The `settings` file contains various STB settings, such as languages, volume ranges and keyboard configuration.

4.2.2.1 libconfig prefix

To create the key for use in `libconfig` commands, prefix the setting name with `SETTINGS`. For example, to access the `RTSPSERVER` setting, the `libconfig` key is `SETTINGS.RTSPSERVER`.

For example:

```
libconfig-set SETTINGS.RTSPSERVER bitband
```

4.2.3 Hostname configuration

The `hostname` file contains just a single setting that specifies the name of the STB, for example `stb001`.

4.2.3.1 libconfig prefix

To create the key for use in libconfig commands, prefix the setting name with `HOSTNAME`. For the `HOSTNAME` setting, the libconfig key is `HOSTNAME.HOSTNAME`.

4.2.4 Usersettings configuration

The `usersettings` file contains settings that the STB user controls (for example, through the Preferences pages). These override the values specified for the same settings in the `settings` file. The values persist when a new software image is loaded to the STB, but not if the STB is reflashed.

4.2.4.1 libconfig prefix

To create the key for use in libconfig commands, prefix the setting name with `USERSETTINGS`. For example, for the `PREFERRED_LANG` setting, the libconfig key is `USERSETTINGS.PREFERRED_LANG`.

4.2.5 DHCP configuration

The dynamic network and multicast upgrade settings retrieved from the DHCP server are stored in a file called `dhcpcd-eth0.info`. These values are only set if the STB uses dynamic network and multicast upgrade settings, otherwise, the static values are defined in the NOR Flash. The DHCP values are read-only.

4.2.5.1 libconfig prefix

To create the key for use in libconfig commands, prefix the setting name with `DHCP`. For example, for the `DNS` setting, the libconfig key is `DHCP.DNS`.

4.3 Using libconfig to get and set values

The following section describes how to set new configuration values. We provide a command line utility `libconfig-set` to set configuration values. `libconfig-get` can be used to query the values.

4.3.1 libconfig-set command syntax

The libconfig commands for setting and querying STB configuration have similar syntax.

To set, use:

```
libconfig-set <config_key> "value"
```

To query, use:

```
libconfig-get <config_key>
```

Argument	Usage
<config_key>	Key formed from a prefix that relates to the configuration area and the name of the setting. For example, for the <code>DEFAULT_VOLUME</code> setting in the <code>settings</code> file, the key is <code>SETTINGS.DEFAULT_VOLUME</code> .
<value>	Specifies the new value for the configuration setting. Only required for the <code>libconfig-set</code> command. Note: If this value contains any spaces, it must be enclosed in quotation marks (for example: <code>"file name.txt"</code>), otherwise, the quotation marks are not required.

For example:

```
libconfig-set SETTINGS.DEFAULT_VOLUME "80"
```

or

```
libconfig-get SETTINGS.DEFAULT_VOLUME
```

4.3.2 To set a value via Telnet

The following steps outline how to send `libconfig` commands via Telnet.



Telnet is usually disabled for security reasons.

1. From a console window, Telnet to the STB.

For example, if your STB has an IP address 123.4.5.67, enter the following command:

```
telnet 123.4.5.67
```

2. You are prompted to enter log-in details. The user name to log in as is `root`, the password is `root2root` (unless you have changed the password for the root user).
3. Enter `libconfig` commands, as required.

For example:

```
libconfig-get SETTINGS.DELAY_FACTOR
```

This command returns the `DELAY_FACTOR` setting from the `SETTINGS` file on the STB, and displays it in the console, if you request a setting for which no value is set, then no return value is displayed.

For example:

```
libconfig-set SETTINGS.DELAY_FACTOR 5
```

```
[root@AMINET]# libconfig-set SETTINGS.DELAY_FACTOR 5
Setting 'SETTINGS.DELAY_FACTOR'='5'
SETTINGS.DELAY_FACTOR currently '(null)'
[root@AMINET]# libconfig-get SETTINGS.DELAY_FACTOR
[root@AMINET]#
```

The new value (5) is confirmed in the console, followed by a note of the value you replaced:

```
Setting 'SETTINGS.DELAY_FACTOR'='5'
SETTINGS.DELAY_FACTOR currently '(null)'
```

4. When you have finished, exit Telnet by typing the following command:

```
quit
```

4.3.3 To set a value using commands in a script

This is particularly useful if you need to use set values in multiple STBs – for example, to set static network settings.

For an example of this, see [Creating an upgrade script on page 65](#).

4.3.4 To set a value using the JMACX API

The `ASTB.SetConfig/ASTB.GetConfig` functions in the JMACX API call `libconfig` functions (see the *Amino JMACX API specification AM-000502-TC* for more information).

The STB management pages also use the `ASTB.SETConfig/GetConfig` function to modify settings.

Commands take the form:

```
ASTB.SetConfig (<password> , <config_item> , <value>)
```

Example use

```
ASTB.SetConfig (<password>, "SETTINGS.DELAY_FACTOR", "5")
```

```
ASTB.GetConfig ("SETTINGS.DELAY_FACTOR")
```

Parameters	Allowed values	Description
password		The password for the <code>mngwrite</code> user, as required for changing settings on the Management pages of the STB.
config_item		String containing the configuration item to set.
value		String containing the value to set the specified configuration item. Suitable values depend on the specified <code>config_item</code> .

Chapter 5—Customising a software upgrade image

In this Chapter:

- 5.1 [Configuring image components](#)
- 5.2 [Editing the flashcontents file](#)
- 5.3 [Creating an upgrade script](#)
- 5.4 [Enabling remote log-in tools](#)
- 5.5 [Customising graphics](#)
- 5.6 [Customising upgrade splashscreens](#)

You can customise software before it is loaded onto an STB by configuring the image components used to create the software upgrade image. The sections in this chapter describe how to configure the image components and provide additional information on some of the important components that you may need to use.

5.1 Configuring image components

Configuring image components enables you to customise the files used to create a software upgrade image. When the `signupgradeimage` script creates a new image, it includes the files that are listed in the `flashcontents` file and stored in the `imagecomponents/` subdirectory of the software release. You can edit these files or add new ones in order to customise the software upgrade image to your requirements.

For example, you can:

- edit configuration files before they are made available to STBs.
- add files needed to enable Telnet, SSH or Dropbear.
- add/edit an `upgrade.sh` script file that the STB will execute when it installs the new software upgrade image.
- replace graphics (displayed during the boot stages) with customised versions. For example, the `splash.gif` graphic.



All files in the `imagecomponents/` directory must be listed in the `flashcontents` file, otherwise, the `signupgradeimage` script will fail.

5.1.1 To configure image components

The general procedure for editing image components is as follows:



In all the following instructions, `<release_name>` indicates the full name of the software release image directory that contains your software release. For example, `Ax5x-4.3.3-Opera12` installs in `4.3.3-Ax5x-opera12`, hence `<release_name>` is `4.3.3-Ax5x-opera12`.

1. Open the file that you want to edit. The image component files are in the following location:

```
<release_name>/upgradeimage/imagecomponents
```

Alternatively, you can add a new file to this location, such as a `chnls.txt` file you have copied from a pre-configured STB or an `upgrade.sh` file that contains `libconfig` commands to set NOR Flash values.

2. Edit the file, and save your changes.
3. Open the `flashcontents` file, and ensure that the file you have added/edited is listed there. This file is in the following location:

```
<release_name>/upgradeimage
```

The `flashcontents` file lists the files that will be included in a software upgrade image, and defines permissions for the files.

4. Use the `signupgradeimage` script to create the software image, as usual.

The new software upgrade image includes your new or edited files, and you can use it to upgrade your STBs.

5.2 Editing the flashcontents file

You are only recommended to edit the `flashcontents` file if you are adding new files to the image components used to create a software image, and the files are not currently listed in it. The `flashcontents` file is supplied in the following location in a software release:

```
<release_name>/upgradeimage
```

5.2.1 flashcontents file

The `flashcontents` file lists the files that can be included in a software upgrade image, and defines the permissions associated with these files when the software image is installed on the STB.

The file contains a list of file names and the permission associated with them, in the following format:

```
<permission> <file name>
```

For example:

```
R AMINET.img
```

5.2.1.1 Permissions

The permissions are as follows:

Permission	
R	File cannot be altered by the STB (for example the kernel module, application). If files with R permission are altered or deleted, the STB detects an error and reboots.
W	File can be altered by the STB (for example a configuration file). If these files are deleted from the STB, it will not cause an error.
E	File is read-only and can be deleted after it is executed without affecting STB operation (e.g. <code>upgrade.sh</code> script).

- Executable image component files must be listed as either R or E, otherwise the `signupgradeimage` script will fail to create the software upgrade image.
- All files in the `imagecomponents/` directory must be listed in the `flashcontents` file, otherwise, the `signupgradeimage` script will fail. If a file is listed in the `flashcontents` file but is not present in the `imagecomponents/` directory, it will not affect the `signupgradeimage` script.

5.2.2 File naming

Files names must not be longer than 12 characters. For further information on the `flashcontents` file, see the *Amino Installation and Upgrade Guide*.

5.3 Creating an upgrade script

An upgrade script `upgrade.sh` contains commands that the STB executes when a new software upgrade image is installed. The script is created and installed on the STB as part of a software image, and is only executed once, then deleted.

5.3.1 To use an upgrade script

The `upgrade.sh` script is not normally supplied as part of a software release, but you can create your own and add the commands you want the STB to execute. For example you can add `libconfig` commands to set static multicast values. Add the file to the image components used to create a software upgrade image and ensure that the script is listed in the `flashcontents` file, with its permission set to `E`.

The script is executed automatically when this software image is installed on the STB and is then deleted.

5.4 Enabling remote log-in tools

Telnet or SSH(Dropbear) can be included in the software installed on an STB (the tool available depends on the platform), in order to enable remote log-in – for example, to access configuration via `libconfig` commands.



Amino advise that you use SSH(dropbear) where possible as some content providers insist that STBs do not have Telnet support for security reasons. If you want to use Telnet please contact Amino Customer Support for assistance.

5.4.1 Remote log-in tool availability

On the x4x platform, the remote log-in tools (Telnet/SSH(Dropbear)) are included as part of a standard software build or software image but are disabled by default for security. For example to enable startup of the Telnet daemon at bootup, include a script in `imagecomponents`, for example, `rc.ca_app` or `rc.dmn_app`.

For example:

```
#!/bin/sh
#
# modules start / stop.

. /etc/rc.config

case "$1" in
    start)
        echo "Loading telnetd"
        telnetd &
        ;;
    stop)
        echo "Killing telnetd"
        kill -9 `pidof telnetd`
        ;;
    reload|restart)
        $0 stop && $0 start
        ;;
    *)
        echo "Usage: $0 {start|stop|reload|restart}"
        exit 1
esac
```

For information on how to install Dropbear onto the STB, see *Amino Technical Note 015 Running the Dropbear SSH Daemon on an Amino STB*.

5.5 Customising graphics

You can replace the graphic displayed during STB booting. For TFTP booting STBs, it is also possible to replace the graphic shown during software upgrades.

5.5.1 Changing the 'bootloader splashscreen'

The bootloader splashscreen is the black and white television graphic:



For x4x series STBs, the graphic is in a proprietary format and cannot be changed by the user.

For x0xx and x5x series STBs, the graphic is in the `<release_name>/upgradeimage/imagecomponents/bin` folder and is named `bootloader.branding`. The graphic is a `.bmp` file for x0xx series STBs and a `gif` file for x5x series STBs. You can replace it with your own `bmp` or `gif` file that must be renamed `bootloader.branding`.

5.5.2 Other graphics used by the STB

The following graphics are examples of the default graphics supplied with a software release and are known as the 'Amino splash screens':


5.5.2.1 splash.gif

The default graphic shown on screen when the STB is booting is as shown:



5.5.2.2 loading.gif

This is the graphic shown on screen when the STB is upgrading. The **Upgrading. Do not unplug** screen is shown in multicast and TFTP upgrades after the STB has downloaded a software upgrade image from the server. This graphic is shown up to x4x v2.9.1 only. It is not used in later x4x, x5x and x0xx versions.

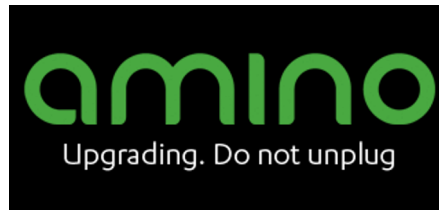

5.5.2.3 Replacing the default graphics with your own

You can replace the default graphics with your own by replacing the gif files in the image components used to build a new software upgrade image, then upgrading the software on an STB to use this new software image. When using your own graphics, please note the following points:


- Each graphic must be a gif with the same name as the file you are replacing.
- Animated gifs are not supported (using an animated gif will prevent the STB from booting).
- gifs must be less than 640 x 400 pixels. If the gif is larger than the screen dimensions, it will not be displayed.
- Transparent gifs are not supported, but if you set the transparent colour to 0, the background colour will be undefined.
- gifs with profile data are not supported. Profiles can be stripped using tools such as Graphics Magick (<http://www.graphicsmagick.org/>) and the command `gm convert +profile "*" in.gif out.gif`
- The graphic is always centred on the screen when it is displayed.

5.6 Customising upgrade splashscreens

The upgrade splashscreens can be configured to display your corporate logo or choice of graphic, and the status of the upgrade can be displayed in your corporate font and re-phrased if required. Furthermore the error codes that are represented by the flashing LED can be displayed numerically on the screen.


Configuration of the splashscreen uses three "regions" on the screen. Region 1 is the top 2/3 and is used for displaying the logo. The remaining 1/3 is split into two regions where region 2 displays the stage of the upgrade (for example 'fetching data' or 'Installing. Do not unplug') and region 3 is used to display the two digits of the error code.

Customising the upgrade display consists of simply replacing the graphics used for the display with your own graphics to create a display in your preferred format, font, colour etc.

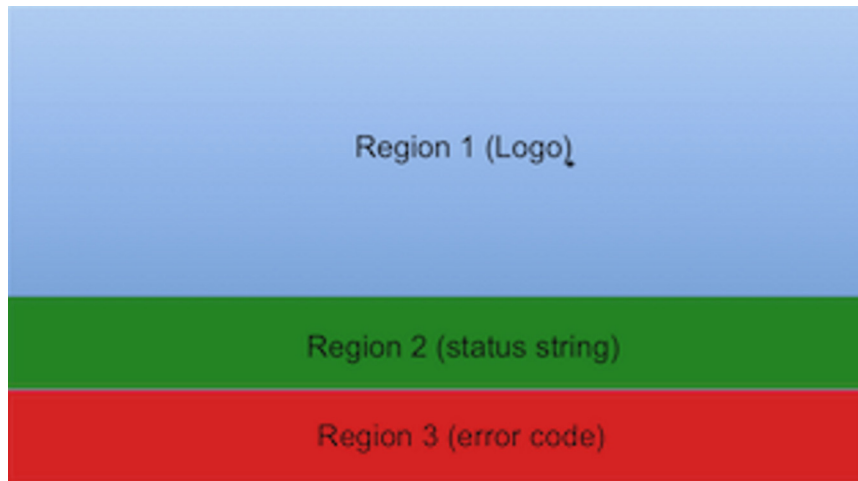

The supplied graphics are located in `upgradeimage\imagecomponents\upgrade_branding.tgz`. Replace the graphics in the .tgz file with your own. When you use your own graphics, you **must** keep the same filenames as those given in the release because the upgrade script will look for those filenames. For example, your logo must be called `logo.gif`.

The following diagram shows how you can assemble your customised upgrade display by substituting the graphics provided in the release image with your own:

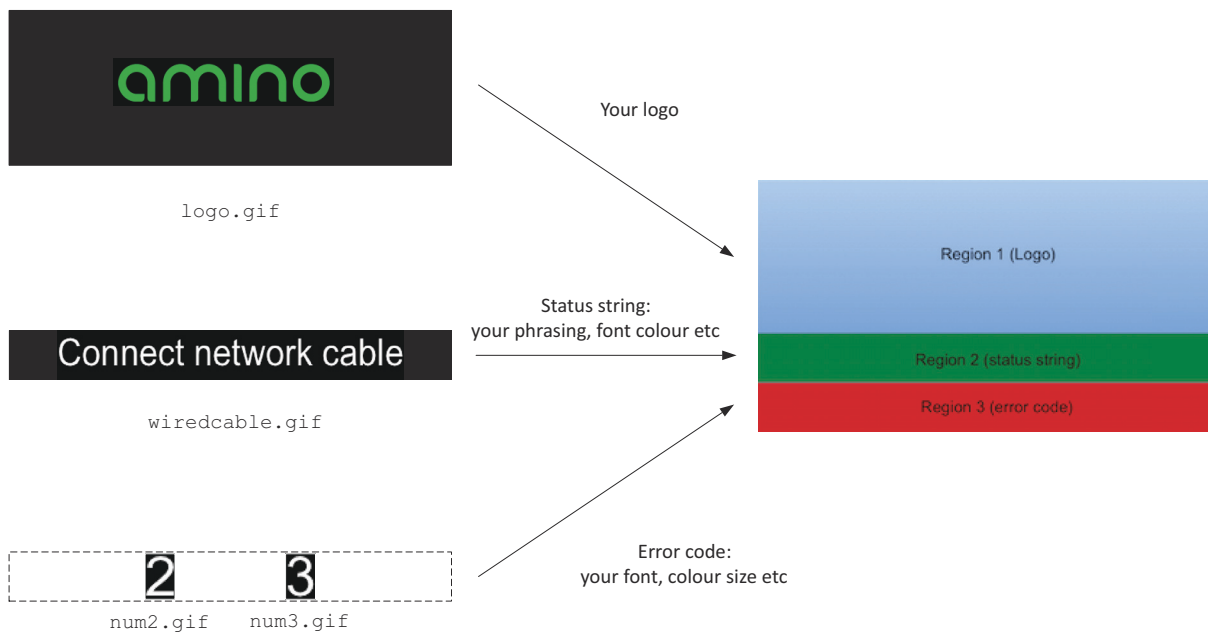

Chapter 6—STB configuration pages for Opera 11 onwards

In this Chapter:

- 6.1 About the STB configuration pages
- 6.2 Getting started
- 6.3 Preferences pages
- 6.4 Management pages
- 6.5 Configuration page settings for Opera 11

This chapter describes how to use the Amino STB configuration pages that provide customisation options for both administrators and end-users.




The screenshots for the Preferences and Management pages shown in this chapter are examples from an H140 STB, with a standard Amino/Opera homepage. Your installation will not show exactly the same screenshots if you are using a different model of STB.

6.1 About the STB configuration pages


STBs with browsers include HTML configuration pages that enable local access and editing of configuration areas. The configuration pages consist of a user area ([Preferences pages](#)) and an administrator area ([Management pages](#)).

After booting, the STB will present the home page.



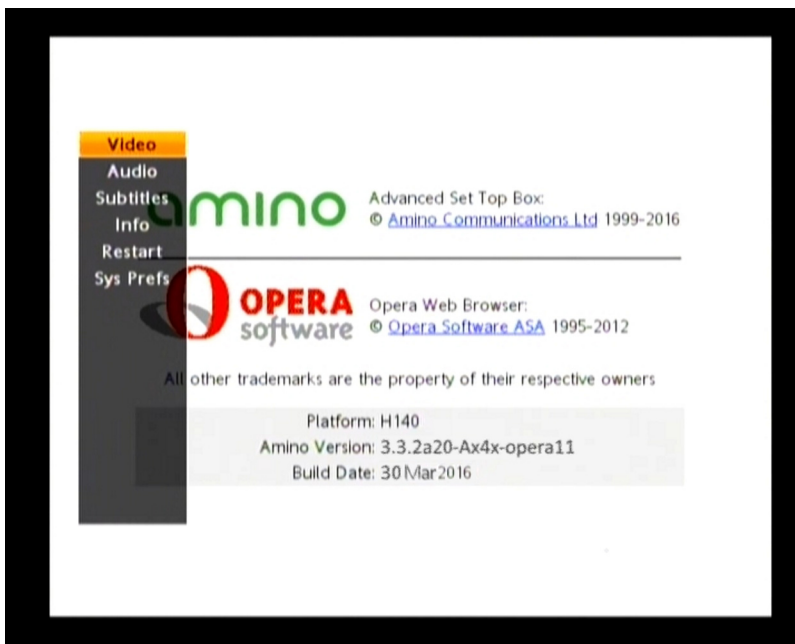

Preferences pages main menu (H140)

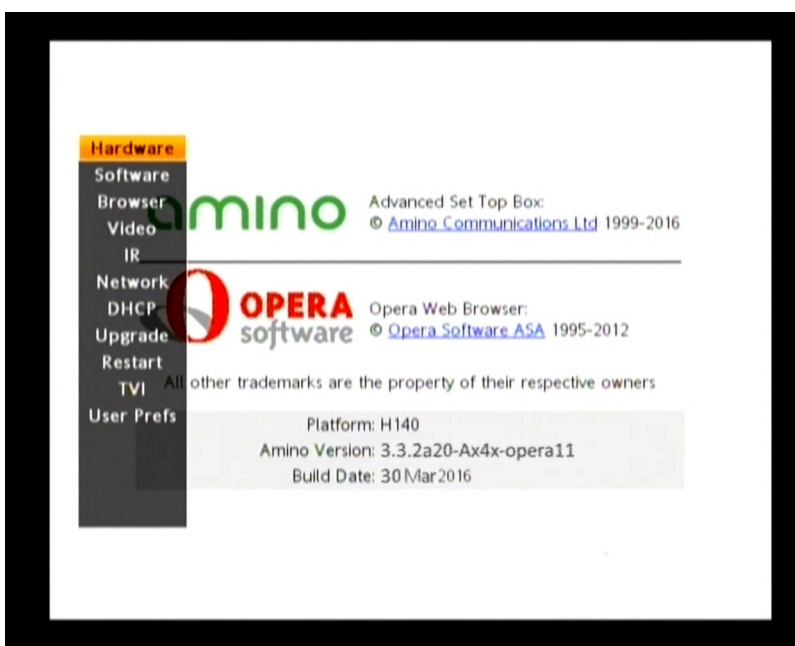

Management pages main menu (H140)

6.2 Getting started

The instructions in this section assume that the STB you want to communicate with is powered and connected to the network.

To use the Preferences pages, you will need the following:

- An IR remote control or Amino IR keyboard

To use the Management pages, you will need the following:

- An Amino IR keyboard (optionally also an IR remote control)

- You will need to know the password for the `mngread` and `mngwrite` user names on the STB. These are `leaves` and `snake` respectively if you have not changed the defaults.

Warning:

Amino strongly recommends that you change the default passwords when deploying our STBs. See the *Amino Installation and Upgrade Guide* for information on changing these default passwords.

6.2.1 Using a keyboard or remote control with the configuration pages

The table below shows which remote control buttons and keyboard keys enable important functionality.

Functionality	Remote control	Keyboard
Display Preferences page main menu.	MENU button	Alt+P key combination or Settings button
Display Management pages main menu.	-	Alt+M key combination, then password
Move around the items on the page.	Arrow buttons	Arrow keys
Display sub menu.	OK button or right arrow button	Enter key or right arrow key
Select item.	OK button	Enter key
Delete text you have entered.	P<P button	Back Space key
Exit configuration pages.	Select Exit then press OK button	Select Exit then press Enter button or press Esc

In general, [Management pages](#) require the use of a keyboard, whereas Preferences pages are designed for use with a remote control.

6.3 Preferences pages

The Preferences pages enable users to change basic STB configuration settings such as video and subtitle set-up. The pages are accessed locally via an IR remote control or keyboard and are designed to be used by end-users.




On hospitality STBs, the Preferences pages are not available to end users - they can only be accessed from the Management pages.


6.3.1 Changing the Preferences pages settings

To change configuration settings on the Preferences pages using a remote control:

1. Access the pages by pressing the **MENU** button on the remote control.

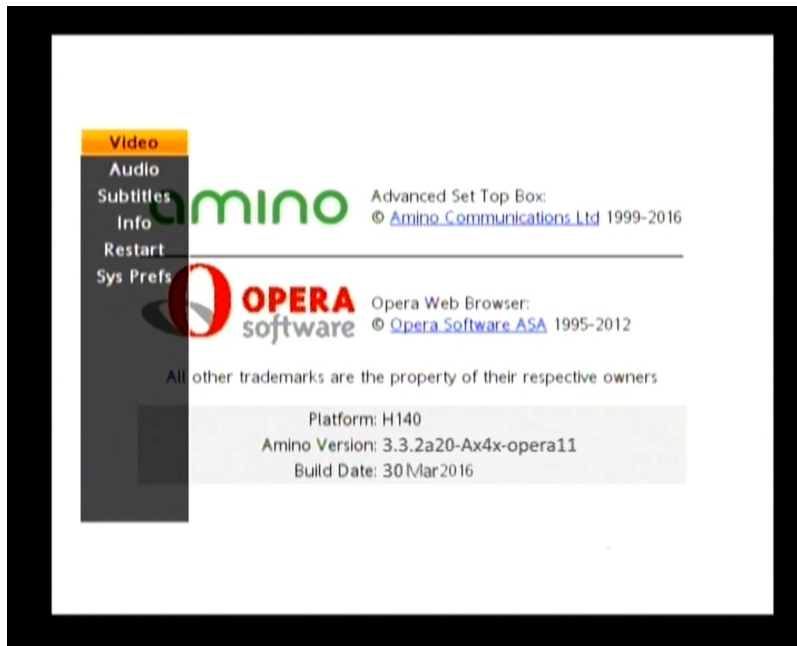

2. Use the arrow buttons to navigate to the setting you want to change.
3. Press **OK** or the right arrow button to display the secondary menu on the right hand side of the page.

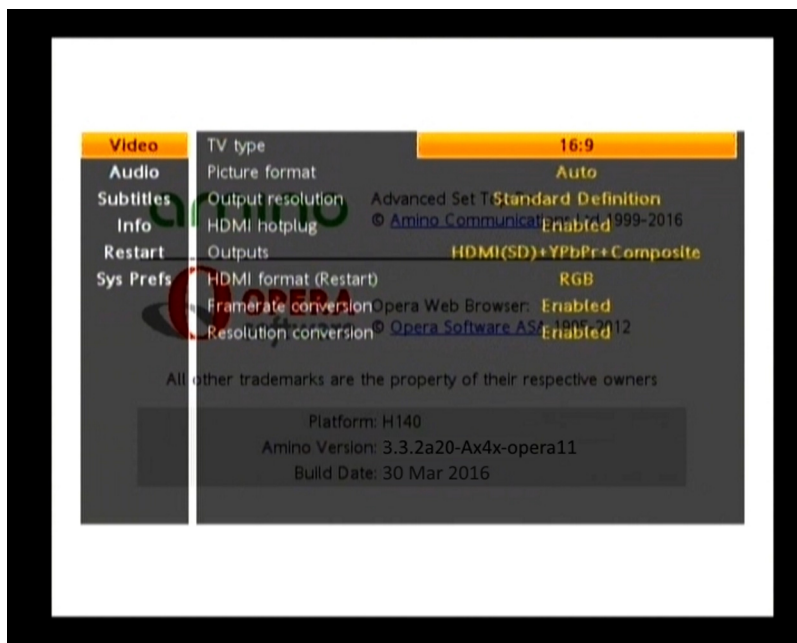

4. Use the arrow buttons to navigate to the setting you want to change.
5. Press **OK** - the setting will display arrows if there is a choice of values. Navigate through these values using the left or right arrow buttons. When you have found the setting you want press **OK** again.
6. Change any other settings you require, then exit the Preferences pages.


6.3.2 Using the Preferences pages

The Preferences pages are divided into several areas. When you first access the pages, the main menu is displayed. This menu includes the following items:

Page	Function:
Video	View and edit video display and output configuration.
Audio	View and edit audio language settings.
Subtitles	Enable or disable subtitles and select primary and secondary subtitle language.
RF (not available on all models)	Configure the RF output settings.
Info	View the STB serial number, MAC address and software version numbers. There are no user-configurable settings on this page.
Restart	Restart the STB.
Sys Prefs (H140)	Move to the Management pages

The sections that follow detail the main settings available. Each section relates to a page accessible from the main menu.

6.3.3 Video

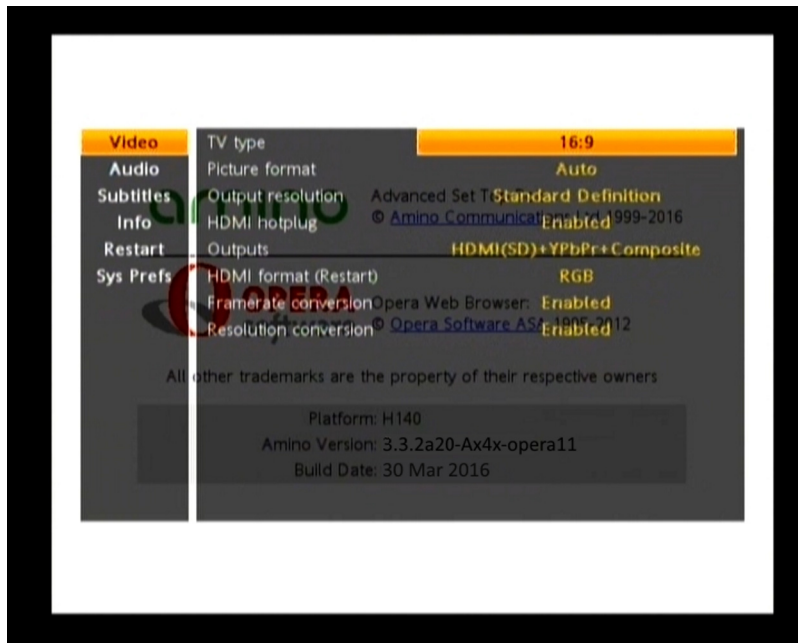

TV type

Sets how video is formatted for the TV. See also [DISPLAY_MODE](#).

The following options are available:

4:3 and 16:9

Picture format

Sets how video is formatted for the TV. See also [DISPLAY_MODE](#) and Amino *Technical Note 018 - Aspect Ratio Handling*.



The options available change depending on the **TV type** setting.

With TV type set to 16:9	
Value	Description
Stretch (4:3 to 16:9)	Ignores the aspect ratio of the video, and assume that it is the same as the ratio of the output. So on 16:9 display, a 4:3 picture will appear horizontally distorted. On a 4:3 display, a 16:9 picture will appear vertically distorted.
Auto	For televisions which have automatic ratio switching. In this mode, the television switches between 4:3 and 16:9 depending on the video content, and full content is displayed for both.
Zoom (4:3 to 16:9)	This mode zooms 4:3 video to fill a 16:9 screen, cropping the top and bottom of the picture.

Output Resolution

Selects the output resolution, which will be one of the following options for a PAL system and will also depend on whether **HDMI hotplug** is enabled:

SD

1080p

1080i

720p

576p (or 480p depending on whether the value of [TVSYSTEM](#) is PAL or NTSC).

See also [OUTPUT_RESOLUTION](#).

HDMI hotplug

Automatically switches the output between SD and HD depending on whether the HDMI cable is plugged in or not. When HDMI hotplug is enabled, the "Output Resolution" option (above) refers to the "Preferred" resolution when the HDMI cable is connected.

Outputs

Sets the output format of the STB. See also [OUTFMT](#).



x4x builds do not require a restart.

The following table shows which video output formats are available for each type of STB:

x4x STBs	
STB type	Output format choices offered
A129	COMPOSITE COMPOSITE + RGB COMPOSITE + S-VIDEO COMPOSITE + YPbPr
A140, H140, A540PVR	COMPOSITE S-VIDEO COMPOSITE + RGB COMPOSITE + S-VIDEO COMPOSITE + YPbPr RF
M540	COMPOSITE COMPOSITE + RGB COMPOSITE + S-VIDEO

x5x STBs	
STB type	Output format choices offered
A150	HDMI + RGB + COMPOSITE HDMI + YPbPr + COMPOSITE HDMI + S-Video + COMPOSITE
H150, A550PVR	COMPOSITE HDMI + COMPOSITE + RGB HDMI + COMPOSITE + YPbPr HDMI + COMPOSITE + S-VIDEO


HDMI format (Restart) Sets the video format from the HDMI output: RGB, YUV444 or YUV422. See also [HDMI_VIDEO_FORMAT](#).

Framerate conversion When framerate conversion is enabled, then native framerate passthrough is disabled, that is the STB will **not** automatically change its output framerate to match that of the incoming (native) video stream being played: instead the framerate will be converted.

For example, if the STB is set to PAL (50Hz) and an NTSC clip is played (59Hz), the STB will attempt to play the clip at PAL (50Hz). See also [NATIVE_FRAMERATE_PASSTHRU_ENABLE](#)

Resolution conversion When resolution conversion is enabled, then native passthrough is disabled, that is the STB will **not** change its output resolution (HD) to SD if the incoming (native) video stream is in SD. See also [NATIVE_PASSTHRU_ENABLE](#).

6.3.4 Audio

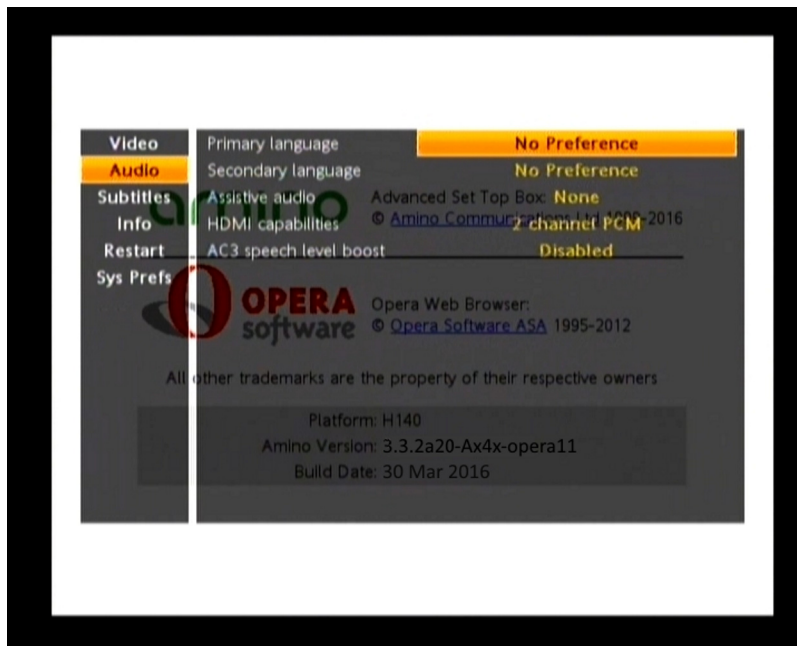

Primary language

The primary language for the audio stream. See also [PREFERRED_LANG](#).

Secondary language

The secondary language for the audio stream. See also [SECONDARY_LANG](#).

Assistive audio

Visually impaired: selects the audio stream labelled visually impaired (the assistance is usually a voice describing the programme scene and sound effects, supplementary to the programme dialogue).


Hearing impaired: selects the audio stream labelled hearing impaired.

None: disables the assistive audio.

HDMI capabilities

The HDMI options are: 2 channel PCM, 5.1 Dolby Digital & 7.1 Dolby Digital Plus. This should be set to match the decoding capabilities of the HDMI device that the STB is connected to. See also [HDMI_AUDIO_FORMAT](#).

6.3.5 Subtitles

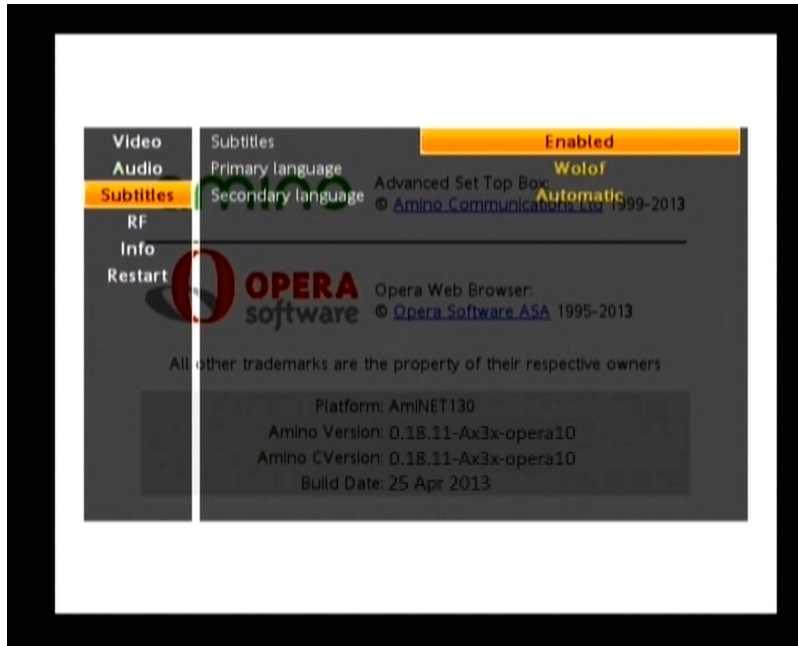

Subtitles

Enables or disables subtitles.


Primary language

Sets the primary language for the default subtitle display. See also [SUBTITLES_PREF_LANG](#).

Secondary language

Sets the secondary language for the default subtitle display. If the STB can find no subtitle information in the Primary language it uses the information in the Secondary language, See also [SUBTITLES_SECOND_LANG](#).

6.3.6 RF (not available on all models)

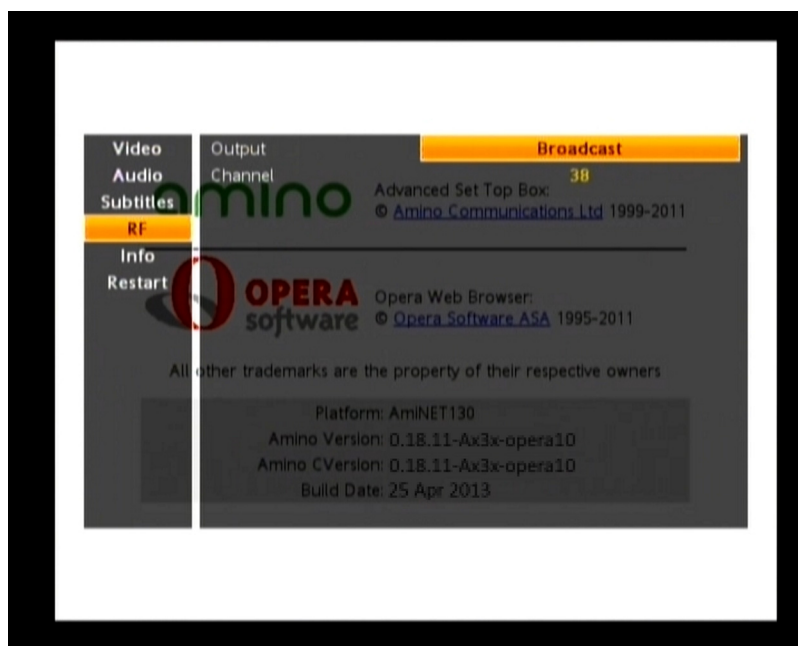

Output

Enables or disables the RF output (for STBs with RF output) and selects the type of frequency. See also [RFMOD_ENABLE](#) and [RFMOD_FREQTABLE](#).

Value	Description
Disabled	Enables or disables the RF output
Broadcast	Configures the RF modulator to use broadcast frequencies
Cable	Configures the RF modulator to use cable frequencies

Channel

Sets the RF channel for the output. See also [RFMOD_CHAN](#).

6.3.7 Info

The Info page gives you the following information about the STB:

- Serial number
- MAC address
- Software version
- CR version
- OEM version
- PBL version
- RI version

6.3.8 Restart

The Restart page allows you to restart the STB.


6.3.9 Sys Prefs (H140)

The Sys Prefs page allows you to return to the Management pages.

6.4 Management pages

The Management pages enable administrators to change STB configuration areas such as networking, channel list and browser set-up, as well as initiate basic operations such as rebooting and updating software. In addition, read-only access is available to areas such as version and STB identity settings. The pages are password-protected and accessed locally via an Amino IR keyboard (limited functionality is also supported via a remote control).

Use **Alt-M** on the keyboard to access the Management pages. You will have to enter the management password, see [Getting started](#) (the password is `leaves` if you have not changed the default). Management pages allow access to advanced configuration functions and are designed for use by administrators rather than end-users.

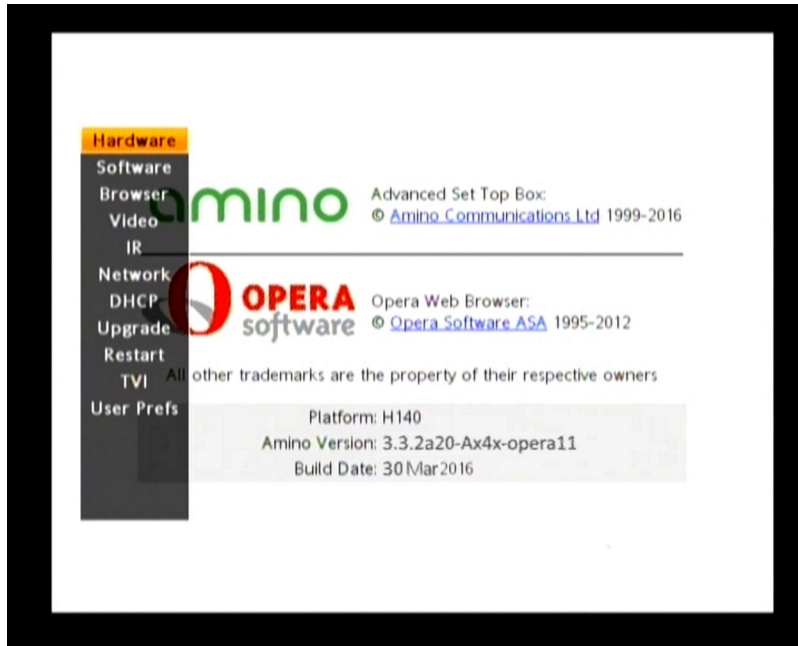


6.4.1 Using the Management pages

The Management pages are divided into several sections. When you first access the pages, the main menu is displayed. This menu includes the following section headings:


Page	Function
Hardware	View the STB hardware details. There are no configurable settings on this page.
Software	View the STB software details. There are no configurable settings on this page.
Browser	View and edit the channel URLs and graphics support information.
Video	View and edit video display and timeout settings.
IR	View and edit the IR device settings.
Network	View and edit static address information.
DHCP	View and edit the DHCP server information.
Upgrade	Upgrade the STB
Restart	Reboot the STB.
TVI (H140)	Initiate a software upgrade (multicast) or reflash.
User Prefs	Enter the Preferences pages (H140 only)

6.4.2 Hardware

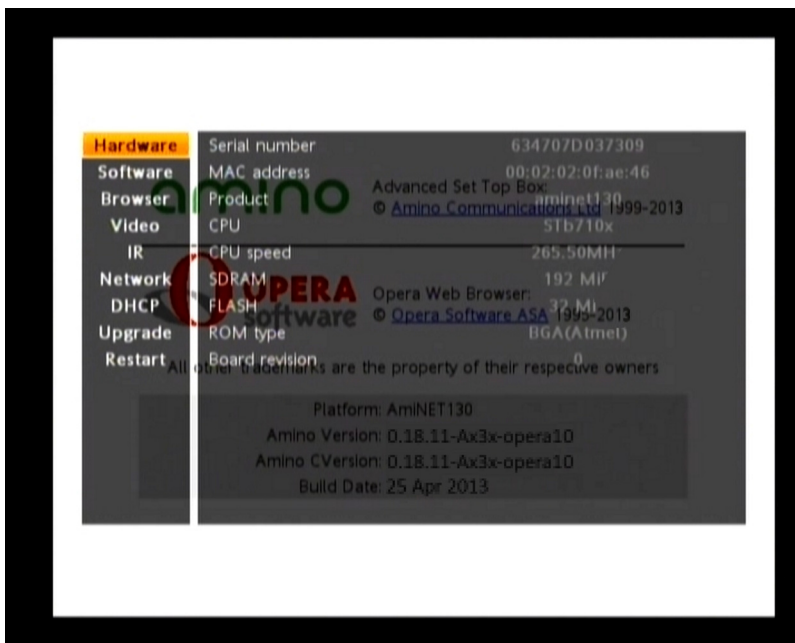

Serial number	The STB serial number.
MAC address	The STB MAC address.
Product	The STB type.
CPU	The processor type.
CPU speed	The processor speed.
SDRAM	The size of the SDRAM.
FLASH	The size of the Flash.
ROM type	The type of ROM and manufacturer.
Board revision	The board revision number.

6.4.3 Software

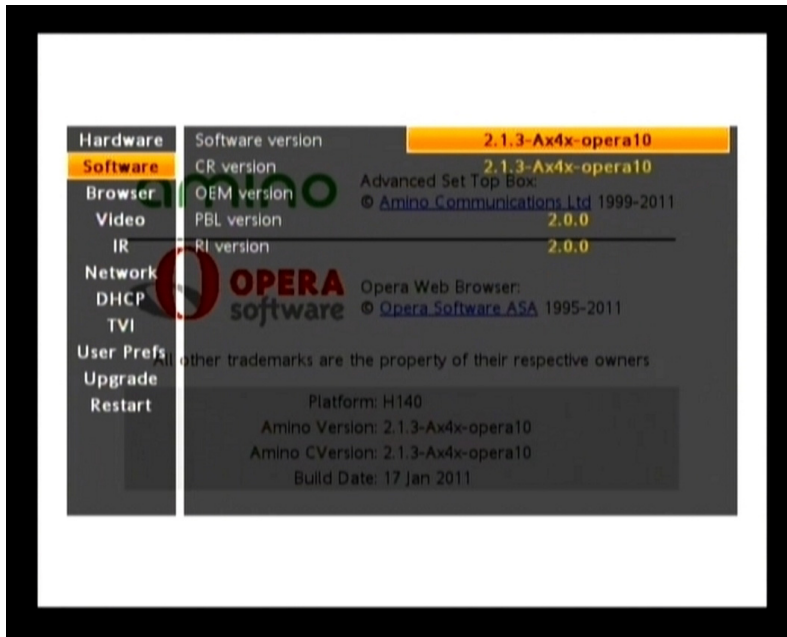

H140 software page: note TVI and User Prefs options

Software version

The version string for the software build.

CR version

The Custom Resource (CR) version for the software build.

OEM version

The OEM version as defined by the system integrator in `/mnt/nv/oemversion`.


PBL version

The Primary Boot Loader version.

RI version

The Recovery Image version.

6.4.4 Browser

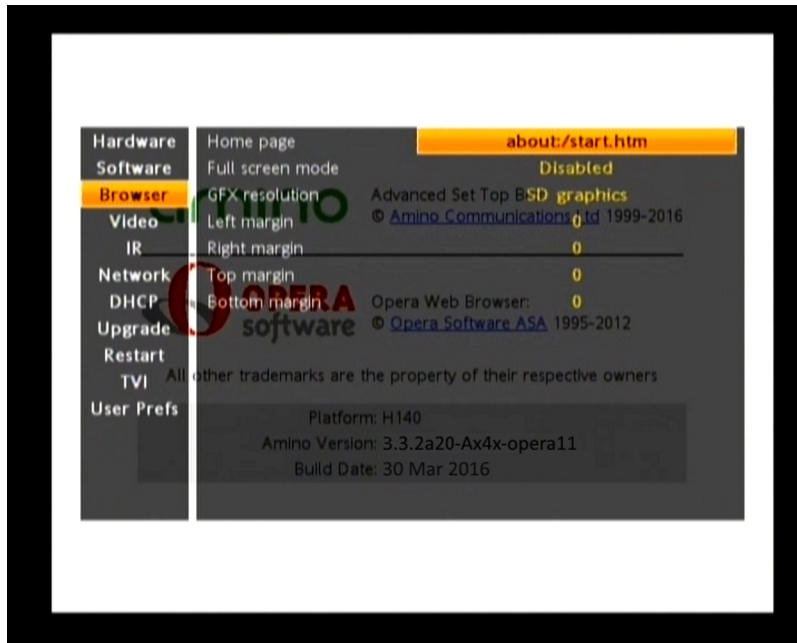

Home page

Sets the home page. This is the URL of the page the browser goes to when the STB has booted successfully and the Home key is pressed. The URL entered must be in the format `http://<address>`. See also [BROWSER_HOMEPAGE](#). (The STB can go directly to this page without pressing a key if you set the appropriate permissions in the [File access policy](#).)

Full screen mode

Enables or disables full screen mode. (x4x STBs only). This has been removed from the Management pages on x5x and x0xx STBs but can still be set within the settings file. See [FULLSCREEN](#) for the settings file values required to set full screen.

GFX resolution

Sets the graphics resolution. See also [GFX_RESOLUTION](#). (When this setting is set to SD Graphics, the value of [TVSYSTEM](#) determines the final screen resolution.)

Left Margin

Sets the left browser margin, as a percentage of the graphics plane size (that is, in the range 0 - 100). Opera also allow margins to be specified in pixels. See also [BROWSER_MARGIN_LEFT](#).

Right Margin

Sets the right browser margin, as a percentage of the graphics plane size (that is, in the range 0 - 100). Opera also allow margins to be specified in pixels. See also [BROWSER_MARGIN_RIGHT](#).


Top Margin

Sets the top browser margin, as a percentage of the graphics plane size (that is, in the range 0 - 100). Opera also allow margins to be specified in pixels. [BROWSER_MARGIN_TOP](#).

Bottom Margin

Sets the bottom browser margin, as a percentage of the graphics plane size (that is, in the range 0 - 100). Opera also allow margins to be specified in pixels. See also [BROWSER_MARGIN_BOTTOM](#).

6.4.5 Video

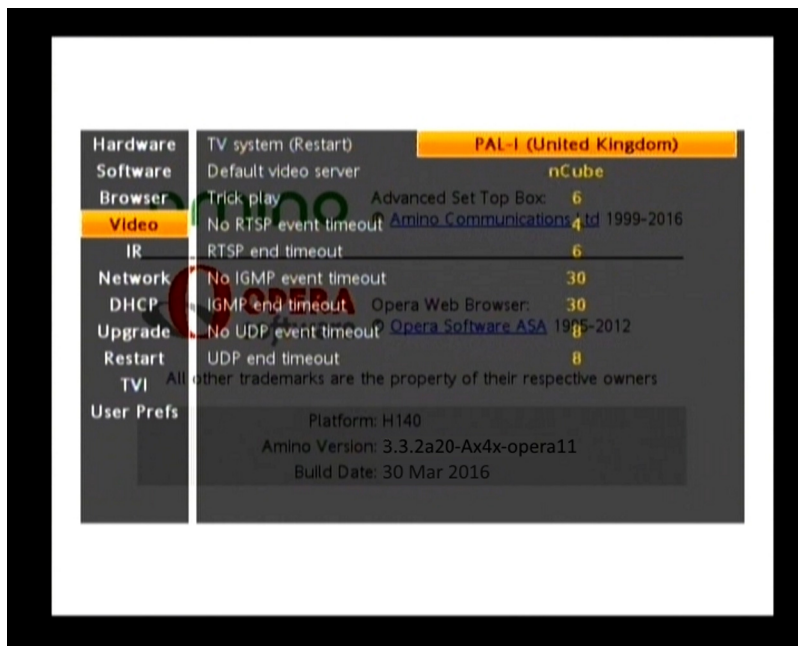

TV system Sets the TV system

Default Video Server Sets the default video server type. It is now only necessary to do this for EONA - for other servers the STB will detect the type from the RTSP stream. The available options are:

nCube	Oracle	Sapphire	SeaChange
Tandberg Openstream	Telefonica	Anevia	BitBand
Concurrent	EONA	InfoValue	Kasenna MediaBase

See also [RTSP_SERVER](#).

Trick play Sets the default fast forward and rewind **multiplier** (0-6), for example a trick play value of 2 means the fast forward and rewind speeds will be multiplied by twice normal speed. A value of 0 will pause the stream. See also [RTSP_SCALE](#).

No RTSP event timeout Sets the number of seconds to wait for video data after sending an RTSP play command, before a no-video event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [RTSP_START_TIMEOUT](#).

RTSP end timeout Sets the number of seconds to wait after no more RTSP data is seen, before an end-of-media event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [RTSP_END_TIMEOUT](#).


No IGMP event timeout Sets the number of seconds to wait for video data after sending an IGMP join command, before a no-video event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [IGMP_START_TIMEOUT](#).

IGMP end timeout Sets the number of seconds to wait after no more video data is seen, before an end-of-media event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [IGMP_END_TIMEOUT](#).

No UDP event timeout Sets the number of seconds to wait for video data after trying to connect to a UDP media stream, before a no-video event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [UDP_START_TIMEOUT](#).

UDP end timeout Sets the number of seconds to wait when no more UDP data is seen, before an end-of-media event is raised. This must be in the range 0 - 30, where 0 means that there will never be a timeout raised. See also [UDP_END_TIMEOUT](#).

6.4.6 IR

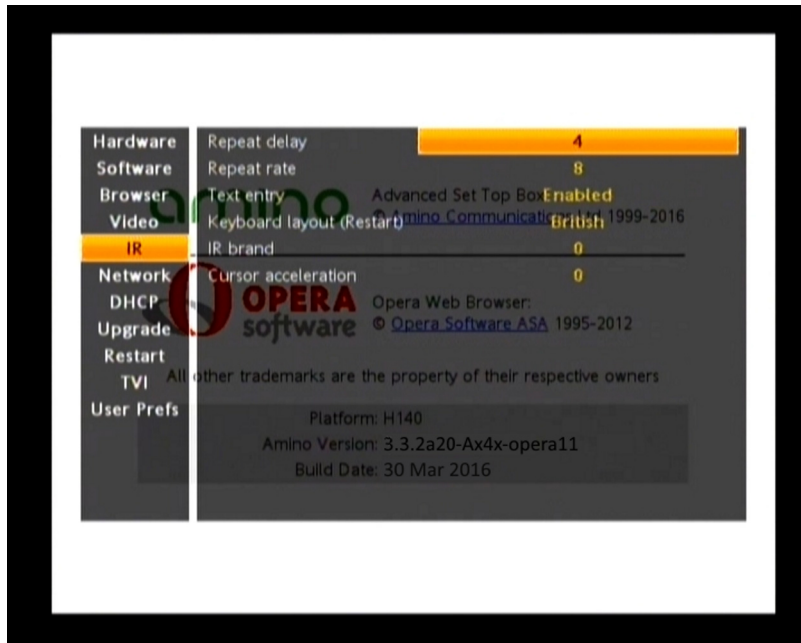

Repeat delay Sets the length of time that a user has to depress a key on an IR input device (for example the keyboard) to make it repeat. See also [DELAY_FACTOR](#).

Value	Description
1	16cs delay rate.
2	32cs delay rate.
3	64cs delay rate.
4	96cs delay rate.

Repeat rate Sets the key repeat rate in centiseconds, to control the number of characters per second that a user can enter. Set an even-number value in the range 2 - 30 (rate in centi-seconds), or set 0 for no repeat. See also [REPEAT_RATE](#).

Text entry Enables or disables remote text entry via the remote control. If text entry is enabled, the user enters text by holding down the appropriate number key. See also [TEXT_ENTRY](#).




The Repeat rate must be set to 0 (zero) and remote text entry must be enabled for remote text entry to work.

Keyboard layout Sets the keyboard layout.

- IR brand** Sets the brand code used to pair the STB with a particular Amino remote control. The value must be in the range 000 - 015 (or 100 –115 for the A130), and must match the code on the remote control that you want to use to with the STB. See also [IR_BRAND](#).
- Cursor acceleration** Sets the speed of the cursor. See also [CURSOR_ACCELERATION](#)

6.4.7 Network

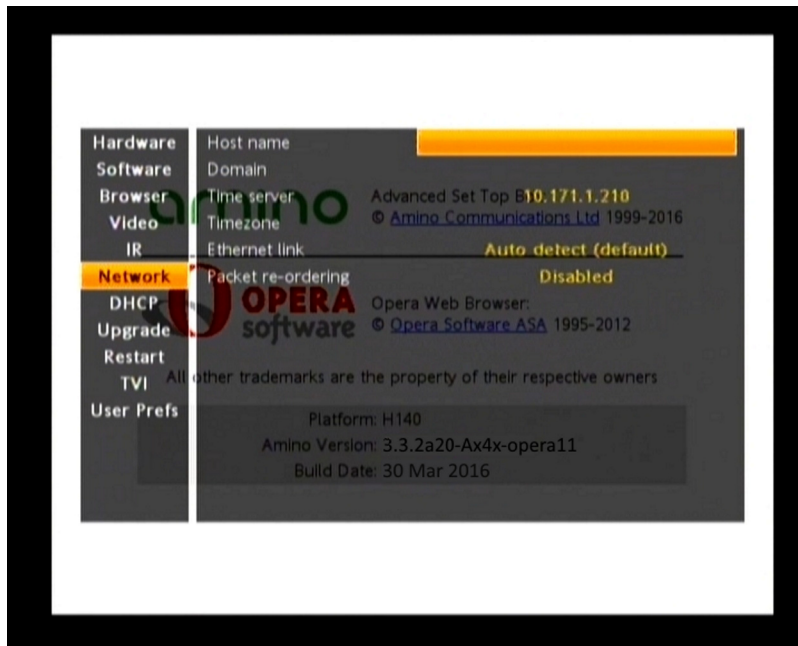


- Hostname** Sets the hostname for the STB.
- Domain** Sets the domain for the STB. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [DOMAIN](#).
- Time server** The IP address of the NTP client (either static or from the DHCP server). See [TIME_SERVER](#).
- Timezone** The time zone in which the STB is operating. See [TIME_ZONE](#).
Also see <http://www.twinsun.com/tz/tz-link.htm> or http://en.wikipedia.org/wiki/List_of_tz_zones_by_name
- Ethernet Link** Sets the default speed for the main Ethernet port to one of the following values:
Auto detect (default)
10Mbit/s Half Duplex
10Mbit/s Full Duplex
100Mbit/s Half Duplex
100Mbit/s Full Duplex



10BaseT Ethernet is not supported by x4x STBs.

See also [ETHERNET](#).

6.4.8 DHCP

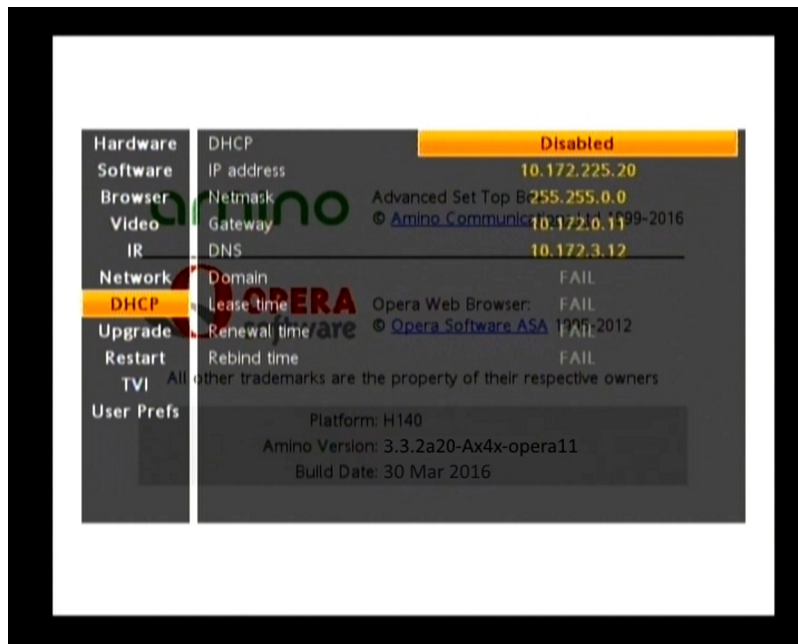

DHCP

Sets whether the STB will be getting its network settings dynamically from the DHCP server (DHCP enabled).

If the STB will **not** be getting its network settings dynamically from the DHCP server (that is, you have selected **Disabled**), then you will need to ensure that the appropriate static settings are specified on this page (for example, IP address and netmask). See also [DHCP](#).

IP Address

Sets the static IP address for the STB. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [IPADDR](#).

Netmask

Sets the netmask. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [NETMASK](#).

Gateway

Sets the IP address for the gateway for the STB. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [GATEWAY](#).

DNS

Sets the IP addresses for the domain name servers for the STB. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [DNS](#).

Domain

Sets the domain for the STB. This is only needed if the STB does not retrieve its network settings from a DHCP server. See also [DOMAIN](#).

Lease time

The DHCP lease time as returned by the DHCP server. See also [LEASETIME](#).


Renewal time

The DHCP renewal time as returned by the DHCP server. See also [RENEWALTIME](#).

Rebind time

The DHCP rebind time as returned by the DHCP server. See also [REBINDTIME](#).

6.4.9 Upgrade

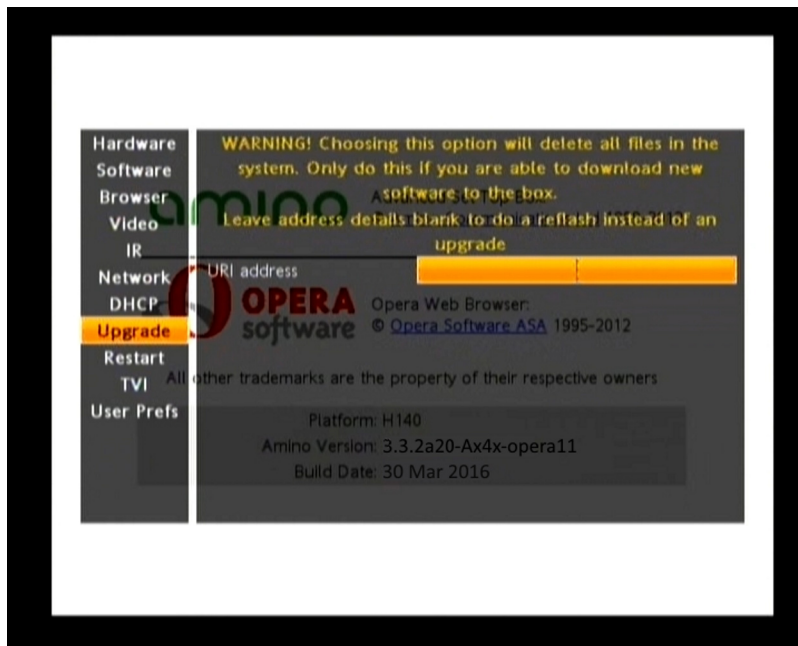

x4x upgrade screen

The Upgrade page allows you to upgrade the software via the Management pages. However, before you initiate an upgrade, you must ensure that new software is available. This means that you will need an HTTP server containing the upgrade image for a unicast upgrade, and a multicast server containing the upgrade image for a multicast upgrade.

For information about setting up an HTTP server or multicast server, refer to the *Software Installation and Upgrade Guide*.

When the STB does a **software upgrade**, it only replaces the main software image and some user configuration can be preserved. If there is a problem during the upgrade, the new software can revert to the old software.


When the STB does a **reflash**, it wipes all its current software - except configuration options stored in the NOR Flash - before installing new software, so it may not be able to revert to the old software if there is a problem.

For x4x upgrade	For x4x reflash
URI address - enter the URI for the upgrade image (either IGMP for multicast or HTTP for unicast).	URI address - leave blank

6.4.10 Restart

The restart page allows you to restart the STB.

6.4.11 TVI (H140)

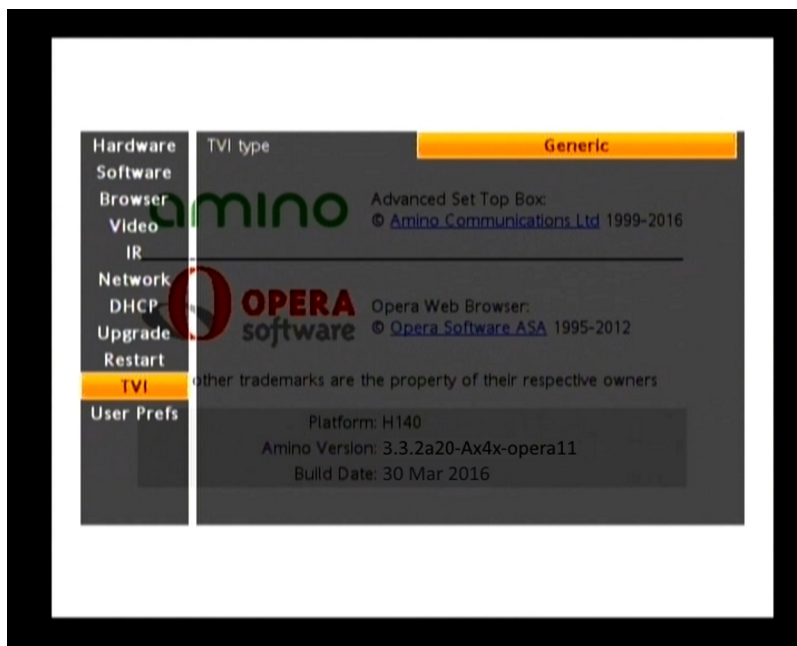

The H140 has an additional TVI page that allows you to configure the TVI interface. For more information about TVI refer to the *Amino TV Connectivity Guide*.

Generic The generic TVI setting - the Amino generic protocol will be used.

Samsung The Samsung TVI setting - the Samsung Serial Protocol for TVI operation will be used.

6.4.12 User Prefs

The User Prefs page allows you to move into the Preferences pages directly from the Management pages. If you have this page available, then in the Preferences pages there will be a Sys Prefs page that allows you to return directly to the Management pages.

6.5 Configuration page settings for Opera 11

The main settings needed to configure the STB can be accessed via the configuration pages, as detailed in the previous sections of this chapter. These settings are read from the configuration file or NOR Flash depending on the software build. The tables in [6.5.1 Preferences pages](#) and [6.5.2 Management pages](#) show the areas to which the configuration pages read and write settings for Opera 11 browsers. The format for the table is as shown:

Preferences or Management page setting	Settings file <setting> or NOR Flash <setting>
--	--

You may need this information if you want to try out settings via the configuration pages and then copy the new configuration to the image components used to create a new software image.

6.5.1 Preferences pages

Area	Settings file setting or NOR Flash setting
IR Control pages	
Repeat delay	Settings DELAY_FACTOR
Repeat rate	Settings REPEAT_RATE
Text entry	Settings TEXT_ENTRY
IR brand code	Settings IR_BRAND
A/V setup pages	
Minimum Volume	Settings MINIMUM_VOLUME
Maximum Volume	Settings MAXIMUM_VOLUME
TV type	Settings DISPLAY_MODE
Display mode	Settings DISPLAY_MODE
Output resolution	NOR Flash OUTPUT_RESOLUTION
Video output	NOR Flash OUTFMT
RF enable	NOR Flash RFMOD_ENABLE
Frequency table	NOR Flash RFMOD_FREQTABLE
RF Channel	NOR Flash RFMOD_CHAN
TV System	NOR Flash TVSYSTEM
HDMI audio mode	NOR Flash HDMI_AUDIO_FORMAT
Native Resolution Passthrough	NOR Flash NATIVE_PASSTHRU_ENABLE
Native Framerate Passthrough	NOR Flash NATIVE_FRAMERATE_PASSTHRU_ENABLE
Languages setup pages	
Primary language	Settings PREFERRED_LANG

Area	Settings file setting or NOR Flash setting
Secondary language	Settings SECONDARY_LANG
Subtitle enable CC enable	NOR Flash SUBTITLES
Primary subtitle language	Settings SUBTITLES_PREF_LANG (or <code>usersettings</code> file if the file exists)
Secondary subtitle language	Settings SUBTITLES_SECOND_LANG (or <code>usersettings</code> file if the file exists)

6.5.2 Management pages

Area	Hard coded location, Settings file setting or NOR Flash setting
STB Information pages	
Product	hard coded
CPU	hard coded
CPU speed	hard coded
SDRAM	hard coded
FLASH	hard coded
ROM type	hard coded
Board Revision	hard coded
Software version	<code>/etc/version</code>
CR version	<code>/mnt/nv/cversion</code>
OEM version	<code>/mnt/nv/oemversion</code>
MAC Address	NOR Flash MAC_ADDRESS
Serial Number	NOR Flash SERIAL_ID
Browser setup pages	
Home page	Settings BROWSER_HOMEPAGE
Full screen mode	Settings FULLSCREEN
GFX resolution	Settings GFX_RESOLUTION
Left Margin	Settings BROWSER_MARGIN_LEFT
Right Margin	Settings BROWSER_MARGIN_RIGHT

Area	Hard coded location, Settings file setting or NOR Flash setting
Top Margin	Settings BROWSER_MARGIN_TOP
Bottom Margin	Settings BROWSER_MARGIN_BOTTOM
Video setup pages	
Default Video Server	Settings RTSP_SERVER
Trick play	Settings RTSP_SCALE
RTSP start timeout	Settings RTSP_START_TIMEOUT
RTSP end timeout	Settings RTSP_END_TIMEOUT
IGMP start timeout	Settings IGMP_START_TIMEOUT
IGMP end timeout	Settings IGMP_START_TIMEOUT
UDP start timeout	Settings UDP_START_TIMEOUT
UDP end timeout	Settings UDP_END_TIMEOUT
Network setup pages	
DHCP	NOR Flash DHCP
IP Address	NOR Flash IPADDR
Netmask	NOR Flash NETMASK
Gateway	NOR Flash GATEWAY
DNS	NOR Flash DNS
Hostname	hostname HOSTNAME
Domain	NOR Flash DOMAIN
Time Server	NOR Flash TIME_SERVER
NTP Client timeout	Settings NTPCLIENT_TIMEOUT

Area	Hard coded location, Settings file setting or NOR Flash setting
Time zone	NOR Flash TIME_ZONE
Ethernet Link	NOR Flash ETHERNET
IP Address	NOR Flash IPADDR
Netmask	NOR Flash NETMASK
Gateway	NOR Flash GATEWAY
DNS	NOR Flash DNS
Lease time	DHCP LEASETIME
Renewal time	DHCP RENEWALTIME
Rebind time	DHCP REBINDTIME

Appendix A—NOR Flash settings

In this Chapter:

[A.1 NOR Flash settings](#)

[A.2 Primary and Secondary video outputs](#)

A.1 NOR Flash settings

The following table describes the settings available in the NOR Flash. For convenience, these are listed in alphabetical order. Note that whether these values are used or not depends on the software and hardware build.

Default values listed here are used if no value is supplied. In reality the actual default is build-specific, so may not be as specified.


The examples show how to enter the setting if you are editing the settings file directly. See the appropriate documentation for information on how to enter values using other means, for example, JMACX or `libconfig`.

Setting	Values	Description
BOARDREV	16-bit integer	Specifies the board type (relates to the region that the STB is designed to work in and indicates board features). This setting is read-only. Default: None. Example: <pre>libconfig-get NORFLASH.BOARDREV > 16</pre>
CUSTOMER_DATA	Up to 64 characters is the recommended limit.	A string containing up to 64 characters, this can be anything the customer wants: its use is not restricted. Default: Example: <pre>libconfig-set NORFLASH.CUSTOMER_DATA "PANIC BUTTON"</pre>
DHCP_USER_CLASS	< 12 characters.	A string containing no more than 12 characters, this can be anything the customer wants: its use is not restricted. Default: Example: <pre>libconfig-set NORFLASH.DHCP_USER_CLASS "CLASS_1"</pre>
DHCP	Y = Always use DHCP N = Do not use DHCP	Configures whether network configuration is carried out by contacting a DHCP server. Note that if DHCP is set to N, the multicast upgrade values and other settings are read from the settings listed in this table (for example, the MULTICAST_<name> settings). Default: Example: <pre>libconfig-set NORFLASH.DHCP "Y"</pre>


Setting	Values	Description
DHCP_ AUTHENTICATION	None Tele2 Samsung	None - no DHCP authentication Tele2 - DHCP authentication using the Tele2 vendor string. Samsung - DHCP authentication using the Samsung vendor string. Default: None Example: <pre>libconfig-set NORFLASH.DHCP_ AUTHENTICATION "Tele2"</pre>
DHCPTIMEOUT	Time in seconds passed as a string	Sets how long (in seconds) the DHCP timeout value should be. Default: Example: <pre>libconfig-set NORFLASH.DHCPTIMEOUT "3600"</pre>
DI		This contains a string representation of an integer that is increased on a per build basis to ensure that during a multicast upgrade an older build is not put onto the STB. Read-only. Default: 0 Example: <pre>libconfig-get NORFLASH.DI > 2</pre>
DNS	Valid IP address.	Specifies the IP address of the DNS server that the STB should be using. This is the value used if DHCP is set to N (or if the STB cannot retrieve an IP address from the DHCP server). Default: Example: <pre>libconfig-set NORFLASH.DNS "123.4.5.67"</pre>

Setting	Values	Description
ETHERNET	AUTO = auto-detect. 10HD = 10Mbit/s half duplex. 10FD = 10Mbit/s full duplex. 100HD = 100Mbit/s half duplex. 100FD = 100Mbit/s full duplex.	Sets the default speed for the main Ethernet port. Default: AUTO Example: libconfig-set NORFLASH.ETHERNET "10HD" Note: 10BaseT Ethernet is not supported by x4x STBs.
GATEWAY	Valid IP address.	Specifies the gateway for the STB. This is the value used if DHCP is set to N (or if the STB cannot retrieve an IP address from the DHCP server). Default: Example: libconfig-set NORFLASH.GATEWAY "123.4.5.67"
IEEE 802.1x	For details of the libconfig settings for IEEE 802.1x configuration and the values that can be entered, refer to <i>Amino Technical Note 089: IEEE 802.1x support</i> .	
IGMP_MAX_VER	2 or 3	Specifies the maximum version of the IGMP protocol to use. Default: 2 Example: libconfig-set NORFLASH.IGMP_MAX_VER "3"
IPADDR	Valid IP address.	Configures the static IP address of the STB. This is the value used if DHCP is set to N. Default: Example: libconfig-set NORFLASH.IPADDR "123.45.6.7"


Setting	Values	Description
LOCK	0 = The NOR Flash is not locked. 1 = The NOR Flash is locked.	Specifies the lock state of the NORFlash. If this is set to 1, values such as the MAC address of the STB, the serial number of the STB and some CA settings that identify an individual STB cannot be changed. Read-only. Default: 0 Example: <code>libconfig-get NORFLASH.LOCK</code> >1
MAC_ADDRESS		On x4x STBs, the MAC ADDRESS is read-only. If the MAC address is changed, then the STB needs to be rebooted for the new value to take effect. Amino recommends that you do not change this configuration. Default: "" Example: <code>libconfig-get NORFLASH.MAC_ADDRESS</code> >00:02:02:ff:fc:64
NETMASK	Valid IP address.	Specifies the static netmask for the STB. This is the value used if DHCP is set to N (or if the STB cannot retrieve an IP address from the DHCP server). Default: Example: <code>libconfig-set NORFLASH.NETMASK</code> "255.255.0.0"

Setting	Values	Description
OUTPUT_RESOLUTION	<p>HDNONE = Output resolution is defined by TVSYSTEM.</p> <p>HD480P59 = 480p@59.94Hz</p> <p>HD576P50 = 576p@50Hz</p> <p>HD720P50 = 720p@50Hz</p> <p>HD720P59 = 720p@59.94Hz</p> <p>HD1080I50 = 1080i@50Hz</p> <p>HD1080I59 = 1080i@59.94Hz</p> <p>HD1080P50 = 1080p@50Hz</p> <p>HD1080P59 = 1080p@59.94Hz</p> <p>HDAUTO = for x4x series STBs this allows switching between SD and HD depending on whether an HDMI cable is connected or not.</p> <p>HDAUTO = for x5x and x0xx series STBs this reads the EDID of the TV (via HDMI) and configures the STB to match the native resolution of the TV.</p>	<p>Used to set the output video resolution.</p> <p>HDNONE means that the HD-capable outputs are set to the mode defined by TVSYSTEM.</p> <p>Any analogue SD output is always defined by TVSYSTEM, regardless of the value of OUTPUT_RESOLUTION.</p> <p>Also see Primary and Secondary video outputs for further information.</p> <p>Default:</p> <p style="padding-left: 20px;">720p</p> <p>Example:</p> <pre>libconfig-set NORFLASH.OUTPUT_RESOLUTION "HD576p50"</pre> <p> If the EDID data provides a resolution that is not supported by the TV, then the closest supported resolution will be used instead.</p>

Setting	Values	Description
OUTFMT	CVBS-RGBOFF Composite CVBS-RGBON Composite + RGB LC-RGBOFF S-video LC-RGBON S-video + RGB CVBS-LC Composite + S-video CVBS-LBR Composite + Component LBR-CVBS-LC Component + Composite + S-video RGB-CVBS-LC Composite + S-video + RGB	Defines the output format of any standard definition output from the STB. The output formats available depend on the STB and video cable(s) used. Default: Example: <pre>libconfig-set NORFLASH.OUTFMT "CVBS-RGBOFF"</pre> See Appendix G, "Video output formats" and Overview of command options for further details.
PPP_PASSWORD	A maximum of 32 characters.	Configures the password to use in PPP builds. PPP builds only. Default: <pre>""</pre> Example: <pre>libconfig-set NORFLASH.PPP_PASSWORD "MyPassword"</pre>
PPP_USERNAME	A maximum of 64 characters.	Configures the user name to use in PPP builds. PPP builds only. Default: <pre>""</pre> Example: <pre>libconfig-set NORFLASH.PPP_USERNAME "MyUserName"</pre>
RFMOD_CHAN	Integer less than 128.	Sets the RF channel for boards that have an RF modulator. Default: <pre>""</pre> Example: <pre>libconfig-set NORFLASH.RFMOD_CHAN "3"</pre>

Setting	Values	Description															
RFMOD_ENABLE	Y = Enable the RF tuner. N = Disable the RF tuner.	Enables or disables the RF modulator for boards that have one. Default: Example: <pre>libconfig-set NORFLASH.RFMOD_ENABLE "Y"</pre>															
RFMOD_FREQTABLE	BROADCAST CABLE	Configures whether the RF modulator uses cable or broadcast frequencies. Default: Example: <pre>libconfig-set NORFLASH.RFMOD_FREQTABLE "CABLE"</pre>															
SERIAL_ID		The SERIAL_ID is read-only on x4x STBs. Default: The serial number of the STB is the usual value. Example: <pre>libconfig-get NORFLASH.SERIAL_ID >C01008F000276</pre>															
SOFTWARE_URI		The URI for an image when recovering the STB if there is no DHCP response. Default: Example: <pre>libconfig-set NORFLASH.SOFTWARE_URI <http_url></pre>															
 <p>The NORFLASH.SOFTWARE_URI setting is overridden by the DHCP setting where shown in this table.</p> <table border="1" data-bbox="738 1368 1382 1747"> <thead> <tr> <th>DHCP</th> <th>SOFTWARE URI</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Y</td> <td>Y</td> <td>DHCP used</td> </tr> <tr> <td>Y</td> <td>N</td> <td>DHCP used</td> </tr> <tr> <td>N</td> <td>Y</td> <td>SOFTWARE_URI used</td> </tr> <tr> <td>N</td> <td>N</td> <td>Further DHCP requests attempted</td> </tr> </tbody> </table>			DHCP	SOFTWARE URI	Result	Y	Y	DHCP used	Y	N	DHCP used	N	Y	SOFTWARE_URI used	N	N	Further DHCP requests attempted
DHCP	SOFTWARE URI	Result															
Y	Y	DHCP used															
Y	N	DHCP used															
N	Y	SOFTWARE_URI used															
N	N	Further DHCP requests attempted															

Setting	Values	Description
SUBTITLES	Y = Display subtitles/closed captions N = Do not display subtitles/closed captions	Enable or disable the subtitle/closed caption display when playing video that contains subtitles/closed captions. Default: N Example: <code>libconfig-set NORFLASH.SUBTITLES "Y"</code>
TIME_SERVER	Valid IPv4 address.	Specifies the location of the time server for the STB to use. This is the value used if DHCP is set to N (or if the STB cannot retrieve an IP address from the DHCP server). The time server address must be in dot-quad format (234.56.78.9). Default: Example: <code>libconfig-set NORFLASH.TIME_SERVER "234.56.78.9"</code>
TIME_ZONE		A string in the format sss+n or sss-n. This implementation inverts the sign, so for a time zone of GMT plus 1 hour the string would be GMT-1. The time zone can also be set to a value from the IANA Time Zone Database. See http://en.wikipedia.org/wiki/List_of_tz_database_time_zones Default: Example: <code>libconfig-set NORFLASH.TIME_ZONE "GMT+1"</code> Time zone is GMT minus one hour (that is, if GMT=12:00, then TZ = 11:00)
TVSYSTEM	PAL-B = Australia, Ghana. PAL-G = Europe. PAL-H = Belgium. PAL-I = UK. PAL-M = Brazil. PAL-N = South America. PAL-CN = Argentina. NTSC-J = Japan. NTSC-M = US.	Sets the TV system that the STB will operate in. Note: After the value has been altered the STB will need to be rebooted for the change to take effect. Default: Example: <code>libconfig-set NORFLASH.TVSYSTEM "PAL-B"</code>

Setting	Values	Description
WIRELESS_COUNTRY	A string that contains an ISO 3166-1 alpha-2 code or "" to disable country code setting and fallback to region.	Specifies the wireless country. Note that if WIRELESS_COUNTRY is set, then WIRELESS_REGION must also be set. Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_COUNTRY "GB"</pre>
WIRELESS_REGION	The WiFi region identification string.	Specifies the WiFi region as listed in <i>Amino Technical Note 052 WiFi Support</i> . The WiFi region identification strings for particular geographical regions are listed in Technical Note 052. This setting will persist over a factory reset. Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_REGION "GR-A09"</pre>
WIRELESS_REGION_LOCKED	Y = locks the wireless region. Any other value means it is unlocked so the region can be changed by the end user.	Locks the wireless region so that it cannot be changed by the end user, where required by local regulations. This setting will persist over a factory reset. Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_REGION_LOCKED "Y"</pre>
 Important information for Distributors If a Distributor wants to move a locked STB to an unlocked region, he will need to set WIRELESS_REGION_LOCKED to 'unlocked' so that the user in the unlocked region can change WIRELESS_REGION as required. It is the Distributor's responsibility to unlock the region: if it is not done, their users will be stuck with a locked STB. Similarly, if a Distributor wants to move an unlocked STB to a locked region, then it is the Distributor's responsibility to set WIRELESS_REGION, and then lock the STB using WIRELESS_REGION_LOCKED.		
WIRELESS_SSID		Specifies the SSID of a configured wireless access point (WAP). Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_SSID "AMINO_AP_TEST"</pre>

Setting	Values	Description
WIRELESS_ PASSPHRASE		A passphrase that allows access to a WAP. Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_ PASSPHRASE "My_passphrase"</pre>
WIRELESS_SECURITY_ _MODE	OPEN WEP WPA-PSK-TKIP WPA-PSK-AES WPA2-PSK-TKIP WPA2-PSK-AES WPA-ENT-TKIP WPA-ENT-AES WPA2-ENT-TKIP WPA2-ENT-AES	Sets the security mode for a configured WAP. Default: Example: <pre>libconfig-set NORFLASH.WIRELESS_ SECURITY_MODE "WPA-PSK-TKIP"</pre>

A.2 Primary and Secondary video outputs

x4x STBs have a primary and a secondary video output. The primary video output can render both the video and GFX planes, whilst the secondary video output only renders the video plane.

On x5x STBs, graphics are available on the HDMI output. They can be available on the analogue output **only** if HDMI is not connected and SD is selected.

On x0xx STBs, the GFX plane is present on both outputs.

A.2.1 OUTPUT_RESOLUTION

NORFLASH.[OUTPUT_RESOLUTION](#) controls the primary output. If this is set to an HD resolution (720p, 1080i and so on) then the primary interface will feed the HDMI and/or HD-YUV outputs only. Only if it is set to HDNONE, or left undefined will the primary interface feed the HDMI, CVBS, S-video, YUV/RGB outputs at SD resolution.

The secondary interface is used if the primary interface is feeding HD outputs. In this case, CVBS and S-video will be fed from the secondary interface.

In summary:

Output Resolution setting	Primary Interface feeds:	Primary Interface Resolution	Secondary Interface (SD only)
HD (720p, 1080i and so on)	HDMI HD-YUV	HD	CVBS S-video
HDNONE	HDMI CVBS S-video YUV/RGB	SD	Only used when primary interface is set to HD

Appendix B—Settings file contents

In this Chapter:

- B.1 Available settings
- B.2 PVR sessions
- B.3 Remote layout options
- B.4 LED Configuration operation by STB product
- B.5 Volume control

The following table describes the settings available in the `settings` file. Settings are described in alphabetical order. Note that whether these values are used or not depends on the software and hardware build.

Default values listed here are used if no value is supplied, but again default values depend on the software and hardware build so may not be exactly as listed here.

The examples show how to enter the setting if you are using a command line interface.

For information on how to enter values using other methods, see

[Chapter 6, "STB configuration pages for Opera 11 onwards"](#)

[Appendix D, "Using the configuration techniques"](#)

B.1 Available settings

Setting	Allowed values	Description
ALT_TIME_SERVERS	A string that holds a comma separated list of FQDNs (ntp.domain.com) or dot quad formatted addresses (up to a total of four). The list can contain a mix of FQDNs and dot quad addresses.	In deployments where a DHCP server is not present, this setting defines alternative NTP servers if the one stored in <code>TIME_SERVER</code> does not respond. Up to 4 server addresses can be added for static configuration. The IP addresses can be IPv6 addresses on systems that support IPv6. Default: Example: <pre>libconfig-set SETTINGS. ALT_TIME_SERVERS "10.172.0.3,,,"</pre>
ANY_KEY_STANDBY_RECOVER	Y = Any key can be used to bring the STB out of standby. N = Only the power button can be used to bring the STB out of standby.	Sets which remote control keys can bring the STB out of standby. Use either Y, N or NULL. If the value has not been set, use the default value, N. Default: N Example: <pre>libconfig-set SETTINGS.ANY_KEY_ STANDBY_RECOVER "Y"</pre>
AUDIO_DESCRIPTION_STREAM_TYPES		A comma separated string of values representing the audio descriptor PID of the allowed streams. Default: Example: <pre>libconfig-set SETTINGS.AUDIO_ DESCRIPTION_STREAM_TYPES "0x0C0"</pre>

Setting	Allowed values	Description
AVSYNC_WAIT	Y = Enable wait. N = Disable wait.	Configures whether the channel changer waits for AV sync before displaying. The value can be overridden by settings in the URL. If the value has not been set, use the default value. Default: N Example: <code>libconfig-set SETTINGS.AVSYNC_WAIT "Y"</code>
BROWSER_ALLOC_EXTRA		Controls the amount of extra allocation space (in MiB) on top of the cache to use in a browser. Default: 18 Example: <code>libconfig-set SETTINGS.BROWSER_ALLOC_EXTRA "10"</code>
BROWSER_CACHE_DOCUMENT		Controls the amount of RAM (in MiB) to be allocated for document caching in a browser. Default: 4 Example: <code>libconfig-set SETTINGS.BROWSER_CACHE_DOCUMENT "2"</code>
BROWSER_CACHE_IMAGES		Controls the amount of RAM (in MiB) to be allocated as a cache for the graphics in a browser. Default: 20 Example: <code>libconfig-set SETTINGS.BROWSER_CACHE_IMAGES "10"</code>
BROWSER_CACHE_RAM		Controls the amount of RAM (in MiB) to be allocated for RAM caching in a browser. Default: 6 Example: <code>libconfig-set SETTINGS.BROWSER_CACHE_RAM "1"</code>

Setting	Allowed values	Description
BROWSER_ENABLECOOKIES	Y = Enable cookies N = Disable cookies.	Enables or disables cookies. This setting cannot be accessed via <code>libconfig</code> . See also BROWSER_PRESERVECOOKIES . Default: Y Example: <pre>libconfig-set SETTINGS.BROWSER_ENABLECOOKIES "N"</pre>
BROWSER_FALLBACK_BEHAVIOUR (Opera 12)	internal = Display the browser's in-built error page. (Default) popup = Display the "Failed to load webpage" popup. none = Return to the previous page. <url> = Set to the URL of a custom page to load, for example: 'http://www.google.com' or 'file://mnt/nv/error.html'.	It is now possible to configure the default fallback behaviour of the browser if loading a URL fails. Default: internal Example: <pre>libconfig-set SETTINGS.BROWSER_FALLBACK_BEHAVIOUR "popup"</pre>
BROWSER_HEAP_EXTRA		Controls the amount of extra heap space (in MiB) on top of the allocation to use in a browser. Default: 10 Example: <pre>libconfig-set SETTINGS.BROWSER_HEAP_EXTRA "8"</pre>

Setting	Allowed values	Description
BROWSER_HELPPAGE	URL	<p>Sets the help page. This is the URL for the page that the browser goes to when the Help key is pressed.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.BROWSER_HELPPAGE "http://www.aminocom.com/help"</pre>
BROWSER_HOMEPAGE	URL	<p>Sets the home page. This is the URL for the page that the browser goes to when the Home key is pressed and when the STB has booted successfully. Note: The AmiNET 5.0.0 build does not include a homepage setting. You must set the BROWSER_HOMEPAGE setting to a home page, otherwise when you flash an Opera build it is not clear that the STB has booted as it will display a black screen.</p> <p>Default:</p> <pre>about:/start.htm</pre> <p>Example:</p> <pre>libconfig-set SETTINGS.BROWSER_HOMEPAGE "http://www.aminocom.com"</pre>
BROWSER_MARGIN_LEFT BROWSER_MARGIN_RIGHT BROWSER_MARGIN_TOP BROWSER_MARGIN_BOTTOM	0 - 100	<p>Sets the browser margins as a percentage (%) of the graphics plane size.</p> <p>Must be defined as percentage and will not work without being defined.</p> <p>Valid values are 0 to 100%.</p> <p>Setting these values to 100% will set the margins to cover the entire graphics plane.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.BROWSER_MARGIN_LEFT "20"</pre>
BROWSER_PRESERVECOOKIES	<p>Y = Preserve cookies over a reboot</p> <p>N = Do not preserve cookies over a reboot</p> <p>NULL = disabled</p>	<p>Allows the browser to run the <code>rc.cookies</code> script so that cookies are persistent over a reboot of the STB.</p> <p>Default:</p> <pre>NULL</pre> <p>Example:</p> <pre>libconfig-set SETTINGS.BROWSER_PRESERVECOOKIES "Y"</pre>

Setting	Allowed values	Description
BROWSER_UNLOAD_VIDEO	Y = Always stop video. N = Never stop video.	Sets the default for whether video is stopped when the page changes. The setting can be overwritten on a per page basis by the HTML page. This setting cannot be accessed via libconfig. Default: Y Example: libconfig-set SETTINGS.BROWSER_UNLOAD_VIDEO "N"
BROWSER_VSYNC (Opera 12 onwards)	Y = Enable Vsync. N = Disable Vsync.	Sets whether the STB will wait for Vsync when joining a stream. Enabling VSync gives a more pleasing cosmetic experience during animations, but has a slight performance impact. Default: N Example: libconfig-set SETTINGS.BROWSER_VSYNC "Y"
CA_ARGS		Allows you to set the default configurations for the Verimatrix CA client(s). Allows you to set a string to pass configuration parameters. To configure the IPTV client add VCAS_BOOT=<ipaddress>:<port> to SETTINGS.CA_ARGS To configure the webclient, add VMWC_BOOT=<ipaddress>:<port> and VMWC_COMPANY=<company name> to CA_ARGS (separate each parameter with a space) To ensure the Verimatrix client will not establish a connection to the VCAS server until the middleware writes a file to indicate that the entitlements have been set, include VCAS_ENTITLEMENT_FILE=<path> in the setting string, where <path> is the location of the VCAS entitlement file.

Setting	Allowed values	Description
CA_DHCP_AUTH	Y - Configuration received by the CA client via DHCP will be used and can override the current configuration. N - Any configuration received by the CA client via DHCP is ignored.	Allows you to enable or disable configuration of the Verimatrix clients via DHCP. Default: Y Example: libconfig-set SETTINGS.CA_DHCP_AUTH "Y"
CAPTIONING_GFX_RESOLUTION	SD = Standard definition (this depends on the TVSYSTEM setting). HD720 = Equivalent to 1280 x 720 resolution. HD1080 = Equivalent to 1920 x 1080 resolution.	Allows the desired captioning or subtitle GFX resolution to be configured independently from the main GFX resolution. Default: SD Example: libconfig-set SETTINGS.CAPTIONING_GFX_RESOLUTION "HD720"
CAPTIONING_WINDOW_LEVEL	top middle bottom	When initialising the window for subtitles or closed captions the window position can be specified in the z-plane. Default: bottom Example: libconfig-set SETTINGS.CAPTIONING_WINDOW_LEVEL "top"
CC_DIGITAL_SERVICE	0 = Disable 708 digital service. 1 = Default value (same as not set) value. 2 to 63 = Range of valid custom service numbers.	Sets whether EIA-608B captions are used in preference to EIA-708 captions when both are present in a stream. This setting avoids disruption to a service if stream configuration issues result in invalid EIA-708 closed caption data (that is, the 708 packets are available but do not contain usable captions). Default: 1 Example: libconfig-set SETTINGS.CC_DIGITAL_SERVICE "0"


Setting	Allowed values	Description
CC_FORCE_SCROLL_ON_CR	Y = Enable CC scrolling when <CR> detected N = Disable CC scrolling when <CR> detected	Controls whether CC text lines will be scrolled when detecting <CR> characters in the data. Default: N Example: libconfig-set SETTINGS.CC_FORCE_SCROLL_ON_CR "Y"
CC_PREFERENCE	ASTC = The closed captions will use ASTC encapsulation. SCTE = The closed captions will use SCTE encapsulation.	Sets which closed captions encapsulation should be used. If left blank, closed captions will use the ASTC encapsulation Default: ASTC Example: libconfig-set SETTINGS.CC_PREFERENCE "ASTC"
CEC_AUTO_RESPONSE		Controls whether x5x series STBs respond to CEC commands in the same way as x4x series STBs, that is, certain commands are handled outside the middleware. The CEC requests being handled are: Set Menu Language Routing Information Active Source Give Physical Address Abort Message Default: Y Example: libconfig-set SETTINGS.CEC_AUTO_RESPONSE "Y"
CURSOR_ACCELERATION	-5 to +5	Increases the sensitivity of the mouse cursor (the pointer speed). Making a change to this setting will require the STB to be rebooted before the change takes effect. This setting is used with Opera 11 only and has no effect with STBs using Opera 12 (x5x and x0xx STBs). Default: 0 Example: libconfig-set SETTINGS.CURSOR_ACCELERATION "2"

Setting	Allowed values	Description
DEFAULT_VOLUME	0 to 100	Sets the default volume that the STB uses when it boots. This must be between <code>MINIMUM_VOLUME</code> and <code>MAXIMUM_VOLUME</code> , that is, 0 – 100. You are recommended not to change the value from the default. Default: 100 Example: <code>libconfig-set SETTINGS.DEFAULT_VOLUME "80"</code>
DELAY_FACTOR	1 = 16cs delay. 2 = 32cs delay. 3 = 64cs delay. 4 = 96cs delay.	Sets the length of time that a user has to depress a key on an IR input device (for example, the keyboard) to make it repeat. Default: 2 Example: <code>libconfig-set SETTINGS.DELAY_FACTOR "1"</code>
DIAL_USER_ENABLE (Minerva 5.7 SP3 or later only)	Y = Enables DIAL N = Disables DIAL	Enables or disables the DIAL server on the STB if the middleware has enabled DIAL. If the DIAL server is running when this setting is changed, the changes will be reflected immediately. See also FRIENDLY_NAME . Default: Example: <code>libconfig-set SETTINGS.DIAL_USER_ENABLE "Y"</code>
DISABLE_CAPTIONING_IN_PIG	Y = Disable captioning when video window is not full screen. N = Enable captioning in video window. SCALE = Enable scaled captioning and teletext in video window.	Disables or enables captioning in video window. Selecting <code>SCALE</code> will automatically scale the captions to the size of the PIG. Default: SCALE Example: <code>libconfig-set SETTINGS.DISABLE_CAPTIONING_IN_PIG "Y"</code>


Setting	Allowed values	Description
DISPLAY_MODE	<p><code>panscan</code> 4:3 TV; 16:9 content displayed in pan and scan presentation mode.</p> <p><code>letterbox</code> 4:3 TV; 16:9 content displayed in letterbox presentation mode.</p> <p><code>widescreen</code> 16:9 TV; aspect ratio of content signalled on SD outputs, 4:3 content displayed in pillarbox presentation mode on HD outputs.</p> <p><code>ignore</code> 16:9 TV; all content stretched to fill the screen.</p> <p><code>widezoom</code> 16:9 TV; 4:3 content displayed in zoom presentation mode.</p>	<p>Configures how the video is formatted for the TV.</p> <p>Select <code>panscan</code> for televisions which do not have automatic aspect ratio switching, and where you want the video picture to fill the full 4:3 screen. In this mode, 4:3 content fits the screen correctly, and any 16:9 video content is cropped on the left and right sides.</p> <p>Select <code>letterbox</code> for televisions which do not have automatic aspect ratio switching, and where you want to display the full 16:9 content. In this mode, 4:3 content fits the screen correctly, and any 16:9 content is displayed in full, with black bars above and below it ('letterbox' style).</p> <p>Select <code>widescreen</code> for televisions which have automatic ratio switching. In this mode, the television switches between 4:3 and 16:9 depending on the video content, and full content is displayed for both.</p> <p>Select <code>ignore</code> to ignore the aspect ratio of the video and stretch all video to the equivalent of 16:9 ratio. A 4:3 ratio picture will appear distorted.</p> <p>Select <code>widezoom</code> to zoom in on 4:3 content so that it fills the width of a 16:9 screen. The top and bottom of the picture will be lost. This option is only available in software releases from 2.6.2 onwards.</p> <p>For more information on aspect ratios refer to <i>Amino Technical Note 018 Aspect Ratio Handling</i> and the <i>Amino TV Standards Guide</i>.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.DISPLAY_MODE "widescreen"</pre>

Setting	Allowed values	Description
DOLBY_RF	0 = line mode. 1 = RF mode.	Sets the Dolby dynamic range control. Line mode is light compressions and RF is heavy compression. Default: 0 Example: <pre>libconfig-set SETTINGS.DOLBY_RF "1"</pre>
DO_PMT_CHECK	Y = check program numbers in PMT and PAT are the same. N or no value = do not perform additional check (keep legacy behaviour).	Enables additional stream checking to ensure the PMT program_number is the same as the PAT program_number. This allows non-compliant customer streams to work. Default: N Example: <pre>libconfig-set SETTINGS.DO_PMT_CHECK "Y"</pre>
DSCP_GENERIC	0 to 63	The DSCP value to use for general outgoing IP traffic. Default: Example: <pre>libconfig-set SETTINGS.DSCP_GENERIC "26"</pre>
DSCP_MIDDLEWARE	0 to 63	The DSCP value to use for outgoing traffic to the specific middleware addresses specified by SETTINGS.DSCP_MWAR_ADDRS Default: Example: <pre>libconfig-set SETTINGS.DSCP_MIDDLEWARE "26"</pre>
DSCP_MULTICAST	0 to 63	The DSCP value to use for multicast IP traffic. Default: Example: <pre>libconfig-set SETTINGS.DSCP_MULTICAST "26"</pre>

Setting	Allowed values	Description
DSCP_MWARE_ADDRS	A string containing a comma separated list of IP address[/mask] where the SETTINGS.DSCP_MIDDLEWARE value should be applied	The domains where the DSCP_MIDDLEWARE value should be applied. Default: Example: <pre>libconfig_set LIBCONFIG_DSCP_MWARE_ADDRS, "10.172.243.0/24,192.168.0.2,192.168.1.5"</pre>
DSCP_VOD	0 to 63	The DSCP value to use for RTSP related outgoing IP traffic. Default: Example: <pre>libconfig-set SETTINGS.DSCP_VOD "26"</pre>
Dual network interfaces		
STBRC_INTERFACES	For details of the input values and their definitions, refer to <i>Amino Technical Note 064: Dual network interfaces</i> .	Defines which interfaces will execute STBremoteconf commands.
ENABLED_NETWORK_INTERFACES		Configures multiple concurrent network interfaces.
DNS_INTERFACES		Specifies the network interfaces used for DNS support.
IGMP_ROUTING_INTERFACES		Specifies the network interfaces used for IGMP routing support.
DEFAULT_ROUTE_INTERFACES		Specifies the network interfaces used for default IP routing support.
NTP_INTERFACES		Specifies the network interfaces used for NTP support.
ENABLE_EXTERNAL_RECEIVER	1 = Enable 0 = Disable	Enables or disables an external infra-red (IR) receiver connected to the DE9 or USB ports. This command controls pin 1 on the DE9 TVI connector. Note: An external receiver is not the IR receiver on the front of the STB. Default: 0 Example: <pre>libconfig-set SETTINGS.ENABLE_EXTERNAL_RECEIVER "1"</pre>

Setting	Allowed values	Description
ENABLE_SUBS_OR_CC	<p>NONE = If TVSYSTEM is NTSC then softCC will run, dvbttx will not.</p> <p>If TVSYSTEM is PAL then dvbttx will run, softCC will not.</p> <p>SOFTCC = Only run softCC regardless of TVSYSTEM setting.</p> <p>DVBTTX = Only run dvbttx regardless of TVSYSTEM setting.</p> <p>BOTH = Run both softCC and dvbttx regardless of TVSYSTEM setting.</p>	<p>Sets whether closed captions or subtitles are set, depending on the value selected and the television system type.</p> <p>Default:</p> <p>BOTH</p> <p>Example:</p> <pre>libconfig-set SETTINGS.ENABLE SUBS_OR_CC "BOTH"</pre>
	<p> If you want to display SCTE-27 subtitles and closed captions , you must set ENABLE_SUBS_OR_CC to BOTH.</p> <p>If you want to display SCTE-27 subtitles only, you must set ENABLE_SUBS_OR_CC to DVBTTX.</p> <p>Also .srt and .sub subtitle support on NTSC-M systems is not enabled by default. To enable it you must have ENABLE_SUBS_OR_CC to BOTH.</p>	
ENABLE_TRUSTED_DOMAINS	<p>Y = Any page that uses JMACX and / or Macrovision calls must be checked against the list of known trusted hosts.</p> <p>N = Execute JMACX and/or Macrovision calls to any web page.</p>	<p>Enable or disable the use of trusted domains. If the use of trusted domains is enabled, pages that use JavaScript or Macrovision are checked against the list of trusted hosts. If trusted domains are disabled, then JavaScript and Macrovision calls may be executed from any web page.</p> <p>Default:</p> <p>N</p> <p>Example:</p> <pre>libconfig-set SETTINGS.ENABLE_ TRUSTED_DOMAINS "Y"</pre>
EXTRA_STREAM_BUFFERING	0 to disable or a value in Mibs	<p>Used to specify an amount of additional buffering allocated for use with stream transfers when HTTP OTT streaming. The buffer size is specified in MiB.</p> <p>Default:</p> <p>0</p> <p>Example:</p> <pre>libconfig-SETTINGS.EXTRA_STREAM_ BUFFERING "10"</pre>

Setting	Allowed values	Description
FRIENDLY_NAME (Minerva 5.7 SP3 or later only)		<p>The name used to identify the STB to other devices when they are searching for a DIAL enabled device. By default, this will be set to 'model-macaddress', for example 'A150-00:02:02:AA:BB:CC', but the friendly name is the name an end user can set. This name can be a maximum of 64 characters in length.</p> <p>Default:</p> <p style="padding-left: 40px;"><model>-<macaddress></p> <p>Example:</p> <pre>libconfig-set SETTINGS.FRIENDLY_NAME "MyAminoSTB"</pre>
FULLSCREEN Note: Amino recommends setting this to 'Y' and controlling the size of the browser window by using the BROWSER_MARGIN settings.	Y = Full screen. N = Not full screen.	<p>Enables or disables full screen mode.</p> <p>In full screen mode, the browser window is set to 100% of the video plane.</p> <p>In non full screen mode, the browser window is set to 90% (safe area), so that the entire window will be visible on all televisions.</p> <p>Default:</p> <p style="padding-left: 40px;">N</p> <p>Example:</p> <pre>libconfig-set SETTINGS.FULLSCREEN "Y"</pre>
FUSIONHOME_EVENTS_ENABLED (x5x and x0xx)	Y = Enable HTML 5 Media Events. N or no value = Disable HTML 5 Media Events.	<p>Enables events to be raised in Fusion Home.</p> <p>Default:</p> <p style="padding-left: 40px;">N</p> <p>Example:</p> <pre>libconfig_set SETTINGS.FUSIONHOME_EVENTS_ENABLED "Y"</pre>
GFX_MEM_SIZE Not used in v3.4.0 (x0xx). Used in v4.0.0 (x5x)		<p>Specifies the amount of memory in MB that should be used for GFX processing. This setting will depend on the resolution selected by GFX_RESOLUTION, and the LEGACY_SUBS setting. The GFX_MEM_SIZE limit is 320MB.</p> <p>Default:</p> <p style="padding-left: 40px;">24MB (SD) 48MB (HD)</p> <p>Example:</p> <pre>libconfig-set SETTINGS.GFX_MEM_SIZE "36"</pre>

Setting	Allowed values	Description
GFX_RESOLUTION	<p>HD720 = Equivalent to 1280x720.</p> <p>HD1080 = Equivalent to 1920 x 1080 resolution.</p> <p>NULL = Standard definition</p>	<p>Defines the resolution at which the GFX plane in the browser is rendered: <i>x</i> pixels wide by <i>y</i> pixels high. Any value other than those shown will be treated as standard definition.</p> <p>Note: on x4x STBs, even when set to SD resolution, if an HD output is being used no graphics will be seen on the SD outputs. This is because the secondary interface is feeding the SD outputs, and this interface does not render the GFX plane.</p> <p>On x0xx STBs, the GFX plane is present on both outputs.</p> <p>The range of supported values will be platform-dependent and thus may be affected by the current NORFLASH . OUTPUT_RESOLUTION setting. Note that at higher resolutions, you may find some performance reduction.</p> <p>Default:</p> <p>NULL</p> <p>Example:</p> <pre>libconfig-set SETTINGS.GFX_RESOLUTION "HD1080"</pre>
		<p>The actual SD resolution will be either 720 x480 or 720 x576 based on the value of NORFLASH . TVSYSTEM. It is good practice to set GFX_RESOLUTION to "NULL" to achieve a standard definition graphics plane.</p>

Setting	Allowed values	Description
GFX_ROTATION x4x, Opera 11	0 90 180 270	Rotates the graphics plane anticlockwise through 90°, 180° or 270° degrees to display portrait orientation. Teletext and subtitles are rotated with the graphics, and scale to the PiG window. Note that the video plane is not rotated when rotating the graphics plane. Making a change to this setting will require the STB to be rebooted before the change takes effect. Default: 0 Example: libconfig-set SETTINGS.GFX_ROTATION "90"
x5x and x0xx, Opera12 Use the HTML transform property within the webpage. Sample code is shown here:	<pre><html> <head> <style> body { position: absolute; top: 720px; left: 0px; padding: 10px; width: 720; height: 1280; overflow: hidden; transform-origin: 0px 0px; transform: rotate(-90deg); } </style> </head> <body> <p>This is the page content rotated -90 (or 270) degrees</p> </body> </html></pre>	

Setting	Allowed values	Description
HDMI_AUDIO_FORMAT	<p>0 = Auto 1 = PCM 2 = Dolby Digital 3 = Dolby Digital Plus</p> <p>For x0xx STBs the STB now checks the EDID of the HDMI-attached device. If the attached device does not support the option selected by the end-user, then the minimum supported option will be selected (for example, if the user selects Dolby Digital but the TV does not support it, then the STB will output PCM).</p>	<p>The tag to use when reading or writing the HDMI audio bitstream format option to the settings file. Note: the output audio quality will not exceed the configured setting regardless of the source. For example if the setting is Dolby Digital and the source is PCM, then the output will be PCM.</p> <p>Default: 0</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HDMI_AUDIO_FORMAT "1"</pre>
HDMI_FALLBACK_MODE	<p>DVI - Consider the monitor as a DVI device when reading the EDID fails</p> <p>HDMI - Consider the monitor as an HDMI device when reading the EDID fails.</p>	<p>When the HDMI EDID cannot be read this option is used to determine whether the STB defaults to HDMI or DVI functionality.</p> <p>Default: DVI</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HDMI_FALLBACK_MODE "HDMI"</pre>
HDMI_VIDEO_FORMAT	<p>RGB YUV422 YUV444</p>	<p>Allows a choice of video format from the HDMI output. This setting determines the colour range encoding, for example changing from RGB to YUV can produce a deeper black.</p> <p>Default: RGB</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HDMI_VIDEO_FORMAT "RGB"</pre>

Setting	Allowed values	Description
HLS_INITIAL_BITRATE_PREFERENCE	<p>First - Select the first variant in the playlist.</p> <p>Lowest - Select the lowest bitrate variant in the playlist.</p> <p>Highest - Select the highest bitrate variant in the playlist.</p> <p>Previous - Select the bitrate that was used for the previous playback session.</p> <p><integer> - Use <integer> as an absolute bitrate value.</p>	<p>Indicates the preferred HLS bitrate variant to be selected from an HLS playlist.</p> <p>Default:</p> <p>Previous</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HLS_INITIAL_BITRATE_PREFERENCE</pre>
HLS_MIN_NETWORK_PLT_SPOOLTIME		<p>Sets the minimum number of minutes you want to have in a playlist before allowing PLT. To use trickplay, HLS_MIN_NETWORK_PLT_SPOOLTIME must be less than the size of the sliding window.</p> <p>Default:</p> <p>10</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HLS_MIN_NETWORK_PLT_SPOOLTIME "6"</pre>

Setting	Allowed values	Description
HLS_STARTUP_MODE	<p>BestQuality - The STB will try to play the highest quality content. If a higher bitrate can be selected during startup, already fetched lower quality data will be discarded and the higher quality data fetched instead. This can result in longer startup times but better quality video being displayed.</p> <p>Fastest - Disables the best quality startup in preference to displaying something quickly. Better quality will be introduced as the content plays.</p>	<p>Sets the preferred HLS start up mode.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HLS_STARTUP_MODE</pre>
HOSPITALITY	<p>Y = The user preferences menu is not available for all users (that is, the standard hospitality configuration is retained).</p> <p>N = The user preferences menu is available for all users</p>	<p>For hospitality STBs, the user preferences are not accessible to normal users, the user preferences menu is only accessible through the management page menu. This is the standard hospitality configuration. Setting the value to 'N' makes the user preferences menu available for all users. Also, setting this to 'Y' on a non-hospitality STB can make it operate in hospitality mode</p> <p>See User Prefs.</p> <p>Default:</p> <p>Y</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HOSPITALITY "Y"</pre>

Setting	Allowed values	Description
HTTP_PROXY		<p>Sets the proxy server for HTTP transactions.</p> <p>Enter the IP address and port in the format <code>host:port</code>, for example: <code>123.4.5.67:1234</code>, or the address can be given in the form <code>hostname.domain:1234</code></p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HTTP_PROXY "123.4.5.67:1234"</pre>
HTTP_PROXY_IGNORE	A comma separated list of domains.	<p>Configures a flag to ignore the current HTTP proxy setting.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HTTP_PROXY_IGNORE "www.google.co.uk,www.bbc.co.uk"</pre>
HTTPS_PROXY		<p>Configure the proxy server for HTTPS transactions.</p> <p>Enter the IP address and port in the format <code>host:port</code>, for example: <code>123.4.5.67:1234</code></p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.HTTPS_PROXY "123.4.5.67:1234"</pre>
IGMP_END_TIMEOUT	0 - 30	<p>Sets the number of seconds to wait after no more video data is seen, before an end-of-media event is raised. If the wait for more data extends past the timeout, the playback is stopped by the STB.</p> <p>Set to 0 for no timeout.</p> <p>Default:</p> <p>30</p> <p>Example:</p> <pre>libconfig-set SETTINGS.IGMP_END_TIMEOUT "15"</pre>


Setting	Allowed values	Description
IGMP_START_TIMEOUT	0 - 30	<p>Sets the number of seconds (0-30) to wait for video data after sending an IGMP join command, before a no-video event is raised. If no video is seen before the time-out, the playback is stopped by the STB.</p> <p>Set to 0 for no timeout.</p> <p>Default:</p> <p>30</p> <p>Example:</p> <pre>libconfig-set SETTINGS.IGMP_START_TIMEOUT "15"</pre>
INITIAL_LED	<p>ON = LED is on when the STB is active.</p> <p>OFF = LED is off when the STB is active.</p>	<p>Sets the initial state of the main/IR LED, when the STB is active (that is, powered and not in standby).</p> <p>For a description of the LED configuration for different STBs see LED Configuration operation by STB product.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.INITIAL_LED "ON"</pre>
IR_BRAND	0 - 15	<p>Defines the prefix expected within the IR signal sent by a remote control in order to pair the remote with a particular STB. This can be useful in lab/demo environments when multiple STBs may receive the signal from a remote control.</p> <p>See Appendix H, "Pairing an IR remote control with an STB" for details of how to pair a remote control with an STB.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.IR_BRAND "10"</pre>

Setting	Allowed values	Description
KEYMAP	us = United States uk = British el = Greek ge = German ru = Russian sl = Slovenian uk-lrk = British - New Amino keyboard ge-lrk = German - New Amino keyboard fr-lrk = French - New Amino keyboard	Sets the layout for the keyboard. Language specified in ISO-639 notation. Default: Example: <pre>libconfig-set SETTINGS.KEYMAP "us"</pre>
LEGACY_SUBS	Y = Use old behaviour. N = Use new behaviour.	New behaviour is defined as having subtitles displayed on a second framebuffer on top of the browser graphics. This means that the STB can display subtitles and browser graphics at the same time. Old behaviour is defined as displaying either browser graphics or subtitles. Default: N Example: <pre>libconfig-set SETTINGS.LEGACY_ SUBS "Y"</pre>
LOW_DISK_SPACE_LEVEL	0 = OFF, otherwise an integer value of the free space available in kB.	Monitors free disk space and sends an event to the mpeg control client when the free disk space drops below the level specified. Default: OFF Example: <pre>libconfig-set SETTINGS.LOW_DISK_ SPACE_LEVEL "8000000"</pre>
MAXIMUM_VOLUME	0 - 100	Sets the maximum volume. Default: 100 Example: <pre>libconfig-set SETTINGS.MAXIMUM_ VOLUME "100"</pre>

Setting	Allowed values	Description
MEDIAD_TV_I_SUPPORT_DISABLED	N = TVI support enabled for mediad and cannot be used directly by another application. Y = TVI support disabled for mediad and therefore available for use by another application.	When set to "Y" this allows a JMACX callback function to occur during TVI initialisation and hence allows TVI to work correctly. This affects hospitality customers only. Default: N Example: <pre>libconfig-set SETTINGS.MEDIAD_TV_I_SUPPORT_DISABLED "Y"</pre>
MIDDLEWARE_ARGS (from v4.2.0 for x5x STBs)		This setting allows you to put in the settings file the custom values that you would have entered into the DHCP configuration option AMINO.mw_args Default: Example: <pre>libconfig-set SETTINGS.MIDDLEWARE_ARGS "<your DHCP options>"</pre>
MINIMUM_VOLUME	0 - 100	Sets the minimum volume. Default: 0 Example: <pre>libconfig-set SETTINGS.MINIMUM_VOLUME "20"</pre>
Multiple Interface settings: see Dual network interfaces		
NATIVE_FRAMERATE_PASSTHRU_ENABLE (HD products only)	Y = Enable native framerate passthrough. N = Disable native framerate passthrough.	When this is set the framerate of the video output will be set to match the framerate of the video stream being played, temporarily overriding the user preference setting if this is different. Default: Example: <pre>libconfig-set SETTINGS.NATIVE_FRAMERATE_PASSTHRU_ENABLE "N"</pre>

Setting	Allowed values	Description
NATIVE_PASSTHRU_ENABLE (HD products only)	Y = Enable native passthrough. N = Disable native passthrough.	Used to enable temporary switching of output resolution to SD when playing SD video, when the output resolution is set to HD. Default: Example: libconfig-set SETTINGS.NATIVE_PASSTHRU_ENABLE "N"

Setting	Allowed values	Description
NETWORK_DEVICE_POLICY	<p>Middleware = The network manager will not perform automatic network switching. Middleware has full control of which interface is used, and can switch at any time using <code>netman_set_active_device()</code>.</p> <p>ConnectionLost = The network manager will perform automatic switching if the current device is no longer available and another device is ready. Middleware can still switch to another device which is ready using <code>netman_set_active_device()</code>.</p> <p>WiredAvailable (Default) = The network manager will always switch to the wired interface if it is available. If the STB is currently connected via wireless and the wired interface is plugged in, it will switch to use it. Middleware should not use <code>netman_set_active_device()</code>.</p>	<p>Used to control how netman will switch active devices between Wi-Fi and Ethernet. By default, netman will always switch to a wired connection when it is available.</p> <p>Default: WiredAvailable</p> <p>Example: libconfig-set SETTINGS.NETWORK_DEVICE_POLICY "Middleware"</p>

Setting	Allowed values	Description
NTPCLIENT	Y = Enable the NTP client. N = Disable the NTP client.	Enables or disables the NTP client. Default: Y Example: libconfig-set SETTINGS.NTPCLIENT "Y"
NTPCLIENT_TIMEOUT		Sets the NTP client timeout in seconds. Default: Example: libconfig-set SETTINGS.NTPCLIENT_TIMEOUT "10"
OTVS_UASTRING_OPERATOR_NAME		Used to set the 'Operator Name' segment of the User Agent string for the browser. Opera have specific requirements that each customer can be identified so they can correctly divert customers to their specific stores. This setting also has a very specific format, and must be set to a valid string before the Amino TV App Store can be run. Default: Example: libconfig-set SETTINGS.OTVS_UASTRING_OPERATOR_NAME "OPERATOR"
	 You obtain the value for OTVS_UASTRING_OPERATOR_NAME by agreement with Opera and Amino. Please contact info@aminocom.com for further details about obtaining this agreement.	
OTVS_CLEAR_COOKIE_DATA	Y = Cookie data used by the Amino TV App Store will be erased. N = Cookie data used by the Amino TV App Store will not be erased.	Used to indicate whether you want any persistent cookie data used by the Amino TV App Store to be erased. Data will be erased immediately if the Amino TV App Store is running, or the next time the Amino TV App Store starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: libconfig-set SETTINGS.OTVS_CLEAR_COOKIE_DATA "Y"

Setting	Allowed values	Description
OTVS_CLEAR_APP_DATA	Y = Web storage data used by the Amino TV App Store will be erased. N = Web storage data used by the Amino TV App Store will not be erased.	Used to indicate whether you want any persistent web storage data used by the Amino TV App Store to be erased. Data will be erased immediately if the Amino TV App Store is running, or the next time the Amino TV App Store starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: libconfig-set SETTINGS.OTVS_CLEAR_APP_DATA "Y"
OTVS_CLEAR_ALL_DATA	Y = All data used by the Amino TV App Store will be erased. N = Data used by the Amino TV App Store will not be erased.	Used to indicate that you want all data used by the Amino TV App Store to be erased. Data will be erased the next time the Amino TV App Store starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: libconfig-set SETTINGS.OTVS_CLEAR_ALL_DATA "Y"
PLT_SPOOLTIME (Valid for PVR capable platforms only)	An unsigned integer in range from 10 to 1440.	The maximum length of the PLT buffer in minutes. Default: 60 Example: libconfig-set SETTINGS.PLT_SPOOLTIME "60"
PLT_START_DELAY (Valid for PVR capable platforms only)	" " or 0 = Disabled 0 = Start immediately. An unsigned integer in range from 0 to 60 = Number of seconds delay before starting PLT buffer recording.	Used to set the PLT start delay (in seconds). Sets the number of seconds after stream begin before the PLT buffer is started. Note: If the value of PLT_START_DELAY is 0 (zero) or not set, PLT buffering is disabled. Default: Not set (PLT disabled by default) Example: libconfig-set SETTINGS.PLT_START_DELAY "5"
PLT_START_OF_BUFFER_ACTION	PLAY PAUSE	Controls the BOS behaviour for the PLT buffer Default: Example: libconfig-set SETTINGS.PLT_START_OF_BUFFER_ACTION "Play"


Setting	Allowed values	Description
POD_SENSITIVITY	0 - 10	<p>The remote sends a signal every 10 centiseconds, this setting configures how many signals are required before the mouse moves. Hence a setting of 2 will indicate that two signals need to be received before the mouse moves.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.POD_SENSITIVITY "5"</pre>
PREFERRED_CAPTIONING_SYSTEM	<p>NONE = Default – select</p> <p>SOFTCC = Select SoftCC output by default if both systems are running.</p> <p>DVBTTX = Select Dvbttx output by default if both systems are running</p>	<p>Sets a preferred captioning system (either SoftCC or Dvbttx) if both systems are available.</p> <p>Default:</p> <p>NONE</p> <p>Example:</p> <pre>libconfig-set SETTINGS.PREFERRED_CAPTIONING_SYSTEM "SOFTCC"</pre>
PREFERRED_LANG	ISO 639-2 language code	<p>Sets the preferred audio language from a video stream.</p> <p>Set to "" for automatic language selection.</p> <p>Default:</p> <p>None</p> <p>Example:</p> <pre>libconfig-set SETTINGS.PREFERRED_LANG "fr"</pre>
PROVISIONING_INFO (Minerva 5.7 SP3 or later only)		<p>This is used to load a list of Minerva server IP addressess or hostnames, (comma separated). You do not have to specify the port and you can use the FQDN of the servers. This must be used in conjunction with THINK_BOOTMODE.</p> <p>Default:</p> <p>""</p> <p>Example:</p> <pre>libconfig-set SETTINGS.PROVISIONING_INFO "<server1 ip>,<server2 ip>"</pre>

Setting	Allowed values	Description
PVR_MAX_RECORD_SESSIONS (For further information regarding PVR settings, see PVR sessions)	1 or more to specify the maximum number of concurrent PVR/PLT recording sessions allowed, where each recording session is of a unique url.	Sets the maximum number of concurrent PVR recording sessions allowed. Default: x4x STBs = 3 x5x and x0xx STBs = 7 Example: libconfig-set SETTINGS.PVR_MAX_RECORD_SESSIONS
PVR_MAX_REMOTE_PLAYBACK_SESSIONS (For further information regarding PVR settings, see PVR sessions)	-1 = Disables the remote playback feature. 0 = Enables the RTSP listening port (but will always respond with 'out of bandwidth' error code). 1 or more to specify the maximum number of concurrent remote PVR playback sessions allowed.	Sets the maximum number of concurrent playback sessions allowed when using WHPVR. Default: x4x STBs = 4 x5x and x0xx STBs = 8 Example: libconfig-set SETTINGS.PVR_MAX_REMOTE_PLAYBACK_SESSIONS
PVR_MAX_SESSIONS (For further information regarding PVR settings, see PVR sessions)	A value greater than, or equal to, the number of video windows the STB can support, that is 1 on x4x STBs, 2 on x5x and x0xx STBs.	The maximum number of concurrent recording and playback sessions (local or remote) allowed at one time. Default: x4x STBs = 5 x5x and x0xx STBs = 8 Example: libconfig-set SETTINGS.PVR_MAX_SESSIONS
PVR_SPOOLTIME (PVR capable platforms only)	An unsigned integer in range from 60 to 1440.	The maximum length of the PVR buffer in minutes. The maximum length of recording allowed. Default: 1440 if not set Example: libconfig-set SETTINGS.PVR_SPOOLTIME "180"

Setting	Allowed values	Description
RCUCURSOR_CONTROLS_MOUSE	Y = Remote control arrow keys moves the mouse. N = Remote control arrow keys acts as cursor keys.	Allows the cursor keys to either be mouse keys or keyboard arrow keys when the mouse pointer is active. Default: Example: <pre>libconfig-set SETTINGS.RCUCURSOR_CONTROLS_MOUSE</pre>
REMOTE_LAYOUT	Default Hospitality Myrio Think Guide Sejinalt Myrio2think RAW AMINOTV	Sets the default IR remote control layout. Different remote layouts specify how certain keys on the remote control are interpreted. Customer-specific layout values also exist. See Remote layout options for further information. See Volume control for details of controlling the volume using the IR remote. Default: NULL Example: <pre>libconfig-set SETTINGS.REMOTE_LAYOUT "Hospitality"</pre>
REMOTECONF	IP address.	Sets the multicast IP address that the STB listens on for STBremoteconf commands. Default: 225.10.10.10 Example: <pre>libconfig-set SETTINGS.REMOTECONF "234.56.78.9"</pre>
REMOTECONFPORT	0 - 65535	Sets the multicast port that the STB listens on for STBremoteconf commands. (See STBRCPOR T for information on how to set the unicast port). Default: 22222 Example: <pre>libconfig-set SETTINGS.REMOTECONF PORT "12345"</pre>

Setting	Allowed values	Description
REMOTECNF_URI		<p>Sets the URI that the STB listens on for source-specific multicast (SSM) commands via <code>STBremoteconf</code>. This is similar to SOFTWARE_URI, but the SSM include/exclude options are added after the multicast address and port. Up to eight 'include' and eight 'exclude' addresses can be added as a comma separated list. If <code>REMOTECNF_URI</code> is not set the existing <code>REMOTECNF</code> and <code>REMOTECNFPORT</code> will be read and non-SSM behaviour will be used.</p> <p>Note: only the first option that appears in the string is supported, so if both the 'include' and 'exclude' options are present, one will be ignored</p> <p>Default:</p> <p>Example with 'include' options</p> <pre>libconfig-set SETTINGS.REMOTECNF_URI "igmp://239.255.250.1:11111?incl=10.172.2.1,10.172.2.2"</pre> <p>Example with 'exclude' options</p> <pre>libconfig-set SETTINGS.REMOTECNF_URI "igmp://239.255.250.1:11111?excl=10.172.2.1,10.172.2.2"</pre>
REPEAT_RATE	<p>0 = Do not repeat any keys.</p> <p>2 - 30 = Repeat rate (in cs).</p>	<p>Sets the key repeat rate in centiseconds, to control the number of characters per second that a user can enter via an IR input device (for example a keyboard).</p> <p>"0" indicates no key repeat.</p> <p>Default:</p> <p>8</p> <p>Example:</p> <pre>libconfig-set SETTINGS.REPEAT_RATE "0"</pre>
RFBOOST_DOLBY	<p>Y = Enable Dolby audio level boosting over RF.</p> <p>N = Disable Dolby audio level boosting over RF.</p>	<p>Sets whether audio level boosting over RF for Dolby audio type is enabled or disabled.</p> <p>Default:</p> <p>N</p> <p>Example:</p> <pre>libconfig-set SETTINGS.RFBOOST_DOLBY "Y"</pre>


Setting	Allowed values	Description
RFBOOST_MPEG	Y = Enable mpeg audio level boosting over RF. N = Disable mpeg audio level boosting over RF.	Sets whether audio level boosting over RF for mpeg audio type is enabled or disabled. Default: N Example: libconfig-set SETTINGS.RFBOOST_MPEG "Y"
RTP_AUTO_SKIP_ENABLE	Y = Enable rtpskip. N = Disable rtpskip.	Sets whether rtpskip is automatically enabled or disabled for a stream with RTP encapsulation. Default: N Example: libconfig-set SETTINGS.RTP_AUTO_SKIP_ENABLE "Y"
RTCP_RETRANSMISSION_ENABLE	Y = Enable RTCP retransmission. N = Disable RTCP retransmission.	Sets the global default behaviour for whether RTCP retransmission is used or not. Default: N Example: libconfig-set SETTINGS.RTCP_RETRANSMISSION_ENABLE "Y" The default behaviour can be overridden on a per-stream basis by adding "rtcpretrans=yes" or "rtcpretrans=no" to the stream URI.
RTSP_BASE_PORT	1 - 65535	Sets the initial RTSP UDP video port number the STB is to use. By default, the STB starts at 11111 and increases in increments of 10. Default: 554 Example: libconfig-set SETTINGS.RTSP_BASE_PORT "1234"
RTSP_END_TIMEOUT	0 - 30	Sets the number of seconds (0-30) to wait after no more RTSP data is seen, before an end-of-media event is raised. If the wait for more data extends past the timeout, the playback is stopped by the STB. Set to 0 for no timeout. Default: 6 Example: libconfig-set SETTINGS.RTSP_END_TIMEOUT "15"


Setting	Allowed values	Description
RTSP_SCALE	0 - 6	<p>The default fast forward and rewind multiplier. A scale of 2 will mean that you move forward through the stream twice as fast. RTSP speed gives the whole data stream at that speed. A 4Mbit/s stream at a scale of 2 gives the whole stream at 8Mbit/s.</p> <p>A value of 0 will pause the stream.</p> <p>Default:</p> <p>6</p> <p>Example:</p> <pre>libconfig-set SETTINGS.RTSP_SCALE "2"</pre>
RTSP_SERVER	ncube mediabase oracle concurrent bitband infovalue seachange eona smartvision	<p>Sets the default video server type.</p> <p>Default:</p> <p>ncube</p> <p>Example:</p> <pre>libconfig-set SETTINGS.RTSP_SERVER "mediabase"</pre>
		<p>It is now only necessary to set the default video server type for eona - for other servers the STB will detect the type from the RTSP stream.</p>
RTSP_SIMPLE_TRANSPORT	<p>Y = Offer RAW/RAW/UDP transport only and omit destination details.</p> <p>N = Offer all supported transports.</p>	<p>This gives the option of forcing the use of transport RAW/RAW/UDP;unicast and prevents adding destination details to the SETUP request.</p> <p>Default</p> <p>N</p> <p>Example:</p> <pre>libconfig-set SETTINGS.RTSP_SIMPLE_TRANSPORT "Y"</pre>
RTSP_START_TIMEOUT	0 - 30	<p>Sets the number of seconds (0-30) to wait for video data after sending an RTSP play command, before a no-video event is raised. If no video is seen before the time-out, the playback is stopped by the STB.</p> <p>Set to 0 for no timeout.</p> <p>Default:</p> <p>4</p> <p>Example:</p> <pre>libconfig-set SETTINGS.RTSP_START_TIMEOUT "15"</pre>

Setting	Allowed values	Description
RUN_BROWSER_NETWORK_CHECK	Y = Run the internal network check page before launching the browser. N = Do not run the internal check.	Sets whether an internal network check page is run by the browser before the homepage is loaded. Default: Y Example: libconfig-set SETTINGS.RUN_BROWSER_NETWORK_CHECK "Y"
SECONDARY_LANG	ISO 639-2 language code.	The secondary audio language from a video stream selection. Set "" for automatic language selection. Default Example: libconfig-set SETTINGS.SECONDARY_LANG "fr"
SELECT_RTSP_STREAM_BY_PORT_ONLY	Y = Selects stream by port only. N = Selects stream by IP address.	If VOD servers send video data with a source IP address different to that from their control IP address (that is, the IP address you use to control it over RTSP), and they do not tell the STB this in their response to the SETUP command, then video will not play. Setting this command turns off the IP address check. Reboot the STB for it to take effect (the setting will be lost if you upgrade the STB again.) To have this command in the upgrade image, edit the settings file by adding the following line: SELECT_RTSP_STREAM_BY_PORT_ONLY="Y" Create the mc2 upgrade image and upgrade the STB with that image. Default N (Y on Minerva builds) Example: libconfig-set SETTINGS.SELECT_RTSP_STREAM_BY_PORT_ONLY "Y"

Setting	Allowed values	Description
SKIP_DHCP_LEASE_CHECK	Y = Skip the DHCP lease check and continue to boot. N = Remain at runlevel 3 until DHCP lease check is completed.	During the boot sequence, the STB will stay at runlevel 3 until it gets a DHCP lease (or reaches the end of a 60s timeout). From version 2.3.2, this setting allows the STB to bypass the check for a DHCP lease and continue to boot as in previous releases. Default: N (on Minerva builds only) Example: <pre>libconfig-set SETTINGS.SKIP_DHCP_LEASE_CHECK "Y"</pre>
STANDBY_LED	ON = LED is on when the STB is in standby. OFF = LED is off when the STB is in standby.	Sets the state of the standby LED when the STB is in standby. For a description of the LED configuration for different STBs see LED Configuration operation by STB product . Default: Example: <pre>libconfig-set SETTINGS.STANDBY_LED "OFF"</pre>
STBRCPORT	0 - 65535	Sets the unicast port that the STBremoteconf daemon listens on for STBremoteconf commands. (See REMOTECONFPORT for information on how to set the multicast port). Default: 22222 Example: <pre>libconfig-set SETTINGS.STBRCPORT "12345"</pre>
STBRC_ALLOW_DHCP	Y or unset – DHCP will override NORFLASH and SETTINGS values. N – DHCP will not override NORFLASH and SETTINGS values.	It is possible to disable STBremoteconf by setting the unicast and multicast ports to 0 in the settings file, but due to the default policy that DHCP overrides NORFLASH and SETTINGS values, a DHCP server can re-enable STBremoteconf, which may be undesired behaviour. This setting allows you to control this behaviour. Default: Y Example: <pre>libconfig-set SETTINGS.STBRC_ALLOW_DHCP "Y"</pre>

Setting	Allowed values	Description
STBRC_INTERFACES (from v4.4.3 for x5x STBs)	<p>" " = default operation. STBremoteconf follows the multicast route used by Netman.</p> <p>eth0 = STBremoteconf commands are executed on the eth0 interface.</p> <p>wifi0 = STBremoteconf commands are executed on the wifi0 interface.</p> <p>eth0 wifi0 = STBremoteconf commands are executed on the eth0 interface UNLESS eth0 is unavailable, in which case it will use the wifi0 interface if available.</p> <p>eth0,wifi0 = STBremoteconf commands are executed on the eth0 AND wifi0 interfaces</p>	<p>On x5x STBs, STBremoteconf supports configuration settings for dual network interfaces. This setting defines which interfaces will execute STBremoteconf commands so more than one network interface has to be present (see ENABLED_NETWORK_INTERFACES in <i>Amino Technical Note 064: Dual network interfaces</i>). This setting requires a reboot of the STB.</p> <p>Default:</p> <p>""</p> <p>Example:</p> <pre>libconfig-set SETTINGS.STBRC_INTERFACES "eth0"</pre>

Setting	Allowed values	Description
STC_OFFSET (HD products only)		<p>The System Time Clock (STC) offset is the value in 90 kHz units by which the STC is offset from the Programme Clock Reference (PCR). The offset determines the size of the data buffer (which needs to be set to avoid data underrun or overrun as the result of network jitter). The STC offset has an effect on the channel change time; the shorter the offset the shorter the channel change time.</p> <p>The channel change time can be reduced by approximately 100 ms for every STC offset decrease of 10000, $[(1/90 \text{ kHz}) * 10000 = 111\text{ms}]$.</p> <p>x0xx STBs Default -60000</p> <p>x5x STBs Default -40000</p> <p>Example:</p> <pre>libconfig-set SETTINGS.STC_OFFSET "-10000"</pre>
		<p>The values given for the STC_OFFSET are advisory and Amino suggests that you do not change this value from the defaults given above. If you need to change this setting then note</p> <ul style="list-style-type: none"> using a positive value can put the STC ahead of the PCR so you will be trying to play data from the buffer before it has arrived. You are also reducing the buffering that limits network jitter, so you must ensure your data delivery is regular to avoid underruns which can cause macroblocking decreasing the value (that is, making it more negative) increases the buffering and therefore risks a buffer overflow. Again this can cause data loss and macroblocking.
STEREOSCOPIC_PASSTHROUGH	<p>on = 3D streams will be output as 3D even if the TV does not support it.</p> <p>off = the TV will not be switched to 3D and 3D streams will be scaled down to 2D.</p> <p>auto = the TV will be switched to 3D if it is 3D-capable and a 3D stream is being played.</p>	<p>Sets the behaviour when 3D streams are present. Note that 3D is only output when a single full-screen video window is visible. If the video is scaled, or if more than one window is visible, output is forced to 2D.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.STEREOSCOPIC_PASSTHROUGH "on"</pre>

Setting	Allowed values	Description
STREAM_RATE_LIMIT	0 or not set = No limit.	Limits the maximum data fetch rate for HTTP OTT streams. The limit size is specified as a percentage of the playback rate, where 100 is normal playback rate, 150 would be 50% faster and so on. Note: the actual maximum data fetch rate achieved may be lower than expected due to network limitations. This setting does not affect HLS. Default: Example: <pre>libconfig-set SETTINGS.STREAM_RATE_LIMIT "150"</pre>
SUBTITLES_OPTION	Y = Turn subtitles on. 1 = Turn subtitles on. N = Turn subtitles off. 0 = Turn subtitles off.	Sets the mode of the subtitles. Default: N Example: <pre>libconfig-set SETTINGS.SUBTITLES_OPTION "N"</pre>
SUBTITLES_PREF_LANG	ISO 639-2 language code.	Sets the primary language for default subtitle display. Set "" for automatic language selection. Default: Example: <pre>libconfig-set SETTINGS.SUBTITLES_PREF_LANG "fr"</pre>
	 If both dvb subtitles and teletext subtitles are present in the stream and they have the same language descriptor and this matches the primary language (or secondary language if the primary language does not match) then dvb subtitles will always be selected. If neither primary nor secondary language match then the lowest-numbered subtitle PID will be selected. There is no mechanism to select teletext subtitles over dvb subtitles as teletext subtitles is considered to be a more limited legacy technology and therefore inferior to dvb subtitles.	

Setting	Allowed values	Description
SUBTITLES_PREF_TYPE	Values are: "" (empty string) = the criterion is priority order: 1. Stream type (DVB preferred over teletext). 2. First in PMT. "SCTE-27" = choose SCTE-27 over DVB-SUBS subtitles, if available.	Sets a preference for which subtitle type is displayed when a stream contains both SCTE-27 and DVB subtitles. Default: Example: <pre>libconfig-set SETTINGS.SUBTITLES_ PREF_TYPE ""</pre>
SUBTITLES_SECOND_LANG	ISO 639-2 language code.	Sets the secondary language for default subtitle display. Set "" for automatic language selection. Default: Example: <pre>libconfig-set SETTINGS.SUBTITLES_ SECONDARY_LANG "fr"</pre>
SYSLOG_BUFFER_SIZE	4 16 64	Sets the size of the syslog/logread buffer in kilobytes. Default: Example: <pre>libconfig-set SETTINGS.SYSLOG_ BUFFER_SIZE "16"</pre>
SYSLOG_KERNEL_REDIRECT	Y = Show kernel debug. N = Do not show kernel debug.	Allows syslog to show kernel debug. Default: Example: <pre>libconfig-set SETTINGS.SYSLOG_ KERNEL_REDIRECT "Y"</pre>
SYSLOG_REMOTE_ADDR		The IP address of the network syslog server. An address must be specified before remote logging can be enabled. After changing this settings, the <code>rc.syslogd</code> script must be executed with the <code>restart</code> command for the changes to take effect. Default: Example: <pre>libconfig-set SETTINGS.SYSLOG_ REMOTE_ADDR "123.45.67.89"</pre>

Setting	Allowed values	Description
SYSLOG_REMOTE_LEVEL	1 to 8 priority level For no input or a value not in the range 1 to 8, the <code>-r</code> option will not be set by <code>syslogd</code> .	This setting currently works with Evo servers only. Controls the remote syslog level. Only messages above the defined priority level are sent to the network syslog server. The <code>SYSLOGD="-r"</code> option must be set in the <code>syslogd</code> file and the property "evo.amino.logging.level" must be set in the server. The priority level set by Evo will update any level set by <code>libconfig</code> . If remote syslog has started, the Evo server will restart it. Default: Example: <pre>libconfig-set SETTINGS.SYSLOG_REMOTE_LEVEL "4"</pre>
SYSLOG_REMOTE_LOG_ENABLED	Y = Enable. N = Disable.	Controls whether the remote logging is enabled or disabled. After changing this setting, the <code>rc.syslogd</code> script must be executed with the <code>restart</code> command for the changes to take effect. Default: N Example: <pre>libconfig-set SETTINGS.SYSLOG_REMOTE_LOG_ENABLED "Y"</pre>
SYSLOG_REMOTE_LOG_ID_FORMAT	Y = Enable.	When this is enabled you can add a string value in the <code>HOSTNAME</code> position of remote syslog messages. Leave blank to disable. The string must be in the format "HWIDENT_MACADDR", where <code>HWIDENT</code> is the ident of the STB in <code>SYSTEM.STB_MODEL</code> , and <code>MACADDR</code> is the MAC address in <code>NORFLASH.MAC_ADDRESS</code> (with colons removed). For example, an A150 with MAC address 00:02:02:55:C0:8C will be entered as A150_00020255C08C Default: Example: <pre>libconfig-set SETTINGS.SYSLOG_REMOTE_LOG_ID_FORMAT "Y"</pre>


Setting	Allowed values	Description
SYSLOG_REMOTE_LOG_TIME	<p>UNTIL:XXX - where XXX is a number of seconds (since epoch - 00:00 01/01/1970). This allows an absolute time to be specified.</p> <p>FOR:XXX - where XXX is a number of seconds.</p>	<p>Controls if and when remote logging is automatically disabled. If nothing is specified, remote logging will be enabled until it is manually disabled.</p> <p>The disable time can be specified in two formats: UNTIL:XXX FOR:XX where XXX is a number of seconds.</p> <p>This allows a relative time from remote logging being enabled to be specified. If the STB reboots after remote logging is started with a 300 second delay, the logging time will start at 300 seconds when the STB boots again.</p> <p>After changing this settings, the <code>rc.syslogd</code> script must be executed with the <code>restart</code> command for the changes to take effect.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.SYSLOG_REMOTE_LOG_TIME "FOR:300"</pre>
SYSLOG_REMOTE_PORT		<p>The port number of the network syslog server. If not specified, the default 514 port number will be used.</p> <p>After changing this settings, the <code>rc.syslogd</code> script must be executed with the <code>restart</code> command for the changes to take effect.</p> <p>Default:</p> <p>514</p> <p>Example:</p> <pre>libconfig-set SETTINGS.SYSLOG_REMOTE_PORT "100"</pre>

Setting	Allowed values	Description
SYSTEM		<p>Allows information about the STB and software version to be read.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-get SYSTEM.STB_MODEL</pre> <p>SOFTWARE_VERSION = the version of the AmiNET software CUSTOM_VERSION = the version of any custom resource applied OEM_VERSION = any customer applied version information STB_MODEL = the STB model (for example, A540) STB_FAMILY = the STB family (for example, x4x) SOFTWARE_BUILD_TIME = the date and time that the AmiNET software was built OS_VERSION = the version of the Operating System CPU_MODEL = the type of CPU used on the STB SOC_VERSION = the version of the SoC on the STB SOC_SERIAL_ID = the serial number of the SoC on the STB TOTAL_MEMORY = the total physical DRAM available on the STB INTERNAL_HDD_PRESENT = returns whether a HDD is present or not (Y or N)</p>
SYSTEM_LANGUAGE		<p>Specifies the language on the STB by using an ISO 639-3 language code.</p> <p>Default:</p> <p>ENGLISH</p> <p>Example:</p> <pre>libconfig-set SETTINGS.SYSTEM_LANGUAGE "SPANISH"</pre>
TELETEXT_FULLSCREEN	<p>Y = Enable full screen operation.</p> <p>N = Disable full screen operation.</p>	<p>Enables or disables teletext full screen operation. (Opera subtitle builds only.)</p> <p>Default:</p> <p>Y</p> <p>Example:</p> <pre>libconfig-set SETTINGS.TELETEXT_ FULLSCREEN "N"</pre>
TEXT_ENTRY	<p>1 = Enable text entry.</p> <p>0 = Disable text entry.</p>	<p>Enables or disables text entry via the remote control. If text entry is enabled, the user enters text by holding down the appropriate number key.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.TEXT_ ENTRY "1"</pre>

Setting	Allowed values	Description
THINK_BOOTMODE (Minerva 5.7 SP3 or later only)	Factory	A string, either "Factory" or "Normal" that is used as the initial provisioning value. Operators should only use "Factory". Default: Example: <pre>libconfig-set SETTINGS. THINK_BOOTMODE "Factory"</pre>
TOOLBAR_STATE	1 = Toolbar is visible. 0 = Toolbar is not visible.	Sets the default for whether the browser's toolbar is visible or not when the STB boots. This can be overridden by settings for individual pages. Default: <pre>1</pre> Example: <pre>libconfig-set SETTINGS.TOOLBAR_ STATE "1"</pre>
TVI_TYPE	0 = Philips 1 = Zenith 2 = LG 3 = Mate (Sony/ Panasonic) 4 = TVLink 5 = Generic 6 = Samsung	Configures which TV type the TVI interface needs to use on the programmable interface controller (PIC). Note: this setting is used on Hospitality platforms only. Default: Example: <pre>libconfig-set SETTINGS.TVI_TYPE "0"</pre>
UDP_END_TIMEOUT	0 – 30	Sets the number of seconds to wait when no more UDP data is seen, before an end-of-media event is raised. If the wait for more data extends past the timeout, the playback is stopped by the STB. Set to 0 for no timeout. Default: Example: <pre>libconfig-set SETTINGS.UDP_END_ TIMEOUT "15"</pre>

Setting	Allowed values	Description
UDP_START_TIMEOUT	0 – 30	<p>Sets the number of seconds (0-30) to wait for video data after trying to connect to a UDP media stream, before a no-video event is raised. If no video is seen before the time-out, the playback is stopped by the STB.</p> <p>Set to 0 for no timeout.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.UDP_START_TIMEOUT "15"</pre>
USB_SPEED	<p>"" = Use autodetection.</p> <p>lowspeed = 1.5 Mbits/s (USB 1).</p> <p>fullspeed = 12 Mbits/s (USB 1).</p> <p>highspeed = 480 Mbits/s (USB 2 only).</p>	<p>Configures whether the USB interface should auto-negotiate a speed with a client (default) or whether it should be limited to a particular speed.</p> <p>For the Tira dongle, this must be set to <code>lowspeed</code>. If you are setting this via <code>libconfig</code>, you will need to reboot the STB in order for the setting to take effect.</p> <p>Default:</p> <p>""</p> <p>Example:</p> <pre>libconfig-set SETTINGS.USB_SPEED "lowspeed"</pre>
USE_PROXY	<p>Y = Enable HTTP proxy.</p> <p>N = Disable HTTP proxy.</p>	<p>Enables or disables the use of HTTP, HTTPs and FTP proxy servers.</p> <p>Default:</p> <p>N</p> <p>Example:</p> <pre>libconfig-set SETTINGS.USE_PROXY "Y"</pre>
USER_AGENT_STRING	A string of up to 60 characters in length.	<p>Appends a 60 character ASCII string to the user agent string. This feature can be cleared by setting an empty string.</p> <p>Note: making this change will require the STB to be rebooted for the change to take effect.</p> <p>Default:</p> <p>Example:</p> <pre>libconfig-set SETTINGS.USER_AGENT_STRING "Aminotech"</pre>

Setting	Allowed values	Description
UTILITY_LED x0xx STBs only	<p>none = No actions will light the LEDs.</p> <p>plt = Only the Pause Live TV (PLT) action will light the blue LED.</p> <p>wifi = Only the Wi-Fi action ('off' means not connected, 'flashing' means connecting and 'on' means connected) will light the yellow LED (default).</p> <p>both = Both actions will light their respective LEDs (not recommended).</p>	<p>Controls the behaviour of the LEDs in the 'utility' position on the front of the STB. On the x0xx STB there are two distinct LEDs with separate control functions that occupy the same physical position on the STB front panel.</p> <p>Default:</p> <pre>plt</pre> <p>Example:</p> <pre>libconfig-set SETTINGS.UTILITY_LED "wifi"</pre>
VIDEO_ERROR_MODE	<p>0 = None: Lowest error recovery mode, this will result in macroblocks on error.</p> <p>1 = Partial error recovery mode.</p> <p>2 = High error recovery mode.</p> <p>3 = Full error recovery mode. No macroblocking is seen.</p>	<p>Used to set the video error recovery mode used by the video decoder. Note: the behaviour on different platforms (for example x4x and x5x) using the same setting (for example High) will not be absolutely identical.</p> <p>Default:</p> <pre>1</pre> <p>Example:</p> <pre>libconfig-set SETTINGS.VIDEO_ERROR_MODE "2"</pre>
VQE_DISABLE	<p>Y = Disable VQE.</p> <p>N = Enable VQE.</p>	<p>Disables VQE</p> <p>Default:</p> <pre>N</pre> <p>Example:</p> <pre>libconfig-set SETTINGS.VQE_DISABLE "Y"</pre>

Setting	Allowed values	Description
VUDU_SUSPEND_TIMEOUT	0	When Vudu is installed on an STB, Vudu requires the STB to timeout when Vudu is suspended. This is to ensure that users cannot have rights to content after it has expired. Currently this should be set to zero.
WATCHDOG_HEARTBEAT x0xx STBs only		Used to set the heartbeat interval in seconds for the hardware watchdog. The heartbeat interval cannot be more than half of the WATCHDOG_TIMEOUT duration (for example, if you set a timeout of 30 s and a heartbeat of 40 s, the heartbeat will be set to 15 s. Default: 4 Example: <pre>libconfig-set SETTINGS.WATCHDOG_HEARTBEAT "10"</pre>
WATCHDOG_TIMEOUT x0xx STBs only	0 - 65535	Used to set the timeout in seconds for the hardware watchdog. Setting this to zero will disable the hardware watchdog. If the timeout is non-zero, the WATCHDOG_HEARTBEAT must also be non-zero. Default: 30 Example: <pre>libconfig-set SETTINGS.WATCHDOG_TIMEOUT "60"</pre>
YTLB_UASTRING_OPERATOR_NAME		Used to set the 'Operator Name' segment of the User Agent string for the browser. Google have specific requirements that each customer can be identified so they can collect usage statistics. This setting also has a very specific format, and must be set to a valid string before YouTube on TV can be run. Default: Example: <pre>libconfig-set SETTINGS.YTLB_UASTRING_OPERATOR_NAME "OPERATOR"</pre>
		You obtain the value for YTLB_UASTRING_OPERATOR_NAME by agreement with Opera and Amino. Please contact info@aminocom.com for further details about obtaining this agreement.

Setting	Allowed values	Description
YTLB_CLEAR_COOKIE_DATA	Y = Cookie data used by YouTube on TV will be erased. N = Cookie data used by YouTube on TV will not be erased.	Used to indicate whether you want any persistent cookie data used by YouTube on TV to be erased. Data will be erased immediately if YouTube on TV is running, or the next time YouTube on TV starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: <code>libconfig-set SETTINGS.YTLB_CLEAR_COOKIE_DATA "Y"</code>
YTLB_CLEAR_APP_DATA	Y = Web storage data used by YouTube on TV will be erased. N = Web storage data used by YouTube on TV will not be erased.	Used to indicate whether you want any persistent web storage data used by YouTube on TV to be erased. Data will be erased immediately if YouTube on TV is running, or the next time YouTube on TV starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: <code>libconfig-set SETTINGS.YTLB_CLEAR_APP_DATA "Y"</code>
YTLB_CLEAR_ALL_DATA	Y = All data used by YouTube on TV will be erased. N = Data used by YouTube on TV will not be erased.	Used to indicate that you want all data used by YouTube on TV to be erased. Data will be erased the next time YouTube on TV starts. Once the data has been erased, this key will be set back to 'N'. Default: N Example: <code>libconfig-set SETTINGS.YTLB_CLEAR_ALL_DATA "Y"</code>

B.2 PVR sessions

The Streamerd stream configuration can now be configured using libconfig settings (see above).

PVR_MAX_SESSIONS is the maximum number of concurrent recording and playback sessions allowed at one time (both local and remote). Within the sessions there is an order of priority:

recordings	highest
local playbacks	↓
remote playbacks	lowest, where most recent connection is the lowest

Should a higher priority session begin (assuming its own limit has not been reached) and the PVR_MAX_SESSION has already been reached, then a lower priority session is terminated to free up resource.

B.3 Remote layout options

These are the options for `libconfig-set SETTINGS.REMOTE_LAYOUT`.

Layout	Description
Default	The default layout.
Hospitality	As the default layout but with the following changes: <ul style="list-style-type: none"> • CH_UP/CH_DOWN and number buttons become TVPOWER. • TVPOWER/STB become HOME. • VID_PLAY becomes VID_PLAYPAUSE.
Myrio	To operate the STB using a Myrio remote control.
Think	Default setting for all Amino Minerva builds.
Guide	As the default layout but maps the -/-- to be an EPG key
Sejinalt	Alternative Sejin remotes provided by Koolconnect.
Myrio2think	Used for Myrio UEI Sejin remotes to map keys to Minerva think codes.
RAW	Sends unmapped key codes from the RCU, allowing custom RCUs to be configured as required. Also used for debugging. When using the RAW setting the keycodes will not match those of the Willow remote.
AMINOTV	AMINOTV causes the volume and mute buttons to be exposed to JMACX if the remote has been configured to send Amino IR codes for those buttons rather than TV-specific IR codes. This allows middleware to capture the keypresses and decide what action it wants to take (for example, calling JMACX APIs for volume and mute, or sending TVI or CEC commands to the TV).

B.4 LED Configuration operation by STB product

The `SETTINGS.INITIAL_LED` value only has an effect when the STB is active. It has no effect on the LEDs when the STB is in standby.

The `SETTINGS.STANDBY_LED` value only has an effect when the STB is in standby. It has no effect on the LEDs when the STB is in active.

To change the default state for all STBs, modify the file in your `imagecomponents.settings` to include these 2 lines:

```
SETTINGS.INITIAL_LED = "ON" or "OFF" as required
```

```
SETTINGS.STANDBY_LED = "ON" or "OFF" as required
```

B.4.1 STB in ACTIVE mode

STB	SETTINGS.INITIAL_LED value		
	unset or ""	"on"	"off"
Single LED STBs: A129, A140, H140, A150	ON	ON	OFF
A540PVR	Main LED OFF Standby LED GREEN	Main LED ON Standby LED GREEN	Main LED OFF Standby LED GREEN

B.4.2 STB in STANDBY mode




STB	SETTINGS.STANDBY_LED value		
	unset or ""	"on"	"off"
Single LED STBs: A129, A140, H140, A150	OFF	ON	OFF
A540PVR	Main LED OFF Standby LED RED	Main LED OFF Standby LED RED	Main LED OFF Standby LED RED

B.5 Volume control

In the default condition, the Amino remote will send out TV commands for the volume control +/- functions.

The `AudioControl.SetVolume()/GetVolume()` JMACX calls can then be used to implement a volume control (see the *Amino JavaScript Media Access Control Extensions API specification* for further information).

Action codes 41 (up) and 42 (down) in `fkeys.conf` can also be used (see [Function keys file](#)), but this would not allow for any visual feedback by returning the currently set volume.

Remote	Default behaviour	How to enable volume control
	<p>When a TV brand code is configured the remote will emit the appropriate TV codes regardless of the mode of the remote.</p> <p>When a TV brand code is not configured the remote will not emit any code when the volume +/- buttons are pressed, regardless of the mode of the remote.</p>	<p>Enter a TV brand code of 2 3 1 as follows:</p> <ul style="list-style-type: none"> • Press TV and OK together until the TV button lights up • Enter 2 3 1 and the TV light will go out <p>It is also necessary to ensure that the <code>REMOTE_LAYOUT</code> setting in the settings file is set to <code>AMINOTV</code>.</p> <p>This remote will only control volume on the A110(H) product range and not the newer products.</p>
	<p>When a TV brand code is configured the remote will emit the appropriate TV codes regardless of the mode of the remote.</p> <p>When a TV brand code is not configured the remote will not emit any code when the volume +/- buttons are pressed, regardless of the mode of the remote.</p>	<p>Press and hold the STB button until it flashes.</p> <p>If 9 9 3 Volume Up is now pressed, the remote will emit codes for the STB in all modes.</p> <p>If 9 9 3 Volume Down is now pressed, the remote will emit codes for the STB in the current mode (for example, TV if the TV mode was selected prior to entering programming mode).</p> <p>If 9 9 3 Mode is entered, this will cause the remote to emit volume codes for the selected device in the currently selected mode.</p>
	<p>When a TV brand code is configured the remote will emit the appropriate TV codes.</p> <p>When a TV brand code is not configured the remote will emit the STB volume codes (not the TV volume codes) when the volume +/- buttons are pressed.</p>	<p>Configure the remote so that no TV brand code is available.</p> <p>An existing brand code can be deleted as follows:</p> <ul style="list-style-type: none"> • Press and hold the 1 and 6 buttons simultaneously for approximately 3 seconds until the TV standby button is lit. • Enter the key sequence 9 9 6.

Appendix C—DHCP file contents

In this Chapter:

[C.1 DHCP file settings](#)

The following table describes the settings available in the `dhcpd` file. Note that whether these values are available depends on the DHCP server configuration. For convenience, the values are listed in alphabetical order.

C.1 DHCP file settings

The examples show how to obtain the value provided by the DHCP server. Defaults are configured using other settings. Any values received via DHCP will be used in preference to these default settings. See the appropriate documentation for information on how to set defaults using other methods

In each case `null` is returned if:

- The DHCP server failed to reply
- DHCP is not enabled
- The relevant setting is not configured in the DHCP server

Setting	Description
BROWSER_HOMEPAGE	<p>Access to the browser homepage returned by the DHCP server</p> <p>The browser homepage returned by the DHCP server which overrides both the default page and the one set by <code>LIBCONFIG_HOMEPAGE</code>. Value is read only and only available if DHCP is enabled.</p> <p>Example:</p> <pre>libconfig-get DHCP.BROWSER_ HOME PAGE > aminocom.com</pre>
DNS	<p>The DNS server returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-set DHCP.DNS >192.168.0.0</pre>
DOMAIN	<p>The domain returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCP.DOMAIN > aminocom.com</pre>
GATEWAY	<p>The gateway returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCP.GATEWAY ></pre>
IPADDR	<p>The IP address returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCP.IPADDR > 192.168.0.0</pre>

Setting	Description
LEASETIME	<p>The DHCP lease time returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCPC.LEASETIME > 600</pre>
NETMASK	<p>The netmask returned by the DHCP server if DHCP is enabled. This is read only</p> <p>Example:</p> <pre>libconfig-get DHCPC.NETMASK > 255.255.0.0</pre>
REBINDTIME	<p>The DHCP rebind time returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCPC.REBINDTIME > 2268000</pre>
REMOTECONF_URI	<p>The URI returned by the DHCP server that STBremoteconfd will listen on for incoming commands. This overrides the <code>SETTINGS.REMOTECONF_URI</code> setting.</p> <p>Example:</p> <pre>libconfig-get DHCP_REMOTECONF_URI <igmp URL></pre> <p>See REMOTECONF_URI for examples of source specific multicast URIs.</p>
RENEWALTIME	<p>The DHCP renewal time returned by the DHCP server if DHCP is enabled. This is read only.</p> <p>Example:</p> <pre>libconfig-get DHCPC.RENEWALTIME > 1296000</pre>

Appendix D—Using the configuration techniques

In this Chapter:

[D.1 Configuring image components](#)

[D.2 Configuring a large deployment](#)

The following appendix gives examples of how to use some of the configuration techniques.

D.1 Configuring image components

Configuring image components enables you to customise the files used to create a software upgrade image. When the `signupgradeimage` script creates a new image, it includes the files that are listed in the `flashcontents` file and stored in the `imagecomponents` subdirectory of the software release. You can edit these files or add new ones in order to customise the software upgrade image to your requirements.

For example, you can:

- edit configuration files before they are made available to STBs.
- add files needed to enable Telnet, or SSH(Dropbear).
- add/edit an `upgrade.sh` script file that the STB will execute when it installs the new software upgrade image.
- replace graphics (displayed during the bootstrapping and upgrading stages) with customised versions – for example, the `splash.gif` graphic.



All files in the `imagecomponents` directory must be listed in the `flashcontents` file, otherwise, the `signupgradeimage` script will fail.

D.1.1 How to configure image components



In all the following instructions, `<release_name>` indicates the full name of the software release image directory that contains your software release. For example, `Ax5x-4.3.3-Opera12` installs in `4.3.3-Ax5x-opera12`, hence `<release_name>` is `4.3.3-Ax5x-opera12`.

The general procedure for editing image components is as follows:

1. Open the file that you want to edit. The image component files are in the following location:

```
<release_name>/upgradeimage/imagecomponents/
```

Alternatively, you can add a new file to this location - such as a `chnls.txt` file you have copied from a pre-configured STB or an `upgrade.sh` file that contains `libconfig` commands to set NOR Flash values.

2. Edit the file, and save your changes.
3. Open the `flashcontents` file, and ensure that the file you have added/edited is listed there. This file is in the following location:

```
<release_name>/upgradeimage/flashcontents
```

The `flashcontents` file lists the files that will be included in a software upgrade image, and defines permissions for the file.

Example flashcontents file

This shows a small part of a typical `flashcontents` file.

```
# R == file must exist
#     must be read-only
#     must match the checksum in listfile.sig
# W == file may exist
#     must not be executable
```

```

#     we don't care about the checksum
# E == file may exist
#     if it does exist:
#     it must be read-only
#     must match the checksum in listfile.sig

R AMINET.img
R libm223.so
R libc223.so
R xfresco
R xfresco.amem
R mkfs.ext2
R fsck.ext2
R tune2fs
R mkfs.xfs
R font_opt.bin
R texttvd
R ttsub
R bbsdk.cfg
R irb_keys.txt
W noformat
W !poweron
W cookies.txt
W history.txt

```

4. Use the `signupgradeimage` script to create the software image, as usual.

The new software upgrade image includes your new or edited files, and you can use it to upgrade your STBs.

D.1.1.1 Using Telnet or SSH to send libconfig commands

See [Chapter 4, "Using libconfig"](#) for details of how to access STB configuration via Telnet or SSH. These remote log in tools are not normally included in software builds, but you can enable the appropriate tool by adding the file to the image components used to create the software image loaded onto the STB.

D.2 Configuring a large deployment

It is possible to configure software before deploying it to a large number of STBs. The following steps describe recommendations on how this can be done for both the initial STB configuration and for future upgrade images.

D.2.1 Prerequisites

The configuration procedure outlined here assumes you already have an STB with a valid software image installed. This must include one of the remote log-in tools (Telnet/SSH/Dropbear).

1. Configure the software on the STB (for example, via the Management pages), and test the configuration to ensure the STB now operates as intended.
2. When you are happy with the configuration, use the remote log-in tool to connect to the STB.
3. Copy the contents of the files that have been modified.

On the STB use:

```
mkdir /nfs  
mount -o nolock <ip addr of host>:/path_to_nfs_export/ /nfs cd /nfs cp  
/mnt/nv/settings /nfs/
```

The configuration files are in `/mnt/nv`, and you will need to copy them to the `<release_name>/upgradeimage/imagecomponents` directory on your PC. If you are not sure which files have been modified, then copy all the contents of the directory. Normally only the `settings` file will have been modified.

4. If you have added any new files that need to be included in the upgrade image, add them to the `flashcontents` file in the `<release_name>/upgradeimage/` directory.
5. Create a new signed upgrade image (and add it to the directory specified in the multicast server's configuration file). Ensure that the new image has an incremented deployment index, if you are using deployment indexes to control software versions installed on the STB (this is **not** recommended for a trial system).
6. Upgrade the software on a single STB with this new upgrade image (for example, by using `STBremoteconf`).
7. Check that the new software loads and works as expected. If changes need to be made, repeat steps [1.](#) to [6.](#) until the configuration is correct.
8. Instruct all STBs on your network to upgrade to this new image (for example, use the deployment index mechanism to force an automatic upgrade).

Appendix E—Media source URLs and HLS

In this Chapter:

[E.1 Media source types](#)

[E.2 Media source attributes](#)

[E.3 HTTP Live Streaming \(HLS\)](#)

Streamed media will always have a valid, publicly accessible URL. These URLs, with optional attributes, are used to join media sessions. They can be used the Amino API functions and in the selected browser's URL bar.

A media server is a device that stores and shares media. It may be a simple attached storage, such as an external disk drive, or a commercial web server that hosts media for a large web site. It may also be used to run special applications that allow users to access the media from a remote location via the internet. The only requirements for a media server is a method of storing media and a network connection with enough speed to allow access to that media.



If Macrovision is enabled then it is not possible to play a media URL from a toolbar as the Macrovision mode byte can only be set from inside an HTML page. However, JMACX calls could be used to play the content. (This also applies to `tshttp` URLs.)

E.1 Media source types

AmiNET products support various streaming protocols, including Real Time Streaming Protocol (RTSP), Internet Group Management Protocol (IGMP) and User Datagram Protocol (UDP). In some cases, the format of the URL for a media stream depends on the media server, but the following sections give general guidelines on URLs. The URL types supported are as follows:

- `rtsp://` - Real Time Streaming Protocol, supporting servers from Kasenna, nCube and others.
- `igmp://` - Multicast UDP streaming with IGMP group membership
- `http://` - Video downloaded or streamed over an HTTP connection.
- `tshttp://` - A transport stream downloaded over an HTTP connection. (Can only be used with JMACX calls.)
- `udp://` - UDP streaming of video
- `tsfile://` - Local file playback

The AmiNET products support the video streaming protocols RTSP, IGMP and UDP, as defined below:



RTP is **not** supported. x4x STBs will automatically detect RTP headers in UDP streams and strip them out. See `rtpskip` under [Media source attributes](#). Also see **RTP auto skip enable** in the Amino Set-Top Box Configuration Guide.

E.1.1 RTSP

URLs for an RTSP stream can have the following format:

```
rtsp://server.domain.com:554/videos/movie.ts
```

`rtsp` indicates that this is an RTSP URL.

`server.domain.com` is the hostname of the video-on-demand RTSP server.

`554` is the port that the server listens on for connections.

`videos/movie.ts` is the path to the RTSP resource on the server.

Additional attributes can be passed to the server:

```
rtsp://server.domain.com:554/videos/movie2.ts;audiopid=4195;  
    pcrpid=4149;videopid=4149;servertype=eona;eomfreeze=yes  
    ;unloadvideo=no
```

or


```
rtsp://server.domain.com//server.domain.com/assetname;servertime=eona
```

Some of these attributes are described in [Media source attributes](#).

E.1.1.1 Playing an RTSP stream, with playback a number of seconds into the video

This is done by adding the `offset=nnn` parameter to the RTSP request URL, where `nnn` is the number of seconds into the stream you wish to start. This works on most compliant RTSP servers.

For example, to start 5 mins (300 seconds) into the video:

```
rtsp://<server>:<port>/<path>/<asset>;offset=300
```

E.1.1.2 Using Pause-Live-TV (PLT) with a VoD server

From version 3.2.1 it is possible to Pause-Live-TV on Mediabase VoD servers. Timeshifting the media source is defined by the `assettype=nPLT` and `offset_clock=yyyymmddThhmmss.00Z`.

The full URL in this instance would be:

```
rtsp://10.172.4.26  
BBC1;ServiceType=TSTV;assettype=nPLT;offset_clock=yyyymmddThhmmss.00Z
```

E.1.2 IGMP

URLs for an IGMP (UDP multicast) stream can be as follows:

```
igmp://239.255.250.2:11111
```

`igmp` indicates that this is an IGMP stream.

`239.255.250.2` is the IP address associated with the stream.

`11111` is the port number for the multicast stream.

In a stream that contains multiple programs, the URL can also include additional attributes if required (see [Media source attributes](#)), for example:

```
igmp://239.255.250.2:11111;audiopid=17;pcrpid=16;videopid=17
```

E.1.2.1 Playing a multicast video stream

Assuming your stream is being sent to a valid multicast address and nothing in your network infrastructure stops multicast traffic, then the URL to get the STB to play will be:

```
igmp://:port
```

For example

```
igmp://239.192.128.1:11111
```

E.1.3 HTTP

URLs for an HTTP stream can be as follows:

```
http://exampledomain.com/videos/movie.ts
```

`http` indicates that this is an HTTP URL.

`exampledomain.com` is the domain associated with the stream.

`videos/movie.ts` is the path to the video resource on the server.

E.1.4 Streaming mp3s

From version 3.2.1, mp3 URL types are no longer supported. IGMP can still be used for multicast mp3 streams by using an IGMP URL with the 'type' attribute:

```
igmp://<address>:<port>;type=mp3
```

E.1.5 UDP

URLs for a unicast UDP stream can be as follows:

```
udp://192.168.0.1:11111
```

udp indicates that this is a UDP stream.

192.168.0.1 is the unicast destination address associated with the stream (that is, the IP address of the STB).

11111 is the port number for the unicast stream.

The URL can also include additional attributes if required (see [Media source attributes](#)):

```
udp://192.168.0.1:11111;<media source attribute>
```

For example:

```
udp://192.168.0.1:11111;audiopid=20
```

UDP streams will be setup on the server to be sent to a particular port on the IP address of the STB. The required parameters in the URL are the source IP address (to correctly title traffic from the source only) and the destination port the content is addressed to.

E.1.5.1 Playing a unicast video stream

Make sure your streamer is sending data to the IP address of the STB, then use the following URL:

```
udp://<STB ipaddress>:<port>
```

For example, you have an STB at 192.168.1.103 and a PC running VLC at 192.168.1.4

The PC would stream to: 192.168.1.103 port 1234

The URL to play the stream would be:

```
udp://192.168.1.103:1234
```



You should also ensure that the setting
SELECT_RTSP_STREAM_BY_PORT_ONLY is set to Y.

E.2 Media source attributes

Attributes can be included in media source URLs to provide additional settings relating to the stream. In the case of audio, video and PCR PIDs, the values are normally autodetected. If you manually specify any PIDs, then this auto-detection system is disabled.

audiopid Sets the audio PID value. Audio PIDs are normally auto-selected based on the audio language preferences. By setting a manual PID the default auto PID detection mechanism is disabled.

audiotype The audiotype attribute sets the audio codec to use for the media. Possible types are:

aac-latm
aac-adts
ac3
mpeg112

Any codec not matching the above will default to mpeg112. This attribute is used when setting an audio PID manually using audiopid.

clock_abs	an absolute time used for timeshift TV to specify where in the stream to play from, in RTSP format 20130522T113430Z.
EOMfreeze	<p>The EOMFreeze setting — which can be turned on by using the 'EOMfreeze=yes' media source attribute or by calling AVMedia.EOMFreeze(1) — determines what happens to the video picture when you call AVMedia.Play() to start a new stream when video is already playing.</p> <p>Normally the video picture will be cleared immediately and remain black until the new stream begins, but if EOMFreeze is set the final picture of the old video stream will be left frozen on the screen instead. (Note that if AVMedia.Kill() is used to stop a stream it overrides EOMFreeze so the picture is always cleared, regardless of the EOMFreeze setting.)</p>
hms	A particular server type for Huawei RTSP. Use "servertime=hms".
monomix	<p>Selects which audio channels are output according to the following values:</p> <p>stereo both left and right channels (default). left left channel only. right right channel only. monomix mix left and right channels together.</p>
offset	Number of seconds to offset into the stream when starting an RTSP asset.
password	Password to log onto servers that require a password before they stream video.
pcr	Sets the PCR PID value.
pcrpid	Sets the PCR PID value. PCR PIDs are normally auto-detected. By manually setting a PCR PID the auto detection mechanism is disabled.
pmtpid	Selects the program map table (PMT) which in turn identifies the component streams such as audio and video required to recreate a program.
progid	Selects the program to play in a multiple program transport stream (MPTS), for example igmp://239.255.250.2:11111;Progid=14
rtpskip	For IGMP, RTSP and UDP stream types, RTP headers can be skipped by adding the attribute rtpskip=yes to the URL.
rtsping	<p>The rtsping attribute sets the RTSP ping timeout value. The default value used is 30 seconds if no attribute is set. The RTSP ping is used as a 'heartbeat' by the client so that the server will continue to serve video.</p> <p>The STB checks that data is being received from an RTSP server every second and records the last time that video data was received.</p> <p>If the time since the last video data received reaches the rtsping threshold then a ping is sent to the server.</p>
serverdata	It is possible to define additional attributes specific to certain video server types using the serverdata attribute.

An example is for the Seachange server where supported serverdata extensions include "SeaChange-Version", "SeaChange-MayNotify" and "SeaChange-Server-Data" to set a device ID. This only applies to PPC products.

<code>servertype</code>	Specifies the type of server to which the request is being made.
<code>speed</code>	For PVR builds that can be used to specify what speed the content should be played at. The argument needs to be of type <code>float</code> , for example, <code>1.0</code> .
<code>src</code>	Specifies the URL of a valid media source. For example, <code>src=igmp://239.255.250.1:11111</code>
<code>subpid</code>	Selects which subtitle language to use, if present, in the media source.
<code>txtpid</code>	Selects which teletext language to use, if present, in the media source.
<code>type</code>	This is used to define other media sources instead of video. Currently only MP3 is defined which allows for the incoming media to be decoded as MP3 instead of video.
<code>username</code>	Username to log onto servers that require a username before they stream video.
<code>videopid</code>	Sets the video PID value, for example <code>igmp://239.255.250.2:11111;videopid-17</code> . Video PIDs are normally auto-detected. By setting a manual PID the default auto PID detection mechanism is disabled. Note that on IPTV single program transport streams are supported with one video PID.
<code>videotype</code>	Sets the video codec. Options include: <code>h264</code> <code>mp42</code> (MPEG-4pt2/MPEG-4-ASP/H.263) <code>mpeg2</code> Any other setting defaults to "mpeg2". This attribute is used when setting a video PID manually using <code>videopid</code> .
<code>vwid</code>	Specifies the window with which the video stream should be associated (x5x and x0xx STBs only).

E.3 HTTP Live Streaming (HLS)

E.3.1 Overview of HLS

External information about HLS can be found by following the link below:

<https://developer.apple.com/resources/http-streaming/>

HLS allows client devices to fetch a *variant* or *non-variant* playlist (an index file) of transport stream segments to play in order. It uses H.264 compression, AAC audio, mpeg audio etc. The fetched stream contains playback indexing files as well as the transport stream.


The HLS server provides at least one non-variant playlist file. The non-variant playlist file is a list of URLs for the transport stream segments.

The stream consists of segments of a specific time (the HLS specification defines the 'target' duration of the segments) and theoretically the STB could cope with unlimited size segments because the file is streamed rather than downloaded.

The variant playlist can, for example, consist of several streams at different bit rates (5, 2 and 1 Mbps) as shown below. The individual streams are known as non-variant streams.



The maximum bitrate set for an HLS stream is lowered internally to allow for network overheads.

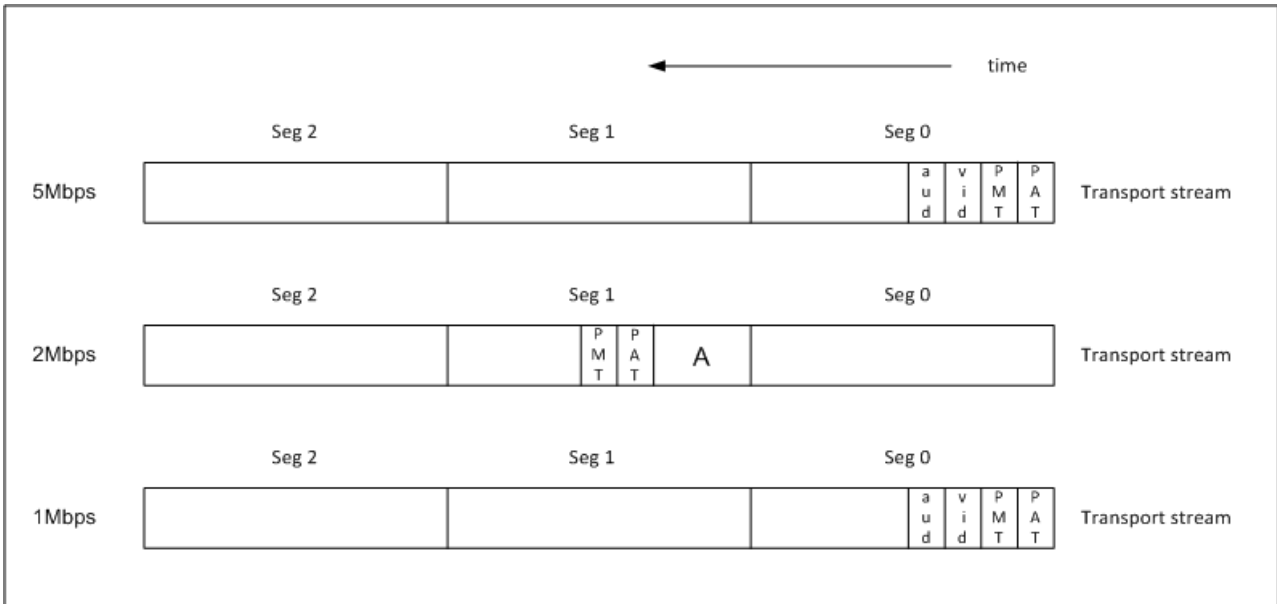

E.3.1.1 Switching between non-variant streams

Say for example that the current playback is segment 0 of the 5Mbps stream. If, during playback, the network slows for some reason, then the decoder will need to get the next segment of the HLS stream from a lower bitrate non-variant stream, that is, segment 1 from the 2Mbps stream. To enable seamless switching without data loss, the timestamps across the streams must be identical.

E.3.1.2 Clean start

For a clean start to playback, the PAT and PMT are needed and should be at the front of the segment as shown in the 5Mbps stream. If they are positioned in a different part of the segment as shown in the 2Mbps stream, then on switching to this stream the decoder needs to find the PAT and PMT for correct playback. Any data before the PAT and PMT - shown as time A - is likely to be lost (at least the first 770k).

E.3.1.3 Stream change

On stream change, the STB notices that the PMT has changed, and playback will not be smooth until the STB finds the required PIDs for the new stream segment, after which it can continue playing the stream at the lower bitrate.

E.3.1.4 Playback

From the selection of streams offered in the variant playlist, convention is to start with the first stream (the stream the operator thinks is the best default bitrate will be placed first).

The maximum bitrate to be used can be specified in the playback URL at present.

The HLS start up mode defaults to 'best quality' and checks the available bandwidth for best quality - it will switch to another non variant stream if a higher quality (that is, greater bandwidth) stream is available, or if the requested one is not available. Any lower quality data already fetched is discarded.



The lowest bitrate stream may be audio only.

E.3.2 HLS playback using JMACX functions



To be able to play HLS content, the HLS mpegcontrol plugin must be present in the build (hls.ppg).

HLS streams are treated in the same way as any other stream type except that you add `servertype=hls` to the URL, for example:

```
http://exampledomain.com/exampleplaylist.m3u8;servertype=hls
```

Currently HLS Video-on-Demand and HLS live streams are supported, as are HLS variant playlists (a playlist of a stream encoded at different bitrates) and non-variant playlists (the URLs of the streams to be played). The HLS plugin initially downloads the last bitrate variant used, but if a faster bit rate is detected the HLS will move to it when it starts the next segment.

The following examples show the JMACX functions that can be used with HLS:

1. Playback of a *variant* or *non-variant* playlist using `AVMedia.Play`:

```
AVMedia.Play("src=http://devimages.apple.com/iphone/samples/bipbop/bipbopall.m3u8;servertype=hls")
```

2. Set position in seconds using `AVMedia.SetPos()`



Set position will have a resolution of the file segment size for the HLS stream being played. For example if file segments are 10 seconds long, the set position will be the beginning of the 10-second segment that contains your chosen value.

For example, if you set `AVMedia.SetPos(127)`, the actual position set will be `AVMedia.SetPos(120)`, that is, the start of the 120s to 130s segment.

3. Get position using `AVMedia.GetPos()`

Returns value in seconds, for example:

```
var pos = AVMedia.GetPos( )
```

4. Get duration using `AVMedia.GetDuration()`

Returns duration in seconds, for example:

```
var duration = AVMedia.GetDuration( )
```

5. Toggle between pause and play using `AVMedia.Pause()` and `AVMedia.Continue()`

```
AVMedia.Pause( )
```

```
AVMedia.Continue( )
```

E.3.3 HLS Debug

For debug purposes:

- the client can automatically choose a variant playlist.
- you can manually fetch the variant playlist then get the URLs of the non-variant playlists and tell the HLS client to just play that non-variant playlist URL you want to debug.
- you can point the STB at the MPEG TS segment URLs, in turn, using tshttp.
- you can fetch the segment files yourself on a PC, concatenate them together and use vlc/FFplay on the PC, or tsfile on the STB.

Appendix F—Recovery from invalid video mode

In this Chapter:

[F.1 Invalid video modes](#)

[F.2 Invalid video mode recovery \(x3x and early x4x software builds only\)](#)

This appendix gives information about invalid video modes and how to recover from them.

F.1 Invalid video modes

There are a number of ways in which an STB can be configured with the result that the user sees no output on their TV. The more common are:

- Using the composite, S-video, SCART or RF output when the STB is configured for HD. In this case the output will only show a black screen until video starts playing. Downscaled video will be shown on these outputs but the middleware graphics will not.
- Using HDMI and having the STB configured for a mode the TV does not support (some TVs do not support 480i or 576i over HDMI, for example).
- Using an S-video, Component or RF cable but having the STB configured with the corresponding output turned off.
- Connecting to an NTSC TV when the STB is configured for PAL, and to a lesser extent vice-versa (many PAL TVs will show something usable when receiving an NTSC signal even if there is no colour, but most NTSC TVs will not display a PAL signal at all).

F.2 Invalid video mode recovery (x3x and early x4x software builds only)

A simple method of video mode recovery is as follows:

- Powercycle the STB, and while it is booting hold down the OK button.
- Initially the LED will not flash as the remote has not yet been read.
- The LED will start flashing as soon as the STB starts to read the remote. The STB will recognise the signal from the remote and will set the output to HDAUTO on boot up (if HDMI is connected then the output will be set to HD and not SD).
- The STB will be reconfigured and rebooted.
- The LED will stop flashing as the STB reboots (Release OK).
- The STB should now be reconfigured and displaying video again.

The LED transitions can be used to describe when to hold the OK button and when to let it go. It transitions from lit to flashing to lit. The Restore button (OK in this case) can be changed if needed.

F.2.1 How it works

There is a script on `/mnt/nv` called `rc.restore`. This can be replaced or changed by customers if needed. This script is run just before the browser/middleware. It checks if a predefined key has been held down for more than two seconds while booting. If so, it will reset the resolution to HDAUTO as default.

However the resolution can still be changed by changing the rc script on flash. The setting `NORFLASH.OUTPUT_RESOLUTION` can be:

- HDNONE if no HDMI cable is connected.
- HD480p if HDMI is connected and `NORFLASH.TVSYSTEM` is NTSC-M, NTSC-J or PAL-M.
- HD576p if HDMI is connected and `NORFLASH.TVSYSTEM` is anything else.

All STBs always produce a composite output and all cable types have a composite signal available, so you will be able to get a picture by using this, though it may mean switching connections to the TV.

Appendix G—Video output formats

In this Chapter:

[G.1 A129, A140, H140, A540PVR, A150](#)

The following table shows the output format possibilities for the STBs listed, depending on the cables connected. The output format is normally set as part of the configuration (for example, via the Management pages or `libconfig`), but in some cases it is selected automatically.

The name of the setting or command used to change the output format depends on which configuration tool you are using.



When the HDMI cable is connected, the HD format is selected automatically. In the following tables, Composite is the same as CVBS and Component is the same as YPbPr.

G.1 A129, A140, H140, A540PVR, A150

Part no.	Cables	Output format configuration options
502-418	10 pin Mini DIN to SCART	Composite Composite, RGB Composite, S-video Composite, Component
502-594	10 pin Mini DIN to S-video and Composite 1RCA	Composite, S-video
502-419	10 pin Mini DIN to Component video and RGB 6 x RCA	Component, RGB
502-523	10 pin Mini DIN to Composite 3 x RCA	Composite
510-885	HDMI	HDMI (not A129)

Appendix H—Pairing an IR remote control with an STB

In this Chapter:

[H.1 On the grey Amino IR remote control](#)

[H.2 On the AVC 'Boat' IR remote control](#)

[H.3 On the SRC 'Willow' IR remote control](#)

You can program an Amino IR remote control so that it can only control an STB that is configured to respond to it.

The Amino IR remote controls prefix a number to each STB command. This number is set to 000 by default, but you can program it to be another number in the range 001 to 015.

All Amino STBs respond to commands prefixed with 0 but you can configure them to respond to commands prefixed with another number as well.

For example, a remote control can be set to prefix commands with 3, and an STB can be configured to respond to commands prefixed with 3.

- The remote control can only control STBs that expect 3 as a command prefix.
- The STB will respond to commands prefixed with 3 and also continues to respond to commands prefixed with 0 (so that all STBs respond to the default Amino remote control).

The following steps use the Configuration pages to set the IR brand code. This can also be set with the other configuration tools. See [Chapter 6, "STB configuration pages for Opera 11 onwards"](#) for details.

H.1 On the grey Amino IR remote control



1. Hold down the **STB** and **OK** buttons on the remote control until the STB button lights up permanently.
2. Enter the number that you want to set as the prefix code for this remote control. This must be a three-digit number in the range 000 - 015.

For example:

111

The remote control will now prefix all STB commands with this code.



To revert to the default code (that is, to unpair the remote control and STB), repeat these steps and set the code to 000.

H.2 On the AVC 'Boat' IR remote control



1. Hold down the **STB** button until the LED flashes twice
2. Enter 9 8 2. The STB light should flash four times. If it flashes twice, repeat this part of the procedure. The 9 8 2 sequence unlocks/locks remote configuration programming.
 - 4 flashes = unlocked
 - 2 flashes = locked
3. Hold down the **STB** key until the LED flashes twice and continue holding it until it flashes twice again.
4. Enter the number that you want to set as the prefix code for this remote control. This must be a three-digit number in the range 100 - 015.

H.2.1 Pairing the STB to the remote control

1. From the Amino IR keyboard, press Alt-M and then enter the Management password ('leaves' is the default), to access the Management pages.

Warning:

Amino strongly recommends that you change the default passwords when deploying our STBs. See the Amino *Installation and Upgrade Guide* for information on changing these default passwords.

2. Open the IR configuration page.



For navigation on this page, it is easier to use the arrow keys on the Amino IR keyboard.

3. Enter the two-digit code that you programmed the remote control with, this is the **last two** digits of the 3-digit code. (The first digit indicates the frequency used).
4. This can also be set with `libconfig-set SETTINGS.IR_BRAND "11"`.
5. Save the changes (the default password is `snake`).
The remote control and the STB are now paired.

H.3 On the SRC 'Willow' IR remote control



1. Press **2** and **7** simultaneously for 3 seconds. During the initial 3 seconds, the LEDs will remain off. After 3 seconds the STB LED turns on.
2. Press the **GUIDE** key. The remote will perform a confirmation blink (200ms on/off repeated twice) and the STB LED will turn on.
3. Enter a 4 digit code, from the Pairing Code list below.
4. Only digit keys are allowed. When a digit is pressed, the STB LED will turn off for the duration of the key-press. Any other key press will result in an invalid sequence.
5. If the entered digits are valid, the remote control will issue a confirmation blink, and then return to normal Use mode.
6. If the entered digits are invalid, the remote control will issue an error blink (50ms on/off repeated 5 times) then return to normal Use mode.

The remote can be paired to individual STBs by programming with one of 16 Pairing Codes. The default pairing code will be 0100.

Pairing Code	Address Field
0100	0x00
0101	0x01
0102	0x02
0103	0x03
0104	0x04
0105	0x05
0106	0x06
0107	0x07
0108	0x08
0109	0x09
0110	0x0A
0111	0x0B
0112	0x0C
0113	0x0D
0114	0x0E
0115	0x0F

Appendix I—STBremoteconf STATS command

In this Chapter:

- [I.1 Usage](#)
- [I.2 Example](#)
- [I.3 Terms explained](#)
- [I.4 MAC address](#)
- [I.5 AVCore](#)
- [I.6 Netstat](#)
- [I.7 Meminfo](#)
- [I.8 Example of a stats output](#)

This section describes the descriptors returned by the `STBremoteconf stats` command. The command returns a set of status values for the STB. This command is only useful via unicast.



In future versions the parameters that are currently included in the stats report may be changed, or further parameters may be added, depending on customer feedback.

I.1 Usage

```
./STBremoteconf <host> STATS
```

I.2 Example

```
./STBremoteconf 10.172.227.145 STATS
```

I.3 Terms explained

The `STBremoteconf stats` command returns information which can be accessed by looking at specific directories on the STB. The MAC address is returned, and also selected information from `/proc/avcore`, `/proc/meminfo` and from running an `ifconfig` command on the STB.

I.4 MAC address

The `stats` command returns the MAC address of the STB:

Term	Example value	Description
MACADDRESS	00:02:02:03:BD:97	The MAC address of the STB.

I.5 AVCore

The operating system collects and presents a range of useful statistical information whilst the STB is running. These are all presented in the pseudo-filesystem `/proc/avcore/` where they can be inspected. All counts and timestamps are unsigned 32-bit integer values unless otherwise indicated.

Timestamps are in 'jiffies', a Linux time unit (see the appropriate Linux documentation for a precise definition).

Many of the statistics are presented in a standard (three value) form which is the time of the most recent occurrence (in jiffies), the number of occurrences that have occurred during the playing of the current asset, and the total number of occurrences that occurred prior to the playing of the current asset.

Term	Example value	Description
The video decoder will determine whether to decode a picture for display, or to skip a picture if synchronisation requires it.		
last_skip_timestamp	0	The last video skip timestamp.

<code>skips_in_this_movie</code>	0	The number of skips in the movie that is currently playing.
<code>total_skips</code>	0	The total skips since last boot.
<p>Sequence errors are reported by the video decoder if error recovery is required to handle an unsupported frame rate or when the specified dimensions for a sequence do not match the expected MPEG profile.</p>		
<code>last_serror_timestamp</code>	0	The last sequence error timestamp.
<code>serrors_in_this_movie</code>	0	The sequence errors in this movie.
<code>total_serrors</code>	0	The total sequence errors since last boot.
<p>TIME returns timing information about the current asset being played. Timestamps are in 'jiffies', a Linux time unit (see the appropriate Linux documentation for a precise definition).</p>		
<code>timestamp_of_movie_start</code>	0	The timestamp of the start of the current movie.
<code>current_time</code>	76319	The current timestamp.
<p>Audio PTS</p>		
<code>audio first pts</code>	0	The timestamp of the first audio buffer overflow.
<code>audio last pts</code> (repeated below as <code>last_overflow_timestamp</code>)	0	The timestamp of the last audio buffer overflow.
<p>AUDBUF returns information about how well audio buffering has been performing. The audio buffer statistics returned are specified as follows.</p>		
<code>last_overflow_timestamp</code>	0	The timestamp of the last audio buffer overflow.
<code>overflows_in_this_movie</code>	0	The number of overflows for the current asset.
<code>total_overflows</code>	0	The total number of overflows since last boot.
<code>last_underflow_timestamp</code>	0	The timestamp of the last underflow.
<code>underflows_in_this_movie</code>	0	The number of underflows for the current asset.

total_underflows	0	The total number of underflows since last boot.
fullness	0	The fullness of the audio buffer.
The video buffer statistics returned are specified as follows.		
last_overflow_timestamp	0	The timestamp of the last video buffer overflow.
overflows_in_this_movie	0	The number of overflows for the current movie.
total_overflows	0	The total number of overflows since last boot.
last_underflow_timestamp	0	The timestamp of the last underflow.
underflows_in_this_movie	0	The number of underflows for the current movie.
total_underflows	0	The total number of underflows since last boot.
fullness	0	The fullness of the video buffer.
Video PTS		
topbit, lower 32bits	0:0	Retrieves the timestamp of the last video pts in a 33-bit presentation

I.6 Netstat

Displays generic net statistics of the host you are currently connected to:

Interface	Received bytes	packets	errs	drop	fifo	frame	compressed	multicast	Transmit bytes	packets	errs	drop	fifo	colls	carrier	compressed
lo	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth0	438308	3116	0	0	0	0	0	2925	0	135	0	0	0	0	0	0

Where:

`Interface` is the type of interface used in which `lo` is the loopback or local interface, and `eth0` is the external Ethernet port.

`Received bytes` is the total number of bytes received per second.

`packets` is the total number of packets received per second.

`errs` is the total number of errors occurring during received packets per second.

`drop` is the total number of packets that were dropped per second.

`fifo` is the total number of overrun errors in the received queue.

`frame` is the number of framing errors transmitted or received.

`compressed` is the total number of compressed packets received per second.

`multicast` is the total number of multicast packets received per second.

`Transmit bytes` is the total number of transmitted bytes.

`packets` is the number of packets transmitted per second.

`errs` is the total number of errors occurring during received packets per second.

`drop` is the number of packets that were dropped per second.

`fifo` is the total number of overrun errors in the transmit queue.

`colls` is the number of collisions that were detected per second.

`carrier` is the number of carrier errors that happened on transmitted packets per second.

`compressed` is the number of compressed packets transmitted per second.

I.7 Meminfo

Much of the information here is used by the `free`, `top` and `ps` Linux commands. The output of the `free` command is similar in appearance to the contents and structure of `/proc/meminfo`, although looking directly at `/proc/meminfo` gives more details:

	Description
MemTotal	Total usable RAM, in kilobytes (that is, physical RAM minus a few reserved bits and the kernel binary code).
MemFree	Is the sum of LowFree+HighFree (overall stat).

	Description
MemShared	The amount of shared memory.
Buffers	The amount of memory used by system buffers.
Cached	Memory in the page cache (disk cache) minus SwapCache
SwapCached	Memory that once was swapped out, is swapped back in but still also is in the swapfile (if memory is needed it does not need to be swapped out AGAIN because it is already in the swapfile. This saves I/O.
Active	Memory that has been used more recently and usually not reclaimed unless absolutely necessary.
Inactive	Memory which has been less recently used and is more eligible to be reclaimed for other purposes.
HighTotal	The total amount of memory in the high region. Highmem is all memory above (approx) 860MB of physical RAM. Kernel uses indirect tricks to access the high memory region. Data cache can go in this memory region.
HighFree	The amount of free memory of the high memory region.
LowTotal	The total amount of non-highmem memory. This is the memory the kernel can address directly. All kernel data structures need to go into low memory.
LowFree	The amount of free memory of the low memory region.
SwapTotal	Total amount of physical swap memory.
SwapFree	Total amount of swap memory free.
Dirty	The total amount of memory, in kilobytes, waiting to be written back to the disk.
Writeback	The total amount of memory, in kilobytes, actively being written back to the disk.
Mapped	The total amount of memory, in kilobytes, which have been used to map devices, files, or libraries using the mmap command.
Slab	The total amount of memory, in kilobytes, used by the kernel to cache data structures for its own use.
CommitLimit	Total amount of memory currently available to be allocated on the system.
Committed_AS	The amount of memory presently allocated on the system.
PageTables	The total amount of memory, in kilobytes, dedicated to the lowest page table level.
VmallocTotal	The total amount of memory, in kilobytes, of total allocated virtual address space.
VmallocUsed	The total amount of memory, in kilobytes, of used virtual address space.
VmallocChunk	The largest contiguous block of memory, in kilobytes, of available virtual address space.

I.8 Example of a stats output

```

Got back: MACADDRESS: 00:02:02:03:bd:97
(last_skip_timestamp skips_in_this_movie total_skips)
0 0 0
(last_error_timestamp errors_in_this_movie total_errors)
0 0 0
(timestamp_of_movie_start current_time)
0 76319
0 0
(last_overflow_timestamp overflows_in_this_movie total_overflows last_underflow_timestamp under-
flows_in_this_movie total_underflows fullness)
0
0 0 0
0 0 0
0
(last_overflow_timestamp overflows_in_this_movie total_overflows last_underflow_timestamp under-
flows_in_this_movie total_underflows fullness)
0 0 0
0 0 0
0
(top_bit:other_32)
0:0
Inter-|   Receive                               |   Transmit
  face |bytes   packets errs drop fifo frame compressed multicast|bytes   packets errs drop fifo
colls carrier compressed
lo:    0      0 0 0 0 0 0 0 0 0 0 0 0 0 0
eth0: 438308 3116 0 0 0 0 0 0 2925 0 135 0 0 0 0
0      0      0

          total:   used:   free:  shared: buffers:  cached:
Mem: 31207424 18276352 12931072          0 176128 11268096
Swap: 27258880          0 27258880
MemTotal:          30476 kB
MemFree:           12628 kB
MemShared:          0 kB
Buffers:            172 kB
Cached:            11004 kB
SwapCached:         0 kB
Active:             2012 kB
Inactive:          12956 kB
HighTotal:          0 kB
HighFree:           0 kB
LowTotal:           30476 kB
LowFree:            12628 kB
SwapTotal:          26620 kB
SwapFree:           26620 kB

```

Appendix J—Frequently Asked Questions (FAQs)

In this Chapter:

- [J.1 Leds](#)
- [J.2 STBremoteconf](#)
- [J.3 Recovery image](#)
- [J.4 IR and remotes](#)
- [J.5 Miscellaneous](#)
- [J.6 Using VLC](#)
- [J.7 Hard Disk Drives and recording](#)
- [J.8 Debug](#)

The following sections contain the answers to FAQs raised in support tickets. The FAQs are listed under various topic headings, and may appear under more than one if the FAQ crosses two topics. Note that these FAQs only relate to topics that are covered in this STB Configuration Guide: for other FAQs and the Amino Support Knowledgebase, please visit the Amino website (www.aminocom.com) and click on **Customer Support**.

J.1 Leds

Q. On the A140 STB, is it possible to switch off the LED when the STB is in the Off state, and turn it on to indicate it is in the ON state?

To change the default state for all STBs, modify the file in your `imagecomponents.settings` to include these 2 lines:

```
SETTINGS.INITIAL_LED "ON" or "OFF" as required
SETTINGS.STANDBY_LED "ON" or "OFF" as required
```

You can also change individual STBs to other settings by using tools such as `STBremoteconf`.

Refer to [LED Configuration operation by STB product](#) to see the effect of the `INITIAL_LED` and `STANDBY_LED` settings on LED operation.

J.2 STBremoteconf

Q. Where do I find the tools for STBremoteconf?

They are located in the `utils` directory of the software release. Follow the instructions in this guide to install and run the utility. See [Using STBremoteconf](#).

Q. I am looking for information about how to monitor event logs from the Amino 140, by using Telnet etc.

You can use our `STBremoteconf` utility and its protocol. There are several documents on the support site explaining the benefits and limitations. See [Using STBremoteconf](#).

There is also a lot of information outputted by the serial debug port and a lot of telemetry is available from the `"/proc"` filesystem under `/proc/avcore`. There are several documents on the support site describing each entry. See the Amino website (www.aminocom.com) and click on **Customer Support**.

J.3 Recovery image

Q. Is it possible to set a software URL for the recovery image in the STBimage?

It can be stored in NOR Flash with the parameter `NORFLASH.SOFTWARE_URI`, see [SOFTWARE_URI](#).

J.4 IR and remotes

Q. I cannot get the IR passthrough to work.

There is a configuration setting required to enable the pass-through. From debug, enter the following:

```
libconfig-set SETTINGS.ENABLE_EXTERNAL_RECEIVER 1
```

You will need to restart the STB for this to take effect. See [ENABLE_EXTERNAL_RECEIVER](#).

Q. Can the 'willow' remote be programmed with macros?

No, the 'willow' remote does not support macros.

J.5 Miscellaneous

Q. Do Amino STBs support IGMPv3?

The x4x STBs can support either IGMPv2 or IGMPv3 (limited).

ALL v3 devices will drop back to v2 if they see a v2 message (the entire network will fall back to the lowest common level) and we have seen compatibility issues when sending v3 messages on a v2 network.

By default the STBs are configured to use v2 to get over the issues seen above. You can override the default and raise the version to v3 using the command

```
libconfig-set IGMP_MAX_VER 3
```

Q. How do you set the current date and time in the system?

The time can be set in several ways depending on your requirements:

By default the STB will get the time information from the DHCP server it connects to. You can point the STB to a time server using the STB management pages. See [Network on page 88](#).

If you have telnet or console access to the STB you can set it manually at the command line (not normally required). See [TIME_SERVER](#).

Q. Is there a way to modify the graphics that appear when upgrading?

You can replace these graphics with your own but you must follow certain guidelines. See [Replacing the default graphics with your own on page 68](#).

Q. The STB now shows a graphic while the kernel is loading. Is this graphic configurable?

No, this graphic is the bootloader graphic and cannot be configured because it is in a proprietary format. However, we can create a bootloader graphic based on a graphic that you provide, but it must meet the following conditions:

- a gif at the lowest resolution that will provide an acceptable graphic
- a minimum amount of colours
- no animations
- a black background rather than transparency.

When you design or provide the graphic, note that it will be displayed centred against a black background.

Q. Can I rotate the video plane as well as the graphics plane?

No, only the graphics plane can be rotated.

Q. How do I enable or disable cookies?

Cookies can be enabled or disabled by using the [BROWSER_ENABLECOOKIES](#) setting.

Q. How do I enable subtitles?

Subtitles or closed captions can be enabled by using the [ENABLE_SUBS_OR_CC](#) setting. Alternatively, if you are using the 'Willow' remote control unit, you can go into the management pages and enable SUBS/CC by pressing the menu key, clicking on "Subtitles/CC" and then clicking enable.

Q. How do I configure the STB for 1080p and what is meant by the STB “can de-interlace content for progressive display”?

The output resolution can be configured using the [OUTPUT_RESOLUTION](#) setting. While the STB does not support a direct 1080p input (because the video hardware does not have the bandwidth for that much data), the interlaced 1080i video can be output in 1080p format. So a TV which supports 1080p will have a valid video signal - the difference is that it will have less video information contained in it than a native 1080p decoded signal.

1080i (interlaced) content means that the video content is sent with the odd and even video lines interlaced to build up one complete frame of video, so depending on the frame rate in use and the content, the video quality will be acceptable. In most normal situations it is unlikely you will notice any difference, but with high motion content you may see artifacts/distortion in the video if the frames contain drastically different content for much of the time.

Q. My IP camera outputs a stream as RTSP - will the A140 support this?

The A140 will support RTSP via UDP (but not RTP).

J.6 Using VLC

(<http://www.videolan.org/vlc/>)

Q. I have errors or glitches on my stream when played through the STB, but they play without problems when using VLC .

Video Lan Client (VLC) is a popular free player/streamer that can be used to give a quick confirmation that a stream is available and what the content is (provided it is not encrypted). It will show teletext and subtitles and can be used to quickly stream out a file to confirm it is the correct video content etc.

However, because VLC uses the resources of the computer which it is running on, it is not a good comparison against an STB and you may think that because VLC plays the video then the STB should also play it. This is **not** the case and VLC can often buffer and play non-conforming video that an STB cannot.

It is simple to use and free, so it makes a useful addition to the test tools, but it should be used for quick checks rather than proper diagnosis.

J.7 Hard Disk Drives and recording

Q. I have a hard disk drive which I want to connect to my STB via the USB port to use for recording. Can I just plug it in?

You will need to do some configuration before connecting a hard disk drive to an STB. The hard disk drive must be validated using our validation tools and entered into the `PVR.map` file (formerly the `PVR.usermap` file) to be recognised and formatted by our STB. For more information about using a HDD for recording, see the *Amino JMACX API specification AM-000502-TC* and the *USB Hard Disk Performance Test Specification and Procedure*, document number AM-003378-TE.

Q. How many hours of video can I record on the PVR with a particular video bitrate?

It is difficult to state a specified time because it depends on parameters such as compression, bitrates, network overheads etc. for which each ecosystem is different. It could be 20 hours to 65+ hours. MPEG-4 (h.264) SD could perhaps be 80 hours depending on how low the bitrate is.

As a **rough** guide for A540 recordings with a 250GB HDD:

8 Megabits (Mb) = 1 MegaByte (MB)

1 GigaByte (GB) = 1024 MB

230 GB = 235,520 MB

So if an HD stream is playing @ 8 Mbps then 1 MB of space is written per second onto the HDD which is equivalent to 60 MB per minute.

$235 \text{ GB} / 60 = 3,925.3 \text{ minutes}$.

$3,925.3 \text{ minutes} / 60 = 65.4 \text{ hours}$.

So the amount of video in hours that can be recorded is approximately 65 hours of HD or 130 hours of SD (SD streams are up to 4 Mbps, so for this example the HD hours have been doubled).

J.8 Debug

Q. Is there a way to obtain the debug logs from the STB without using the debug cable, for when the STB is in a remote location?

There are three options for remote log retrieval:

1. use the LOGREAD option with STBremoteconf. This will retrieve the circular log buffer.
2. SSH in, and run the command logread. this will retrieve same as 1)
3. set up remote syslog, so the STB outputs its syslog over the network to a syslog daemon on another server.

Index

A

About this document 11
ALT_TIME_SERVERS (settings file) 110
ANY_KEY_STANDBY_RECOVER (settings file) 110
Assistive audio 79
Audience 16
AUDIO_DESCRIPTION_STREAM_TYPES (settings file) 110
AVSYNC_WAIT (settings file) 111

B

BOARDREV (NOR Flash) 98
Browser configuration files 28
 Ekioh settings with Beenius 29
 Opera settings 28
Browser Setup 93
Browser Setup (Management pages) 93
BROWSER_ALLOC_EXTRA (settings file) 111
BROWSER_CACHE_DOCUMENT (settings file) 111
BROWSER_CACHE_IMAGES (settings file) 111
BROWSER_CACHE_RAM (settings file) 111
BROWSER_ENABLECOOKIES (settings file) 112
BROWSER_FALLBACK_BEHAVIOUR (settings file) 112
BROWSER_HEAP_EXTRA (settings file) 112
BROWSER_HELPPAGE (settings file) 113
BROWSER_HOMEPAGE (dhcpc file) 160
BROWSER_HOMEPAGE (settings file) 113
BROWSER_MARGIN_BOTTOM (settings file) 113
BROWSER_MARGIN_LEFT (settings file) 113
BROWSER_MARGIN_RIGHT (settings file) 113
BROWSER_MARGIN_TOP (settings file) 113
BROWSER_PRESERVECOOKIES (settings file) 113
BROWSER_UNLOAD_VIDEO (settings file) 114
BROWSER_VSYNC (settings file) 114

C

CA_ARGS (settings file) 114
CA_DHCP_AUTH (settings file) 115
CAPTIONING_GFX_RESOLUTION (settings file) 115
CAPTIONING_WINDOW_LEVEL (settings file) 115
CC_DIGITAL_SERVICE (settings file) 115
CC_FORCE_SCROLL_ON_CR (settings file) 116
CC_PREFERENCE (settings file) 116
CEC_AUTO_RESPONSE (settings file) 116

CEC_CMD (STBremoteconf) 42
CEC_TVOFF (STBremoteconf) 42
CEC_TVON (STBremoteconf) 42
CHANGEPAGE (STBremoteconf) 43
Changing settings
 hostname file 27
 settings file 22
 Trusted Domains file 25
 usersettings file 26
Channel changer application 24
Closed caption builds 76
closed captions (settings file) 121
Configuration 93
Configuration pages
 controlling with keyboard 74
 controlling with remote control 74
 Opera 11 onwards 72
Configuring
 Dropbear 18
 image components 18
 large deployments 165
 NOR Flash 23
 Set-top box
 fkeys.conf file 27
 multiple set-top boxes 165
 NOR Flash settings 58
 options 18
 SSH 18
 STBremoteconf 18
 Telnet 18
 upgrade.sh file 23
cookies
 enabling and disabling 112
CPU_MODEL (settings file) 150
CURSOR_ACCELERATION (settings file) 116
CUSTOMER_DATA (NOR Flash) 98
customising upgrade splashscreen 68
CUSTOM_VERSION (settings file) 150

D

DEFAULT_VOLUME (settings file) 117
DELAY_FACTOR (settings file) 117
Deployment index (DI) 99
DHCP (NOR Flash) 98
DHCP_AUTHENTICATION (NOR Flash) 99
dhcpc file
 BROWSER_HOMEPAGE 160
 DNS 160

DOMAIN 160
GATEWAY 160
IPADDR 160
LEASETIME 161
NETMASK 161
REBINDTIME 161
RENEWALTIME 161
DHCP_TIMEOUT (NOR Flash) 99
DIAL_USER_ENABLE (settings file) 117
DISABLE_CAPTIONING_IN_PIG (settings file) 117
DISPLAY_MODE (settings file) 118
DNS (dhcpc file) 160
DNS (NOR Flash) 99
Document conventions 12
Document history 15
DOLBY_RF (settings file) 119
DOMAIN (dhcpc file) 160
DO_PMT_CHECK (settings file) 119
Dropbear
 Configuring 18
DSCP_GENERIC (settings file) 119
DSCP_MIDDLEWARES (settings file) 119
DSCP_MULTICAST (settings file) 119, 120
DSCP_MWARE_ADDRS (settings file) 120
DSCP_VOD (settings file) 120
Dual interface settings 120
Dynamic DHCP settings file 30

E

EAS (STBremoteconf) 44
ENABLE_CC_OR_SUBS 121
ENABLE_EXTERNAL_RECEIVER (settings file) 120
ENABLE_SUBS_OR_CC (settings file) 121
ENABLE_TRUSTED_DOMAINS (settings file) 121
ETHERNET (NOR Flash) 100
ETHERNET (STBremoteconf) 45
Example settings file 22
EXTRA_STREAM_BUFFERING (settings file) 121

F

File access policy 31
fkeys.conf 27
FRIENDLY_NAME (settings file) 122
FULLSCREEN (settings file) 122
Function keys file 27
FUSIONHOME_EVENTS_ENABLED (settings file) 122

G

GATEWAY (dhcpc file) 160
GATEWAY (NOR Flash) 94, 100
GETCONFIG (STBremoteconf) 45
GETDI (STBremoteconf) 45
GETSTAT (STBremoteconf) 45
GETVERSION (STBremoteconf) 46
GFX_MEM_SIZE (settings file) 122
GFX_RESOLUTION (settings file) 123
GFX_ROTATION (settings file) 124
Graphics 67
 user defined 68

H

HDAUTO 178
HDCP policy file 29
HDMI_AUDIO_FORMAT (settings file) 125
HDMI_FALLBACK_MODE (settings file) 125
HDMI_VIDEO_FORMAT (settings file) 125
HLS_INITIAL_BITRATE_PREFERENCE (settings file) 126
HLS_MIN_NETWORK_PLT_SPOOLTIME (settings file) 126
HLS_STARTUP_MODE (settings file) 126, 127
Homepage
 management pages 85
 settings file 113
HOSPITALITY (settings file) 127
Hostname file
 changing settings 27
HTTP Live Streaming (HLS) 172
HTTP_PROXY (settings file) 128
HTTP_PROXY_IGNORE (settings file) 128
HTTPS_PROXY (settings file) 128

I

IGMP (Media source types) 169
IGMP_END_TIMEOUT (settings file) 128
IGMP_MAX_VER (NOR Flash) 100
IGMP_START_TIMEOUT (settings file) 129
Image components
 configuring 18, 164
INITIAL_LED (settings file) 129
Invalid video mode recovery 177
IP address (static) 24, 82, 89, 100
IPADDR (dhcpc file) 160
IPADDR (NOR Flash) 95, 100
IR_BRAND (settings file) 129

K

Keyboard 92
 using with Configuration pages 74
Keyboard settings (Preferences pages) 92
KEYMAP (settings file) 130

L

LEASETIME (dhcpc file) 161
LED configuration 157
LEGACY_SUBS (settings file) 130
libconfig 57
 setting using a script 61
 setting using JMACX 61
 setting using Telnet 60
LOCK (NOR Flash) 101
LOW_DISK_SPACE_LEVEL (settings file) 130

M

MAC_ADDRESS (NOR Flash) 101
Management pages 81, 93

- browser 85
- configuration settings 93
 - Proxy Setup 94
- dhcp 89
- hardware 83
- infra red control 87
- network 88
- rebooting set-top box 90
- restart 90
- see also Configuration pages 81
- settings 93
- software 84
- TVI (H140) 91
- upgrade 90
- user prefs 91
- video 86

MAXIMUM_VOLUME (settings file) 130

Media source types 168

- IGMP 169
- MP3s 170
- RTSP 168
- UDP 170

MEDIAD_TVI_SUPPORT_DISABLED (settings file) 131

MIDDLEWARE_ARGS (settings file) 131

MINIMUM_VOLUME (settings file) 131

MP3s (Media source types) 170

N

NATIVE_FRAMERATE_PASSTHROUGH_ENABLE (settings file) 131

NATIVE_PASSTHROUGH_ENABLE (settings file) 132

NETMASK (dhcpc file) 161

NETMASK (NOR Flash) 101

NETWORK_DEVICE_POLICY (settings file) 133

no analog file 29

NOR 98

NOR Flash

- BOARDREV 98
- changing settings 23
- CUSTOMER_DATA 98
- DHCP 98
- DHCP_AUTHENTICATION 99
- DHCP_TIMEOUT 99
- DNS 99
- ETHERNET 100
- example script 24
- GATEWAY 94, 100
- IGMP_MAX_VER 100
- IPADDR 95, 100
- LOCK 101
- MAC_ADDRESS 101
- NETMASK 101
- OUTFMT 103
- OUTPUT_RESOLUTION 102
- PPP_PASSWORD 103
- PPP_USERNAME 103
- RFMOD_CHAN 103
- RFMOD_ENABLE 104
- RFMOD_FREQTABLE 104
- SERIAL_ID 104
- settings 58
- SOFTWARE_URI 104
- SUBTITLES 105
- TIME_SERVER 105
- TIME_ZONE 105

- TVSYSTEM 105
- WIRELESS_COUNTRY 106
- WIRELESS_PASSPHRASE 107
- WIRELESS_REGION 106
- WIRELESS_REGION_LOCKED 106
- WIRELESS_SECURITY_MODE 107
- WIRELESS_SSID 106

NTPCLIENT_TIMEOUT (settings file) 134

O

OEM_VERSION (settings file) 150

Operating system 13

OS_VERSION (settings file) 150

OTVS_CLEAR_ALL_DATA (settings file) 135

OTVS_CLEAR_APP_DATA (settings file) 135

OTVS_CLEAR_COOKIE_DATA (settings file) 134

OTVS_UASTRING_OPERATOR (settings file) 134

OUTFMT (NOR Flash) 103

OUTPUT_RESOLUTION (NOR Flash) 102

OUTPUT_RESOLUTION

- video output control 107

OUTRES (STBremoteconf) 48

P

Pause-Live-TV 169

PING (STBremoteconf) 48

PLT (with VoD server) 169

PLT_SPOOLTIME (settings file) 135

PLT_START_DELAY (settings file) 135

PLT_START_OF_BUFFER_ACTION (settings file) 135

POD_SENSITIVITY (settings file) 136

Policy file 31

PPP_PASSWORD (NOR Flash) 103

PPP_USERNAME (NOR Flash) 103

Preferences pages 74

- audio 79
- closed caption builds 76
- configuration settings
 - TV and audio 92
- info 81
- restart 81
- RF 80
- see also Configuration pages 74
- settings 92
- subtitles 80
- video 76

PREFERRED_CAPTIONING_SYSTEM (settings file) 136

PREFERRED_LANG (settings file) 136

Prerequisites

- when configuring multiple set-top boxes 165

PROC (STBremoteconf) 48

PROVISIONING_INFO (settings file) 136

Proxy Setup (Management pages) 94

PS (STBremoteconf) 49

PVR.map file 196

PVR_MAX_RECORD_SESSIONS (settings file) 137

PVR_MAX_REMOTE_PLAYBACK_SESSIONS (settings file) 137

PVR_MAX_SESSIONS (settings file) 137

PVR_SPOOLTIME (settings file) 137

R

RCUCURSOR_CONTROLS_MOUSE (settings file) 138
REBINDTIME (dhcpc file) 161
REBOOT (STBremoteconf) 49
Rebooting set-top box
 using Management pages 90
REFLASH (STBremoteconf) 49
REFORMAT (STBremoteconf) 50
Remote control
 using with Configuration pages 74
REMOTECONF (settings file) 138
REMOTECONFPORT (settings file) 138
REMOTECONF_URI (settings file) 139
REMOTE_LAYOUT (settings file) 138
RENEWALTIME (dhcpc file) 161
REPEAT_RATE (settings file) 139
RFBOOST_DOLBY (settings file) 139
RFBOOST_MPEG (settings file) 140
RFMOD_CHAN (NOR Flash) 103
RFMODE (STBremoteconf) 50
RFMOD_ENABLE (NOR Flash) 104
RFMOD_FREQTABLE (NOR Flash) 104
RTCP RETRANSMISSION ENABLE (settings file) 140
rtcpretrans 140
RTP 168
RTP_AUTO_SKIP_ENABLE (settings file) 140
rtpskip 171
RTSP (Media source types) 168
RTSP_BASE_PORT (settings file) 140
RTSP_END_TIMEOUT (settings file) 140
RTSP_SCALE (settings file) 141
RTSP_SERVER (settings file) 141
RTSP_SIMPLE_TRANSPORT (settings file) 139, 141
RTSP_START_TIMEOUT (settings file) 141
RUN_BROWSER_NETWORK_CHECK (settings file) 142

S

SCTE-27 subtitles (settings file) 121
SECONDARY_LANG (settings file) 142
SELECT_RTSP_STREAM_BY_PORT_ONLY (settings file) 142
SERIAL_ID (NOR Flash) 104
settings file
 ALT_TIME_SERVERS 110
 ANY_KEY_STANDBY_RECOVER 110
 AUDIO_DESCRIPTION_STREAM_TYPES 110
 AVSYNC_WAIT 111
 BROWSER_ALLOC_EXTRA 111
 BROWSER_CACHE_DOCUMENT 111
 BROWSER_CACHE_IMAGES 111
 BROWSER_CACHE_RAM 111
 BROWSER_ENABLECOOKIES 112
 BROWSER_FALLBACK_BEHAVIOUR 112
 BROWSER_HEAP_EXTRA 112
 BROWSER_HELPPAGE 113
 BROWSER_HOMEPAGE 113
 BROWSER_MARGIN_BOTTOM 113
 BROWSER_MARGIN_LEFT 113
 BROWSER_MARGIN_RIGHT 113
 BROWSER_MARGIN_TOP 113
 BROWSER_PRESERVECOOKIES 113
 BROWSER_UNLOAD_VIDEO 114
 BROWSER_VSYNC 114

CA_ARGS 114
CA_DHCP_AUTH 115
CAPTIONING_GFX_RESOLUTION 115
CAPTIONING_WINDOW_LEVEL 115
CC_DIGITAL_SERVICE 115
CC_FORCE_SCROLL_ON_CR 116
CC_PREFERENCE 116
CEC_AUTO_RESPONSE 116
changing settings 22
closed captions 121
CPU_MODEL 150
CURSOR_ACCELERATION 116
CUSTOM_VERSION 150
DEFAULT_VOLUME 117
DELAY_FACTOR 117
DIAL_USER_ENABLE 117
DISABLE_CAPTIONING_IN_PIG 117
DISPLAY_MODE 118
DOLBY_RF 119
DO_PMT_CHECK 119
DSCP_GENERIC 119
DSCP_MIDDLEWARES 119
DSCP_MULTICAST 119, 120
DSCP_MWARE_ADDRS 120
DSCP_VOD 120
ENABLE_EXTERNAL_RECEIVER 120
ENABLE_SUBS_OR_CC 121
ENABLE_TRUSTED_DOMAINS 121
example 22
EXTRA_STREAM_BUFFERING 121
FRIENDLY_NAME 122
FULLSCREEN 122
FUSIONHOME_EVENTS_ENABLE 122
GFX_MEM_SIZE 122
GFX_RESOLUTION 123
GFX_ROTATION 124
HDMI_AUDIO_FORMAT 125
HDMI_FALLBACK_MODE 125
HDMI_VIDEO_FORMAT 125
HLS_INITIAL_BITRATE_PREFERENCE 126
HLS_MIN_NETWORK_PLT_SPOOLTIME 126
HLS_STARTUP_MODE 126, 127
HOSPITALITY 127
HTTP_PROXY 128
HTTP_PROXY_IGNORE 128
HTTPS_PROXY 128
IGMP_END_TIMEOUT 128
IGMP_START_TIMEOUT 129
INITIAL_LED 129
IR_BRAND 129
KEYMAP 130
LEGACY_SUBS 130
LOW_DISK_SPACE_LEVEL 130
MAXIMUM_VOLUME 130
MEDIAD_TVI_SUPPORT_DISABLED 131
MIDDLEWARE_ARGS 131
MINIMUM_VOLUME 131
NATIVE_FRAMERATE_PASSTHROUGH_ENABLE 131
NATIVE_PASSTHROUGH_ENABLE 132
NETWORK_DEVICE_POLICY 133
NTPCLIENT_TIMEOUT 134
OEM_VERSION 150
OS_VERSION 150
OTVS_CLEAR_ALL_DATA 135
OTVS_CLEAR_APP_DATA 135
OTVS_CLEAR_COOKIE_DATA 134
OTVS_UASTRING_OPERATOR_NAME 134
PLT_SPOOLTIME 135

PLT_START_DELAY 135
 PLT_START_OF_BUFFER_ACTION 135
 POD_SENSITIVITY 136
 PREFERRED_CAPTIONING_SYSTEM 136
 PREFERRED_LANG 136
 PROVISIONING_INFO 136
 PVR_MAX_RECORD_SESSIONS 137
 PVR_MAX_REMOTE_PLAYBACK_SESSIONS 137
 PVR_MAX_SESSIONS 137
 PVR_SPOOLTIME 137
 RCUCURSOR_CONTROLS_MOUSE 138
 REMOTECONF 138
 REMOTECONFPORT 138
 REMOTECONF_URI 139
 REMOTE_LAYOUT 138
 REPEAT_RATE 139
 RFBOOST_DOLBY 139
 RFBOOST_MPEG 140
 RTCP_RETRANSMISSION_ENABLE 140
 RTP_AUTO_SKIP_ENABLE 140
 RTSP_BASE_PORT 140
 RTSP_END_TIMEOUT 140
 RTSP_SCALE 141
 RTSP_SERVER 141
 RTSP_SIMPLE_TRANSPORT 139, 141
 RTSP_START_TIMEOUT 141
 RUN_BROWSER_NETWORK_CHECK 142
 SCTE-27 subtitles 121
 SECONDARY_LANG 142
 SELECT_RTSP_STREAM_BY_PORT_ONLY 142
 SKIP_DHCP_LEASE_CHECK 143
 SOC_VERSION 150
 SOFTWARE_BUILD_TIME 150
 SOFTWARE_VERSION 150
 STANDBY_LED 143
 STB_FAMILY 150
 STB_MODEL 150
 STBRC_ALLOW_DHCP 143, 144
 STBRC_INTERFACES 144
 STBRCPORT 143
 STC_OFFSET 145
 STEREOSCOPIC_PASSTHROUGH 145
 STREAM_RATE_LIMIT 146
 SUBTITLES_OPTION 146
 SUBTITLES_PREF_LANG 146
 SUBTITLES_PREF_TYPE 147
 SUBTITLES_SECOND_LANG 93, 147
 SYSLOG_BUFFER_SIZE 147
 SYSLOG_KERNEL_REDIRECT 147
 SYSLOG_REMOTE_ADDR 147
 SYSLOG_REMOTE_LEVEL 148
 SYSLOG_REMOTE_LOG_ENABLED 148
 SYSLOG_REMOTE_LOG_ID_FORMAT 148
 SYSLOG_REMOTE_LOG_TIME 149
 SYSLOG_REMOTE_PORT 149
 SYSTEM 150
 SYSTEM_LANGUAGE 150
 TELETEXT_FULLSCREEN 150
 TEXT_ENTRY 150
 THINK_BOOTMODE 151
 TOOLBAR_STATE 151
 TOTAL_MEMORY 150
 TVI_TYPE 151
 UDP_END_TIMEOUT 151
 UDP_START_TIMEOUT 152
 USB_SPEED 152
 USE_PROXY 152
 USER_AGENT_STRING 152
 UTILITY_LED 153
 VIDEO_ERROR_MODE 153
 VQE_DISABLE 153
 VUDU_SUSPEND_TIMEOUT 154
 WATCHDOG_HEARTBEAT 154
 WATCHDOG_TIMEOUT 154
 YTLB_CLEAR_ALL_DATA 155
 YTLB_CLEAR_APP_DATA 155
 YTLB_CLEAR_COOKIE_DATA 155
 YTLB_UASTRING_OPERATOR_NAME 154
 SIGNEDCMD (STBremoteconf) 52
 SKIP_DHCP_LEASE_CHECK (settings file) 143
 SNAPSHOT (STBremoteconf) 52
 SOC_VERSION (settings file) 150
 SOFTWARE_BUILD_TIME (settings file) 150
 SOFTWARE_URI (NOR Flash) 104
 SOFTWARE_VERSION (settings file) 150
 SSH
 configuring on set-top box 18
 STANDBY_LED (settings file) 143
 static IP address 24, 82, 89, 100
 STATS (STBremoteconf) 53, 185
 STB_FAMILY (settings file) 150
 STB_MODEL (settings file) 150
 STBRC_ALLOW_DHCP (settings file) 143, 144
 STBRC_INTERFACES (settings file) 144
 STBRCPORT (settings file) 143
 STBremoteconf
 Commands
 CEC_CMD 42
 CEC_TVOFF 42
 CEC_TVON 42
 CHANGEPAGE 43
 EAS 44
 ETHERNET 45
 GETCONFIG 45
 GETDI 45
 GETSTAT 45
 GETVERSION 46
 OUTRES 48
 PING 48
 PROC 48
 PS 49
 REBOOT 49
 REFLASH 49
 REFORMAT 50
 RFMODE 50
 SIGNEDCMD 52
 SNAPSHOT 52
 STATS 53, 185
 UPGRADE 54
 VOD 54
 configuring set-top box 18
 default multicast address 40
 default ports 39
 example commands 38
 how it works 34
 installation 34
 key changing 55
 overview of command options 41
 parameter syntax 39
 removing 37
 sending commands 37
 upgrading 36
 using scripts for control 38
 STC_OFFSET (settings file) 145
 STEREOSCOPIC_PASSTHROUGH (settings file) 145
 STREAM_RATE_LIMIT (settings file) 146

Structure 15
subtitles 121
SUBTITLES (NOR Flash) 105
SUBTITLES_OPTION (settings file) 146
SUBTITLES_PREF_LANG (settings file) 146
SUBTITLES_PREF_TYPE (settings file) 147
SUBTITLES_SECOND_LANG (settings file) 93, 147
SYSLOG_BUFFER_SIZE (settings file) 147
SYSLOG_KERNEL_REDIRECT (settings file) 147
SYSLOG_REMOTE_ADDR (settings file) 147
SYSLOG_REMOTE_LEVEL (settings file) 148
SYSLOG_REMOTE_LOG_ENABLED (settings file) 148
SYSLOG_REMOTE_LOG_ID_FORMAT (settings file) 148
SYSLOG_REMOTE_LOG_TIME (settings file) 149
SYSLOG_REMOTE_PORT (settings file) 149
SYSTEM (settings file) 150
SYSTEM_LANGUAGE (settings file) 150

T

TELETEXT_FULLSCREEN (settings file) 150
Telnet
 configuring on set-top box 18
 enabling 66
TEXT_ENTRY (settings file) 150
THINK_BOOTMODE (settings file) 151
TIME_SERVER (NOR Flash) 105
TIME_ZONE (NOR Flash) 105
TOOLBAR_STATE (settings file) 151
TOTAL_MEMORY (settings file) 150
trsdmns.txt
 contents 25
Trusted domains file 24
 changing settings 25
 contents 25
TV and audio settings (Preferences pages) 92
TVI_TYPE (settings file) 151
TVSYSTEM (NOR Flash) 105

U

UDP (Media source types) 170
UDP_END_TIMEOUT (settings file) 151
UDP_START_TIMEOUT (settings file) 152
UPGRADE (STBremoteconf) 54
Upgrade image
 creating an upgrade script 65
 customising 63
 customising graphics 67
 editing the flashcontents file 65
 enabling remote log-in 66
upgrade splashscreen
 customising 68
upgrade.sh file 23
upgrade_branding.tgz file 69
USB_SPEED (settings file) 152
USE_PROXY (settings file) 152
User preferences pages
 see Preferences pages 74
USER_AGENT_STRING (settings file) 152
Usersettings file
 changing settings 26
 contents 27
UTILITY_LED (settings file) 153

V

Video output formats 179
VIDEO_ERROR_MODE (settings file) 153
VOD (STBremoteconf) 54
Volume control 157
VQE_DISABLE (settings file) 153
VUDU_SUSPEND_TIMEOUT (settings file) 154

W

WATCHDOG_HEARTBEAT (settings file) 154
WATCHDOG_TIMEOUT (settings file) 154
WIRELESS_COUNTRY (NOR Flash) 106
WIRELESS_PASSPHRASE (NOR Flash) 107
WIRELESS_REGION (NOR Flash) 106
WIRELESS_REGION_LOCKED (NOR Flash) 106
WIRELESS_SECURITY_MODE (NOR Flash) 107
WIRELESS_SSID (NOR Flash) 106

Y

YTLB_CLEAR_ALL_DATA (settings file) 155
YTLB_CLEAR_APP_DATA (settings file) 155
YTLB_CLEAR_COOKIE_DATA (settings file) 155
YTLB_UASTRING_OPERATOR_NAME (settings file) 154