



ZTE Blade L130
User Manual

LEGAL INFORMATION

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2019 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [For Your Safety](#) to be sure to use your phone properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at <http://www.ztedevices.com>) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation. Android is a trademark of Google LLC.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.



microSDXC Logo is a trademark of SD-3C, LLC.

Other trademarks and trade names are those of their respective owners.

Instructional Icons



NOTE

Additional information, supplementary instruction or tips for the operation of the product.



CAUTION

Safety information that, if ignored, may cause minor damage to the equipment or service interruption.



WARNING

Safety information that, if ignored, may cause serious damage to the equipment or danger to personal safety.

Version No.: R1.0

Edition Time: March 1, 2019

Contents

Getting Started	9
Overview	9
Knowing the Keys	11
Setting Up Your Phone	12
Charging the Phone	15
Powering On/Off	16
Setting Up for the First Time	16
Knowing the Home Screen	17
Personalizing	18
Choosing Your Wallpaper	18
Removing Items From Your Home Screen	18
Using Do Not Disturb Mode	19
Knowing the Basics	21
Monitoring the Phone Status	21
Managing Notifications	22
Using Quick Settings	23
Opening and Switching Apps.....	24
Security	25
Protecting Your Phone With a Screen Lock	25
Protecting Your Phone With Screen Pinning	25
Connecting to Networks	27
Connecting to Mobile Network	27
Connecting to a Wi-Fi Network	29


Connecting to Devices	30
Bluetooth®	30
Connecting to a Computer via USB	31
Sharing Your Mobile Data Connection Through Tethering.....	33
Phone Calls	34
Placing Calls.....	34
Answering or Rejecting Calls	36
Contacts	38
Creating a Contact	38
Searching for a Contact.....	39
Importing and Exporting Contacts	39
Setting a Ringtone for a Contact	41
Joining Duplicate Contacts.....	42
Separating Contact Information.....	42
Setting Call Blocking	43
Gmail.....	44
Setting Up the First Email Account.....	44
Writing and Sending an Email	44
Responding to a Message.....	45
Messages.....	46
Opening the Messages Screen.....	46
Sending a Message.....	46
Message Options	47


Message Settings	48
Camera	49
Taking Pictures	49
Recording Videos	50
Using Other Camera Modes	51
Photos	52
Opening Photos	52
Sharing Your Photos or Videos	52
Deleting Unwanted Photos or Videos	52
Restoring a Photo or Video	53
Settings	54
Network & Internet	54
Connected Devices	57
Apps & Notifications	57
Battery	58
Display	59
Scheduled Power On/Off	59
Navigation Bar	59
Audio Profiles	59
Storage	59
Security & Location	60
Accounts	62
Accessibility	63
Google	63
System	63

For Your Safety	65
General Safety	65
Radio Frequency (RF) Energy	67
Distractions.....	69
Product Handling.....	70
Electrical Safety.....	76
Radio Frequency Interference.....	77
Explosive Environments	78
Specification.....	80
CE Caution.....	81
Battery Caution.....	81
USB Port	81
Proper Use	81
Disposal of Your Old Appliance	82
EU DECLARATION OF CONFORMITY	83

Getting Started

Overview

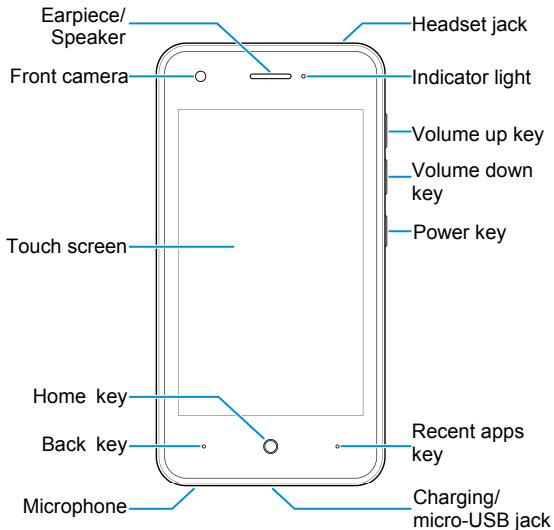

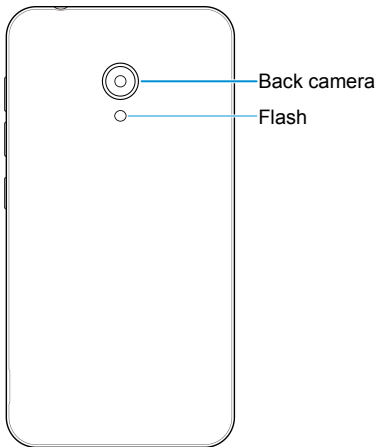

Knowing the Keys

Key	Function
Power key	<ul style="list-style-type: none">• Press and hold to turn on or off aeroplane mode, sound, vibration; restart; or power off.• Press to turn off or on the screen display.
Volume up/down key	Press or hold to turn the volume up or down.
Home key	<ul style="list-style-type: none">• Touch to return to the home screen from any application or screen.• Touch and hold to use the Google Assistant.
Back key	Touch to go to the previous screen.
Recent apps key	<ul style="list-style-type: none">• Touch to see recently used apps.• Double-tap to switch to the most recent app.



NOTE:

The positions of the **Recent apps** key and the **Back** key are interchangeable through **Settings > Navigation bar**.

Setting Up Your Phone


Power off your phone before installing or removing the nano-SIM cards and the microSDXC card.

Power off your phone before removing or replacing the battery.


WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

1. Place your finger into the slot at the lower left of the back cover, and gently lift and remove the cover.

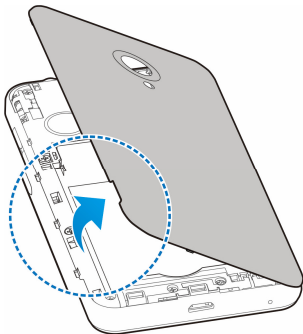


2. Install the nano-SIM card(s) as shown.

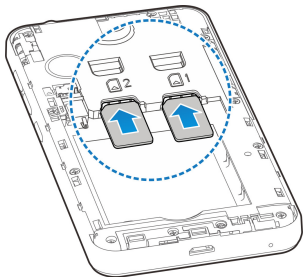


NOTE:

When two nano-SIM cards are installed, both cards can connect to the 3G or 2G network, and either card can be used for mobile data.

3. Install the microSDXC card as shown.

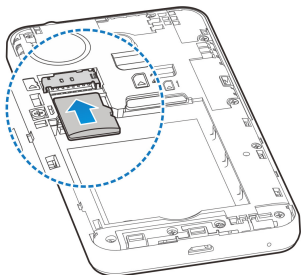

4. Insert the battery, making sure the connectors align.
Gently push down on the battery until it clicks into place.

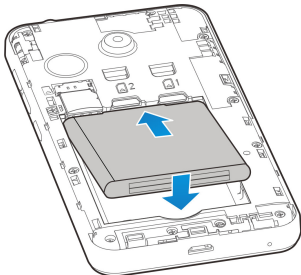


5. Replace the back cover.

Charging the Phone

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only ZTE-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

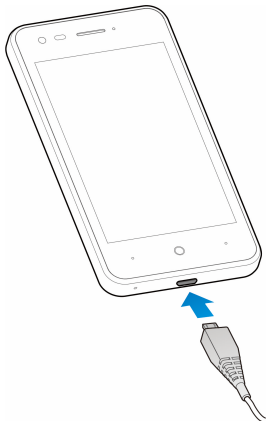

 **NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To switch it off, press and hold the **Power** key to open the options menu and touch **Power off > Touch to power off**.

 **NOTE:**

If the phone freezes or takes too long to respond, reinstall the battery and power on the phone again.

Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Touch the language field to select the language you want to use and then touch **START**. If you have installed two nano-SIM cards, select the card for mobile data, calls, or messages. Then follow the prompts to set up Wi-Fi, date & time, Google services, and the screen lock.

Knowing the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding folders, shortcuts, and more.

Your home screen is extendable, providing more space for shortcuts and folders. Drag a shortcut or folder to the right edge of the home screen to create an extended home screen panel. Then you can leave the item on the panel and swipe left or right on the screen to switch between panels.

Personalizing

Choosing Your Wallpaper

You can set the wallpaper for the home screen and the lock screen.


1. Touch and hold on an empty area of the home screen and touch **Wallpapers**.
2. Touch **My photos** to select an image or directly touch a built-in static wallpaper. For images in My photos, you can pan and zoom on them to select the area you need.
3. Touch **Set wallpaper**.



NOTE:


You can also set the wallpaper by opening the **Settings** app and selecting **Display > Wallpaper**.

Removing Items From Your Home Screen

Touch and hold the item you want to remove and drag it to  **Remove**.




NOTE:

If the item is an app icon, you may also drag it to  **Uninstall** and touch **OK** to uninstall the app. Some preinstalled apps cannot be uninstalled.

Using Do Not Disturb Mode

You can limit interruptions with Do Not Disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

Turn on Do Not Disturb Mode

1. Swipe down from the top of the screen with two fingers to access the Quick Settings.
2. Find and touch  to turn on Do Not Disturb mode.

Set Do Not Disturb Mode




















1. From the home screen touch **Settings > Apps & notifications > Notifications > Do not disturb.**
2. Touch the following options as you need:
 - ▶ **Sound & vibration:** Turn on or off sound/vibration for listed items in Do Not Disturb mode.
 - ▶ **Notifications:** Set notification behavior in Do Not Disturb mode. You can block sound or visuals from notifications, or customize more restrictions. Note that critical notifications for phone activity and status cannot be blocked.
 - ▶ **Calls:** When Do Not Disturb is on, incoming calls are blocked. You can adjust settings to allow friends, family, or other contacts to reach you.

- ▶ **Messages, events & reminders:** When Do Not Disturb is on, messages, reminders, and events will be muted, except for the items you allow.
- ▶ **Duration:** Turn off Do Not Disturb automatically, manually, or set the duration each time you turn on Do Not Disturb mode.
- ▶ **Turn on automatically:** Use rules to turn on/off Do Not Disturb automatically. Touch an existing rule to set or use it, or touch **Add rule** to create new rules.

Knowing the Basics

Monitoring the Phone Status












The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

	UMTS connected		No signal
	HSDPA+ connected		Signal strength
	GSM connected		Mobile data in use
	Vibration on		Aeroplane mode
	Silent mode on		Connected to a Wi-Fi® network
	Do Not Disturb mode on		Speaker on
	Battery low		Phone microphone off
	Battery full		Location service active
	Battery charging		Alarm set
	Wired headset connected		

Managing Notifications

Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

	New SMS/MMS		USB tethering on
 / 	New message(s) from the Gmail™ app		Song playing
	Missed call		Downloading/ Receiving data
	Call in progress		Uploading/ Sending data
	Call on hold		Open Wi-Fi network detected

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you are playing music. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down

from the top of the screen.

- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Using Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your phone.


Swipe down from the status bar and drag the notification panel downwards to open the Quick Settings panel.

To turn on or off settings quickly:

1. Open the Quick Settings panel.
2. To turn on or off a setting, touch its tile. Touch and hold certain tiles to access more setting options. For example, touch and hold the Wi-Fi tile to open Wi-Fi settings.

To customize the Quick Settings panel:

You can add, remove or rearrange the tiles on the Quick Settings panel.

1. Open the Quick Settings panel.
2. Touch  at the bottom and do one of the following.
 - ▶ Touch and hold a tile and drag it to the position you want.
 - ▶ Touch and hold a tile and drag it to the **Drag here to remove** section to hide it.

- ▶ In the **Hold and drag to add tiles** section, drag a tile up to show it in the Quick Settings panel.

Opening and Switching Apps

Open an App

1. Swipe up on the home screen to view apps.
2. Slide up or down on the screen and touch an app to open it.



NOTE:

Drag the slider on the right side of the screen to the initial letter of the app you need, or touch the search box at the top to search for apps.

Switch Between Recently Opened Apps

1. Touch the **Recent apps** key. The apps you've used recently are displayed as a series of cards. Slide up and down to see all the cards.
2. Touch a card to open that app.



NOTES:

- You can swipe a card left to remove it from the screen, which will free up running memory on the phone.
- Double-tap the **Recent apps** key to switch to the most recent app.

Security

Protecting Your Phone With a Screen Lock

1. From the home screen touch **Settings > Security & location > Screen lock**.
2. Touch **None, Swipe, Pattern, PIN, or Password**.
 - ▶ Touch **None** to disable the screen lock.
 - ▶ Touch **Swipe** to allow unlocking with a 'swipe' gesture. Anyone can unlock the screen by touching the display and sliding up.
 - ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.
 - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.



Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turn On Screen Pinning

1. Swipe up on the home screen and touch **Settings > Security & location > Advanced > Screen pinning**.
2. Touch the **Off** switch.
3. To add security for unpinning, switch on **Lock device when unpinning** and set up a screen lock as prompted, or switch on **Ask for unlock pattern/PIN/password before unpinning** if you've set a screen lock already.

Pin a Screen

1. Ensure that screen pinning is turned on.
2. Open the app you want to keep in view.
3. Touch the **Recent apps** key.
4. If there are many app tabs, swipe up to find  on the front-most tab.
5. Touch .

Unpin the Screen

To unpin the screen and return to normal use, touch and hold the **Back** key and the **Recent apps** key.

If you have asked for the unlock pattern, PIN or password before unpinning the screen, swipe up on the lock screen and draw the pattern or enter the PIN/password.

Connecting to Networks

Connecting to Mobile Network

Manage the nano-SIM Cards

When two nano-SIM cards are installed, you can turn on or off one of the cards, or choose the default card for calls, data, and messages.

To turn on or off a card:

1. From the home screen touch **Settings > Network & Internet > SIM cards**.
2. Touch the on/off switch next to a card.

NOTE:



You can touch a card name to edit it, change its colour, and view the operator and number of the card.

To set the default card for calling, messaging, and data connection:

1. From the home screen touch **Settings > Network & Internet > SIM cards**.
2. Touch **Mobile data**, **Calls**, or **SMS messages** to set the preferred SIM for mobile data, outgoing calls, or outgoing messages.


Set Access Point Names

To connect to the Internet, you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. From the home screen touch **Settings > Network & Internet > Mobile network**.
2. If two nano-SIM cards are installed, touch one of the card names at the top.
3. Touch **Advanced > Access point names**.
4. Touch  > **New APN** and touch each item to enter the information you get from your service provider.
5. Touch  > **Save** to complete.



NOTE:

To set the APN to default settings, on the **APNs** screen touch  > **Reset to default > OK**.

Turn on/off Mobile Data

1. From the home screen touch **Settings > Network & Internet > Data usage / SIM cards**.
2. Switch on/off **Mobile data**.

Connecting to a Wi-Fi Network

1. From the home screen touch **Settings > Network & Internet > Wi-Fi**.
2. Slide the **Use Wi-Fi** switch to turn Wi-Fi on.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.



NOTE:

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Connecting to Devices

Bluetooth®

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (33 feet). The Bluetooth devices must be paired before communication is performed.

1. From the home screen touch **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Slide the switch to the **On** position if Bluetooth is off.
3. Touch **Pair new device**. Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range.
4. Touch the device you want to pair with.
5. If necessary, confirm that the Bluetooth passkeys are the same between the two devices and touch **PAIR**. Alternatively, enter a Bluetooth passkey and touch **PAIR**. Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

 **NOTE:**

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.

Connecting to a Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in the phone storage or on a removable microSDXC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

Connect Your Phone to the Computer

1. Connect your phone to a PC with a USB cable.
2. The **Use USB for** options menu will automatically open, and you can choose one of the following options.
 - ▶ **File transfer:** Transfer files on Windows® PC or Mac®.

 **NOTE:**

For Windows XP, please install Media Player 11 (or later version) when you use File transfer.

- ▶ **PTP:** Transfer photos or files if File transfer is not supported by your computer.
- ▶ **Charge this device:** Charge your phone via USB.
- ▶ **Install driver:** Install the driver needed for some USB connection modes (such as File transfer). You only need to install the driver on the same PC once.



NOTE:

You can also install the driver on PC by running the executable file in the new CD-ROM drive.

Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Sharing Your Mobile Data Connection Through Tethering

You can use tethering to share your phone's Internet connection with a computer or other device that connects to your phone via USB cable or by Bluetooth.

1. From the home screen touch **Settings > Network & Internet > Hotspot & tethering**.
2. Switch on **USB tethering** or **Bluetooth tethering**.
 - ▶ For USB tethering, connect your phone to the computer with the supplied USB cable before touching **USB tethering**.
 - ▶ For Bluetooth tethering, pair your phone with another device via Bluetooth and set the device to obtain its network connection via Bluetooth.






NOTE:

To stop sharing your data connection, switch off **USB tethering** or **Bluetooth tethering**.

Phone Calls

Placing Calls


Place a Call by Dialling

1. From the home screen touch .
2. Touch  to open the dialer and enter the phone number or the contact name with the dialpad. Touch  to delete incorrect digits.



NOTE:

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.




3. Touch  below the keypad to dial. When two nano-SIM cards are available, touch the card you want to use for the call.



NOTE:




To make an international call, touch and hold the **0** key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

Place a Call From the Call History





1. From the home screen touch  > .
2. Touch  next to an entry in the call history list to call back. When two nano-SIM cards are available, touch the card you want to use for the call.

Place a Call From a Text Message

While viewing a text message, you can call the sender or phone numbers contained in the message.

1. From the home screen touch .
2. Touch the conversation.
3. To call the message sender, touch  at the top; to call a number in the message text, touch the number.
4. Touch  below the keypad to dial the call. When two nano-SIM cards are available, touch the card you want to use for the call.

Call Your Contacts

1. From the home screen touch  or  > .
2. Touch  next to a contact in the list to place the call. When two nano-SIM cards are available, touch the card you want to use for the call.

Answering or Rejecting Calls

Answer a Call

When you receive a phone call, swipe up on the screen to answer the call.

- or -


If the screen is unlocked, touch **ANSWER**.



NOTE:

To silence the ringer before answering the call, press the **Volume up** key or the **Volume down** key.

Reject a Call


When you receive a phone call, swipe down on the screen to reject the call, or swipe away from  to reject the call and send a message to the caller.

- or -






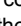


If the screen is unlocked, touch **DECLINE** to reject the call, or touch **MESSAGE** to reject the call and send a message to the caller.

Call Options

During a call, you will see a number of on-screen options. Touch an option to select it.

- Touch  to make another call separately from the first

call, which is put on hold.



- Touch  to put the call on hold.
- Touch  to go to **Contacts**.
- Touch  to mute or unmute your microphone.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail) during the call.
- Touch  to turn on or off the speaker.
- Touch  to merge the separate calls into a single conference call.
- Touch  to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch  to end the current call.

WARNING!

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Call Settings



Call settings let you set speed dial, call blocking, voicemail, accessibility, and other settings.

1. From the home screen touch .
2. Touch  next to **Search contacts**.
3. Touch **Settings**.



Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing. You can view and add contact information directly from Phone, Gmail, and message applications.

Creating a Contact

1. From the home screen touch .
2. Touch  to add a contact.
3. The first time you create a contact, choose the default account for new contacts.
4. Touch **Saving to** to choose where to save the contact. You can save the contact on the phone, the nano-SIM cards, or a web account (such as Google).
5. Enter the contact name, phone numbers, email addresses, and other information.
6. Touch **SAVE**.



Searching for a Contact

1. From the home screen touch .
2. Touch  at the top of the screen.
3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

Importing and Exporting Contacts


You can import/export contacts from/to your nano-SIM cards, the phone storage or an installed microSDXC card. This is especially useful when you need to transfer contacts between different devices.

Import Contacts From the nano-SIM Cards

1. Open **Contacts**.
2. Touch  > **Settings** > **Import** > **Import from [card name]**.
3. Check the contacts you need and then touch .
4. In prompted, touch the account you want to import the contacts to.

Import Contacts From the Phone Storage or the microSDXC Card

1. Open **Contacts**.
2. Touch  > **Settings** > **Import** > **.vcf file**.



3. In prompted, touch the account you want to import the contacts to.
4. Touch  and find the vCard file(s) on the phone storage or microSDXC card and touch one to import contacts.






NOTE:

Touch  > **Show internal storage** if needed to find your vCard file(s).

Export Contacts to the nano-SIM Cards


1. Open **Contacts**.
2. Touch  > **Settings** > **Export** > **Export to [card name]**.
3. Check the contacts you need and then touch .

Export Contacts to the Phone Storage or the microSDXC Card

1. Open **Contacts**.
2. Touch  > **Settings** > **Export** > **Export to .vcf file**.
3. Touch  and select the directory in which the vCard file will be saved. Touch  > **Show internal storage** if needed.
4. Edit the file name if needed and touch **SAVE** to create the file.

Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Open **Contacts**.
2. Touch a contact you want to set a ringtone for and then touch .
3. Touch **More fields > Default ringtone**.




NOTE:

The contact must be saved on the phone, not the nano-SIM card.

4. Select a ringtone you like and touch **OK**.




NOTE:

Touch **Add ringtone** at the bottom of the ringtone list to select an audio file on the phone or an installed microSDXC card. Touch  to switch directories.


5. Touch **SAVE**.

Joining Duplicate Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.


1. Open **Contacts**.
2. Touch a contact, and then touch  > **Link**.
3. Touch the contact whose information you want to join with the first entry.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

4. To join another contact to the main contact, touch  > **View linked contacts > ADD**.


Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Open **Contacts**.
2. Touch a joint contact you want to separate.
3. Touch  > **View linked contacts > UNLINK**.
4. Touch **UNLINK** to confirm.


Setting Call Blocking

The call blocking feature allows you to block calls and messages from certain numbers.

1. Open **Contacts**.
2. Touch  > **Settings** > **Blocked numbers**.
3. Touch the switches to block numbers not in your contacts, undisclosed numbers, pay phone numbers, or unidentified callers.
4. If necessary, touch **ADD A NUMBER** to add specific numbers you want to block.



NOTE:

To unblock a number, touch  next to the number and touch **UNBLOCK**.





Gmail

Swipe up on the home screen and touch **Gmail**. Use it to receive and send emails from your Gmail accounts or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Setting Up the First Email Account







1. Open **Gmail**. If it is the first time the app is opened, touch **GOT IT**.
2. Touch **Add an email address** and select an email server.
3. Follow the on-screen instructions to set up the account.

Writing and Sending an Email

1. Open your email **Inbox** and touch .
2. Touch the To field and enter a contact name or email address. Enter a comma, a semi-colon, or a space to separate each recipient. You can also touch  > **Add from Contacts** to select recipients from your contacts.
3. Enter the email subject and compose the email text.
4. Touch  to add images, videos and other types of files as attachments.
5. Touch  at the top right of the screen to send the message.

Responding to a Message


You can reply to or forward a message that you receive.

1. Open the message you want to reply to or forward from the Inbox.
2. Do the following as you need:
 - ▶ To reply to the sender, touch  (**Reply**).
 - ▶ To reply to the sender and all recipients of the original email, touch  (**Reply all**) or touch  next to the sender and select **Reply all**.
 - ▶ To forward the email to someone else, touch  (**Forward**) or touch  next to the sender and select **Forward**.
3. Edit your message and touch .

Messages

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS).




Opening the Messages Screen

From the home screen touch .

The Messages screen opens, where you can create a new message or open an ongoing message thread.

- Touch **Start chat** to write a new text or multimedia message.
- Touch an existing message thread to open the conversation you've had with a certain number.

Sending a Message

1. From the home screen touch .
2. On the Messages screen, touch **Start chat** at the bottom.
3. Add recipients by one of the following ways.
 - ▶ Manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - ▶ Touch a contact listed below the To field.
 - ▶ To add more recipients for a group conversation, touch  to add more recipients and then touch .

4. If two nano-SIM cards are installed, touch ▼ on the right side of the Text message field to select the card you want to use.
5. Touch the Text message field and enter the message text. Touch + to add emoji to your text message.
6. If you want to send a multimedia message, touch + to add pictures, audio, videos, or location to the message.
7. Touch >.




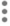
NOTES:

- You can also include email addresses as recipients for a multimedia message.
- Do not add any attachment if you want to send a text message. Otherwise, you may be charged for a multimedia message.

Message Options

On the Messages screen, touch and hold a thread and the following options are available.

- Touch 📁 to archive the thread. You can touch ⋮ > **Archived** from the Messages screen to find all archived messages.
- Touch 🗑️ > **Delete** to delete the thread.
- Touch +👤 to add the new number in the thread to your contacts.


- Touch  > **OK** to block the contact or number in the thread, and the thread will be archived. You can touch  > **Blocked contacts** from the Messages screen to find all blocked numbers.



NOTE:


You can touch and hold a thread and touch more to select them, and then choose to archive or delete them.

Message Settings

On the Messages screen, touch  > **Settings** to change the message settings.

Camera

Taking Pictures

1. From the home screen touch .
2. Aim the camera at the subject and make any necessary adjustment. Swipe right to select other camera modes.



Number	Function
1	Change the flash setting.
2	Capture a picture.
3	View pictures and videos you have taken.
4	Swipe left on the preview area for camera settings and right for more camera modes.
5	Switch to the camcorder.
6	Switch between the front and back cameras.




WARNING!

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.







NOTE:

You can spread or pinch on the screen to zoom in or out before taking pictures.



3. Lightly touch .

Recording Videos

1. From the home screen, touch  > .
2. Aim the camera at the subject. Swipe from the left side of the phone to the centre to switch camcorder modes.

3. Touch  to start recording a video.
4. Touch  to stop recording.

NOTES:

- You can spread or pinch on the screen to zoom in or out before and during recording.
- While the recording is in progress, touch  to pause the recording, or touch  to save the frame as a photo.

Using Other Camera Modes

Your Camera app offers other powerful and interesting camera modes. Different mode offers different function or effect. Swipe right to use them.

- **Manual:** Adjust more camera options for your photo such as ISO, white balance, exposure, and metering.
- **Time Lapse:** Capture time-lapse videos. You can set the time interval between each frame in Camera settings.

NOTE:

Manual and Time lapse modes are only available for the back camera.


Photos

Opening Photos


From the home screen touch **Photos**. You'll see all the photos and videos on your phone and—if you have turned on “Back up & sync”—anything else synced to your Google Photos library.




NOTE:

You can touch  > **Help** to get detailed help information about Google Photos.

Sharing Your Photos or Videos

1. From the home screen touch **Photos**.
2. Touch and hold a photo or video to select it.
3. Touch more items that you want to share.
4. Touch  and select how you want to share the items.


Deleting Unwanted Photos or Videos

1. From the home screen touch **Photos**.
2. Touch and hold a photo or video to select it.
3. Touch more items that you want to move to the bin.
4. Touch  > **Move to the bin** or **Move to Bin**.

 **NOTE:**

Items in the bin will be removed after 60 days.

Restoring a Photo or Video

1. From the home screen touch **Photos**.
2. Touch  > **Bin**.
3. Touch and hold the photo or video you want to restore and touch **Restore**.

Settings

From the home screen touch **Settings**. The **Settings** app contains most of the tools for customizing and configuring your phone. In some menus, you may need to touch **Advanced** to get all the options.

Network & Internet

Wi-Fi

Open **Settings** and touch **Network & Internet > Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connections. See [Connecting to a Wi-Fi Network](#).

Mobile Network

Open **Settings** and touch **Network & Internet > Mobile network** to control data roaming, set access point names and other network options. See [Connecting to Mobile Network](#).

Data Usage

Open **Settings** and touch **Network & Internet > Data usage** to check and manage mobile data use. You can view and restrict Wi-Fi data usage as well. Touch **Data Saver** to enable or disable it, which prevents apps from using data connection in the background. Apps you're currently using

can access data but may do so less frequently when Data saver is enabled. You can touch **Unrestricted data** to allow some apps to always have data connection access, even when Data saver is enabled.



NOTE:

The data usage is measured by your phone, and your carrier's data usage accounting may differ.

Hotspot & Tethering

Open **Settings** and touch **Network & Internet > Hotspot & tethering** to share your phone's mobile data connection with PCs or other devices via USB or Bluetooth.


SIM Cards

Open **Settings** and touch **Network & Internet > SIM cards** to manage dual-SIM options. When two nano-SIM cards are installed, you can turn on or off one of the cards, or choose the default card for voice calls, data, and message.

Aeroplane Mode

Open **Settings** and touch **Network & Internet > Advanced > Aeroplane mode** to turn aeroplane mode on or off. All the phone's radios that transmit voice or data are turned off when aeroplane mode is on.

Call Settings

Open **Settings** and touch **Network & Internet > Advanced > Call settings** to configure call options that you can also access from the Phone app by touching  (next to **Search contacts**) > **Settings > Call Settings**.

VPN

Open **Settings** and touch **Network & Internet > Advanced > VPN** to set up and connect to virtual private networks.

Private DNS

To get information from a website, your phone first asks where the website is. Private DNS is a way to help secure these questions and answers.

By default, your phone uses Private DNS with all networks that can use Private DNS. We recommend keeping Private DNS turned on.

Open **Settings** and touch **Network & Internet > Advanced > Private DNS** to turn Private DNS on or off, or change its settings.

Connected Devices

Open **Settings** and touch **Connected devices > Connection preferences > Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections. See [*Bluetooth*](#).

You can also touch **Connected devices > Connection preferences > Printing** to use the default printing service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

Apps & Notifications

App Info

Open **Settings** and touch **Apps & notifications** to see recently opened apps or all apps installed on your phone and manage them. Touch an app to see its information and configure the available options.

Notifications

Open **Settings** and touch **Apps & notifications > Notifications** to manage app notifications.

Default Apps

Open **Settings** and touch **Apps & notifications > Default apps** to select the default app for voice assistant and input,

web browsing, phone calling, messaging, etc. Touch **Opening links** to set Instant apps options, or touch an installed app to check its supported links and set whether to open the links in the app and clear the app's defaults.

App Permissions

Open **Settings** and touch **Apps & notifications > Advanced > App permissions** to check what apps have been allowed to access certain permissions. You can also change the app permissions.



WARNING!

Changing the app permissions may result in the app not working correctly or as originally intended.

Special App Access

Open **Settings** and touch **Apps & notifications > Advanced > Special app access** to set special access options of apps.

Battery

Open **Settings** and touch **Battery** to view the battery level, check what has been using the battery, enable different battery saving modes, or manually optimize apps to improve battery life.

Display

Open **Settings** and touch **Display** to configure the display options, including brightness level, wallpaper, screen sleep time, font/display size, etc.

Scheduled Power On/Off

Open **Settings** and touch **Scheduled power on/off > Power on** or **Power off** to set the day and time when the phone automatically powers on or off. Check or uncheck **Power on / Power off** to turn the features on or off.

Navigation Bar

Open **Settings** and touch **Navigation bar** to switch to positions of the **Back** key and the **Recent apps** key.

Audio Profiles

Open **Settings** and touch **Audio profiles**. You can use the audio profile you need and add or edit audio profiles.

Storage

Open **Settings** and touch **Storage** to view the memory information of the internal phone storage and the microSDXC card (if one is installed).

- **Saving location:** Select **Phone** or **SD card** as the

default location for new data, such as photos captured and voice recorded.

- **Device storage:** Touch **Internal shared storage** to get a detailed breakdown of space usage by type. Touch **FREE UP SPACE** to delete the files you do not need.
- **Portable storage:** Safely mount, unmount (eject), and format your microSDXC card. If you need to store large applications, games, and their data in your microSDXC card, you can format the card and use it as part of the device storage.

Security & Location

Open **Settings** and touch **Security & location** to configure options that help keep your phone and data safe, and manage location services, which help your phone and apps determine your location.

- **Google Play Protect:** Google Play Protect regularly checks your apps and phone for harmful behaviour and warns you about any detected potential harm.
- **Find My Device:** Use Find My Device to locate, lock, or wipe your lost device remotely. The lost device must be signed in to a Google account.
- **Security update:** Check for security update of your system.

- **Screen lock:** Disable the screen lock or enable it with swipe, pattern, PIN, or password. See [Protecting Your Phone With a Screen Lock](#).

Touch  beside **Screen lock** to set its options.

- **Lock screen preferences:** Set notification display preference and message for the lock screen.
- **Smart Lock:** Keep the phone unlocked when connected to trusted devices, in trusted places, or unlocked when your phone is being carried on the body.

 **NOTE:**

You need to sign in to your Google account on the phone to use all the **Smart Lock** features.

- **Location:** Manage location services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services enabled on your phone.
- **Show passwords:** Display passwords as you enter them.
- **Device admin apps:** View or deactivate apps you have authorised to be device administrators.
- **SIM card lock:**
 - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.

- ▶ **Change SIM PIN:** Change the PIN used to access the nano-SIM card.

 **NOTE:**

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.

- **Encryption & credentials:** Encrypt the data on your phone and set the credential storage options.
- **Trust agents:** View or deactivate trust agents.
- **Screen pinning:** Keep a screen of your choice in view, so that others cannot switch to other apps and access your personal information. See [Protecting Your Phone With Screen Pinning](#).

Accounts

Open **Settings** and touch **Accounts** to manage your accounts and synchronisation. Touch **Add account** to sign in to or create accounts on your phone. Touch an account you have added to adjust its settings.

Accessibility

Open **Settings** and touch **Accessibility** to configure accessibility plug-ins and services on your phone, such as using **Colour inversion** or **Display size** for users with sight problems.

Google

Open **Settings** and touch **Google** to manage settings for Google apps and services.

System

About Phone

Open **Settings** and touch **System > About phone** to view phone number, status, legal information, and other information. You can also touch **Emergency information** to edit your medical information and emergency contacts for first responders to read from your lock screen.

Languages & Input

Open **Settings** and touch **System > Languages & input** to configure options related to system language, input methods and assistance, speech input and output as well as mouse/trackpad input.

Date & Time

Open **Settings** and touch **System > Date & time** to set date, time, time zone, and the time format. You can also use network-provided data.

Backup

Open **Settings** and touch **System > Backup** to manage data backup options. To easily restore or switch phones at any time, you can enable automatic backup to Google Drive of important data. You need to sign in to your Google account to use this feature.

Reset Options










Open **Settings** and touch **System > Advanced > Reset options** to reset network settings, app preferences, or the phone to factory default status.

System Updates

Open **Settings** and touch **System > Advanced > System Updates** to check for system updates and install them when they become available.

For Your Safety

General Safety

	Don't make or receive phone calls while driving. Never text while driving.
	Keep your phone at least 5 mm away from your body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airports.

	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Only use approved accessories.
	For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
	Don't rely on your phone as a primary device for emergency communications.

Radio Frequency (RF) Energy

General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the head was 0.64 W/kg*, and when tested at the body was 1.02 W/kg* with 5 mm distance. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide**.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due

to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 50360, EN 50566, EN 62479, EN 62209-1 and EN 62209-2.

** Please see body worn operation.

Body Worn Operation

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 5 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting Exposure to Radio Frequency (RF) Fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by

limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

Regulatory Information

The following approvals and notices apply in specific regions as noted.

Please find the section EU DOC in the end of this guide.

Distractions

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. An unclean screen or camera lens may slow down the phone's reaction to your operations or interfere with the image quality.
- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.

- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Battery Safety

- Using ZTE-unapproved or incompatible battery, charger or power adapter may damage your device, shorten its lifespan or cause a fire, explosion or other hazards.
- The recommended operating temperatures are 0 °C to 35 °C and the storage temperatures are -20 °C to +45 °C. Extreme temperatures can damage the device and reduce the charging capacity and lifespan of your device and battery.

- Do not place the device or the battery in or near heating equipment, such as microwave ovens, stoves or radiators. Keep the device and the battery away from excessive heat and direct sunlight. If not, the device or the battery may overheat and cause explosion or fire.
- Please disconnect the charger when the battery is fully charged. Overcharging may shorten the battery life.
- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not throw the battery into a fire to avoid explosion.
- Do not disassemble, squeeze or puncture the battery, as this can cause explosion or fire.
- When not using the battery for a long period, please charge the battery about half then remove the battery from your device and store it in a cool dry place.
- If the battery damages or shows signs of swelling or leakage, please stop use immediately and contact ZTE or ZTE authorized service provider for replacement.
- Return the worn-out battery to the provider or put it in the designated recycle place. Do not put it in household waste.
- There is a risk of explosion if the wrong battery model is replaced.

WARNING!

If the battery is broken, you should avoid contact with the contents inside. If they contaminate the skin, immediately rinse with plenty of water and seek medical help when necessary.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the metallic connectors of the nano-SIM card and the microSDXC card.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Airbags

Do not place a phone in the area over an airbag or in the airbag deployment area, as an airbag inflates with great force and serious injury could result. Store the phone in a safe and secure area before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching videos. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, use your phone in a well-lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take frequent breaks to stretch and relax.

Emergency Calls

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the charging jack.

Never puncture the surface of the phone with sharp objects.

Connection to Vehicles

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm (6 inches) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Equipment

Turn off your wireless device when you are requested to do so in hospitals, clinics or healthcare facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft and enable airplane mode of your phone when boarding an aircraft.

Interference in Vehicles

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Specification

<p>EUT supports radios application</p>	<p>GSM900/1800 WCDMA Band 1,8 802.11b/g/n Bluetooth V4.0+LE GPS</p>
<p>Maximum RF output power</p>	<p>WCDMA Version Rel.8</p> <p>GSM900: 33.0 dBm±2 dBm GSM1800: 33.0 dBm±2 dBm WCDMA Band 1: 24.0 dBm+1 dBm/-3 dBm WCDMA Band 8: 24.0 dBm+1 dBm/-3 dBm 802.11b/g/n: 20 dBm Bluetooth EDR: 20 dBm GPS(RX Only)</p>

CE Caution

Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

USB Port

This product shall only be connected to a USB interface of version USB 2.0.

Proper Use

As described in this guide, your device can be used only in right location. If possible, please do not touch the antenna area on your device.

Do not expose your device to extreme temperatures lower than - 10 °C and higher than + 55 °C.

Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

EU DECLARATION OF CONFORMITY



Hereby, ZTE Corporation declares that the radio equipment type ZTE Blade L130 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:
<http://certification.ztedevices.com>