




PORTABLE GENERATOR

Illustrated Parts List

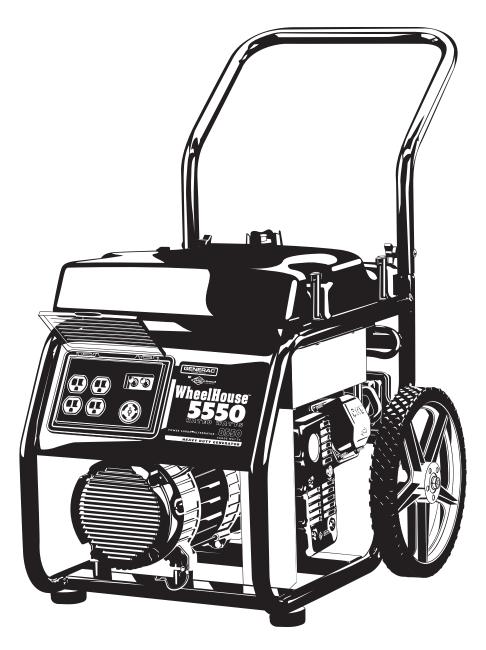


Questions? Help is just a moment away!


Call: Generac Generator Helpline - 1-800-270-1408 M-F 8-5 CT

Web: www.briggsandstratton.com





EXPLODED VIEW - MAIN UNIT

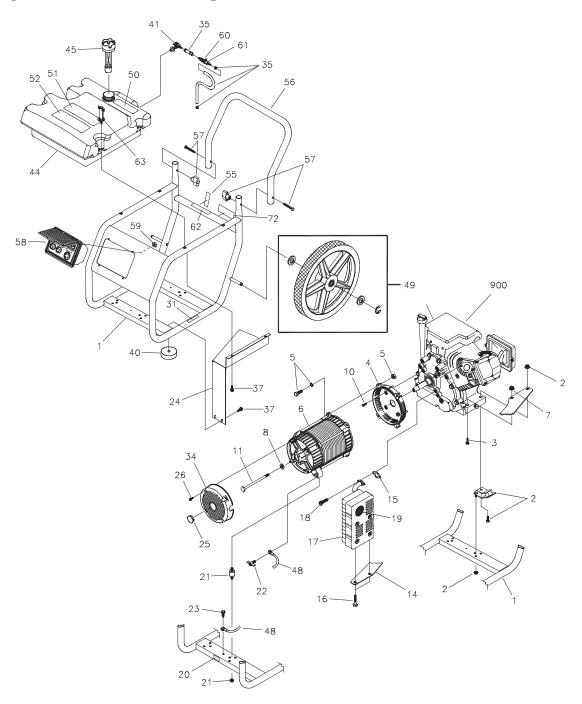

Copyright © 2008 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.








PARTS LIST – MAIN UNIT


	Part #	Description		Part #	Description
1	M197129GS	FRAME, (Includes #20, 31, 40, 55,	45	189420GS	CAP, Fuel Gauge
		62 & 72)	48	195373GS	WIRE, Ground
2	197564GS	KIT, Vibration Mount 45°	49	203650GS	KIT, Wheel
3	*	PPHMS, M8 - 1.25 x 40		192050GS	E-Ring
4	190220GS	HOUSING, Engine Adapter		22304GS	Washer, Flat 1/2
5	194151GS	KIT, Hardware Mounting Adapter	50	188333GS	DECAL, Fuel Tank
6	NSP	ASSY, Alternator (see page 5)	51	194799GS	DECAL, Danger
7	67989GS	NUT, M8 Flange Serrated	52	189235GS	DECAL, Start Instructions
8	96796GS	WASHER, 8.4 x 22.2 x 3	55	73054GS	DECAL, Shut-Off, Fuel
10	190274BGS	SBHCS, 3/8-16 x 1.0	56	M194907GS	HANDLE
11	47480FGS	HHCS, 5/16-24 x 7	57	B2203GS	KIT, Handle Fastening
14	189009GS	BRACKET, Muffler	58	190355GS	ASSY., Control Panel
15	695398	GASKET, Exhaust	59	*	NUT, Palnut 3/16"
16	*	HHCS, M6 - 1.0 x 12	60	189117GS	QUICK CONNECT, Fuel, 1/4 Barb
17	189008GS	MUFFLER	61	192695GS	QUICK CONNECT, Fuel, 1/4 Barb
18	*	SHCS, 5/16 - 18 x 7/8"	62	203579GS	DECAL, CO Warning
19	83083GS	SCREEN, Spark Arrest	63	189114GS	KNOB, Fuel Tank Hold Down
20	B4986GS	DECAL, Ground, Green	72	192480GS	DECAL, Warning, Fuel Line
21	194153GS	KIT, Vibration Mount			Disconnect
22	86494GS	SCREW, Wing, M6 1 x 16	900	§	ENGINE
23	B2153GS	SCREW, 12-14 x 7/8, Self-Drill			
24	192793GS	SHIELD, Heat	Items	Not Illustrated	
25	191190GS	CAP		BB3061GS	Oil Bottle
26	74908GS	SCREW, M5-0.8 x 10 Taptite		43438GS	PLUG, 250V, 30A
31	196830GS	DECAL, Warning, Exhaust		MS5242	MANUAL, Engine
34	195422GS	COVER, RBC, Plastic w/Cap		197131GS	MANUAL, Operator's
35	194432GS	KIT, Hose Fuel w/ Clamps		197581GS	TRAY, Overflow
37	192376GS	SCREW, 12 - 24 x 1/2 THD Forming		193821GS	KIT, Decal, Service
40	192553GS	KIT, Vibe Mount			
41	192980GS	KIT, Valve Tank	* - Items without part numbers are common fastners and are		
44	196181GS	ASSY, Tank, Fuel (includes # 41, 50,	availab	ole at your local h	ardware store.
		51 & 52)	§ - Co	ntact Engine Man	ufacturer








EXPLODED VIEW AND PARTS LIST – CONTROL PANEL

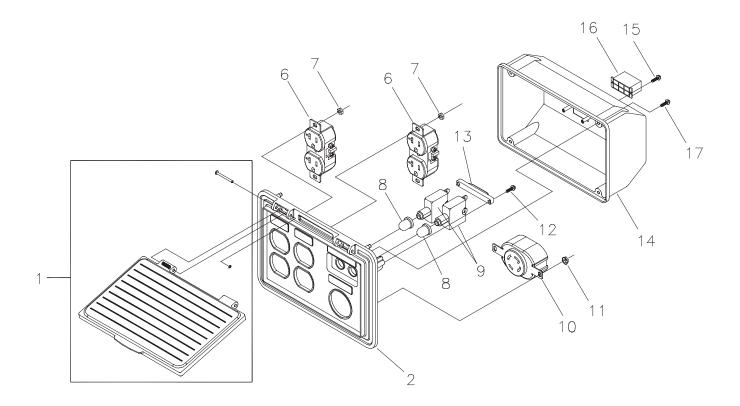

ltem	Part #	Description
1	195112GS	KIT, Control Panel Lid
2	188889GS	CONTROL PANEL, Compact
6	68759GS	OUTLET, 120V, 20Amp, Duplex
7	*	NUT, Palnut, Pushnut, 5/32
8	84198GS	CAP, Circuit Breaker
9	75207GS	CIRCUIT BREAKER
10	43437GS	OUTLET, 120/240 Locking, 30A
11	*	NUT, Palnut, Pushnut, 3/16
12	*	SCREW, Phillips, Head 3.5 x 18
13	93857GS	BAR, Retaining
14	188890GS	COVER, Back, Control Panel
15	82308GS	SCREW, Self Tapping, STC 3 x 18
16	22694GS	HOUSING, Receptacle
17	*	SCREW, Phillips, 3.5 x 14


 $^{^{\}star}$ - Items without part numbers are common fastners and are available at your local hardware store.







EXPLODED VIEW AND PARTS LIST – ALTERNATOR

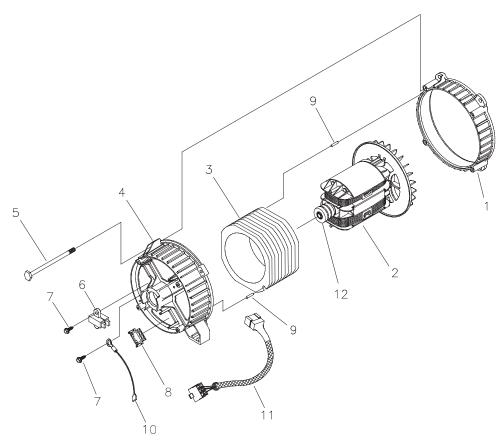

ltem	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	191043GS	ROTOR
3	191042AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197GS)
5	86308CGS	HHCS, M6 - 1.0 x 130 SEMS
6	91825GS	ASSY, Holder, Rectifier/Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	ASSY, Wire, Ground
11	194274GS	HARNESS, Wire, Power
12	65791GS	BEARING