


Splendide 2000S, 2100

Models: WD2000S, WD2100 - (Cabinet)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Cabinet)

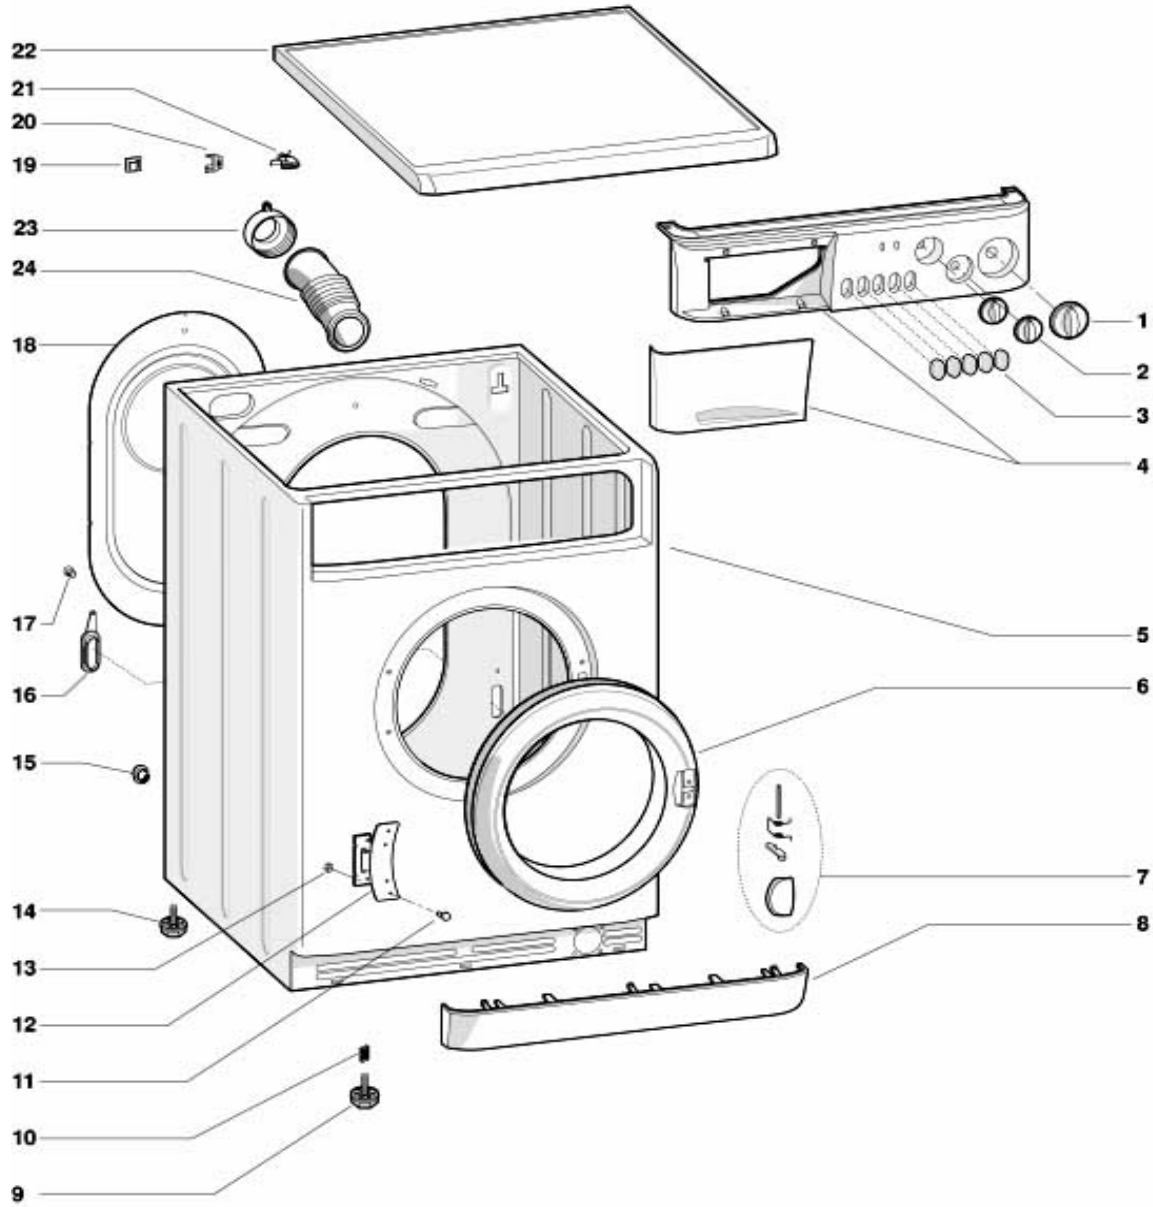

Splendide 2000S, 2100

Models: WD2000S, WD2100 - (Cabinet)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Cabinet)

PART NO.	DESCRIPTION	MODEL
0	111511 Owners Manual (406 & LATER)	WD2000S
0A	090184 Owners Manual (BEFORE 406)	WD2000S & WD2100
0B	090997 Owners Manual	WDC5200
0C	090324 Owners Manual	WDC6200
1	082337 Wash Timer Knob - Big	ALL
1A	116613 Wash Timer Knob - Big 50404+	WD2000S/WD2100
2	081708 Wash Temperature, Dry Timer Knob - Small	ALL
2A	116611 Wash Temperature, Dry Timer Knob - Small 50404 + WD2000S WD2100	ALL
3	081706 Push Button	ALL
3A	116615 Push Button PW 50404+	WD2100/WD2000S
4	110421S Soap dispenser panel WD2000S B4 50404	WD2000S
4A	110421C Control Panel WD2000S B4 50404	WD2000S
4B	087919A Heater Housing Upper & Lower (406 - 601)	WD2000S
	114388 Heater Housing Upper & Lower (602+)	WD2000S
4C	116782S Soap Panel WD2000S 50404+	WD2000S
4D	090192S Soap Dispenser WD2100 B4 50404	WD2100
4E	090192C Control Panel WD2100 B4 50404	WD2100
4F	117500S Soap Dispenser WD2100 50404+	WD2100
4G	117500C Control Panel WD2100 50404+_	WD2100
4H	091414C Control Panel	WDC5200
4I	091414S Soap Panel WDC5200	WDC5200
4J	090320S Soap Panel WDC6200	WDC6200CEE
4K	090320C Control Panel	WDC6200CEE
6	116626 Door Assembly - WHITE ALL	WD2000S
6A	118119 Door Assembly - TITANIUM LOOK	WD2100/WDC5200/WDC 6200
7	082299 Door Handle Assembly-WHITE	WD2000S
7A	118122 Door Handle Assembly-TITANIUM LOOK	WD2100/WDC5200/WDC 6200
8	116630 Panel Lower Front ALL	ALL
8A	081697 Panel Lower Front	ALL
9	087084 Front / Rear Foot ALL	ALL
9A	081702 Front Foot-ALL	ALL
10	083828 Spring Front Foot ALL	WD2000S
10A	059869 Spring Front Foot ALL	ALL
11	019846 Door Hinge Bolt	ALL
12	075325 Door Hinge	ALL
13	002497 Door Hinge Nut	ALL
14	081701 Rear Foot	ALL
15	046666 Drain Hose Collar	ALL
16	084817 Serial Port Plug	ALL

17	NA	Rear Panel Plug	ALL
18	099313	Back Panel (406 & LATER)	WD2000S
18A	081698	Back Panel (BEFORE 406)	WD2000S
19	041575	Adhesive Hook	ALL
20	064550	Drain Hose Clip	ALL
21	NA	Clip	ALL
22	091200	Top Panel W/Shield	WD2000S
22A	116628	Top Panel W/Shield 5040+ PW	WD2000S
22B	098184	Top Panel w/Shield (31017 & LATER)	WD2100, WDC6200
22C	091201	Top Panel W/sheild B4 31017	WD2100, WDC6200
22D	116876	Top Panel W/Shield 5040+ PW	WD2100, WDC6200
22E	089651	Top Panel W/Shield	WDC5200
23	067695	Dryer Duct Flange	WD2000S, WD2100
24	110432	Hose- Drum to Case (406 & LATER)	WD2000S
24A	108842	Hose- Drum to Case (031017 & LATER)	WD2000S, WD2100
24B	036024	Hose - Drum to Case	WD2000S (Before 406)
24c	036024	Hose - Drum to Case	WD2100 (Before 031017)
<i>Not Shown</i>	046667	Wiring Stop	WD2100, WDC6200CEE
<i>Not Shown</i>	082598	Kit Package	WD2000s, WD2100, WDC6200
<i>Not Shown</i>	089669	Kit Package	WDC5200
<i>Not Shown</i>	065871	Blanking Plug	ALL
<i>Not Shown</i>	090932	Bottom Case Plate	WD2000S
<i>Not Shown</i>	098183	Bottom Case Plate	WD2100, WDC6200CEE
<i>Not Shown</i>	091056	Bottom Case Plate (before 031017	WD2100, WDC6200CEE
<i>Not Shown</i>	090996	Bottom Case Plate	WDC5200


Splendide 2000S, 2100

Models: WD2000S*, WD2100 - (Oscillating)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Oscillating)

*** NOTE: SEE FOLLOWING PAGES for Model WD2000S with S/N "406XXXX" and LATER**

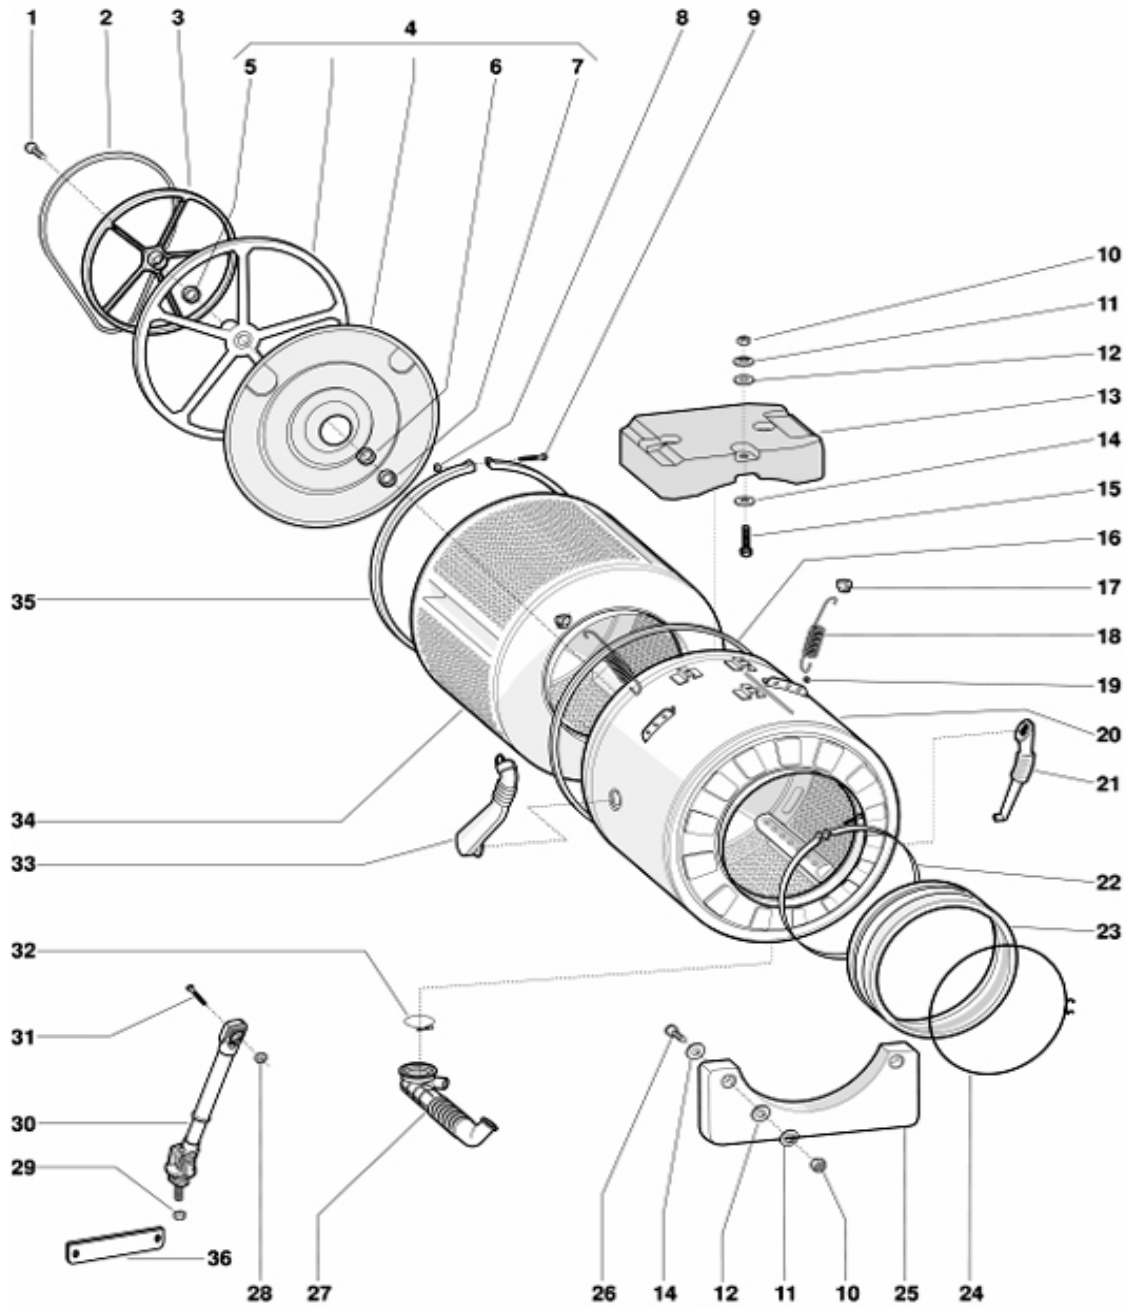

Splendide 2000S, 2100

Models: WD2000S*, WD2100 - (Oscillating)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Oscillating)

*** NOTE: SEE FOLLOWING PAGES for Model WD2000S with S/N "406XXXX" and LATER**


PART NO.	DESCRIPTION	MODEL
1	064786 Bolt	WD2000S (before 406)
2	082812 Belt Drive EL106H8	WD2000S(before 406), WD2100, WDC6200
2A	091042 Belt Drive	WDC5200
3	084026 Drum Pulley	WD2000S(before 406), WD2100, WDC6200
3A	091051 Drum Pulley	WDC5200
4	090204 Cross Bearing Assembly	WD2000S, WD2100
4A	091049 Cross Bearing Assembly	WDC5200
4B	082638 Cross Bearing Assembly	WDC6200
5	013563 Ball Bearing- Rear	All - WD2000S (before 406)
6	002591 Ball Bearing - Front	All - WD2000S (before 406)
7	035999 Ball Bearing Seal	All - WD2000S (before 406)
8	087919A Heater Housing Upper & Lower (406 - 601)	All - WD2000S (before 406)
	114388 Heater Housing Upper & Lower (602+)	WD2000S
9	055304 Bolt - Rear Tub Clamp	All - WD2000S (before 406)
10	051526 Self Locking Nut	All - WD2000S (before 406)
11	041605 Washer	All - WD2000S (before 406)
12	052723 Washer	All - WD2000S (before 406)
13	089965 Upper Counterweight	All - WD2000S (before 406)
14	041607 Nylon Washer	All - WD2000S (before 406)
15	041609 Screw	All - WD2000S (before 406)
16	036066 Tub Gasket	All - WD2000S (before 406)
17	064515 Anchor Pad - Suspension Spring	All - WD2000S (before 406)
18	082322 Suspension Spring - Large	All - WD2000S (before 406)
18A	089967 Suspension Spring - Small	All - WD2000S (before 406)
19	074041 Bushing Spring	All - WD2000S (before 406)
20	095718 Outer Tub 1.6 CF (30609 to 405 & later)	WD2000S
20A	090934 Outer Tub (before 30609)	ALL
20B	095720 Outer Tub 1.92 CF (30609 & Later)	WD2100
20C	090206 Outer Tub (before 30609)	WD2100
20D	095722 Outer Tub 1.6 CF (30609 & later)	WDC5200
20E	091050 Outer Tub (30609 & later)	WDC6200
20G	090321 Outer Tub (before 30609)	WDC6200
21	081750 Hose - Detergent Recovery	All - WD2000S (before 406)
22	090145 Clamp - Tub Diaphragm	All - WD2000S (before 406)
23	090201 Porthole Diaphragm	WD2000S(before 406), WD2100, WDC6200
23A	091052 Porthole Diaphragm	WDC5200
24	064546 Outer Wire Clamp	All - WD2000S (before 406)
25	081717 Front Counterweight	WD2000S(before 406), WD2100, WDC6200

25A	089657	Front Counterweight	WDC5200
26	081725	Screw	WD2000S (before 406), WD2100, WDC6200
26A	051581	Screw	WDC5200
27	081748	Hose - Tub to Pump	WD2000S, WDC5200
27A	083293	Hose - Tub to Pump	WD2100, WDC6200
28	030680	Nut , M10, Use 17mm Wrench	All - WD2000S (before 406)
28A	098723	Nut, M8, Use 13mmWrench	All - WD2000S (before 406)
29	065152	Nut, to bottom of Shock Absorber	All - WD2000S (before 406)
30	082327	Shock Absorber, w/Small Hole	All - WD2000S (before 406)
30A	098722	Shock Absorber, w/Small Hole	All - WD2000S (before 406)
31	030446	Bolt, M8, use 15mm Wrench	All - WD2000S (before 406)
31A	098724	Bolt, M8, use 13mm Wrench	All - WD2000S (before 406)
32	NA	Hose Clamp	All - WD2000S (before 406)
33	092273	Hose Dispenser to Tub (30609 & later)	All - WD2000S (before 406)
33A	080654	Hose Dispenser to Tub (before 030609)	All - WD2000S (before 406)
34	082639	Inner Tub - Stainless (before 406)	WD2000S
34A	083703	Inner Tub - Stainless	WD2100, WDC6200
34B	089658	Inner Tub - Stainless	WDC5200
35	036065	Clamp - Tub Gasket	All - WD2000S (before 406)
36	090586	Motor Support Bracket	WD2000S, WDC5200
36A	088403	Motor Support Bracket	WD2100, WDC6200
<i>Not Shown</i>	074054	Binding	All - WD2000S (before 406)

Splendide 2000S

Model: WD200S* (S/N 406 and later - Oscillating)

*** NOTE: SEE PREVIOUS PAGES for Model WD2000S with S/N BEFORE "406XXXX"**

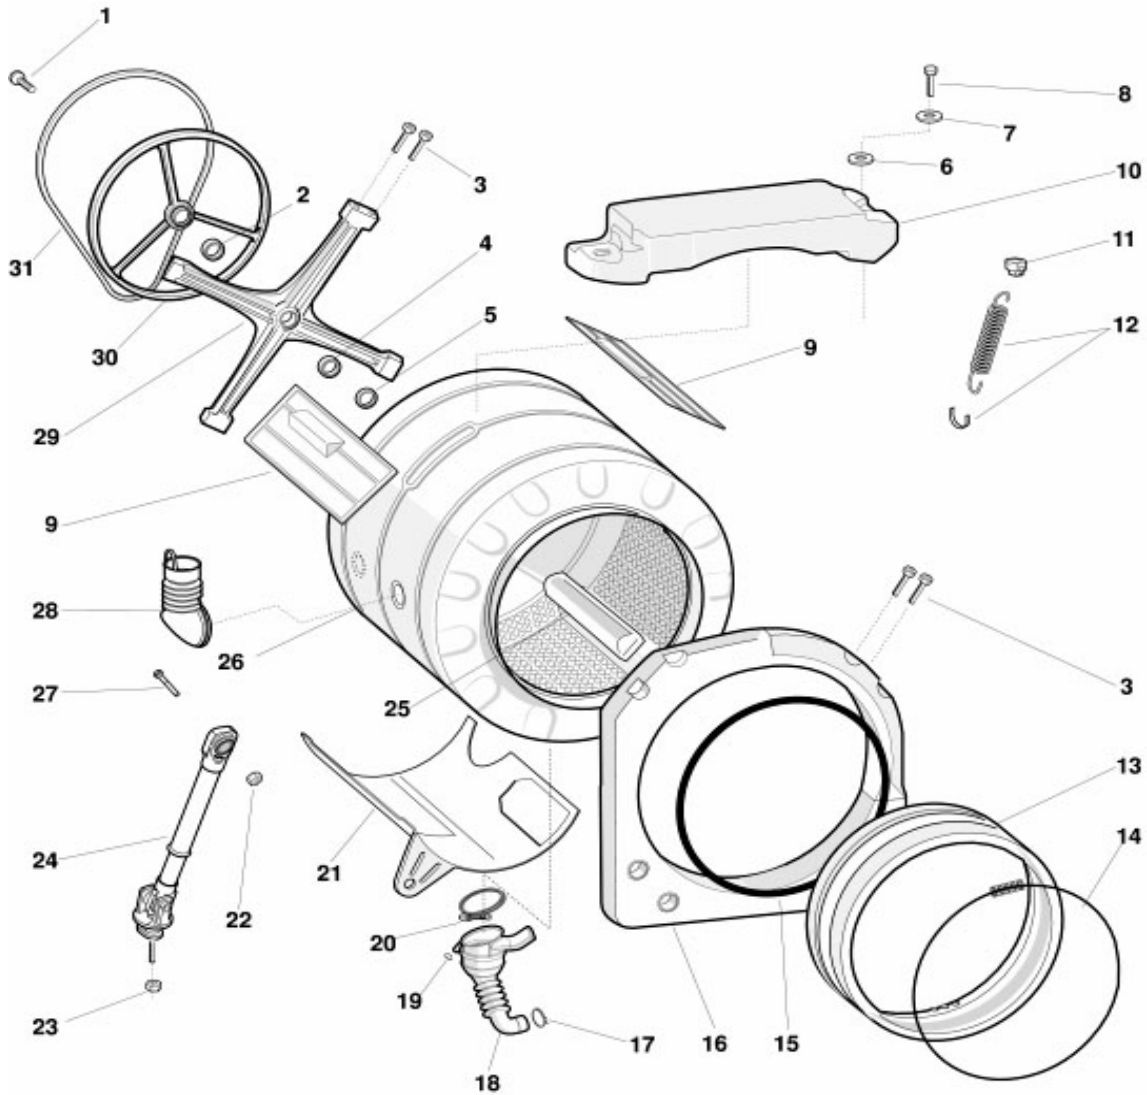

Splendide 2000S

Model: WD2000S* (S/N 406 and later - Oscillating)

*** NOTE: SEE PREVIOUS PAGES for Model WD2000S with S/N BEFORE "406XXXX"**


	PART NO.	DESCRIPTION	MODEL
1	064786	Bolt	WD2000s (406+)
2	013563	Bearing	WD2000s (406+)
3	064785	Bolt	WD2000s (406+)
4	002591	Bearing	WD2000s (406+)
5	096186	Oil Seal	WD2000s (406+)
8	088408	Bolt	WD2000s (406+)
9	064517	Tank Cradle- Top Left Right	WD2000s (406+)
10	087811	Upper Counterweight	WD2000s (406+)
11	064515	Anchor Pad	WD2000s (406+)
12	110420	Spension Spring	WD2000s (406+)
13	110429	Porthole Diaphragm	WD2000s (406+)
14	087919A	Heater Housing Upper & Lower (406 - 601)	WD2000s (406+)
	114388	Heater Housing Upper & Lower (602+)	WD2000S
15	064547	Clamp - Tub Diaphragm	WD2000s (406+)
16	092178	Front Counterweight	WD2000s (406+)
17	092411	Hose Clamp	WD2000s (406+)
18	092174	Hose to Filter	WD2000s (406+)
19	092412	Hose Clamp	WD2000s (406+)
20	091148	Clamp	WD2000s (406+)
21	093848	Tank Cradle Lower	WD2000s (406+)
22	030443	Nut	WD2000s (406+)
23	065152	Nut	WD2000s (406+)
24	093885	Shock Absorber	WD2000s (406+)
25	064789	Wash Paddles	WD2000s (406+)
26	111507	Outer Tub	WD2000s (406+)
27	093750	Bolt	WD2000s (406+)
28	092273	Hose Dispenser to Tank	WD2000s (406+)
29	096077	Cross Bearing Assembly	WD2000s (406+)
30	074211	Drum Pully	WD2000s (406+)
31	074218	Belt Drive	WD2000s (406+)

Splendide 2000S, 2100

Models: WD2000S, WD2100 - (Top Cover/Controls)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC6200CEE, WDC5200 - (Top Cover/Controls)

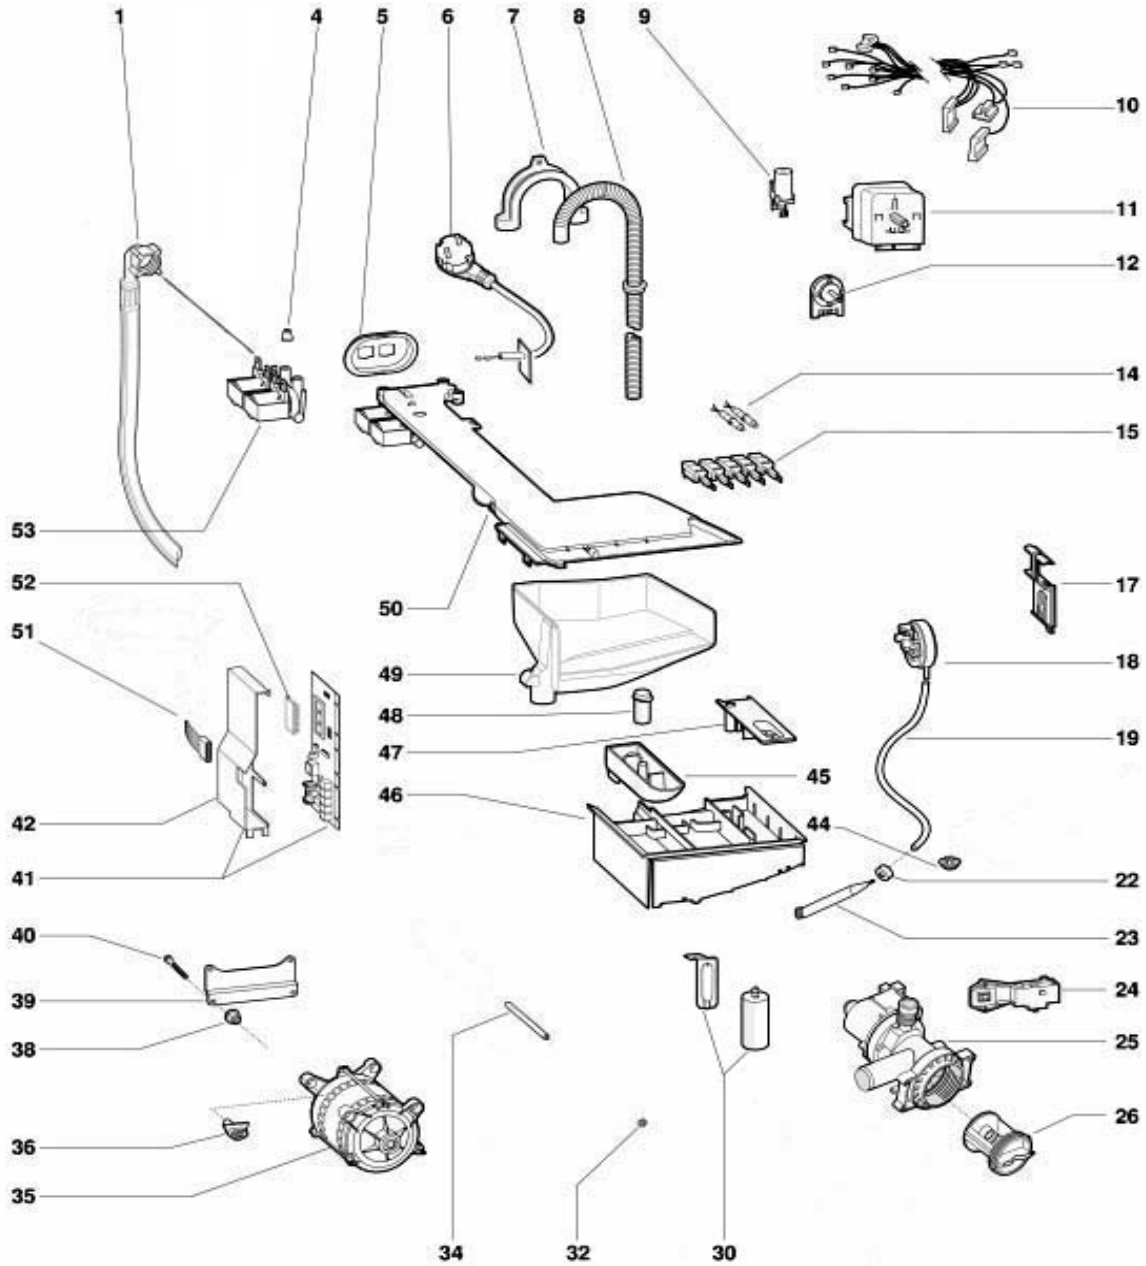

Splendide 2000S, 2100

Models: WD2000S, WD2100 - (Top Cover/Controls)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC6200CEE, WDC5200 - (Top Cover/Controls)

	PART NO.	DESCRIPTION	MODEL
1	112930	Inlet Hose	ALL
1	005572	Inlet Hose Gasket	ALL
4	064534	Seal - Electrovalve/Dispenser	ALL
5	066514	Support - Inlet Valve	ALL
6	098928	Power Cord (406 & later)	WD2000S
6A	090194	Power Cord (B4 406	All - WD2000S (before 406)
7	019902	Support - Drain Hose	ALL
8	027466	Hose Outlet (406 & later)	WD2000S
8A	091775	Hose Outlet	All - WD2000S (before 406)
9	090332	Junction Block	ALL
10	111510	Wiring Harness - Complete (406 & later)	WD2000S
10A	090933	Wiring Harness - Complete (Before 406)	WD2000S
10B	087919A	Heater Housing Upper & Lower (406 - 601)	WD2100
	114388	Heater Housing Upper & Lower (602+)	WD2000S
10C	091048	Wiring Harness - Complete	WDC5200
10D	090323	Wiring Harness - Complete	WDC6200
11	090195	Program Selector	ALL
12	085195	Dry Timer & Water Temperature Selector	ALL
14	084763	Light Auto Dry/Status Door Lock	ALL
15	088394	Push Button Switch	ALL
15A	090218	On/Off Switch	ALL
17	064537	Support - Pressure Switch	ALL
18	090200	Pressure Switch	ALL
19	092170	Hose - Pressure Switch (406 & later)	WD2000S
19A	051552	Hose - Pressure Switch	All - WD2000S (before 406)
22	092412	Tub Clamp (406 & Later)	WD2000S
22A	078221	Tub Clamp	All - WD2000S (before 406)
23	092173	Accumulator - Pressure Switch (406& Later)	WD2000S
23A	053409	Accumulator - Pressure Switch	All - WD2000S (before 406)
24	090199	Door Interlock Switch	ALL
25	090207	Pump Self Cleaning	ALL
26	045027	Filter Element	ALL
30	091054	Surge Protector	ALL
32	110422	Self Locking Nut M6 (406 & later)	ALL
32A	040932	Self Locking Nut M6	All - WD2000S (before 406)
34	074152	Bolt M6x30 (406 & later)	WD2000S
34A	090124	Motor Bolt	All - WD2000S (before 406)
35	090196	Main Motor	WD2000S,WD2100, WDC6200
35A	091045	Main Motor	WDC5200
36	050187	Fixing Nut	ALL
38	074151	Rubber Bushing - Motor Mount	WD2000S,WD2100, WDC6200
38A	104675	Motor Rubber Bushing	WDC5200

39	081720	Main Motor Mounting Bracket	ALL
40	041611	Screw	ALL
40A	0827232	Screw	ALL
41	10989820	Module Board (406 & Later)	WD2000S
41A	09050520	Module Board WD2000S B4 406	WD2000S
41B	09050520A	Module Board Assy.WD2000S B4 406	WD2000S
41C	09050521	Module Board WD2100	WD2100
41E	09050521A	Module Board Assy. WD2100	WD2100
41F	09050562	Module Board WDC6200	WDC6200CEE
41G	09050562A	Module Board ASSY. WDC6200	WDC6200CEE
41H	09050552	Module Board WDC5200	WDC5200
41I	09050552A	Module Board Assy. WDC5200	WDC5200
42	NA	Module Board Housing	ALL
44	080767	Temperature Sensor	All - WD2000S (before 406)
44A	085458	Thermostat Gasket B4 406	All - WD2000S (before 406)
44B	098739	SENSOR, Temperature, 20S-#406+	WD2000S
45	075459	Additive Container - Bleach	ALL
46	097732	Soap Dispenser Drawer (406 & Later)	WD2000S
46A	075352	Soap Dispenser Drawer	All - WD2000S (before 406)
47	097834	Additive cover - Fabric Softner (406 & later)	WD2000S
47A	047069	Additive cover - Fabric Softner	All - WD2000S (before 406)
48	046157	Compartment Cap - Bleach	WD2000S
48A	046157	Compartment Cap - Bleach	All - WD2000S (before 406)
49	092314	Soap Dispenser Housing (30609 & later)	ALL
49 A	075351	Soap Dispenser Housing (before 30609)	ALL
50	115777	Soap Dispenser Housing Cover (406 & later)	WD2000S
50A	090949	Soap Dispenser Housing Cover (Before 406)	WD2000S
50B	098185	Soap Dispenser Housing Cover (031017 & later)	WD2100
50C	090211	Soap Dispenser Housing Cover (before 031017)	WD2100
50D	091053	Soap Dispenser Housing Cover	WDC5200
50E	098187	Soap Dispenser Housing Cover (031017 & later)	WDC6200
50F	090325	Soap Dispenser Housing Cover (before 031017)	WDC6200
51	084566	Serial Key - Port Testing	ALL
52	Not Available 110437	EEProm for Module Board (406 & later)	WD2000S N/A
52A	Not Available 090957	EEProm for Module Board (before 406)	WD2000S N/A
52B	Not Available 090183	EEProm for Module Board	WD2100 N/A
52C	Not Available 091001	EEProm for Module Board	WDC5200 N/A
52D	Not Available 090316	EEProm for Module Board	WDC6200 N/A
53	110452	Valve - Hot Single (406 & later)	WD2000S
53A	090212	Valve - Hot Single	All - WD2000S (before 406)
53B	110453	Valve - Cold Double (406 & later)	WD2000S
53C	090213	Valve - Cold Double	WD2000S (before 406), WD2100
53D	090327	Valve - Cold Triple	WDC5200, WDC6200
<i>Not Shown</i>	098754	Anit- Vibration Foam-For Part #19 (406 & later)	WD2000S
<i>Not Shown</i>	008612	Tube Clamp - For Part # 23 (406 & later)	WD2000S

<i>Not Shown</i>	019682	Rubber Bush - Motor - For Part # 34 (406 & later)	WD2000S
<i>Not Shown</i>	089986	Condenser Hose	WDC5200, WDC6200
<i>Not Shown</i>	074153	Spacer Motor Support - for part # 34 (406 & later)	WD2000S
<i>Not Shown</i>	092348	Self-Scraping Screw (406 & later)	WD2000S
<i>Not Shown</i>	095669	Wire Harnes, Serial Port Key to PC (406 & later)	WD2000S
<i>Not Shown</i>	051541	Binding	ALL
<i>Not Shown</i>	084943	Wire Harness, Serial Port Key to PC	All - WD2000S (before 406)
<i>Not Shown</i>	061958	Binding	ALL


Splendide 2000S, 2100

Models: WD2000S*, WD2100 - (Ventilation)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Ventilation)

*** NOTE: SEE FOLLOWING PAGES for Model WD2000S with S/N "406XXXX" and LATER**

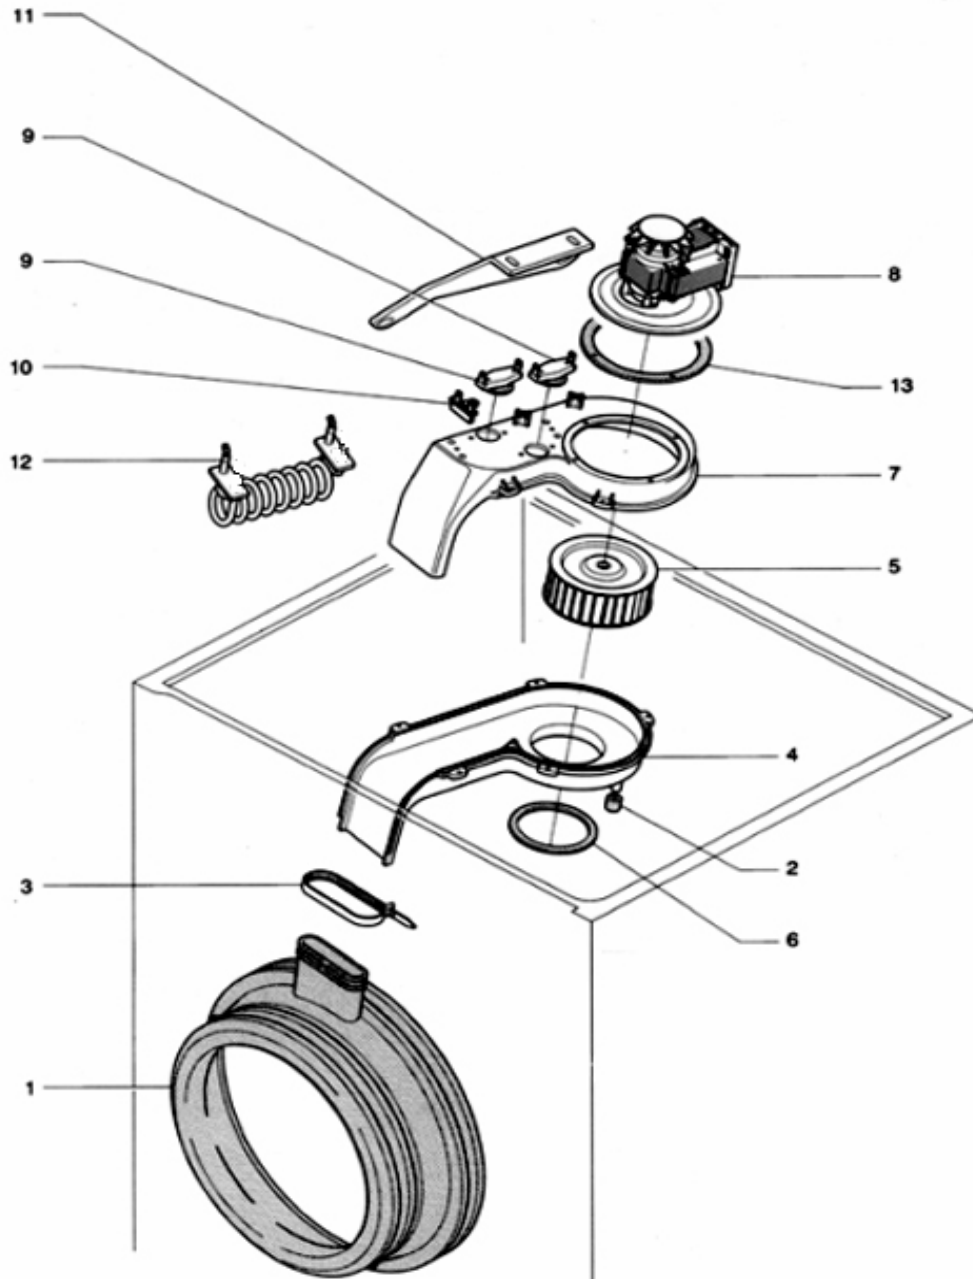

Splendide 2000S, 2100

Models: WD2000S*, WD2100 - (Ventilation)

Splendide "Comb-o-matic" 6200, 5200

Models: WDC6200CEE, WDC5200 - (Ventilation)

*** NOTE: SEE FOLLOWING PAGES for Model WD2000S with S/N "406XXXX" and LATER**


**** 09214A Includes Bottom, Top Cover and Coil**

	PART NO.	DESCRIPTION	MODEL
1	090201	Porthole Diaphragm	WD2000S (before 406), WD2100,WDC6200
1A	091052	Porthole Diaphragm	WDC5200
2	NA	Heater Housing Block	WD2000S (before 406), WD2100
2A	041617	Heater Housing Tube	WDC5200, WDC6200
3	031331	Clamp	All - WD2000S (before 406)
4	** 090214A	Heater Housing Bottom	All - WD2000S (before 406)
5	036080	Fan Impellare	All - WD2000S (before 406)
6	041619	Heat Housing Lower Gasket	WDC5200, WDC6200
7	** 090214A	Heater Housing Cover	All - WD2000S (before 406)
8	090215	Fan Motor	All - WD2000S (before 406)
9	9A	Heater Housing U	ECO
	##	Heater Housing U	WD2000S
9A	080768	O-Ring	All - WD2000S (before 406)
10	080767	Temperatur Sensor, To require	All - WD2000S (before 406)
11	089985	Heater Housing Bracket	All - WD2000S (before 406)
12	** 090214A	Heater Coil 1200W	All
13	041625	Fan Motor to Housing Gasket	All - WD2000S (before 406)
<i>Not Shown</i>	027230	Screw	All - WD2000S (before 406)
<i>Not Shown</i>	043775	Screw	All - WD2000S (before 406)
<i>Not Shown</i>	073183	Screw	

Splendide 2000S

Model: WD2000S* (S/N 406 and later - Ventilation)

*** NOTE: SEE PREVIOUS PAGES for Model WD2000S with S/N before "406XXXX"**

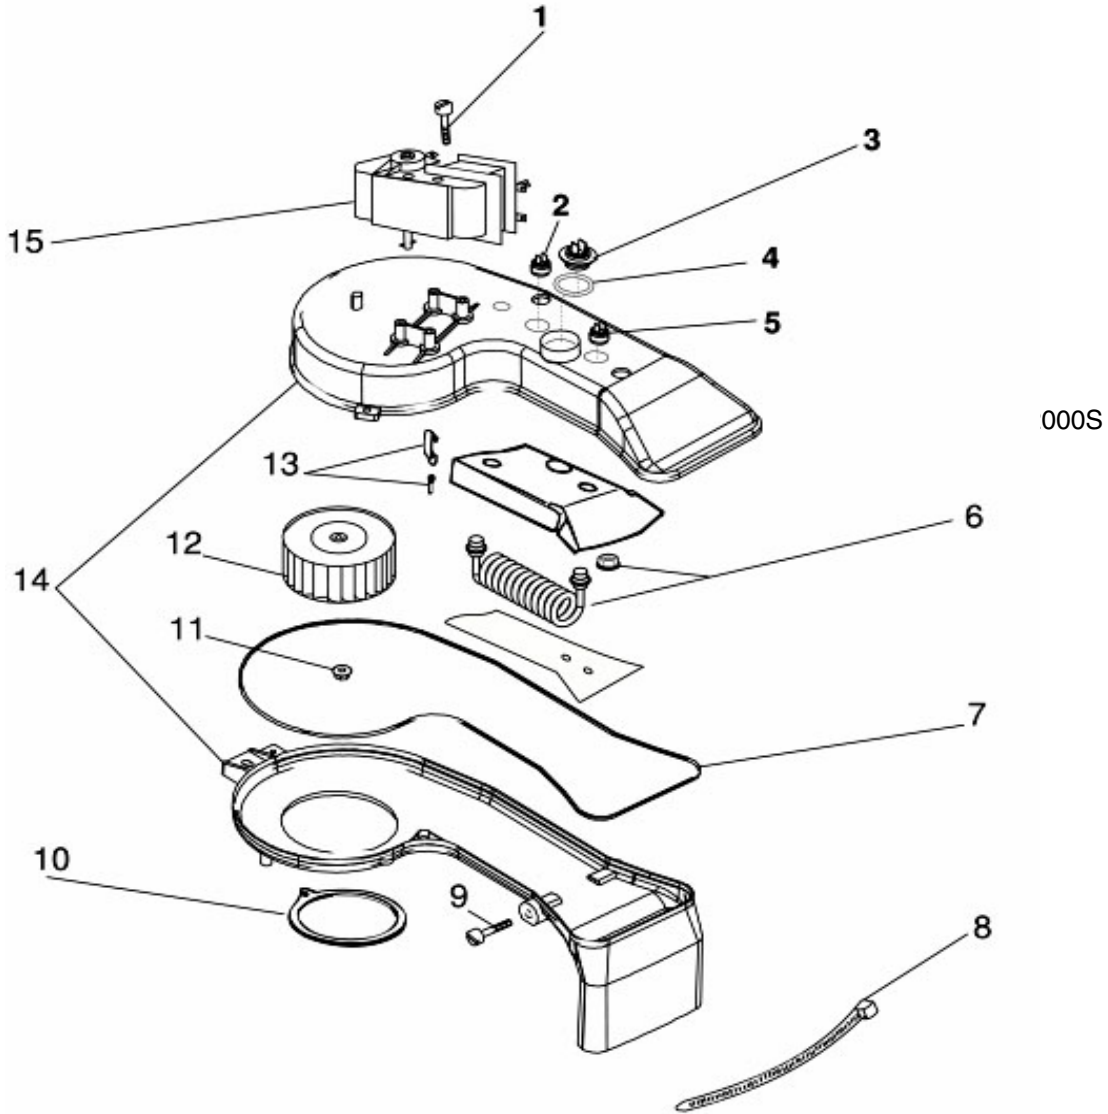

Splendide 2000S

Model: WD200S* (S/N 406 and later - Ventilation)

*** NOTE: SEE PREVIOUS PAGE for Model WD2000S with S/N before "406XXXX"**

	PART NO.	DESCRIPTION	MODEL
1	087921	Screw (406 & later)	WD2000S
2	089982	ECO (406 & later)	WD2000S
3	098739	Temperature Sensor, to Require (406 & later)	WD2000S
4	080768	O-Ring (406 & later)	WD2000S
5	089982	ECO (406 & later)	WD2000S
6	110433	Heater Coail 1200 Watt 115 Volt(406 & later)	WD2000S
7	032847	Blower Mainfold Seal(406 & later)	WD2000S
9	038358	Bolt M8x16(406 & later)	WD2000S
11	032972	Blower Fixing Nut(406 & later)	WD2000S
12	080658	Fan Motor(406 & later)	WD2000S
13	054790	Screw M5x16(406 & later)	WD2000S
14	087919A	Heater Housing Upper & Lower (406 - 601)	WD2000S
	114388	Heater Housing Upper & Lower (602+)	WD2000S
15	110434	Fan Motor 115 V - 60 HZ(406 & later)	WD2000S
<i>Not Shown</i>	110429	Porthole Diaphragm 406+	WD2000S