


Contents

| Model 451.3 /4 (smart) | 3 |
|--|-------------|
| Model 245 (B -Class) | 5 |
| Models 203 and 209 (C-Class and CLK-Class) | 7 |
| Models 166, X166, 172, 204, X204, 207, 212 and 218 (M-, SLK-, C- | -,GLK-, E-, |
| and CLS-Class) | 8 |
| Model 211 Up to 8/31/2003 (E-Class) | 9 |
| Model 211 as of 09/01/2003 (E-Class) | 10 |
| Model 219 (CLS-Class) | 11 |
| Models 221 and 216 (S-Class and CL-Class) | 12 |
| Model 171 (SLK-Class) | 13 |
| Model 230 up to MY2007 (SL-Class) | 14 |
| Model 230 (SL-Class from MY2008 to Present) | 15 |
| Models 164, X164 and 251 (M-Class, GL-Class, and R-Class) | 16 |



MODEL 450.3/ 4 (smart)

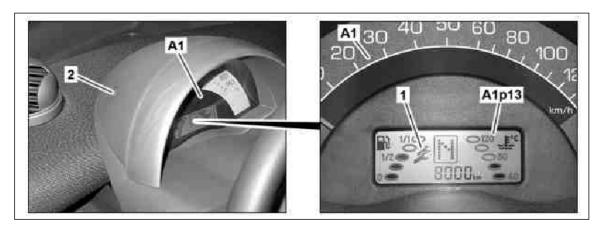

Reset Service Indicator

1 maintenance indicator 2 Service button A1 Instrument cluster A1p13 Multifunction display

- 1. Switch on ignition. The following steps must be completed within 10 s of the appearance of the maintenance indicator (1) in the multifunction display (A1p13) in the instrument cluster (A1), otherwise the procedure must be repeated.
- 2. Push service button (2) until the maintenance indicator (1) appears in the multifunction display (A1p13) in the instrument cluster (A1)
- 3. Push service button (2) at instrument cluster (A1) and switch ignition off Press and hold down service button (2). During this time, the maintenance indicator (1) is not replaced by other indicators in the multifunction display (A1p13).
- 4. Switch on ignition and hold down service button (2) on the instrument cluster (A1). After this is performed, the maintenance indicator (1) shows the remaining distance (starting distance) for the next maintenance interval.
- 5. Switch off ignition

MODEL 451.3 /4 (smart)



Reset Service Indicator

1 maintenance indicator A1 Instrument cluster

- 1. Switch on ignition
- 2. Select service indicator in the multifunction display on the instrument cluster (A1) Press button (1) on the instrument cluster (A1) twice within the first 4 seconds.
- 3. Switch off the ignition within approx. 10 seconds.
- 4. Press button (1) on the instrument cluster (A1)
- 5. Switch on ignition and keep button (1) on the instrument cluster (A1) pressed further
- 6. Wait until the service indicator flashes and then jumps back to "0" The service indicator is reset.
- 7. Release button (1) and after this switch off the ignition

Model 245 (B -Class)





- 1. Insert key into ignition, switch to position "1".
- 2. Press buttons or repeatedly until the mileage is displayed within the Multifunction display.
- 3. Press cluster illumination button (1) 3 times in short succession. The battery voltage will be displayed
- 4. Press the up 4 buttons until the service menu appears.
- 5. Use the + and buttons to select menu option "Confirm".
- 6. Press button until "Complete Service" is selected.
- 7. Confirm "Complete Service" with button . The display will show "Service Confirmed".
- 8. Press buttons or repeatedly until the service menu appears.
- 9. Use the + and buttons to select "Service 3"
- 10. Confirm with button
- 11. Select the engine oil grade by using the + and buttons.





- 12. Select "Oil grade 229.5", to confirm you have used MB approved engine oil.
- 13. Exit by switching off ignition
- 14. Using buttons or confirm the next service is in 20,000 km.

Models 203 and 209 (C-Class and CLK-Class)





- 1. Insert key into ignition, switch to position "1".
- 2. Press buttons or repeatedly until the mileage is displayed within the Multifunction display.
- 3. Press cluster illumination button (1) 3 times in short succession. The battery voltage will be displayed and an audible signal will sound.
- 4. Turn key in ignition to position "2"
- 5. Press the up 4 / buttons until the service menu appears.
- 6. Press cluster illumination button (1) once. The Oil Type menu is displayed.
- 7. Use the ____ and ___ buttons to select the oil used for the service.
- 8. Press the up 4 / buttons to confirm. The display will show: "Reset Oil Confirmation. Push R-Button for 3 seconds".
- 9. Press and hold the cluster illumination button (1) for 3 seconds. The message "Service confirmed" is displayed.

Models 166, X166, 172, 204, X204, 207, 212 and 218 (M-, SLK-, C-,GLK-, E-, and CLS-Class)



- Insert key into ignition, switch to position "1". The mileage counter has to be displayed.
- 2. Press repeatedly until the TRIP option is highlighted.
- 3. Press and hold and within 1 second press OK and hold both for 5 seconds. The shop menu is displayed.
- 4. Press repeatedly until "Assyst Plus" is highlighted and confirm with OK.

 Options "Service Data" and "Full Service" are displayed.
- 5. Press until "Full Service" is highlighted. Confirm with OK.
- 6. Press until "Conf. Full Serv." is highlighted, confirm with OK. The display shows "Service carried out?."
- 7. Press to select "Yes". Confirm with OK. "Cannot be undone" displays.
- 8. Press until "Confirm" is highlighted. Confirm by pressing OK. The display reads "Full Service carried out".
- 9. Confirm by pressing OK

Model 211 Up to 8/31/2003 (E-Class)



- 1. Turn key in ignition swith to position "2."
- 2. Use buttons until the "Service" menu is shown in the Multifunction Display.
- 3. Press and hold Reset Button R (1) until the Service Menu is displayed.
- 4. Use buttons + and to highlight option "Confirm"
- 5. Press buttons or to confirm.

Model 211 as of 09/01/2003 (E-Class)





- 1. Insert key into ignition, switch to position "1".
- 2. Press buttons or repeatedly until the mileage is displayed within the Multifunction display.
- 3. Press cluster illumination button (1) 3 times in short succession. The battery voltage will be displayed
- 4. Press the up 4 buttons until the service menu appears.
- 5. Use the and buttons to select menu option "Confirm".
- 6. Press until "Complete Service" is selected.
- 7. Confirm "Complete Service" with button . The display will show "Service Confirmed".

Model 219 (CLS-Class)



- 1. Insert key into ignition, switch to position "1".
- 2. Press buttons or repeatedly until the mileage displays within the Multifunction display.
- 3. Press reset button (1) 3 times in short succession. The battery voltage will be displayed
- 4. Press the up 4 buttons until the service menu appears.
- 5. Use the hand buttons to select menu option "Confirm".
- 6. Press button until "Complete Service" is selected.
- 7. Confirm "Complete Service" with button . The display will show "Service Confirmed".

Models 221 and 216 (S-Class and CL-Class)



- 1. Insert key into ignition, switch to position "1". The mileage counter has to be displayed.
- 2. Press and hold and within 1 second press OK and hold both for 5 seconds. The shop menu is displayed.
- 3. Press repeatedly until "Assyst Plus" is highlighted and confirm with OK.
- 4. Press until "Service carried out" is highlighted. Confirm with OK.
- 5. Press to select "Service due". Confirm with OK.
- 6. Press to select "Full Service". Confirm with OK.

Model 171 (SLK-Class)



- 1. Insert key into ignition, switch to position "1".
- 2. Press buttons or repeatedly until the mileage is displayed within the Multifunction display.
- 3. Press cluster illumination button (1) 3 times in short succession. The battery voltage will be displayed
- 4. Press the up 4 buttons until the service menu appears.
- 5. Use the + and buttons to select menu option "Confirm".
- 6. Press until "Complete Service" is selected.
- 7. Confirm "Complete Service" with . The display will show "Service Confirmed".

Model 230 up to MY2007 (SL-Class)



- 1. Insert key into ignition and switch to position "1"
- 2. Press button or until the main mileage display is shown.
- 3. Press reset button R (1) and hold for 3 seconds.
- 4. The message "DO YOU WANT TO RESET THE SERVICE INTERVAL? "CONFIRM WITH R BUTTON" displays.
- 5. Press button R (1) again.
- 6. Switch off ignition and remove the key.

Model 230 (SL-Class from MY2008 to Present)



- 1. Switch ignition to position "2"
- 2. Press button or until the main mileage display is shown.
- 3. Press button oir until the service menu appears in the left display.
- 4. Press button R (1) for approximately 5 seconds. The message "Service interval...

 Reset: Press reset button for 3 seconds" appears.
- 5. Press and hold button R (1) for approximately 3 seconds to confirm.
- 6. Switch off ignition and remove key.

Models 164, X164 and 251 (M-Class, GL-Class, and R-Class)





Reset Service Indicator

- 15. Insert key into ignition, switch to position "1".
- 16. Press buttons or repeatedly until the mileage is displayed within the Multifunction display.
- 17. Press cluster illumination button (1) 3 times in short succession. The battery voltage will be displayed
- 18. Press the up 4 / buttons until the service menu appears.
- 19. Use the + and buttons to select menu option "Confirm".
- 20. Press button until "Complete Service" is selected.
- 21. Confirm "Complete Service" with button The display will show "Service Confirmed".

Feedback welcome on startekinfo.team@mbusa.com.