



Air Cleaner Grps, Fuel Tank

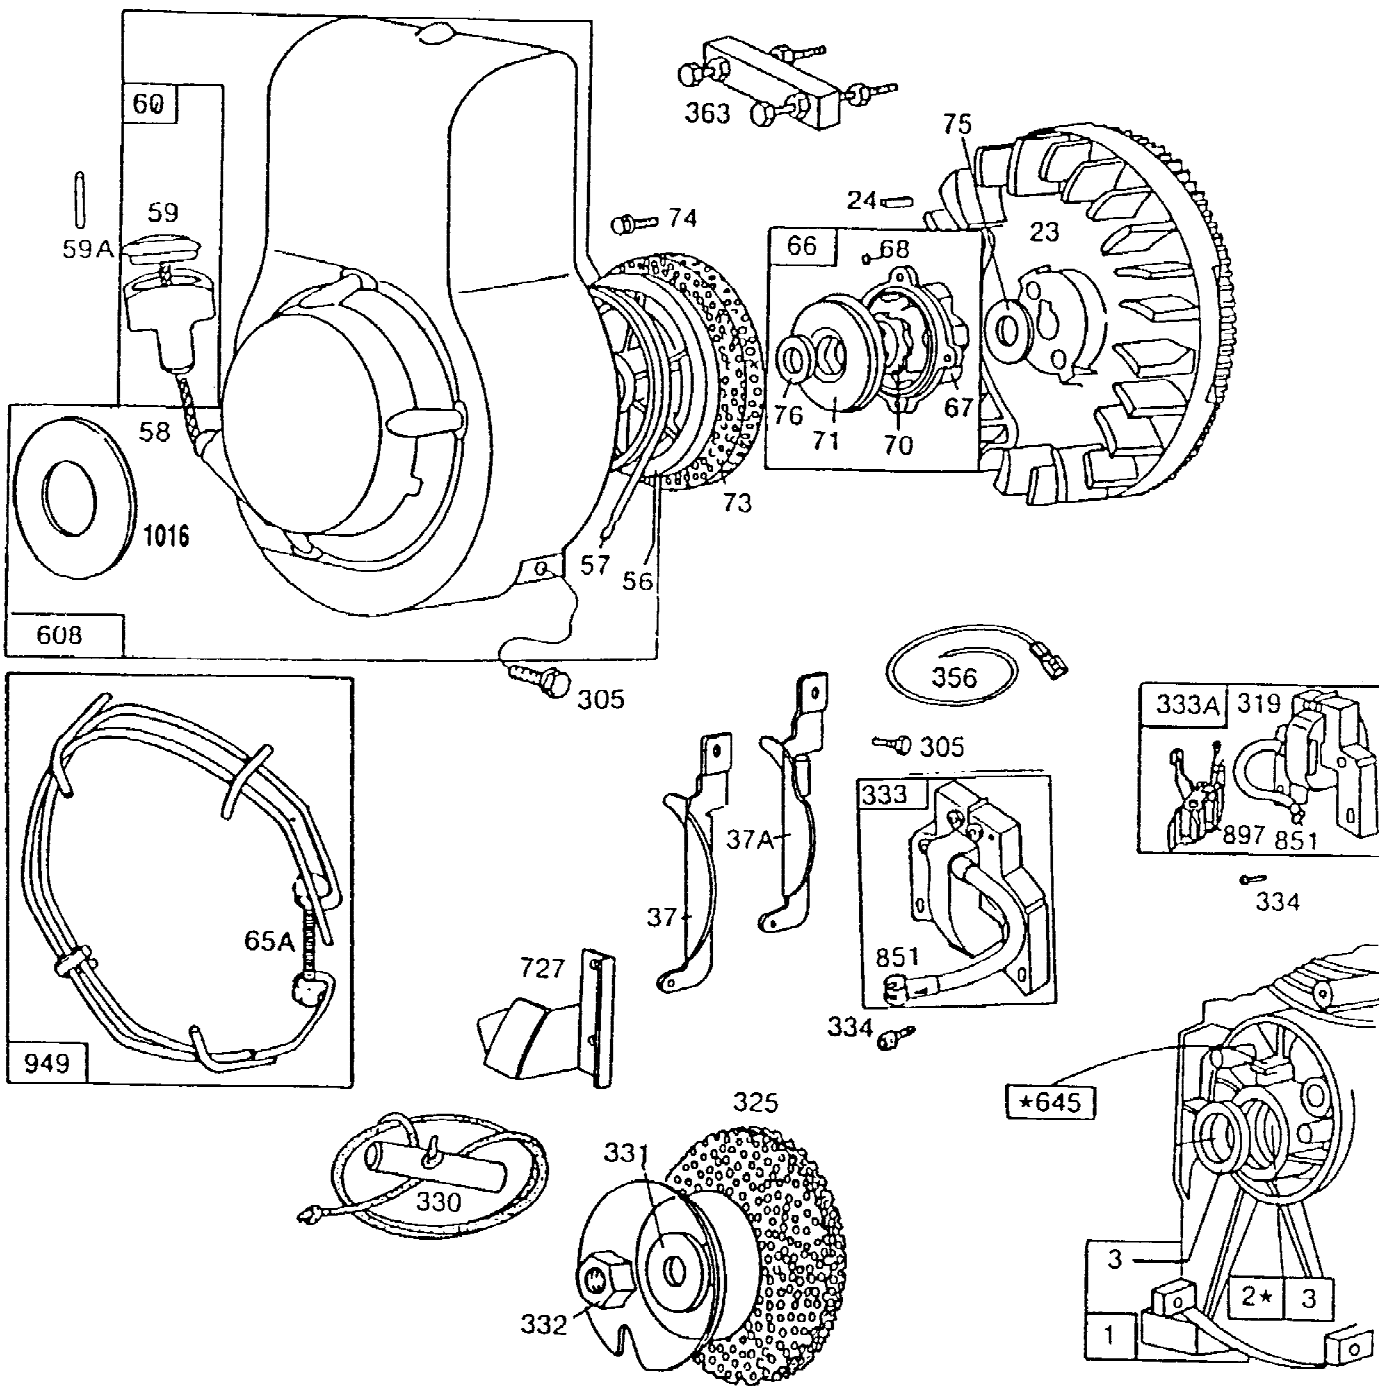

USED ON TYPE NOS. BELOW 0500.

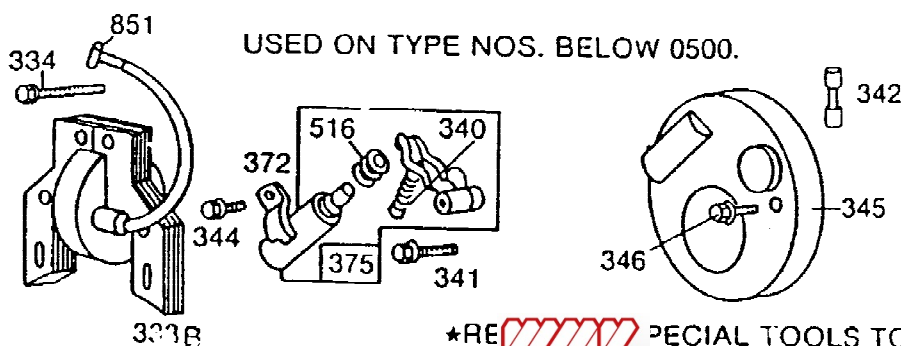


Air Cleaner Grps,Fuel Tank

Referenznummer	Artikelnummer	Menge	Description
1	395970		Cylinder Assembly
1	395971		Cylinder Assy.
2	293708		Bushing/Seal Kit (Plain Bearing) Requires special tools for installation.
3	393862		Seal, Oil (Cam Gear)
23	394413		Flywheel-Magneto
24	222698		Key, Flywheel
37A	223104		Guard-Flywheel (For Electric Starter)
37	223087		Guard-Flywheel
56	280439		Pulley-Starter
57	490179		Spring-Rewind Starter
58	66734		Rope-Starter (48-5/8")
59A	230228		Pin-Starter Rope
59	396892		Insert-Starter Rope
60	393152		Insert-Starter Handle
66	399671		Clutch-Starter (Uses Rubber Coated Retainer Washer-Ref. 71)
67	394897		Housing-Starter Clutch
68	63770		Ball-Clutch
70	298799		Ratchet Assy (For engine W/Ring Gear on FW equipped for Elec Start)
71	221653		Washer, Steel (Non-Coated)
71	394506		Seal/Retainer Assy (Rubber Coated)
73	221661		Screw-Rewind Starter
74	93490		Screw-Hex
75	220865		Washer, Belleville (Used With Heavy Flywheel)
76	68238		Seal-Ratchet
305	94153		Screw, Sem Hex Head
319	298502		Armature-Mag (For Points And Condenser)
325	298731		Pulley-Rope Start (5/8" Hole In Pulley)
330	69932		Rope/Grip Assy (55")
331	220865		Washer, Belleville (Used With Heavy Flywheel)
332	92284		Nut, Jam (Flywheel)
333B	298502		Armature-Mag (For Points And Condenser)
333A	395489		Ignition Grp (Magnetron Ignition)
333	398593		Ignition Kit (For Magnetron)
334	93381		Screw, Machine Hex
340	26018		Spring-Breaker Arm
341	93381		Screw, Machine Hex
342	65704		Plunger-Breather Point
344	93042		Screw, Sem Hex Head
345	220366		Cover-Breather Point And Condenser
346	93705		Screw, Tapping Hex (8-32 X 3/8)
356	398808		Wire-Stop (30" Cut To Required Length)
363	19069		Puller-Flywheel (Optional Accessory)
372	220477		Clamp-Condensor
375	294628		Breaker Points And Condensor Set
375	299061		Ignition Kit Includes: 294628 Point Set 65604 Plunger 61760 Key-Flywheel (For Conversion to MAGNETRON Ignition Order Part No. 394970.)
516	260374		user Spring

Air Cleaner Grps,Fuel Tank

Referenznummer	Artikelnummer	Menge	Description
608	395662		Starter Assy.-Rewind (12 O'clock)
645	23513		Bushing-Plunger (Used only with Breaker Point Ignition)
727	223103		Cover-Blower Housing
851	221798		Terminal-Spark Plug
897	394970		Magnetron Ign Kit
949	396579		Guard-Finger (Includes Mtg. Parts)
1016	490817		Spacer=rewind

Blower Hsgs, Rewind, Flywheel

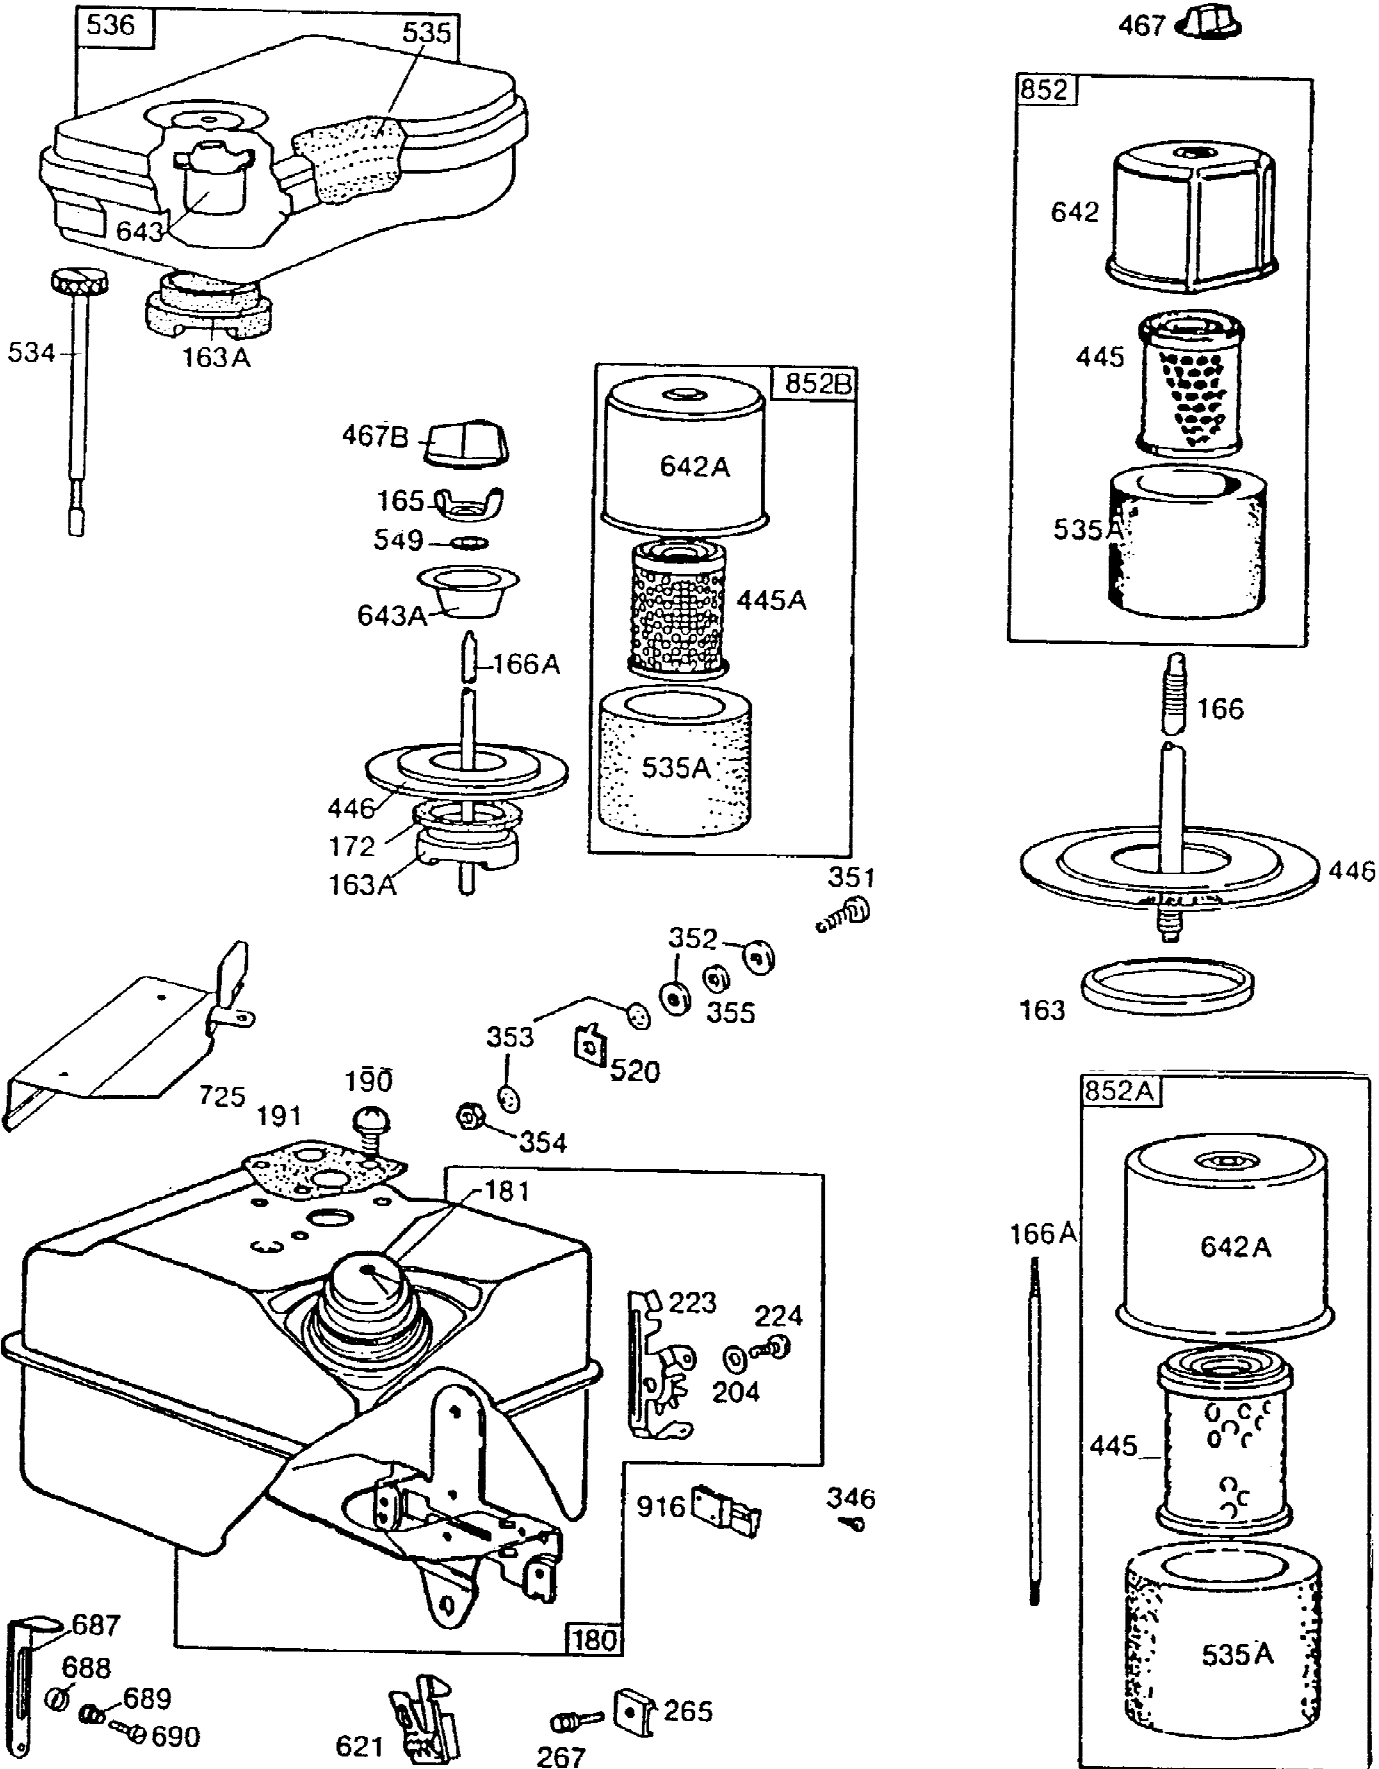








Blower Hsgs,Rewind,Flywheel

Referenznummer	Artikelnummer	Menge	Description
163A	27660		Gasket-Air Cleaner Mtg.
163	271139		Gasket, Air Cleaner (Above Spacer)
165	93856		Nut-Wing (#10-32)
166A	231176		Stud-Air Cleaner (3/16" Stud)
166A	231315		Stud, Air Cleaner (Used With Pull Choke Carburetors)
166	231332		Stud-Air Cleaner (Used With Rotary Choke Carburetors)
172	271077		Spacer-Air Cleaner
180	398141		Tank-Fuel (3 Quart, Mech. Gov.)
181	394818		Cap-Fuel Tank
190	93440		Screw, Sem Pan Hd C
190	94094		Screw, Sem Pan Hd C One Used to Mount Heat Shield Ref. 725
191	271592		Gasket, Tank Mounti Included in Gasket Set-Part No. 397147 (Used with Rotary Choke Carburetors)
204	222962		Bushing-Control Lev For Specials, See Ref. 223
223	223097		Lever-Control (Mech. Gov.)
223	231287		Bushing
223	94034		Rivet
224	93491		Rivet-Truss Head S For Specials, See Ref. 223
265	221535		Clamp, Casing (Stamped Steel)
267	93496		Screw, Sem Hex Head (10-32 X 5/8")
346	93705		Screw, Tapping Hex (8-32 X 3/8)
351	93735		Screw-Slotted
352	66068		Washer-Fiber
353	92791		Lockwasher, Interna
354	90576		Nut, Hex (8-32)
355	66554		Washer-Insulating
445A	392308		Filter-Air
445	396424		Filter-Pre Cleaner
446	222844		Base-Air Cleaner
467B	212293		Knob-Choke Rod
467	212706		Knob-Choke Rod
520	93722		Terminal, Spade
534	93322		Screw-Slotted (1-15/16" Long)
534	94071		Screw, Machine Pan
535A	271466		Filter-Air
535	27987		Filter-A/c Element
536	297036		Cleaner-Air (Used with Pull Choke Carburetor-Ref. 90A)
536	397703		Cleaner-Air (Used With Rotary Choke Carburetor)
549	271118		Washer
621	297472		Switch, Stop Assy
642A	222626		Cover-Air Cleaner
642	223306		Cover-Air Cleaner
643A	222845		Support-Foam Elemen (1/2" Deep)
643	222991		Cup-Air Cleaner
687	390690		Slide Friction Control
688	221766		Slide Friction

Blower Hsgs,Rewind,Flywheel

Referenznummer	Artikelnummer	Menge	Description
689	260847		Spring-Friction
690	90746		Screw, Machine Fill (10-32 X 5/8")
725	223334		Shield-Heat
852B	392368		Cleaner-Air
852A	397937		Cleaner Group-Air
852	396397		Cleaner-Air
916	280321		Rack, Gear Control (Remote & Manual Choke)


Blower Hsgs, Rewind, Sno-Gard

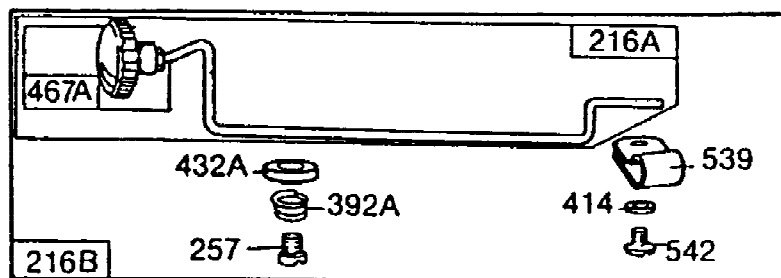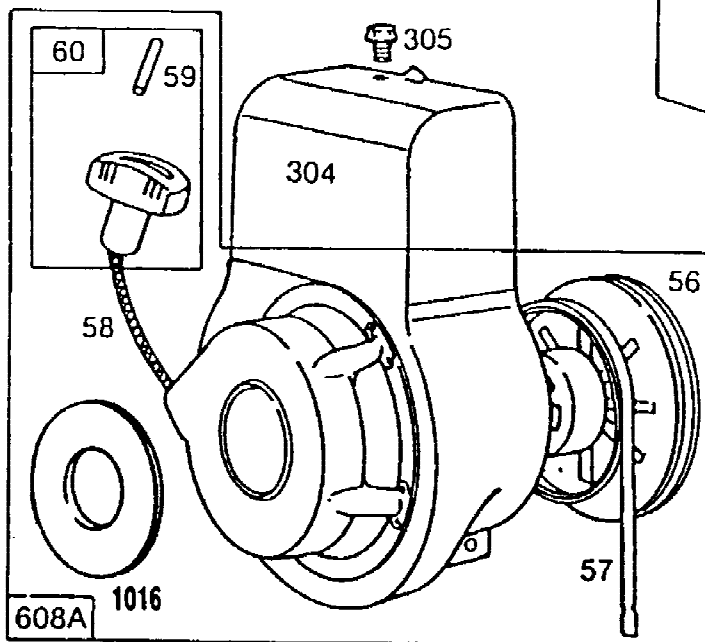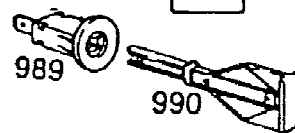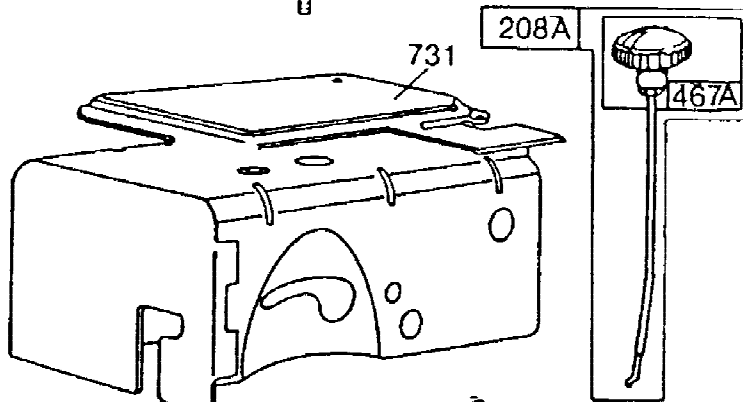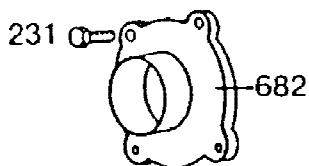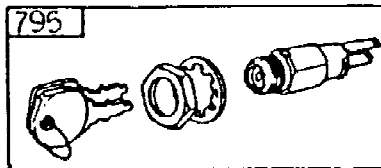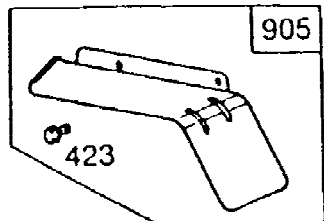

Blower Hsgs,Rewind,Sno-Gard

Referenznummer	Artikelnummer	Menge	Description
56	280439		Pulley-Starter
57	490179		Spring-Rewind Starter
58	66734		Rope-Starter (48-5/8")
59	396892		Insert-Starter Rope
60	393152		Insert-Starter Handle
208A	399112		Rod-Control Used After Code Date 85050800
208A	261598		Rod-Control Used Before Code Date 85050900
216B	394562		Rod-Hand Choke
216A	399109		Rod-Hand Choke Used After Code Date 85050800
216A	261592		Rod-Choke Used Before Code Date 85050900
224	93491		Rivet-Truss Head S For Specials, See Ref. 223
231	93064		Screw-Sem
257	90746		Screw, Machine Fill (10-32 X 5/8")
280A	223139		Guide-Control Rod And Hood Mounting
305	94153		Screw, Sem Hex Head
369	220705		Spring-Rod
392A	260847		Spring-Friction
414	220982		Washer, Steel Zinc
423	93410		Screw-Hex
432A	221766		Spring-Friction
467A	391908		Knob-Control
539	93784		Clamp-Choke Rod
542	94025		Screw-Hex
608A	394823		Starter Assy.-Rewind (10 O'clock)
682	211516		Shield-Starter Clutch
731	394450		Hood-Snow Used Before Code Date 85050900
731	399182		Hood-Snow Used After Code Date 85050800
733	93977		Screw-Slotted
795	392833		Key Switch
905	394510		Shield-Sno
989	399668		Switch-Stop Used Before Code Date 87010100
989	491060		Switch-Stop Used After Code Date 86123100
990	280596		Key-Ignition
1016	490817		Spacer=rewind

Carburetor Assemblies

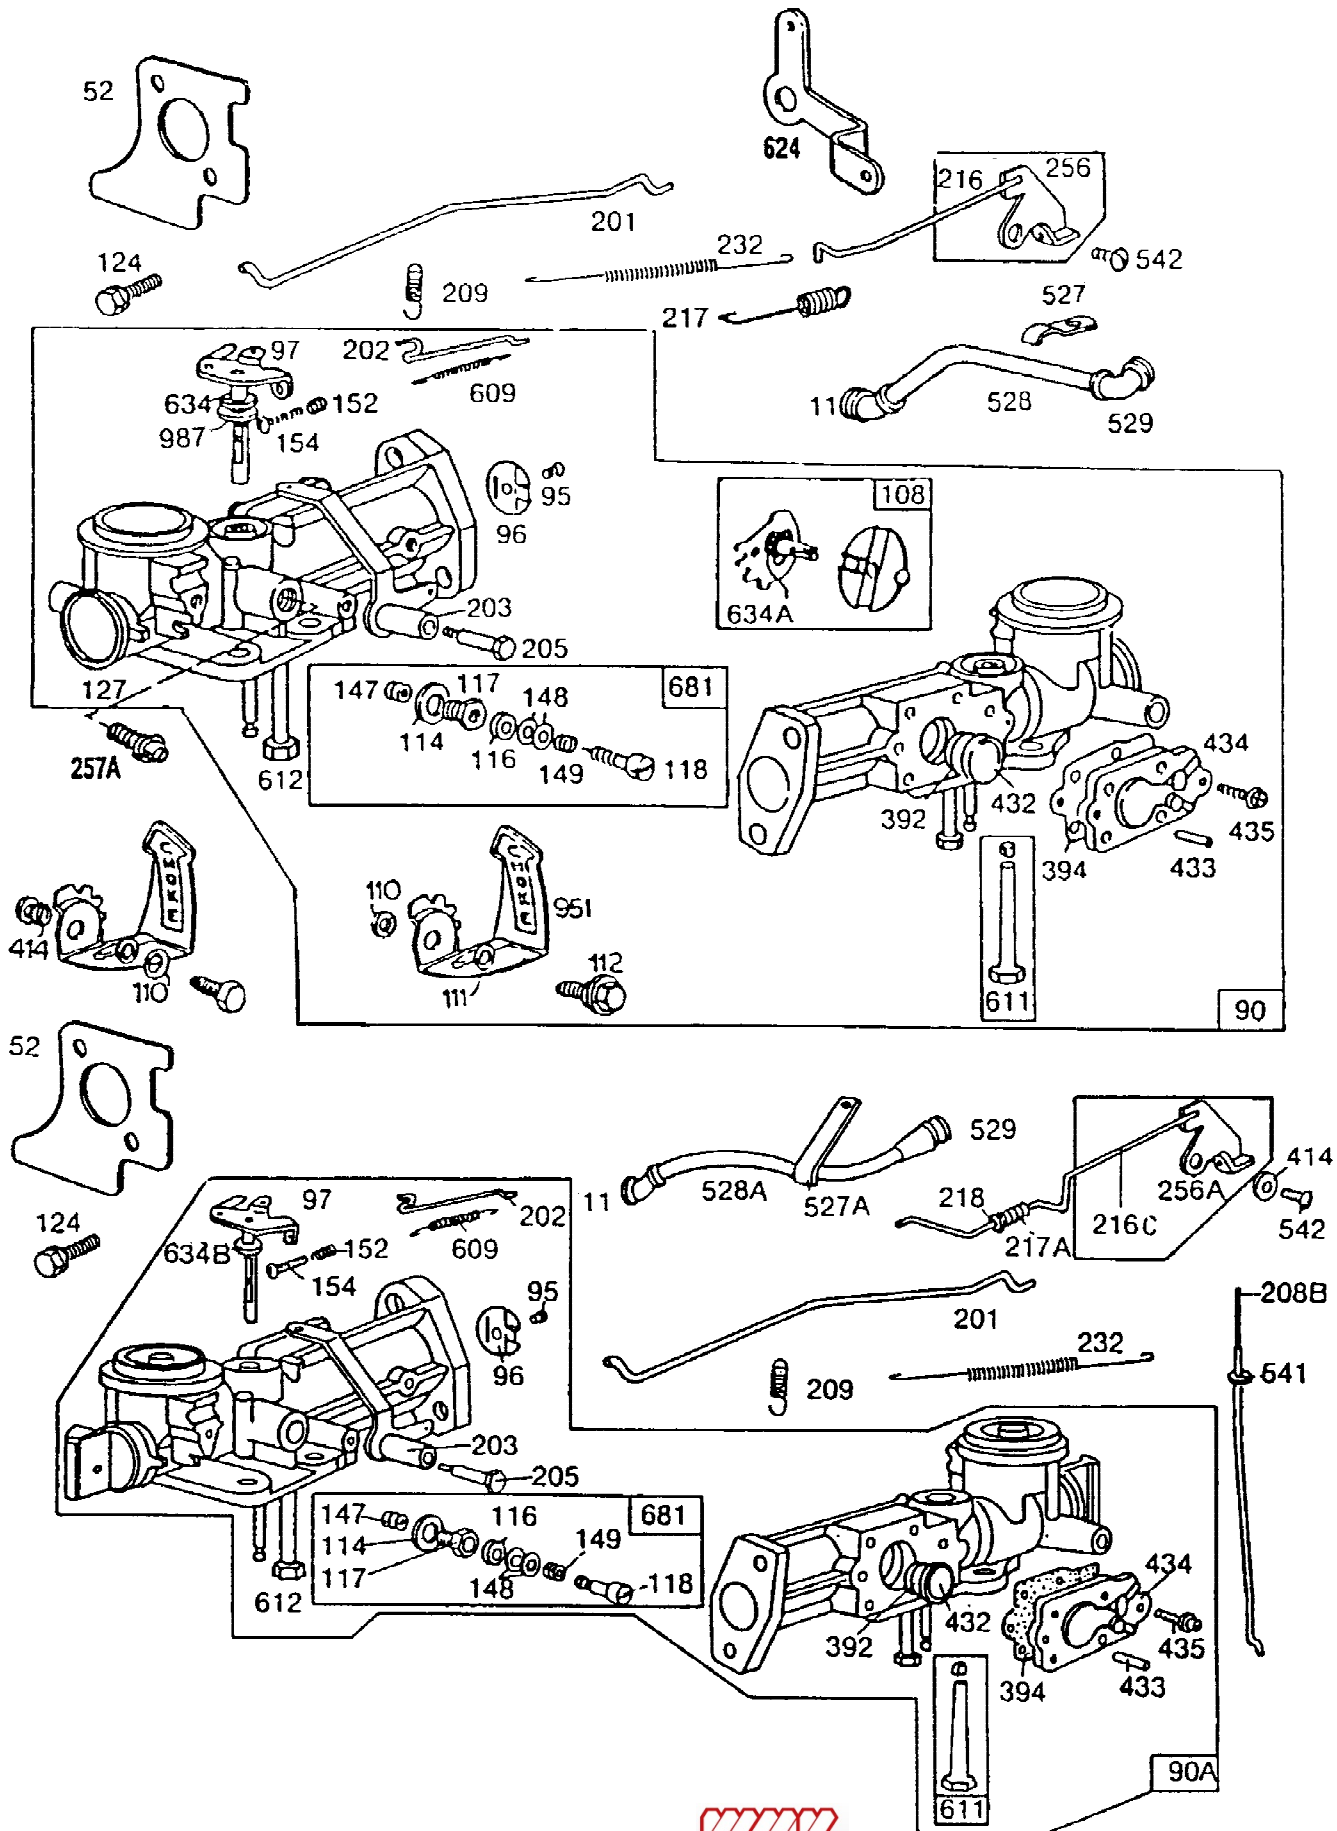

Carburetor Assemblies

Referenznummer	Artikelnummer	Menge	Description
11	66578		Tube-Breather
52	394732		Gasket-Intake Elbow Mounting (2 Used)
90A	394878		Carburetor Assembly (For 3 Quart Tank)
90	398124		Carburetor (Rotary Choke, For 2 Quart Tank)
95	93499		Screw, Sem Pan Head (Throttle Valve)
96	211203		Valve-Throttle
97	297468		Shaft-Throttle (Mech. Gov.)
108	397134		Valve-Choke
110	66432		Washer, Steel Zinc
111	94060		Washer-Wave
112	93686		Screw, Hex Head Tap (10-32 X 5/8") Used Before Code Date 86011300
112	94164		Screw, Hex Washer H Used After Code Date 86011200
114	66594		Sealing Washer (Needle Valve)
116	65978		Seal, O-Ring (Needle Valve)
117	230590		Nut, Hex
118	23433		Valve-Needle
124	93357		Screw-Sem, Phillips Hex. Hd.
127	22831		Plug-Welch
147	230591		Seat-Needle Valve
148	22235		Washer, Brass
149	26336		Spring-Needle Valve
152	260575		Spring-Throttle Adjustment
154	93527		Screw, Tapping Roun (5-40 X 5/8")
201	261590		Link-Mech Gov (Mech. Gov.)
202	260678		Link, Throttle (Mech. Gov.)
203	394670		Crank-Bell (Mech. Gov.)
205	93838		Screw, Shoulder Hex (#6-32 Thread)
208B	261624		Rod-Control
209	260902		Spring-Governor
216C	299859		Link (Includes Bell Crank)
216	397709		Bellcrank (Includes Choke Link)
217A	260189		Spring-Friction
217	261951		Spring-Choke Link
218	221198		Washer, Steel Zinc
232	260732		Spring-Governor Link
256A	299859		Link (Includes Bell Crank)
256	397709		Bellcrank (Includes Choke Link)
257A	93543		Screw, Sem Hex Head (10-32 X 3/8")
392	260455		Spring-Pump Diaphragm
394	270026		Diaphragm-Pump
414	220982		Washer, Steel Zinc
432	221377		Cap-Spring
433	93265		Pin-Roll
434	210959		Cover-Diaphragm
435	93141		Screw, Sem Filliste (Diaphragm Cover)
527A	221279		Tube Clamp (Used With Pull Choke Carburetors)
527	221514		Tube Clamp (Used With Rotary Choke Carburetors)
528A	231312		Tube-Breather (Used With Pull Choke Carburetor)



Carburetor Assemblies

Referenznummer	Artikelnummer	Menge	Description
528A	230634		Tube-Breather (Used With Pull Choke Carburetors) Used Before Code Date 84022300
528	231383		Tube-Breather (Used With Rotary Choke Carburetors)
529	67608		Grommet Used Before Code Date 84022300
529	67838		Grommet, Cover Used After Code Date 84022200
541	22398		Washer, Steel Zinc
542	94025		Screw-Hex
609	260694		Spring, Link (Mech. Gov.)
611	391813		Tube-Pick Up (For 2 And 3 Quart Tanks)
612	296811		Pipe/Sleeve Assy
624	222476		Crank-Bell
634A	270382		Washer, Felt (Foam)
634B	270167		Washer (Felt)
634	270167		Washer (Felt) Used Before Code Date 85081200
634	271853		Washer, Foam (Foam) Used After Code Date 85081100
681	299060		Valve-High Speed (Threaded)
951	223286		Lever-Choke
987	398970		Seal, Throttle Shaf (Lmt 46, 49, 50, 51, 53, 86) Used After Code Date 85081100

Cyl,Oil Fill,Piston,Mufflers

Referenznummer	Artikelnummer	Menge	Description
1	395970		Cylinder Assembly
1	395971		Cylinder Assy.
5	211851		Head-Cylinder
7	270836		Gasket-Cylinder Head Included in Gasket Set-Part No. 397147
8	294178		Cover-Breather
9	27549		Gasket, Valve Cover Included in Gasket Set-Part No. 397147
10	93394		Screw
12	270833		Gasket, Crankcase (.015") Included in Gasket Set-Part No. 397147
12	270895		Gasket-Crkcase (.005") Included in Gasket Set-Part No. 397147
12	270896		Gasket-Crkcase (.009") Included in Gasket Set-Part No. 397147
15	91249		Plug, Pipe (Standar (1/4" Square)
15	93448		Plug, Pipe (Flush) (1/4-18 Nptf)
15	94105		Screw-Speed Control Housing Mounting Sem
16	261405		Crankshaft
17	99158		Ball Bearing (P.t.o. Side)
18	395259		Cover-Crankcase
19	293708		Bushing/Seal Kit (Plain Bearing) (Includes 220538 Bushing) Bushings require special tools for installation.
20	393812		Seal-Oil
21	66768		Plug, Oil Fill
22	93032		Screw-Tank Mounting
22	93656		Stud
25	391650		Piston Assy-Std
25	391651		Piston-Assy. .010" O.S.
25	391652		Piston-Assy. .020" O.S.
25	391653		Piston-Assy. .030" O.S.
26	391654		Ring Set-Std
26	391656		Ring Set-010
26	391658		Ring Set-020
26	391660		Ring Set-030
26	392330		For Chrome Piston Ring Set Standard Size
27	26026		Lock-Piston Pin
28	391649		Pin Assembly-Piston Standard
29	392939		Rod Assy.-Connection For Connecting Rod with .020" undersize Crankpin Bearing order No. 393710
30	220670		Dipper-Connecting Rod
31	222282		Washer
32	94405		Screw-Connecting Rod
33	212004		Valve-Exhaust
34	261233		Valve-Intake
35	260552		Spring, Valve
36	26478		Valve Spring Set
40	230126		Valve Spring Set

Cyl,Oil Fill,Piston,Mufflers

Referenznummer	Artikelnummer	Menge	Description
40	292259		Retainer-Valve (Exhaust)
40	93312		Retainer, Spring (Used With Valves With Groove In Stem)
45	261250		Tappet-Valve
46	492550		Gear-Cam
53	94523		Screw, Hex Flange H
79	290779		Case-Reduction Gear
80	27667		Gasket-Gear Case
81	220234		Lock-Screw Head
82A	92279		Screw, Hex Head Cap (5/16-24 X 1/2")
82	91541		Screw, Hex Head Cap (5/16-24 X 7/8")
83	211293		Shaft-Auxiliary Drive
84	92617		Screw-Gear Case Mounting Sem
85	92747		Screw, Sem Hex Hd M (Used on Two Top Holes to Mount Cover)
86	291730		Cover-Gear Case
87	19011		Seal-Oil
88	27313		Gasket-Gear Case Cover
89	93448		Plug, Pipe (Flush) (1/4-18 Nptf)
189	90366		Lockwasher, Zinc Pl
207	26855		Spring-Governor Control Rod
208	261597		Rod-Control
219	391737		Gear-Governor
220	221551		Washer, Steel
227	394541		Governor Control Le (Mech. Gov.)
230	222450		Washer, Steel Zinc
298	220859		Locknut, Muffler/EI
299A	394898		Guard-Muffler Uses: 93606 Screw (Guard to Muffler Mounting) 62199 Washer (Guard to Bracket Mounting)
299A	392811		Muffler Grp (Lo-Tone)
299	394898		Guard-Muffler Uses: 93606 Screw (Guard to Muffler Mounting) 62199 Washer (Guard to Bracket Mounting)
299	492591		Muffler-Exhaust (Lo-Tone)
300	394569		Muffler Assy (Lo-Tone)
303	91943		Elbow-Exhaust (90 Degree Street)
303	92989		Elbow, Exhaust 45 D
306	223086		Shield-Cylinder
307	93490		Screw-Hex
308	223085		Cover-Cylinder Head
337	293918		Spark Plug,resistor
337	29693		Spark Plug
337	298809		Spark Plug
337	492167		Spark Plug
337	802592		Spark Plug,resistor
346	93705		Screw, Tapping Hex (8-32 X 3/8)
347	293739		Sparkplug Stop Sw
353	92791		Lockwasher, Interna
354	90576		 x (8-32)
357	91539		 illey (3/16" Square)



Cyl,Oil Fill,Piston,Mufflers

Referenznummer	Artikelnummer	Menge	Description
358	397147		Gasket Set
383	89838		Wrench-Spark Plugs
506	90200		Screw-Slotted (8-32 X 1/2")
507	66895		Insulator-Terminal
520	93722		Terminal, Spade
526	93343		Screw, Tapping Hex
533	231266		Nut, Hex (#6-32 Thread)
552	231079		Bushing, Governor S (1/4" I.d.)
562	92613		Bolt-Gov Lever
592	231082		Nut (10-24)
614	93306		Pin, Cotter
615	93307		Retainer-E Ring
616	231077		Crank, Governor (1/4" Dia.)
621	297472		Switch, Stop Assy
635	66538		Elbow-Spark Plug
676A	397931		Deflector-Muffler
676	393760		Deflector-Muff (Side Outlet)
729	221907		Clip-Wire
854	392884		Stop-Switch
864	492232		Adapter-Muffler
869	210879		Seat-Valve (Intake) Used Before Code Date 88080100
869	211172		Seat-Valve (Intake) Used After Code Date 88073100
870	211291		Seat-Valve (Exhaust)
871	262001		Bushing-Guide (Brass)
871	63709		Bushing-Guide (Brass)
883	272203		Gasket-Muffler
994	398067		Spark Arrestor
1019	491098		Label Kit