# Whirlpool®

# Model WHAMBS5

How to install, operate and maintain your Water Purifier Filtration System

Do not return unit to store

If you have any questions or concerns when installing, operating or maintaining your water filtration system, call our toll free number:

## 1-866-986-3223

Monday- Friday, 7 AM - 6 PM CST or visit

### whirlpoolwatersolutions.com

When you call, please be prepared to provide the model number and date code of your product, found on the rating decal on back.

System tested and certified by NSF International against NSF/ANSI Standards 42 and 53 for the reduction of chlorine taste and odor, VOCs, lead, Class I particulates, and for material requirements.



Manufactured and warranted by Ecodyne Water Systems 1890 Woodlane Drive Woodbury, MN 55125

## TABLE OF CONTENTS

Dogo

	<u>raye</u>
Specifications	
Performance Claims	. 3-4
What the Water Purifier will Do	5
Before You Start	5
Dimensions	5
Parts of the System	6
Materials & Tools Needed	
Typical Undersink Installation	
Installation Instructions	
Step A - Install Cold Water Supply Fitting	
Step B - Make Hole for Filtered Water Faucet	
Step C - Install Faucet	8
Step D - Make Tubing Connections	
Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines	
Filter Cartridges	
Filter Cartridge Life	
Filter Cartridge Replacement	
Faucet Electronics & Battery Change	
Troubleshooting the System	
Parts List	
	12

## WARRANTY

# ONE YEAR LIMITED WARRANTY ON WATER PURIFIER FILTRATION SYSTEM (except filter cartridges)

#### Warrantor: Ecodyne Water Systems, 1890 Woodlane Drive, Woodbury, MN 55125

Warrantor guarantees, to the original owner, that the Water Filtration System, when installed and maintained in accordance with the instructions, will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. If, within the first year, a part proves, after inspection, to be defective, Warrantor will, at its sole option, either replace or repair the part without charge except normal shipping and installation charges. Labor to maintain the equipment is not part of the warranty. Filters, which are expendable, are not covered by the warranty.

TO OBTAIN WARRANTY PARTS, SIMPLY CALL 1-866-986-3223, Monday - Friday, 7 am - 6 pm CST, for assistance. This warranty applies only while this product is in use in the United States or Canada.

#### **General Provisions**

The above warranties are effective provided the Water Filtration System is operated at water pressures not exceeding 100 psi, and at water temperatures not exceeding 100°F; provided further that the Water Filtration System is not subject to abuse, misuse, alteration, neglect, freezing, accident or negligence; and provided further that the Water Filtration System is not damaged as the result of any unusual force of nature such as, but not limited to, flood, hurricane, tornado or earth-quake.

Warrantor is excused if failure to perform its warranty obligations is the result of strikes, government regulation, materials shortages, or other circumstances beyond its control.

\*THERE ARE NO WARRANTIES ON THE WATER FILTRATION SYSTEM BEYOND THOSE SPECIFICALLY DESCRIBED ABOVE. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT THEY MIGHT EXTEND BEYOND THE ABOVE PERIODS. THE SOLE OBLIGATION OF WARRANTOR UNDER THESE WARRANTIES IS TO REPLACE OR REPAIR THE COMPONENT OR PART WHICH PROVES TO BE DEFECTIVE WITHIN THE SPECIFIED TIME PERIOD, AND WARRANTOR IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. NO WAR-RANTOR DEALER, AGENT, REPRESENTATIVE, OR OTHER PERSON IS AUTHORIZED TO EXTEND OR EXPAND THE WARRANTIES EXPRESSLY DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damage, so the limitations and exclusions in this warranty may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. This warranty applies to consumer-owned installations only.

> ®/TM © 2015 Whirlpool. All rights reserved. Manufactured under license by Ecodyne Water Systems, Woodbury, Minnesota.

# **Specifications & Performance Claims**

SPECIFICATIONS			
Supply Water Pressure Min Max.	30 - 100 psi (207 - 689 kPa)		
Supply Water Temperature Min Max.	40 - 100 °F (4 - 38 °C)		
Rated Service Flow	0.74 gallons per minute (2.8 liters per minute)		
Filter Service Life	350 gallons (1,325 liters)		
Inlet - Outlet	3/8" quick connect fittings		
Maximum Supply Water Iron, Manganese & Hydrogen Sulfide	0		

This system conforms to NSF/ANSI 42 and 53 for the specific performance claims as verified and substantiated by test data.

This filter improves the taste and odor and reduces many chemical contaminants in drinking water. The faucet indicator monitors the length of time the filter has been installed and will flash amber continuously, indicating the filters and battery need to be replaced.

This system has been tested according to NSF/ANSI 42 and 53 for the reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42 and 53. The testing was performed using spiked tap water at a flow rate of 0.74 GPM (2.8 L/min.), pH of 7.5  $\pm$ 0.5, pressure of 60 PSIG, and temperature of 68  $\pm$ 5°F.

**IMPORTANT NOTICE:** Read this performance data and compare the capabilities of this unit with your actual water treatment needs. It is recommended that, before purchasing a water treatment unit, you have your water supply tested to determine your actual water treatment needs. This filter system is designed to be used for the reduction of the performance claims listed below. Do not use for the treatment of water that is visually contaminated (cloudy) or has an obvious contamination source, such as contamination by raw sewage. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. While testing was performed under standard laboratory conditions, actual performance of the system may vary based on local water conditions. Some or all of the contaminants reduced by this unit may not be in your water supply. **See elsewhere in this manual for instructions on filter cartridge replacement, system installation, operating procedures, and warranty. The maintenance instructions must be followed for the product to perform as indicated below.** 

PERFORMANCE CLAIMS							
Contaminant	Required Influent Level (μg/L) <sup>②</sup>	NSF Max. Per- missible Effl. Level (μg/L) <sup>②</sup>	Average Influent Level (μg/L) <sup>②</sup>	Avg. / Max. Effluent Level (μg/L) <sup>②</sup>	Avg. / Min. Percent Removal	EPA <sup>①</sup> Max. Contaminant Level (μg/L) <sup>②</sup>	
Lead @ pH 6.5	150 ±10%	10	150	1 / 1	99.3 / 99.3	15	
Lead @ pH 8.5	150 ±10%	10	140	1 / 1	99.3 / 99.3	15	
Substance							
Chlorine Taste & Odor	2000 ±10%	50% <sup>3</sup>	1900	50 / 50	97.4 / 97.2	None <sup>④</sup>	
Particulate, Class I <sup>⑤</sup> (0.5 to <1 micron)	10,000 <sup>⑤</sup>	85% <sup>3</sup>	6,000,000 <sup>⑤</sup>	5,567/28,000 <sup>⑤</sup>	99.9 / 99.9	None <sup>⊕</sup>	
VOC Reduction <sup>6</sup>							
Chloroform	300 ±10%	95% <sup>3</sup>	320	0.5 / 0.5	99.8 / 99.8	80	

NOTE: See labels on the water treatment system for additional information.

<sup>①</sup> Environmental Protection Agency maximum contaminant level as required under the Safe Drinking Water Act.

<sup>(2)</sup> Micrograms per liter, which is equivalent to parts per billion (PPB).

<sup>③</sup> NSF minimum percent reduction requirement. Acceptance level for this substance is based on percent reduction, rather than maximum effluent concentration.

<sup>④</sup> The EPA has not determined a maximum contaminant level for this chemical.

<sup>⑤</sup> Particulate Class I, reported in particles per milliliter.

<sup>(6)</sup> Chloroform was used as a surrogate for the reduction of chemicals specified in the Organic Chemicals Reduced by Chloroform Surrogate Testing table (on the following page).

# **Performance Claims (continued)**

## ORGANIC CHEMICALS REDUCED BY CHLOROFORM SURROGATE TESTING

Contaminant	Average <sup>①</sup> Influent (µg/L) <sup>②</sup>	Maximum Effluent (µg/L) <sup>②</sup>	Percent Removal	ЕРА MCL <sup>⑦</sup> (µg/L) <sup>②</sup>	Contaminant	Average <sup>①</sup> Influent (µg/L) <sup>②</sup>	Maximum Effluent (µg/L) <sup>②</sup>	Percent Removal	EPA MCL <sup>⑦</sup> (μg/L) <sup>②</sup>
Alachlor	50	1.0 <sup>③</sup>	>98	2.0	Haloketones (HK):				
Atrazine	100	3.0 <sup>③</sup>	>97	3.0	1,1-Dichloro-2- propanone	7.2	0.1④	99	NA
Benzene	81	1.0 <sup>3</sup>	99	5.0	1,1,1-Trichloro-2-				
Carbofuran	190	1.0 <sup>3</sup>	>99	40	propanone	8.2 <sup>©</sup>	0.34	96	NA
Carbon Tetrachloride	78	1.8 <sup>④</sup>	98	5.0	Heptachlor	25	0.01 <sup>3</sup>	>99	0.4
Chlorobenzene	77	1.0 <sup>3</sup>	99	100	Heptachlor Epoxide	10.7 <sup>©</sup>	0.26	98	0.2
Chloropicrin	15	0.2 <sup>④</sup>	99	NA	Hexachlorobutadiene	44	1.0 <sup>3</sup>	98	NA
2,4-D	110	1.7 <sup>④</sup>	98	70	Hexachlorocyclopenta-				
Dibromochloropropane (DBCP)	52	0.02 <sup>3</sup>	>99	0.2	diene	60	0.002 <sup>3</sup>	>99	50
o-Dichlorobenzene	80	1.0 <sup>3</sup>	99	600	Lindane	55	0.01	>99	0.2
p-Dichlorobenzene	40	1.0 <sup>3</sup>	98	75	Methoxychlor	50	0.1 <sup>©</sup> 1.0 <sup>©</sup>	>99	40
1,2-Dichloroethane	88	4.8 <sup>⑤</sup>	95 <sup>⑤</sup>	5.0	Pentachlorophenol	96		99	1.0
1,1-Dichloroethylene	83	1.0 <sup>3</sup>	99	7.0	Simazine	120	4.0 <sup>3</sup> 0.5 <sup>3</sup>	97	4.0
cis-1,2-					Styrene	150		>99	100
Dichloroethylene	170	0.5 <sup>3</sup>	>99	70	1,1,2,2-Tetrachloroethane	81	1.0 <sup>3</sup> 1.0 <sup>3</sup>	99	NA
trans-1,2- Dichloroethylene	86	1.0 <sup>③</sup>	99	100	Tetrachloroethylene Toluene	81 78	1.0 <sup>®</sup>	99 99	5.0 1,000
1,2-Dichloropropane	80	1.0 <sup>3</sup>	99	5.0	2,4,5-TP (Silvex)	270	1.6 <sup>③</sup>	99	50
cis-1,3-	70	1.0 <sup>3</sup>	00		Tribromoacetic Acid	42	1.0 <sup>3</sup>	98	NA
Dichloropropylene	79	_	99	NA	1,2,4-Trichlorobenzene	160	0.5 <sup>3</sup>	>99	70
Dinoseb	170	0.2 <sup>④</sup>	99	7.0	1,1,1-Trichloroethane	84	4.64	95	200
Endrin	53	0.59 <sup>④</sup>	99	2.0	1,1,2-Trichloroethane	150	0.5 <sup>3</sup>	>99	5.0
Ethylbenzene	88	1.0 <sup>③</sup>	99	700	Trichloroethylene	180	1.0 <sup>3</sup>	>99	5.0
Ethylene Dibromide (EDB)	44	0.02 <sup>3</sup>	>99	0.05	Trihalomethanes (incl.):				
Haloacetonitriles (HAN):					Chloroform (surrogate chemical)				
Bromochloroacteonitrile	22	0.5 <sup>④</sup>	98	NA	Bromoform	300	15	95	80
Dibromoacetonitrile	24	0.64	98	NA	Bromodichloromethane				
Dichloroacetonitrile	9.6	0.24	98	NA	Chlorodibromomethane				
Trichloroacetonitrile	15	0.3 <sup>④</sup>	98	NA	Xylenes (total)	70	1.0 <sup>3</sup>	99	10,000

<sup>①</sup> Influent challenge levels are average influent concentrations determined in surrogate qualification testing.

<sup>(2)</sup> Micrograms per liter, which is equivalent to parts per billion (PPB).

<sup>3</sup> Maximum product water level was not observed, but set at the detection limit of the analysis.

<sup>④</sup> Maximum product water level set at a value determined in surrogate qualification testing.

<sup>(5)</sup> Chemical reduction percent and maximum product water level calculated at chloroform 95% breakthrough point, as determined in surrogate qualification testing.

- <sup>®</sup> The surrogate test results for Heptachlor Epoxide demonstrated a 98% reduction. These data were used to calculate an upper occurrence concentration, which would produce a maximum product water level at the MCL.
- <sup>©</sup> Environmental Protection Agency maximum contaminant level as required under the Safe Drinking Water Act.

Cyst, virus and bacteria reduction tested by BioVir Labs, in accordance with the US EPA and State of California Department of Public Health test protocol.

Substance	Log Reduction	%Reduction
Cyst	3.5	99.95
Virus	4	99.99
Bacteria	6	99.9999

# What the Water Purifier will Do

The WHAMBS5 is a water purification treatment system. This system uses a triple filter configuration to remove undesirable elements in your water. These elements may include chlorine taste and odor, particulates, lead, virus, bacteria, cysts, and many organic compounds. At the same time, the system allows the minerals found in water to remain, for great tasting water.

The WHAMBS5 utilizes patented technology to ensure a safe water supply for the user. Replace all filters every 6 months or 350 gallons. The purifier technology is designed to stop flowing when its capability to protect the user has been exhausted. This one-of-a-kind failsafe technology ensures that the user will not be exposed to contaminated water.


**NOTE:** A performance data sheet is included listing what the system will reduce from the water supply. See the performance data sheet for individual contaminants and microbial reduction performance.

The drinking water system fits under the kitchen or bathroom sink. However, you can install it where it is most convenient. You need a COLD water supply pipe within a few feet (6 feet of tubing is included). You can purchase longer lengths of tubing if needed to reach more distant points. Be sure tubing is acceptable for use on potable water supplies.

## **Before You Start**

- Read all steps and guides carefully before installing and using your microbiological drinking water purifier. Follow all steps exactly to correctly install. Reading this manual will also help you to get all the benefits from the microbiological drinking water purifier.
- Do not use for the treatment of water that is visually contaminated (cloudy) or has an obvious contamination source, such as contamination by raw sewage.
- ▼ All plumbing should be done in accordance with local codes and requirements. In Massachusetts, plumbing code 248 CMR 3.00 and 10.00 shall be adhered to. Consult with your licensed plumber.
- The microbiological drinking water purifier works on water pressures of 30 psi (minimum) to 100 psi (maximum). If your house water pressure is over the maximum, install a pressure reducing valve in the water supply pipe to the filter system.
- ▼ Do not install the microbiological drinking water purifier outside, or in extreme hot or cold temperatures. Temperature of the water supply to the undersink drinking water filter system must be between 40°F and 100°F. Do not install on hot water.

Dimensions

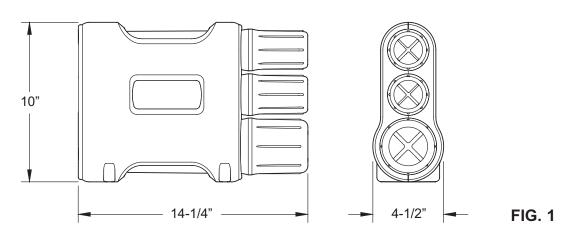

#### Questions? Call Toll Free 1-866-986-3223 Monday- Friday, 7 AM - 6 PM CST or visit whirlpoolwatersolutions.com

When you call, please be prepared to provide the model number and date code, found on the rating decal on back.

#### 5

# **Parts of the System**

- Filter system assembly
- Water supply fitting
- Filtered water faucet for sink or countertop mounting
- Color coded 3/8" tubing to make all needed connections
- Filter change drip tray

# **Materials and Tools Needed**


**NOTE:** Gather the required tools before starting installation. Read and follow the instructions provided with any tools listed here.

- Slotted and Phillips screwdrivers
- Pliers and adjustable jaw wrench
- Tubing cutter
- Electric drill and 1-1/4" drill bit if mounting hole is needed for the faucet

**IMPORTANT:** To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures in porcelain or stainless steel.

# **Typical Undersink Installation**

Locate the water filter housing on the cold water supply pipe, under the kitchen and/or bathroom sink, to filter the cold drinking water. Refer to the following drawing.

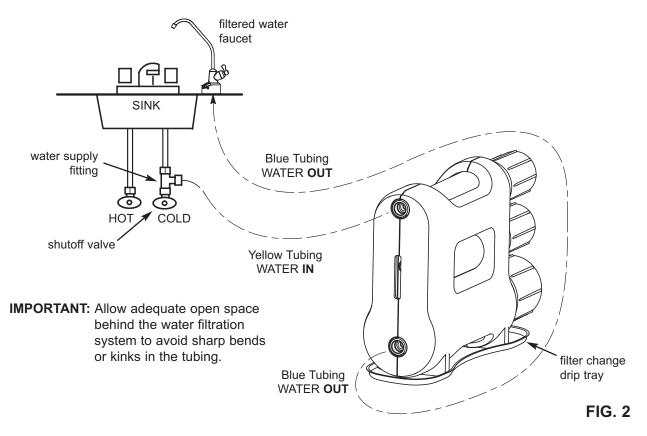

# **Installation Instructions**

## Step A - Install Cold Water Supply Fitting

Check and comply with local plumbing codes as you plan, then install a cold water supply fitting. The fitting must provide a leak-tight connection to the water filter 3/8" tubing. A typical connection using the included water supply fitting is shown in Figure 3A. An optional connection using standard plumbing fittings (not included) is shown in Figure 3B.

#### Included Water Supply Fitting

**1**. Close the cold water shutoff valve (angle stop valve) that the water supply fitting will be installed on, and open faucet(s) to relieve pressure.

2. Disconnect the existing cold water line from the water shutoff valve.

3. Make sure that the water supply fitting's gasket is inside the female threaded portion of the fitting.


**4**. Install the water supply fitting onto the cold water shutoff valve, where the existing cold water line was removed, and hand tighten. Be careful not to cross thread or overtighten.

**5**. Connect the existing cold water line to the male threaded portion of the water supply fitting and hand tighten. Be careful not to cross thread or overtighten.

Optional Pipe Fittings (compression type shown)

NOTE: Be sure to turn off the water supply and open a faucet to drain the pipe.

Complying with plumbing codes, install a fitting on the cold water pipe to adapt 3/8" OD tubing. A typical connection is shown in Figure 3B. If threaded fittings are used, be sure to use pipe joint compound or thread sealing tape on outside threads.

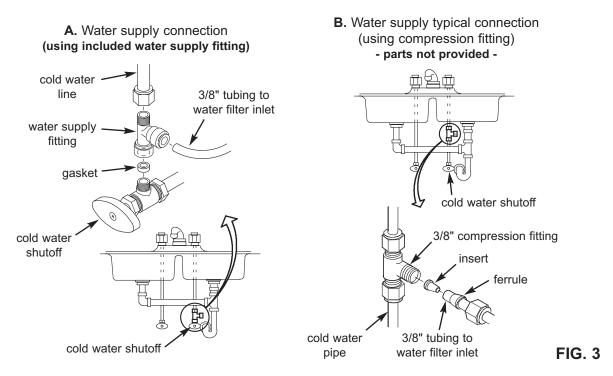

## Step B - Make Hole For Filtered Water Faucet

**IMPORTANT:** To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures in porcelain, stainless steel or granite. Special drill bits are made for this.

**1**. Select one of the following places to install the faucet. Be sure there is room underneath so you can make the needed connections.

- In an existing sink spray attachment hole.
- Drill a hole in the sink top.
- Drill a hole in the countertop next to the sink.
- **2**. If drilling is needed make a 1-1/4" dia. (minimum) hole for the faucet.

# **Installation Instructions**

## Step C - Install Faucet

**1**. Insert one end of the 3/8" blue tubing into the push-in fitting on the bottom of the faucet. Push tubing through the collet and all the way into fitting. Full engagement is 3/4" length of tube into the fitting.

**2**. Feed the 3/8" tubing that is attached to the faucet through the mounting hole. Slide the toggle bolts through the mounting hole. Tighten the screws to secure the base flat on the mounting surface. Do not overtighten.

3. Move the faucet down onto the base. Turn 1/4 clockwise to attach the faucet to the base.

4. Install battery in base. See "Battery Change" section for instructions.

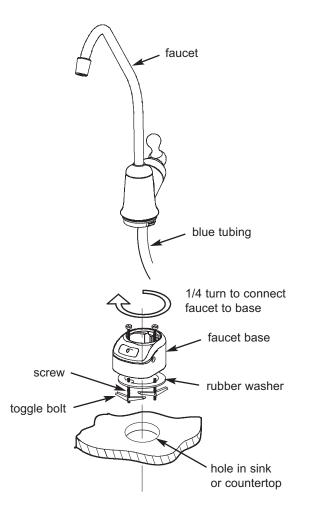


FIG. 4

## Step D - Make Tubing Connections

**1**. Allowing some slack, measure and cut a length of 3/8" tubing to connect between the supply fitting and the filter system inlet (See Figure 2). Cut the ends of the tubing square.

**2**. Insert tubing all the way into the supply fitting and inlet fitting. Pull on the tubing to be sure that it's held firmly in the fittings.

3. Repeat steps 1 and 2 to connect tubing from the faucet to the filter system outlet (See Figure 2).

Tubing Connection (all push-in fitting locations):

This system includes push-in fittings for quick tubing connections. If working with the fittings, do the following.

continued on the next page

# **Installation Instructions**

continued from the previous page


#### **Connect Tubing:**

1. Use a sharp cutter or knife to cut the end of tubing square.

**2**. Inspect the end (about 1") of the tubing to be sure there are no nicks, scratches or other rough spots. If needed cut the tubing again.

**3**. Push tubing through the collet and all the way into fitting. Full engagement is 3/4" length of tube into the fitting.

If tubing other than supplied with the system is used, be sure it is of high quality, exact size and roundness with a smooth surface.

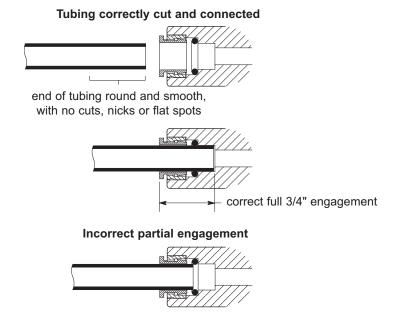

#### To Disconnect Tubing:

1. Push the collet inward and hold with a finger while pulling the tubing out.




FIG. 6

FIG. 5

## Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines

1. Open the shutoff valve(s) that you closed at the beginning of this installation.

**2**. Open the sink faucet and filtered water faucet to purge air from the system. When the water runs smooth, with no bubbles or spurting, close faucets and check installation for leaks.

3. Open the filtered water faucet and let water run for 10 minutes to rinse out carbon fines.

#### Questions? Call Toll Free 1-866-986-3223 Monday- Friday, 7 AM - 6 PM CST or visit whirlpoolwatersolutions.com

When you call, please be prepared to provide the model number and date code, found on the rating decal on back.

# **Filter Cartridges**

## Filter Cartridge Life

**Taste and Odor, and Microbiological Purifying Cartridges:** Taste and odor, and microbiological purifying cartridges contain activated carbon. When new, open the filtered water faucet and allow fine, carbon particles to purge from the cartridges. Flush for 10 minutes. It is recommended to **replace filter cartridges every six months or 350 gallons** of use. There are several variables that determine how long a cartridge will last. These include:

- 1. How much water you use, and
- 2. How much sediment, taste and/or odor, or other unwanted substance, is in the water.

Use the following information as a guide. However, no matter which type of cartridge you are using, you will know it is time to replace them when you first notice the return of the unwanted sediment, taste and/or odor in your water, or when the flow diminishes or stops.


Whirlpool<sup>®</sup> Water Purifier Filtration System model WHAMBS5 with replacement element pack WHEMBF conforms to NSF/ANSI 42 and 53 for the specific performance claims as verified and substantiated by test data. The rated capacity for this system is 350 gallons (1325 liters) at a rated service flow of 0.74 gallons per minute.

Register for reminders to change filters at whirlpoolwatersolutions.com

## Filter Cartridge Replacement

- 1. Turn filter cartridge counterclockwise to remove cartridges from the filter manifold. **Note:** You may notice some water under the system during filter change.
- 2. Dispose of the cartridges in a proper manner.
- **3**. Install new cartridges. Turn cartridges clockwise to re-attach to the filter manifold.
- 4. Remove and replace the timer battery. See "Battery Change" section for instructions.

**Taste and Odor, and Microbiological Purifying Cartridges:** Taste and odor, and microbiological purifying cartridges contain activated carbon, a black powder. When new, open the filtered water faucet and allow fine, carbon particles to purge from the cartridges. Flush for 10 minutes.

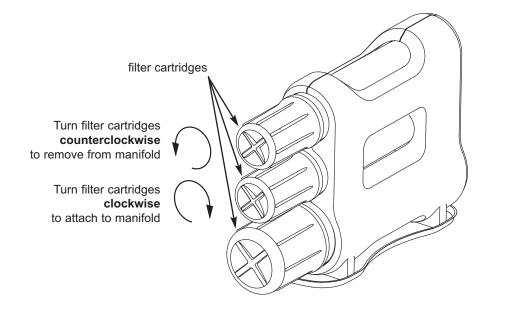

# **Faucet Electronics**

## Faucet Timer

Inside the faucet base is a battery operated 6 month timer.

An amber LED indicator is also located in the front of the faucet base. This LED will flash continuously after 6 months have passed. This indicates that it is time to replace the battery and filters.

## Battery Change

To change the battery, complete the following steps.

1. Loosen the screw on the right side of the faucet base.


**2**. Press the battery housing upwards from faucet base until it releases from the base.

**3**. Replace the battery (CR 2032 or equivalent). Place battery into the holder with the positive (+) side facing the back of the holder.

**NOTE:** Recycle or properly dispose of the old battery.

**4**. When the battery is first replaced the light in the base will flash six times and turn off. This indicates the battery is fully charged. After the six flashes the timer enters the 6 month time cycle. If it repeatedly flashes two times, the battery is weak and needs to be replaced.

**5**. Re-install the battery housing and firmly tighten the mounting screw.

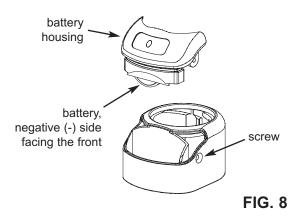

# **Troubleshooting the System**

Problem: No water or decreased water flow.	Problem: No water or decreased water flow.					
Cause: Filter 1 is clogged.	Correction: Replace the filter 1 cartridge.					
<i>Cause:</i> Flow through the microbiological purifying filter will decrease and eventually clog when exposed to an excess of microbiological loading materials in the water. This failsafe feature reduces the chance of product use beyond its intended life, and will shut down the filter when it is exposed to contaminated water.	<i>Correction:</i> Replace all filter cartridges.					
Problem: Taste and/or Odor.						
Cause: Filter cartridges exhausted.	Correction: Replace all filter cartridges.					
Cause: System contaminated.	<i>Correction:</i> Sanitize system. Call 1-866-986-3223 for instructions.					
Problem: Faucet LED indicator light does not function after b	attery change.					
Cause: Battery dead.	Correction: Replace with new battery.					
Cause: Battery installed incorrectly.	Correction: Install battery correctly.					
Problem: Water leaks at push connect fittings.						
Cause: Tubing not pushed in all the way.	<i>Correction:</i> Push tubing in all the way into fittings.					
Cause: Tubing not cut square.	Correction: Cut tubing square.					
Cause: Tubing nicked.	<i>Correction:</i> Remove nicked portion, reinsert tubing into fitting.					
Cause: Outer tubing surface not smooth.	<i>Correction:</i> Remove rough portion, reinsert tubing into fitting.					

Need help troubleshooting?

Call toll free 1-866-986-3223, Monday - Friday, 7 am - 6 pm CST, or visit whirlpoolwatersolutions.com

De	arts List			
Γč	irts List	Key No.	Part No.	Description
1		1	7292674	Faucet, with base & electronics
		2	119-8600088	Water Supply Fitting, 3/8" Q.C.
		-	1128-05-HD	Repl. Cabinet (incl. Key Nos. 3 & 4)
		3	$\checkmark$	Cabinet, Left
		4	$\uparrow$	Cabinet, Right
1		5	1128-05-HB	Manifold Assembly (includes Key Nos. 3-5)
2		6	WHEMBF	Repl. Filter Cartridges, 1 each of Sediment, LTO (Lead, Taste & Odor) & Microbiological Purifying <b>*</b>
			7168435	Tubing, 3/8" x 72" long, White
<b>⊢</b> − <b>♥</b> −¬			1128-05-AA	Owner's Manual
		whe ■ Not	ere you bought y illustrated. order repair part Monday - Fr Manufactu Ecodyı 1890	placement cartridges from the retailer our water filtration system. s call toll free 1-866-986-3223, riday, 7 am - 6 pm CST. rred and warranted by he Water Systems Woodlane Drive abury, MN 55125
X				

## FOR IOWA USE ONLY

All sales in Iowa require the following signature before consummation of sale. These signatures must be retained by seller/renter for 2 years minimum.

Buyer/Renter	 Date
Seller	 Date
Seller's Address	 
Seller's Phone No.	 

Product: Whirlpool® Water Purifier Filtration System - Model WHAMBS5