

1500 Series and 1600 Series Electric Strikes Installation Instructions

1




NOTE: Installation wiring for the product and wiring methods shall be in accordance with the National Electrical Code, ANSI/NFPA 70.


Product Components

- 1500 Series or 1600 Series Electric Strike
- 2 Trim Enhancer

- ③ Pigtails (12 VDC and 24 VDC)
- 4 5/64" Hex Wrench
- (5) #6-32 x 3/16" Phillips Head Screws to Mount Trim Enhancer

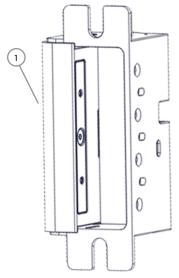



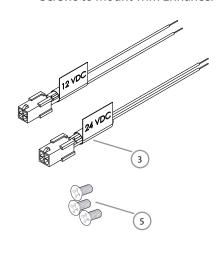

Specifications

ELECTRICAL RATINGS FOR 1500/1600 (Solenoid)	Solenoids are rated at +/- 10% indicated value. * Applies to AC Only: 10% max duty cycle (2 min. max on time)				
VOLTAGE	12 VDC	24 VDC	12–16 VAC	24 VAC	
CONTINUOUS DUTY	0.24A	0.12A	-	-	
INTERMITTENT DUTY*	-	-	0.24-0.32A	0.12A	

ELECTRICAL RATINGS FOR	Input voltage: 10–30 VDC, Autosensing				
1500E/1600E (EcoStrike™)	Minimum Activation Duration: 1 second				
VOLTAGE	10 VDC	12 VDC	24 VDC	30 VDC	
IN RUSH CURRENT	0.475A	0.460A	0.220A	0.215A	
CONTINUOUS DUTY	0.010A	0.009A	0.005A	0.004A	

	VOLTAGE		
MINIMUM WIRE GAUGE REQUIREMENTS	12VDC	24VDC	
200 feet or less	18 gauge	20 gauge	
200 - 300 feet	16 gauge	18 gauge	
300 - 400 feet	14 gauge	16 gauge	

NOTE: The above table applies to Models 1500, 1500E, 1600, and 1600E.

Models 1500E and 1600E: For Indoor Use Only Models 1500 and 1600: For Outdoor Use

Ratings

Static Strength: 1,500 lbs

Dynamic Impact: 70 ft-lbs

Endurance: 250,000 cycles

UL294 Performance Levels

Destructive Attack: Line Security: Endurance: Level I (No attack test) Level I (No Line Security) Level IV (100,000 cycles)

Standby Power: Lev


Level I (No secondary power source)

Converting the Operation Mode

IMPORTANT NOTE: Converting the electric strike to FAIL SAFE mode negates the unit's fire rating.

NOTE 1: The 1500 and 1600 Series Electric Strikes ship configured for FAIL SECURE OPERATION. The steps below are provided to convert to FAIL SAFE OPERATION, if desired. The operation mode of the 1500E and 1600E (EcoStrike ™) is set at the factory and cannot be changed.

NOTE 2: The suitability of the locks in the FAIL SECURE OPERATION mode is up to the local Authority Having Jurisdiction (AHJ) and emergency exit hardware may be required in such installations.

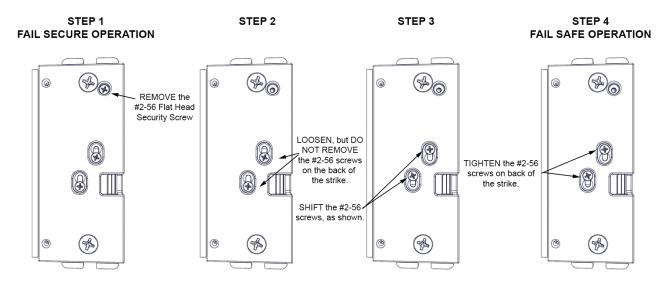


Connecting the Power

IMPORTANT NOTE: Before electrically connecting the device, the input voltage must be verified using a multimeter.

Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the electrical specification (see Page 1) may cause severe damage to the unit and will void the warranty.

1500 or 1600: For 12 VAC, 12 VDC, or 16 VAC, USE the pigtail marked "12 VDC."

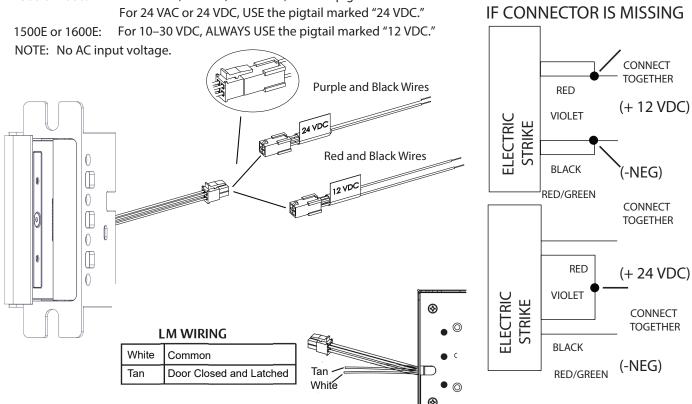


3086006.001 Rev 3

Preparing the Frame

MORTISE LOCKSETS


Please note the horizontal centerline of the electric strike in relation to the centerline of the mortise lockset.

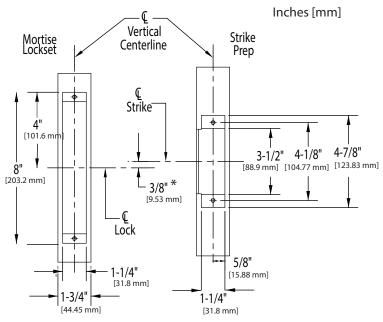

* Can be Mortise lock and option specific. See figures below if using a Schlage L9000 or Yale 8700 series.

CYLINDRICAL LOCKSETS

Please note the horizontal centerline of the electric strike in relation to the centerline of the cylindrical lockset.

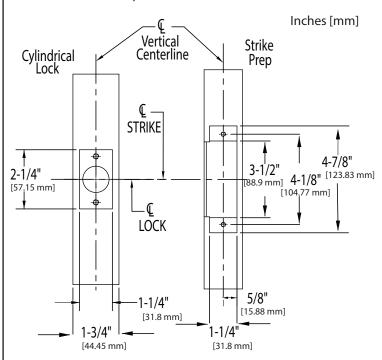

METAL JAMB DIMENSIONS FOR FACEPLATES


Please see Notes 2 & 3 for dimensions when using Lip Extensions

Normally Used With Mortise Locks Without Deadbolt

NOTE1: Cannot be used with Schlage L9000 or Yale 8700 series.

- *NOTE2: Add 1/4" [6 mm] to this dimension when using a lip extension.
- **NOTE3: Add 3/8" [9.5 mm] to this dimension when using a lip extension.

Cutout dimenstions for option faceplates (metal jamb): 1J, 1KM, 1NM

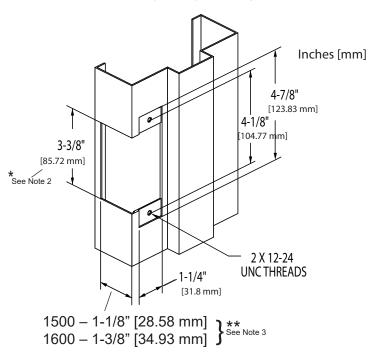


Normally Used With Mortise Locks With Deadbolt


NOTE1: Can be used with Schlage L9000 or Yale 8700 series.

- \star NOTE2: Add 1/4" [6 mm] to this dimension when using a lip extension.
- **NOTE3: Add 3/8" [9.5 mm] to this dimension when using a lip extension.

Cutout dimenstions for option faceplates (metal jamb): 1KD, 1ND, 1NTD

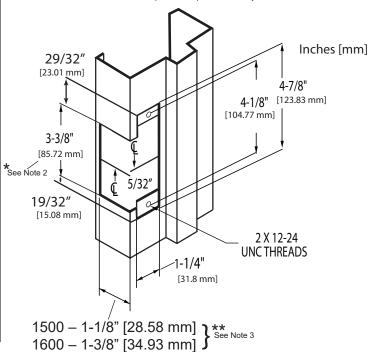


Selecting the Appropriate Faceplate Option

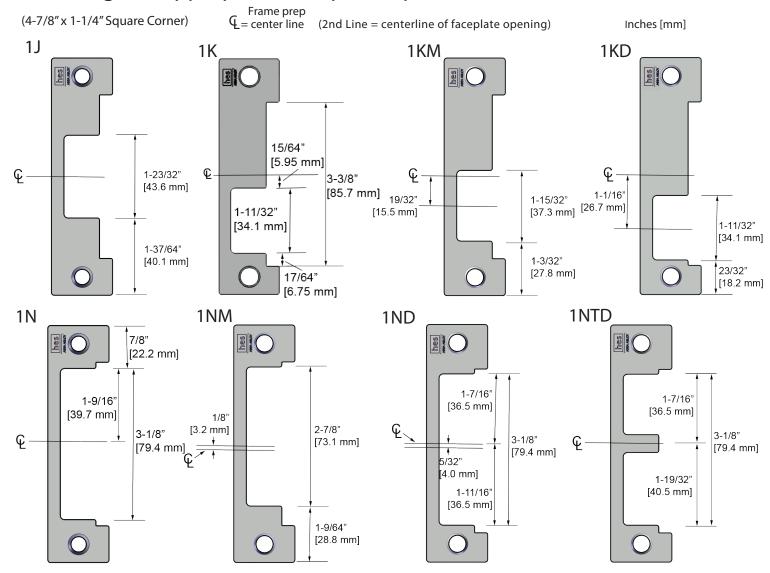

OPTION		DESCRIPTION	1500	1600	
1J	For Use With:	Cylindrical locksets with up to 3/4" throw and all locksets with center-lined bolts.	Х	Х	
	Compatible With:	All brands of cylindrical latchbolts	_ ^		
1K	For Use With:	Mortise locksets with up to ¾" throw latchbolt.		Х	
	Compatible With:	Baldwin, Marks, PDQ	X	Χ	
1KM	For Use With:	Mortise locksets with up to 3/4" throw latchbolt.			
	Compatible With:	Accurate, Arrow, Best, Corbin Russwin, Falcon, Sargent (7800, 8200, and 9200),	X	Χ	
		Yale (8800)			
1KD	For Use With:	Mortise locksets with up to 3/4" throw latchbolt.	X	Х	
	Compatible With:	Dorma (9500), Jackson, Sargent (7700 and 8100), Schlage, Yale (8700)	_ ^	^	
1N	For Use With:	Mortise locksets with deadbolt for night latch function only.	Х		
	Compatible With:	Accurate, Baldwin, Marks, Omnia, PDQ, Schlage		^	
1NM	For Use With:	Mortise locksets with deadbolt for night latch function only.			
	Compatible With:	Accurate, Arrow, Baldwin, Best, Corbin Russwin, Falcon (45H, 47H, 34H, and		X	
		37H), Marks, PDQ, Sargent (7800, 8200, and 9200), Yale (8800)			
1ND	For Use With:	Mortise locksets with deadbolt for night latch function only.	Х		
	Compatible With:	Sargent (7700 and 8100), Schlage, Yale (8700)		^	
1NTD	For Use With:	Mortise locksets with a normally extended 1" deadbolt and center-lined deadlatch.		Х	
	Compatible With:	Accurate, Arrow, Baldwin, Marks, Omnia, PDQ, Schlage		^	

Adjusting the Shim

NOTE: To adjust the shim height, it is necessary to power the electric strike to open keeper.

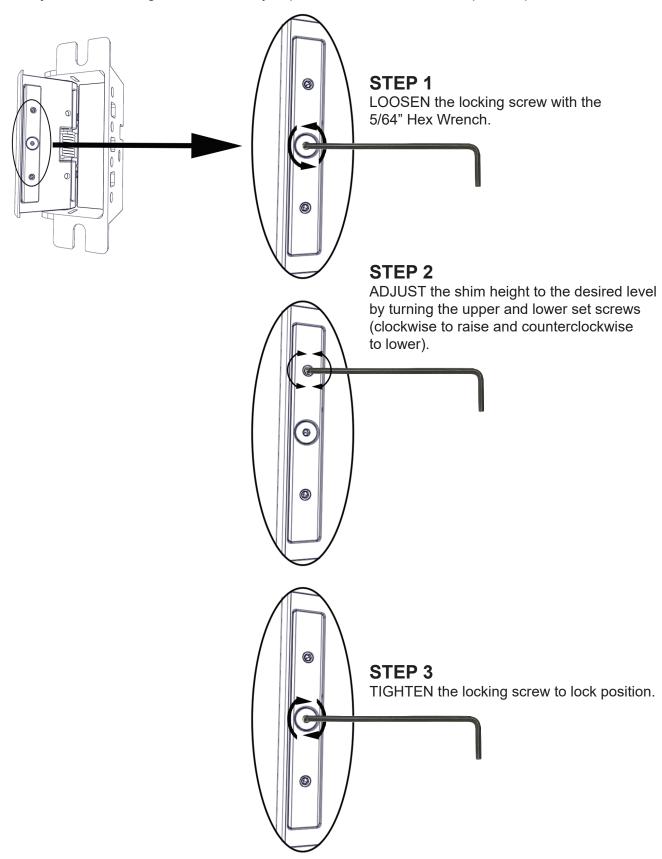



HES, Inc.
Phoenix, AZ
800-626-7590
www.hesinnovations.com