



CHAPTER 2

Cisco Nexus 1010 Software Installation

This chapter describes how to install the Cisco Nexus 1010 and Cisco Nexus 1010-X software, and includes the following sections:

- [Information About Software Install, page 2-1](#)
- [Prerequisites, page 2-2](#)
- [Guidelines and Limitations, page 2-2](#)
- [CIMC And BIOS Information, page 2-2](#)
- [Gathering Information About the Management Software, page 2-5](#)
- [Setting up the Primary Cisco Nexus 1010 or Cisco Nexus 1010-X, page 2-9](#)
- [Setting up the Secondary Cisco Nexus 1010 or Cisco Nexus 1010-X, page 2-15](#)
- [Example for Network Uplink Configuration, page 2-17](#)
- [Verifying the Cisco Nexus 1010 Configuration, page 2-18](#)
- [Getting Started With Cisco Nexus 1010, page 2-20](#)
- [Feature History for Software Installation, page 2-20](#)



Note

For information about upgrading Cisco Nexus 1000V software on a VSB, see the *Cisco Nexus 1000V Software Installation and Upgrade Guide, Release 4.2(1)SVI(5.1)*.

For an overview of the Cisco Nexus 1010 product family and procedures for configuring the software after it is installed, see the *Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(4)*.

Information About Software Install

Cisco Nexus 1010 and Cisco Nexus 1010-X software is pre installed as an ISO image. Use this procedure to install the Cisco Nexus 1010 or Cisco Nexus 1010-X software. The installation involves the following steps:

-
- Step 1** Verify that you have the correct Cisco Integrated Management Controller (CIMC) software installed. See [CIMC And BIOS Information, page 2-2](#).
- Step 2** Gather information about Management Software. See [Gathering Information About the Management Software, page 2-5](#).

Send document comments to nexus1k-docfeedback@cisco.com.

- Step 3** Set up primary Cisco Nexus 1010 or Cisco Nexus 1010-X. See [Setting up the Primary Cisco Nexus 1010 or Cisco Nexus 1010-X, page 2-9](#)
- Step 4** Set up the secondary Cisco Nexus 1010 or Cisco Nexus 1010-X. See [Setting up the Secondary Cisco Nexus 1010 or Cisco Nexus 1010-X, page 2-15](#).

Prerequisites

Before installing Cisco Nexus 1010 Release 4.2(1)SP1(4), you must know or do the following:

- You must have the latest firmware release. For more information, see the [CIMC And BIOS Information, page 2-2](#).
- You must have Cisco Integrated Management Controller (CIMC) software Version 1.2.1(b) or higher installed. For more information, see the [CIMC And BIOS Information, page 2-2](#).
- Use the “[Verifying the CIMC Software Version](#)” procedure on page 2-3 to verify you have this CIMC version installed. For more information, see the [CIMC Firmware Management on UCS C-Series Servers](#) document.

The install fails if an earlier version of CIMC is installed.

- Use N1010 CIMC GUI to update the CIMC, and BIOS firmware individually using the manual procedure. For more information, see the [CIMC And BIOS Information, page 2-2](#).

Guidelines and Limitations

Follow these guidelines and limitations when setting up the Cisco Nexus 1010 product family:

- The domain ID must be unique within the VLAN.
- If other Cisco Nexus 1010s or Cisco Nexus 1000Vs are in the same VLAN, then the domain ID must also be unique across all of them.
- When setting up the software, you configure the uplink type for your system. Once you configure an uplink type, the only way to modify it is to reload the software.
- The HA standalone role is not supported for the Cisco Nexus 1010.
- Cisco Nexus 1010 is not supported in the non HA mode.
- It is a recommended Cisco best practice to configure a primary Cisco Nexus 1010 with a secondary backup. Although you can configure a primary Cisco Nexus 1010 without a secondary backup, this configuration in a production environment is not supported.
- It is recommended to configure the same domain ID, uplink type, control VLAN, management VLAN, control uplink, management uplink for both primary and secondary 1010s.
- The pairing of the Cisco Nexus 1010 must match the hardware platform. You cannot pair a Cisco Nexus 1010 with Cisco Nexus 1010-X.

CIMC And BIOS Information

Use the following guidelines for installing the latest software version of CIMC and for updating the CIMC and BIOS firmware.

Send document comments to nexus1k-docfeedback@cisco.com.

- You must have the latest firmware release. For firmware release 1.4(3) or higher, the Cisco UCS Host Upgrade Utility tool supports Cisco Nexus 1010 and Cisco Nexus 1010-X.

You can download the firmware from the following location:

[http://www.cisco.com/cisco/software/release.html?mdfid=283860950&release=1.4\(2\)&relind=AVAILABLE&softwareid=283850974&rellifecycle=&reltype=latest](http://www.cisco.com/cisco/software/release.html?mdfid=283860950&release=1.4(2)&relind=AVAILABLE&softwareid=283850974&rellifecycle=&reltype=latest)

For more information on the Cisco UCS Host Upgrade Utility tool documentation, see

http://www.cisco.com/en/US/partner/products/ps10493/products_user_guide_list.html

- You must have CIMC software Version 1.2.1(b) or higher installed. Use the following procedure to download the latest software version of CIMC:
 - Access the Cisco software download page from the following location:
<http://www.cisco.com/cisco/software/type.html?mdfid=283860950&catid=null>
 - Click on **Unified Computing System (UCS) Server Firmware** to select the software type. The Download Software page appears.
 - Select the latest release.
 - Click **Download** to download the latest CIMC software version.
- Use the “[Verifying the CIMC Software Version](#)” procedure on page 2-3 to verify you have this CIMC version installed. For more information, see the [CIMC Firmware Management on UCS C-Series Servers](#) document.

The upgrade or install fails if an earlier version of CIMC is installed.

- Use N1010 CIMC GUI to update the CIMC, and BIOS firmware individually using the manual procedure.
 - Upgrade to the latest CIMC version using the following manual procedure:
http://www.cisco.com/en/US/products/ps10493/products_configuration_example09186a0080b07b7c.shtml#gui-firmware-browser
 - Upgrade the BIOS firmware using the following manual procedure:
http://www.cisco.com/en/US/docs/unified_computing/ucs/c/sw/bios/b_Upgrading_BIOS_Firmware.html#task_DD83FB75DB8C485FA4E8ED222C77BD3C

Verifying the CIMC Software Version

Use this procedure to verify that you have CIMC software Version 1.2.1(b) or higher installed on your Cisco Nexus 1010 or Cisco Nexus 1010-X.

BEFORE YOU BEGIN

Before beginning this procedure, you must know or do the following:

- You must have CIMC software Version 1.2.1(b) or higher installed.
- If CIMC software Version 1.2.1(b) or higher is installed, you will see the product ID N1K-C1010 on Cisco Nexus 1010 or the product ID N1K-C1010-X on Cisco Nexus 1010-X in the output of the **show hardware** command. This procedure includes steps for this verification.
- You are logged in to the Cisco Nexus 1010 or Cisco Nexus 1010-X from the CLI or a Web browser.

Step 1 From the Cisco Nexus 1010 or Cisco Nexus 1010-X do one of the following to display the product ID (PID):

Send document comments to nexus1k-docfeedback@cisco.com.

- From the CLI, view the output of the **show hardware** command. Look in the Switch Hardware ID information for the PID.
- From a WEB browser, open the Server Summary window and view the server properties. See [Figure 2-1](#) for an example.

Example:

```
DOCS-CPA# show hardware
switch# show hardware
unset
Software
  loader:      version unset
  kickstart:  version unset
  system:     version unset
  kickstart image file is: unset
  kickstart compile time: unset [unset]
  system image file is:   unset
  system compile time:   unset [unset]
```

Hardware

```
cisco unset ("unset")
unset with unset unset of memory.
Processor Board ID unset
```

```
Device name: unset
bootflash:      unset kB
Disk Storage capacity for VM virtual disks: 346264 MB
Number of physical 1Gbps ethernet ports: 6
Number of CPU Cores: 12
CPU Cores details:
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
model name      : Intel(R) Xeon(R) CPU           X5650 @ 2.67GHz
```

```
Kernel uptime is unset day(s), unset hour(s), unset minute(s), unset second(s)
```

plugin

```
Core Plugin, Ethernet Plugin, Virtualization Plugin
```

```
Switch hardware ID information
```

```
Switch is booted up
```

```
Switch type is : Nexus 1010 (Virtual Services Appliance) 2 slot Chassis
Model number is Nexus 1010
PID-VID-SN: N1K-C1010-A-1939956678133462692
```

```
Chassis has 2 Module slots
```

```
Module1 ok
```

Send document comments to nexus1k-docfeedback@cisco.com.

```

Module type is : Nexus 1010 (Virtual Services Appliance)
0 submodules are present
Model number is Nexus 1010
H/W version is A
UUID is 03BB2905-E130-DF11-68A1-68EFBDF61D42
Manufacture date is 03/29/2010
Serial number is QCI1410A4WG

Module2 ok
Module type is : Nexus 1010 (Virtual Services Appliance)
0 submodules are present
Model number is Nexus 1010
H/W version is A
UUID is 62ED8405-7031-DF11-4DA5-68EFBDF62300
Manufacture date is 03/29/2010
Serial number is QCI1410A4LP

```

Figure 2-1 CIMC Window with Product ID (PID)



Step 2 Do one of the following:

- If the PID displayed is N1K-C1010 on Cisco Nexus 1010 or N1K-C1010-X on Cisco Nexus 1010-X, you can proceed with the install or upgrade to Cisco Nexus 1010 Release 4.2(1)SP1(4).
- If the PID displayed is not N1K-C1010 on Cisco Nexus 1010 or N1K-C1010-X on Cisco Nexus 1010-X, do not install or upgrade to Release 4.2(1)SP1(4). Instead you must replace the Cisco Nexus 1010 using the RMA process.

Gathering Information About the Management Software

Before you begin the installation, you will need the following information for your Cisco Nexus 1010 or Cisco Nexus 1010-X:

- [Administrator Credentials](#), page 2-6
- [HA Redundancy Role](#), page 2-6

Send document comments to nexus1k-docfeedback@cisco.com.

- HA Redundancy States, page 2-7
- Domain ID, page 2-7
- Network Uplinks, page 2-7
- VLANs, page 2-8

Administrator Credentials

When you set up the system software, you are required to create an administrator password. [Table 2-1](#) lists password strength guidelines:

Table 2-1 Guidelines for strong passwords

Strong passwords have:	Strong passwords do NOT have:
<ul style="list-style-type: none"> • At least eight characters • Uppercase letters • Lowercase letters • Numbers • Special characters 	<ul style="list-style-type: none"> • Consecutive characters, such as “abcd” • Repeating characters, such as “aaabbb” • Dictionary words • Proper names

HA Redundancy Role

The Cisco Nexus 1010 product family is provided in redundant pairs for high availability. When setting up the device, you configure a high availability role—primary or secondary. [Table 2-2](#) describes these roles.



Note

The HA standalone role is not supported for the Cisco Nexus 1010 product family. Cisco Nexus 1010 is not supported in a non HA mode.

Table 2-2 HA Redundancy Roles

Role	Description
Primary	<ul style="list-style-type: none"> • The primary role coordinates the active/standby redundancy state with the secondary Cisco Nexus 1010. • The primary role takes precedence during bootup when negotiating active/standby redundancy state. That is, if the secondary Cisco Nexus 1010 is not in the active state at bootup, the primary Cisco Nexus 1010 takes the active redundancy state. • You assign the primary role to the first Cisco Nexus 1010 that you install in a dual system.
Secondary	<ul style="list-style-type: none"> • The secondary role coordinates the active/standby state with the primary Cisco Nexus 1010. • You assign the secondary role to the second Cisco Nexus 1010 that you install in a dual system.

Send document comments to nexus1k-docfeedback@cisco.com.

HA Redundancy States

Table 2-3 describes the HA redundancy states.

Table 2-3 HA Redundancy States

Redundancy State	Description
Active	<p>Controls the system and is visible to the outside world.</p> <p>The active system is remotely accessed through the network after initial setup.</p> <p>The user interface for managing the Cisco Nexus 1010 is only available through the active system.</p>
Standby	<p>Synchronizes its configuration with that of the active Cisco Nexus 1010 so that it is continuously ready to take over in case of a failure or manual switchover.</p> <p>You cannot use Telnet or Secure Shell (SSH) protocols to communicate with the standby Cisco Nexus 1010.</p> <p>The standby Cisco Nexus 1010 is not network addressable and is accessed through the serial port.</p> <p>The user interface for managing the Cisco Nexus 1010 is not available through the standby system.</p>

Domain ID

The primary and secondary Cisco Nexus 1010s use the domain ID to identify each other. The Cisco Nexus 1010s must be in the same switching domain, and share the same management IP address.

Network Uplinks

Cisco Nexus 1010 product family supports two types of network uplink configurations to connect to the network.

- **Flexible Network Uplink:** Flexible network configuration offers complete flexibility to connect the Cisco Nexus 1010 product family to the network and allows you to achieve a maximum of six uplinks.
- **Static Network Uplink :**In a static network configuration, the Cisco Nexus 1010 product family is connected to the network using four fixed network uplink configurations. See [Table 2-4Network Uplink Types, page 2-8](#).

As a result you can connect your system to the network using one of the following five supported uplink types.

- One uplink
- Two uplinks with common management and control traffic
- Two uplinks with common control and data traffic
- Three uplinks
- Flexible network uplink

Send document comments to nexus1k-docfeedback@cisco.com.



Note Once you configure an uplink type, the only way to modify it is to reload the software.

See the *Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(4)* for more information about network uplink types.

During the installation of Cisco Nexus 1010 product family you can setup the flexible network uplink type or the static network uplink type. After you set up the uplink type, you can change the uplink type only once. See the *Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(4)* for information about migrating the network uplink types.

[Table 2-4](#) shows the four supported network uplink types and the ports that carry each type of VLAN traffic.

Table 2-4 Network Uplink Types

Uplink type	Management VLAN	Control VLAN	Data VLAN
1	ports 1 and 2	ports 1 and 2	ports 1 and 2
2	ports 1 and 2	ports 1 and 2	ports 3-6
3	ports 1-2	ports 3-6	ports 3-6
4	ports 1-2	ports 3-4	ports 5-6
Flexible	There is no traffic segregation based on traffic class		

VLANs

Control, and management VLANs are used by the Cisco Nexus 1010 product family for management and communication with its virtual service blades. These VLANs are added as a part of the initial setup of the management software. Control and packet VLANs are also added to each virtual service blade when it is created. The management VLAN is inherited from the Cisco Nexus 1010 product family by each virtual service blade.

If you modify a control, packet, or management VLAN on the Cisco Nexus 1010 product family, the change is effective immediately. A reload is required to effect the change of control and management VLAN on Cisco Nexus 1010. However, for service continuity, you must configure the same control and packet VLANs on the hosted VSMs. Otherwise the Cisco Nexus 1010 loses communication with its VSMs.

This section includes the following additional topics:

- [Management VLAN, page 2-8](#)
- [Control VLAN, page 2-9](#)

Management VLAN

The management VLAN is the VLAN that forwards traffic for the management port of the Cisco Nexus 1010. If your virtual service blade uses the management class of traffic, it inherits the management VLAN from the Cisco Nexus 1010.

The management VLAN is used by the outside world to reach the Cisco Nexus 1010 management 0 interface. The Cisco Nexus 1010 and its hosted Cisco Nexus 1000V VSMs share the same management VLAN. Unlike the control and packet VLANs which are set when a virtual service blade is created, the management VLAN is inherited from the Cisco Nexus 1010 by all virtual service blades it hosts.

Send document comments to nexus1k-docfeedback@cisco.com.

Control VLAN

The control VLAN is a Layer 2 interface used for communication between the redundant Cisco Nexus 1010s. This interface handles low-level control packets such as heartbeats as well as any configuration data that needs to be exchanged between the Cisco Nexus 1010s.

Setting up the Primary Cisco Nexus 1010 or Cisco Nexus 1010-X

You can use this procedure to set up the management software for the following:

- The primary Cisco Nexus 1010 or Cisco Nexus 1010-X in a redundant HA pair

It is a recommended Cisco best practice to configure a primary Cisco Nexus 1010 or Cisco Nexus 1010-X with a secondary backup. Although you can configure a primary Cisco Nexus 1010 without a secondary backup, this configuration in a production environment is not supported.

BEFORE YOU BEGIN

- You have the following information available for this Cisco Nexus 1010:
 - Administrator password
 - HA role (primary or secondary)
If you do not specify an HA role, then the role is configured as primary.
 - Network uplink type
 - Control VLAN ID
 - Domain ID
 - Management VLAN ID
 - Management 0 IP address
This is the IP address of the management interface that appears as the mgmt0 port on the appliance.
 - Default gateway IP address
 - SSH service key type and number of key bits

DETAILED STEPS

Step 1 Use one of the following methods to log in to the Cisco Nexus 1010 or Cisco Nexus 1010-X CLI.

The setup wizard starts automatically.

- Login from a terminal server:

```
Example:  
telnet 172.25.182.99 2005  
Trying 172.25.182.99...  
Connected to 172.25.182.99.  
Escape character is '^]'  
switch#  
  
---- System Admin Account Setup ----  
Enter the password for "admin":  
Confirm the password for "admin":
```

- Login from a serial over LAN connection through CIMC:

Send document comments to nexus1k-docfeedback@cisco.com.

```

Example:
ssh admin@172.25.182.230
admin@172.25.182.230's password:
switch# connect host
CISCO Serial Over LAN:
Close Network Connection to Exit

---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":

```

Step 2 When asked, enter and confirm the Administrator password.

```

Example:
---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":

```

Step 3 When asked, enter the HA role. If you do not specify a role, then primary is assigned.

```

Example:
Enter HA role[primary/secondary]: primary

```



Note The HA standalone role is not supported for the Cisco Nexus 1010 product family. Cisco Nexus 1010 is not supported in a non HA mode

Step 4 When asked, enter the uplink type. To specify static network uplink, enter a value from 1-4. To specify flexible network uplink, enter the value 5.



Note Once you configure an uplink type, the only way to modify it is to reload the software.

```

Example:
Enter network-uplink type <1-5>:
  1. Ports 1-2 carry all management, control and data vlans
  2. Ports 1-2 management and control, ports 3-6 data
  3. Ports 1-2 management, ports 3-6 control and data
  4. Ports 1-2 management, ports 3-4 control, ports 5-6 data
  5. Flexible
5

```

Step 5 When asked, enter the VLAN ID for the control VLAN.

```

Example:
Enter control vlan <1-3967, 4048-4093>: 347

```

Step 6 When asked, enter control uplink type.

```

Example:
Enter control uplink <1-6>: 1

```

Step 7 When asked, enter the domain ID.

```

Example:
Enter the domain id<1-4095>: 3477

```

Step 8 When asked, enter the VLAN ID for the management VLAN.

Send document comments to nexus1k-docfeedback@cisco.com.

Example:

```
Enter management vlan<1-3967,4048-4093>: 180
```

Step 9 When asked, enter management uplink type.

Example:

```
Enter management uplink <1-6>: 2
```

Step 10 When you have completed this process, the Cisco Nexus 1010 software saves the configuration and automatically reboots to configure the network uplinks.


The new configuration is saved into nonvolatile storage, after which the running and the startup copies of the configuration are identical.

```
Saving boot configuration. Please wait...
```

```
[#####] 100%
System is going to reboot to configure network uplinks
```


After reboot, the default static or flexible topology will be configured. See [Figure 2-2](#) for default flexible network uplink configuration. For more information, see the *Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(4)*.

Figure 2-2 Default Flexible Network Uplink Configuration without vPC or VSS

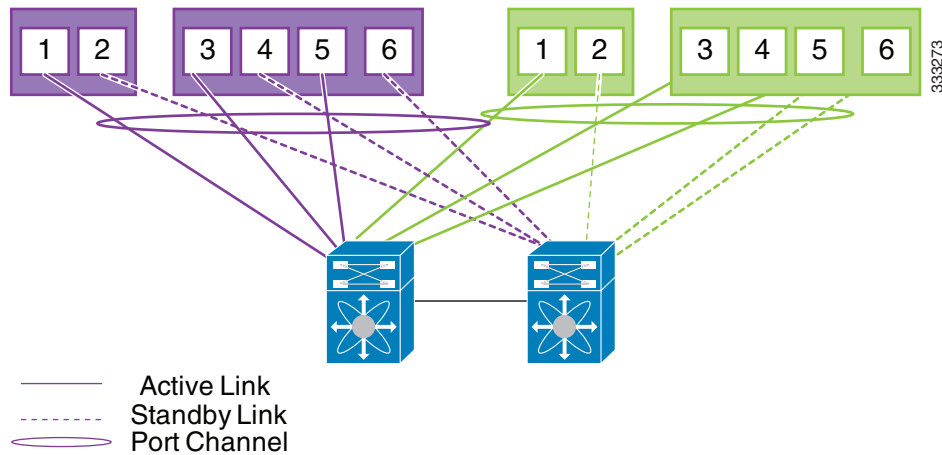

Send document comments to nexus1k-docfeedback@cisco.com.

Figure 2-3 Default Flexible Network Uplink Configuration with vPC or VSS

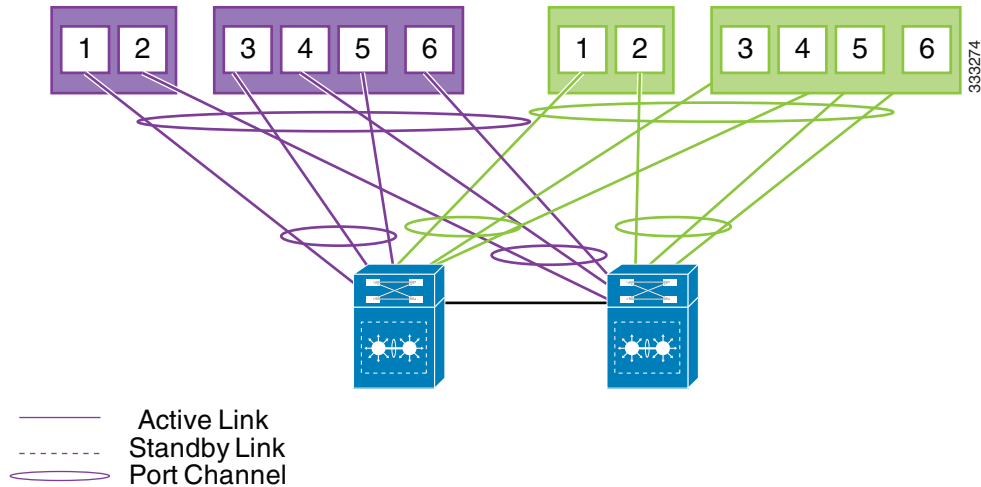

Step 11 When asked if you want to enter the basic configuration dialog, respond **yes**.

Example:

Would you like to enter the basic configuration dialog (yes/no): **yes**

---- Basic System Configuration Dialog ----

This setup utility will guide you through the basic configuration of the system. Setup configures only enough connectivity for management of the system.

*Note: setup is mainly used for configuring the system initially, when no configuration is present. So setup always assumes system defaults and not the current system configuration values.

Press Enter at anytime to skip a dialog. Use ctrl-c at anytime to skip the remaining dialogs.

Step 12 When asked to create another Login account, answer **no**.

Example:

Create another login account (yes/no) [n]: **no**

Step 13 When asked to configure a read-only SNMP community string, answer **no**.

Example:

Configure read-only SNMP community string (yes/no) [n]: **no**

Step 14 When asked to configure a read-write SNMP community string, answer **no**.

Example:

Configure read-write SNMP community string (yes/no) [n]:

Step 15 Enter a name for the appliance.

Example:

Enter the VSA name [Nexus1010]:

Step 16 When asked to configure out-of-band management, answer **yes** and then enter the management 0 IPv4 address.

This is the IP address of the management interface that appears as the mgmt0 port on the appliance.

Send document comments to nexus1k-docfeedback@cisco.com.

Example:

```
Continue with Out-of-band (mgmt0) management configuration? [yes/no] [y]: yes
Mgmt0 IPv4 address: 10.78.109.67
```

Step 17 When asked to configure the default gateway, answer **yes**.

Example:

```
Configure the default-gateway: (yes/no) [y]: yes
IPv4 address of the default gateway : 10.78.109.65
```

Step 18 When asked to configure advanced IP options, answer **no**.

Example:

```
Configure Advanced IP options (yes/no)? [n]: no
```

Step 19 When asked to enable the Telnet service, answer **yes**.

Example:

```
Enable the telnet service? (yes/no) [y]: yes
```

Step 20 When asked to enable the SSH service, answer **yes** and then enter the key type and number of key bits.

Example:

```
Enable the ssh service? (yes/no) [y]: yes
Type of ssh key you would like to generate (dsa/rsa) : rsa
Number of key bits <768-2048> : 1024
```

Step 21 When asked to configure the NTP server, answer **no**.

The configuration is summarized.

Example:

```
Configure NTP server? (yes/no) [n]: no
```

The following configuration will be applied:

```
Switchname n1010
interface Mgmt0
ip address 172.28.15.152 255.255.255.0
no shutdown
telnet server enable
ssh key rsa 1024 force
ssh server enable
svs-domain
control vlan 260
domain id 152
```

Step 22 Do one of the following:

- If you do not want to edit the configuration answer **no** and continue with the next step.
- If you want to edit the configuration, answer **yes** and return to [Step 12](#) to revisit each command.

Example:

```
Would you like to edit the configuration? (yes/no) [n]:no
```

Step 23 When asked to use and save this configuration, answer **yes**.

**Caution**

If you do not save the configuration now, then none of your changes are part of the configuration the next time the switch is rebooted. Enter **yes** to save the new configuration. This ensures that the kickstart and system images are also automatically configured.

Example:

```
Use this configuration and save it? (yes/no) [y]: yes
[#####] 100%
```

Send document comments to nexus1k-docfeedback@cisco.com.

The new configuration is saved into nonvolatile storage, after which the running and the startup copies of the configuration are identical.



Note You can use the setup routine to update the configuration done in [Step 12](#) through [Step 23](#) at any time by entering the **setup** command in EXEC mode. Once setup begins, press Enter to skip a command. Use ctrl-c to skip the remaining commands.

Step 24 You have completed this procedure. You can verify the configuration using the following command:

show running configuration

```
!Command: show running-config
!Time: Wed Mar  7 17:10:17 2012

version 4.2(1)SP1(4)
no feature telnet

username admin password 5 $1$SeEBgc65$mXwtmD2lscAbznFLkIRu0  role network-admin
banner motd #Nexus 1010#

ip domain-lookup
ip domain-lookup
hostname switch
snmp-server user admin network-admin auth md5 0xb64ad6879970f0e57600c443287a79f0 priv
0xb64ad6879970f0e57600c443287a79f0 localizedkey

vrf context management
vlan 1,231,423
port-channel load-balance ethernet source-mac
port-profile default max-ports 32

vdc switch id 1
  limit-resource vlan minimum 16 maximum 2049
  limit-resource monitor-session minimum 0 maximum 2
  limit-resource vrf minimum 16 maximum 8192
  limit-resource port-channel minimum 0 maximum 768
  limit-resource u4route-mem minimum 32 maximum 32
  limit-resource u6route-mem minimum 16 maximum 16
  limit-resource m4route-mem minimum 58 maximum 58
  limit-resource m6route-mem minimum 8 maximum 8
network-uplink type 1
interface GigabitEthernet1
interface GigabitEthernet2
interface GigabitEthernet3
interface GigabitEthernet4
interface GigabitEthernet5
interface GigabitEthernet6
  shutdown
interface PortChannel1
virtual-service-blade vsm-1
  virtual-service-blade-type name VSM-1.1
  interface control vlan 423
  interface packet vlan 423
  ramsize 2048
  disksize 3
  numcpu 1
  cookie 522855478
  no shutdown
interface VsbEthernet1/1
interface VsbEthernet1/2
interface VsbEthernet1/3
```

Send document comments to nexus1k-docfeedback@cisco.com.

```

virtual-service-blade vsm-2
  virtual-service-blade-type name VSM-1.1
  interface control vlan 423
  interface packet vlan 423
  ramsize 2048
  disksize 3
  numcpu 1
  cookie 824895200
  no shutdown

interface mgmt0

interface control0
line console
boot kickstart bootflash:/nexus-1010-kickstart-mz.4.2.1.SP1.3.41.bin
boot system bootflash:/nexus-1010-mz.4.2.1.SP1.3.41.bin
boot kickstart bootflash:/nexus-1010-kickstart-mz.4.2.1.SP1.3.41.bin
boot system bootflash:/nexus-1010-mz.4.2.1.SP1.3.41.bin
svs-domain
  domain id 1900
  control vlan 423
  management vlan 231
  svcs mode L2
vnm-policy-agent
  registration-ip 0.0.0.0
  shared-secret *****
  log-level info

```

Setting up the Secondary Cisco Nexus 1010 or Cisco Nexus 1010-X

You can use this procedure to set up the management software for the secondary Cisco Nexus 1010 or Cisco Nexus 1010-X in a redundant pair.

It is recommended to configure the same domain ID, uplink type, control VLAN, management VLAN, control uplink, management uplink for both primary and secondary 1010s.

DETAILED STEPS

Step 1 When asked, enter and confirm the Administrator password.

Example:

```

---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":

```

Step 2 When asked, enter the HA role.

Example:

```

Enter HA role[primary/secondary]: secondary

```

Step 3 When asked, enter the uplink type.

Send document comments to nexus1k-docfeedback@cisco.com.



Note Once you configure an uplink type, the only way to modify it is to reload the software.

Example:

```
Enter network-uplink type <1-5>:
  1. Ports 1-2 carry all management, control and data vlans
  2. Ports 1-2 management and control, ports 3-6 data
  3. Ports 1-2 management, ports 3-6 control and data
  4. Ports 1-2 management, ports 3-4 control, ports 5-6 data
  5. Flexible
5
```

Step 4 When asked, enter the VLAN ID for the control VLAN.

Example:

```
Enter control vlan <1-3967, 4048-4093>: 347
```

Step 5 When asked, enter control uplink type.

Example:

```
Enter control uplink <1-6>: 1
```

Step 6 When asked, enter the domain ID.

Example:

```
Enter the domain id<1-4095>: 3477
```

Step 7 When asked, enter the VLAN ID for the management VLAN.

Example:

```
Enter management vlan<1-3967,4048-4093>: 180
```

Step 8 When asked, enter management uplink type.

Example:

```
Enter management uplink <1-6>: 2
```

The following things occur on the switch:

- The new configuration is saved into nonvolatile storage, after which the running and the startup copies of the configuration are identical.
- The system reboots to configure the network uplinks.
- The system restarts and synchronizes its configuration with the primary Cisco Nexus 1000V.

Example:

```
Saving boot configuration. Please wait...
```

```
[#####] 100%
```

```
System is going to reboot to configure network uplinks
HA mode set to secondary. Rebooting now...
```

Step 9 You have completed this procedure. You can verify the configuration using the following command:
show running configuration.

Send document comments to nexus1k-docfeedback@cisco.com.

Example for Network Uplink Configuration

The following example shows how to configure flexible network uplink configuration during installation:

```

---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":
Enter HA role[primary/secondary]: secondary
-
Enter network-uplink type <1-5>:
1. Ports 1-2 carry all management, control and data vlans
2. Ports 1-2 management and control, ports 3-6 data
3. Ports 1-2 management, ports 3-6 control and data
4. Ports 1-2 management, ports 3-4 control, ports 5-6 data
5. Flexible
5
-
Enter control vlan <1-3967, 4048-4093>: 347
Enter control uplink <1-6>: 1
-
Enter the domain id<1-4095>: 3477
-
Enter management vlan <1-3967, 4048-4093>: 180
Enter management uplink <1-6>: 2
-
Saving boot configuration. Please wait...
[#####] 100%
System is going to reboot to configure network uplinks

```

The following example shows how to configure static network uplink configuration during installation:

```

---- System Admin Account Setup ----
Enter the password for "admin":
Confirm the password for "admin":
Enter HA role[primary/secondary]: secondary
-
Enter network-uplink type <1-5>:
1. Ports 1-2 carry all management, control and data vlans
2. Ports 1-2 management and control, ports 3-6 data
3. Ports 1-2 management, ports 3-6 control and data
4. Ports 1-2 management, ports 3-4 control, ports 5-6 data
5. Flexible
1
-
Enter control vlan <1-3967, 4048-4093>: 300
-
Enter the domain id<1-4095>: 300
-
Enter management vlan <1-3967, 4048-4093>: 233
-
Saving boot configuration. Please wait...
[#####] 100%
System is going to reboot to configure network uplinks

```

Send document comments to nexus1k-docfeedback@cisco.com.

Verifying the Cisco Nexus 1010 Configuration

To verify the Cisco Nexus 1010 configuration, use the following commands:

Command	Purpose
show running-configuration	Displays the Cisco Nexus 1010 running configuration. See Example 2-1 on page 2-18 .
show system redundancy status	Displays the redundancy state (active or standby) and the redundancy role (primary or secondary) for the Cisco Nexus 1010s. See Example 2-2 on page 2-19 .
show svcs domain	Displays the domain information for the Cisco Nexus 1010: See Example 2-3 on page 2-19 .
show network cdp neighbors	Displays uplink connectivity for the active or standby Cisco Nexus 1010. See Example 2-4 on page 2-19 .

Example 2-1 Setup Configuration

This example shows how to display and verify the Cisco Nexus 1010 setup configuration:

```
Nexus1010# show running-config
version 4.2(1)SV1(4)
username adminbackup password 5 $1$0ip/C5Ci$oOdx7oJS1BCFpNRmQK4na. role network-operator
username admin password 5 $1$ZMouammW$56jYJfpQuDJjDen5MABcW/ role network-admin
telnet server enable
ip domain-lookup
ip host Nexus1010 172.23.231.113
kernel core target 0.0.0.0
kernel core limit 1
system default switchport
snmp-server user admin network-admin auth md5 0xb64ad6879970f0e57600c443287a79f0 priv 0xb64ad6879970f0e57600c443287a79f0 localizedkey
snmp-server enable traps license
vrf context management
  ip route 0.0.0.0/0 172.23.231.1
switchname Nexus1010
vlan 1,231,233,280,300
vdc Nexus1010 id 1
  limit-resource vlan minimum 16 maximum 513
  limit-resource monitor-session minimum 0 maximum 64
  limit-resource vrf minimum 16 maximum 8192
  limit-resource port-channel minimum 0 maximum 256
  limit-resource u4route-mem minimum 32 maximum 80
  limit-resource u6route-mem minimum 16 maximum 48
network-uplink type 1

interface mgmt0
  ip address 172.23.231.113/24

interface control0
```

Send document comments to nexus1k-docfeedback@cisco.com.

```
boot kickstart bootflash:/nexus-1010-kickstart-mzg.4.2.1.SP1.3.bin
boot system bootflash:/nexus-1010-mzg.4.2.1.SP1.2.bin
boot kickstart bootflash:/nexus-1010-kickstart-mzg.4.2.1.SP1.3.bin
boot system bootflash:/nexus-1010-mzg.4.2.1.SP1.3.bin
svs-domain
  domain id 2801
  control vlan 300
  management vlan 233
  svs mode L2
```

Example 2-2 Redundancy Status

```
n1010# show system redundancy status
Redundancy role
-----
      administrative:  primary
      operational:    primary
Redundancy mode
-----
      administrative:  HA
      operational:    None
This supervisor (sup-1)
-----
      Redundancy state:  Active
      Supervisor state:  Active
      Internal state:   Active with no standby
Other supervisor (sup-2)
-----
      Redundancy state:  Not present
-----
n1010#
```

Example 2-3 Domain

```
n1010# show svs domain
SVS domain config:
  Domain id:    3555
  Control vlan: 305
  Management vlan: 233
  L2/L3 Control mode: L2
  L3 control interface: NA
  Status: Config not pushed to VC.
n1010#
```

Example 2-4 CDP neighbors (standby)

```
switch# n1010# show network cdp neighbors
...
Device-ID                Local Intrfce Hldtme Capability Platform      Port ID
-----
sfish-cat3k-K5-stack2 eth2                166    R T B S I r cisco WS-C375 GigabitEthernet1/0/23
switch#
```

[Send document comments to nexus1k-docfeedback@cisco.com.](mailto:nexus1k-docfeedback@cisco.com)

Getting Started With Cisco Nexus 1010

After you complete the software installation, you can configure the Cisco Nexus 1010 product family. See the *Cisco Nexus 1010 Software Configuration Guide, Release 4.2(1)SP1(4)* for more information.

The following are the basic steps in the software configuration process.

-
- Step 1** Configuring port channels for flexible network uplink. Use this procedure to configure port channels after you set up the flexible network uplink type.
- Step 2** Setting up remote management. Use this procedure to set up remote management in your startup configuration for use in recovering an unreachable Cisco Nexus 1010 or Cisco Nexus 1010-X.
- Step 3** Do one of the following to add a service blades to the new Cisco Nexus 1010 or Cisco Nexus 1010-X:
- Create a new virtual service blade.
 - Migrate an existing VSM from a VM to the Cisco Nexus 1010.
-

Feature History for Software Installation

This section provides the software installation and upgrade release history.

Feature Name	Releases	Feature Information
Flexible Network Uplink	4.2(1)SP1(4)	This feature was introduced.
Cisco Nexus 1010-X	4.2(1)SP1(3)	This hardware was introduced.
Software upgrade	4.2(1)SP1(2)	This feature was introduced.