

GENERAL MOTORS



UNLOCKING
TECHNOLOGY



**ADVANCED
DIAGNOSTICS**



CONTENTS

PAGE

A

APPLICATIONS

ADS102	OPEL/VAUXHALL/GM	3
ADS130	OPEL/VAUXHALL/GM CAN	4
ADS102	GM HOLDEN	5
ADS134	GM HOLDEN VY	6
ADS167	GM HOLDEN VE	6
ADS129	PIN CODE READING	7
ADS171	PIN CODE READING CAN	8

WWW.ADUSA.US

B

DIAGNOSTIC SOCKETS/OBD PORTS

VAUXHALL/OPEL/GM HOLDEN	9-10
-------------------------	------

C

GENERAL OPERATION

11

D

SPECIAL FUNCTIONS

12-25

E

TIPS & HINTS

26-29









WWW.ADUSA.US

APPLICATIONS

A

GENERAL MOTORS (ADS102)



				1234		PRO 		AD100 
AGILA	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
ARENA	1995 ⇨	✓	✓	✓	✓	ADC151	A	ADC110-B
ASTRA - F	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
ASTRA - G	1998 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
BLAZER	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
CALIBRA	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
CAVALIER	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
COMBO	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
CORSA - B	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
CORSA - C	2000 ⇨	✓	✓	✓	✓	ADC151	A	ADC110-B
FRONTERA	1995 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
FRONTERA-B	1999 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
MERIVA	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
MONTERAY	ALL	✓	✓	✓	✓*	ADC151	A	ADC110-B
MONARO	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
MOVANO	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
OMEGA - B	ALL	✓	✓	✓	✓*	ADC151	A	ADC110-B
S10	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
SINTRA	1997 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
TIGRA	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
TIGRA-B	2005 ⇨	✓	✓	✓	✓	ADC151	A	ADC110-B
VECTRA-B	1996 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
VIVARO	2002 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
VX220	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
ZAFIRA	1999 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
ZAFIRA-B	2006 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B

WWW.ADUSA.US

APPLICATIONS

A

GENERAL MOTORS CAN (ADS130)



WWW.ADVANCED-DIAGNOSTICS.CO.UK

				1234		PRO 		AD100
ASTRA - H	2003 ⇄	✓	✓	✓	@	ADC151	A	ADC110-B
CORSA—D	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
SIGNUM	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
VECTRA-C	2002 ⇄	✓	✓	✓	@	ADC151	A	ADC110-B
ZAFIRA-B	ALL	✓	✓	✓	@	ADC151	A	ADC110-B

WWW.ADUSA.US

WWW.ADVANCED-DIAGNOSTICS.CO.UK









WWW.ADUSA.US

APPLICATIONS

A

GM HOLDEN (ADS102)


HOLDEN

				1234		PRO 		AD100 
ASTRA - F	1995 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
ASTRA - G	1998 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
CALIBRA	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
COMBO	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
VR COMMODORE	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
VS COMMODORE	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
VT COMMODORE	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
VX COMMODORE	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
BARINA—B	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
BARINA—C	2000 ⇨	✓	✓	✓	✓	ADC151	A	ADC110-B
FRONTERA	1995 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
JACKAROO	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
MERIVA	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
MONTERAY	1996 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
OMEGA - B	ALL	✓	✓	✓	✓*	ADC151	A	ADC110-B
RODEO	ALL	✓	✓	✓	@	ADC151	A	ADC110-B
SINTRA	1997 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
TIGRA	1995 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
TIGRA-B	2005 ⇨	✓	✓	✓	✓	ADC151	A	ADC110-B
VECTRA-B	1996 ⇨	✓	✓	✓	✓*	ADC151	A	ADC110-B
VU Ute	ALL	✓	✓	✓	✓	ADC151	A	ADC110-B
WH STATESMAN	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
WH CAPRICE	ALL	✓	✓	✓	✓	ADC151	H	ADC110-B
ZAFIRA	1999 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B
ZAFIRA-B	2006 ⇨	✓	✓	✓	@	ADC151	A	ADC110-B

WWW.ADUSA.US

APPLICATIONS

A

GM HOLDEN/VY (ADS134)



HOLDEN

WWW.ADVANCED-DIAGNOSTICS.CO.UK

				1234		PRO 		AD100
VY COMMODORE	ALL	✓	✓	✓	✓	ADC151	K	ADC110-B
MONARO	ALL	✓	✓	✓	✓	ADC151	K	ADC110-B

GM HOLDEN/VE (ADS167)*



HOLDEN

WWW.ADVANCED-DIAGNOSTICS.CO.UK

				1234		PRO 		AD100
VE COMMODORE	ALL	✓	✓	✓	✓	ADC151	K	×
ANATARA	ALL	✓	✓	✓	✓	ADC151	K	×
CAPTIVA	ALL	✓	✓	✓	✓	ADC151	K	×

* = PRO ONLY

WWW.ADVANCED-DIAGNOSTICS.CO.UK

WWW.ADVANCED-DIAGNOSTICS.CO.UK

APPLICATIONS

A

GENERAL MOTORS PIN CODE READING (ADS129)








		
MERIVA	ALL	✓
CORSA-C	ALL	✓
TIGRA-B	ALL	✓
ARENA	1995 ⇨	✓*
ASTRA - F	1995⇨2001	✓*
ASTRA - G	X16XE X14XE X16XEL X16XE X16	✓
CALIBRA	1995⇨1996	✓*
CALIBRA	1997⇨	✓*
CAVALIER	1995⇨	✓*
CORSA - B	1995⇨	✓*
CORSA-B	X16XE X14XE X16XEL X16XE X16	✓
MONTERAY	1996⇨1997	✓*
OMEGA - B	1994⇨1995	✓*
OMEGA - B	1996⇨	✓*
SINTRA	1997⇨	✓*
TIGRA	1995	✓*
TIGRA	1996⇨	✓*
VECTRA-B	1996⇨	✓*
VECTRA-B	X16XE X14XE X16XEL X16XE X16	✓

✓* = Will read pin code on certain fixed code immobilisers.

GENERAL MOTORS CAN PIN CODE READING



WWW.ADVANCED-DIAGNOSTICS.CO.UK

				
ASTRA - H*	2004 ⇨	✓	ADC151	E
ASTRA - H + PEPS*	2004/7⇨	✓	ADC151	E
CORSA—D*	2007 ⇨	✓	ADC151	K
SIGNUM*	2002 ⇨	✓	ADC151	E
VECTRA-C*	2002 ⇨	✓	ADC151	E
ZAFIRA-B*	2005 ⇨	✓	ADC151	E
ZAFIRA-B + PEPS*	2007 ⇨	✓	ADC151	

* = Except for CID systems.


WWW.ADVANCED-DIAGNOSTICS.CO.UK

WWW.ADUSA.US

DIAGNOSTIC SOCKETS/PORTS

B

OPEL/VAUXHALL/GMHOLDEN

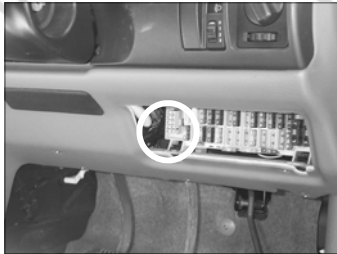


ASTRA F



CAVALIER



CORSA-B

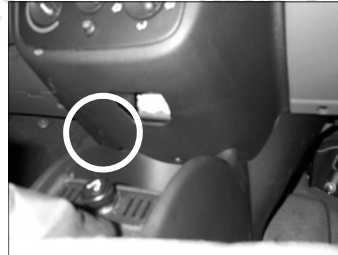


CORSA-C




FRONTERA



SENATOR

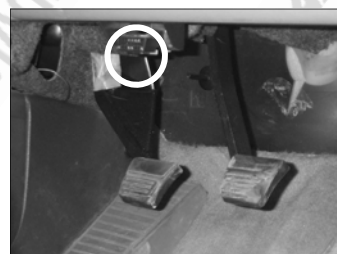

SINTRA

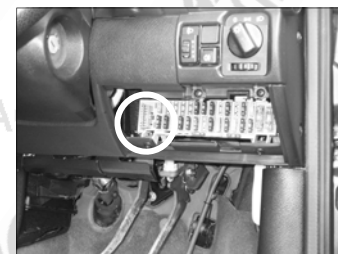

TIGRA




VECTRA B



VECTRA C



VIVARO

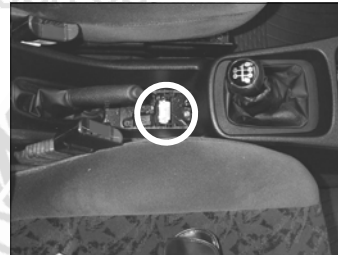

ZAFIRA

DIAGNOSTIC SOCKETS/PORTS

B

OPEL/VAUXHALL/GMHOLDEN



ASTRA G



AGILA



TIGRA-B



MOVANO



MERIVA



ZAFIRA-B



CORSA - D



VX 220

GENERAL OPERATION

Introduction

The General Motors Immobiliser is used in conjunction with the vehicle engine management electronics to immobilise the vehicle. The first systems were fitted to Petrol vehicles and subsequently fitted to Diesel vehicles from 95½ Model Year.

The immobiliser system is independent, and can be diagnosed separately. The system is also operated independently from the central locking system, and it's main function is to inhibit starting.

Immobiliser Control Unit

The immobilisers function is to transmit the start signal to the engine management ECU after it has read the transponder code. If the code is recognised the immobiliser sends the signal and the ECU compares the code with what is programmed. If the signal is incorrect the engine which is allowed to start initially is then switched OFF. If there is a malfunction then the engine check light mounted in the instrument panel will flash.

The system uses what is called an IMO (Immobiliser Signal Code) signal to talk to the electronic engine management system, or for Diesel vehicles the Fuel Cut-off Solenoid.

The control unit can only be re-programmed if the necessary security code is entered, which is found on the customer vehicle information card (CAR PASS).

NOTE : If a new immobiliser ECU is fitted to the vehicle, then the code that is entered will be stored in the memory for any future programming requirements.

If a different code is used to that on the CAR PASS, please ensure this is written down and passed to the customer for safe keeping.

It is not possible to change this code once programmed.

Transponder (Mounted in key fob)

The key fob contains a small electronic circuit (Transponder) which is powered when in close proximity to the control unit using cordless voltage power. Each transponder has a different code for security.

Car Pass

The information that is stored in the control unit includes Security Code, Engine type and transponder code. The security code cannot be erased or overwritten using the TECH 1, TECH 2 or the AD PROGRAMMING SYSTEM.

The security code consists of a 4-digit number and can be found on the car pass. If a new control unit is fitted, the new unit is not programmed with a code, and must be programmed using the TECH or AD PROGRAMMING SYSTEM. However, the security code can only be programmed once and cannot be erased or overwritten.

If the customer has lost the car pass with security details, then the pin code must be sought from the dealer.

VIN	X382787CWDKJW
Security Code	4874
Engine Type No	X16SZ
Key No.	4386413
Radio Code	1234
CD Changer Code	1234

NOTE : The immobiliser receiver must be reprogrammed when it has been replaced

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—EARLY SYSTEMS

PROGRAM KEYS

VEHICLE SELECTION

- + GENERAL MOTORS
- + LANCIA**
- + NISSAN
- + PEUGEOT
- + ROVER
- + SUZUKI

PROGRAM KEYS

DIAGNOSTIC MENU

- ECU IDENTIFICATION
- FAULT CODES**
- LIVE DATA
- SPECIAL FUNCTIONS

PRESS ENTER KEY

PROGRAM KEYS

ERASING KEYS

- ERASING KEY : 1
- ERASING KEY : 2
- ERASING KEY : 3
- ERASING KEY : 4
- ERASING KEY : 5

VEHICLE SELECTION

- EURO
- AUS
- S.AMERICA

DIAGNOSTIC MENU

- CLEAR KEYS
- PROGRAM KEYS**
- READ PINCODE
- PROG. MECH. KEY.CODE
- PROGRAM IMMOBILISER

NOTE : ALL KEYS ARE NOW ERASED.

VEHICLE SELECTION

- IMMOBILISER**
- REMOTE FUNCTION
- EMS
- READ PINCODE

SWITCH IGNITION OFF
AND THEN PRESS ENTER

DIAGNOSTIC MENU

- CLEAR KEYS
- PROGRAM KEYS**
- READ PINCODE
- PROG. MECH. KEY.CODE
- PROGRAM IMMOBILISER

VEHICLE SELECTION

- AGILA
- ASTRA F 95
- ASTRA F 96**
- ASTRA G 98+
- ASTRA H
- CALIBRA 95

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

SWITCH IGNITION ON

PRESS ENTER KEY

SECURITY CODE

1 2 3 4

x

✓

SECURITY CODE

1 2 3 4

x

✓

ECU IDENTIFICATION

ECU NO : EB 24418925
KEY NO. : S1234
VIN : W0L00073T12345

PRESS ENTER KEY

ACCESS GAINED

ACCESS GAINED

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—EARLY SYSTEMS

PROGRAM KEYS

SWITCH IGNITION OFF
AND THEN PRESS ENTER

PROGRAMMING KEYS

INSERT NEW KEY

SWITCH IGNITION ON
AND THEN PRESS ENTER

KEY PROGRAMMED

SWITCH IGNITION OFF
AND THEN PRESS ENTER

PRESS BACK TO EXIT
ENTER-PROG. MORE KEYS

READ PINCODE

DIAGNOSTIC MENU

CLEAR KEYS

PROGRAM KEYS

READ PINCODE

PROG. MECH. KEY.CODE

PROGRAM IMMOBILISER

RESET IMMOBILISER

DISCONN. IMMO. UNIT
FROM THE VEHICLE

PRESS ENTER KEY

NOTE : IT IS IMPORTANT
THAT YOU MAKE SURE THE
IMMOBILISER ECU IS
DISCONNECTED AS
INSTRUCTED BEFORE YOU
TRY TO READ THE PIN CODE,
OTHERWISE PIN CODE
READING WILL NOT BE
POSSIBLE !!!

RESET IMMOBILISER

RECONNECT. IMM. UNIT
TO THE VEHICLE

PRESS ENTER KEY

PINCODE

1 2 3 4

PRESS ENTER KEY

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—PIN READ BY ENGINE

READ PINCODE

VEHICLE SELECTION

IMMOBILISER
 REMOTE FUNCTION
 EMS
 READ PINCODE

READ PINCODE

WEB SECURITY

PLEASE GAIN
 AUTHORISATION
 FROM AD
 OUTCODE : 12345678

PINCODE

.....
 1 2 3 4

PRESS ENTER KEY

PRESS ENTER KEY

VEHICLE SELECTION

CORSA-C
 CORSA-D
 MERIVA
 TIGRA B
Z16XE
 Z16SE

NOTE : TO GET A RESPONSE
 CODE, PLEASE USE THE
 VAUXHALL/OPEL CODED ON
 THE AD WEB SITE.

YOU WILL NEED YOUR
 USERNAME, PASSWORD,
 TESTER SERIAL NUMBER AND
 PASSCODE.

SWITCH IGNITION ON

PRESS ENTER KEY

RESPONSE CODE

1	2	3	4	5
6	7	8	9	0

ECU IDENTIFICATION

VIN : W0L012345K123456
 ECU NO : Z16XE

PRESS ENTER KEY

WEB SECURITY

12345678

x

✓

DIAGNOSTIC MENU

ECU IDENTIFICATION
SPECIAL FUNCTIONS

PRESS ENTER KEY

ACCESS GAINED
 PLEASE WAIT

DIAGNOSTIC MENU

READ PINCODE

PRESS ENTER KEY

SEARCHING FOR CODE
 PLEASE WAIT

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—CAN BUS

PROGRAM KEYS

VEHICLE SELECTION

- + GENERAL MOTORS
- + LANCIA**
- + NISSAN
- + PEUGEOT
- + ROVER
- + SUZUKI

PROGRAM KEYS

DIAGNOSTIC MENU

- ECU IDENTIFICATION
- FAULT CODES**
- LIVE DATA
- SPECIAL FUNCTIONS

PRESS ENTER KEY

PROGRAM KEYS

ACCESS GAINED

PRESS ENTER KEY

VEHICLE SELECTION

- EURO
- AUS
- S.AMERICA

DIAGNOSTIC MENU

- CLEAR KEYS
- PROGRAM KEYS**
- MECHANICAL NUMBER

WWW.ADUSA.US

CLEAR KEYS

IGN. KEY OFF. THEN ON

PRESS ENTER KEY

VEHICLE SELECTION

- IMMOBILISER
- REMOTE FUNCTION
- EMS
- READ PINCODE

CLEAR KEYS

WARNING
ALL KEYS WILL
BE CLEARED
CONTINUE

YES=ENTER NO=BACK

CLEAR KEYS

SUCCESSFUL

PRESS ENTER KEY

VEHICLE SELECTION

- AGILA
- ASTRA F 95
- ASTRA F 96
- ASTRA G 98+
- ASTRA H
- CALIBRA 95

CLEAR KEYS

PLEASE WAIT
CLEARING KEYS

DIAGNOSTIC MENU

- CLEAR KEYS
- PROGRAM KEYS**
- MECHANICAL NUMBER

SWITCH IGNITION ON

PRESS ENTER KEY

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

PROGRAM KEYS

MAX 5 KEYS
TO BE PROGRAMMED

PRESS ENTER KEY

GM CAN

PRESS ENTER KEY

SECURITY CODE

1 2 3 4

x

✓

PROGRAM KEYS

PLEASE INSERT
KEY No 1
AND TURN ON
IGNITION

PRESS ENTER KEY

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—CAN BUS

PROGRAM KEYS

ACCESS GAINED

PRESS ENTER KEY

PROGRAM KEYS

NEW KEY WITH
VIRGIN TRANSPONDER

YES = ENTER NO = BACK

NOTE : IF THE KEYS ARE NEW
KEYS AND NOT PROGRAMMED
BEFORE THEN SELECT YES.

ANY EXISTING KEYS BEING
PROGRAMMED BACK IN THEN
PRESS NO.

PROGRAM KEYS

IGN. KEY OFF. THEN ON

PRESS ENTER KEY

PROGRAM KEYS

PROGRAM KEY No 1

SUCCESSFUL

WOULD YOU LIKE TO

PROGRAM KEY No 2

YES=ENTER NO=BACK

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—CORSA D

PROGRAM KEYS

VEHICLE SELECTION

+ GENERAL MOTORS
+ LANCIA
 + NISSAN
 + PEUGEOT
 + ROVER
 + SUZUKI

VEHICLE SELECTION

EURO
 AUS
 S.AMERICA

VEHICLE SELECTION

IMMOBILISER
REMOTE FUNCTION
 EMS
READ PINCODE

VEHICLE SELECTION

AGILA
 ASTRA F 95
 ASTRA F 96
 ASTRA G 98+
ASTRA H
 CORSA D

SWITCH IGNITION ON

PRESS ENTER KEY

ECU IDENTIFICATION

CORSA D

PRESS ENTER KEY

PROGRAM KEYS

DIAGNOSTIC MENU

ECU IDENTIFICATION
FAULT CODES
 SPECIAL FUNCTIONS

PRESS ENTER KEY

DIAGNOSTIC MENU

PROGRAM KEYS
ERASE KEYS
 MECHANICAL NUMBER

WWW.ADUSA.US

CLEAR KEYS

WARNING
 ALL KEYS WILL
 BE CLEARED
 CONTINUE

OK=ENTER CLEAR=BACK

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

SECURITY CODE

1 2 3 4

x

✓

ACCESS GAINED

PRESS ENTER KEY

PROGRAM KEYS

CLEAR KEYS

IGN. KEY OFF. THEN ON

PRESS ENTER KEY

CLEAR KEYS

SUCCESSFUL

PRESS ENTER KEY

DIAGNOSTIC MENU

PROGRAM KEYS
ERASE KEYS
 MECHANICAL NUMBER

PROGRAM KEYS

MAX 5 KEYS
 TO BE PROGRAMMED

PRESS ENTER KEY

PROGRAM KEYS

PLEASE INSERT
 KEY No 1
 AND TURN
 IGNITION ON

PRESS ENTER KEY

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—CORSA D

PROGRAM KEYS

SECURITY CODE

1 2 3 4

X

ACCESS GAINED

PRESS ENTER KEY

PROGRAM KEYS

NEW TRANSPONDER ?

YES=ENTER NO=BACK

PROGRAM KEYS

IGN. KEY OFF. THEN ON

PRESS ENTER KEY

PROGRAM KEYS

PROGRAM KEY No 1
SUCCESSFUL

WOULD YOU LIKE TO
PROGRAM KEY No 2

YES=ENTER NO=BACK

READ PIN CODE

VEHICLE SELECTION

IMMOBILISER
REMOTE FUNCTION
EMS
READ PINCODE

VEHICLE SELECTION

CORSA-C
CORSA-D
MERIVA
TIGRA B
Z16XE
Z16SE

SWITCH IGNITION ON

PRESS ENTER KEY

ECU IDENTIFICATION

VIN : W0L012345K123456

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION
SPECIAL FUNCTIONS

PRESS ENTER KEY

DIAGNOSTIC MENU

READ PINCODE

PRESS ENTER KEY

READ PIN CODE

PINCODE

PLEASE WAIT

.....

1 2 3 4

PRESS ENTER KEY

SPECIAL FUNCTIONS

GM HOLDEN VE/CAPTIVA

PROGRAM KEYS

VEHICLE SELECTION

+ GENERAL MOTORS
+ LANCIA
 + NISSAN
 + PEUGEOT
 + ROVER
 + SUZUKI

VEHICLE SELECTION

EURO
AUS
 S.AMERICA

VEHICLE SELECTION

IMMOBILISER
 REMOTE FUNCTION
 EMS
 READ PINCODE

VEHICLE SELECTION

VECTRA
 VIVA
VE COMMODORE
 VR COMMODORE
 VS COMMODORE

SWITCH IGNITION ON

PRESS ENTER KEY

ECU IDENTIFICATION

TYPE 4

PRESS ENTER KEY

PROGRAM KEYS

DIAGNOSTIC MENU

ECU IDENTIFICATION
 FAULT CODES
 SPECIAL FUNCTIONS

PRESS ENTER KEY

DIAGNOSTIC MENU

MODULE INFORMATION
PROGRAM KEYS

MODULE INFORMATION

H/WARE : 96673458
 S/WARE : 15928498

PRESS ENTER KEY

DIAGNOSTIC MENU

MODULE INFORMATION
PROGRAM KEYS

PROGRAM KEYS

PLEASE WAIT
 12 MINUTES
 TIME ELAPSED 0 0

PROGRAM KEYS

PROCEDURE COMPLETE
 DISCONNECT TESTER
 CYCEL KEYS

PROGRAM REMOTES

VEHICLE SELECTION

IMMOBILISER
 REMOTE FUNCTION
 EMS
 READ PINCODE

VEHICLE SELECTION

VECTRA
 VIVA
VE COMMODORE
 VR COMMODORE
 VS COMMODORE

SWITCH IGNITION ON

PRESS ENTER KEY

MODULE INFORMATION

H/WARE : 96673458
 S/WARE : 15928498

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION
 FAULT CODES
 SPECIAL FUNCTIONS

DIAGNOSTIC MENU

PROGRAM REMOTES
 ERASE REMOTES

SPECIAL FUNCTIONS

D

GM HOLDEN VE/CAPTIVA

PROGRAM KEYS

PRESS AND HOLD LOCK_UNLOCK
BUTTONS ON EACH KEY AND
WAIT FOR CHIME

SPECIAL FUNCTIONS

GM HOLDEN VY

PINCODE READ

VEHICLE SELECTION

- + GENERAL MOTORS
- + LANCIA**
- + NISSAN
- + PEUGEOT
- + ROVER
- + SUZUKI

PINCODE READ

MECHANICAL NUMBER

H1234

RADIO CODE

1234

PRESS ENTER KEY

PROGRAM KEYS

DIAGNOSTIC MENU

PROGRAM KEY

READ PINCODE

VEHICLE SELECTION

- EURO
- AUS**
- S.AMERICA

DIAGNOSTIC MENU

ECU IDENTIFICATION

FAULT CODES

LIVE DATA

ACTUATORS

SPECIAL FUNCTIONS

PRESS ENTER KEY

SECURITY CODE

6 DIGIT PINCODE

NEEDS TO BE ENTERED

IF PINCODE IS LESS THAN

6 DIGITS THEN INSERT ZERO

BEFORE ENTERING PINCODE

PRESS ENTER KEY

VEHICLE SELECTION

- IMMOBILISER**
- REMOTE FUNCTION
- EMS
- READ PINCODE

DIAGNOSTIC MENU

PROGRAM KEY

READ PINCODE

SECURITY CODE

VEHICLE SELECTION

- VECTRA
- VIVA
- VE COMMODORE
- VR COMMODORE
- VS COMMODORE
- VY SERIES 1**

SECURITY CODE

6 DIGIT PINCODE

NEEDS TO BE ENTERED

IF PINCODE IS LESS THAN

6 DIGITS THEN INSERT ZERO

BEFORE ENTERING PINCODE

PRESS ENTER KEY

SECURITY CODE

1 2 3 4 5 6

X

✓

SWITCH IGNITION ON

PRESS ENTER KEY

READ PINCODE

PINCODE : 123456

PRESS ENTER KEY

PROGRAMMING KEY

NOTE : FOR ADDITIONAL KEYS REPEAT PROGRAMMING PROCEDURE.

SPECIAL FUNCTIONS

GM PIN CODE READING CAN BUS

PINCODE READ

VEHICLE SELECTION

- + GENERAL MOTORS
- + LANCIA**
- + NISSAN
- + PEUGEOT
- + ROVER
- + SUZUKI

PINCODE READ

DIAGNOSTIC MENU

READ PINCODE

VEHICLE SELECTION

- EURO
- AUS
- S.AMERICA

PINCODE

1234

PRESS ENTER KEY

VEHICLE SELECTION

- IMMOBILISER
- REMOTE FUNCTION
- EMS
- READ PINCODE**

VEHICLE SELECTION

- ASTRA H
- CORSA-C
- CORSA-D
- MERIVA
- TIGRA B
- VECTRA C

SWITCH IGNITION ON

PRESS ENTER KEY

DIAGNOSTIC MENU

- ECU IDENTIFICATION
- SPECIAL FUNCTIONS**

PRESS ENTER KEY

SPECIAL FUNCTIONS

GM PIN CODE READING CAN BUS

PIN reading is done from the vehicle's Info display; there are many versions of the info display. We currently work with Dual and Triple (info displays) – here are some examples:


DID



TID



We do **NOT** read the PIN from Siemens 0400 or CID (colour):

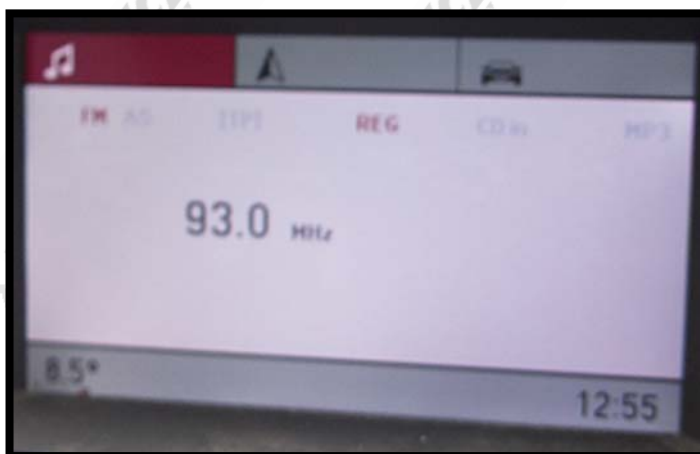

The PIN code is 4 digits

The control unit can be locked by incorrect PIN entry. If this happens the tester will report the lock time when you attempt to program keys.

All systems have the transponder programmed at the same time as the remote

"Incorrect conditions" displayed on tester is an indication that there is a key issue. Either you are trying to code an existing key or there is a transponder anomaly. To read a mechanical key number, it will be necessary to read the PIN code and then to force the ignition on to gain access to the CIM. You will need to contact Tech Support for this.

NOTE: To enable the PIN to be read, the Info Display **MUST** be awake – turn ON the radio !

NOTE: Many of the functions available on the tester are only valid once a PIN code has been entered; therefore reading a PIN must be done first.

NOTE: A token will be taken for reading the PIN and another token will be taken for key programming

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—PROXIMITY

PROGRAM PROX

VEHICLE SELECTION

+ GENERAL MOTORS
+ LANCIA
 + NISSAN
 + PEUGEOT
 + ROVER
 + SUZUKI

PROGRAM PROX

ECU IDENTIFICATION

VIN : W0L0AHL0885154702

PRESS ENTER KEY

PROGRAM PROX

PROGRAM KEYS

PRESS START STOP

PRESS ENTER KEY

VEHICLE SELECTION

EURO
 AUS
 S.AMERICA

DIAGNOSTIC MENU

ECU IDENTIFICATION
SPECIAL FUNCTIONS

PRESS ENTER KEY

PROGRAM KEYS

PRESS START STOP
 IS IGNITION ON ?

X

VEHICLE SELECTION

IMMOBILISER
REMOTE FUNCTION
 EMS
 READ PINCODE

DIAGNOSTIC MENU

PROGRAM KEYS

PROGRAM KEYS

PLEASE WAIT
 19 Sec.

VEHICLE SELECTION

AGILA
 ASTRA F 95
 ASTRA F 96
 ASTRA G 98+
ASTRA H
 CALIBRA 95

PROGRAM KEYS

KEYS NOT AVAILABLE
 WILL BE DELETED
 DO YOU WANT TO
 CONTINUE ?

X

PROGRAM KEYS

HOLD REMOTE NEAR CIM
 PRESS LOCK
 FOR HALF SECOND AND
 RELEASE

VEHICLE SELECTION

MECHANICAL KEY
I-KEY

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

NOTE : THE CIM IS LOCATED
 BEHIND THE STEERING
 COLUMN.

PRESS START STOP

PRESS ENTER KEY

SECURITY CODE

1 2 3 4

X

PROGRAM KEYS

DO YOU WANT TO
 PROGRAM MORE KEYS

X

SPECIAL FUNCTIONS

VAUXHALL/OPEL/GM—PROXIMITY

PROGRAM PROX

PROGRAM KEYS

HOLD REMOTE NEAR CIM

PRESS LOCK
FOR HALF SECOND AND
RELEASE

PROGRAM KEYS

DO YOU WANT TO
PROGRAM MORE KEYS

X

✓

SWITCH IGNITION OFF

PRESS ENTER KEY

SWITCH IGNITION ON

PRESS ENTER KEY

SWITCH IGNITION OFF

PRESS ENTER KEY

PROCEDURE COMPLETE

PRESS ENTER KEY

HOLDEN CAPTIVA

Immobiliser Description and Operation

Vehicle Theft Deterrent (VTD) – Immobiliser

The vehicle theft deterrent (VTD) system functions are provided by the body control module (BCM). When an ignition key is inserted into the ignition lock cylinder and the ignition is switched ON, the BCM supplies battery voltage to the theft deterrent exciter module. The transponder embedded in the head of the key is energized by the theft deterrent exciter module which is surrounding the ignition lock cylinder. The energised transponder transmits a signal that contains its unique value, which is received by the theft deterrent exciter module. The BCM monitors the theft deterrent exciter module for the transponder value via the security system sensor signal circuit. The BCM then compares this value to a value stored in memory, learned key code. If the value is correct the BCM sends the fuel continue password via the serial data circuit to the powertrain control module (PCM). If the transponders value is incorrect the BCM will send the fuel disable password to the PCM via the serial data circuit. The components of the VTD system are as follows:

- Theft deterrent module (TDM)
- Body control module (BCM)
- Ignition key (Transponder)
- Security indicator

Theft Deterrent Module (TDM) Immobiliser

Vehicles with steering column mounted ignition switches have the exciter integral with the theft deterrent module (TDM), which is located within the steering column. The TDM can learn up to 10 keys (transponder values).

The TDM uses the following inputs: battery voltage, ignition switched voltage and ground circuit. The theft deterrent control module uses the following outputs:

Password exchange and challenge/response with the engine control module (ECM).

When an ignition key is inserted into the ignition lock cylinder and the ignition is switched ON, the transponder embedded in the head of the key is energized by the exciter coils surrounding the ignition lock cylinder. The energized transponder transmits a signal that contains its unique value, which is received by the theft deterrent control module. The theft deterrent control module then compares this value to the learned key code stored in memory. The theft deterrent control module then performs one of the following functions:

If the transponder value matches the values stored in the TDM memory, the TDM will send the fuel enable message to the ECM via the serial data circuit.

If the transponders unique value does not match the value stored in the TDM, the TDM will send the fuel disable message to the ECM via the serial data circuit.

If the transponders unique value does not match the value stored in the TDM, the TDM will send the fuel disable message to the ECM via the serial data circuit.

If the TDM is unable to measure the ignition key transponder value, the TDM will not send any messages to the ECM.

Engine Control Module (ECM)

When the engine control module (ECM) receives the theft deterrent module (TDM) fuel enable password, the ECM will challenge the password. The ECM sends this challenge back to the TDM via the serial data circuit. Both the ECM and TDM perform a calculation on this challenge. If the calculated response from the TDM equals the calculation performed by the ECM, the ECM will allow vehicle starting. The ECM will disable vehicle starting if any of the following conditions occur:

- The fuel enable password is invalid
- The fuel disable password is sent by the TDM.
- No passwords are received--There is no communication with the TDM.
- The TDM calculated response to the challenge does not equal the calculation performed by the ECM

The Ignition Key (Transponder)

The ignition key for Passkey III+ (PK3+) equipped vehicles is a standard ignition key with a transponder located in the plastic head of the key. The transponder value is fixed and unable to be changed. The vehicle theft deterrent (VTD) system uses the ignition key transponder value to determine if a valid ignition key is being used to start the vehicle. There are approximately 3 trillion possible transponder values.

Fleet keys allow full access to the vehicle just as a master key would. However, unlike a master key which may only learn 10 keys to a particular vehicle, an unlimited number of fleet keys may be learned to the vehicle. Fleet keys are only used in vehicles configured for police fleet use.

Start the vehicle

Lock / unlock all of the door locks and rear compartment

Lock / unlock all of the storage compartments

Security Indicator

The theft deterrent module (TDM) can command the clock to illuminate the security indicator only when the ignition key is in the ON position. The TDM will command the security indicator be illuminated any time a fault is noted in the VTD system and when engine starting is disabled.

HOLDEN VE

An overview to the security system in the VE is provided below.

The Transponder Key utilised by the VE series Commodore is a conventional type with a Philips Crypto ID 46 chip. The key maybe either fixed blade or flip blade in design. A minimum of two (2) transponder keys must be programmed to the VE series. Failure to program 2 keys will result in

- (1) A 'vehicle immobilized' message being displayed on the Driver Information Center. The vehicle will start even though this immobilized status is displayed.
- (2) Not all previous keys will be deleted from the system.

The Remote Keyless Entry is programmed separate to the transponder key. The remote includes lock, unlock, boot release and panic functions. The remote programming function in the diagnostic tool menu allows for both the adding and erasing of remotes. Note if the alarm is triggered the remote may need to be programmed before the transponder key, failure to do so may result in communications failure and failed transponder key programming.

There are a number of components in the Vehicle Theft Deterrent (VTD) system which include

The Theft Deterrent Module (TDM) is located in the steering column by the ignition incorporating the coil. The TDM can learn a maximum of 10 individual transponder keys.

Engine Control Module (ECM) located in the engine bay and is the main vehicle computer. Within the security system the ECM performs challenge and response with the TDM and in turn either enables or disables the engine start function.

The Body Control Module (BCM) located behind dash compartment on driver's side. This module has many functions such as signal monitoring and gateway functions through which signals are passed between different computer units. As an integral part of the security system the BCM exchanges security related information with the Engine Control Module (ECM). Subsequently, a faulty or non operational BCM may result in a no start status.

Immobiliser chain - System Operation

The immobiliser chain consists of a number of modules or units which are

- The Body Control Module (BCM)
- The Infotainment Unit (IRC)
- The Instrument Panel Cluster (IPC)
- Rear Seat Entertainment unit (RSE)
- Sensing Diagnostics Module (SDM)

The VIN is recorded in each of the units in the immobiliser chain. When a programmed key is turned to accessories the TDM performs a substitution check and attempts to identify the modules in the immobiliser chain. If the modules are identified as being correct i.e. at least two of the modules must respond with the correct VIN the TDM sends a fuel enable signal via the BCM to the ECM. A challenge response between the TDM and ECM follows. If all conditions are correct the ECM will allow the vehicle to start. The Driver Information Center (DIC) located in the middle of the dash cluster will display System Check followed by the odometer reading if all is correct.

If all conditions are not correct e.g. an invalid transponder key, unrecognised parts or the TDM being unable to read the transponder key the start function will be disabled. In this instance the Driver Information Center (DIC) will display the following message,

Security LED

The security LED, a car and padlock symbol, is located in the left side of the dash cluster above the temperature gauge. The out put of the security LED is not indicative of whether the transponder key is programmed or not. The security LED will become active when the vehicle is left unattended for 45 – 60 seconds with all doors closed and no keys in the ignition. The security LED will turn off when the vehicle door is opened manually from an unlocked state or from a locked state when using the RKE. Any key inclusive of an unprogrammed key will turn off the security LED when turned to the on position.

VE HSV Vehicles

VE HSV vehicles do not have a secondary security system like earlier Holden Commodore models, subsequently Advanced Diagnostic tools loaded with VE software can program keys to these vehicles.

Transponder Key Programming

Note: If the alarm is triggered the remote must be programmed before the transponder key. Failure to do so will result in communications failure and failed transponder key programming.

TIPS & HINTS



GENERAL

1. Check the vehicle battery, to ensure the voltage is at least 12 volts.
2. V registration Vectra, use ASTRA-G 98 vehicle selection.
3. If a new immobiliser ECU is fitted to the vehicle, then the code that is entered will be stored in the memory for any future programming requirements.
4. If a different code is used to that on the CAR PASS, please ensure this is written down and passed to the customer for safe keeping.
5. It is not possible to change this code once programmed.
6. The immobiliser aerial must be reprogrammed when it has been replaced

CALIBRA

1. On some Calibra's the 10 Pin connector mounted in the R/H engine bulkhead is prone to water ingress, and can cause bad connections. In some cases there was nothing that could be done, until the connector had been replaced.

REMOTE CONTROL INFORMATION

VEHICLES	VIN NUMBERS	PART NUMBERS
CORSA		9115104 CODE GJ
ASTRA IV		9192450 without ATWS 9153235 with ATWS
VECTRA	To VIN V7999999 To VIN V7999999 From VIN W>	9194590 without ATWS 90508961 with ATWS 24424724 without ATWS 9153226 with ATWS
OMEGA	To 97 From VIN W1000001 to W11109513 From VIN W11109514 From VIN W1000001 to X1999999	90512398 9194590 without ATWS 90508961 with ATWS 9153230 without ATWS 24424724 without ATWS 9153226 with ATWS
OMEGA Saloon	From VIN Y1000001	9146043 with ATWS
OMEGA Estate	From VIN Y1000001	9153235 with ATWS

NOTE : ATWS = Anti Theft Warning System

1. Vectra C has the transponder located inside the remote part of the key. None start can be caused by locked IM module, disconnecting the battery might fix it.
2. Programming of remotes and transponders cannot be done one after the other. Ensure that when programming of either transponders or remotes is finished, switch ignition off and disconnect TESTER before entering another programming mode.
3. When programming remotes, if the TESTER display doesn't change to "ignition off", when the ignition is turned off, this indicates an incorrectly wired radio.
4. Program all 10 pin diagnostic connectors with ADC112 and the ignition switched off (leave key in).
5. To identify which type of remote a vehicle uses, look inside to see if the car has ultrasonics in the A or B pillars. If it has, then use Megamos remotes, if not use Bosch.

REMOTE CONTROL INFORMATION

TYPE 1.

Teardrop shaped plip, separate from key

TYPE 2.

Type used on early systems, with integrated remote key head.

TYPE 3.

Type used on Astra G vehicles & Zafira.

TYPE 4.

Type used on Vectra B vehicles, and requires PIN CODE

TYPE 5. (ATWS)

Type with Alarm system fitted (V6 etc)

TYPE 6

Type ATWS system on Zafira (Ultrasonic in Interior Light module)

TYPE 7

Type ATWS system on Zafira (Ultrasonic in A frame)

CORSA-C Remote Controls

MERIVA Remote Controls

OMEGA Remote Controls (Infra Red System, select Omega Pre97)

NOTE : ENSURE THE CORRECT PLIP PART NUMBER IS USED AS THE INCORRECT TYPE CANNOT BE PROGRAMMED.



Advanced Diagnostics Ltd

Diagnostics House

Eastboro Fields

Hemdale

Nuneaton

CV11 6GL

T: +44(0)2476 347000

F: +44(0)2476 347100

W: www.advanced-diagnostics.co.uk

ADVANCED
DIAGNOSTICS