



VDO SERIES-Z

FOR CYCLING

Z3

INSTRUCTION MANUAL / BEDIENUNGSANLEITUNG / MANUEL D'INSTALLATION  
ET D'UTILISATION / HANDLEIDING / MANUALE D'INSTALLAZIONE E FUNZIONAMENTO  
INSTRUKCJA OBSŁUGI LICZNIKA / INSTALACION Y OPERACIÓN MANUAL

# My Settings



AGE:

WEIGHT:

MAX HEARTRATE:

LIMIT 1:  LOW:  HIGH:

LIMIT 2:  LOW:  HIGH:

LIMIT 3:  LOW:  HIGH:

RECOVERY TIME:  RECOVERY PULSE:


BIKE 1 WEIGHT:  BIKE 2 WEIGHT:

BIKE 1 WHEELSIZE:  BIKE 2 WHEELSIZE:


BIKE 1 SERVICE INTERVAL:  BIKE 2 SERVICE INTERVAL:

HOME ALTITUDE:

FURTHER SETTINGS:


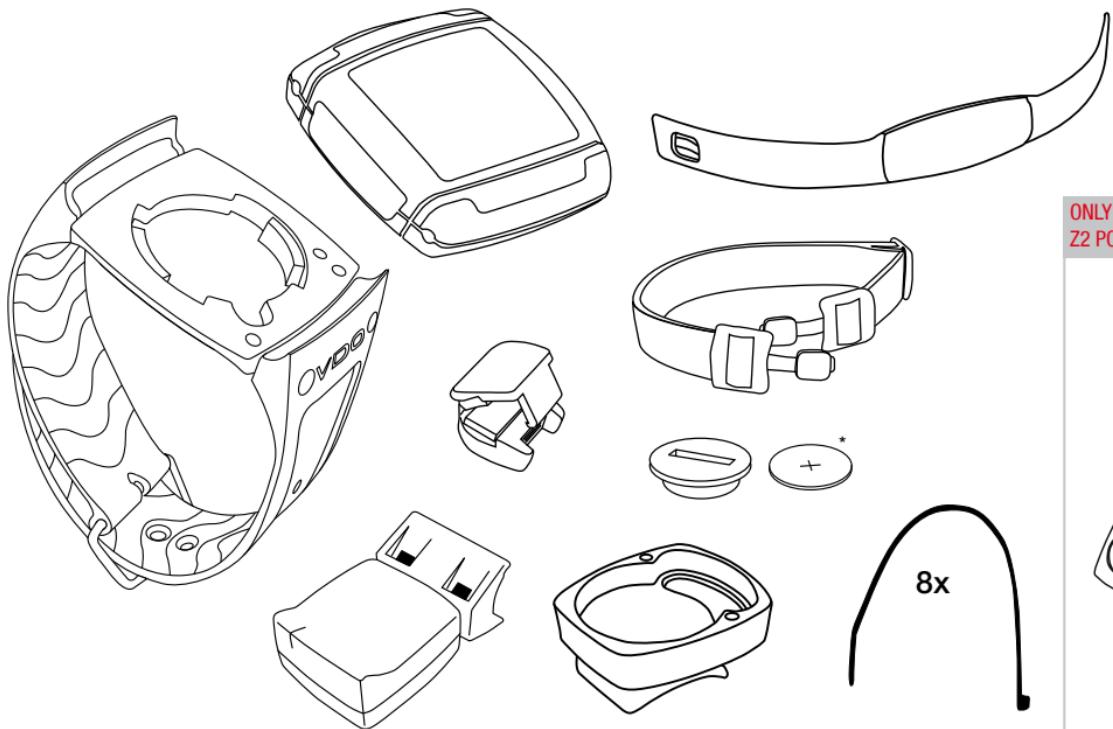



ONLY FOR MODELS  
Z2 PC-LINK / Z3 PC-LINK

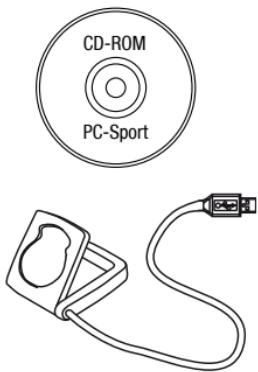



\* **Watch out:** old batteries require special disposal




Please read instructions for end-of-life disposal treatment

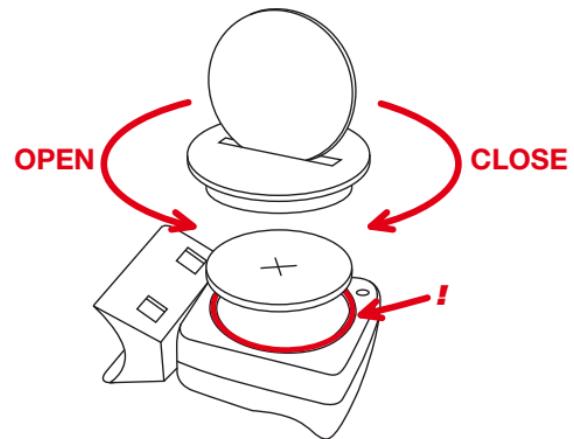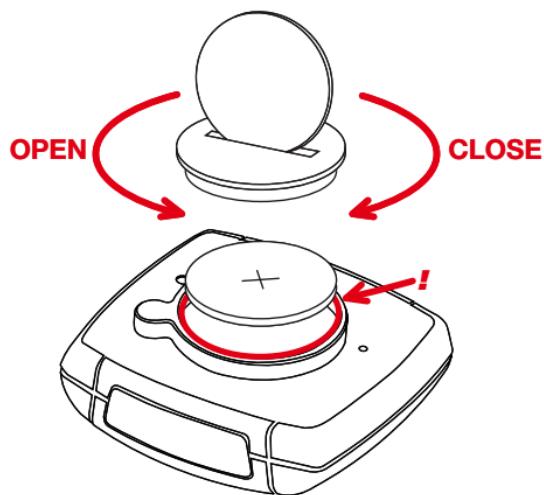

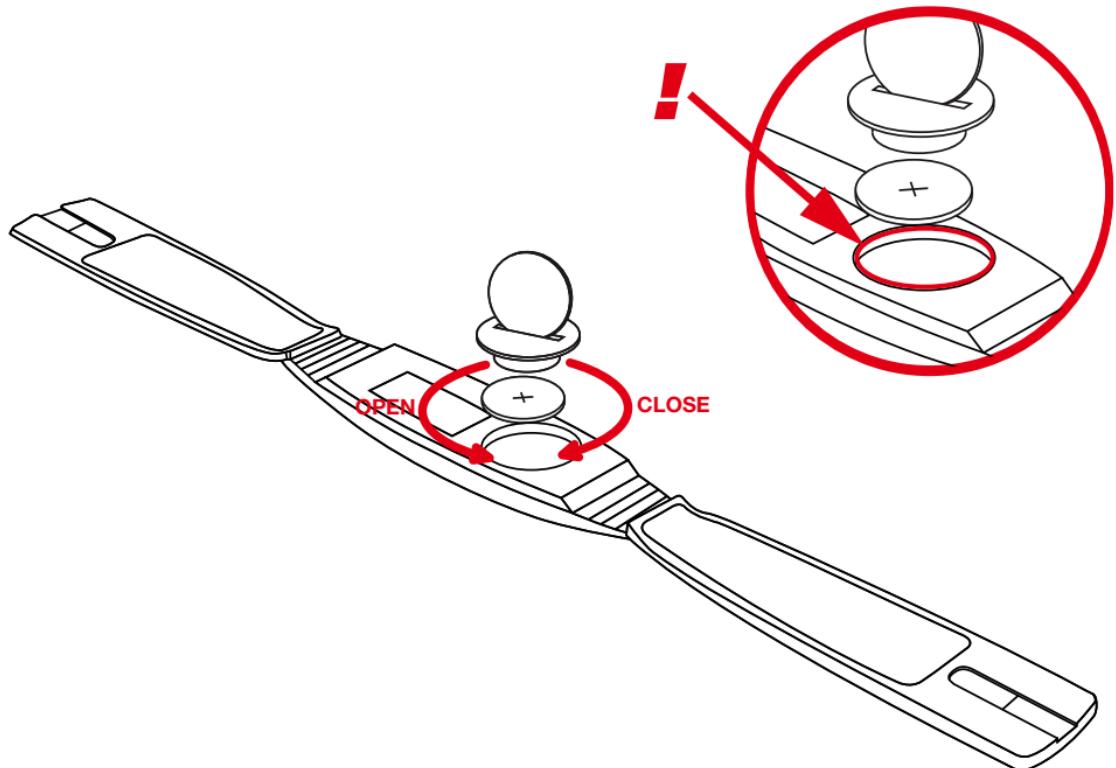

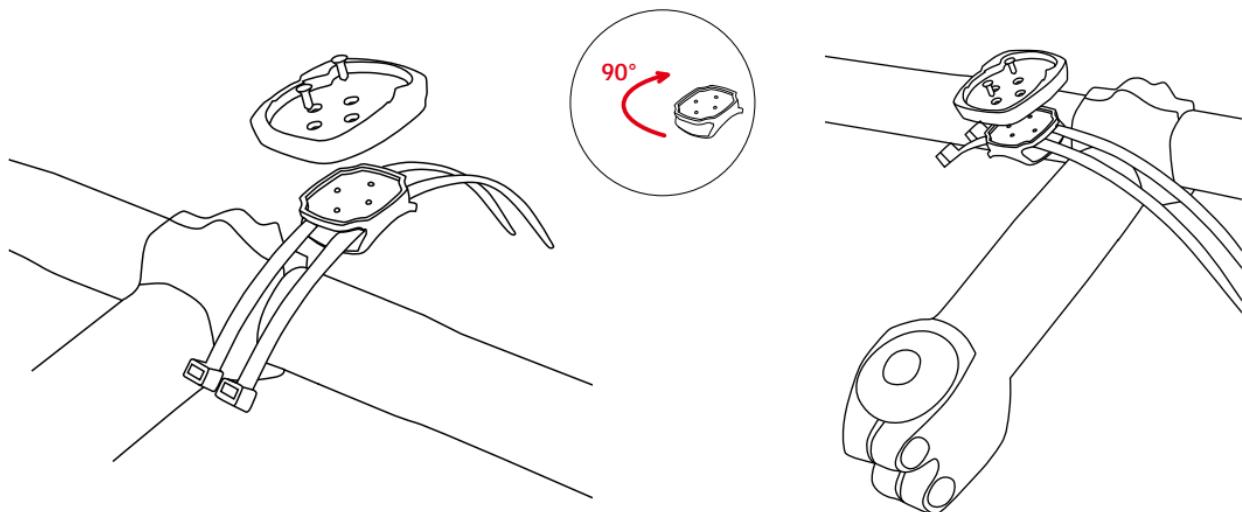

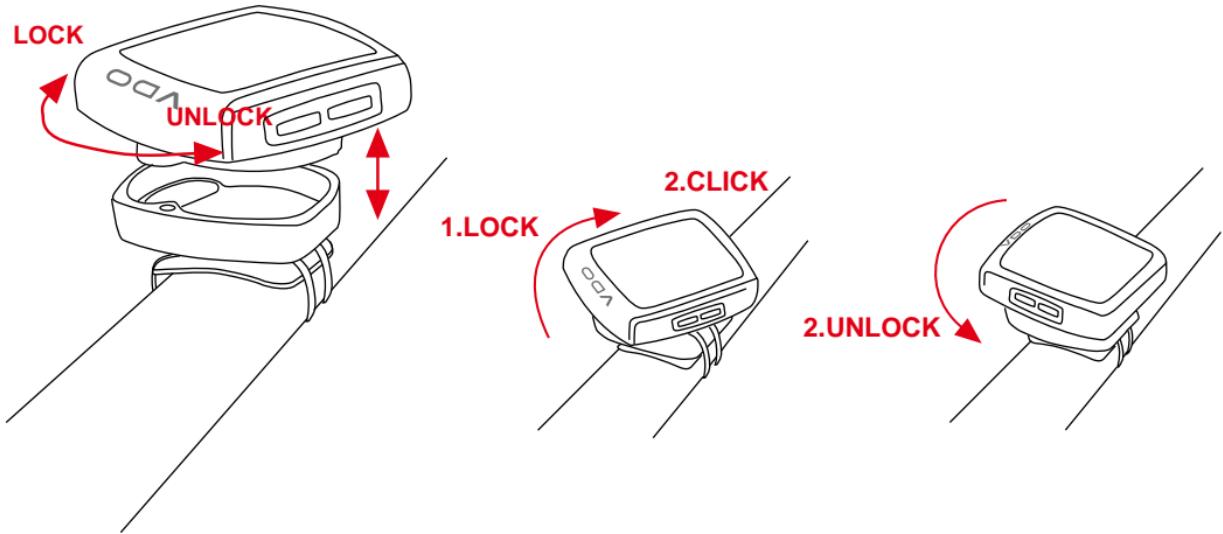

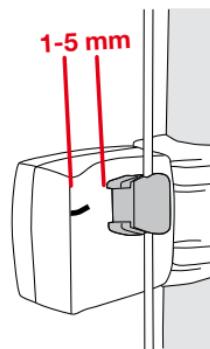
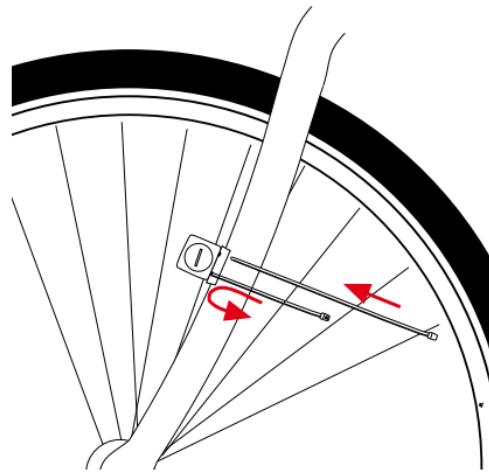
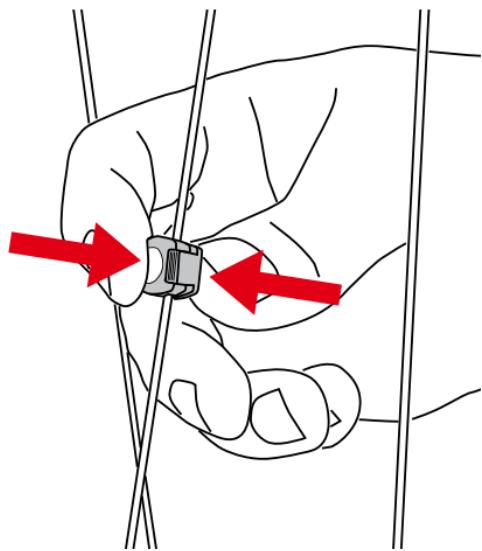




P08


ONLY FOR  
MODELS

Z2/Z2 PC-LINK

Z3/Z3 PC-LINK

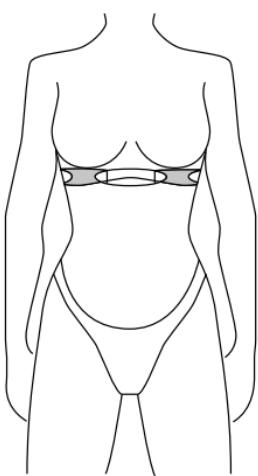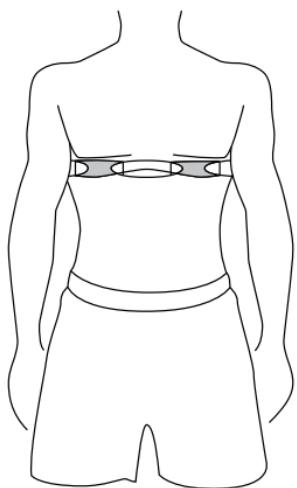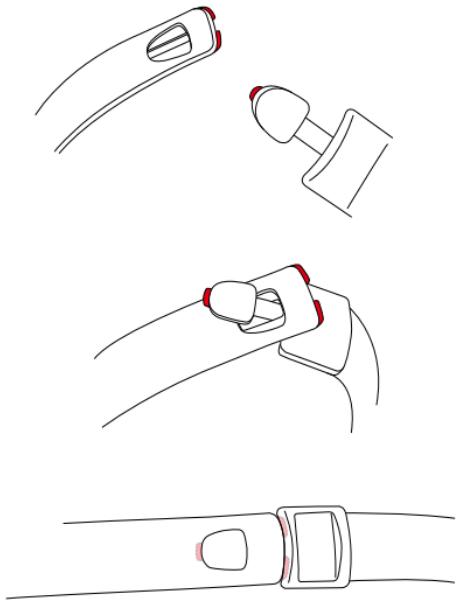

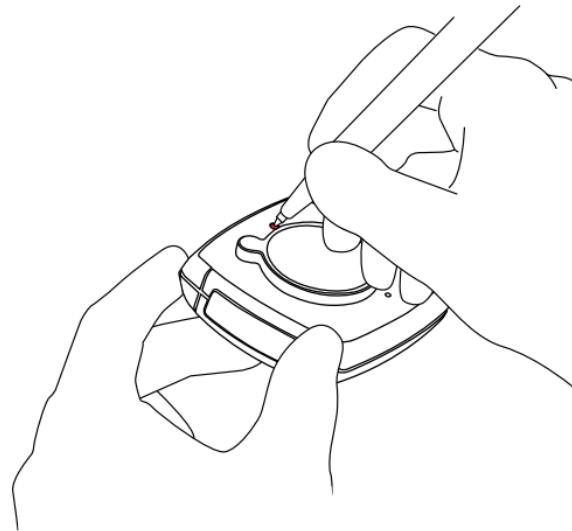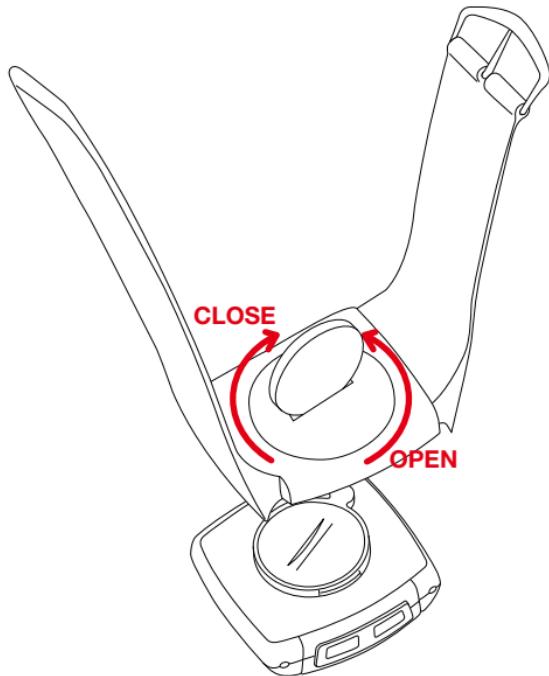

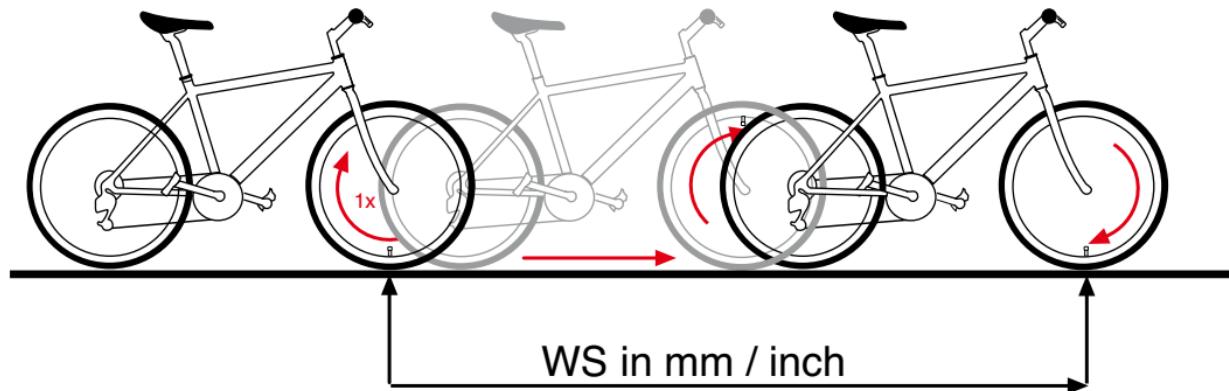

Tire size	WS in mm KMH	WS in inch MPH	Tire size	WS in mm KMH	WS in inch MPH		
47-305	16x1,75	1272	50,1	20-571	26x3/4	1954	76,9
47-406	20x1,75	1590	62,6	32-630	27x1 1/4	2199	86,6
34-540	24x1 3/8	1948	76,7	40-622	28x1,5	2224	87,6
47-507	24x1,75	1907	75,1	47-622	28x1,75	2268	89,3
23-571	26x1	1973	77,7	40-635	28x1 1/2	2285	89,2
40-559	26x1,5	2026	79,8	37-622	28x1 3/8	2205	86,8
44-559	26x1,6	2051	80,7	18-622	700x18C	2102	82,8
47-559	26x1,75	2055	80,9	20-622	700x20C	2114	83,2
50-559	26x1,9	2060	81,1	23-622	700x23C	2133	84,0
n/a	26 x 1,95	2070	81,5	25-622	700x25C	2146	84,5
54-559	26x2,00	2075	81,7	28-622	700x28C	2149	84,6
n/a	26 x 2,1	2080	81,9	32-622	700x32C	2174	85,6
57-559	26x2,125	2133	84,0	37-622	700x37C	2205	86,8
37-590	26x1 3/8	2105	82,9	40-622	700x40C	2224	87,6



# Picturebook

P11

ONLY FOR  
MODELS

Z2 PC-LINK

Z3 PC-LINK

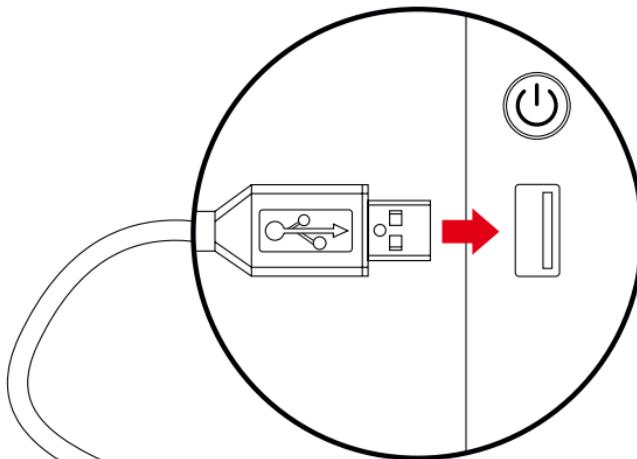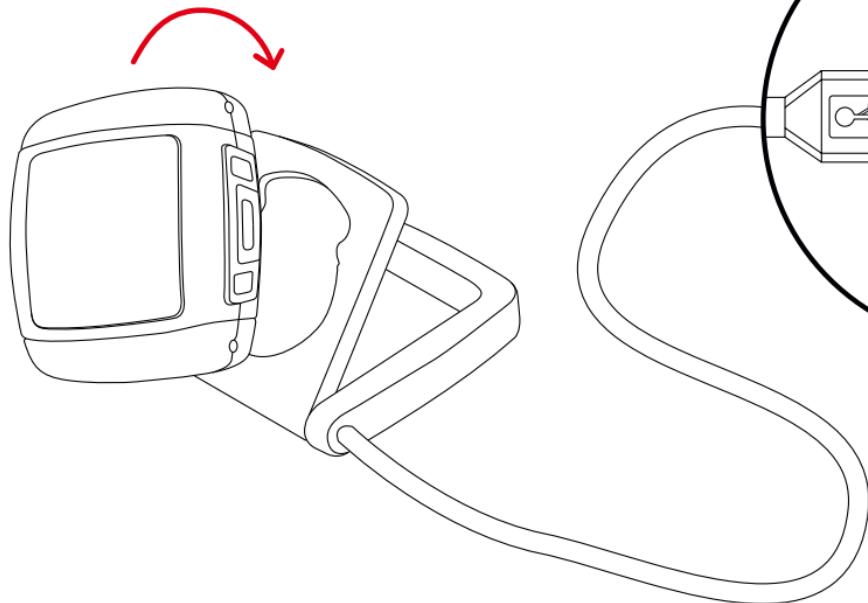

Congratulations

With your selection of a VDO Z3 you have opted for high-quality sports information computer. In order to fully benefit from the potential of the computer, we recommend that you carefully read this manual. It contains all operating instructions and many useful tips.

We extend our best wishes for enjoyment and satisfaction when riding with your VDO computer.

VDO Cyclecomputing Cycle Parts GmbH

**Package contents >>> P01**

First, please ensure that the contents of this package are complete:

- 1 VDO computer Z3
- 1 VDO speed transmitter
- 1 VDO pulse-chest belt incl. elastic strap, incl. battery
- 1 battery for computer, 3 V type 2032
- 1 handlebar holder
- 1 wrist band holder
- 1 lock for the wrist band holder
- 1 spoke magnet
- 8 cable ties

Optional extension set:

VDO cadence transmitter

**>>> P...**

Reference to the appropriate pages in the picture book. This is where the content is again presented in picture form, e.g.:

**>>> P01 —> P01 page 1 in the picture book**

# **INSTRUCTION MANUAL**

## **TABLE OF CONTENTS**

- 1.1. GENERAL
- 1.2. IMPORTANT INSTRUCTIONS FOR THE DIGITAL WIRELESS SYSTEM
- 1.3. Control system - operation
  - 1.3.1. Operating mode
  - 1.3.2. Setting mode
  - 1.4. The display
  - 1.5. Extension options & accessories

## **2. INSTALLATION**

- 2.1. Battery installation
  - 2.1.1. Battery installation - computer and speed/cadence transmitter
  - 2.1.2. Battery installation pulse-chest belt.
  - 2.2. Installation - holder/computer/transmitter/magnet
  - 2.3. Putting on the pulse-chest belt
  - 2.4. Mounting the computer on the wrist band

## **3. INITIAL OPERATION**

- 3.1. Initial operation, AC-button
- 3.2. Language selection
- 3.3. Manual pairing - INITIAL operation wireless system
  - 3.3.1. Initial operation - pulse transmitter
  - 3.3.2. Initial operation - speed transmitter
  - 3.3.3. Initial operation - cadence transmitter

## **4. GENERAL SETTINGS**

- 4.1. Setting the language
- 4.2. Setting time & date
- 4.3. Setting the alarm, alarm clock

## **5. BICYCLE FUNCTION SETTINGS**

- 5.1. Measuring and setting wheel size/s
- 5.2. Changing wheel size
- 5.3. Setting total kilometers
- 5.4. Bike check / service interval

## **6. PERSONAL SETTINGS IMPORTANT NOTE**

The personal settings are prerequisite for calculating maximum pulse, training zones, and calorie consumption.  
Ensure that you make the personal settings first so that you can fully utilize the possibilities offered by the computer.

- 6.1. Personal settings with manual max. pulse entry
- 6.2. Personal settings with automatic max. pulse calculation

## **7. PULSE FUNCTION SETTINGS**

- 7.1. Automatic calculation of pulse limit values
- 7.2. Manual entry of pulse limit values
- 7.3. Selecting the training range
- 7.4. Setting the recovery measurement (pulse or time)
- 7.5. Power calculation in watt

**8. ALTITUDE FUNCTION SETTINGS**

- 8.1. Setting the home altitude (starting altitude)
- 8.2. Setting the actual altitude
- 8.3. Annual uphill altitude difference bike 1 and bike 2 and walk mode
- 8.4. Annual downhill altitude difference bike 1 and bike 2 and walk mode

**9. RESET MODE**

- 9.1. Resetting trip data
- 9.2. Reset total ride time
- 9.3. Resetting the total distance meter
- 9.4. Resetting the Navigator
- 9.5. Resetting to factory settings (AC button)

**10. OPERATION MODE SELECTION**

Selecting the operation mode: Bike mode or walk mode

**11. OPERATION MODE**

- 11.1. Function overview
- 11.2. Fast pairing after interruption > 15 minutes
- 11.3. GETTING STARTED
- 11.3.0. The permanent functions in the display
- 11.3.1. to 11.3.35. Quick overview - functions/operation/reset/max. values

**12. RIDING WITH THE NAVIGATOR**

- 12.1. Selecting Navigator mode
- 12.2. Resetting the Navigator at the orientation point

**13. THE TIMING FUNCTIONS**

- 13.1. Selecting the timing function
- 13.2. Setting the timer (when selecting timer 1 or timer 2 or timer 1 + 2)
- 13.3. Setting timer 1 + 2 repeats (when selecting timer 1 + 2)
- 13.4. Setting the countdown (when selecting countdown timer)
- 13.5. Lap timer
- 13.6. Stopwatch

**14. TRAINING WITH THE PULSE FUNCTIONS**

- 14.1. Training with the stopwatch
- 14.2. Training with timer 1 / timer 2 / timer 1+2
- 14.3. Training with the countdown timer
- 14.4. Training with the lap timer

**15. SLEEP MODE****16. TROUBLESHOOTING****17. GUARANTEE CONDITIONS****18. TECHNICAL SPECIFICATIONS**

# **INSTRUCTION MANUAL**

## **1.1. GENERAL**

### **1.2. IMPORTANT INSTRUCTIONS FOR THE DIGITAL WIRELESS SYSTEM**

Your VDO series Z3 works entirely without cable; it works with triple digital wireless transmission based on well-established ANT+Sport® wireless protocol. The ANT+Sport® wireless protocol has already been successfully implemented by manufacturers such as Garmin, Specialized, and Suunto. Speed signals, cadence signals (optional), as well as heart rate data are transmitted to the respective receiver (computer) as digital and coded signals. Signal coding ensures that only the data of your own pulse, speed, and cadence (optional) transmitters are processed (this is advantageous when riding in a group).

The ANT+Sport digital technology is significantly more reliable than the technology of older analog systems. The ANT+Sport technology uses standard industrial wireless components, and it can best be compared to the technology used in modern WLAN networks. The connection between transmitter and receiver is more stable, and subject to significantly less frequent malfunction, and it is virtually completely safeguarded from data loss.

The speed transmitter has a memory component that buffers data every 65 sec. Thus no data is lost if there is a malfunction lasting for this duration. After the malfunction this data will be resent to the computer. Subsequently the following data will be updated:

Daily distance

Ride time

Average speed

Navigator

Total distance

Total ride time


After a malfunction the data can change suddenly = updating the computer. Initial operation of a completely digital system requires somewhat more care than does initial operation of conventional analog systems. The first time batteries are inserted, or after a battery change, the transmitter automatically generates a new code. The computer has to learn this code. To do this you must execute a DIG CONNECT SET. Strictly follow the instructions in chapter 3.3 to do this.

**ATTENTION:** Your VDO computer is not suitable for use on motorcycles.

### **1.3. CONTROL SYSTEM - OPERATION**

The control system of your computer is based on dual assignment of the 4 main buttons. In this regard the devices distinguishes between operation mode and setting mode.

1.3.1. OPERATION MODE - use this mode to display all information  
 Button assignment is shown on the housing.

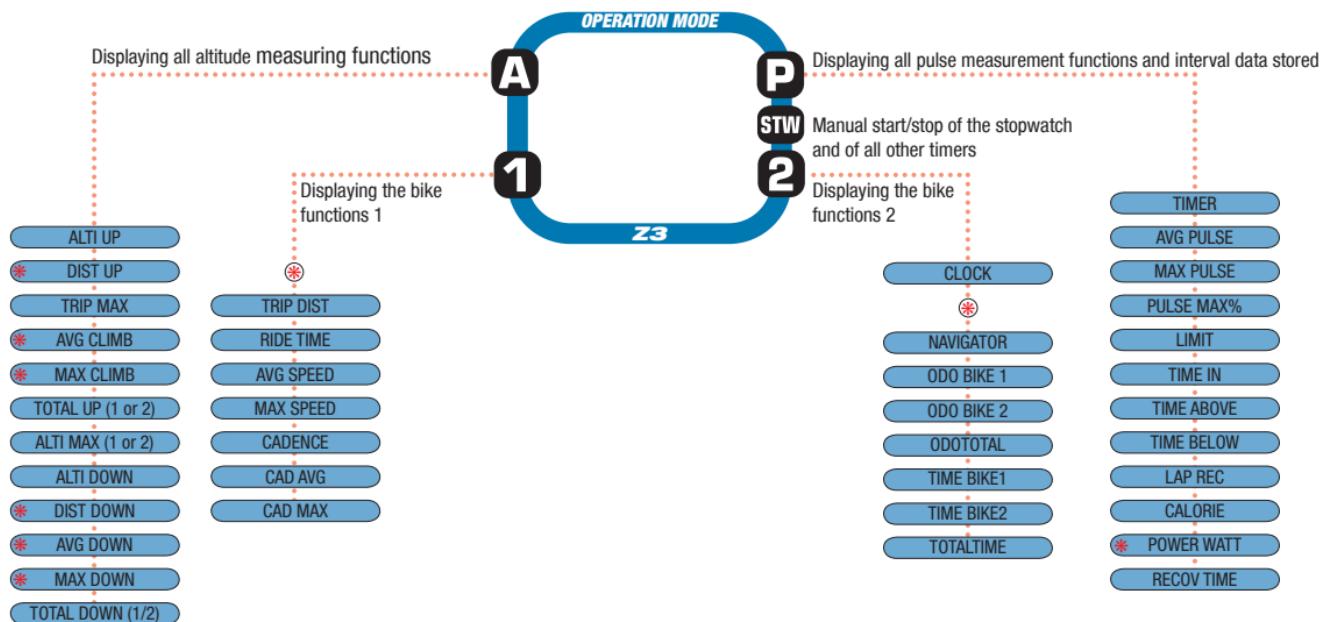


# INSTRUCTION MANUAL

1.3.2. SETTING MODE - use this mode to make all settings. The assignment of buttons is on the buttons

To go to setting mode:

Press button 1 for 3 seconds

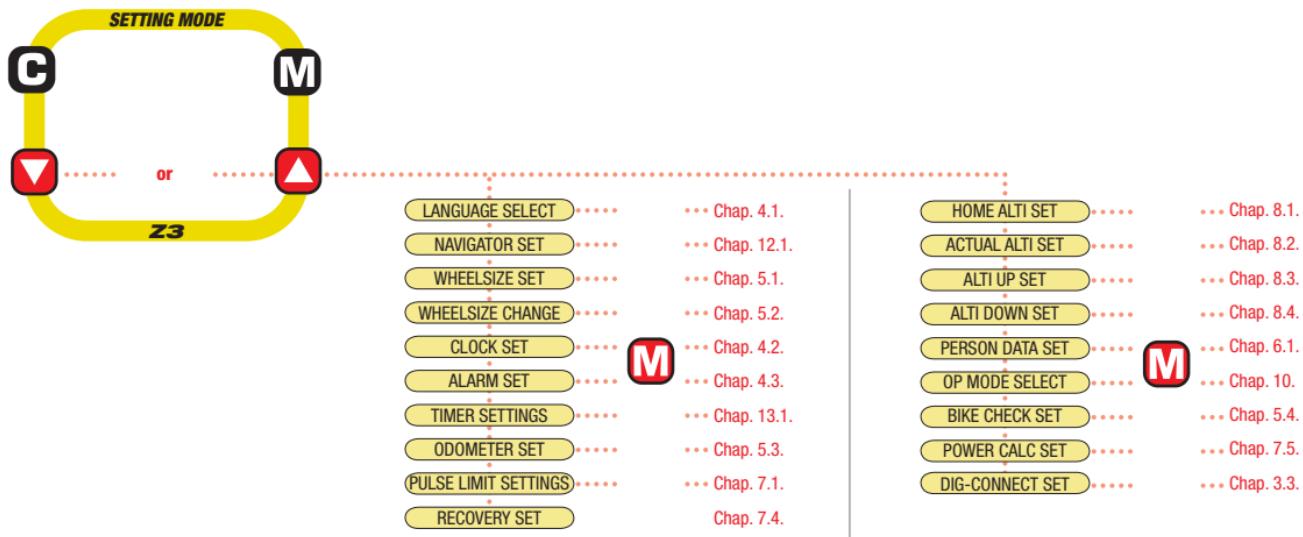

ⓐ (Once) = last step, or back one menu level

(Hold) = return to start menu

Ⓜ Select/confirm displayed option

In the highest menu level select the next menu level

Page down within the menu level


ⓐ In SET mode (number flashes): Reduce number  
Page up within the menu level

ⓐ In SET mode (number flashes): Increase number  
After subsequent confirmation of a setting the computer automatically returns to operation mode.

#### 1.4. THE DISPLAY

The display of your VDO computer is comprised of three large areas.  
The following information is displayed in operation mode:

\* If the computer is worn as a sport watch then the temperature can be falsified by body warmth.

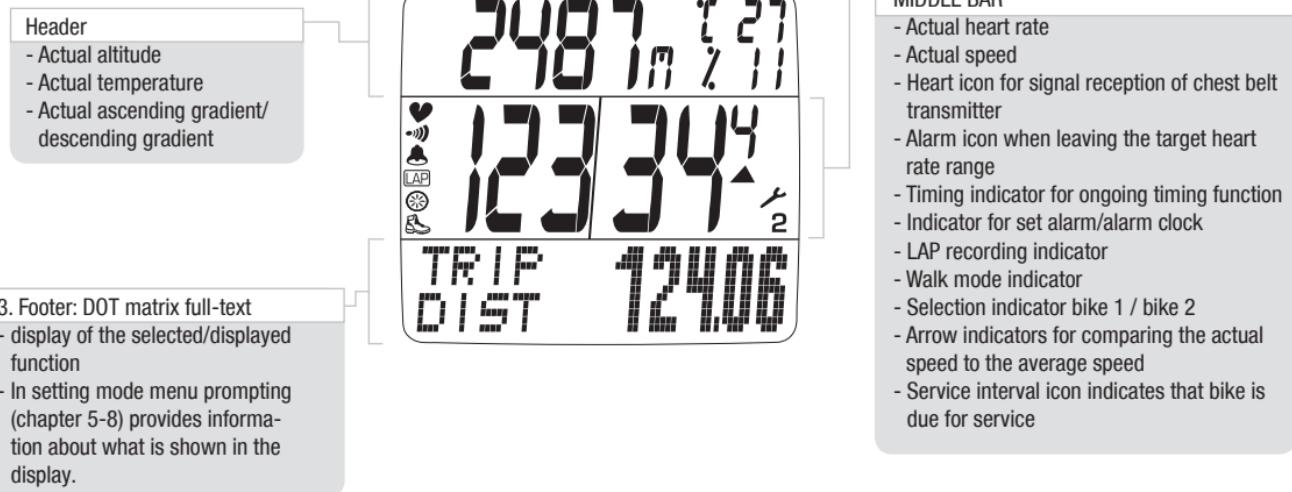

# INSTRUCTION MANUAL

## 1.5. EXTENSION OPTIONS & ACCESSORIES

Extension option: You have the possibility of extending your computer with the cadence extension set

In this case the following cadence functions are available to you:

Actual cadence

Average cadence

Maximum cadence



In addition you can also get the following original VDO replacement parts from your dealer

Designation	article number
Universal handlebar holder - wireless	art. no. 5503
Magnet S/M for speed impulses	art. no. 4410
Magnet L/XL for speed impulse	art. no. 4412
Cadence magnet	art. no. 4411
Speed transmitter	art. no. 6602
Pulse transmitter (incl. elastic chest belt)	art. no. 6605
Elastic chest belt for pulse transmitter article	art. no. 6606

Cadence kit	art. no. 6603
Wrist band	art. no. 6607
Wrist band lock	art. no. 6608
Universal mount kit	art. no. 6601

When purchasing look for the VDO Cyclecomputing original equipment logo. Only products bearing this logo are authorized by VDO Cyclecomputing for use with your computer.

## 2. INSTALLATION

### 2.1. BATTERY INSTALLATION

#### 2.1.1. BATTERY INSTALLATION - COMPUTER AND SPEED/CADENCE TRANSMITTER **>>> P02**

- step 1 Insert the battery into the computer/transmitter housing with the + pole up.
- step 2 Ensure that the battery is not tilted.
- step 3 Ensure that the rubber seal lies smoothly on the lid of the battery compartment.
- step 4 Insert the battery compartment lid into the opening and use a coin to firmly turn the battery door to right until the stop (approximately 1/3 turn)

TIP for changing batteries: VDO recommends changing the batteries yearly to avoid undesired data loss. Thus strictly ensure that you note the entered wheel sizes as well as the previous ridden kilometers for

bike 1 & bike 2, as well as the total altitude difference for bike 1, bike 2, and the altitude difference walked. Reprogram this information after inserting the new batteries.

#### 2.1.2 BATTERY INSTALLATION PULSE-CHEST BELT >>> P03

Your VDO is shipped with the battery installed in the pulse-chest belt. Proceed as follows when later inserting a replacement battery:

- step 1 Insert the battery into the chest-belt housing with the +pole up.
- step 2 Ensure that the battery is not tilted.
- step 3 Strictly ensure that the rubber seal lies smoothly on the battery compartment lid.
- step 4 Insert the battery compartment lid into the opening and use a coin to firmly turn the battery door to right until the stop (approximately 1/3 turn)

#### 2.2. INSTALLATION - HOLDER/COMPUTER/TRANSMITTER/MAGNET

a. Holder >>> P04/05: Your VDO computer is shipped with a universal handlebar holder.

- step 1 You can mount the holder either on the handlebar or the stem. If you are installing the holder on the handlebar decide whether you want it on the right side or the left side. If installing on the stem, loosen the screws in the holder and turn the foot of the holder to stem installation. Then screw the foot firmly onto the holder again.
- step 2 Route the cable ties through the provided eyes of the holder foot and pull both of them tight.

#### b. Computer >>> P06

The VDO twist-click system securely connects the computer to the handlebar holder.

- step 1 Insert the computer, turned to the left approximately 45 degrees (10 o'clock position) into the holder.
- step 2 Twist the computer to the right until it audibly engages (clicks) in the holder system (12 o'clock position).
- step 3 To remove the computer turn it to the left (do not press or pull).

#### c. Speed transmitter and magnet >>> P07

Mount the transmitter on the same side of the handlebar that the computer is mounted on. If you have installed the holder on the stem then we recommend mounting the transmitter on the left side.

- step 1 Loosely fasten the transmitter on the fork with cable ties (do not tighten).
- step 2 Place the spoke magnet on a spoke
- step 3 Align the spoke magnet to the transmitter marking with a clearance of approximately 3 mm and click it together.
- step 4 Align transmitter and magnet relative to each other and tighten the cable tie on the transmitter.

Please pay attention to the maximum distances:

- Maximum transmitter-computer distance = 120 cm
- Transmitter-magnet distance: 3 mm to a maximum of 10 mm

#### 2.3. PUTTING ON THE PULSE-CHEST BELT >>> P08

- step 1 First connect the one side of the pulse transmitter with the elastic strap, as shown. Press the ends of the pulse-chest belt into the plastic holder of the elastic strap

# INSTRUCTION MANUAL

- step 2 Place the pulse transmitter just below your chest and guide the elastic strap over your back to the other end of the pulse transmitter
- step 3 Connect the second end of the plastic strap to the pulse transmitter
- step 4 Use the size adjustment of the elastic strap to adjust the chest belt to your chest size

Please note:

- Do not adjust the chest belt too loose; if it is too loose it can slip if there are jolts (e.g. when walking)
- When putting on the chest belt moisten the electrodes so that trouble-free function is also ensured when starting exercise, before contact is established through sweat.
- Range of the pulse-chest belt transmitter = 0.90 m

## 2.4. MOUNTING THE COMPUTER ON THE WRIST BAND >> P09

- step 1 Insert the computer into the opened wrist band
- step 2 Insert the lock into the wrist band holder from below
- step 3 Turn the lock with a coin to tighten it

ATTENTION: Never use a screwdriver to operate the lock. This could damage the lock (if the lock should be damaged then you can get the lock as original replacement part)

## 3. INITIAL OPERATION

### 3.1. INITIAL OPERATION, AC-BUTTON >> P09-2

After inserting the batteries we recommend that you first reset the de-

vice to factory settings to ensure that no residual data from the quality control process remains in the computer. This puts the computer into an assured start mode.

- Press the AC button for approximately 2 seconds with a sharp object, such as a pencil

### 3.2. LANGUAGE SELECTION

- |        |  |  |
|--------|--|--|
| 3sec.  |  | Setting mode LANGUAGE SELECT                                   |
| step 2 |  | Confirm LANGUAGE SELECT with M                                 |
| step 3 |  | Press the up or down button until the desired language appears |
| step 4 |  | Confirm your language selection with M                         |

### 3.3. MANUAL PAIRING - INITIAL OPERATION WIRELESS SYSTEM

For initial operation of the digital wireless system manual pairing must ALWAYS be executed. Manual pairing ensures that the computer learns the coding of the transmitter you are using.

- step 1 Insert the computer into the twist-click holder
- step 2 Ensure that there are no ANT+Sport digital transmitters other than the transmitter you are using within a 5-meter area around the computer

Your computer will randomly select one of 128,000 codes. This ensures that signals of other transmitters are not received or processed (e.g. when riding in a group). If dashes are shown in the display, in spite of pairing, you must repeat the manual pairing process. In doing so ensure that the electrodes of the pulse transmitter belt are wet, or that the distance between the magnets and the speed/cadence transmitter is not greater than 5 mm.

ATTENTION: Your computer can save the codes of up to 5 transmitters

1. Speed transmitter of bike 1
2. Speed transmitter of bike 2
3. Cadence transmitter of bike 1 (optional)
4. Cadence transmitter of bike 2 (optional)
5. Pulse transmitter

### 3.3.1. INITIAL OPERATION - PULSE TRANSMITTER

Put the pulse transmitter belt on and moisten the electrodes  
(chapter 2.3)

- 3sec. Setting mode LANGUAGE SELECT  
 Select DIG CONNECT SET  
 Display DIG CONNECT  
 Select PULSE SEARCH  
 PULSE PAIRING

PAIR DONE appears in the display after several seconds if the pulse transmitter was found. Automatic return to the TRIP DIST menu. If the pulse transmitter was not found PULSE REPEAT appears. Use to repeat the pairing process for the pulse transmitter. For troubleshooting see chapter 16.

### 3.3.2. INITIAL OPERATION - SPEED TRANSMITTER

- 3sec. Setting mode LANGUAGE SELECT  
 Select DIG CONNECT SET  
 Display DIG CONNECT  
 Select SPEED SEARCH  
 SPEED PAIRING

Now turn the front wheel (both magnet and transmitter must be already

mounted)

PAIR DONE appears in the display after several seconds if the speed transmitter was found. Automatic return to the TRIP DIST menu

SPEED REPEAT appears if the speed transmitter was not found.  
Use to repeat the pairing process for the speed transmitter.  
For troubleshooting see chapter 16.

### 3.3.3. INITIAL OPERATION - CADENCE TRANSMITTER (OPTIONAL EXTENSION see chapter 1.5)

- 3sec. Setting mode LANGUAGE SELECT  
 Select DIG CONNECT SET  
 Display DIG CONNECT  
 Select CADENCE SEARCH  
 CADENCE PAIRING

Now turn the crank (magnet and transmitter must be already mounted)  
PAIR DONE appears in the display after several seconds if the cadence transmitter was found.

Automatic return to the TRIP DIST menu

If the cadence transmitter was not found CADENCE REPEAT will be displayed.

With repeat the pairing for the cadence transmitter  
For troubleshooting see chapter 16.

**IMPORTANT NOTE / Re-open of transmitter search for the receive channel after interruption**

If no signal is received from an already paired transmitter after 15 minutes (for example riding without chest belt for Z2 and Z3, also

# INSTRUCTION MANUAL



PC-LINK models), the receive channel will be closed for this transmitter. In this case your VDO computer will show dashes for the respective function in the display. To re-open all receive channels press the **1** and **A** buttons at the same time: Now your VDO computer will again receive all previously paired transmitters that are in range.

## 4. GENERAL SETTINGS

### 4.1. SETTING THE LANGUAGE

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**M** LANGUAGE SELECT  
**▼▲** Select „LANGUAGE ENGLISH“  
**M** Automatic return to TRIP DIST

Language selection done.

### 4.2. SETTING TIME & DATE

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**▼▲** CLOCK SET  
**M** SET HOUR ?CONTINUE?  
**▼▲** Setting hours  
**M** SET MINUTES ?CONTINUE?  
**▼▲** Setting minutes  
**M** SET YEAR ?CONTINUE?  
**▼▲** Setting the year  
**M** SET MONTH ?CONTINUE?  
**▼▲** Setting the month  
**M** SET DAY ?CONTINUE?  
**▼▲** Setting the day

- M** CLOCK ?SET OK?  
**M** CLOCK SET DONE  
Automatic return to CLOCK

### 4.3. SETTING THE ALARM, ALARM CLOCK

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**▼▲** ALARM SET  
**M** ALARM ON or ALARM OFF ( **✓** to switch on)

When the alarm clock is switched off setting mode ends automatically by **M**.

- M** SET HOUR ?CONTINUE?  
**▼▲** Selecting the hours value  
**M** „SET MINUTES ?CONTINUE?  
**▼▲** Selecting the minutes value  
**M** ALARM ?SET OK?  
**M** ALARM SET DONE!

Automatic return to the operation mode for CLOCK. Setting the alarm clock done.

The alarm clock icon is now shown in the display (center bar left).

## 5. BICYCLE FUNCTION SETTINGS

### 5.1. Measuring and setting wheel size/s

In order for your VDO computer to measure correctly you must first measure the circumference of your wheel. If this value is set incorrectly then all values calculated on the basis of this value, such as speed, trip, etc. will be wrong. To use your VDO computer on two different bikes e.g. mountain bike and road bike you can enter two different wheel sizes. Measuring the wheel circumference:

- step 1 Align the valve of the front wheel so that it is precisely vertical to the ground
- step 2 Mark this point on the ground with a line (use chalk for example)
- step 3 Push the bike one wheel rotation forward until the valve is again vertical to the ground.
- step 4 Mark this point on the ground as well.
- step 5 Measure the distance between the two marks. The result is your wheel circumference (=roll circumference).
- step 6 Enter the wheel circumference as described below into your VDO computer.

**ATTENTION:** If you have selected KMH display then you must enter the wheel circumference in mm. If you have selected MPH display then enter the wheel circumference in inches. The values listed in table **>> P10** are approximate values. These values deviate depending on brand of tire, tire height and tire tread.

#### Setting wheelsize:

- 3 sec. Setting mode LANGUAGE SELECT  
 WHEELSIZE SET  
 WHEELSIZE KMH-DISPLAY or WHEELSIZE MPH-DISPLAY ( to change to mph)  
 WHEELSIZE 1 ... SET SIZE ?CONTINUE?  
 Set wheel size 1 in mm (keep button depressed for fast run-through)  
 WHEELSIZE 1 ?SET OK?  
 WHEELSIZE 1 SET DONE  
Automatic change to

Set wheel size 2 in mm (keep button depressed for fast run-through)

- WHEELSIZE 2 ?SET OK?  
 WHEELSIZE 2 SET DONE

Automatic return to operation mode for TRIP DIST. If you do not want to set wheel size 2 then hold to return to TRIP DIST operation mode.

Attention: Factory settings for bike 1 = 2155 mm and for bike 2 = 2000 mm. If you do not enter wheel sizes the computer will work with the factory settings. The values measured in this manner for speed, distance, etc. can deviate from the actual values.

#### 5.2. CHANGING THE WHEEL SIZE

With wheel size you change the computer from bike 1 (e.g. road bike) to bike 2 (e.g. mountain bike). The computer now works with the settings for bike 2.

- 3 sec. Setting mode LANGUAGE SELECT  
 WHEELSIZE CHANGE  
  
 WHEELSIZE 1 or WHEELSIZE 2 ?SET OK?  
  
 Changing the wheel size  
 WHEELSIZE SET DONE  
Automatic return to TRIP DIST

Wheel size set done

Display of the actual wheel size in the center bar of the display, right bottom (1 or 2)

# INSTRUCTION MANUAL

## 5.3. SETTING TOTAL KILOMETERS

You can program the total distances into your VDO computer that get lost when changing batteries or that you have previously counted with a different device. This function is available for both wheel sizes (both bikes).

### Setting total KM 1 or 2

- 3 sec. Setting mode LANGUAGE SELECT  
 ODOMETER SET  
 ODO BIKE 1 SET or ODO BIKE 2 SET  
 ODO BIKE 1/2 NEXT DIGIT?  
 Set last digit (keep button depressed for fast run-through)  
 ODO BIKE 1/2 NEXT DIGIT?  
 Set digit (keep button depressed for long run-through) ... repeat for all digits from back to front  
 ODO BIKE 1/2 ?SET OK?  
 Set first digit (keep button depressed for fast run-through)  
 ODO BIKE 1/2 SET DONE

Automatic return to operation mode for ODO BIKE 1/2 menu. Set ODO BIKE 1/2 done

## 5.4. BIKE CHECK / SERVICE INTERVAL

Your VDO computer allows you to set the service interval to any interval for both of your bikes independently. The service check reminds you to have your bicycle serviced, like the service indicator in your car.

Set bike check bike 1 or bike 2

- 3 sec. Setting mode LANGUAGE SELECT  
 BIKE CHECK SET  
 BIKE CHECK ON or BIKE CHECK OFF ( to switch off the bike check)  
 „BIKE 1 SET or BIKE 2 SET  
 Set service interval in KM or m (keep button depressed for fast run-through)  
 BIKE 1/2 ?SET OK?  
 BIKE 1/2 SET DONE

Automatic return to operation mode for TRIP DIST  
Bike check set done

If BIKE CHECK is shown in the display then you should either perform the recommended bike check yourself or have your bike checked by your dealer. Press any button. The BIKE CHECK text will disappear. After another 50 km the service interval icon (screw driver) will disappear.

## 6. PERSONAL SETTINGS (YOUR DATA)

**IMPORTANT NOTE:** The personal settings are the prerequisite for calculating maximum pulse, training zones, and calorie consumption. Ensure that you make the personal settings first so that you can fully utilize the possibilities offered by the computer. Your personal maximum pulse is an important value. You can enter this value into your VDO computer if you know it from earlier measurements (e.g. at the doctor's office or from a performance test). If you do not know it then you can select automatic calculation of your maximum pulse.

**WARNING:** Automatic calculation is based on average values for people

that are athletic and healthy. The actual value can deviate from this average value for people who have not been athletically active for some time, or who after illness, are going through a rehabilitation program. Strictly ensure that you speak with your doctor before starting to train, so that he can confirm that training would not be associated with any adverse effects.

#### 6.1. PERSONAL SETTINGS WITH MANUAL MAX. PULSE ENTRY

**IMPORTANT:** A wrong entry can have adverse effects on your health. Tables providing general information cannot reliably reflect your specific training status. Strictly ensure that you speak with your doctor before entering your max. pulse manually.

- 3 sec. ① Setting mode LANGUAGE SELECT  
 □ ▲ PERSON DATA SET  
 M SET AGE ?CONTINUE?  
 □ ▲ Setting age  
 M SET WEIGHT ?CONTINUE?  
 □ ▲ Setting weight  
 M SET SEX ?CONTINUE?  
 □ ▲ Setting sex (M = male, F = female)  
 M SET P MAX MANUAL ( □ to go to manual max. pulse calculation)  
 M PULSE MAX ?SET OK?  
 □ ▲ Setting the maximum pulse  
 M PERSON DATA ?SET OK?  
 M PERSON DATA SET DONE

Automatic return to operation mode for the selected timer.  
 SET P MAX MANUAL done.

#### 6.2. PERSONAL SETTINGS WITH AUTOMATIC MAX. PULSE CALCULATION

**IMPORTANT:** Automatic max. pulse calculation is based on tables showing general information that cannot reliably reflect your specific training status. Before you start training strictly ensure that you speak with your doctor.

- 3 sec. ① Setting mode LANGUAGE SELECT  
 □ ▲ PERSON DATA SET  
 M SET AGE ?CONTINUE?  
 □ ▲ Setting age  
 M SET WEIGHT ?CONTINUE?  
 □ ▲ Setting weight  
 M SET SEX ?CONTINUE?  
 □ ▲ Setting sex (M = male, F = female)  
 M SET PMAX MANUAL (go to autom.)  
 □ ▲ SET P MAX AUTOCALC  
 M Auto VALUE will be displayed for 2 seconds  
 PULSE MAX CALC DONE  
 M PERSON DATA ?SET OK?  
 M PERSON DATA SET DONE

Automatic return to operation mode for the selected timer. Set HF max manually done

# INSTRUCTION MANUAL

## 7. PULSE FUNCTION SETTINGS

The pulse functions of your VDO computer are based on the specification of three training programs each with 3 training ranges.

Limit 1 = program 1: for recovery training (high 70%, low 50% of max. pulse)

Limit 2 = program 2: program for endurance training (high 80%, low 70% of max. pulse)

Limit 3 = program 3: Training program for development ranges (high 95%, low 80% of max. pulse)

For automatic calculation of the training programs ensure that values are calculated that correspond to your personal settings (chapter 6). Also pay attention to the warning in chapter 6.

### 7.1. AUTOMATIC CALCULATION OF PULSE LIMIT VALUES

Automatic calculation of pulse limit values functions only after entry of the personal data (chapter 6).

Your computer automatically assigns the following limit values to the three training programs

Limit 1 = HIGH 70%, LOW 50% of maximum pulse

Limit 2 = HIGH 80%, LOW 70% of maximum pulse

Limit 3 = HIGH 95%, LOW 80% of maximum pulse

3 sec. Setting mode LANGUAGE SELECT

PULSE LIMIT SETTINGS

PULSE LIMIT ?SET?

PULSE LIMIT AUTOCALC

AUTO LIMIT 1 HIGH...LOW

Shows AUTO LIMIT 1 for 3 sec., go to AUTO LIMIT 2

AUTO LIMIT 2 HIGH...LOW

Shows AUTO LIMIT 2 for 3 sec., go to AUTO LIMIT 3

AUTO LIMIT 3 HIGH...LOW

Shows AUTO LIMIT 3 for 3 sec.

Automatic return to operation mode for the selected timer.

### 7.2. MANUAL ENTRY OF PULSE LIMIT VALUES

3 sec. Setting mode LANGUAGE SELECT

PULSE LIMIT SETTINGS

PULSE LIMIT ?SET?

PULSE LIMIT AUTOCALC

PULSE LIMIT MANUAL SET

PULSE LIMIT 1 ?SET?

Select LIMIT 1/LIMIT 2/LIMIT 3

SET HIGH 1 ?CONTINUE?

Set high limit training range 1/2/3

SET LOW 1 ?CONTINUE?

Set low limit training range 1/2/3

LIMIT x ?SET OK? (x = selected training range 1, 2, or 3)

LIMIT x SET DONE (x = selected training range 1, 2, or 3)

Automatic return to the selected TIMER.

### 7.3. SELECT TRAINING PROGRAM

3 sec. Setting mode LANGUAGE SELECT

PULSE LIMIT SETTINGS

PULSE LIMIT ?SET?

- PULSE LIMIT ?SELECT?
- M LIMIT 1 ?SELECT? or  LIMIT 2 ?SELECT? or  LIMIT 3 ?SELECT?
- M LIMIT 1/2/3 SET DONE

Automatic return to operation mode for the selected timer. The selected training program LIMIT 1 or LIMIT 2 or LIMIT 3 is displayed in the pulse functions **P**. The high and low limits set for the selected program will also be displayed.

#### 7.4. SET RECOVERY PULSE MEASUREMENT

With your VDO computer you can select the following presets for the recovery pulse measurement.

1. Recovery time: Pulse reduction within the set recovery time.
2. Recovery pulse: Duration until reaching the set recovery pulse.

##### a. Setting the recovery time

- 3 sec.  Setting mode LANGUAGE SELECT
- RECOVERY SET
- M RECOV TIME SET
- Set the recovery time in 30 second increments
- M RECOV TIME ?SET OK?
- M RECOV TIME SET DONE

Automatic return to the operation mode for RECOV TIME  
Recovery time set done

##### b. Setting the recovery pulse

- 3 sec.  Setting mode LANGUAGE SELECT
- RECOVERY SET

- M RECOV TIME SET
- M RECOV PULSE SET
- Setting the recovery pulse
- M RECOV PULSE ?SET OK?
- M RECOV PULSE SET DONE

Automatic return to the operation mode for RECOV PULSE  
Recovery pulse set done

**IMPORTANT FOR THE CHANGE:** In operation mode the last setting made of the settings cited above is always displayed. To change, in the settings menu confirm the desired settings as specified above.

#### 3. MEASURING THE RECOVERY PULSE/RECOVERY TIME

In the operating mode select RECOVPULSE or RECOVTIME with the **P** button. To start the measurement press the buttons **1+2** at the same time. After the set recovery time elapses or after reaching the set recovery pulse the measurement will end automatically. The recovery time/recovery pulse will be displayed in the third display line.

#### 7.5 SETTING THE BASIC VALUES FOR POWER CALCULATION IN WATT (OPTIONAL)

**IMPORTANT:** Power calculation is only activated if the optional cadence extension is installed.

Power is calculated in WATT via a mathematical algorithm. Deviations from a real WATT measurement system are possible, particularly if there is a strong headwind or tailwind. The more precise the setting of the bicycle used, (its weight as well as your seat position), the more



# INSTRUCTION MANUAL

precise the displayed value will be.

**IMPORTANT:** If the cadence option is installed the WATT shows ZERO when you stop moving the pedals.

- 3 sec. ① Setting mode LANGUAGE SELECT  
☒ □ POWER CALC SET  
M BIKE TYPE SELECT  
M ROAD BIKE SELECT or ☒ MTB SELECT  
M „SITTING POS SELECT  
M UPRIGHT SELECT or ☒ LOW RACE SELECT  
M SET WEIGHT ?SET OK? (Note: This is where the bike weight, including panniers if necessary, is entered)  
☒ □ Setting the weight in kg  
M POWER CALC SET DONE

Automatic return to the mode for POWER WATT

Set watt calculation done

## 8. ALTITUDE FUNCTION SETTINGS

The altitude measurement function of your VDO computer is based on barometric pressure. The opening necessary in this regard on the underside of the device should not be manipulated (never poke a sharp object into this opening). Note the following for precise altitude measurement:

a. Prior to starting each trip you must enter a start altitude into your computer.

If you always start your trip from the same location then you only need to enter the start altitude once.

If the start location changes then you must set the new start altitude.

b. Your VDO computer records barometric pressure changes (e.g. due to weather changes) in sleep mode as a change in actual altitude. If for example your bicycle is in the cellar for two days and the air pressure changes due to weather, then your computer will show a changed actual altitude. This is why the home altitude must be recalculated prior to starting each trip.

c. For longer trips the actual altitude should be readjusted at certain points (e.g. readjust to summit altitudes). Deviations can occur due to different weather conditions at the various points of the trip. You should make corrections so that the measurement is as accurate as possible.

Tip home altitude:

You can obtain the correct information for the altitude of your home location or your usual trip starting point from your local weather bureau.

Tip actual altitude:

When planning trips you can find the original altitudes at certain points of your trip on special maps. These maps are available in book stores.

### 8.1. SETTING THE HOME ALTITUDE (STARTING ALTITUDE)

- 3 sec. ① Setting mode LANGUAGE SELECT  
☒ □ HOME ALTI SET  
M  
☒ □ Setting the home altitude  
M HOME ALTI ?SET OK?  
M HOME ALTI SET DONE

Automatic return to the operation mode for ALTI UP. The set home altitude will be displayed as actual altitude. Home altitude set done

Re-calibrating the air pressure to home altitude. Important: Prior to each trip the actual measured pressure must be calculated back to the set home altitude = re-calibrate. Short-cut press the **A** button for 4 seconds.

## 8.2. SETTING THE ACTUAL ALTITUDE

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**▼▲** ACTUAL ALTI SET  
**▼▲** Setting the actual altitude  
**M** ACTUAL ALTI ?SET OK?  
**M** ACTUAL ALTI SET DONE

Automatic return to the operation mode for ALTI UP. Actual altitude set done

## 8.3. ANNUAL UPHILL ALTITUDE GAIN BIKE 1 AND BIKE 2 AND WALK MODE

Your VDO computer accumulates values for the meters in altitude for the uphill gain covered separately for:

- Bike 1
- Bike 2
- Walk mode (see chapter 10 for selection)

These values can be programmed in, if for example you want to transfer the values from an older device, or if the values have been deleted when changing batteries.

Setting the annual uphill gain in altitude

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**▼▲** ALTI UP SET  
**M** ALTI UP 1 SET (for bike 2 or walking)  
**▲** ALTI UP 2 SET / WALK UP SET)  
**M** ALTI UP 1 NEXT DIGIT / ALTI UP 2 NEXT DIGIT / WALK UP NEXT DIGIT  
**▼▲** Set last digit (keep button depressed for fast run-through)  
**M** ... repeat for all digits from back to front  
**M** ALTI UP 1 ?SET OK? / ALTI UP 2 ?SET OK?  
**/ WALK UP ?SET OK?**  
**▼▲** Setting the first digit  
**M** ALTI UP 1 SET DONE / ALTI UP 2 SET DONE  
**/ WALK UP SET DONE**

Automatic return to the operation mode for TOTAL UP. Annual uphill altitude gain set done.

## 8.4. ANNUAL DOWNHILL ALTITUDE LOSS BIKE 1 AND BIKE 2 AND WALK MODE

Setting the annual downhill altitude loss

- 3 sec. **1** Setting mode LANGUAGE SELECT  
**▼▲** ALTI DOWN SET  
**M** ALTI DOWN 1 SET (for bike 2 or walking)  
**▲** ALTI DOWN 2 SET / WALK DOWN SET)  
**M** ALTI DOWN 1 NEXT DIGIT / ALTI DOWN 2 NEXT DIGIT  
**/ WALK DOWN NEXT DIGIT**  
**▼▲** Set last digit (keep button depressed for fast run-through)

# INSTRUCTION MANUAL

- ... repeat for all digits from back to front
- ALTI DOWN 1 ?SET OK? / ALTI DOWN 2  
?SET OK? / WALK DOWN ?SET OK?
- ▼ ▲ Setting the first digit
- ALTI DOWN 1 SET DONE / ALTI DOWN 2 SET DONE /  
WALK DOWN SET DONE

Automatic return to the operation mode for TOTAL DOWN

Annual downhill altitude loss set done

## 9. RESET MODE

In reset mode of your VDO computer you reset the saved ride data of the bicycle computer. You can also reset the computer to the factory settings

### 9.1 TRIP DATA

ATTENTION: When resetting the trip data the following day trip data will be deleted:

- Daily distance
- Trip ride time
- Average speed
- Maximum speed
- Uphill altitude gain
- Downhill distance
- Maximum trip altitude
- Average ascending gradient
- Maximum ascending gradient
- Downhill altitude loss
- Downhill distance

- Average descending gradient
- Maximum descending gradient
- If the cadence option is mounted then the cadence data will also be reset.
- Average cadence
- Maximum cadence

- 3 sec. 2 TRIP DATA ?RESET?
- TRIP DATA ?RESET? <<?RESET?>> flashing
- TRIP DATA RESET DONE

Automatic return to operation mode for TRIP DIST

### 9.2 RESET TOTAL RIDE TIME

ATTENTION: When resetting total ride time the following data is deleted:

- Total ride time
- Total ride time bike 1
- Total ride time bike 2

- 3 sec. 2 TRIP DATA ?RESET?
- ▼ ▲ TOTAL TIME ?RESET?
- TOTAL TIME ?RESET? <<?RESET?>> flashing
- TOTAL TIME RESET DONE?

Automatic return to the operation mode for TOTAL TIME

Reset total time done

### 9.3. RESETTING THE TOTAL DISTANCE METER

ATTENTION: When resetting the total distance the following data is deleted:

- Total distance

- Total distance bike 1
- Total distance bike 2

3 sec. **2** TRIP DATA ?RESET?  
 **A** ODOTOTAL ?RESET?  
**M** ODOTOTAL ?RESET? <<?RESET?>> flashing  
**M** ODOTOTAL RESET DONE

Automatic return to the operation mode for ODOTOTAL  
 Odototal reset done

#### 9.4. RESETTING THE NAVIGATOR

Please see the detailed description of Navigator functions in chapter 12.1.-12.2. There you will learn more about use of this reset.

3 sec. **2** TRIP DATA ?RESET?  
 **A** NAVIGATOR ?RESET?  
**M** NAVIGATOR ?RESET? <<?RESET?>> flashes  
**M** NAVIGATOR RESET DONE

Automatic return to the operation mode for NAVIGATOR  
 Navigator reset done

#### 9.5. RESETTING TO FACTORY SETTINGS

**WARNING:** When resetting to factory settings all ride data and all computer settings will be reset, including the personal data. Only perform this reset if a software malfunction occurs or if your computer can no longer be operated.

step 1 Use a sharp pencil  
 step 2 Press the AC button on the back of the computer for 2 sec  
 Reset to factory settings done.

## 10. OPERATION MODE SELECTION

Your VDO computer uses different measuring and analysis programs for different sport types. Certain functions are not available depending on the selected mode. For this reason you must select one of the following modes prior to starting your exercise:

- Cycle mode
- Walk mode (also for jogging, running, Nordic walking, inline skating)

Select operation mode:

3 sec. **1** Setting mode LANGUAGE SELECT  
 **A** OP MODE SELECT  
**M** CYCLE MODE ?SET OK?  
 **B** to change to WALK MODE ?SET OK?  
**M** Automatic return to the operation mode for TRIP DIST (in cycle mode), or ALTI UP (in walk mode)

## 11. OPERATION MODE

11.1. An overview of mode functions is provided in section 1.3.1.

#### 11.2 FAST PAIRING after transmission interruption

If no signal is received from one of your already paired transmitters for more than 15 minutes (e.g. cycling without pulse-chest belt, magnet moved unintentionally) the receive channel for this transmitter will be closed. In this case your VDO computer will show dashes for the respective function in the display. To re-open all receive channels press the **1** and **A** buttons at the same time:

In this case your VDO computer will then receive all paired transmitters that are in range. See also chapter 15. Sleep mode.



# INSTRUCTION MANUAL

## 11.3. GETTING STARTED - quick overview

Functions/operation/reset/max values

### 11.3.0. PERMANENT FUNCTIONS

The following functions are permanently shown in the display:

#### HEADER

- Actual altitude
- Actual temperature
- Actual ascending gradient in percent ! Not in walk mode !

#### CENTER BAR

- Heart rate receive icon if the pulse transmitter belt is worn
- Beeper icon if the beeper is switched on
- Stopwatch icon if the timing function is running
- Actual heart rate
- Actual speed: Maximum value 120 km/h or mph (! not in walk mode !)
- Comparison of actual speed to average speed ▲ = above, ▼ = below (! not in walk mode !)
- Selected wheel size 1 or 2

#### FOOTER

- Shows selected information and corresponding value

#### ALTITUDE FUNCTIONS (button A)

Re-calibrating the air pressure to home altitude. Short-cut press the **A** button for 4 seconds.



This resets all data of the functions marked by ●.

#### 11.3.1. ⊗ ALTI UP = uphill altitude gain for the actual trip

Display      **A** ALTI UP

Reset: 3 sec.      **2** TRIP DATA ?RESET?

**M** TRIP DATA ?RESET? <<?RESET?>> flashing

**M** TRIP DATA RESET DONE ●

Automatic return to operation mode for TRIP DIST

#### 11.3.2. ⊗ DIST UP = uphill distance of the actual trip

Display      **A** DIST UP

Reset: 3 sec.      **2** TRIP DATA ?RESET?

**M** TRIP DATA ?RESET? <<?RESET?>> flashing

**M** TRIP DATA RESET DONE

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

Note: The minimum altitude change for the correct distance measurement must be 1 m

#### 11.3.3. ⊗ TRIP MAX = maximum altitude of the actual trip

Display      **A** TRIP MAX

Reset: 3 sec.      **2** TRIP DATA ?RESET?

**M** TRIP DATA ?RESET? <<?RESET?>> flashing

**M** TRIP DATA RESET DONE

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST.

#### 11.3.4. ⊗ AVG CLIMB = average climb of the actual trip in percent

Display:      **A** „AVG CLIMB

Reset: 3 sec.      **2** „TRIP DATA ?RESET?

- M** TRIP DATA ?RESET? <<?RESET?>> flashing
- M** TRIP DATA RESET DONE

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

11.3.5.  $\otimes$  MAX CLIMB = maximum climb of the actual trip in percent

- |               |   |
|---------------|---|
| Display       | <b>A</b> MAX CLIMB                              |
| Reset: 3 sec. | <b>2</b> TRIP DATA ?RESET?                      |
|               | <b>M</b> TRIP DATA ?RESET? <<?RESET?>> flashing |
|               | <b>M</b> TRIP DATA RESET DONE                   |

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

11.3.6.  $\otimes$  TOTAL UP = total uphill altitude gain Bike 1 and Bike 2

- |         |   |
|---------|---|
| Display | <b>A</b> „Tot 1/2 HM UP“ (walk mode TOTAL UP) |
|---------|---|

11.3.7.  $\otimes$  ALTI MAX = maximum altitude Bike 1 and Bike 2

- |         |   |
|---------|---|
| Display | <b>A</b> „Total Max 1/2“ (walk mode ALTI MAX) |
|---------|---|

11.3.8.  $\otimes$  ALTI DOWN = downhill altitude loss of the actual trip

- |               |   |
|---------------|---|
| Display       | <b>A</b> ALTI DOWN                              |
| Reset: 3 sec. | <b>2</b> TRIP DATA ?RESET?                      |
|               | <b>M</b> TRIP DATA ?RESET? <<?RESET?>> flashing |
|               | <b>M</b> TRIP DATA RESET DONE                   |

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

11.3.9.  $\otimes$  DIST DOWN = downhill distance of the actual trip

- |               |   |
|---------------|---|
| Display       | <b>A</b> DIST DOWN                              |
| Reset: 3 sec. | <b>2</b> TRIP DATA ?RESET?                      |
|               | <b>M</b> TRIP DATA ?RESET? <<?RESET?>> flashing |
|               | <b>M</b> TRIP DATA RESET DONE                   |

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

Note: The minimum altitude change for the correct distance measurement must be 1 m

11.3.10.  $\otimes$  AVG DOWN = average downhill slope in percent

- |               |   |
|---------------|---|
| Display       | <b>A</b> „Dschn down“                           |
| Reset: 3 sec. | <b>2</b> TRIP DATA ?RESET?                      |
|               | <b>M</b> TRIP DATA ?RESET? <<?RESET?>> flashing |
|               | <b>M</b> TRIP DATA RESET DONE                   |

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

11.3.11.  $\otimes$  MAX DOWN = maximum downhill gradient in percent

- |               |   |
|---------------|---|
| Display       | <b>A</b> MAX DOWN                               |
| Reset: 3 sec. | <b>2</b> TRIP DATA ?RESET?                      |
|               | <b>M</b> TRIP DATA ?RESET? <<?RESET?>> flashing |
|               | <b>M</b> TRIP DATA RESET DONE                   |

This resets all data of the functions marked by ●

Automatic return to operation mode for TRIP DIST

This resets all data of the functions marked by ●

# INSTRUCTION MANUAL

11.3.12. TOTAL DOWN = total downhill altitude bike 1 and bike 2  
Display      **A** TOTAL DOWN (walk mode TOTAL DOWN)

## BICYCLE FUNCTIONS (button **1**)

With the exception of the CLOCK function NO bicycle functions are available in walk mode. The **1** button has no function in walk mode.

11.3.13. TRIP DISTANCE = distance of the actual trip  
Display      **1** TRIP DISTANCE  
Reset: 3 sec.    **2** TRIP DATA ?RESET?  
                  **M** TRIP DATA ?RESET? <<?RESET?>> flashing  
                  **M** TRIP DATA RESET DONE

This resets all data of the functions marked by

Automatic return to operation mode for TRIP DIST

Maximum value: 999.99 KM or MI. If this number is overranged then TRIP DISTANCE, RIDE TIME, and AVERAGE SPEED will be set to ZERO.

11.3.14. RIDE TIME = ride time of the actual trip  
With auto start/stop function: Starts automatically when you start off and stops automatically when you stop  
Display      **1** RIDE TIME  
Reset: 3 sec.    **2** TRIP DATA ?RESET?  
                  **M** TRIP DATA ?RESET? <<?RESET?>> flashing  
                  **M** TRIP DATA RESET DONE

Automatic return to operation mode for TRIP DIST

Maximum value 24 hours. If this number is overranged then TRIP DISTANCE, RIDE TIME, and AVERAGE SPEED will be reset to ZERO.

This resets all data of the functions marked by

11.3.15. AVG SPEED = average speed of the actual trip  
Display      **1** AVG SPEED  
Reset: 3 sec.    **2** TRIP DATA ?RESET?  
                  **M** TRIP DATA ?RESET? <<?RESET?>> flashing  
                  **M** TRIP DATA RESET DONE

Automatic return to operation mode for TRIP DIST

Accuracy: 2 decimal places. If DAILY DISTANCE or RIDE TIME are overranged this value will be reset to ZERO

11.3.16. MAX SPEED = maximum speed of the actual trip  
Display      **1** MAX SPEED  
Reset: 3 sec.    **2** TRIP DATA ?RESET?  
                  **M** TRIP DATA ?RESET? <<?RESET?>> flashing  
                  **M** TRIP DATA RESET DONE

Automatic return to operation mode for TRIP DIST

Maximum value 120 km/h or mph. Accuracy 2 decimal places. Not suitable for motorcycles.

## OPTION ONLY WITH CADENCE EXTENSION

11.T1. CADENCE = actual cadence in crank revolutions per minute  
Display      **1** CADENCE  
Reset: 3 sec.    **2** TRIP DATA ?RESET?  
                  **M** TRIP DATA ?RESET? <<?RESET?>> flashing  
                  **M** TRIP DATA RESET DONE

Automatic return to operation mode for TRIP DIST

Note: Pedaling backward can result in unrealistically high values.

11.T2. CAD AVG = average cadence of the actual trip  
 Display      **1** CAD AVG  
 Reset: 3 sec.    **2** TRIP DATA ?RESET?  
**M** TRIP DATA ?RESET? <<?RESET?>> flashing  
**M** TRIP DATA RESET DONE ●  
 Automatic return to operation mode for TRIP DIST.

11.T3. CAD MAX = maximum cadence of the actual trip  
 Display      **1** CAD MAX  
 Reset: 3 sec.    **2** TRIP DATA ?RESET?  
**M** TRIP DATA ?RESET? <<?RESET?>> flashing  
**M** TRIP DATA RESET DONE ●  
 Automatic return to operation mode for TRIP DIST

#### **BICYCLE FUNCTIONS** (button **2**)

IMPORTANT NOTE: NO bicycle functions except the CLOCK function are available in walk mode. The **2** button in walk mode automatically shows the actual time.

11.3.17. CLOCK  
 Setting, see chapter 4.2. (Either in 12h or 24h format; in 12h format am/pm will be shown as well)  
 Display      **2** CLOCK

11.3.18. NAVIGATOR  
 Setting, use, see chapter 12.1.-12.2.  
 Display      **2** NAVIGATOR  
 Reset: 3 sec.    **2** TRIP DATA ?RESET?

**✓** NAVIGATOR ?RESET?  
**M** NAVIGATOR ?RESET? <<?RESET?>> flashes  
**M** NAVIGATOR RESET DONE

11.3.19. ODO BIKE 1 = total distance bike 1  
 Shows the sum of all distances ridden with bike 1 in km or mi (automatic conversion of all values when converting to mi)

Display      **2** ODO BIKE 1  
 Maximum value: 99,999 km or mi

11.3.20. ODO BIKE 2 = total distance bike 2  
 Shows the total of all distances ridden with bike 2 in km or mi (automatic conversion of all values when switching to mi)

Display      **2** ODO BIKE 2  
 Maximum value: 99,999 km or mi

11.3.21. ODOTOTAL = total distance bike 1 and bike 2  
 Shows the total of all distances ridden with bike 1 and bike 2 in km or mi (automatic conversion of all values when switching to mi)

Display      **2** ODOTOTAL  
 Maximum value 199,999 km or mi

11.3.22. TIME BIKE 1 = total time bike 1  
 Shows the total time of all day trips ridden with bike 1 in hhh:mm  
 Display      **2** TIME BIKE 1  
 Maximum value 999:59 hhh:mm

11.3.23. TIME BIKE 2 = total ride time bike 2  
 Shows the total time of all day trips ridden with Bike 2 in hhh:mm

# INSTRUCTION MANUAL

Display TIME BIKE 2  
Maximum value 999:59 hhh:mm

11.3.24. TOTAL TIME = total ride time bike 1 and bike 2  
Shows the total time of all day trips ridden with bike 1 and bike 2 in hhh:mm

Display TOTAL TIME  
Maximum value: 1999:59 hhhh:mm

## HEART RATE FUNCTIONS (button

PLEASE NOTE: All heart rate functions with the exception of „actual heart rate“ display require a running stopwatch or a running timer.

11.3.25. STOPWATCH = manual stopwatch  
Prerequisite: Only after selecting stopwatch, chapter 13.1.

Display STOPWATCH  
Start measuring Press  
Stop measuring Press

Display pulse data LIMIT LO HI (values run sequentially, automatically in 2 second rhythm)

Reset: Press button for 4 sec.  
Compare chapter 14. Training with recording of the residence times in the pulse ranges

11.3.26. TIMER = timer 1 / timer 2 / timer 1+2  
Prerequisite: Only after selecting timer, chapter. 13.1.

Display Start measuring  
 End of measurement

Display pulse data

Reset:   
Compare chapter 14.2. Training with recording of the residence times in the pulse ranges

11.3.27. COUNTDOWN = countdown timer  
Prerequisite: Only after selection of countdown timer, chapter 13.1.

Display Start measuring   
 End of measurement

Display pulse data LIMIT LO HI (values run sequentially, automatically in 2 second rhythm)

Reset: Press button for 4 sec.  
Compare Chapter 14.3. Training with the countdown timer

11.3.28. LAP-TIMER = lap timer  
Prerequisite: Only after selection of lap timer, Chapter 13.1.

Display

Start measuring		Press
Go to next lap		Press buttons at the same time
End/pause measurement		Press
Display lap data		LAP REC
Reset:		Go to the next lap data Press button for 4 sec.
Compare Chapter 14.4. Training with the countdown timer.		

11.3.29. AVG PULSE = average pulse of the actual timing period  
Prerequisite: Only with running or stopped and not deleted stopwatch/timer/countdown/lap timer function

Displaying the information		AVG PULSE
Reset:		Press button for 4 sec.

11.3.30. MAX PULSE = maximum pulse of the actual timing period

Prerequisite: Capture only with running or stopped and not deleted stopwatch/timer/countdown/lap timer function

Displaying the information		MAX PULSE
Reset:		Press button for 4 sec.

11.3.31. PULSE MAX % = pulse as a percentage of personal maximum pulse

Prerequisite: Only with running or stopped and not deleted capture of stopwatch/timer/countdown/lap timer (

Displaying the information		PULSE MAX %
Reset:		Press STW button for 4 sec.

11.3.32. LIMIT LO HI = residence times in the pulse ranges  
Prerequisite: Only with running or stopped and not deleted capture of stopwatch/timer/countdown/lap timer

Only if personal data have been entered, chapter 6.. Always based on selected training program (limit 1, 2, or 3), chapter 7.3.

Displaying the information		LIMIT LO HI (values run sequentially in 2 second rhythm)
Reset:		Press button for 4 sec.

11.3.33. RECOV TIME or RECOV PULSE = recovery time and recovery pulse measurement

Prerequisite: Only if recovery time/recovery pulse is defined, chapter 6. Starting the measurement

press simultaneously		RECOV TIME or RECOV PULSE
Reset:		Press button for 4 sec.

11.3.34. CALORIE = calorie consumption of the actual timing period

Prerequisite:

Only with running or stopped and not deleted stopwatch/timer/countdown/lap timer function

Only if personal data have been entered, chapter 6.

Displaying the information		CALORIE
Reset:		Press button for 4 sec.

11.3.35 POWER WATT = actual power in watt (optional)

Prerequisite: Only if personal data have been entered, chapter 6.

Displaying the information		POWER WATT
----------------------------	--	------------

# INSTRUCTION MANUAL

**IMPORTANT:** Only functions with installed cadence extension. If the cadence option is installed the power display shows ZERO when the pedals are not moving.

## 12. RIDING WITH THE NAVIGATOR

With the VDO Navigator you can complete trips according to Roadbooks (e.g. Moser Guide). Roadbooks are offered by many publishing houses for fantastic trips (for road bikes as well as mountain bikes) by many publishing houses. Taking a specified trip is facilitated thanks to the detailed km description of certain orientation points.

Note: This function is not available in walk mode.

The VDO Navigator is an independent km or mi counter and works in the following modes:

- a. Counting down: To display the distance remaining to the next orientation point
- b. Counting up: To display the distance covered since the last orientation point

Note: The Navigator always runs automatically even if you have not set it.

The Navigator km status can be set/changed at any point desired. Thus you can start in the middle of a trip or execute a km correction if you took a wrong turn.

### 12.1. SELECTING NAVIGATOR MODE

- 3 sec.  Setting mode LANGUAGE SELECT  
 NAVIGATOR SET

-  NAVIGATOR FORWARD ( to go to NAVIGATOR BACKWARD)  
 NAVIGATOR NEXT DIGIT  
  Set last digit (keep button depressed for fast run-through)  
 „NAVIGATOR NEXT DIGIT  
... repeat for all digits from back to front  
 NAVIGATOR ?SET OK?  
  Set first digit (keep button depressed for fast run-through)  
 NAVIGATOR SET DONE

Automatic return to the operation mode for NAVIGATOR

### 12.2. RESETTING THE NAVIGATOR AT THE ORIENTATION POINT

- 3 sec.  TRIP DATA ?RESET?  
  NAVIGATOR ?RESET?  
 NAVIGATOR ?RESET? <<?RESET?>> flashes  
 NAVIGATOR RESET DONE

Automatic return to the operation mode for NAVIGATOR  
Navigator reset done

## 13. THE TIMING FUNCTIONS

The following settings are of particular importance when using the pulse functions (chapter 14.).

Your VDO computer has 6 different timing functions. If one of the timing functions is running the TIMING indicator icon  will always be flashing in the left part of the display. Moreover the residence times in the tri-

ning ranges are captured for each running timing function (see chapter Kap. 14). The setting range/measuring range for all timing functions is 0:00:00 h to 24:00:00 h

**TIMER 1:** You can program a time e.g. for interval training. TIMER 1 counts from zero forward. At the end of TIMER 1 there is a single beep. Timer 1 only functions if you have set a time. If you have forgotten to set a time your VDO computer displays TIMER ERROR

**TIMER 2:** You can program a time, e.g. for the rest phase in an interval training. TIMER 2 counts from zero forward. At the end of TIMER 2 there are two beeps. Timer 2 only functions if you have set a time. If you have forgotten to set a time your VDO computer displays TIMER ERROR

**TIMER 1+2** runs until you stop these functions. Timers 1 + 2 only function if you have set a time. If you have forgotten to set a time your VDO computer displays TIMER ERROR.

**COUNTDOWN:** You can program a time, the timer will count backwards from this time. At the end of the COUNTDOWN time there is a single beep. Countdown only functions if you have set a time. If you have forgotten to set a time your VDO computer will display COUNTDOWN ERROR.

**COUNT DOWN**

**LAP TIMER:** Start Lap Timer with **SW**. Start next Lap with **P + A** at the same time at any point of the training unit. The following values will be saved:

- Duration of the lap
- Average heart rate on the lap
- Average speed on the lap

The lap values can be called at any time if time measurement is stopped.

**STOPWATCH:** With the manual stopwatch you can manually capture the plus values of training units.

### 13.1. SELECTING THE TIMING FUNCTION

3 sec.	<b>1</b>	Setting mode LANGUAGE SELECT
	<b>▼ ▲</b>	TIMER SETTINGS
Select	<b>M</b>	TIMER ?SELECT?
Timer	<b>M</b>	TIMER 1 ?SELECT?
	<b>▼</b>	TIMER 2 ?SELECT?
	<b>▼</b>	TIMER 1 + 2 ?SELECT? >>> Query repeats TIMER 1 + 2 REPEATS ?SELECT?
	<b>▼</b>	COUNTDOWN ?SELECT?
	<b>▼</b>	LAP TIMER ?SELECT?
	<b>▼</b>	STOP WATCH ?SELECT?
	<b>M</b>	Confirm selection SET DONE

If you have not yet set any values for timer 1, timer 2, timer 1 +2, or countdown, then your VDO computer will now show ERROR in the display. In this case proceed as explained in the following chapter 13.2 Setting the timer.

# INSTRUCTION MANUAL

## 13.2. SETTING THE TIMER (when selecting timer 1 or timer 2 or timer 1+2)

Setting times for timer 1/timer 2

3 sec. ① Setting mode LANGUAGE SELECT

▼ □ TIMER SETTINGS

Ⓜ TIMER ?SELECT?

▼ TIMER ?SET?

Ⓜ TIMER 1 ?SET?

▼ TIMER 2 ?SET?

Select ② TIMER ?SET?

Ⓜ SET HOUR ?CONTINUE?

▼ □ Setting hours (keep button depressed for fast run-through)

Ⓜ SET MINUTES ?CONTINUE?

▼ □ Setting minutes (keep button depressed for fast run-through)

Ⓜ SET SECONDS ?CONTINUE?

▼ □ Setting seconds (keep button depressed for fast run-through)

Ⓜ TIMER ?SET OK?

Ⓜ TIMER SET DONE

Automatic return to the operation mode for TIMER 1/2. If you have not yet set any values for timer 1, and/or timer 2, then your VDO computer will now show ERROR in the display.

## 13.3. SETTING TIMER 1 + 2 REPEATS (when selecting timer 1 + 2)

3 sec. ① Setting mode LANGUAGE SELECT

▼ □ TIMER SETTINGS

Ⓜ TIMER ?SELECT?

▼ TIMER 1 ?SELECT?

Ⓜ TIMER 1 + 2 ?SELECT?

Ⓜ TIMER 1+2 REPEATS ?SELECT?

▼ □ Setting the number of repeats (keep button depressed for fast run-through)

Ⓜ TIMER 1+2 ?SET OK?

Ⓜ TIMER 1+2 SET DONE

Automatic return to the operation mode for TIMER 1/2. If you have not yet set any values for timer 1, and/or timer 2, then your VDO computer will now show ERROR in the display.

## 13.4 SETTING THE COUNTDOWN (when selecting countdown timer)

3 sec. ① Setting mode LANGUAGE SELECT

▼ □ TIMER SETTINGS

Ⓜ TIMER ?SELECT?

▼ TIMER ?SET?

Ⓜ TIMER 1 ?SET?

▼ COUNTDOWN ?SET?

Ⓜ SET HOUR ?CONTINUE?

▼ □ Setting hours (keep button depressed for fast run-through)

Ⓜ SET MINUTES ?CONTINUE?

▼ □ Setting minutes (keep button depressed for fast run-through)

Ⓜ SET SECONDS ?CONTINUE?

▼ □ Setting seconds (keep button depressed for fast run-through)

Ⓜ COUNTDOWN ?SET OK?

## **M** COUNTDOWN SET DONE

Automatic return to the operation mode for COUNTDOWN  
If you have not yet set any values for countdown, then your VDO computer will now show ERROR in the display.

### 13.5. LAP-TIMER

The LAP timer must first be started with the **STW** button. To save the LAP data press buttons **P + A** at the same time on the desired points of the training unit. In this process the following values will be saved:

- Duration of the lap
- Average heart rate on the lap
- Average speed on the lap

The lap values can be called at any time if time measurement is stopped.

### 13.6. STOPWATCH

Use of the stopwatch does not require any previous setting. After preselect (see chapter 13.1), it can be stopped or started at any time with **STW**.

## **14. TRAINING CONTROL WITH THE PULSE FUNCTIONS**

See chapter 13 for information on making the settings. For focused training control it is necessary to keep the pulse in certain ranges through specific stress, see chapter 7.3. The different training programs are defined by a low limit and high limit. The pulse range between the two values is usually the target range for your training. After determining the pulse ranges (automatically or manually) your VDO computer records the residency period in the target range as well as

the times above and below the target range. For real-time monitoring your VDO computer indicates when you leave the target range via an acoustic signal, if you have set this function beforehand.

### 14.1. TRAINING WITH THE STOPWATCH

The stopwatch offers the easiest possibility for capturing pulse data. When the stopwatch is running pulse data is recorded. Interruption/continuation of the recording is possible at any time with **STW**.

step 1 Preparing the recording:

- Set the training ranges automatically chapter 7.1, or manually chapter 7.2
- Select training program limit 1, limit 2, limit 3, chapter 7.3
- In the TIMER SETTINGS setting menu select STOPWATCH, chapter 13.1.

step 2 Beginning of the recording:

**STW** Start the recording

4sec. **P** Switch on/switch off the acoustic pulse signal



step 3 End/interruption of the recording:

**STW** Stop the recording

step 4 Display of the values (even during recording)

**P** Display data via the LIMIT LO HI pulse menu (display automatically shows the times for the three ranges in %)

- Time above the high limit

# INSTRUCTION MANUAL

- Time between the limit values
- Time under the low limit

## step 5 Deleting recorded data

4sec. 

**TIP:** At the end of the training unit measure the recovery time or the recovery pulse to determine your training status. See 7.4. Recovery time and recovery pulse

Note: All bicycle altitude and pulse function can also be called up during timer operation via the **1** **2** **A** **P** buttons.

## 14.2. TRAINING WITH TIMER 1 / TIMER 2 / TIMER 1+2

Independently of each other Timer 1 or timer 2 offer the possibility of integrating intervals with manual control in the training.

Timer 1: Programmable timer with forward counting, auto-repeat function, single beep after elapse of timer 1.

Timer 2: Programmable timer with forward counting. Auto-repeat function, double beep after elapse of timer 2.

### Combination timer 1+2:

The combination of timer 1+2 can be set optimally for interval training:

Timer 1 = active phase, timer 2 = rest phase. When timer 1 elapses a single beep sounds, when timer 2 elapses a double beep sounds. For timer 1+2 you can set the number of repeats. In this case time 1+2 runs until all repeats have elapsed or the measurement is interrupted by .

**IMPORTANT:** During timer operation the residence periods of the pulse frequency in the selected training ranges is recorded (compare 13.1)

## step 1 Preparing the recording

- Set the training ranges automatically chapter 7.1, or manually chapter 7.2.

- Select training program limit 1, limit 2, limit 3, chapter 7.3.

- In the TIMER SETTINGS setting menu select the desired timer

## step 2 Beginning of the recording:

 Start the recording

4sec.  Switch on/switch off the acoustic pulse signal

## step 3 End/interruption of the recording:

AUTOMATIC depending on timer selection at the end of the respective timer or at the end of all selected repeats with the combination function timer 1+2

 Manual interruption = stop recording

## step 4 Display of the values (even during recording):

 Display data via the LIMIT LO HI pulse menu (display automatically shows the times for the three ranges in %)

- Time above the high limit

- Time between the limit values

- Time under the low limit

## step 5 Deleting recorded data

4sec. 

Note: All bicycle altitude and pulse function can also be called up during timer operation via the **1** **2** **A** **P** buttons.

**TIP:** At the end of the training unit measure the recovery time or the recovery pulse to determine your training status, see chapter 7.4.  
Recovery time and recovery pulse.

#### 14.3. TRAINING WITH THE COUNTDOWN TIMER:

The countdown timer is a programmable timer with reverse counting. This is particularly well-suited for use in time trials. At the end of the COUNTDOWN time there is a single beep.

**IMPORTANT:** During countdown operation the residence periods of the pulse frequency in the selected training ranges are recorded (compare 13.1)

step 1 Preparing the recording:

- Set the training ranges automatically chapter 7.1, or manually chapter 7.2
- Select training program limit 1, limit 2, limit 3, chapter 7.3
- In the setting menu TIMER SETTINGS select AND set the countdown timer, chapter 13.1 and following.

step 2 Beginning of the recording:

Start the recording

4sec. Switch on/switch off the acoustic pulse signal

step 3 End/interruption of the recording:

AUTOMATIC after the countdown time elapses

Manual interruption = stop recording

step 4 Display of the values (even during recording)

Display data via the LIMIT LO HI pulse menu

(Display automatically shows the times for the three ranges in %)

- Time above the high limit
- Time between the limit values
- Time under the low limit

step 5 Deleting recorded data

4sec.

**TIP:** At the end of the training unit measure the recovery time or the recovery pulse to determine your training status, see chapter 7.4.  
Recovery time and recovery pulse.

Note: All bicycle altitude and pulse function can also be called up during timer operation via the **1 2 A P** buttons.

**TIP:** At the end of your countdown timer measure the recovery time or the recovery pulse to determine your training status. See 7.4. Recovery time and recovery pulse.

#### 14.4. TRAINING WITH THE LAP TIMER

The lap timer of your VDO computer is designed for lap training. You can record up to 50 laps manually. In this case your computer saves the following values for each lap:

- Lap time
  - Average pulse during the lap
  - Average speed during the lap (**IMPORTANT:** no display in walk mode)
- With these values you have an outstanding method of analyzing the development of your performance if you always do the same laps. This could be certain mountain values or flat stretches on your training lap. The lap timer function can be set in bicycle mode and in walk mode.

# INSTRUCTION MANUAL

## Important:

1. The values saved for the individual laps can only be shown in the display in recall mode after concluding the measurement.
2. If the lap timer is running the residence period of the pulse frequency in the selected training ranges is recorded (compare 13.1)

## step 1 Preparing the recording:

- Set the training ranges automatically chapter 7.1, or manually chapter 7.2
- Select training program limit 1, limit 2, limit 3, chapter 7.3
- In the TIMER SETTINGS setting menu select the lap timer chapter 7.4

## step 2 Starting/changing/interrupting laps:



Switch on/switch off the acoustic pulse signal



Start lap 1

Press concurrently:



End lap 1 and start lap 2 concurrently

Start next lap:



End lap 2 and start lap 3 concurrently...

Interrupt:



Interrupt lap measuring (e.g. for recovery lap or break)

You can interrupt each lap as often as desired, or end the lap and record up to 50 individual laps.

## step 3 Display the values (during a break or after ending the lap training).

Prerequisite: The lap timer must be stopped ()



Display data via the pulse menu LAP REC

Display of values for LAP 1 (Fig. display)

Center bar left: Average pulse on the lap

Center bar right: Average speed on the lap (IMPORTANT: no display in walk mode)

Footer: Lap number and time of the lap



Changing the display of values for lap 2



Changing the display of values for lap 3

...

During or after lap training the pulse data can be displayed at any time:  
Display data via the LIMIT LO HI pulse menu (display automatically shows the times for the three ranges in %)

- Time above the high limit
- Time between the limit values
- Time under the low limit

## step 5 Deleting all recorded lap data

4sec.

TIP: At the end of the training unit measure the recovery time or the recovery pulse to determine your training status. See 7.4. Recovery time and recovery pulse

## 15. SLEEP MODE

Your VDO computer has a two-stage sleep mode.

Sleep mode is activated automatically if the computer no longer receives data.

Phase 1 after 5 minutes: - The display goes into sleep mode

Now the display shows temperature, time, date, and day of the week.  
After an additional 10 minutes the second phase of sleep mode will be activated, will be activated, the receiver will be switched off.

FOR WAKE UP              press any button.

Description special case 1.

No speed signals (e.g. when taking a break)

No cadence signals (e.g. when taking a break)

Pulse signals will continue to be received (e.g. computer on wrist)

In this case the receive channels for speed and cadence are opened for a total of 3 hours. Energy is consumed in this process.

To extend the service life of the batteries, leave your VDO computer in the handlebar holder and move out of the receive range, or take off the pulse transmitter belt.

## 16. TROUBLESHOOTING

Here is a list of possible errors, their causes, and what you can to correct the error:

Problem when pairing the speed transmitter/cadence transmitter

- Check the magnet position (distance between magnet and transmitter, position of the magnet to the transmitter point on the transmitter)
- Check the battery in the transmitter
- Check the battery in the computer (if battery voltage is insufficient then the receiver cannot receive the signals)

Problem when pairing the speed transmitter/cadence transmitter

- Check the magnet position (distance between magnet and transmitter, position of the magnet to the transmitter point on the transmitter)
- Check the battery in the transmitter
- Check the battery in the computer (if battery voltage is insufficient then the receiver cannot receive the signals)

# INSTRUCTION MANUAL

Problem when pairing the pulse-chest belt	<ul style="list-style-type: none"> <li>- Check the battery in the chest belt</li> <li>- Check the battery in the computer (if battery voltage is insufficient then the receiver cannot receive the signals)</li> </ul>	No cadence display	<ul style="list-style-type: none"> <li>- Check the magnet position (distance between magnet and transmitter, position of the magnet to the transmitter point on the transmitter)</li> <li>- Check the battery in the transmitter</li> <li>- Check the battery in the computer (if battery voltage is insufficient then the receiver cannot receive the signals)</li> </ul>
No speed display	<ul style="list-style-type: none"> <li>- Check the magnet position (distance between magnet and transmitter, position of the magnet to the transmitter point on the transmitter)</li> <li>- Check the battery in the transmitter</li> <li>- Check the battery in the computer (if battery voltage is insufficient then the receiver cannot receive the signals)</li> </ul>	No speed display (dash in the display)	<p>The receive channel for speed is switched off (a 15-minute period has elapsed without receiving a speed signal) Press buttons <b>A</b> + <b>B</b> at the same time</p>
		No cadence data (dash in the display)	<p>The receive channel for cadence is switched off (a 15-minute period has elapsed without receiving cadence signals) Press buttons <b>A</b> + <b>B</b> at the same time</p>

No pulse display (dash in the display)	The receive channel for pulse is switched off (a 15-minute period has elapsed without receiving pulse data) Press buttons <b>A</b> + <b>1</b> at the same time	LAP data cannot be displayed/ are no longer present	The LAP data have been deleted prior to LAP RECALL
No average pulse	Timer has not been started Start timer	Screwdriver is flashing on the display 	Service interval for your bicycle is displayed. Take your bicycle in for service or perform the service yourself
No maximum pulse	Timer has not been started Start timer	Walking shoe is shown in the display (bicycle distance data is no longer displayed) 	Walk mode is switched on. In walk mode certain bike functions are not available
No pulse percentage of the personal maximum pulse	Personal data has not been set, timer has not been started	The timer indicator is flashing 	A timer is still running.
No data relative to training times is in the set training ranges	Timer has not been started. Start timer	Bell icon is displayed 	An alarm is set (alarm time)
Calorie display does not function	Personal data has not been set, timer has not been started	The LAP icon is flashing 	A LAP recording is still running. End recording with the  button
Watt display does not function	- Personal data has not been set - Watt settings have not been made - Cadence transmitter is not installed - Cadence transmitter does not function		

# **INSTRUCTION MANUAL**

## **17. GUARANTEE CONDITIONS**

VDO Cycle Parts offers a 5-year guarantee on your VDO computer, starting from date of purchase. The guarantee extends to material and manufacturing defects on the computer itself, on the docking station, on the transmitters and on the handlebar and wrist band holder. Cable and batteries, as well as other mounting materials are excluded from the guarantee.

The guarantee is only valid if the components in questions have not been opened (exception: battery compartment of the computer), if force has not been applied, and if willful damage is not present. Please keep the purchase receipt in a safe place because it must be submitted if there is a complaint. You will receive a comparable replacement device if there is a legitimate complaint.

A claim for replacement of the identical model does not exist if the model in question is no longer in production due to a model change. Please contact the dealer from whom you purchased the device for all complaints and guarantee claims. Or send your complaint directly to

Cycle Parts GmbH, Große Ahlmühle 33, D-76865 Rohrbach.

We would be pleased to answer any technical questions you might have at the following hotline number:

+49-6349-9635-10.

Additional technical information is available at:

<http://www.vdocyclecomputing.com>

In the course of further development we reserve the right to make technical changes without prior notice.

## **18. TECHNICAL SPECIFICATIONS**

Computer: Approximately 49.6 x 46.6 x 16.5 mm, weight:  
Approximately 45 g

Handlebar holder: Weight approximately 15 g

Speed transmitter: Weight approximately 20 g

Pulse transmitter: Weight approximately 80 g

Battery: 3V, type 2032 (computer); type 2032 (speed transmitter); type 2032 (pulse transmitter)

Battery service life:

Computer: Approximately 300 hours, approximately 8000 KM (5000 M) (speed only)

Pulse transmitter: Approximately 800 hours

Working temperature of the display: -15 °C to +60 °C

Speed range: for wheel size 2155 mm, min 3 km/h, max 120 km/h

Ride time measurement range: Up to 24:00:00 HH:MM:SS

Stopwatch measurement range: Up to 24:00:00 HH:MM:SS

Day trip measurement range: Up to 999.99 km or mi.

NAVIGATOR measurement range: Up to 999.99 km or mi.

Total KM 1 and 2 measurement range: Up to 99,999 km or mi.

Total kilometers measuring range: Up to 199,999 km or mi.

Wheel size: 100 mm minimum, 3999 mm maximum



#### **Correct Disposal of This Product (Waste Electrical & Electronic Equipment)**

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



#### **Korrekte Entsorgung dieses Produkts (Elektromüll)**

(Anzuwenden in den Ländern der Europäischen Union und anderen europäischen Ländern mit einem separaten Sammelsystem)

Die Kennzeichnung auf dem Produkt bzw. auf der dazugehörigen Literatur gibt an, dass es nach seiner Lebensdauer nicht zusammen mit dem normalen Haushaltsmüll entsorgt werden darf. Entsorgen Sie dieses Gerät bitte getrennt von anderen Abfällen, um der Umwelt bzw. der menschlichen Gesundheit nicht durch unkontrollierte Müllbeseitigung zu schaden. Recyceln Sie das Gerät, um die nachhaltige Wiederverwertung von stofflichen Ressourcen zu fördern. Private Nutzer sollten den Händler, bei dem das Produkt gekauft wurde, oder die zuständigen Behörden kontaktieren, um in Erfahrung zu bringen, wie sie das Gerät auf umweltfreundliche Weise recyceln können. Gewerbliche Nutzer sollten sich an Ihren Lieferanten wenden und die Bedingungen des Verkaufsvertrags konsultieren. Dieses Produkt darf nicht zusammen mit anderen Gewerbemüll entsorgt werden.



#### **Korrekt affaldsbortskaffelse af dette produkt (elektrisk & elektronisk udstyr)**

Mærket på dette produkt eller i den medfølgende dokumentation betyder, at produktet ikke må bortskaffes sammen med almindeligt husholdningsaffald efter endt levetid. For at undgå skadelige miljø- eller sundhedspåvirkninger på grund af ukontrolleret affaldsbortskaffelse skal dette produkt bortskaffes særskilt fra andet affald og indleveres behørigt til fremme for bæredygtig materialegenbrug. Hjemmebrugere bedes kontakte forhandleren, hvor de har købt produktet, eller den lokale myndighed for oplysning om, hvor og hvordan de kan indlevere produktet med henblik på miljøforsvarlig genbrug. Erhvervsbrugere bedes kontakte leverandøren og læse betingelserne og vilkårene i købekontrakten. Dette produkt bør ikke bortskaffes sammen med andet erhvervsaffald.



#### **Správna likvidácia tohto výrobku (Elektrotechnický a elektronický odpad)**

Toto označenie na výrobku alebo v sprievodnej brožúre hovorí, že po skončení jeho životnosti by nemal byť likvidovaný s ostatným odpadom. Prípadnému poškodeniu životného prostredia alebo, udržateľnosti zdravia môžete predísť tým, že budete takéto typy výrobkov oddeľovať od ostatného odpadu a vrátiť ich na recykláciu. Používateľia v domácnostach by pre podrobnejšie informácie, ako ekologicky bezpečne naťažiť s týmto výrobkom, mali kontaktovať bud predajcu, ktorý im výrobok predal, alebo príslušný úrad v okolí ich bydliska. Priemyselné používateľia by mali kontaktovať svojho dodávateľa a preveriť si podmienky krajnej zmluvy. Tento výrobok by nemal byť likvidovaný spolu s ostatným priemyselným odpadom.

#### **Evacuarea corectă a acestui produs** (reziduuri provenind din aparatură electrică și electronică)

Marcajele de pe acest produs sau menționate în instrucțiunile sale de folosire indică faptul că produsul nu trebuie aruncat împreună cu alte reziduuri din gospodărie atunci când nu mai este în stare de funcționare. Pentru a preveni posibile efecte dăunătoare asupra mediului înconjurător sau a sănătății oamenilor datorate evacuării necontrolate a reziduurilor, vă rugăm să separați acest produs de alte tipuri de reziduuri și să-l reciclați în mod responsabil pentru a promova refolosirea resurselor materiale. Utilizatorii casnici sunt rugați să ia legătura fie cu distribuitorul de la care au achiziționat acest produs, fie cu autoritățile locale, pentru a primi informații cu privire la locul și modul în care pot depozita acest produs în vederea reciclării sale ecologice. Companiile sunt rugate să ia legătura cu furnizorul și să verifice condițiile stipulate în contractul de vânzare. Acest produs nu trebuie amestecat cu alte reziduuri de natură comercială.

#### **Правилно отстранување на овој производ** (Изтрошена електрична и електронска опрема)

Оваа ознака прикажана на производот или во неговата документација покажува дека тој не треба да се фрла со преостанатиот отпад од домаќинствота, кога веќе нема да биде употребливи. За да се избегне можноот нарушување на животната средина или на човековото здравје, како резултат на неконтролираното отстранување на отпадот, ве молиме да го одделите од другите видови отпад и совесно да го рециклирате, за да промовирате одржливата повторна употреба на материјалните ресурси. Корисниците во домашинствота треба да се обратат до дистрибуторите кај кои го купиле производот или до локалните власти, за да ги дознават деталите за това каде и како можат да го однесат производот заради рециклирање коишто е безбедно за животната средина. Деловните корисници треба да се обратат до нивните набавувачи и да ги проверат условите од договорот за купопродажба. При отстранувањето, овој производ не треба да се меша со другиот комерцијален отпад.

#### **Comment éliminer ce produit** (déchets d'équipements électriques et électroniques)

(Applicable dans les pays de l'Union Européen et aux autres pays européens disposant de systèmes de collecte sélective)

Ce symbole sur le produit ou sa documentation indique qu'il ne doit pas être éliminé en fin de vie avec les autres déchets ménagers. L'élimination incontrôlée des déchets pouvant porter préjudice à l'environnement ou à la santé humaine, séparer des autres types de déchets et le recycler de façon responsable. Vous favoriserez ainsi la réutilisation durable des ressources matérielles. Les particuliers sont invités à contacter le distributeur leur ayant vendu le produit ou à se renseigner auprès de leur mairie pour savoir où et comment ils peuvent se débarrasser de ce produit afin qu'il soit recyclé en respectant l'environnement. Les entreprises sont invitées à contacter leurs fournisseurs et à consulter les conditions de leur contrat de vente. Ce produit ne doit pas être éliminé avec les autres déchets commerciaux.



#### **Corretto smaltimento del prodotto (rifiuti elettrici ed elettronici)**

(Applicable in i paesi dell'Unione Europea e in quelli con sistema di raccolta differenziata) marchio riportato sul prodotto o sulla sua documentazione indica che il prodotto non deve essere smaltito con altri rifiuti domestici al termine del ciclo di vita. Per evitare eventuali danni all'ambiente o alla salute causati dall'inopportuno smaltimento dei rifiuti, si invita l'utente a separare questo prodotto da altri tipi di rifiuti e di riciclarlo in maniera responsabile per favorire il riutilizzo sostenibile delle risorse materiali. Gli utenti domestici sono invitati a contattare il rivenditore presso il quale è stato acquistato il prodotto o l'ufficio locale preposto per tutte le informazioni relative alla raccolta differenziata e al riciclaggio per questo tipo di prodotto. Gli utenti aziendali sono invitati a contattare il proprio fornitore e verificare i termini e le condizioni del contratto di acquisto. Questo prodotto non deve essere smaltito unitamente ad altri rifiuti commerciali.



#### **A termék megfelelő leadása (Elektromos és elektronikus készülékek hulladékkezelése)**

A terméken vagy a hozzá tartozó dokumentáción szereplő jelzés arra utal, hogy hasznos élettartama végén a terméket nem szabad házéklekkel együtt kidobni. Annak érdekében, hogy megelőzhető legyen a szabálytalan hulladékleadás által okozott környezet- és egészségkárosodás, különösebben ezt el a többi hulladékktól, és felelősségteljesen gondoskodjon a hulladék leadásáról, a hulladékanyagok fenntartható szintű újrafelhasználása céljából. A háztartási felhasználók a termék forgalmazójától vagy a helyi önkormányzati szervektől kérjenek tanácsot arra vonatkozóan, hogyan lehet el ez elhasznált terméket a környezetvédelmi szempontból biztonságos hulladékleadás céljából. Az üzleti felhasználók lépteknek kapcsolatba a forgalmazóval, és vizsgálják meg az adásvételi szerződés feltételeit. A terméket nem szabad leadni kereskedelmi forgalomról származó egyéb hulladékkel együtt.



#### **Tinkamas produktu atlieku tvarkymas (atitarnavusi elektros ir elektronikos įranga)**

Šis ženklas, pateikiamas ant produkto ar jo dokumentacijoje, nurodo, kad pasibaigus produkto tarnavimo laikui, jo negalima išmesti kartu su kitomis būtinėmis atliekomis. Kad būty išvergent galimos nekontroliuojamo atlieku išmetimo žalos aplinkai arba žmonių sveikatai, ir siekiant skatinoti aplinką tausojant antrinių žaliavų panaudojimą, pašom atskirti jį nuo kitų rūsių atlieku ir atiduoti perdibti. Informacijos, kur ir kaip pristatyti šį produkta saugiai perdibti, privatus vartotojai turėtų kreiptis arba į parduotuvę, kurioje ši produkta pirkta, arba į vietines valdžios institucijas. Verslo vartotojai turėtų kreiptis į savo tiekėją ir peržiūrėti pirkimo sutarties sąlygas. Šis produktas tvarkant atliekas negali būti sumaišytas su kitomis atliekomis.



#### **Изхвърляйте правилно този продукт (отпадъчно електрическо и електронно оборудване)**

Това обозначение на продукта или съществуващите го материали означава, че той не бива да бъде изхвърлен заедно с другите битови отпадъци след края на полезния му живот. За да се предотврати възможното увреждане на околната среда или човешки живот от безконтролното изхвърляне на отпадъци, моля, отделявайте такива продукти от другите видове отпадъци и го рециклирайте, демонстрирайки отговорно отношение към настъпването на устойчива многократна употреба на материални ресурси. При употреба за битови нужди трябва да се свържете с продавача на дребно, от когото сте закупили продукта или с местните власти за подробности относно това къде и как можете да предадете продукта за безопасно рециклиране. При употреба за стопански нужди трябва да се свържете с доставчика си и да проверите реда и условията в договора за закупуване. Този продукт не трябва да се смесва с други отпадъци на работното място.



#### **Öige viis töote käsutusest kõrvaldamiseks (elektriliste ja elektrooniliste seadmete jäätmed)**

Selline tähistus tootel või selle dokumentidel näitab, et toodet ei tohi kasutusaja lõpumisel kõrvaldada koos muude olmejäätmetega. Selleks, et vältida jäätmete kontrollimatu kõrvaldamisega seotud võimaliku kahju tekitamist keskkonnale või inimeste tervisele ning edendada materjalisevalt hoidlikku ja ära kasutatavat ressurssi. Toodet ei toodeta muudest jäätmetest ja sunake taasringlusse. Kodukasutajad saavad teavet keskkonnaohutu ringlussevõtu kohta kas toote müüjalt või keskkonnaametist. Firmad peaksid võtma ühendust tarnijaga ning kontrollima ostulepingu tingimusi ja sätteid. Toodet ei tohi panna muude hävitamiseks mõeldud kaubandusjäätmete hulka.



#### **Eliminación correcta de este producto (material eléctrico y electrónico de descarte)**

(Aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos) La presencia de esta marca en el producto o en el material informativo que lo acompaña, indica que al finalizar su vida útil no deberá eliminarse junto con otros residuos domésticos. Para evitar los posibles daños al medio ambiente o a la salud humana que representa la eliminación incontrolada de residuos, separa este producto de otros tipos de residuos y reciclolo correctamente para promover la reutilización sostenible de recursos materiales. Los usuarios particulares pueden contactar con el establecimiento donde adquirieron el producto, o con las autoridades locales pertinentes, para informarse sobre cómo y dónde pueden llevarlo para que sea sometido a un reciclaje ecológico y seguro. Los usuarios comerciales pueden contactar con su proveedor y consultar las condiciones del contrato de compra. Este producto no debe eliminarse mezclado con otros residuos comerciales.



#### **Correcte verwijdering van dit product (elektrische & elektronische afvalapparatuur)**

Dit merkteken op het product of het bijbehorende informatiemateriaal duidt erop dat het niet met ander huishoudelijk afval verwijderd moet worden aan het einde van zijn gebruiksduur. Om mogelijke schade aan het milieu of de menselijke gezondheid door ongecontroleerde afvalverwijdering te voorkomen, moet u dit product van andere soorten afval scheiden en op een verantwoorde manier recycelen, zodat het duurzame hergebruik van materiaalbronnen wordt bevorderd. Huishoudelijke gebruikers moeten contact opnemen met de winkel waar ze dit product hebben gekocht of met de gemeente waar ze wonen om te vernemen waar en hoe ze dit product milieuvriendelijk kunnen laten recyclen. Zakelijke gebruikers moeten contact opnemen met hun leverancier en de algemene voorwaarden van de koopovereenkomsten nalezen. Dit product moet niet worden gemengd met ander bedrijfsafval voor verwijdering.



#### **Tämän tuotteen turvallinen hävittäminen (elektroniikka ja sähkölaitteet)**

Oheinen merkintä tuotteessa tai tuotteen oheismateriaalissa merkitsee, että tästä tuotesta ei tule hävittää kotitalousjätteen mukana sen elinkaaren päättyttyä. Hallitsemattomasta jätteenkäsittelystä ympäristöle ja kanssa ihmisten terveydelle aiheutuvien vahinkojen välttämiseksi tuote tulee käsitellä muista jätteistä erillään. Jäte on hyvä kierrättää raaka-aineiksi kestävän ympäristökehityksen takia. Kotitalouskäyttäjien tulisi ottaa yhteyttä tuotteen myyneeseen jälleenmyyjään tai paikalliseen ympäristöviranomaiseen, jotka antavat lisätietoja tuotteen turvallista kierätysmahdollisuuksista. Yrityskäyttäjien tulisi ottaa yhteyttä tavarantoimittajaan ja selvittää hankintasopimuksen ehdot. Tätä tuotetta ei tule hävittää muun kaupallisisen jätteen seassa.



#### Izstrādājuma pareiza likvidēšana (nolietotas elektriskās un elektroniskās ierīces)

Uz izstrādājumu vai tam pievienotajās instrukcijas dotois marķējums norāda, ka to nedrīkst likvidēt kopā ar citiem sadzīves atkritumiem pēc tā ekspluatācijas laika. Lai nevērstu videi un cilvēku veselībai iespējamo kaitējumu, kas ir saistīts ar nekontrolējamu atkritumu likvidēšanu, tas jānoskrī no ciemam atkritumiem iepārstrādā, lai sekਮētu materiālo resursu atbildīgu atkārtotu lietošanu. Mājsaimniecības lietotājiem jāsazinās vai nu ar veikalu, kurā šis izstrādājums ir pirkts, vai ar pašvaldību, lai iegūtu informāciju par to, kā un kur var nodot šo izstrādājumu, lai garantētu ekoloģiski drošu reciklēšanu. Rūpnieciskajiem lietotājiem jāsazinās ar piegādātāju un jāpārbauda pirkuma līguma nosacījumi. Šo izstrādājumu nedrīkst sajaukt ar ciemam likvidējamiem rūpnieciskajiem atkritumiem.



#### Korrekt avfallshantering av produkten (elektriska och elektroniska produkter)

Denna markering på produkten och i manuelen anger att den inte bör sorteras tillsammans med annat hushållsavfall när dess livstid är över. Tills förebyggande av skada på miljö och hälsa bör produkten hanteras separat för ändamålsenlig återvinning av dess beständigheter. Hushållsanvändare bör kontakta den återförsäljare som säljt produkten eller sin kommun för vidare information om var och hur produkten kan återvinnas på ett miljössäkert sätt. Företagsanvändare bör kontakta leverantören samt verifiera angivna villkor i köpekontraktet. Produkten bör inte hanteras tillsammans med annat kommersiellt avfall.



#### Správná likvidace tohoto produktu (Zničení elektrického a elektronického zařízení)

Tato značka zobrazena na produktu nebo v dokumentaci znamená, že by neměl být používán s jinými domácími zařízeními po skončení svého funkčního období. Aby se zabránilo možnému znečištění životního prostředí nebo zranění člověka díky nekontrolovanému zničení, oddělte je prosíme od dalších typů odpadů a recyklujte je zodpovědně k podpoře opětovného využití hmotných zdrojů. Členové domácnosti by měli kontaktovat jak prodejce, u něhož produkt zakoupili, tak místní vládní kancelář, ohledně podrobnosti, kde a jak můžete tento výrobek bezpečně vzhledem k životnímu prostředí recyklovat. Obchodníci by měli kontaktovat své dodavatele a zkontrolovat všechny podmínky koupě. Tento výrobek by se neměl míchat s jinými komerčními produkty, určenými k likvidaci.



#### Prawidłowe usuwanie produktu (zużyty sprzęt elektryczny i elektroniczny)

Oznaczenie umieszczone na produkcie lub w odnoszących się do niego tekstach wskazuje, że produktu po upływie okresu użytkowania nie należy usuwać z innymi odpadami pochodzącyimi z gospodarstw domowych. Aby uniknąć szkodliwego wpływu na środowisko naturalne i zdrowiu ludzi wskutek niekontrolowanego usuwania odpadów, prosimy o oddzielanie produktu od innego typu odpadów oraz odpowiedzialny recykling w celu promowania ponownego użycia zasobów materiałnych jako stałej praktyki. W celu uzyskania informacji na temat miejsca i sposobu bezpiecznego dla środowiska recyklingu tego produktu użytkownicy w gospodarstwach domowych powinni skontaktować się z punktem sprzedaży detalicznej, w którym dokonali zakupu produktu, lub z organem władz lokalnymi. Użytkownicy w firmach powinni skontaktować się ze swoim dostawcą sprawdzić warunki umowy zakupu. Produktu nie należy usuwać razem z innymi odpadami komercyjnymi.



#### **Eliminação Correcta Deste Produto** (Resíduo de Equipamentos Eléctricos e Electrónicos)

Esta marca, apresentada no produto ou na sua literatura indica que ele não deverá ser eliminado juntamente com os resíduos domésticos indiferenciados no final do seu período de vida útil. Para impedir danos ao ambiente e à saúde humana causados pela eliminação incontrolada de resíduos deverá separar este equipamento de outros tipos de resíduos e recicrá-lo de forma responsável, para promover uma reutilização sustentável dos recursos materiais. Os utilizadores domésticos deverão contactar o estabelecimento onde adquiriram este produto ou as entidades oficiais locais para obterem informações sobre onde e de que forma podem levar este produto para permitir efectuar uma reciclagem segura em termos ambientais. Os utilizadores profissionais deverão contactar o seu fornecedor e consultar os termos e condições do contrato de compra. Este produto não deverá ser misturado com outros resíduos comerciais para eliminação.



#### **Ιστονή Διάθεση αυτού του Προϊόντος** (Απορρίμματα Ηλεκτρικού & Ηλεκτρονικού Εξοπλισμού)

Τα σήματα που εμφανίζονται επάνω στο προϊόν ή στα εγχειρίδια που το συνοδεύουν, υποδεικύνουν ότι δεν θα πρέπει να ρίχτεται μαζί με τα υπόλοιπα οικιακά απορρίμματα μετά το τέλος του κύκλου ζωής του. Προκειμένου να αποφευχθούν ενδεχόμενες βλαβερές συνέπειες στα περιβάλλον ή την υγεία εξαρτώνται της ανεξέλεγκτης διάθεσης απορριμμάτων, σας προταλαίπωμε να τα διαχωρίσετε από όλους τύπους απορριμμάτων και να τα ανακυκλώσετε, ώστε να βοηθήσετε στην βιώσιμη επαναχρησιμοποίηση των υλικών πόρων. Οι οικιακοί χρήστες θα πρέπει να έθουν σε επικοινωνία είτε με τον πωλητή απ' όπου αγόρασαν αυτό το προϊόν, είτε τις κατά τόπους υπηρεσίες, προκειμένου να πληροφορηθούν τις λεπτομέρειες σχετικά με τον τόπο και τον τρόπο με τον οποίο μπορούν να δώσουν αυτό το προϊόν για ασφαλή προς το περιβάλλον ανακύκλωση. Οι επιχειρησιακοί χρήστες θα πρέπει να έθουν σε επαφή με τον προμηθευτή τους και να ελέγχουν τους δρόμους και τις προϋποθέσεις του συμβασιαίου πάλλησης. Το προϊόν αυτό δεν θα πρέπει να αναμηνύεται με άλλα συνηθισμένα απορρίμματα προς διάθεση.



#### **Korrekt avhenging av dette produktet** (Avfall elektrisk og elektronisk utstyr)

Denne merkingen som vises på produktet eller dens dokumentasjon, indikerer at den ikke skal kastes sammen med annet husholdningsavfall ved sluttet av sin levetid. For å hindre mulig skade på miljøet eller menneskelig helse fra ukontrollert avfallsavhenging, vennligst atskill dette fra andre typer avfall og resirkuler det ansvarlig for å fremme bærekraftig gjenbruk av materielle ressurser. Husholdningsbrukere bør kontakte enten forhandleren de kjøpte produktet av, eller lokale myndigheter, for detaljer om hvor og hvordan de kan frakte denne artikkelen for miljømessig trygg resirkulering. Forretningsbrukere bør kontakte sin leverandør og undersøke vilkårene i kjøpekontrakten. Dette produktet skal ikke blandes med annet kommersielt avfall som skal kastes.



#### **Ustrezeno odstranjevanje tega izdelka** (odpadna električna in elektronska oprema)

 Oznaka na izdelku ali spremjevalni dokumentaciji pomeni, da ga na koncu uporabne dobe ne smemo odstranjevati skupaj z drugimi gospodinjskimi odpadki. Dá bi preprečili morebitno tveganje za okolje ali zdravje človeka zaradi nedazborovanega odstranjevanja odpadkov, izdelek ločite od drugih vrst odpadkov in ga odgovorno reciklirajte té tako spodbudite trajnostno ponovno uporabo materialnih virov. Uporabniki v gospodinjstvih naj za podrobnosti o tem, kam in kako lanko odnesejo ta izdelek na okolju varno recikliranje, pokličejo trgovino, kjer so izdelek kupili, ali lokalni vladni urad. Podjetja naj pokličejo dobavitelja in preverijo pogoje nabavne pogodbe. Tega izdelka pri odstranjevanju ne smete mešati z drugimi gospodarskimi odpadki.



#### **Díúscairt Cheart an Táirge Seo** (Trealamh Leictreach agus Leictreonach Dramhaíola)

 Léiríonn an mharcáil seo atá ar an táirge ná sa litriocht a thagann leis, nár chóir é a dhiúscairt le dramhail tí eile ag deireadh a shaoil oibre. Chun cosaint i gcoinne dochar don chomhshaol nód do shláinte an duine, a d'fhéadfadh bheith mar thoradh ar an ndiúscairt dramhaíola neamhtheoranta, scar an dramhail seo ó chineálacha eile dramhaíola le do thoil agus déan athchursáil fhreaghrach air chun athúsaíodh innmarthana na hacmhainní ábhartha a chur chun cinn. Ba chóir dóbh siúd a úsáideann an trealamh sa bhaille dul i dtéagmháil leis an díoltóir ónar cheannaigh siad an táirge seo, nód lena n-oifig áitiúil Rialtais, ar mhaithle le sonraí a fháil faoi cá háit agus cathain is féidir athchúrsáil atá slán ó thaobh an chomhshaoli de dhéanamh ar an táirge seo. Ba chóir dóbh siúd a úsáideann an trealamh seo ina ngnó dul i dtéagmháil leis an soláthróir agus téarmái agus coinmíollacha an chonartha ceannaigh a sheiceáil. Níor chóir an táirge seo a chur le dramhail eile tráchtála agus díúscairt á déanamh.



### EU-Konformitätserklärung

Wir, CYCLE PARTS GmbH, Grosse Ahlmuehle 33, D-76865 Rohrbach erklären, dass die VDO Fahrradcomputer mit Funkübertragung VDO Z1, Z2, Z3, Z2 PC-Link, Z3 PC-Link und alle Sender Z-CAD, Z-PULSE, Z-SENDER, Dockingstation bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen gemäß Artikel 3 der R&TTE-Richtlinie 1999/5/EG entsprechen. Die Konformitäts-Erklärung finden Sie unter [www.vdecyclecomputing.com](http://www.vdecyclecomputing.com).



### EU-Declaration of Conformity

We, CYCLE PARTS GmbH, Grosse Ahlmuehle 33, D-76865 Rohrbach declare under our responsibility that the products VDO Z1, Z2,Z3,Z2 PC-Link, Z3 PC-Link and all transmitters Z-CAD, Z-PULSE, Z-SENDER, Dockingstation are compliant with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The declaration of Conformity can be found at [www.vdecyclecomputer.com](http://www.vdecyclecomputer.com).

Rohrbach, Februar 2008  
H.J. Noenen

**C E 0682**

**CZ** Toto zařízení je v souladu se základními požadavky a ostatními odpovídajícími ustanoveními Směrnice 1999/5/EC.

**DK** Dette udstyr er i overensstemmelse med de væsentlige krav og andre relevante bestemmelser i Direktiv 1999/5/EU.

**EST** See seadus vastab direktiivi 1999/5/EÜ olulistele nõuetele ja teiste asjakohastele sätetele.

**E** Este equipo cumple con los requisitos esenciales así como con otras disposiciones de la Directiva 1999/5/CE.

**GR** Αυτός ο εξοπλισμός είναι σε συμμόρφωση με τις ουσιώδεις απαιτήσεις και όλες οικειές διατάξεις της Οδηγίας 1999/5/ΕC.

**F** Cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la Directive 1999/5/EC.

**IS** Þetta tæki er samkvæmt grunnkröfum og öðrum viðeigandi ákvæðum Tilskipunar 1999/5/EC.

**I** Questo apparato è conforme ai requisiti essenziali ed agli altri principi sanciti dalla Direttiva 1999/5/CE.

**LV** Šī iekārta atbilst Direktivas 1999/5/EK būtiskajām prasībām un ciem ar to saistītajiem noteikumiem.

**LT** Šis įrenginys tenkina 1999/5/EB Direktyvos esminius reikalavimus ir kitas šios direktyvos nuostatas.

**NL** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van de Richtlijn 1999/5/EC.

**PL** Dan l-apparat huwa konformi mal-ħtieġit esenzziali u l-provvedimenti l-oħra rilevanti tad-Direttiva 1999/5/EC.

**H** Ez a készülék teljesít az alapvető követelményeket és más 1999/5/EK irányelvben meghatározott vonatkozó rendelkezések.

**NL** Dette utstyrer er i samsvar med de grunnleggende krav og andre relevante bestemmelser i EU-direktiv 1999/5/EC.

**PL** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE: 1999/5/EC.

**P** Este equipamento está em conformidade com os requisitos essenciais e outras provisões relevantes da Directiva 1999/5/EC.

**SLO** Ta naprava je skladna z bistvenimi zahtevami in ostalimi relevantnimi pogoji Direktive 1999/5/EC.

**SK** Toto zariadenie je v zhode so základnými požiadavkami a inými príslušnými nariadeniami direktív: 1999/5/EC.

**FI** Tämä laite täyttää direktiivin 1999/5/EY olenaiset vaatimukset ja on siinä asetettujen muiden laitteita koskevien määräysten mukainen.

**S** Denna utrustning är i överensstämmelse med de väsentliga kraven och andra relevanta bestämmelser i Direktiv 1999/5/EC.



## ADDENDUM TO USER MANUAL

FCC ID: TFO 66023  
IC 5957A-66023

CE 0682  
Cycle Parts GmbH



**NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the cycle computer head with the receiving antenna.
- Increase the separation between your equipment and the cycle computer head with the receiving antenna.
- Consult your bicycle dealer or an experienced radio/TV technician for help.

**NOTICE:** This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTICE:** This Class B digital apparatus complies with Canadian ICES-003

**NOTICE:** Warning: Changes or modifications made to this equipment not expressly approved by VDO Cycle Parts GmbH may void the FCC authorization to operate this equipment.

February 2008, Cycle Parts GmbH, Grosse Ahlmuehle 33, D-76865 Rohrbach, Germany



## ADDENDUM TO USER MANUAL

FCC ID: TFO 6604  
IC 5957A-6604

CE 0682  
Cycle Parts GmbH



**NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the cycle computer head with the receiving antenna.
- Increase the separation between your equipment and the cycle computer head with the receiving antenna.
- Consult your bicycle dealer or an experienced radio/TV technician for help.

**NOTICE:** This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTICE:** This Class B digital apparatus complies with Canadian ICES-003

**NOTICE:** Warning: Changes or modifications made to this equipment not expressly approved by VDO Cycle Parts GmbH may void the FCC authorization to operate this equipment.

February 2008, Cycle Parts GmbH, Grosse Ahlmuehle 33, D-76865 Rohrbach, Germany

# *VDO SERIES-Z*

*FOR RUNNING / HIKING*



*[www.vdocyclecomputing.com](http://www.vdocyclecomputing.com)*