# **Food Conveyor Belting**











# Gates Mectrol DESIGN LEADERSHIP AND SERVICE

Reflecting 25 years of synchronous timing belt experience, the Gates Mectrol food belt product line represents the "next generation" of food processing belting. Features such as embedded tension cords to eliminate stretch, a robust pin splice design for quick belt fastening and removal, a coextrusion process to reduce surface "sinks" and a "split tooth" weld for greater weld strength are all examples of Gates Mectrol's design leadership.

While the products are evolving quickly, one constant through all this is Gates Mectrol's position as *the* service leader. The short lead times and ability to expedite orders same day sets Gates Mectrol apart.

# **Reinforced Urethane Food Belting**

# Advantages

- Easy to clean
  - Reduces risk of microbial contamination
  - 43% less surface area to clean than plastic modular belting
  - Appropriate for Clean In Place (CIP) cleaning protocol
- These blue belts are "green"
  - Significant cleaning water savings, cleaning labor savings and wastewater reduction
    - 600 gallons in annual water savings for every foot of 24" wide plastic modular belting replaced
  - Half the cleaning time of plastic modular belting
  - 30% lighter than plastic modular belting
    - Less energy used
    - Easier on motor bearings
- Belt construction
  - Kevlar® tension members stabilize belt properties under all lengths, loads and temperatures
    - No retensioning, due to stretch, needed
- Innovative belt joining technology
  - Robust, "split tooth" joining process eliminates service callbacks



Easily Cleaned In Place

# **Gates Mectrol Food Belts**

TABLE OF CONTENTS	0
Preface	
Advantages of Reinforced Urethane Food BeltingFood Belt Product Line	
FOOD Belt Froduct Line	o
POSITIVE DRIVE AND FRICTIONAL DRIVE CONVEYOR BELTING	
PosiClean® Belting and Sprockets	9
CenterClean™ Belting and Sprockets	
FlatClean™ Belting and Pulleys	
Dewatering Belt	
FABRICATION	
Sidewalls	22
Straight Cleats	23
Scoop Cleats	
Guseted Cleats	25
V-Guides	26
Fabrication Accessories	27
JOINING	
Splicing	
Splicing Accessories	
Mechanical Fastening	30
CONVEYOR DECICAL CHIRELINES	
CONVEYOR DESIGN GUIDELINES  Drive Configuration	26
Drive Configuration	
Head Drive Configuration	
Tail Drive Configuration	
Center Drive Configuration	
Drum Motor (Motorized Pulley)	38
2.4	
Basic Straight Line Conveyor	38
Belt Guide and Tracking	
Carryway Support	
Returnway Support	
Snub Roller	
Tensioning Device (Tensioner/Take Up)	
Straight Line Conveyor with Cleats	
Carryway Support	
Returnway Support	44

# **Gates Mectrol Food Belts**

#### **TABLE OF CONTENTS (continued)**

Straight Line Conveyor with Corrugated Sidewalls       46         Corrugated Sidewall Geometries       46         Minimum Sprocket/Pulley Diameter       46         Carryway Support       46         Returnway Support       46         Z-Conveyor       48         Carryway Transition       49         Returnway Transition       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Belt Width       54         Returnway Support       54         Belt Width       54         Returnway Support       54         Belt Sanitation       60         Belt Sa	CONVEYOR DESIGN GUIDELINES (continued)	
Corrugated Sidewall Geometries         46           Minimum Sprocket/Pulley Diameter         46           Carryway Support         46           Returnway Support         46           Z-Conveyor         48           Carryway Transition         49           Returnway Transition         50           Carryway Support         50           Drive Sprockets         51           Tail Sprockets         51           Conveyor Sidewalls         51           Reciprocating Conveyor (Telescoping, Shuttle or Retractable)         51           Belt Tracking         52           Back Bend Roller         52           Sprockets         52           Tension         52           Troughed Conveyors         52           Carryway Support         53           Transition Length         54           Belt Width         54           Returnway Support         54           Pulleys         55           SUPPORT MATERIAL         Installation Checklist         58           Certificates         60           Belt Sanitation         62           Common Sanitation Procedures         62           Chemical Resistance Chart	Straight Line Conveyor with Corrugated Sidewalls	46
Minimum Sprocket/Pulley Diameter       46         Carryway Support       46         Returnway Support       48         Z-Conveyor       48         Carryway Transition       50         Returnway Transition       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Carryway Support       46         Returnway Support       48         Z-Conveyor       48         Carryway Transition       59         Returnway Transition       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       1         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Cemmon Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Returnway Support       46         Z-Conveyor       48         Carryway Transition       49         Returnway Transition       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Common Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	·	
Carryway Transition       49         Returnway Support       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Common Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	, , , , , , , , , , , , , , , , , , , ,	
Carryway Transition       49         Returnway Support       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Common Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	Z-Convevor	48
Returnway Transition       50         Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Carryway Support       50         Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	, ,	
Returnway Support       50         Drive Sprockets       51         Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	,	
Drive Sprockets         51           Tail Sprockets         51           Conveyor Sidewalls         51           Reciprocating Conveyor (Telescoping, Shuttle or Retractable)         51           Belt Tracking         52           Back Bend Roller         52           Sprockets         52           Tension         52           Troughed Conveyors         52           Carryway Support         53           Transition Length         54           Belt Width         54           Returnway Support         54           Pulleys         55           SUPPORT MATERIAL         Installation Checklist         58           Certificates         60           Belt Sanitation         62           Recommended Sanitation Procedures         62           Common Sanitation Chemicals         62           Chemical Resistance Chart         63		
Tail Sprockets       51         Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       1         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Conveyor Sidewalls       51         Reciprocating Conveyor (Telescoping, Shuttle or Retractable)       51         Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       58         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	·	
Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	·	
Belt Tracking       52         Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	Paging Canyover (Talogopping, Shuttle or Petrostable)	<b>5</b> 1
Back Bend Roller       52         Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	· · · · · · · · · · · · · · · · · · ·	
Sprockets       52         Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Tension       52         Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63		
Troughed Conveyors       52         Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	•	
Carryway Support       53         Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	rension	52
Transition Length       54         Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	Troughed Conveyors	52
Belt Width       54         Returnway Support       54         Pulleys       55         SUPPORT MATERIAL         Installation Checklist       58         Certificates       60         Belt Sanitation       62         Recommended Sanitation Procedures       62         Common Sanitation Chemicals       62         Chemical Resistance Chart       63	Carryway Support	53
Returnway Support 54 Pulleys 55  SUPPORT MATERIAL Installation Checklist 58 Certificates 60 Belt Sanitation 62 Recommended Sanitation Procedures 62 Common Sanitation Chemicals 62 Chemical Resistance Chart 53	Transition Length	54
Pulleys	Belt Width	54
SUPPORT MATERIAL Installation Checklist	Returnway Support	54
Installation Checklist	Pulleys	55
Installation Checklist	SIIPPORT MATERIAI	
Certificates		58
Belt Sanitation		
Recommended Sanitation Procedures		
Common Sanitation Chemicals62 Chemical Resistance Chart63		
Chemical Resistance Chart63		
adely folicy ///	Safety Policy	

Kevlar® is a registered trademark of E.I. du Pont de Nemours and Company Flexco®, Clipper®, Alligator®, and Ready Set™ are registered trademarks of Flexible Steel Lacing Company



# **Product Index**


FOOD BEL	LT PRODUCTS
(	Overview8
POSITIVE	DRIVE AND FRICTIONAL DRIVE CONVEYOR BELTING
F	PosiClean® Belting and Sprockets9
(	CenterClean™ Belting and Sprockets13
F	FlatClean™ Belting and Pulleys16
[	Dewatering Belt19
FABRICAT	TION
	Straight Cleats21
Ş	Sidewalls23
Ş	Scoop Cleats24
(	Gusseted Cleats25
\	V-Guides26
ſ	Fabrication Accessories27
JOINING	
9	Splicing28
Ş	Splicing Accessories29
Γ	Mechanical Fastening30

### **Food Belt Product Line**

#### **GATES MECTROL FOOD CONVEYOR BELTING**


#### PosiClean® Food Conveyor Belting

- 2" pitch (PC20) for standard to high loads
- 1" pitch (PC10) for improved transfer between conveyors
- Special construction belts for cold temperature and heavier loads
- Direct replacement of most 1" and 2" pitch plastic modular belt
- Full width drive tooth distributes torque over entire belt width making this belt appropriate for high load applications
- Widths up to 48"

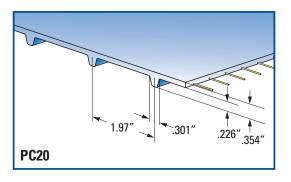


#### CenterClean™ Food Conveyor Belting

- Drive teeth only in the center three inches of the belt (or two tracks of teeth for belt widths greater than 30")
- Pitch length of 1.575" (40 mm)
- Appropriate for troughing applications
- •Widths up to 48"

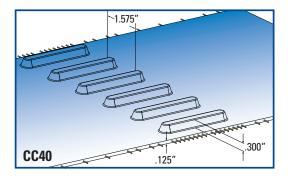

#### FlatClean™ Food Conveyor Belting

- Appropriate for troughing applications
- Widths up to 60"

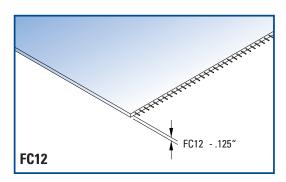

### PosiClean® Belting


**POSICLEAN® BELTING** is an easy to clean, positive drive replacement for plastic modular belt in the food processing industry. PosiClean belting has sealed Kevlar® tension members to limit belt stretch and a tooth construction that extends across the full belt width for better torque distribution.


#### **APPLICATION CHARACTERISTICS**

- Replacement for plastic modular belt
  - Easier cleaning
  - No hinges or pins to break and possibly contaminate product
  - Quieter operation
  - 30% less weight
- Less labor and cleaning water than plastic modular belt
- Formulated for wash down environments
- Full width drive tooth distributes torque over entire belt width making this belt appropriate for high load applications

#### **FEATURES**

- Direct replacement of most 1" and 2" pitch plastic modular belt
- Smooth surface allows cleaning to microbiological level and clean-in-place process
- Sealed edges and tension members prevent ingress of microbes
- Kevlar® tension members provide high strength, low stretch
  - Stabilize belt under all lengths, loads and temperatures
- Tough polyurethane construction
  - Water and chemical resistant
  - Meets FDA material requirements for wet food contact
- Welded endless or spliced with stainless steel or plastic lacing
- USDA accepted for meat, poultry and dairy processing equipment

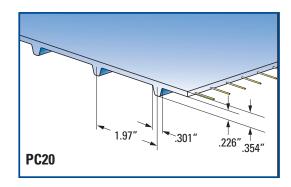

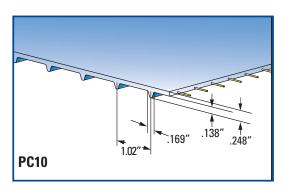




# PosiClean® Belting

#### **POSICLEAN BELTING SPECIFICATIONS**

		PC20		PC10
Belt Options	Standard	Hi Torque	Cold Temp	Standard
Designator	KV-FDA	HDK-FDA	KV-R6	KV-FDA
Cords/Inch	2	4	2	2
Pitch (nominal)	1.97" (50 mm)	1.97" (50 mm)	1.97" (50 mm)	1.02" (26 mm)
Hardness - Shore A	95	95	85	95
Surface Textures	Smo	oth & Inverted Pyra	mid	Smooth & Inverted Pyramid
Specific Belt Weight (lbs/ft/in)	0.089	0.089	0.089	0.063
Specific Belt Stiffness (lbs/inch)	7400	11800	7400	7400
Min. Sprocket Dia. Service Temp Above 25°F	3.76" (95.5 mm)	3.76" (95.5 mm)	3.76" (95.5 mm)	2.0" (50.8 mm)
Min. Sprocket Dia. Service Temp Below 25°F	6.27" (159.3 mm)	6.27" (159.3 mm)	6.27" (159.3 mm)	3.25" (82.6 mm)
Min. Back Bend Dia. Above 25°F	6" (152.4 mm)	6" (152.4 mm)	6" (152.4 mm)	3.5" (88.9 mm)
Min. Back Bend Dia. Below 25°F	10" (254.0 mm)	10" (254.0 mm)	10" (254.0 mm)	5" (127.0 mm)
Service Temperature Range	+15° to 160° F	+15° to 160° F	-10° to 158° F	+15° to 160° F
	(-9° to 71°C)	(-9° to 71°C)	(-23° to 70°C)	(-9° to 71°C)
Ultimate Belt Strength (lbs/in of width)	265	502	265	294
Coefficient of Friction (dynamic/static)				
Urethane vs. UHMW - Dry	0.20 / 0.30	0.20 / 0.30	0.54 / 0.69	0.20 / 0.30
Urethane vs. UHMW - Wet	0.35 / 0.58	0.35 / 0.58	-	0.35 / 0.58
Urethane vs. Stainless Steel - Dry	0.38 / 0.41	0.38 / 0.41	0.64 / 0.68	0.38 / 0.41
Urethane vs. Stainless Steel - Wet	0.40 / 0.57	0.40 / 0.57	-	0.40 / 0.57
Coefficient of Thermal Expansion (in/in/°F)	1.09 x 10-4	1.09 x 10-4	1.09 x 10-4	1.09 x 10-4
(mm/mm/°C)	1.96 x 10-4	1.96 x 10-4	1.96 x 10-4	1.96 x 10-4
Color	PosiBlue, PosiWhite	PosiBlue	PosiBlue	PosiBlue, PosiWhite
Min. and Max. Width	5"/48"	5"/48"	5"/48"	4"/48"
	(127/1219 mm)	(127/1219 mm)	(127/1219 mm)	(102/1219 mm)
Std. Roll Length	200' (61 m)	200' (61 m)	200' (61 m)	200' (61 m)

#### **PosiClean Series Part Number Nomenclature**



# PosiClean® Belting

#### Max. Allowable Tension (lbs per inch width)<sup>1</sup> based on Splicing Option

		PC20					
Joining Options	Standard	Hi Torque	Cold Temp				
Platen Weld - 30 mm x 70 mm Finger	50	64	46				
Platen Weld - Split Tooth	40	40	37				
Butt Weld	31	31	30				
PosiLace™ (up to 42" wide)	26	26	26				
Flexco® UX1SS Clipper® Wire Hooks	31	41	37				
Flexco® APF150 Alligator® Plastic Rivet	25	25	23				
Flexco® APF100 Alligator® Plastic Rivet	N/A	N/A	N/A				
Flexco® RS125 Alligator® Ready Set™ Staple	26	26	23				
Flexco® RS62 Alligator® Ready Set™ Staple	N/A	N/A	N/A				

PC10	
Standa	rd
35	
31	
31	
N/A	
31	
N/A	
25	
N/A	
26	

#### **PosiClean Slit Width Tolerances**

Up To and Including 15.75"	15.76" to 23.62"	> 23.63" or more
+0.00 to125"	+0.00 to1875"	+0.00 to25"

#### PosiClean Belting Master Rollstock Width Tolerances

18"	36"
+/- 0.0625"	+0.125" / -0.375"

#### **PosiClean Belt Length Tolerances**

PC10	
Cut	+1.0" /0"
Rollstock	+/- 1%
PC20	
Cut	+2.0" /0"
Rollstock	+/- 1%

<sup>&</sup>lt;sup>1</sup> Max allowable set as the lower of 25% yield strength or 2% stretch of weld or splice

## **PosiClean® Sprockets**

#### **PosiClean Sprocket Specifications**

					PC20					
<b>Tooth Count</b>			6	8	10	12	16			
Outside Diameter		inch	3.7	4.9	6.2	7.5	10.0			
(Nominal*)		mm	94	129	157	191	254			
Width		inch	1.3	1.3	1.3	1.3	1.3			
(Nominal)		mm	32.0	32.0	32.0	32.0	32.0			
Bore Size	Imperial square, in		1.5	1.5	1.5	1.5	1.5			
	round, in		1	1	1	1	1			
	Metric	square, mm	40	40	40	40	40			
		round, mm	30	30	30	30	30			
In Stock (Square Bore Only)	(F = Flange, NF = No Flange)		F, NF							
Weight	(lbs)		.32	.68	.57	.75	3.1			

		PC10		
6	8	10	12	20
1.9	2.5	3.2	3.8	6.4
48	64	81	97	163
1	1	1	1	1
25.4	25.4	25.4	25.4	25.4
N/A	N/A	1.5	1.5	1.5
1	1	N/A	N/A	N/A
N/A	N/A	40	40	40
30	30	N/A	N/A	N/A
		NF	NF	NF
.06	.12	.17	.30	.99

<sup>\*</sup> Imperial keyway sizes on round bores conform to ANSI standard B17.1 - 1967 (R1989); metric keyway sizes conform to BS 4235: Part 1: 1972 (1986)

For pulleys with flanges, add .196" to outside diameter to get flange diameter.

#### Notes:

- Injection molded pulleys acetal, machined pulleys UHMW-PE
- Sprockets must be locked into position on the shaft.
- PC10 belting can run on some competitor's plastic modular belting with 8, 10, 12 and 20 tooth sprockets.
- PC20 belting can run on some competitor's plastic modular belting with 8, 10 and 12 tooth sprockets.



#### PosiClean Sprocket & Support Guidelines (PC20 and PC10)

Belt Width	<b>6"</b> (152 mm)	<b>9"</b> (229 mm)	12" (305 mm)	<b>15"</b> (381 mm)	<b>18"</b> (457 mm)	<b>21</b> " (533 mm)	<b>24"</b> (610 mm)	<b>27</b> " (686 mm)	<b>30"</b> (762 mm)	<b>36"</b> (914 mm)	<b>40"</b> (1016 mm)	<b>45"</b> (1143 mm)	48" (1219 mm)
Min. No. Sprockets  Max. 5" (127 mm)  spacing center to center	3	3	4	4	5	6	6	7	7	8	9	10	11
No. of Sprockets for max. allow. tension Max. 3" (76 mm) spacing center to center	3	4	5	6	7	8	9	10	11	13	15	16	17
Min. No. Carryway Supports 6" (152 mm) spacing center to center	2	3	3	4	4	5	5	6	6	7	8	9	9

## **CenterClean™ Belting**


**CENTERCLEAN 40** belting has drive teeth only in the center three inches of the belt and a pitch length of 1.575" (40 mm). The center position of teeth makes this belt appropriate for self-tracking and troughing applications as well as lighter load general processing.


#### **APPLICATION CHARACTERISTICS**

- Formulated for wash down environments
- Troughing conveyor
- Self-centering design

#### **FEATURES**

- Smooth surface allows cleaning to microbiological level and clean-in-place process
- Sealed edges and tension members prevent ingress of microbes
- Kevlar® tension members provide high strength, low stretch
  - Stabilize belt under all lengths, loads and temperatures
- Tough polyurethane construction
  - Water and chemical resistant
  - Meets FDA material requirements for wet food contact
- Welded endless or spliced with stainless steel or plastic lacing
- USDA accepted for meat, poultry and dairy processing equipment

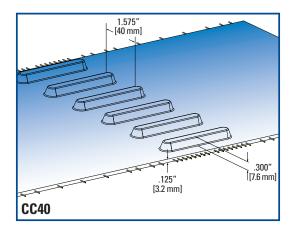

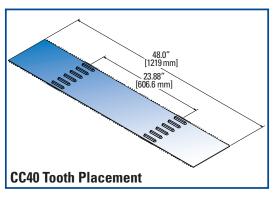



CenterClean belts are constructed with flexible urethane and sealed Kevlar® tension members. This construction allows CenterClean belts to be troughed or run on small diameter pulleys with minimal belt stretch.

# **CenterClean<sup>™</sup> Belting**

#### **CENTERCLEAN™ BELTING SPECIFICATIONS**

Belt Options	CC40
Average Cords/inch	2
Pitch (nominal)	1.575" (40 mm)
Hardness - Shore A	95
Surface Textures	Smooth & Inverted Pyramid
Specific Belt Weight (lbs/ft/in)	0.078
Specific Belt Stiffness (lbs/inch)	7400
Min. Sprocket Dia. service temperature above 25°F	4.9" (124 mm)
Min. Sprocket Dia. service temperature below 25°F	5.9" (150 mm)
Min. Back Bend Dia. above 25°F	6" (152 mm)
Min. Back Bend Dia. below 25°F	10" (254 mm)
Service Temperature Range	15° to 160° F
	(-9° to 71° C)
Coefficient of Friction (dynamic/static)	
Urethane vs. UHMW - Dry	0.20 / 0.30
Urethane vs. UHMW - Wet	0.35 / 0.58
Urethane vs. Stainless Steel - Dry	0.38 / 0.41
Urethane vs. Stainless Steel - Wet	0.40 / 0.57
Coefficient of Thermal Expansion (in/in/°F)	1.09 x 10 <sup>-4</sup>
(mm/mm/°C)	1.96 x 10 <sup>-4</sup>
Color	PosiBlue, PosiWhite
Min. and Max. Width	6"/ 48" (152 / 1219 mm)
Std. Roll Length	200' (61 m)

#### CenterClean Maximum Allowable Belt Tension (lbs) based on Splice Option and Belt Width

	Width Ranges						
		Single Track Dual Track					
Joining Options	6"-9" >9"-12" >12"-17" >17"- 36" >30"-39" >39"-42"						>42" - 60"
Butt Weld (between the teeth)	239	275	317	344	724	766	793
PosiLace	155	179	206	223	471	498	N/A
UX1SS Mechanical	239	275	317	344	724	766	793
APF150 Mechanical	139	160	184	199	419	443	458
RS125 Mechanical	290	334	385	417	878	929	961

## **CenterClean™ Belting**

#### **CenterClean Series Part Number Nomenclature**



#### **CenterClean Slit Width Tolerances**

Up To and Including 15.75"	15.76" or more
+/- 0.0625"	+/- 0.125"

#### **CenterClean Tooth Center Tolerances**

+/- 0.125"
------------

#### **CenterClean Belting Master Rollstock Width Tolerances**


+0.125" / -0.375"	
-------------------	--

#### **CenterClean Belt Length Tolerances**

Cut	+1.5" /0"
Rollstock	+/- 1%

#### **CenterClean Carryway Support Guidelines**

Distance Between Parallel Wear Strips Guiding Belt Teeth, Dim. A	3.15"
Distance Between Parallel Wear Strips Not Guiding Belt Teeth, Dim. B	4" - 6"



#### **CenterClean Sprocket Specifications**

				C	C40				
Number of Teeth		10	11	12	13	15	16	17	20
Nom. Outside Diameter	inch	4.9	5.4	5.9	6.4	7.4	7.9	8.4	9.9
	mm	124	137	150	163	188	201	213	251
Nominal Width	inch	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5
	mm	165	165	165	165	165	165	165	165
Imperial Square Bore - Dimension	inch	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
Material	UHMW-PE								



Notes: CC40 belts run on most 40 mm pitch sprockets.

Sprockets must be locked into position on the shaft.

### FlatClean™ Belting


**FLATCLEAN** is a USDA approved, polyurethane flat belt reinforced with Kevlar® tensile members. The combination of a non-fraying polyurethane jacket material with sealed tensile members minimizes belt stretch, reduces retensioning and extends belt life.

#### **APPLICATION CHARACTERISTICS**

- Standard to high loads, particularly well suited for cleated belts
- Troughing
- Wash down environments

#### **FEATURES**

- Sealed edges and tension members prevent ingress of microbes
- Kevlar® tension members provide high strength, low stretch and are cut and abrasion resistant
  - Eliminate need to retension conveyor
  - Stabilize belt under all lengths, loads and temperatures
- Smooth surface and non-fraying edges allow cleaning to a microbiological level
- Welded endless or spliced with stainless steel lacing
- Tough polyurethane construction
  - Water and chemical resistant
  - Meets FDA material requirements for wet food contact
- FC12 is an all-purpose flat belt appropriate for most applications, 2" minimum pulley diameter
- FC9 is a specialty belt for lighter loads. It has a 1" minimum pulley diameter.
- USDA accepted for meat, poultry and dairy processing equipment

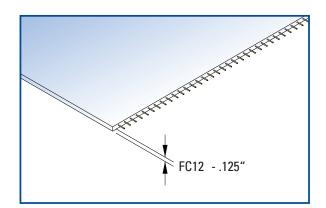


# **FlatClean™ Belting**

#### **FLATCLEAN™ BELTING SPECIFICATIONS**

Belt Options			FC	FC12		FOOLDD
Designator			FC12	FC12IP		FC9IPR
Surface Finish		Тор	Smooth	Inverted Pyramid		Smooth
		Running Side	Smooth	Smooth		Inverted Pyramid
Thickness			0.125" / (3.0 mm)	0.125" / (3.0 mm)		0.125" / (3.0 mm)
Hardness, Shore A		Top (Medium Blue)	95	95		90
	F	Running Side (PosiBlue)	95	95		95
Cords/inch			2.0	2.0		2.5
Tensile Force for 1% Eld	ongation (k1 Re	laxed) per Unit of Width	5.4 N/mm	5.4 N/mm		4.5 N/mm
Ultimate Belt Strength (	lbs/inch width	1)	265	265		203
Specific Belt Weight (Ib	os/ft/in)		0.065	0.065		0.048
Specific Belt Stiffness (	(lbs/inch)		7400	7400		4410
Min. Pulley Dia. Service	e Temperature	Above 25°F	2.0" (51 mm)	2.0" (51 mm)		1.0" (26 mm)
Min. Pulley Dia. Service	e Temperature	Below 25°F	3.0" (76 mm)	3.0" (76 mm)		2.0" (51 mm)
Min. Back Bend Dia. Al	oove 25°F		2.0" (51 mm)	2.0" (51 mm)		2.0" (51 mm)
Min. Back Bend Dia. Be	elow 25°F		3.0" (76 mm)	3.0" (76 mm)		3.0" (76 mm)
Service Temperature R	ange		+15° to 160° F	+15° to 160° F		+15° to 160° F
			(-9° to 71°C)	(-9° to 71°C)		(-9° to 71°C)
Coefficient of Friction (I	Dynamic/Stati	c)				
TPU vs. UHMW	Dry	Тор	0.20/0.30	0.20/0.30	Smooth	0.49/0.61
	Wet	Тор	0.35/0.58	0.35/0.58	Smooth	0.50/0.65
TPU vs. Steel	Dry	Тор	0.38/0.41	0.38/0.41	Smooth	0.89/1.21
	Wet	Тор	0.40/0.57	0.40/0.57	Smooth	0.75/1.20
TPU vs. UHMW	Dry	Running Side	N/A	0.11/0.21	Inverted Pyramid	0.19/0.25
	Wet	Running Side	N/A	0.14/0.23	Inverted Pyramid	0.24/0.27
TPU vs. Steel	Dry	Running Side	N/A	0.22/0.27	Inverted Pyramid	0.40/0.35
	Wet	Running Side	N/A	0.23/0.28	Inverted Pyramid	0.42/0.36
Coefficient of Thermal I	Expansion	in/in/°F	1.09 x 10-4	1.09 x 10-4		1.09 x 10-4
		[mm/mm/°C]	1.96 x 10-4	1.96 x 10-4		1.96 x 10-4
Color		Тор	PosiBlue, PosiWhite	PosiBlue, PosiWhite		Medium Blue
		Running Side				PosiBlue
Min. and Max. Width			4" / 60"	4" / 60"		4" / 48"
			(102 / 1524 mm)	(102 / 1524 mm)		(102 / 1219 mm)
Std. Roll Length			300' (91 m)	300' (91 m)		300' (91 m)

#### **FlatClean Series Part Number Nomenclature**



# FlatClean™ Belting

#### FlatClean Belting Max. Allowable Tension (lbs per inch width)<sup>1</sup>

Joining Options	FC12	FC12IP	FC9IPR
Platen Weld - 20 mm x 70 mm Finger	48	48	30
PosiLace™ (up to 42" wide)	NR*	NR*	N/A
Flexco® UX1SS Clipper® Wire Hooks	59	59	33
Flexco® APF100 Alligator® Plastic Rivet	N/A	N/A	27
Flexco® APF150 Alligator® Plastic Rivet	34	34	N/A
Flexco® RS62 Alligator® Ready Set™ Staple	N/A	N/A	31
Flexco® RS125 Alligator® Ready Set™ Staple	51	51	N/A

<sup>&</sup>lt;sup>1</sup> Max allowable set as the lower of 25% yield strength or 2% stretch of weld or splice

#### **FlatClean Slit Width Tolerances**

Up To and Including 15.75"	15.76" or more
+/- 0.0625"	+/- 0.125"

#### FlatClean Belting Master Rollstock Width Tolerances

48"
+0.125" / -0.375"

#### **FlatClean Belt Length Tolerances**

Cut	+1.0" /0"
Rollstock	+/- 1%

<sup>\*</sup> Contact Applications for specific requests.

### **Dewatering Belt**

**DEWATERING BELT** serves common produce processing applications such as fruits and vegetables.

- Embedded Kevlar® cord prevents belt stretch
- Longer life than mesh belting
- USDA approved and EU compliant
- Two belt constructions


#### **Belting Specifications**


	D000
Belt Options	PC20 Modified
Designator	KV-FDA
Cords/Inch	1
Pitch (nominal)	1.97" (50 mm)
Hardness - Shore A	95
Surface Textures - Smooth & Inverted Pyramid	
Specific Belt Weight (lbs/ft/in)	0.089
Specific Belt Stiffness (lbs/inch)	3700
Min. Sprocket Dia. Service Temp Above 25°F	3.76" (95.5 mm)
Min. Sprocket Dia. Service Temp Below 25°F	6.27" (159.3 mm)
Min. Back Bend Dia. Above 25°F	6" (152.4 mm)
Min. Back Bend Dia. Below 25°F	10" (254.0 mm)
Service Temperature Range	-4° to 158° F
	(-20° to 70°C)
Ultimate Belt Strength (lbs/in of width)	132
Coefficient of Friction (dynamic/static)	
Urethane vs. UHMW - Dry	0.33 / 0.42
Urethane vs. UHMW - Wet	0.35 / 0.58
Urethane vs. Stainless Steel - Dry	0.52 / 0.57
Urethane vs. Stainless Steel - Wet	0.40 / 0.57
Coefficient of Thermal Expansion (in/in/°F)	1.09 x 10-4
(mm/mm/°C)	1.96 x 10-4
Color	PosiBlue
Std. Roll Stock Length	200' (61 m)

#### Max. Allowable Tension (lbs per inch width)<sup>1</sup> based on Splicing Option


Joining Options	
Butt Weld - Split Tooth	40
PosiLace™	26

 $<sup>^{\</sup>rm 1}\,\text{Max}$  allowable set as the lower of 25% yield strength or 2% stretch of weld or splice

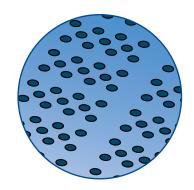

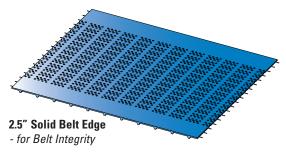

Opening	3/16" Dia. 11% Max.
Widths Available	14" to 18" and 32" to 36"

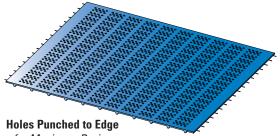

- for Maximum Drainage

I Nnanina	3/16" Dia. 15%
	1/4" Dia. 19%
Widths Available	5" to 36" in 1"

### **Dewatering Belt**

#### **PosiClean Sprocket Specifications**

	PC20									
<b>Tooth Count</b>			6	8	10	12	16			
Outside Diameter		inch	3.7	4.9	6.2	7.5	10.0			
(Nominal*)		mm	94	126	158	189	253			
Width		inch	1.3	1.3	1.3	1.3	1.3			
(Nominal)		mm	32.0	32.0	32.0	32.0	32.0			
Bore Size	Imperial	square, in	1.5	1.5	1.5	1.5	1.5			
		round, in	1	1	1	1	1			
	Metric	square, mm	40	40	40	40	40			
		round, mm	30	30	30	30	30			
In Stock(Square Bore Only)	(F = Flange, NF = No Flange)		F, NF							
Weight		(lbs)	.32	.68	.57	.75	3.1			

<sup>\*</sup> Imperial keyway sizes on round bores conform to ANSI standard B17.1 - 1967 (R1989); metric keyway sizes conform to BS 4235: Part 1: 1972 (1986)

For pulleys with flanges, add .196" to outside diameter to get flange diameter.


#### Notes:

- Injection molded pulleys acetal, machined pulleys UHMW-PE
- Sprockets must be locked into position on the shaft.
- PC20 belting can run on some competitor's plastic modular belting with 8, 10 and 12 tooth sprockets.



#### **PosiClean Sprocket & Support Guidelines**

Belt Width	9" (229 mm)	12" (305 mm)	15" (381 mm)	18" (457 mm)	21" (533 mm)	24" (610 mm)	27" (686 mm)	30" (762 mm)	36" (914 mm)
Min. No. Sprockets  Max. 5" (127 mm)  spacing center to center	3	4	4	5	6	6	7	7	8
No. of Sprockets for max. allow. tension Max. 3" (76 mm) spacing center to center	4	5	6	7	8	9	10	11	13
Min. No. Carryway Supports 6" (152 mm) spacing center to center	3	3	4	4	5	5	6	6	7

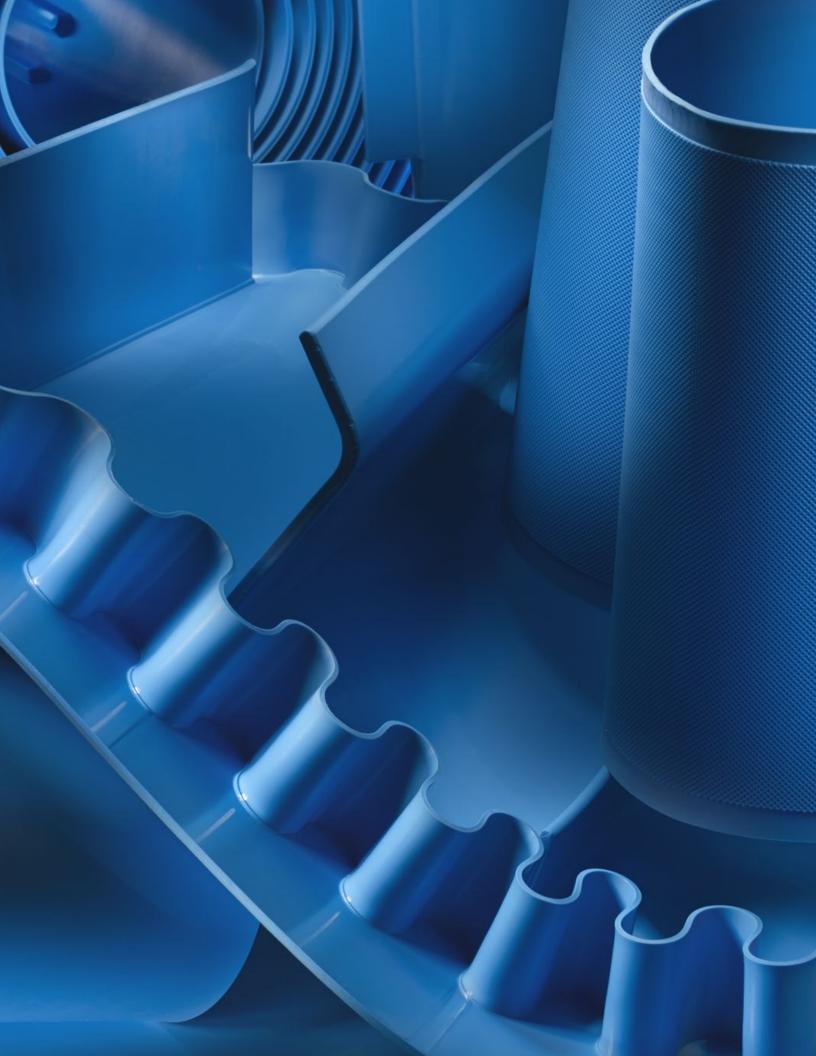


#### **SIDEWALLS**

Corrugated sidewalls can be added to any Gates Mectrol Food Grade Belt to contain product.

#### **Sidewall Specifications**

Sidewall Dimensions							
Height "A"	1.38 - 4.33" (35 - 110 mm)	Height Tolerance ±0.25" (±6.4 mm)					
Length (Width Across Belt) "B"	1.57" (40 mm)	Length Tolerance ±0.20" (±5 mm)					
Thickness	0.079" (2.0 mm) Nominal	Thickness Tolerance ±0.015" (0.4 mm)					
Durometer	85 Shore A						
Color	PosiBlue, PosiWhite						
Surface Textures	Smooth and Inverted Pyramid						
Sidewall Tolerances							
Minimum Belt Length	80" (2.0 m)						
Maximum Belt Length	140′ (42.7 m)	140′ (42.7 m)					
* Minimum Belt Width	8" (200 mm)						
Maximum Belt Width	48" (1219 mm)						
Minimum Distance: Belt Edge to Sidewall "C"	0.25"±0.075" (6 mm ±2 mm)						
Minimum Distance: Cleat and Sidewall "D"	Cleats/Scoop Cleats 4" and Less: Cleats/Scoop Cleats Greater than 4":	0.375" +/-0.075" (9.5 mm +/- 2 mm 0.60" +/- 0.075" (15.2 mm +/- 2 mm)					
Minimum Sprocket Diameter Type, Which Ever is Greater	2.5x Sidewall Height or Minimum Diameter F	Recommendation for Belt and Fastener					
Minimum Back Bend Diameter	1.5x Sidewall Height or Minimum Diameter Recommendation for Belt, Whichever is Greater						
Sidewall Loop Alignment	Sidewalls Are Not Timed - Loops Will Not Line Up						
Sidewall End Weld	Aligned Tab or Opposed Tab						
Belt Sections Allowed	FC12, PC20, PC10, CC40						

<sup>\*</sup> For belts with 2 sidewalls.

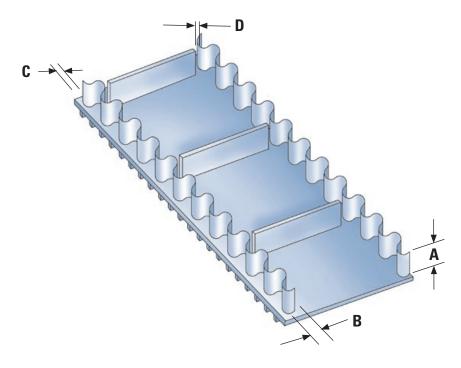


#### **STRAIGHT CLEATS**

Cleats, also called "profiles" or "flights", can be added to any Gates Mectrol Food Grade Belt to move product up an incline. Maximum belt width is 39".


#### **Cleat Specifications**

Cleat Dimensions				
Height "A"	0.25" (6 mm)	Height Tolerance ±0.063" (1.5 mm)		
	1" (25 mm)			
	1.5" (38 mm)			
	2" (51 mm)			
	3" (76 mm)			
	4" (102 mm)			
* Length (Width Across Belt) "B"	6" (152 mm) to 36" (0.9 m)	Length Tolerance ±0.063" (1.5 mm)		
Thickness "C"	0.197" (5 mm) Std.; 7 mm available	Thickness Tolerance ±0.020" (0.5 mm)		
Durometer	95 Shore A			
Color	PosiBlue, PosiWhite			
Surface Textures	Smooth and Inverted Pyramid			
Welding Tolerances				
Minimum Belt Length	80" (2.0 m)			
Minimum Cleat Spacing "D"	3.94" (100 mm)			
Cleat Spacing	Spacing Must Be Multiple of Belt Pitch Length			
Cleat Location	PC20 ±0.063" (1.5 mm)	Over Tooth or Halfway Between Teeth		
	CC40 ±0.125" (3.1 mm)	Halfway Between Teeth		
	PC10 ±0.063" (1.5 mm)	Over Tooth		
	FC12 ±0.125" (3.1 mm)			
Cleat Centering Tolerance	±0.063"			
Cleat Alignment Tolerance	PC10/PC20 Parallel To Belt Teeth ±0.005" per inch (	±0.13 per mm) of Profile Length		
	CC40/FC12 Perpendicular To Belt Edge ±0.010" per i	nch of Profile Length		
Multiple Cleats Across Belt	Maximum of 4 Profiles Across Belt, 1.5" (38 mm) or	2" (51 mm) Separation Between Profiles		
Maximum Belt Width	39"			
Belt Sections Allowed	PC20, FC12, PC10, CC40			

Note: See belt specifications for minimum sprocket diameter and minimum back bend diameter.

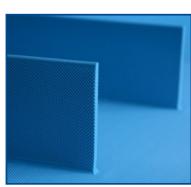

**Inverted Pyramid Surface** 

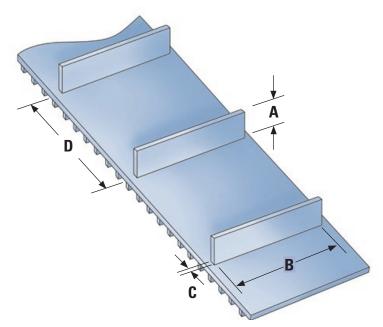


<sup>\*</sup> Max profile width across belt of 36". Also, covers cases of multiple profiles and the spacing between them.

#### **SCOOP CLEATS**

#### **Scoop Cleat Specifications**

Scoop Cleat Dimensions								
Overall Height "A"	2.5"	3"	3.5"	4"	5"	6"	Height Tolerance +0.375"/ -0"	
Vertical Height "B"	1.5" (ref.)	2" (ref.)	2.5" (ref.)	3" (ref.)	4" (ref.)	5" (ref.)		
Scoop Length "C"	2" (ref.)	2" (ref.)	2" (ref.)	2" (ref.)	2" (ref.)	2" (ref.)		
* Length (Width Across Belt) "D"	4" (101 mm	Min. Up to 3	36" (0.9 mm) N	lax.			Length Tolerance ±0.063" (1.60 mm)	
Thickness "E"	0.276" (7 m	m) Reference	е					
Durometer	95 Shore A							
Color	PosiBlue, P	osiWhite						
Surface Textures	Smooth and	I Inverted Py	ramid (IP on 3	.5" only)				
Scoop Welding Tolerances								
Minimum Belt Length	80"							
Minimum Cleat Spacing "F"	3.94"							
Cleat Spacing	Spacing M	ust Be Multip	ole of Pitch Le	ngth				
Cleat Location	PC20: ±0.06	3 (1.5 mm)					Over or Halfway Between Teeth	
	CC40: ±0.12	5" (3.1 mm)					Halfway Between Teeth	
Cleat Centering Tolerance	±0.063							
Multiple Cleats Across Belt	Maximum o	of 4 Cleats Ad	cross Belt Wid	lth, 1.5" to 2"	Separation	Between Cl	eats	
Maximum Belt Width	39"							
Belt Sections Allowed	PC20, CC40							
Profile Loading								
Scoop Cleat with Overall Height 6"	0.9 lbs per l	nch of Cleat	Length					
Scoop Cleat with Overall Height 5"	1.2 lbs per Inch of Cleat Length							
Scoop Cleat with Overall Height 4"	1.6 lbs per l	1.6 lbs per Inch of Cleat Length						
Scoop Cleat with Overall Height 3.5"	1.9 lbs per Inch of Cleat Length							
Scoop Cleat with Overall Height 3"	2.9 lbs per l	2.9 lbs per Inch of Cleat Length						
Scoop Cleat with Overall Height 2.5"	4.0 lbs per l	0 lbs per Inch of Cleat Length						

<sup>\*</sup> Max profile width across belt of 36". Also, covers cases of multiple profiles and the spacing between them.

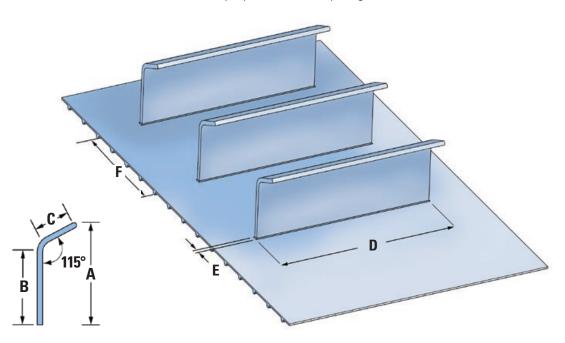

#### **GUSSETED CLEATS**

For heavy load, incline conveyor applications such as ground beef processing lines.


#### **Gusseted Cleat Specifications**

#### **Cleat Dimensions**

Sidewall Dimensions		
Height "A"	4.63" (103 mm)	Height Tolerance ±0.063" (1.5mm)
Length (Width Across Belt) "B"	6" (152 mm)	Length Tolerance ±0.063" (1.5mm)
Thickness "C"	0.276" (7 mm)	
Gusset Height "D"	2" (51 mm)	
Gusset Length "E"	2" (51 mm)	
Welding Tolerances		
Cleat Spacing "F"	Spacing Must Be of Belt Pitch Length	5.91" (150 mm) Min.
Edge Spacing "G"	Min. of 1" (25 mm)	
Cleat Location	PC20 ±0.063" (1.5mm)	Over Tooth
Cleat Centering Tolerance	±0.063" (1.5mm)	
Cleat Alignment Tolerance	PC20 Parallel to Belt Teeth ±0.005" per Inch	(±0.13 per mm) of Profile Length
Multiple Cleats Across Belt	Maximum of 4 Profiles Across Belt,	
	2" (51 mm) Separation Between Profiles wit	th Increments of 2"
Belt Width	Up to 39" Max	
Belt Sections Allowed	PC20	
Belt Surface Finishes Allowed	Smooth & Inverted Pyramid	

Note: See belt specifications for minimum sprocket diameter and minimum back bend diameter.

<sup>\*</sup> In cases of multiple cleats, maximum width across the belt is 36".\*

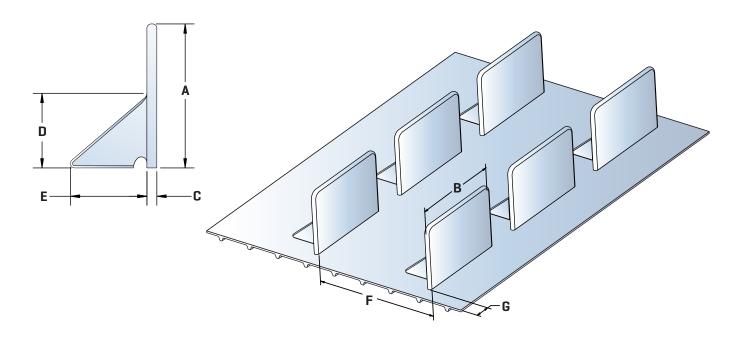


#### **V-GUIDES**

#### **V-Guide Specifications**


Metric	Size Nearest English	W1	W2*	Height	Durometer (Shore A)	Min. Pulley Dia.	Color	
K6	000	0.236" (6 mm)	0.157" (4 mm)	0.157" (4 mm)	78	2.0"	PosiBlue	
K8	Z	0.313" (8 mm)	0.157" (4 mm)	0.197" (5 mm)	78	2.0"	PosiBlue	
K10	0	0.394" (10 mm)	0.236" (6 mm)	0.236" (6 mm)	78	2.5"	PosiBlue	
	A Modified	0.472" (12 mm)	0.354" (9 mm)	0.217" (5.5 mm)	78	3.0"	PosiBlue	
K13	А	0.512" (13 mm)	0.276" (7 mm)	0.315" (8 mm)	78	3.0"	PosiBlue	
K17	В	0.669" (17 mm)	0.394" (10 mm)	0.433" (11 mm)	78	4.5"	PosiBlue	
V-Guide	V-Guide Length Capabilities							
Minimu	m Belt Length	80" (2.0 m)						
Maximu	ım Belt Length	140' (42.7 m)						

<sup>\*</sup> For reference only

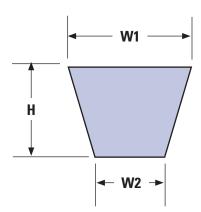

#### **FABRICATION ACCESSORIES**

Part		Part Number	Description	
Straight Cleat Master Sheet		IRF1006	5 mm x 6" X 62" w/ Rounded Edge One Side, 95 Durometer, Blu	
Sidewall Roll Stock		BUF620-152	2 mm Thick x 6" Tall x 64 meters, 85 Durometer, Blue	
V-Guides				
Metric	Nearest English			
K6	000	K6 SolidBlue V-Guide	78 Durometer, PosiBlue Color, 1000' Spool	
K8	Z	K8 SolidBlue V-Guide	78 Durometer, PosiBlue Color, 1000' Spool	
K10	0	K10 SolidBlue V-Guide	78 Durometer, PosiBlue Color, 1000' Spool	
	A Modified	K13 SolidBlue V-Guide	78 Durometer, PosiBlue Color, 1000' Spool	
K13	А	A SolidBlue	78 Durometer, PosiBlue Color, 1000' Spool	
K17	В	K17 SolidBlue V-Guide	78 Durometer, PosiBlue Color, 500' Spool	

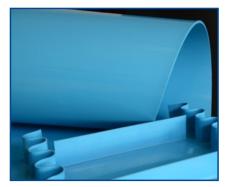





Sidewall Rollstock



V-Guides, Spooled

#### **SPLICING**

Note: Fastener strength ratings are specific to the belt to which they are applied. See Maximum Allowed Tension specifications in belting specifications tables.

• Finger Weld – uses a 30 mm x 70 mm tapered finger and a platen press weld. The shear strength provided by the overlapping tension members provides for the highest maximum allowable belt tension.



**Finger Weld** 

- Split Tooth Weld The preferred straight cut splice for PosiClean is the "split tooth" platen weld. The weld of a straight cut through a tooth is stronger than that of a straight cut between teeth because
  - 1) The weld surface area is 3x to 4x greater through the tooth than between the teeth
  - 2) There is less belt flexing at the tooth and, therefore, less stress.


Preparing belt ends with a straight cut requires simple tooling and is done easily and quickly. Tapered finger welds can also be used for field welds but require finger punch tooling. Conventional butt welding in the web is also acceptable.




**Split Tooth Weld** 

#### **SPLICING ACCESSORIES**

Assembly or Part	Part Number	Description
Flexco AERO Splice Press Weld Kit (Bottom Pad / 4 Filler Strips)		
PC20 - 24" Press (Aero 600)	16339	PC20 Silicone Rubber Weld Pad 10" x 28"
PC20 - 36" Press (Aero 900)	16325	PC20 Silicone Rubber Weld Pad 10" x 40"
PC20 - 48" Press (Aero 1200)	16327	PC20 Silicone Rubber Weld Pad 10" x 52"
PC20 - 60" Press (Aero 1500)	16329	PC20 Silicone Rubber Welding Pad 10" x 64"
PC10 - 24" Press (Aero 600)	16338	PC10 Silicone Rubber Welding Plate 10" x 28"
PC10 - 36" Press (Aero 900)	16330	PC10 Silicone Rubber Welding Pad 10" x 40"
PC10 - 48" Press (Aero 1200)	16337	PC10 Silicone Rubber Welding Pad 10" x 52"
PC10 - 60" Press (Aero 1500)	16331	PC10 Silicone Rubber Welding Pad 10" x 64"
CC40 - 24" Press (Aero 600)	16336	CC40 Silicone Rubber Welding Pad 10" x 28"
CC40 - 36" Press (Aero 900)	16332	CC40 Silicone Rubber Welding Pad 10" x 40"
CC40 - 48" Press (Aero 1200)	16335	CC40 Silicone Rubber Welding Pad 10" x 52"
CC40 - 60" Press (Aero 1500)	16333	CC40 Silicone Rubber Welding Pad 10" x 64"
CC40 Dual Lug - 60" Press (Aero 1500)	16334	CC40 Dual Lug Silicone Rubber Welding Pad 10" x 64"
Inverted Pyramid Textured Sheet - 24" Press (Aero 600)	15065	Inverted Pyramid Textured Si-Rubber Pad 10" x 28" x .09"
Inverted Pyramid Textured Sheet - 36" Press (Aero 900)	15066	Inverted Pyramid Textured Si-Rubber Pad 10" x 40" x .09"
Inverted Pyramid Textured Sheet - 48" Press (Aero 1200)	16222	Inverted Pyramid Textured Si-Rubber Pad 10" x 52" x .09"
Inverted Pyramid Textured Sheet - 60" Press (Aero 1500)	15068	Inverted Pyramid Textured Si-Rubber Pad 10" x 63" x.09"
PC20 Silicone Filler Strip	ASILPC20	
PC10 Silicone Filler Strip	ASILPC10	
CC40/FC12 Silicone Filler Strip	ASIL1-8	
Belt Cutter		
Factory Split Tooth Belt Cutter (up to 48" width)	15602	for PC10 and PC20 only
Field Split Tooth Belt Cutter (up to 36" width)	14237	for PC10 and PC20 only
Welding Foil		
Blue 95 Durometer 1.5" x .012" Thick	15826	250' Length
White 95 Durometer 1.5" x .012" Thick	15765	250' Length
PosiLace Pin	APOSILACEPIN	0.125" Dia., 96"Length
PosiLace Locking Collar Tool	16787	Tool to Form Locking Pin Collar

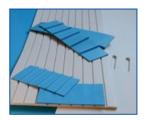

**Bottom Weld Pad Kit** 



**Factory Split Tooth Belt Cutter** 



**Field Split Tooth Belt Cutter** 



**Welding Foil** 




**PosiLace Locking Collar Tool** 

#### MECHANICAL FASTENING

- PosiLace<sup>™</sup> Fastening Pin allows for fast, tool-free belt installations for lightweight to medium load applications (up to 26 lbs. PIW)
  - Features
    - Self-locking pin that can be removed without damage to belt or pin
    - Ease of cleaning
      - Draft angles incorporated into the hinge loop design allow for any foreign material to be easily flushed out
    - Low profile design to allow for use with scrapers
    - Designed to reduce food contamination risk through hinge loop breakage
      - In an overload situation, unlike plastic modular belting, the locking pin will fail first (begin to fall out) before the hinge loops break
  - Maximum belt width 42"
  - Minimum pulley diameter 6.27" (159 mm)
  - Attachment options
    - Can be factory prepped or field welded using a Flexco AMIGO™ press
    - Also offered with 12" extensions so that it can be welded using a platen press





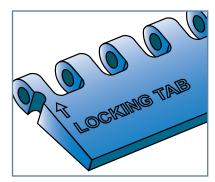

PosiLace<sup>™</sup>

 Other Recommended Mechanical Fasteners – From wire hooks to metal staples, standard conveyor fasteners are available are available for those situations when quick assembly/ disassembly is required. Belt ends must be cut properly prior to installing mechanical fasteners to ensure proper pulley mesh.



Flexco® UX1SS Clipper® Wire Hooks



Flexco® Alligator® Plastic Rivet



Flexco® Alligator® Ready Set™ Staple

#### Max. Allowable Tension (lbs per inch width)¹ based on Splicing Option

	PC10	PC20	PC20 Cold Temp	CC40	FC9	FC12
PosiLace™ (up to 42" wide)	N/A	26	26		N/A	NR*
Flexco® UX1SS Clipper® Wire Hooks	31	59	37		33	59
Flexco® APF150 Alligator® Plastic Rivet	N/A	34	23	Coo Dogo14	N/A	34
Flexco® APF100 Alligator® Plastic Rivet	25	N/A	N/A	See Page14	27	N/A
Flexco® RS125 Alligator® Ready Set™ Staple	N/A	51	23		N/A	51
Flexco® RS62 Alligator® Ready Set™ Staple	26	N/A	N/A		31	N/A

<sup>&</sup>lt;sup>1</sup> Max allowable set as the lower of 25% yield strength or 2% stretch of weld or splice

#### Minimum Sprocket/Pulley Diameter for Mechanically Spliced Belts


	PC10	PC20	CC40	FC9	FC12
PosiLace™	NR	6.2" (159 mm)	6.4" (163 mm) (13 teeth)	NR	NR
Flexco® UX1SS Clipper® Wire Hook	3.2" (82 mm)	6.2" (159 mm)	NR	3.0" (76 mm)	3.0"(76 mm)
Flexco® APF150 Alligator® Plastic Rivet	NR	6.2" (159 mm)	6.4" (163 mm)	NR	3.0" (76 mm)
Flexco® APF100 Alligator® Plastic Rivet	3.2" (82 mm)	NR	NR	3.0" (76 mm)	NR
Flexco® RS125 Alligator® Ready Set™ Staple	NR	6.2" (159 mm)	6.4" (163 mm)	NR	3.0" (76 mm)
Flexco® RS62 Alligator® Ready Set™ Staple	3.2" (82 mm)	NR	NR	3.0" (76 mm)	NR

NR= Not Recommended


Note: Fastener strength ratings are specific to the type of belt being spliced. See the *Max. Allowable Tension Charts* for fastener strength ratings.

<sup>\*</sup> Contact Applications for specific requests.


### **Mechanical Fastening Preparation Dimensions**




PC10 Lacing	Dimension A
Flexco® UX1SS Clipper® Wire Hook	0.85" (21.5 mm)
Flexco® APF100 Alligator® Plastic Rivet	0.79" (20 mm)
Flexco® RS62 Alligator® Ready Set™ Staple	0.79" (20 mm)



PC20 Lacing	Dimension A
Flexco® UX1SS Clipper® Wire Hook	0.73" (18.5 mm)



PC20 Lacing	Dimension A
Flexco® APF150 Alligator® Plastic Rivet	1.65" (42 mm)
Flexco® RS125 Alligator® Ready Set™ Staple	1.65" (42 mm)

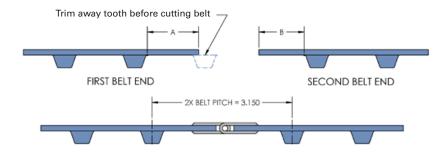

CC40 Lacing	Dimension A	Dimension B
Flexco® APF150 Alligator® Plastic Rivet	1.18" (30 mm)	1.05" (26.5 mm)
Flexco® RS125 Alligator® Ready Set™ Staple	1.18" (30 mm)	1.05" (26.5 mm)



FC9/12 Belt Length Before Adding Lacing = Desired Spliced Belt Length - Trim Length		
	Trim Length	
Flexco® UX1SS Clipper® Wire Hook	0.22" (5.5 mm)	
Flexco® APF100/150 Alligator® Plastic Rivet	0.28" (7.0 mm)	
Flexco® RS62/125 Alligator® Ready Set™ Staple	0.39" (10 mm)	



# **Food Belt Conveyor Design Guideline Index**

DRIVE CONFIGURATION	36
Head Drive Configuration	36
Tail Drive Configuration	36
Center Drive Configuration	37
DRUM MOTOR (MOTORIZED PULLEY)	38
BASIC STRAIGHT LINE CONVEYOR	38
Belt Guide and Tracking	
Carryway Support	
Returnway Support	41
Snub Roller	42
Tensioning Device (Tensioner/Take Up)	43
STRAIGHT LINE CONVEYOR WITH CLEATS	44
Carryway Support	44
Returnway Support	44
STRAIGHT LINE CONVEYOR WITH CORRUGATED SIDEWALLS	46
Corrugated Sidewall Geometries	46
Minimum Sprocket/Pulley Diameter	46
Carryway Support	
Returnway Support	46
Z-CONVEYOR	48
Carryway Transition	
Returnway Transition	50
Carryway Support	50
Returnway Support	
Drive Sprockets	
Tail Sprockets	
Conveyor Sidewalls	51
RECIPROCATING CONVEYOR (TELESCOPING, SHUTTLE OR RETRACTABLE)	51
Belt Tracking	52
Back Bend Roller	52
Sprockets	52
Tension	52
TROUGHED CONVEYORS	52
Carryway Support	
Transition Length	
Belt Width	
Returnway Support	54
Pullevs	

### **Food Belt Conveyor Design Guidelines**

#### **DRIVE CONFIGURATION**

#### **Head Drive Configuration (pull)**

- Most common configuration.
- •The conveying side of the belt is traveling (pulled) toward the drive (powered) sprockets. See Figure 1.

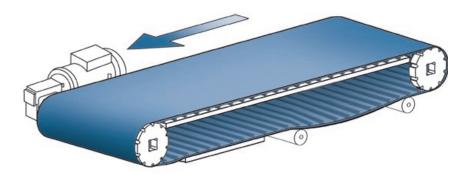


Figure 1

#### **Tail Drive Configuration (push)**

- •The conveying side of the belt is traveling (pushed) away from the drive (powered) sprockets. See Figure 2
- Belt needs to be under tension at all times to prevent it from jumping the drive sprocket grooves.
- Maximum recommend conveyor length: 15 feet (4.6 m).

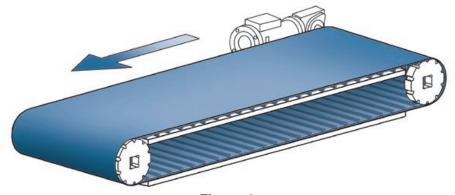


Figure 2

#### **Center Drive Configuration**

- Gates Mectrol does not recommend this drive configuration because belt tracking can be difficult.
- •The drive sprockets in this configuration are not placed at the conveyor ends but within the conveyor span length. See Figure 3. It is used typically for bi-directional conveyors.
- Back bend rollers need to be flanged to assist belt tracking.
- Carryway support, see Basic Straight Line Conveyor guidelines
- •This configuration is not suitable for belts with cleats and/or corrugated side walls.

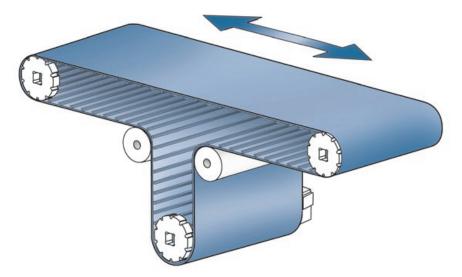


Figure 3

#### **Center Drive Configuration Specifications**

	PC10	PC20	CC40
Drive sprocket - Minimum Diameter	12 Tooth 3.8" (97 mm)	10 Tooth 6.2" (158 mm)	12 Tooth 5.9" (150 mm)
Back-bending roller - Minimum Diameter >25°F (-4°C)	3.5" (89 mm)	6" (150 mm)	6" (150 mm)
Back-bending roller - Minimum Diameter <25°F (-4°C)	5" (125 mm)	10" (254 mm)	10" (254 mm)
Minimum Flange Height	0.375" (10 mm)	0.500" (13 mm)	0.375" (10 mm)*

<sup>\*</sup> If the drive pulley does not capture the belt teeth laterally


#### **DRUM MOTOR (MOTORIZED PULLEY)**

- Motorized pulleys, designed for Gates Mectrol Food Grade Belts, are available from major manufacturers of these conveyor drives.
- Motorized pulleys, by the nature of their design, are well suited for meeting conveyor sanitation requirements.

#### **BASIC STRAIGHT LINE (HORIZONTAL OR INCLINE) CONVEYOR**

#### **Components**

- 1. Drive Sprocket
- 2. Idler (Tail) Sprocket
- 3. Carryway Support
- 4. Returnway Support Rail
- 5. Returnway Support Roller

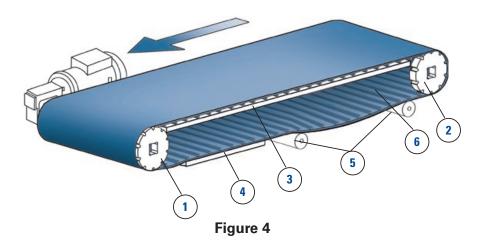

#### **Belt Guiding and Tracking**

- •The conveyor frame must be rigid, square and aligned in all planes for the Gates Mectrol food grade belts to track properly.
- PosiClean
  - PosiClean belts are not self-tracking designs. External guides along the belt edges are required. Guides can be stationary or rollers. Surfaces on stationary guides that contact the belt should be made of UHMW-PE. Conveyor side rails or frames can serve as stationary guides.
  - Minimum heights of guides or roller flanges, Dim. A
    - PC10: .375" (9.5 mm)(~1.5x belt thickness)
    - PC20: .500" (12.7 mm)
- Minimum recommended gap between belt edge and conveyor sidewall, 0.125"

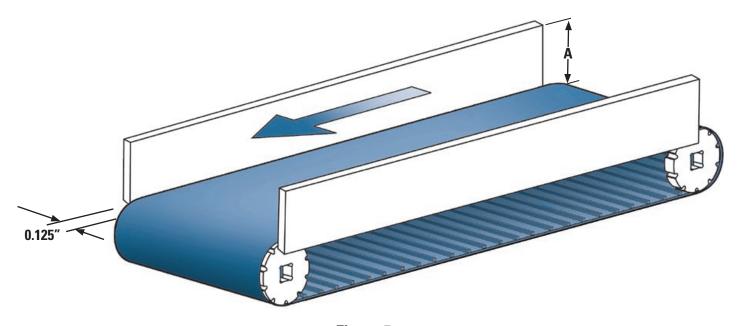



Figure 5

- CenterClean
  - CenterClean is guided by the belt teeth by the carryway support. See dimension C in Figure 7
- FlatClean
  - V-Guides: See page 25 for available V-guides and minimum recommended pulley diameters.

#### **Belt Guiding and Tracking (continued)**

#### **Carryway Support**

- Continuous support rails, parallel to the belt length, made of UHMW-PE or acetal (POM), is the preferred carryway support for PosiClean, CenterClean and FlatClean belts. Gates does not recommend stainless steel support rails.
- Joints in support rails: downstream rail should be slightly lower than the joining upstream rail or have a beveled end to prevent damage to belt teeth or underside of the belt.
- Rail width minimum: 1.25" (32 mm)
- Spacing recommended for parallel support rails:
  - PosiClean, PC10 and PC20, Figure 6
    - Distance between rails, Dim. A: 4" 6" (100 150 mm)
  - Distance from belt edge to outer rail, Dim. B: 0.5" 2" (15 50 mm)

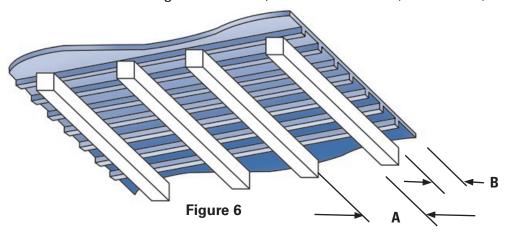

- Spacing recommended for parallel support rails:
  - CenterClean, CC40, Figure 7
    - Distance between rails guiding belt teeth, Dim C: 3.15" (80.0 mm)
    - Distance between rails not guiding belt teeth, Dim D: 4" 6" (100 150 mm)
    - Distance from belt edge to outer rail, Dim E: 0.5" 2" (15 50 mm)
  - FlatClean, FC12
    - Distance between rails: 4 6 " (100 150 mm)
    - Distance from belt edge to outer rail: 0.5 2" (15 50 mm)


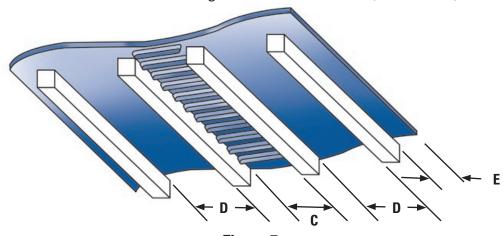


Figure 7

#### **Returnway Support**

- Returnway supports can be continuous rails that are parallel to the belt length (reference figure 7), intermittent supports such as rollers or stationary bars that are perpendicular to the belt length, or a combination of both. The belt contact surfaces of stationary supports should be made of UHMW-PE or acetal (POM).
- Continuous rails
  - Rail width: 1'' 2'' (25 50 mm)
  - Joints in support rails: downstream rail should be slightly lower than the joining upstream rail to prevent damage to belt teeth or underside of the belt.
  - Rail Spacing, Figure 8
    - Distance between rails, Dim. F: 6" 12" (150 300 mm)
    - Distance from belt edge to outer rail, Dim. G: 2" 3" (50 75 mm)

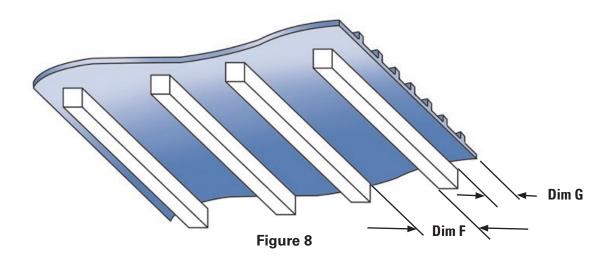

- Support rollers or stationary bars
  - Width: same width as the belt
  - Minimum radius:
    - PC10, FC12: 1" (25 mm)
    - PC20, CC40: 1.5" (37 mm)
  - -Typical spacing of roller shafts or stationary bars: 36" 60" (1 1.5 meters)
  - -Typical catenary sag between supports: 2" 5" (50 125 mm)

#### Snub roller

- Belt manufacturers that don't embed cord tension members in their belt look to reduce belt stretch by using a higher durometer resin. These harder, stiffer urethane grades make it more difficult to achieve the proper wrap around the drive sprocket and improving the wrap angle is important because it increases the drive torque and prevents ratcheting or skipping teeth. These same belt manufacturers often recommend positioning a snub roller up against the drive sprocket to overcome the belt stiffness. Gates Mectrol believes putting a roller against the drive sprocket unnecessarily creates a dangerous pinch point and compromises belt sanitation. Such a roller only needs to aid the belt in wrapping the drive sprockets 180° or more and should be positioned away from the drive sprocket.
- We recommend the use of snub rollers at the drive sprockets for:
  - Applications involving both heavy loads with little or no belt pretension.
     Loads are considered heavy if the calculated belt tensions at 50% or more of the belt rating.
  - Applications utilizing the minimum recommended sprocket diameter with little or no belt pretension.


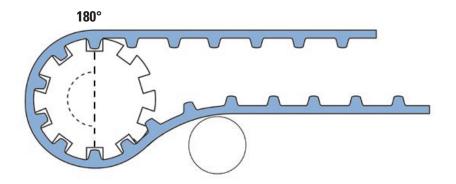



Figure 9

- Snub roller dimensions:
  - Width: same width as the belt
  - Minimum diameter:
    - PC10
      - above 25°F (-4°C): 3.5" (89 mm)
      - at or below 25°F (-4°C): 5" (125 mm)
    - PC20, CC40
      - above 25°F (-4°C): 6" (150 mm)
      - at or below 25°F: 10" (250 mm)
    - FC12
- above 25°F (-4°C): 3" (75 mm)
- at or below 25°F: 4.5" (114 mm)

#### Tensioning Device (Tensioner/Take- Up)


- Gates Mectrol recommends that conveyors be installed with quick release tensioners or pivot arm to allow the belt to be cleaned on the conveyor thus eliminating the need for belt removal during the cleaning process. Such tensioners allow the belt to be quickly slacked off in order that it can be lifted in order to clean the underside of the belt and the conveyor carryway.
  - A tensioning device or tensioner allows the belt to be slack while it is installed onto the conveyor. It is also necessary for adjusting the belt tracking.
  - Recommended minimum take-up travel: 5" 8" (125 200 mm)

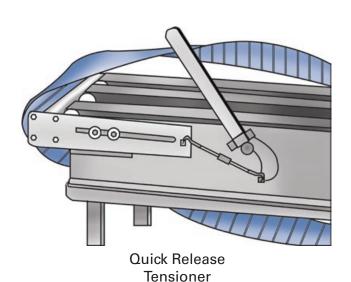

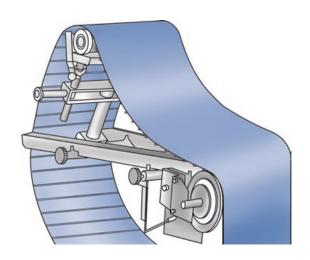

Pivot Arm

#### STRAIGHT LINE (HORIZONTAL OR INCLINE) CONVEYOR WITH CLEATS

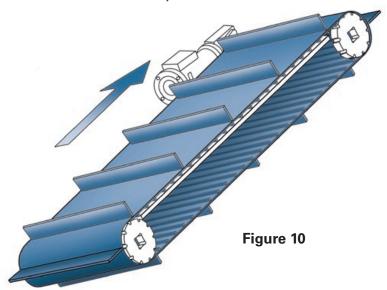

#### General


- Cleat geometries and specifications
  - See pages 21 and 22.
- Minimum Drive and Idler Sprocket Diameters
  - See belt and mechanical splice data found on pages 11, 14, 18, 19 and 29.

#### **Carryway Support**

• See Horizontal Basic Conveyor Construction on pages 34 and 35.

#### **Returnway Support**

- Maximum recommended belt width without center support: 18"
- Returnway support can be continuous rails that are parallel to the belt length, support rollers, or a combination of both.
- Conveyors with center returnway supports require split cleats, see Figures 11 and 12.
- Continuous rails
  - Recommend that continuous support rails contact the belt conveying surface and not the top of the cleats and be made of UHMW-PE or acetal (POM). See Figure 11
  - Minimum width for outer rails: 1.25" (32 mm)
  - Recommended distance from rails to cleat, 0.25" (6 mm). Guides return side of belt without binding.

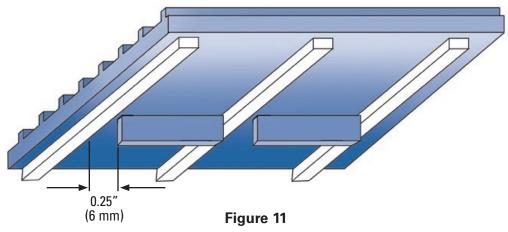

- Support Rollers
  - Dynamic support rollers can be used if conveyor has center returnway rollers.
     See Figure 12
  - Roller Width: 1" minimum (25 mm)
  - Minimum roller diameter:
    - PC10, FC12: 2" (50 mm)
    - PC20, CC40: 3" (75 mm)
      - Large enough so cleats can clear roller shaft
  - Recommended clearances, Figure 13
    - Recommended distance from rollers to cleat, 0.25" (6 mm). Prevents belt and cleats from binding on support rollers.
  - -Typical spacing along belt length: 36" 60" (1 1.5 meters)
  - -Typical catenary sag between supports: 2" 5" (50 125 mm)



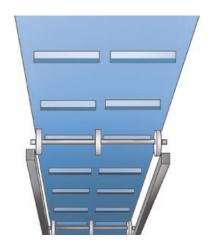


Figure 12

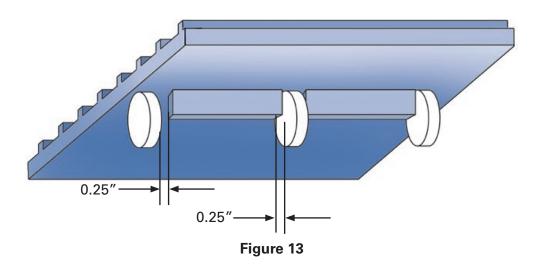

#### STRAIGHT LINE CONVEYOR WITH CORRUGATED SIDEWALLS

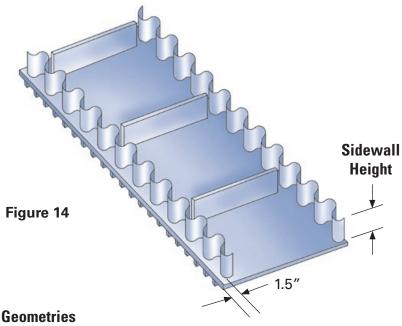

- **Corrugated Sidewall Geometries** 
  - See page 23 for sidewall specifications
    - Note: Sidewall loops will not necessarily line up.
  - Suggested corrugated sidewall height: 0.5" above height of cleats.

#### **Minimum Sprocket/Pulley Diameter**

- Minimum sprocket diameter = 2.5 x Sidewall Height or minimum diameter recommendation for belt and fastener type, whichever is greater.
- Minimum back bend diameter = 1.5 x Sidewall Height or minimum diameter recommendation for belt type, whichever is greater.

#### **Carryway Support**

See Horizontal Basic Conveyor Construction, pages 38 and 39.

#### **Returnway Support**

- Recommended 1.5" sidewall indent.
- Recommend continuous support rails: contacting the base belt and not the top of the cleats, arranged parallel to the belt length, and made of UHMW-PE or acetal (POM). See Figure 15.
- Minimum width for outer rails: 1.25" (32 mm)

• Recommended distance from outer rails to sidewall: 0.25" (6 mm). Prevents belt and sidewall from binding on guide rails.

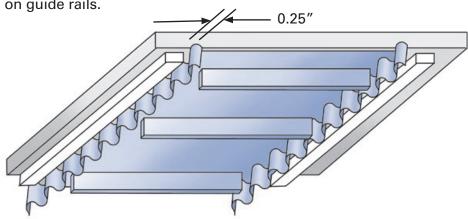


Figure 15

- Dynamic rollers can be used in place of stationary rails provided the belt has sufficient stiffness across its width.
  - Roller Width: 1" minimum (25 mm)
  - Minimum roller diameter:
    - Large enough so corrugated sidewalls and cleats can clear roller shaft
    - PC10, FC12: 2" (50 mm)
    - PC20, CC40: 3" (75 mm)
  - Recommended clearances
    - Recommended distance from outer rollers to corrugated sidewall: 0.25" (6 mm).
  - Typical spacing along belt length: 36" 60" (1 1.5 meters)
  - Typical catenary sag between supports: 2" 5" (50 125 mm)

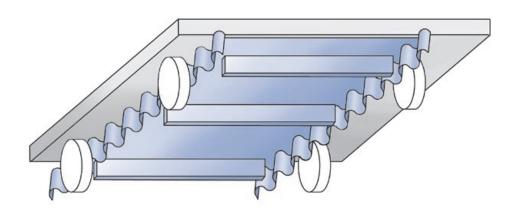



Figure 16

#### **Z-CONVEYOR (GOOSE NECK)**

We strongly recommend using PosiClean PC20 for Z-conveyors. PosiClean's greater lateral stiffness and its distribution of loads across the full belt width help minimize the tendency of the belt to pull out from under the hold downs in the carryway transition areas. We do not recommended **CenterClean** for Z-conveyors.

#### **Components**

- 1. Drive sprockets
- 2. Transition sprockets
- 3. Transition hold down rollers
- 4. Transition rollers
- 5. Idler tail sprockets with take-up
- 6. Carryway support rails
- 7. Returnway support rails
- 8. Transition hold down

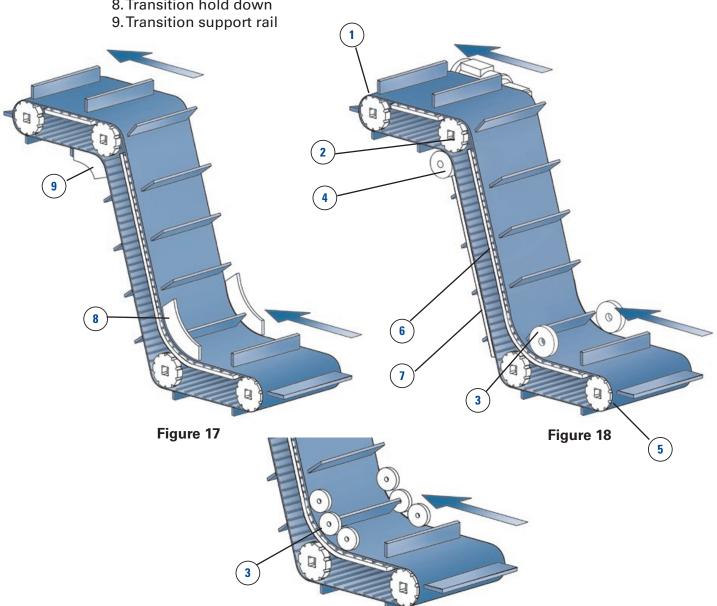

#### **Carryway Transition - Horizontal to Incline**

- Gates Mectrol strongly recommends dynamic rollers as hold downs in the carryway transition area, especially for dry applications.
- Hold Down Rollers
  - Roller minimum width: 1.5" (38 mm)
  - Rollers minimum diameter without corrugated belt sidewalls
    - PC10
      - above 25°F: 3.5" (89 mm)
      - at or below 25°F: 5" (125 mm)
    - PC20
      - above 25°F: 6" (150 mm)
      - at or below 25°F: 10" (250 mm)
  - Rollers minimum diameter with corrugated belt sidewalls:
    - Minimum diameter = 1.5 x Sidewall Height or minimum diameter recommendation for belt type without sidewalls listed above, whichever is greater.
  - Recommended clearance between roller and cleat or corrugated sidewall: 0.25" (6 mm)
- Hold Down Shoes
  - Gates Mectrol does not recommend the use of hold down shoes.
  - Hold Down Shoes are only to be used if the interface between shoe and belt is lubricated (e.g. wet) and the conveyance loads are light.
  - Hold down shoe minimum radius: 6" (150 mm)
  - Minimum width: 1.5" (38 mm)
  - Clearances
    - Clearance between shoe and cleats or side walls, Figure 19, Dim. O: 0.25" (6 mm)
    - Clearance between base of shoe and belt conveying surface, Fig. 19, Dim. P: .063" (1.5 mm)

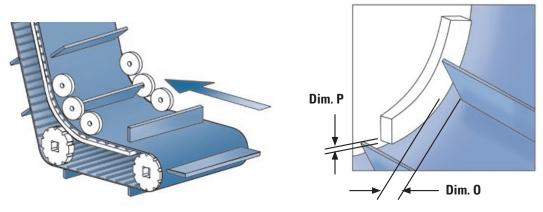


Figure 19

#### **Carryway Transition- Incline to Horizontal**

- Gates Mectrol strongly recommends sprockets in this transition area to reduce the frictional drag and belt wear, especially for dry applications.
  - Transitions sprockets
    - Minimum sprocket diameters: see belt data on pages 12,15 and 20.
    - Maximum sprocket spacing: see PosiClean Sprocket and Support Guidelines on page 12.
- Transition rails are only to be used if the interface between the rails and belt is lubricated (e.g. wet) and the conveyance loads are light.
  - Minimum radius: 6" (150 mm)
  - Minimum width: 1.25" (32 mm)
  - Maximum rail spacing: 6" (150 mm)

#### **Returnway Transition – Horizontal to Decline**

- Gates Mectrol strongly recommends dynamic rollers in this transition area to reduce the frictional drag and belt wear, especially for dry applications.
- Transition Roller design guidelines: see Hold Down Rollers, page 47.
- Transition Support Rail Transition rails are only to be used if the interface between the rails and belt is lubricated (e.g. wet) and the conveyance loads are light.
  - Minimum radius: 6" (150 mm)
  - Minimum width: 1.5" (38 mm)
  - Clearance between rail and cleats or side walls: .25" (6 mm)
  - For clarification see Figure 11 for cleats and Figure 15 for corrugated belt sidewalls.

#### **Returnway Transition – Decline to Horizontal**

- Gates Mectrol strongly recommends sprockets in this transition area to reduce the frictional drag and belt wear, especially for dry applications.
- Transitions sprockets
  - Minimum sprocket diameters: see belt data on pages 10, 14, 17 and 19.
  - Number of drive sprockets: see PosiClean Sprocket and Support Guidelines on page 12.
- •Transition rails are only to be used if the interface between the rails and belt is lubricated (e.g. wet) and the conveyance loads are light.
  - Minimum radius: 6" (150 mm)
  - Minimum width: 1.25" (32 mm)
  - Maximum rail spacing: 6" (150 mm)

#### **Carryway Support**

• See Basic Straight Line Conveyor guidelines, page 36.

#### **Returnway Support**

 See Straight Line Conveyor with Cleats pages 42 and 43. For Straight Line Conveyor with Corrugated Sidewalls, see pages 44 and 45.

#### **Drive Sprockets**

- Gates strongly recommends that drive sprockets are located at the discharge end of the conveyor,
   i.e., the conveyor is a head drive configuration.
- Minimum diameter to ensure sufficient torque transmission
  - PC10: number of teeth 12, diameter 3.8" (97 mm)
  - PC20: number of teeth 10, diameter 6.2" (157 mm)
- Maximum sprocket spacing: see PosiClean Sprocket and Support Guidelines on page 12.

#### **Tail Sprockets**

- Minimum Idler Sprocket Diameters: see pages 10,14, 17 and 19.
- Maximum sprocket spacing: 6" (152 mm).

#### Conveyor Sidewalls (fixed to conveyor frame) acting as hold downs

- •Thickness, minimum: 1" (25 mm)
- Clearances: see hold down shoe dimensions on page 47.

#### RECIPROCATING CONVEYOR (TELESCOPING, SHUTTLE OR RETRACTABLE)

This design is **not recommended for belts with cleats or corrugated sided walls**. Experience has shown that the belt performs best with a full width back bend roller.

- Gates Mectrol recommends using PosiClean for reciprocating conveyors. We do not recommend CenterClean.
- Follow the guidelines in the section on Basic Horizontal Straight Line Conveyor for this conveyor design. Below are some additional guidelines for the reciprocating section of the conveyor.

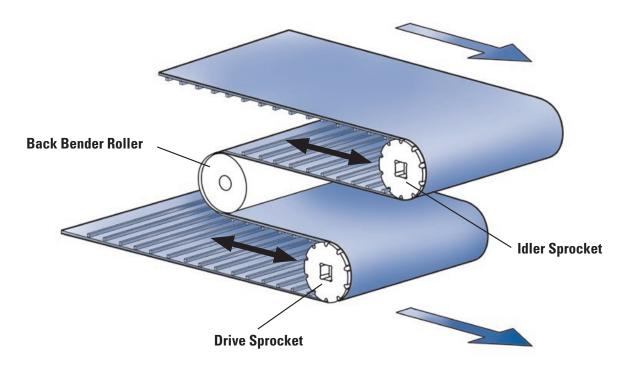


Figure 20

#### **Belt Tracking**

- •The belt will not track properly in the reciprocating section if the shafts are not parallel to each other and perpendicular to the belt travel.
- We recommend that the back bend idler have flanges or guides are placed along the belt edges between the idler sprockets and back bend roller or placed between the back bend roller and the drive sprockets.
- Surfaces on stationary guides that contact the belt edges should be made of UHMW-PE or acetal (POM).

#### **Back Bend Roller**

- Minimum diameter:
  - PC10
    - above 25°F (-4°C): 3.5" (89 mm)
    - at or below 25°F (-4°C): 5" (125 mm)
  - PC20
    - above 25°F (-4°C): min 6" (150 mm)
    - at or below 25°F (-4°C): 10" or 8" (250 or 200 mm)
- Minimum flange heights:
  - PC10: 0.375" (10 mm)
  - PC20: 0.500" (13 mm)

#### **Sprockets**


- Minimum Drive and Idler Sprocket Diameters: see pages 10, 14, 17 and 19.
- Number of Drive and Idler Sprockets: on 3" (76 mm) centers. This ensures even distribution of the belt load.

#### **Tension**

- Reciprocating conveyors work best with some pre-tension. Gates Mectrol Kevlar® reinforced belts are ideally suited for working under tension.
  - -Tensioning Device (Take-Up): see page 41.


#### **TROUGHED CONVEYORS**

- Conveyor must be at least 5 feet long for troughing applications
- We only recommend using CenterClean for troughing applications.
- •The belt needs to be pre-tensioned to trough and transmit torque properly. This requires that the conveyor have a tensioning device. A quick tensioning system is recommended.

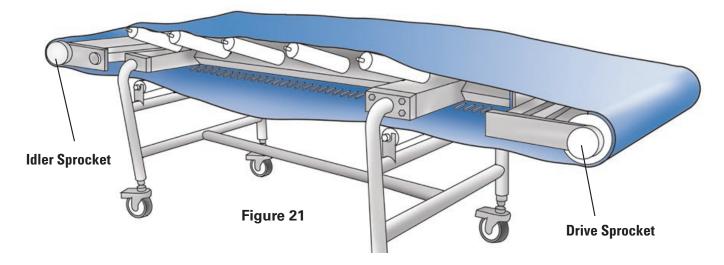


#### **Carryway Support**

- The center of the belt, in the area of the teeth, must be firmly supported with a slider bed or support rails on either side of the belt teeth. Slider bed and support rails should be made of UHMW-PE or acetal (POM).
- The center of the belt on either side of the belt teeth must be supported.
- Support rollers are recommended to reduce the belt drag, particularly in dry applications. Support roller options include 2 angled rollers ('rabbit ears') with UHMW-PE center support rails, see Figure 22. We do not recommend 2 angle rollers without any center support, see Figure 23

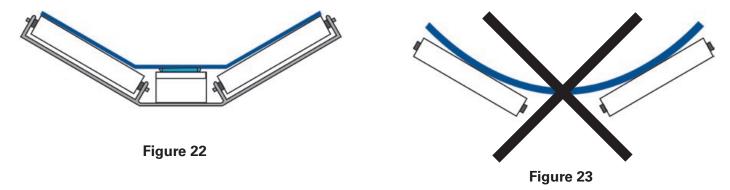

- Minimum Roller Diameter: 4" (100 mm)
- Roller length: extend beyond the belt edges
- -Typical spacing of roller shafts: 16" 28" (406 711 mm)
- Guidelines for transitioning the belt from flat to trough shape see Transition Length section below.
- Support rails can be used for wet applications but the belt contact surfaces must be made of UHMW-PE or acetal (POM). Rails with round belt contact surfaces are not recommended.
  - Rail faces must be tangent or conform to trough shape to minimize belt abrasion. Figure 24 shows a support rail that pivots to conform to the trough shape. Figure 25 shows rail surfaces tangent to the troughing belt.

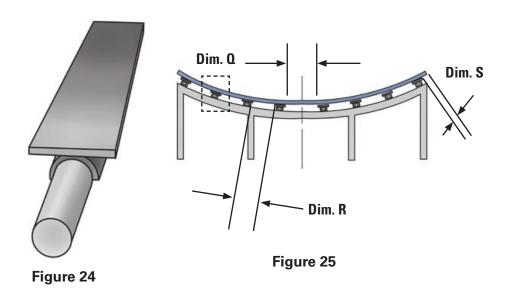

- Rail width, minimum: 1.25" (32 mm)
- Spacing, see Figure 25.
  - Distance between rails guiding belt teeth 3.15" (80.0 mm), Dim. Q.
  - Distance between rails not guiding belt teeth 3" 4" (75 100 mm), Dim. R.
  - Distance from belt edge to outer rail 0.5" 1" (15 25 mm), Dim. S.
- Guidelines for transitioning the belt from flat to trough shape see Transition Length section below.

Transition Length (L) — distance for transitioning the belt from flat to trough shape, typically between the pulleys (drive/idler) and the beginning of the trough.

• Minimum transition length for a given trough (β) is:

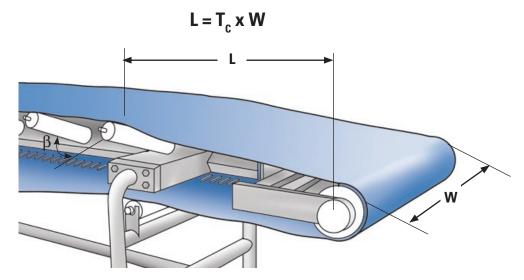


Figure 26

- Where W = Belt Width
- Tc = Troughing Constant
- $\beta$  = Troughing Angle

Troughing Angle β	10° - 20°	>20° - 40°
Troughing Constant $T_c$	1.5	2

Table 1

Note: Maximum recommended trough angle: (β) 40°.

#### **Belt Width**


- Widths less than 12" (300 mm) are not recommended because they will not easily form the trough shape.
- Widths less than 20" (500 mm) will not easily trough more than 30° per side (see trough angle  $\beta$  in Figure 26).

#### **Returnway Support**

See Basic Straight Line Conveyor page 36.

#### **Pulleys**

- At least 80% of the belt width must be directly supported by the driver and idler pulley assemblies, because of the high tension in the belt sides and edges that result from troughing.
  - One piece full width pulleys that fully support the belt edges (see Figure 27) are ideal for these applications.
  - Pulley assemblies with individual support rollers and drive/idler pulley (see Figure 28) can also be used.
    - •The outer support rollers must support the belt edges.
    - •The sum of the roller and pulley widths for a pulley assembly must be 80% or more of the belt width.

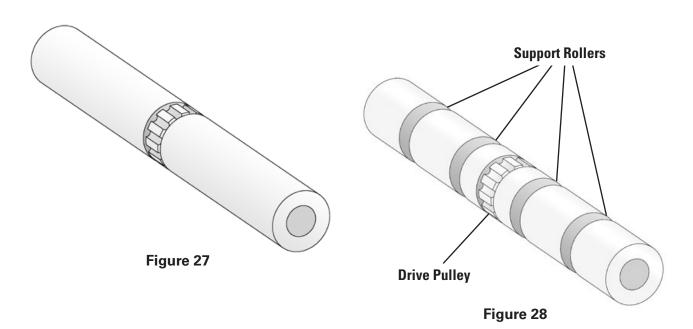




# **Food Belt Support Materials**

INSTALLATION CHECKLIST	58
CERTIFICATES	60
BELT SANITATION	62
Recommended Sanitation Procedures	
Common Sanitation Chemicals	62
CHEMICAL RESISTANCE CHART	63
SAFETY POLICY	70
CONTACTS	72

# **Food Belt Installation Checklist**

Gates Mectrol Food Belt Quote Check Name:		Site Location:
Company Name:		
Application		
Briefly describe what is being conveyed, v	what type of belt is being replaced.	
Max. Load lbs.		
	Conveyor Speedft/min	
Lb per Cubic Ft.	Depth of Productin	
Belt	Input	
Belt Type (FC9IPR, FC12, FC12IP, PC10, PC	C20, CC40, Dewatering)	
Belt Width (in/mm)	-	
Belt Length (in/mm)		
Splice Type		
Mechanical	PosiLace, APF, RS, UX1	
Weld	Finger Pattern or Straight Cut	
Straight Cleats (5mm thick)	Yes or No	
Height +		
Spacing		/ /
Offset From Edge (in/mm) / Centered		Angle
Scoop Cleats (7 mm thick)	Yes or No	
Overall Height	2.5", 3", 3.5", 4", 5", 6"	
Spacing	2.0 , 0 , 0.0 , 1 , 0 , 0	
Offset From Edge (in/mm) / Centered		
Sidewalls	Yes or No	
Height (in/mm)	1.4" to 4.3"	
Offset From Edge (in/mm)	1.4 10 4.5	Comments
V-Guide	Yes or No	Comments
	K6, K8, K10, K13, A Modified	
Type Offset From Edge (in/mm) / Centered	No, No, N10, N13, A Moullied	
Sprockets # of Sprockets		
Number of Teeth or Diameter		
	Round or Square	
Bore Type	Round of Square	
Dimension (in/mm)		
Keyway Dimension (in/mm)	Yes or No	
Any Back Idlers  Diameter of Back Bend (in/mm)	T ES UT INU	
Diameter of Back Bend (in/mm)		
Smallest In Conveyor (in/mm)	Yes or No	
Drum Motor / Motorized Pulley  Conveyor	T ES UT INU	Additional Information
•	Hood or Toil	
Drive Type	Head or Tail	+ 0.25" 0.25", 0.5", 0.75", 1", 1.5", 2", 2.5", 3", 3.5", 4"
Bed Type Top  Carpway Material **	Wear Strip / Slider Bed / Roller	* UHMW or Stainless Steel
Carryway Material **	Woor Strip / Slider Ded / Delle	* Wet / Dry
Bed Type Return	Wear Strip / Slider Bed / Roller	GATES MECTROL, INC.
Carryway Material **		9 Northwestern Drive
Conveyor Sidewalls/Fenders - Height		Salem, NH 03079, U.S.A.
Material *		Tel. +1 (603) 890-1515
Incline Angle		Tel. +1 (800) 394-4844
Angle of Belt Wrap On Drive Pulley	V	Fax +1 (603) 890-1616
Tensioning Device (Take Up) Avail.	Yes or No	www.gatesmectrol.com
Type		Application Engineering
Total Travel  Extended Distance When Center  Distance is Measured		email: apps@gatesmectrol.cor Tel. +1 (800) 505-8494  GM_Food Belt_Quote Checklist_Z Conveyor 8-201

### **Food Belt Installation Checklist**

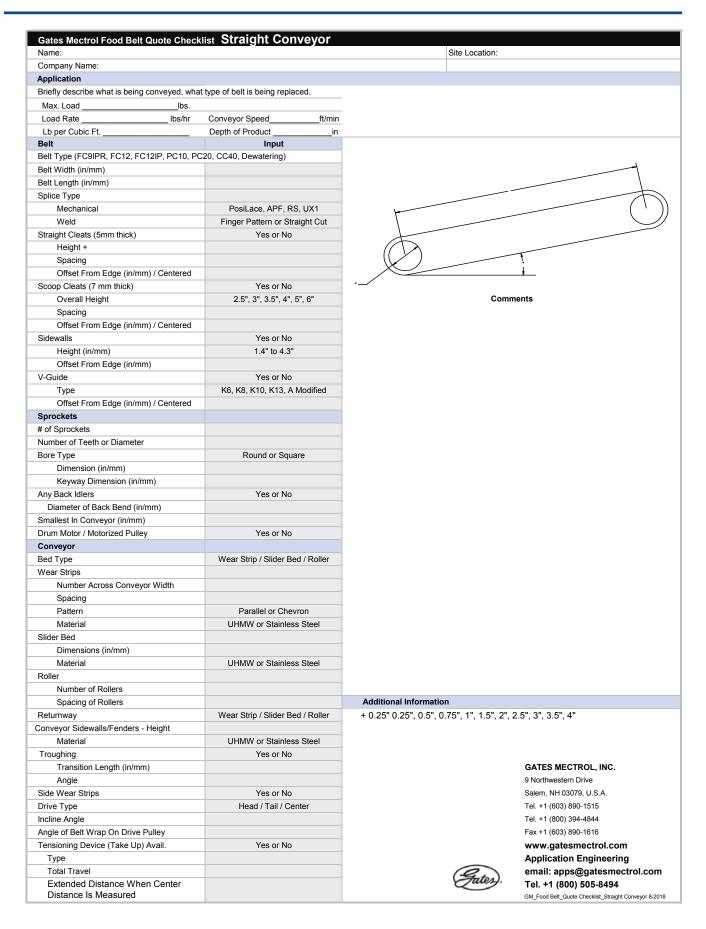

### **Food Belt Certifications**

#### **CERTIFICATES**

- FDA compliance for wet food contact requirements 21CFR177.2600
- USDA certificate for hygiene requirements for meat and poultry processing equipment
- USDA certificate for dairy equipment
- EU compliance

















### **Food Belt Sanitation**

#### **BELT SANITATION**

Gates Mectrol food conveyor belting is designed to be easy to clean and specifically for Clean-in-Place sanitation procedures. It does not require soaking and immersion to achieve proper sanitation levels. In order to achieve maximum belt life, immersion in chemical solution for sanitation is not recommended.

#### **Recommended Sanitation Procedures**

- 1. Remove large food residues by mechanical means (scraper/brushes etc.)
- 2. Rinse conveyor with hot water to further remove food soils, preferably belt is not under tension
  - Approximately 60°C/140°F (avoid boiling water for safety and belt life)
  - Note: high water pressure may atomize water and make pathogens airborne
- 3. Apply cleaning detergent to the conveyor and belt
  - Usually alkaline/surfactant combination
- 4. Rinse conveyor with hot water (approximately 60°C/140°F)
  - Note: high water pressure may atomize water and make pathogens airborne
- 5. Apply sanitizer (germicide) to reduce microorganisms to safe level
- 6. Rinse with water if necessary
  - Dependent on sanitizer toxicity level

#### **Common Sanitizing Chemicals**

• Sodium hyperchlorite (bleach) is a common sanitizer used in the food processing industry. It attacks all families of thermoplastic polyurethane to some degree. In order to maximize belt life, the time that the bleach solution resides on the belt should be minimized and the solution should be at room temperature. Gates Mectrol belt jackets are made of polyether based thermoplastic polyurethane (TPU). This family of TPUs are more resistant to attack by the typical chemicals used in the food industry including sodium hypochlorite than the commonly used polyester based thermoplastic polyurethanes.

#### - Guidelines for Use of Sodium Hypochlorite on Gates Mectrol Food Conveyor Belting

- Maximum concentration level: 2,000 ppm of available chlorine

Note: If concentration levels exceed 200 ppm of available chlorine, the belt must be rinsed with potable water after the application of the sodium hypochlorite per US Government regulations 21 CFR Part 178.

- Maximum residence time on belt for contraction levels exceeding 200 ppm : 20 minutes
- Maximum solution temperature: 90°F (32°C)
- Sodium hydroxide (caustic soda) is found in many cleaning/sanitizing solutions. Sodium hydroxide does not affect the jacket material (polyether basedTPU) of Gates Mectrol's food belting.
- Quaternary ammonium compound (Quats) is a common sanitizer in the food industry. This sanitizer does not attack Gates Mectrol's food belting.

#### **CHEMICAL RESISTANCE CHART**

This chart is only provided as a general guide and not a qualified guarantee of chemical compatibility. The chemical resistance on Gates Mectrol belts can be affected by chemical concentration, contact longevity and food contact / environmental temperature. Gates Mectrol food conveyor belting does not require soaking and immersion to achieve proper sanitation levels. Immersion in chemical solution for sanitation is not recommended for our food conveyor belting in order to achieve maximum belt life. Our belting is designed for Clean-In-Place sanitation.

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
Acetic Acid				X
20% Acetic Acid			Х	
3% Acetic Acid	X			
Acetic Anhydride				X
Acetone				X
Acetylene	Х			
Aluminum Chloride	X			
Aluminum Sulphate	X			
Ammonium Carbonate	Х			
Ammonium Chloride		Χ		
Ammonium Hydroxide		X		
Ammonium Nitrate	X			
Ammonium Nitrite	X			
Ammonium Phosphate	X			
Ammonium Sulphate	Х			
Ammonium Sulfide	X			
Amyl Acetate				X
Amyl Alcohol	X			
Anline				X
Animal Oils & Fats	X			
Barium Chloride	Х			
Barium Hydroxide	X			
Barium Sulfide	X			

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
Beer	Х			
Beet Sugar Liquors	X			
Benzene			Х	
0.5% Bleach (sodium hypochlorite)		Х		
Borax	X			
Boric Acid	X			
Brake Fluid			Х	
Butter	X			
Butyl Acetate				X
Calcium Bisulfite				X
Calcium Chloride	X			
Calcium Hydroxide	X			
5% Calcium Hypochlorite	X			
Calcium Nitrate	X			
Calcium Sulfide	X			
Caliche (Sodium Nitrate)				Х
Cane Sugar	X			
Carbon Bisulfide		Х		
Carbon Dioxide	X			
Carbon Monoxide	X			
CarbonTetrachloride		Х		
Castor Oil	X			
10% Caustic Soda (Sodium Hydroxide)	X			
Cheese	Х			
Chlorine Gas, Dry				X
Chlorine Gas, Wet				X
Chloroacetic Acid				X
Chlorobenzene				X
Chromic Acid				X
Citric Acid	Х			

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
Coconut Oil	X			
Copper Chloride	X			
Copper Sulphate	X			
Corn Oil	X			
Cottonseed Oil				Х
Cresol				X
Creosote		Х		
Cyclohexane		Х		
Cyclohexanone				Х
Diathyl Ether		Х		
Dimethyl Acetamide				Х
Dimethyl Formamide				X
Dimethyl Sulphexide				Х
Dioctyl Phthalate (DOP)	X			
Epichlorohydrin				Х
Ethanol		Х		
Ethyl Acetate				Х
Ethyl Cellulose				Х
Ethylene Chloride				Х
Ethylene Dichloride				Х
Ethylene Glycol	X			
Ethylene Oxide	X			
Ferric Chloride		Х		
Ferric Sulphate		Х		
Fertilizer		Х		
Fish Oil	X			
Flour	X			
Fluosilicic Acid		Х		

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
40% Formaldehyde Solution		Х		
Formic Acid				X
Fruit Acids	X			
Furfural			Х	
Gasoline		Х		
Glucose	X			
Glue	X			
Glycerine	X			
Hexane	X			
Hexanol	X			
Hydraulic Oils		Х		
Hydrazine				X
Hydrocyanic Acid				X
Hydroflouric Acid, Anhydrous				X
Hydrogen	X			
Hydrogen Peroxide	X			
Hydrogen Sulphide		Χ		
lodine				X
Isoctane	X			
Isopropyl Alcohol			X	
.5% Javelle Water (Bleach)		Х		
Kerosene		Х		
Lacquer Solvents				X
Lactic Acid	X			
Lard	X			

PRODUCT/CHEMICAL				Not
	Excellent	Good	Limited	Recommended
Lineolic Acid		X		
Linseed Oil		Х		
Lubricating Oils		X		
Magnesium Chloride	X			
Magnesium Hydroxide		Х		
Magnesium Sulfate	X			
Meat & Bone Meal	X			
Methyl Alcohol (Methanol)			X	
Methyl Isobutyl Ketone			X	
Methyl Ethyl Ketone (MEK)				Х
Methylene Chloride				Х
Milk	X			
Mineral Oils	X			
Mineral Spirits			Х	
Molasses	X			
Mustard	X			
Naphthalene			Х	
20% Nitric Acid				Х
3% Nitric Acid				Х
Nut Oil	X			
Oils & Fats	X			
Oleic Acid	X			
Oleum				Х
Olive Oil	X			
Oxalic Acid		Х		
Ozone				Х
Palm Kernel Oil	X			

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
Palmitic Acid		Х		
Peanut Oil	X			
Pentane	X			
Petroleum		Х		
Phenol				Х
Phosphoric Acid, Diluted	X			
20% Nitric Acid, 4% HF Pickling Solution				Х
1% Nitric Acid, 4% HF Pickling Solution		Х		
Potassium Chloride	X			
Potassium Dichromate		Х		
Potassium Hydroxide		Х		
Potassium Nitrate	X			
Potassium Sulphate	X			
Pyradine				Х
SAE 10 Oil	X			
Salt Water	X			
3% Sodium Sulfite		Х		
0.5% Sodium Hypochlorite		Х		
10% Sodium Hydroxide (Caustic Soda)	X			
Soy Bean Oil	X			
15% Stannous Chloride		Х		
Steam 100 - 110° C			Х	
Stearic Acid	X			
Styrene				Х
Sulphur Dioxide, Liquid				Х
Sulphur Dioxide, Gas				Х
20% Sulphuric Acid				Х
3 % Sulphuric Acid		Х		
Sulphurous Acid		Х		
Sugar	Х			

PRODUCT/CHEMICAL	Excellent	Good	Limited	Not Recommended
10% Tannic Acid	Х			
Tartaric Acid	X			
Tetrahydrofuran				Х
Toluene			Х	
Tomato Juice	Х			
Tomatoes, Ketchup	X			
Tetrachloroethylene			Х	
3% Triethanolamine		Х		
Trisodium Phosphate	X			
Tung Oil	X			
Turpentine			Х	
3% Urea	X			
Urine	X			
Vegetable Oils & Fats	X			
Vinegar	X			
Water 22°C to 70°C	X			
Water 100°C (212° F)			Х	
Whiskey/Wine	X			
Xylene			Х	
Zinc Chloride		Х		
Zinc Sulphate		Х		

## **Food Belt Safety Procedures**

#### **SAFETY POLICY**

WARNING! Be Safe! Gates Mectrol belting is reliable when used safely and within Gates Mectrol application recommendations. However, there are specific USESTHAT MUST BE AVOIDED due to the risk of serious injury or death. These prohibited misuses include:

#### **Lift Systems**


Do not use Gates belts or pulleys in applications that depend solely upon the belt to raise/lower, support or sustain a mass without an independent safety backup system. Gates belt drives systems are not intended for use in applications requiring special "Lift" or "Proof" type chains with minimum tensile strength or certified/test tensile strength requirements.

#### **Braking Systems**

Do not use Gates belts or pulleys in applications that depend solely upon the belt to slow or stop a mass or to act as a brake without an independent safety backup system. Gates belt drive systems are not intended to function as a breaking device in "emergency stop" systems.

# Notes

-		

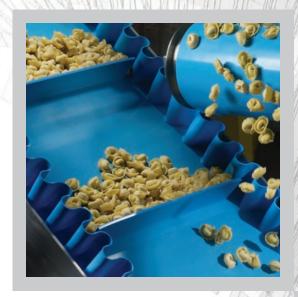



#### USA CORPORATE HEADQUARTERS

Gates Mectrol Inc. 9 Northwestern Drive Salem, NH 03079, U.S.A. Tel. +1 (603) 890-1515

Tel. +1 (800) 394-4844

Fax +1 (603) 890-1616

email: contact@gatesmectrol.com



Gates Mectrol and PosiClean are registered trademarks and CenterClean, FlatClean and PosiLace are trademarks of Gates Mectrol Incorporated. All other trademarks used herein are the property of their respective owners.



© Copyright 2018 Gates Mectrol Incorporated.

All rights reserved. 9/18

GM\_FCB\_18\_US