

PowerFlex 25-COMM-E2P Dual-Port EtherNet/IP Adapter



Important User Information

Solid-state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication [SGI-1.1](#) available from your local Rockwell Automation® sales office or online at <http://www.rockwellautomation.com/literature/>) describes some important differences between solid-state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid-state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

Allen-Bradley, Rockwell Automation, Rockwell Software, PowerFlex, Studio 5000, and Connected Components Workbench are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

	Important User Information	2
	Preface	
Overview	Recommended Documentation	7
	Manual Conventions	7
	Chapter 1	
Getting Started	Components	9
	Features	10
	Understanding Parameter Types	10
	Compatible Products	11
	Required Equipment	11
	Safety Precautions	12
	Quick Start	13
	Chapter 2	
Installing the Adapter	Preparing for Set-Up	15
	Setting the Node Address	16
	Connecting the Adapter to the Drive	18
	Connecting the Adapter to the Network	20
	Applying Power	22
	Commissioning the Adapter	24
	Chapter 3	
Configuring the Adapter	Configuration Tools	25
	Using the Drive Keypad Interface to Access Parameters	25
	Using the PowerFlex 4-Class HIM to Access Parameters	27
	Setting the Adapter Node Address	27
	Using a BOOTP or DHCP Server	28
	Using Adapter Parameters	31
	Setting the Data Rate	32
	Using Master-Slave Hierarchy	33
	Setting a Fault Action	34
	Resetting the Adapter	36
	Restoring Adapter Parameters to Factory Defaults	36
	Viewing the Adapter Status Using Parameters	37
	Updating the Adapter Firmware	37
	Chapter 4	
Configuring the I/O	Using RSLinx Classic	39
	CompactLogix Example	40
	Limitations in Using MicroLogix 1100/1400	62

	Chapter 5	
Using the I/O	About I/O Messaging	63
	Understanding the I/O Image	64
	Using Logic Command/Status	65
	Using Reference/Feedback	65
	Using Datalinks	66
	Example Ladder Logic Program Information	67
	CompactLogix Example	67
	Chapter 6	
Using Explicit Messaging	About Explicit Messaging	73
	Performing Explicit Messaging	74
	CompactLogix Controller Examples	74
	Chapter 7	
Using Multi-Drive Mode	Single-Drive Mode vs. Multi-Drive Mode	87
	System Wiring	89
	Understanding the I/O Image	90
	Configuring the RS-485 Network	91
	Using Multi-Drive Add-On Profile	91
	Multi-Drive Ladder Logic Program for Generic Profile	102
	CompactLogix Controller Example Using Generic Profile	103
	Multi-Drive Mode Explicit Messaging	111
	Additional Information	112
	Chapter 8	
Troubleshooting	Understanding the Status Indicators	115
	PORT Status Indicator	116
	MOD Status Indicator	116
	NET A Status Indicator	116
	NET B Status Indicator	117
	Viewing Adapter Diagnostic Items	117
	Viewing and Clearing Events	120
	Appendix A	
Specifications	Communication	123
	Electrical	123
	Mechanical	123
	Environmental	123
	Regulatory Compliance	123
	Appendix B	
Adapter Parameters	<i>Device</i> Parameters	125

EtherNet/IP Objects	Appendix C	
	Supported Data Types	129
	Identity Object	130
	Assembly Object	132
	Register Object	133
	Parameter Object	136
	PCCC Object	139
	DPI Device Object	142
	DPI Parameter Object	145
	DPI Fault Object	151
TCP/IP Interface Object	153	
Ethernet Link Object	155	
Logic Command/Status Words: PowerFlex 525 Drives	Appendix D	
	Logic Command Word	157
	Logic Status Word	158
	Glossary	
	Index	

Notes:

Overview

This manual provides information about the Dual-port EtherNet/IP adapter and using it with PowerFlex 520-series drives for network communication.

For information on...	See page...
Recommended Documentation	Z
Manual Conventions	Z

Recommended Documentation

All the recommended documentation listed in this section is available online at <http://www.rockwellautomation.com/literature>.

The following publications provide additional information:

For...	See...	Publication
EtherNet/IP™	EtherNet/IP Media Planning and Installation Manual ⁽¹⁾	ODVA Pub. 148
	EtherNet/IP Network Infrastructure Guidelines ⁽¹⁾	ODVA Pub. 35
	EtherNet/IP Network Configuration User Manual	ENET-UM001
	Troubleshoot EtherNet/IP Networks	ENET-AT003
	EtherNet/IP Design, Commissioning, and Troubleshooting Quick Reference Drawings	IASIMP-QR023
	Ethernet Design Considerations Reference Manual	ENET-RM002
PowerFlex® 520-Series Drives	PowerFlex 525 Adjustable Frequency AC Drive User Manual	520-UM001
	PowerFlex 520-Series Communication Adapters Installation Instructions	520COM-IN001
HIM (Human Interface Module)	PowerFlex 4-Class HIM (DSI) Quick Reference	22HIM-QR001
RSLinX® Classic	RSLinX Classic Getting Results Guide ⁽²⁾	LINX-GR001
RSLogix™ 5000	RSLogix 5000 online help ⁽²⁾	–
CompactLogix™ 5370	CompactLogix 5370 Controllers User Manual (1769-L36ERM)	1769-UM021
MicroLogix™ 1100	MicroLogix 1100 Programmable Controllers User Manual	1763-UM001
MicroLogix™ 1400	MicroLogix 1400 Programmable Controllers User Manual	1766-UM001

(1) For ODVA publications, see the ODVA Ethernet/IP library at <http://odva.org/Home/ODVATECHNOLOGIES/EtherNetIP/EtherNetPLibrary/tabid/76/Inq/en-US/Default.aspx>

(2) The online help is installed with the software.

Manual Conventions

The following conventions are used throughout this manual:

- Parameter names are shown in the format *Device* parameter **xx** [*] or *Host* parameter **axxx** [*]. The xx/xxx represents the parameter number and the a represents the parameter group. The * represents the parameter name— for example *Device* parameter **01** [**MultiDrv Sel**].
- Menu commands are shown in bold type face and follow the format **Menu** > **Command**. For example, if you read “Select **File** > **Open**,” you should click the **File** menu and then click the **Open** command.

- The Studio 5000™ Engineering and Design Environment combines engineering and design elements into a common environment. The first element in the Studio 5000 environment is the Logix Designer application. The Logix Designer application is the rebranding of RSLogix 5000 software and will continue to be the product to program Logix 5000 controllers for discrete, process, batch, motion, safety, and drive-based solutions. The Studio 5000 environment is the foundation for the future of Rockwell Automation engineering design tools and capabilities. It is the one place for design engineers to develop all the elements of their control system.
- RSLogix 5000 software (version 20) was used for the screen captures in this manual. Different versions of the software may differ in appearance and procedures.
- The PowerFlex 520-series Adjustable Frequency AC Drive consists of PowerFlex 525 (used in the examples throughout this manual) and PowerFlex 523.

Getting Started


The Dual-port EtherNet/IP adapter is a communication option intended for installation into a PowerFlex 520-series drive. The Multi-Drive feature (see [Using Multi-Drive Mode on page 87](#)) also provides a means for other supported PowerFlex drives and DSI Hosts to connect to an EtherNet/IP network.

Topic	Page
Components	9
Features	10
Understanding Parameter Types	10
Compatible Products	11
Required Equipment	11
Safety Precautions	12
Quick Start	13

Components

Components of the Dual-Port EtherNet/IP Adapter

25-COMM-E2P

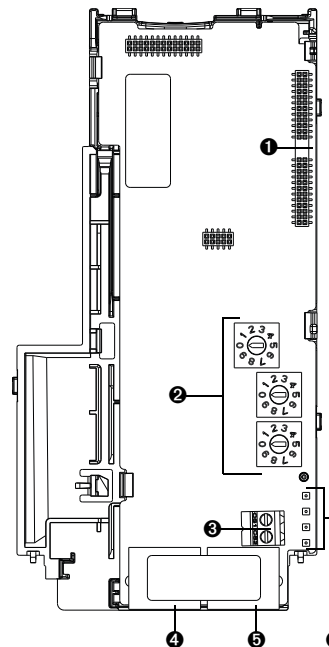

Item	Part	Description
1	Communication card-Drive header	A 40-pin, double-row shrouded female header. An interface connector is used to connect this header to a header on the drive.
2	Node Address switches	Sets the network node address of the adapter when not using: <ul style="list-style-type: none"> • A BOOTP or DHCP server • Adapter parameters See Setting the Node Address on page 16 .
3	CS1/CS2 terminals	Provides a clean ground for the communication bus cable shields. CS1 or CS2 should be connected to a clean ground or PE ground on the drive.
4	ENET1 Network port	An RJ-45 connector for the Ethernet cable. It is CAT-5 compliant to ensure reliable data transfer on 100Base-Tx Ethernet connections.
5	ENET2 Network port	
6	Status indicators	Four LEDs that indicate the status of the connected drive, adapter and network. See Troubleshooting on page 115 .

Features

The features of the Dual-port EtherNet/IP adapter include:

- Industrial Ethernet switch, and ENET1 and ENET2 network ports that provide connections for EtherNet/IP star, linear, or device-level ring (DLR) network topologies.
- Switches to set a network node address before applying power to the drive—or you can disable the switches and use a BOOTP server, a Dynamic Host Configuration Protocol (DHCP) server, or adapter parameters to configure the IP address.
- Compatibility with various configuration tools to configure the adapter and host drive. The tools include the PowerFlex 4/40-class HIM (Human Interface Module 22-HIM-A3 or 22-HIM-C2S), and drive-configuration software such as RSLogix 5000 (version 17 or greater), Logix Designer (version 21 or greater), and Connected Components Workbench (version 3 or greater).
- Status indicators that report the status of the adapter and network communications.
- Parameter-configured 16-bit Datalinks in the I/O to meet application requirements (four Datalinks to write data from the network to the drive, and four Datalinks to read data to the network from the drive).
- Explicit Messaging support.
- Master-Slave hierarchy that can be configured to transmit data to and from a controller on the network.
- Multi-drive mode which allows up to five drives to share a single EtherNet/IP node.
- User-defined fault actions to determine how the adapter and its host PowerFlex 520-series drive respond to:
 - I/O messaging communication disruptions (Comm Flt Action)
 - Controllers in idle mode (Idle Flt Action)
- Automatic Device Configuration (ADC) is an RSLogix 5000 (version 20 or greater) and Logix Designer (version 21 or greater) software feature that supports the automatic download of configuration data upon the Logix controller establishing an EtherNet/IP network connection to a PowerFlex 520-series drive and its associated peripherals.

Understanding Parameter Types

This manual references two types of parameters:

- *Device* parameters are used to configure the adapter to operate on the network. These parameters reside on the adapter.
- *Host* parameters are used to configure the drive, including the datalink configuration for the datalinks used by the adapter. These parameters reside on the drive.

You can view adapter *Device* parameters and *Host* parameters with any of the following drive configuration tools:

- PowerFlex 4-class HIM (22-HIM-A3 or 22-HIM-C2S)
- Connected Components Workbench software – click the tab for the adapter at the bottom of the window, and click the Parameters icon in the tool bar.

Compatible Products

At the time of publication, the adapter is compatible with Allen-Bradley PowerFlex 525 and PowerFlex 523 drives.

Required Equipment

Equipment Shipped with the Drive

When you unpack the adapter, verify that the package includes:

<input type="checkbox"/>	One PowerFlex 520-series Dual-port EtherNet/IP communications adapter (25-COMM-E2P) (installed in a PowerFlex 520-series drive control module back cover)
<input type="checkbox"/>	Two interface connectors (for connecting the Communication card-Drive header to the header on the drive)
<input type="checkbox"/>	One PowerFlex 520-series Communication Adapters Installation Instructions, publication 520COM-IN001

User-Supplied Equipment

The adapter parameters can be configured using the drive keypad interface (see [Using the Drive Keypad Interface to Access Parameters on page 25](#)). In addition, you must supply:

<input type="checkbox"/>	Ethernet cable (see the EtherNet/IP Media Planning and Installation Manual, ODVA publication 148 available on the ODVA web site at http://odva.org/Home/ODVATECHNOLOGIES/EtherNetIP/EtherNetPLibrary/tabid/76/Default.aspx for details)
<input type="checkbox"/>	Ethernet switch (see the Ethernet Design Considerations Reference Manual, Rockwell Automation publication ENET-RM002 for details)
<input type="checkbox"/>	Optional configuration tool, such as:
–	PowerFlex 22-HIM-A3/-C2S HIM
–	DHCP/BOOTP Utilities
<input type="checkbox"/>	Controller configuration software, such as:
–	RSLinx Classic (version 2.50 or later)
–	RSLogix 5000 (version 17 or greater) or Logix Designer (version 21 or greater) when using drive-specific Add-On Profile (AOP)
–	Connected Components Workbench (version 3 or greater)
<input type="checkbox"/>	A PC connection to the EtherNet/IP network

Safety Precautions

Please read the following safety precautions carefully.



ATTENTION: Risk of injury or death exists. The PowerFlex drive may contain high voltages that can cause injury or death. Remove all power from the PowerFlex drive, and then verify power has been removed before installing or removing an adapter.

ATTENTION: Risk of injury or equipment damage exists. Only personnel familiar with drive and power products and the associated machinery should plan or implement the installation, start up, configuration, and subsequent maintenance of the drive using this Dual-port EtherNet/IP adapter. Failure to comply may result in injury and/or equipment damage.

ATTENTION: Risk of equipment damage exists. The adapter contains ESD (Electrostatic Discharge) sensitive parts that can be damaged if you do not follow ESD control procedures. Static control precautions are required when handling the adapter. If you are unfamiliar with static control procedures, see Guarding Against Electrostatic Damage, publication [8000-4.5.2](#).

ATTENTION: Risk of injury or equipment damage exists. If the adapter is transmitting control I/O to the drive, the drive may fault when you reset the adapter. Determine how your drive will respond before resetting the adapter.

ATTENTION: Risk of injury or equipment damage exists. *Device* parameters **23 [Comm Flt Action]** and **24 [Idle Flt Action]** let you determine the action of the adapter and drive if I/O communication is disrupted, the controller is idle, or explicit messaging for drive control is disrupted. By default, these parameters fault the drive. You may configure these parameters so that the drive continues to run, however, precautions should be taken to ensure that the settings of these parameters do not create a risk of injury or equipment damage. When commissioning the drive, verify that your system responds correctly to various situations (for example, a disconnected cable or a controller in idle state).

ATTENTION: Risk of injury or equipment damage exists. When a system is configured for the first time, there may be unintended or incorrect machine motion. Disconnect the motor from the machine or process during initial system testing.

ATTENTION: Risk of injury or equipment damage exists. The examples in this publication are intended solely for purposes of example. There are many variables and requirements with any application. Rockwell Automation, Inc. does not assume responsibility or liability (to include intellectual property liability) for actual use of the examples shown in this publication.

Quick Start

This section is provided to help experienced users quickly start using the adapter. If you are unsure how to complete a step, refer to the referenced chapter.

Step	Action	See...
1	Review the safety precautions for the adapter.	Throughout this manual
2	Verify that the PowerFlex drive is properly installed.	PowerFlex 525 Adjustable Frequency AC Drive User Manual, publication 520-UM001
3	Commission the adapter. Set the adapter IP address. When using the adapter node address switches, set the IP address now and proceed with step 4. When using a DHCP or BOOTP server, or adapter parameters instead to set the IP address, proceed with step 4.	Chapter 2, Installing the Adapter
4	Install the adapter. Verify that the PowerFlex drive is not powered. Then, connect the adapter to the drive using the interface connector (included with adapter).	PowerFlex 520-Series Communication Adapters Installation Instructions, publication 520COM-IN001 and Chapter 2, Installing the Adapter
5	Connect the adapter to the EtherNet/IP network. Verify that the PowerFlex drive is not powered. Then, connect the adapter to the network using an Ethernet cable.	Chapter 2, Installing the Adapter
6	Apply power to the drive. <ol style="list-style-type: none"> Replace the control module cover. The adapter receives power from the drive. Apply power to the drive. The status indicators should be green. If they flash red, there is a problem. See Troubleshooting on page 115. Configure and verify key drive parameters. 	
7	Configure the adapter for your application. Set adapter parameters for the following functions as required by your application: <ul style="list-style-type: none"> – IP address, subnet mask, and gateway address (only when not using adapter node address switches) – Data rate – I/O configuration – Master-Slave hierarchy – Fault actions 	Chapter 3, Configuring the Adapter
8	Configure the controller to communicate with the adapter. Use a controller configuration tool such as RSLogix 5000 or Logix Designer to configure the master on the EtherNet/IP network to recognize the adapter and drive.	Chapter 4, Configuring the I/O
9	Create a ladder logic program. Use a controller configuration tool such as RSLogix 5000 or Logix Designer to create a ladder logic program that enables you to: <ul style="list-style-type: none"> – Control the adapter and connected drive using I/O. – Monitor or configure the drive using Explicit messages. 	Chapter 5, Using the I/O Chapter 6, Using Explicit Messaging

Notes:

Installing the Adapter

Chapter 2 provides instructions for installing the Dual-port EtherNet/IP adapter in a PowerFlex 520-series drive.

Topic	Page
Preparing for Set-Up	15
Setting the Node Address	16
Connecting the Adapter to the Drive	18
Connecting the Adapter to the Network	20
Applying Power	22
Commissioning the Adapter	24

Preparing for Set-Up

Before installing the adapter, do the following:

- Make sure the Ethernet switch is the correct type. A “managed” switch that supports IGMP snooping is usually recommended. An “unmanaged” switch can be used instead if RSLogix 5000 software (version 18 or greater) is used and all devices on the network are configured for “unicast” I/O. For more details, see the following documents:
 - EtherNet/IP Media Planning and Installation Manual, ODVA publication 148
 - EtherNet/IP Network Infrastructure Guidelines, ODVA publication 35
 - Ethernet Design Considerations Reference Manual, publication [ENET-RM002](#)
- Understand IGMP Snooping/Ethernet Switches

The adapter is a multicast device. In most situations, an IGMP snooping (managed) switch is required. If more than one or two adapters are connected to the switch, a managed switch is required—otherwise the drive may fault on a Net I/O Timeout network loss. The adapter, RSLogix 5000 (version 18 or greater), Logix Designer (version 21 or greater), and a ControlLogix or CompactLogix controller will support unicast. Unicast setup is required when adding the drive to the I/O. When all adapters are set up as unicast devices, then an IGMP snooping (managed) switch is not needed.

Much of EtherNet/IP implicit (I/O) messaging uses IP multicast to distribute I/O control data, which is consistent with the CIP producer/consumer model. Historically, most switches have treated multicast packets the same as broadcast packets. That is, all multicast packets are re-transmitted to all ports.

IGMP snooping constrains the flooding of multicast traffic by dynamically configuring switch ports so that multicast traffic is forwarded only to ports associated with a particular IP multicast group.

Switches that support IGMP snooping (managed switches) “learn” which ports have devices that are part of a particular multicast group and only forward the multicast packets to the ports that are part of the multicast group.

Be careful as to what level of support a switch has of IGMP snooping. Some layer 2 switches that support IGMP snooping require a router (which could be a layer 3 switch) to send out IGMP polls to learn what devices are part of the multicast group. Some layer 2 switches can use IGMP snooping without a router sending polls. If your control system is a stand-alone network or is required to continue performing if the router is out of service, make sure the switch you are using supports IGMP snooping without a router being present.

- See [Specifications on page 123](#) for the number of CIP connections supported by the adapter.
- Verify that you have all required equipment. See [Required Equipment on page 11](#).



ATTENTION: Risk of equipment damage exists. The adapter contains ESD (Electrostatic Discharge) sensitive parts that can be damaged if you do not follow ESD control procedures. Static control precautions are required when handling the adapter. If you are unfamiliar with static control procedures, see *Guarding Against Electrostatic Damage*, publication [8000-4.5.2](#).

IMPORTANT

The adapter has EtherNet/IP embedded switch technology, and ENET1 and ENET2 network ports to connect to a linear or device-level ring (DLR) network in a single subnet.

You cannot use ENET1 and ENET 2 network ports as two network interface cards connected to two different subnets.

Setting the Node Address

There are four methods for configuring the adapter’s node address:

- **Node Address Switches** — Use these switches when working on a simple isolated network (for example, 192.168.1.xxx) that has other products with switches to set their IP addresses, does not need to be accessed from outside the network, and you prefer a simplified node addressing method. The three rotary switches are read when the drive powers up, and represent three decimal digits from top to bottom (see [Setting the Node Address Switches on page 18](#)). When set to a valid address (001...254), the adapter will use that value as the lower octet of its IP address (192.168.1.xxx, where xxx = rotary switch settings), along with a subnet mask of 255.255.255.0, and a gateway address of 0.0.0.0 when switches are set to 001, or a gateway address of 192.168.1.1 when switches are set from 002...254. Also, the setting for *Device* parameter **04 [Net Addr Sel]** is automatically ignored.

See [Setting the Node Address Switches on page 18](#) and its accompanying table for all possible switch settings and their related descriptions.

IMPORTANT When using the Node Address switches, set the network node address before power is applied because the adapter uses the node address it detects when it first receives power.

- **Adapter Parameters** — Use adapter parameters when you want more flexibility in setting up the IP address, or need to communicate outside the control network using a gateway. To use parameters as the source for the IP address, the Node Address switches must be set to a value other than 001...254 or 888, and *Device* parameter **04 [Net Addr Sel]** must be set to 1 “Parameters”. The IP address, subnet mask, and gateway addresses will then come from the parameters you set. See [Using Adapter Parameters on page 31](#) for more information.

IMPORTANT If parameter values are invalid or the adapter was not reset for the values to take effect, the node address is established by using DHCP.

- **BOOTP Server** — Use BOOTP when you want to configure a *temporary* IP address, subnet mask, and gateway address for the adapter using a BOOTP server. To use BOOTP as the source for the IP address, the Node Address switches must be set to a value other than 001...254 or 888, and *Device* parameter **04 [Net Addr Sel]** must be set to 2 “BOOTP”.


Note the adapter’s hardware Ethernet Address (MAC) on the adapter’s data nameplate label located on the provided control module back cover, which will be used in Step 7 when configuring the BOOTP server (see [Using a BOOTP or DHCP Server on page 28](#) for details).

- **DHCP (Dynamic Host Configuration Protocol)** — Use DHCP, the default, when you want additional flexibility and ease-of-use compared to BOOTP in configuring the IP address, subnet mask, and gateway address for the adapter using a DHCP server. To use DHCP as the source for the IP address, the Node Address switches must be set to a value other than 001...254 or 888, and *Device* parameter **04 [Net Addr Sel]** must be set to 3 “DHCP”.

Note the adapter’s hardware Ethernet Address (MAC) on the adapter’s data nameplate label located on the provided control module back cover, which will be used in Step 7 when configuring the DHCP server (see [Using a BOOTP or DHCP Server on page 28](#) for details).

IMPORTANT Regardless of the method used to set the adapter’s node address, each node on the EtherNet/IP network must have a unique IP address. To change a node address, you must set the new value and then remove and reapply power to (or reset) the drive.

Setting the Node Address Switches

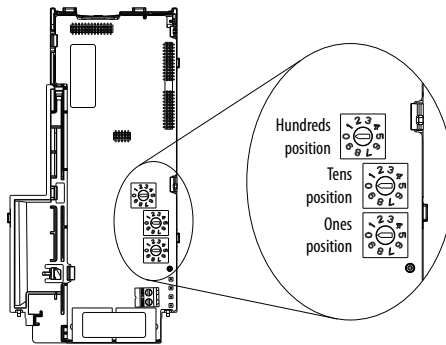

Setting	Description
001...254	The adapter will use the Node Address switch settings for the network node address (192.168.1.xxx, where xxx = rotary switch settings). The value stored in <i>Device</i> parameter 04 [Net Addr Sel] is automatically ignored.
888	Resets the adapter network node address to factory defaults. Thereafter, the drive must be powered down, the Node Address switches must be set to a correct value (001 . . .254), and then the drive must be powered up again to accept the new address.
Any other setting	Disables the Node Address switches, and requires using <i>Device</i> parameter 04 [Net Addr Sel] to select the source for the adapter's network node address: <ul style="list-style-type: none"> • 1 = Parameters of the adapter • 2 = BOOTP server • 3 = DHCP server (Default)

The Node Address switch settings can be verified by viewing Diagnostic Item number 58 (see [page 118](#) and [page 120](#)) with a PowerFlex 22-HIM-A3 or 22-HIM-C2S HIM, or Connected Components Workbench (version 3 or greater) software. Also, you can use *Device* parameter **05 [Net Addr Src]**, a read-only parameter, to verify the selected setting for *Device* parameter **04 [Net Addr Sel]**.


Connecting the Adapter to the Drive




ATTENTION: Risk of injury or death exists. The PowerFlex drive may contain high voltages that can cause injury or death. Remove all power from the PowerFlex drive, and then verify power has been removed before installing or removing an adapter.

1. Remove power from the drive.
2. Use static control precautions.
3. Separate the drive's control module from the power module.


- a. Press and hold down the catch on both sides of the frame cover, then pullout and swing upwards to remove (Frames B...E only).

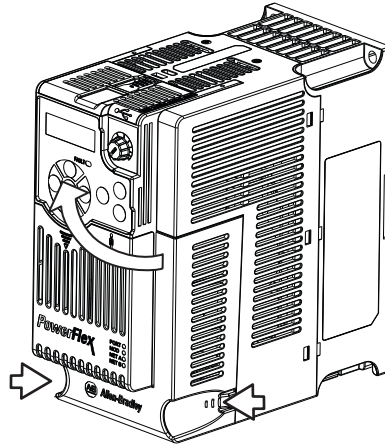


- b. Press down and slide out the top cover of the control module to unlock it from the power module.

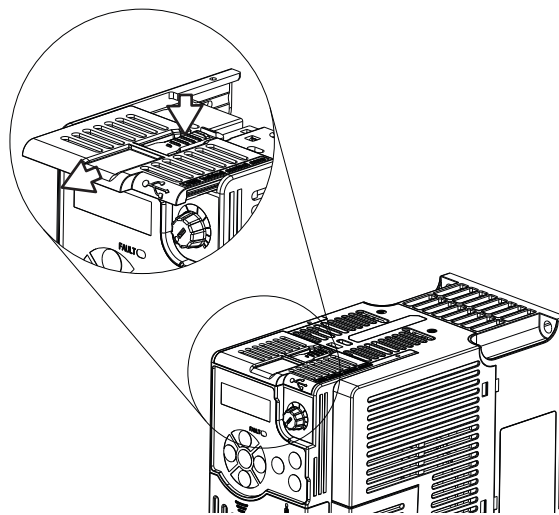


- c. Hold the sides and top of the control module firmly, then pull out to separate it from the power module.

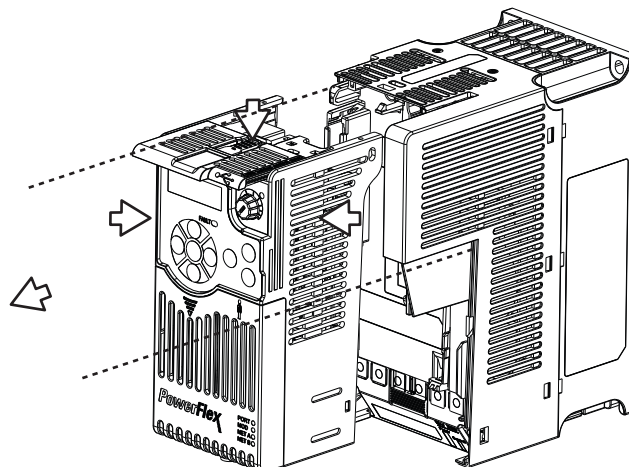

4. Insert the interface connector for the adapter into the header located at the back of the control module.

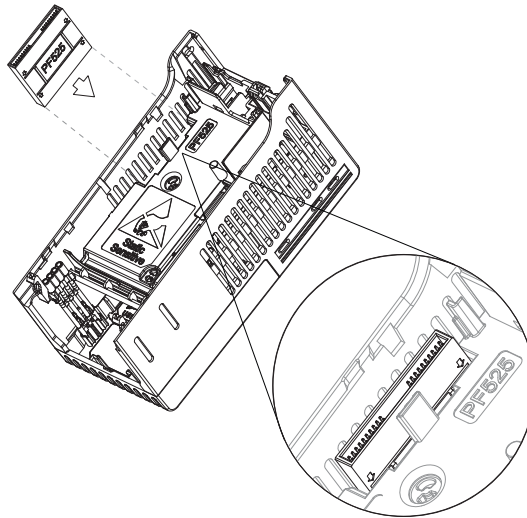

5. Align the Communication card-Drive header on the adapter with the interface connector. Then, press down firmly around the adapter. The adapter snaps into the back of the control module.

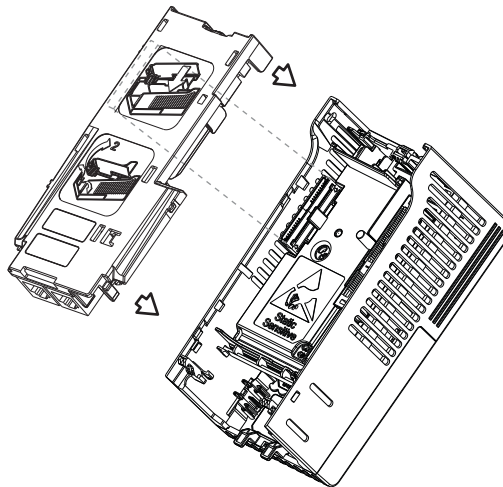

IMPORTANT The CS1/CS2 terminals on the adapter provide a clean ground for the communication bus cable shields. You should connect the CS1 or CS2 terminal to a clean ground or PE ground on the drive.

6. Attach the control module to the power module.

Connecting the Adapter to the Network



ATTENTION: Risk of injury or death exists. The PowerFlex drive may contain high voltages that can cause injury or death. Remove power from the drive, and then verify power has been discharged before connecting the adapter to the network.


1. Remove power from the drive.
2. Use static control precautions.
3. Connect one end of an Ethernet cable to the network.

Examples of different EtherNet/IP network topologies are shown in [Connecting the Ethernet Cable in a Star Topology Network on page 21](#), [Connecting the Ethernet Cable in a Linear Topology Network on page 21](#), and [Connecting the Ethernet Cable in a DLR Topology Network on page 22](#). For information about linear and device-level ring (DLR) topologies, see EtherNet/IP Embedded Switch Technology, publication ENET-AP005.

IMPORTANT The adapter has EtherNet/IP embedded switch technology, and ENET1 and ENET2 network ports to connect to a linear or device-level ring (DLR) network in a single subnet.


You cannot use ENET1 and ENET 2 network ports as two network interface cards connected to two different subnets.

Connecting the Ethernet Cable in a Star Topology Network

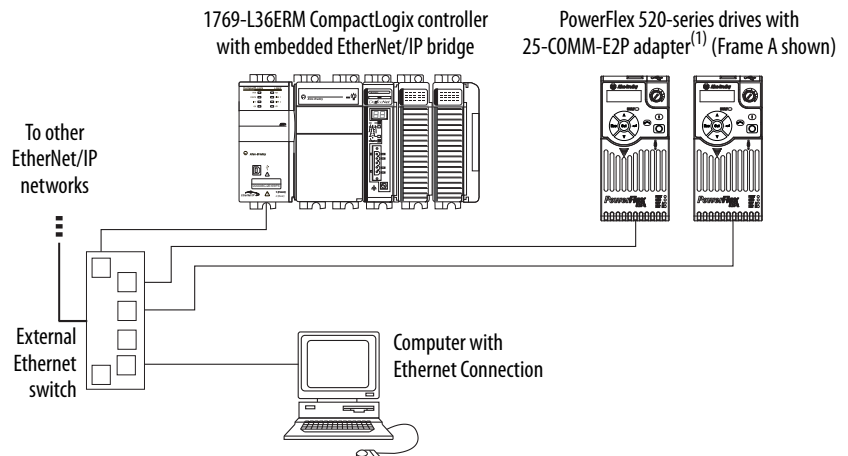


(1) The Ethernet cable may be connected to the adapter's ENET1 or ENET 2 network port.

Connecting the Ethernet Cable in a Linear Topology Network

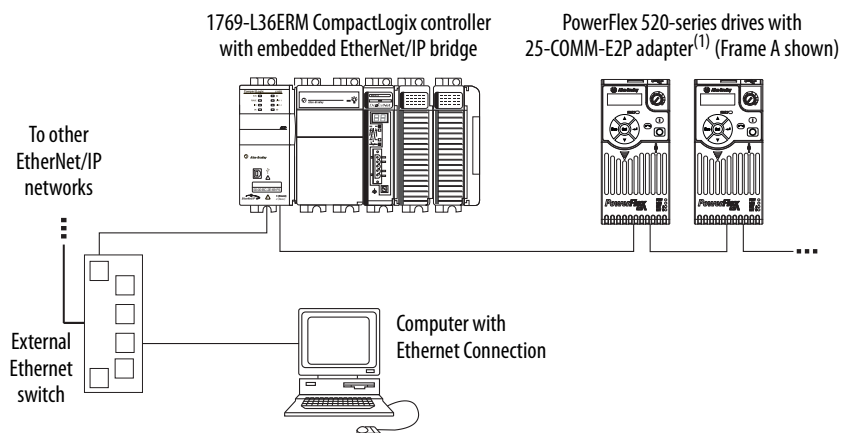

(1) The adapter's ENET1 and ENET2 network ports are used.

Connecting the Ethernet Cable in a DLR Topology Network

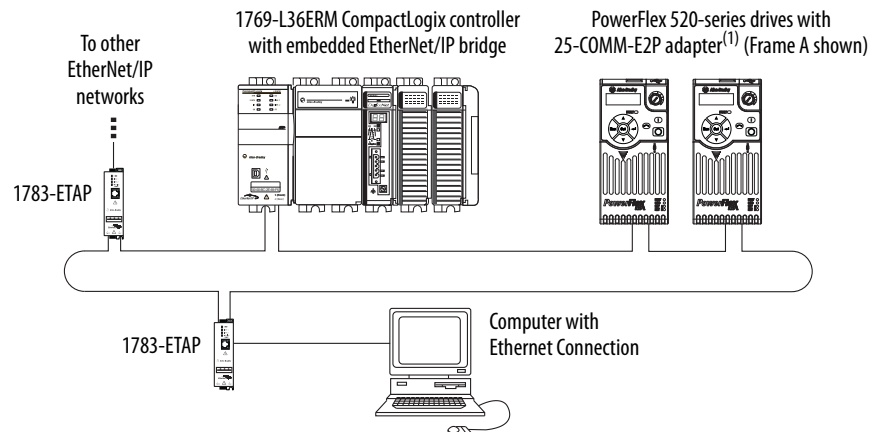

(1) The adapter's ENET1 and ENET2 network ports are used.

4. Depending on the network topology, do **one** of the following:

- Star Network Topology—Route the other end of the Ethernet cable from the network through the bottom of the drive, and insert its cable plug into the option module's ENET1 or ENET2 network port.
- Linear or DLR Network Topology—Route the other end of the Ethernet cable from the network through the bottom of the first drive, and insert its cable plug into the option module ENET1 network port.

To connect to the second drive, attach another Ethernet cable between the first drive's option module ENET2 network port and the second drive's option module ENET1 network port.

To connect additional drives, repeat these daisy-chain connections in the same way.

Applying Power




ATTENTION: Risk of equipment damage, injury, or death exists. Unpredictable operation may occur if you fail to verify that parameter settings are compatible with your application. Verify that settings are compatible with your application before applying power to the drive.

Apply power to the drive. The adapter receives its power from the drive.

Startup Status Indication

After power has been applied, the status indicators can be viewed on the front of the drive. When you apply power to the adapter for the first time, the status indicators should be green after an initialization. If the status indicators go red, there is a problem. See [Troubleshooting on page 115](#).

Drive and Adapter Status Indicators

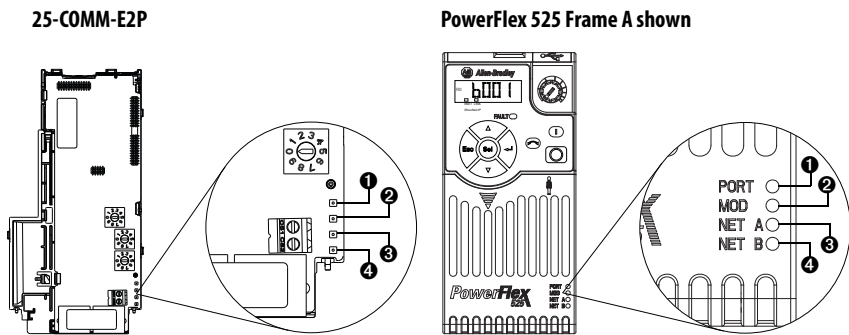

Item	Status Indicator	Status ⁽¹⁾	Description
❶	PORT	Flashing green	Normal operation. The adapter is establishing an I/O connection to the drive. This status indicator will turn steady green or red.
		Steady green	Normal operation. The adapter is properly connected and is communicating with the drive.
❷	MOD	Flashing green	Normal operation. The adapter is operating but is not transferring I/O data to a controller.
		Steady green	Normal operation. The adapter is operating and transferring I/O data to a controller.
❸	NET A	Flashing green	Normal operation. The adapter is properly connected but is not communicating with any devices on the network.
		Steady green	Normal operation. The adapter is properly connected and communicating on the network to a controller.
❹	NET B	Off	Normal operation. The adapter is properly connected, but is idle.
		Flashing green	Normal operation. The adapter is properly connected and transmitting on the network.

(1) If all status indicators are off, the adapter is not receiving power. If any other conditions occur, see [Troubleshooting on page 85](#).

For more details on status indicator operation see [Understanding the Status Indicators on page 115](#).

Configuring/Verifying Key Drive Parameters

The PowerFlex 525 drive can be separately configured for the control and Reference functions in various combinations. For example, you could set the drive to have its control come from a peripheral or terminal block with the Reference coming from the network. Or you could set the drive to have its control come from the network with the Reference coming from another peripheral or terminal block. Or you could set the drive to have both its control and Reference come from the network.

Configuring the *Host* parameters can be done using the drive's keypad, a HIM, and software such as RSLogix 5000 or Logix Designer, or Connected Components Workbench. In the following example, the drive will receive the Logic Command and Reference from the network.

1. Set the value of *Host* parameter **P046 [Start Source 1]** to 4 "Network Opt".

2. Set the value of *Host* parameter **P047 [Speed Reference 1]** to 4 “Network Opt”.

TIP The PowerFlex 525 drive supports up to three control functions and three Reference functions.

For more information on how to set different combinations of the control and Reference functions, see the PowerFlex 525 drive user manual, publication [520-UM001](#).

Commissioning the Adapter

To commission the adapter, you must set a unique network node address. See the [Glossary on page 161](#) for details about IP addresses. When using the Node Address switches, see [Setting the Node Address on page 15](#) for details. When not using these switches, a BOOTP or DHCP server, or adapter parameters can be used to set the node address after connecting the adapter to the network and applying power to the drive.

By default, the adapter is configured so that you must set the node address using a DHCP server. For details, see [Using a BOOTP or DHCP Server on page 28](#). To set the node address using adapter parameters, see [Using Adapter Parameters on page 31](#).

IMPORTANT New settings for some adapter parameters (for example, *Device* parameters **06 [IP Addr Cfg 1]** through **09 [IP Addr Cfg 4]**) are recognized only when power is applied to the adapter or it is reset. After you change parameter settings, cycle drive power or reset the adapter.

Configuring the Adapter

This chapter provides instructions and information for setting the parameters to configure the Dual-port EtherNet/IP adapter.

Topic	Page
Configuration Tools	25
Using the Drive Keypad Interface to Access Parameters	25
Using the PowerFlex 4-Class HIM to Access Parameters	27
Using a BOOTP or DHCP Server	28
Using Adapter Parameters	31
Setting the Data Rate	32
Using Master-Slave Hierarchy	33
Setting a Fault Action	34
Resetting the Adapter	36
Viewing the Adapter Status Using Parameters	37

For a list of parameters, see [Adapter Parameters on page 125](#). For definitions of terms in this chapter, see the [Glossary on page 161](#).

Configuration Tools













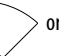




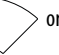


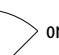




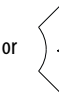



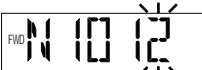
The parameters can be configured using the drive keypad interface (see [page 25](#)) or a PowerFlex 4-class HIM (Human Interface Module, see [page 27](#)).

Software such as RSLogix 5000 (version 17 or greater), Logix Designer (version 21 or greater), and Connected Components Workbench (version 3 or greater) can also be used to access the parameters.

Using the Drive Keypad Interface to Access Parameters

The following is an example of basic integral keypad and display functions. This example provides basic navigation instructions and illustrates how to program a parameter.

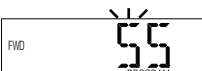IMPORTANT The Dual-port EtherNet/IP adapter *Device* parameters can be accessed on the drive keypad via the "N" (Network) group. Note that the parameters in the "N" group will appear offset from the *Device* parameter numbers referenced in this manual by 1000 (decimal) on the LCD display.

Step	Key(s)	Example Display
1. When power is applied, the last user-selected Basic Display Group parameter number is briefly displayed with flashing characters. The display then defaults to that parameter's current value (Example shows the value of b001 [Output Freq] with the drive stopped).		
2. Press Esc to display the Basic Display Group parameter number shown on power-up. The parameter number will flash.		
3. Press Esc to enter the parameter group list. The parameter group letter will flash.		
4. Press the Up Arrow or Down Arrow to scroll through the group list (b, P, t, C, L, d, A, f, N, M, and Gx).	 or 	
5. Press Enter or Sel to enter a group. The right digit of the last viewed parameter in that group will flash.	 or 	
6. Press the Up Arrow or Down Arrow to scroll through the parameter list.	 or 	
7. Press Enter to view the value of the parameter. Or Press Esc to return to the parameter list.		
8. Press Enter or Sel to enter Program Mode and edit the value. The right digit will flash and the word Program on the LCD display will light up.	 or 	
9. Press the Up Arrow or Down Arrow to change the parameter value.	 or 	
10. If desired, press Sel to move from digit to digit or bit to bit. The digit or bit that you can change will flash.		
11. Press Esc to cancel a change and exit Program Mode. Or Press Enter to save a change and exit Program Mode. The digit will stop flashing and the word Program on the LCD display will turn off.	 or 	 <p style="text-align: center;">or</p> 
12. Press Esc to return to the parameter list. Continue to press Esc to back out of the programming menu. If pressing Esc does not change the display, then b001 [Output Freq] is displayed. Press Enter or Sel to enter the group list again.		

Using the PowerFlex 4-Class HIM to Access Parameters

The PowerFlex 4-class HIM can be used to access parameters in the drive (see basic steps shown below). It is recommended that you read through the steps for your HIM before performing the sequence. For additional HIM information, refer to the HIM Quick Reference card, publication [22HIM-QR001](#).

Step	Key(s)	Example Display
1. Power up the drive. Then connect the HIM to the DSI port of the drive. The Parameters tab for the drive will be displayed.		
2. Press Sel until the DSEL tab is selected.		
3. Select DSI Device in the DSEL tab if it is not already selected using the Up Arrow or Down Arrow. Press Enter to select DSI Device.	and 	
4. Press the Up Arrow or Down Arrow to scroll to 25-COMM-E2P. Press Enter to reload the HIM to browse only the Communication Adapter (25-COMM-E2P) parameters.	and 	

To display the *Host* parameters, repeat steps 1 through 3 and select “PowerFlex 525” at step 3.

Setting the Adapter Node Address

When the Node Address switches (see [Setting the Node Address Switches on page 18](#)) are set to a value other than 001...254 or 888, *Device* parameter **04** [**Net Addr Sel**] determines the source for the adapter node address. By default, the Node Address switches are set to 999 and *Device* parameter **04** [**Net Addr Sel**] is set to 3 “DHCP”. This combination selects a DHCP server as the source for the node address. To use a BOOTP or DHCP server to set the node address, see [Using a BOOTP or DHCP Server on page 28](#). To use adapter parameters, see [Using Adapter Parameters on page 31](#).

Using a BOOTP or DHCP Server

By default, the adapter is configured to accept an IP address, subnet mask, and gateway address from a DHCP server. You can select from a variety of DHCP/BOOTP utilities.

The instructions below use the DHCP/BOOTP Utility (version 2.3 or greater), a free stand-alone program from Rockwell Automation that incorporates the functionality of standard DHCP/BOOTP utilities with a graphical interface. It is available from <http://www.ab.com/networks/ethernet/bootp.html>. See the Readme file and online Help for directions and more information.


TIP If desired, you can disable BOOTP and configure the IP address, subnet mask, and gateway address using parameters. For details, see [Using Adapter Parameters on page 31](#).

Configuring the Adapter Using a DHCP/BOOTP Utility


- Depending on the type of server (BOOTP or DHCP) being used, set *Device* parameter **04 [Net Addr Sel]** to either 2 “BOOTP” or 3 “DHCP” respectively.

Options	
1	“Parameters”
2	“BOOTP”
3	“DHCP” (Default)


- Verify and note the adapter’s hardware Ethernet Address (MAC), which will be used in Step 7. There are two ways to do this:
 - Use the PowerFlex 525 drive’s keypad or a HIM to access the diagnostic items of the drive. Scroll to items **34 [HW Addr 1]** through **39 [HW Addr 6]** to view the adapter’s hardware Ethernet Address (MAC). Finally, convert these decimal values to a hex value.
 - Locate the adapter’s hardware Ethernet Address (MAC) label on the ENET1/ENET2 ports (provided with the adapter).

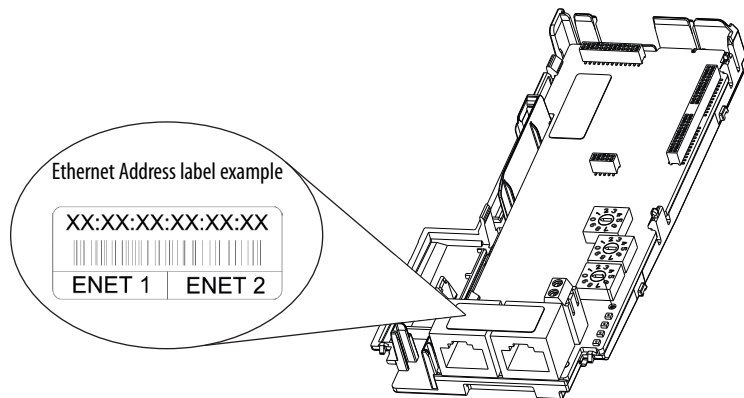

- On a computer connected to the EtherNet/IP network, start the BOOTP/DHCP software. The BOOTP/DHCP Server window appears.

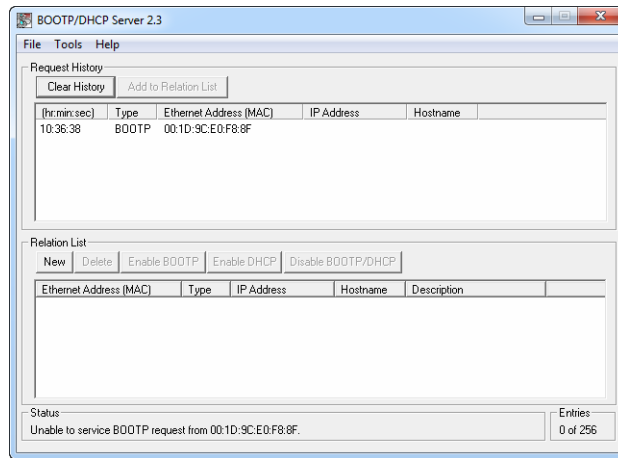

- To properly configure devices on your EtherNet/IP network, you must configure settings in the BOOTP/DHCP software to match the network. Select **Tools > Network Settings** to display the Network Settings window.

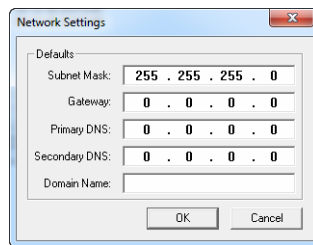


- Edit the following:

Box	Type
Subnet Mask ⁽¹⁾	The subnet mask for the adapter's network.
Gateway ⁽¹⁾	The IP address of the gateway device on the adapter's network.
Primary DNS	The address of the primary DNS server to be used on the local end of the link for negotiating with remote devices.
Secondary DNS	Optional – the address of the secondary DNS server to be used on the local end of the link for negotiating with remote devices when the primary DNS server is unavailable.
Domain Name	The text name corresponding to the numeric IP address that was assigned to the server that controls the network.

(1) For definitions of these terms, see the [Glossary on page 161](#).

- Click **OK** to apply the settings. Devices on the network issuing BOOTP/DHCP requests appear in the BOOTP/DHCP Request History list.

- In the BOOTP/DHCP Request History list, either double-click the adapter's Ethernet Address (MAC) noted in Step 2, or click **New** in the Relation List. The New Entry window appears. In the first case, the Ethernet Address (MAC) is automatically entered. In the latter case, you must manually enter it.

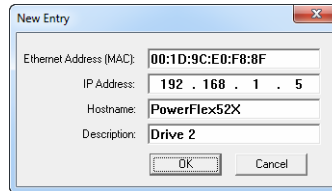


- Edit the following:

Box	Type
IP Address ⁽¹⁾	A unique IP address for the adapter
Host Name	Optional
Description	Optional

(1) For definitions of these terms, see the [Glossary on page 161](#).

- Click **OK** to apply the settings. The adapter appears in the Relation List with the new settings.

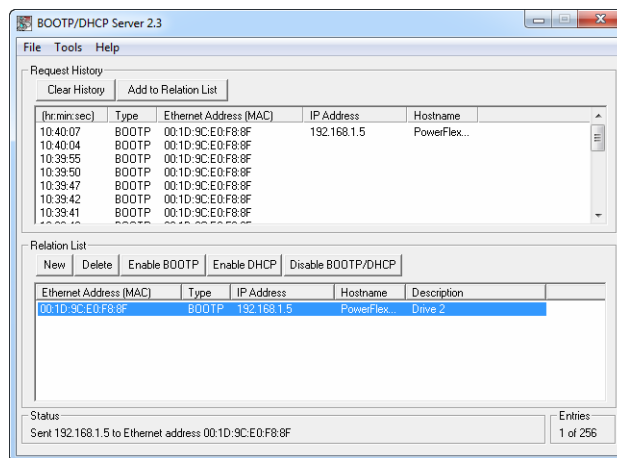

- To assign this configuration to the adapter, select the device in the Relation List and click **Disable BOOTP/DHCP**. When power is cycled on the drive, the adapter will use the configuration you assigned it and not issue new BOOTP/DHCP requests.

TIP To enable BOOTP for an embedded adapter that has had BOOTP disabled, first select the adapter in the Relation List. Then, depending on the type of server, click **Enable BOOTP** or **Enable DHCP** and, lastly, reset the adapter or power cycle the drive.

- To save the Relation List, select **File > Save**.

Using Adapter Parameters

By default, the adapter is configured to accept an IP address, subnet mask, and gateway address from a DHCP server. If you want to set these attributes using parameters instead, you must first change the source for the node address to “Parameters” and then set these network address parameters in the adapter.

Changing the Source for the Node Address

1. Verify that the Node Address switches (see [Setting the Node Address Switches on page 18](#)) are set to any value other than 001...254 or 888. The default setting is 999.
2. Set the value of *Device* parameter **04 [Net Addr Sel]** to 1 “Parameters”.


Options	1	“Parameters”
	2	“BOOTP”
	3	“DHCP” (Default)

3. Reset the adapter; see [Resetting the Adapter on page 36](#).

IMPORTANT *Device* parameter 04 [Net Addr Sel] must be set to 1 “Parameters” to configure the IP address, subnet mask, and gateway address using adapter parameters.

Setting an IP Address Using Parameters

1. Verify that *Device* parameter **04 [Net Addr Sel]** is set to 1 “Parameters”.
2. Set the value of *Device* parameters **06 [IP Addr Cfg 1]** through **09 [IP Addr Cfg 4]** to a unique IP address.

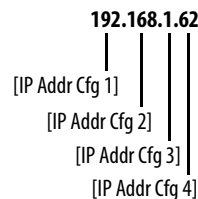


3. Reset the adapter; see [Resetting the Adapter on page 36](#).

The NET A status indicator will be steady green or flashing green if the IP address is correctly configured.

Setting a Subnet Mask Using Parameters

1. Verify that *Device* parameter **04 [Net Addr Sel]** is set to 1 “Parameters”.


- Set the value of *Device* parameters **10 [Subnet Cfg 1]** through **13 [Subnet Cfg 4]** to the desired value for the subnet mask.

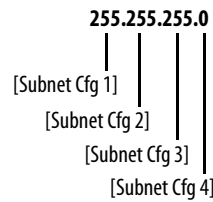

- Reset the adapter; see [Resetting the Adapter on page 36](#).

Setting a Gateway Address Using Parameters

- Verify that *Device* parameter **04 [Net Addr Sel]** is set to 1 “Parameters”.
- Set the value of *Device* parameters **14 [Gateway Cfg 1]** through **17 [Gateway Cfg 4]** to the desired value for the gateway address.

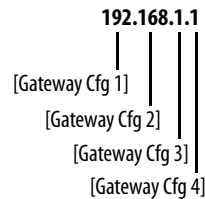

- Reset the adapter by power cycling the drive.

Setting the Data Rate

By default, the adapter automatically detects the data (baud) rate and duplex setting used on the network. If you need to set a specific data rate and duplex setting, the value of *Device* parameters **18 [Net Rate Cfg 1]** determines the Ethernet data rate and duplex setting that will be used to communicate on the adapter’s ENET1 network port. For definitions of data rate and duplex, see the [Glossary on page 161](#).

- Set the value of *Device* parameter **18 [Net Rate Cfg 1]** to the data rate at which your network is operating.

Options	0	“Autodetect” (Default)
	1	“10Mbps Full”
	2	“10Mbps Half”
	3	“100Mbps Full”
	4	“100Mbps Half”

TIP Auto detection of data rate and duplex works properly only if the device (usually a switch) on the other end of the cable is also set to automatically detect the data rate/duplex. If one device has the data rate/duplex hard-coded, the other device must be hard-coded to the same settings.

If the adapter's ENET2 network port will be used to connect another drive in a linear or DLR network topology, set the value of *Device* parameter **20 [Net Rate Cfg 2]** to the appropriate data rate.

2. Reset the adapter; see [Resetting the Adapter on page 36](#).

Using Master-Slave Hierarchy

A hierarchy determines the type of device with which the adapter exchanges data. In a Master-Slave hierarchy, the adapter exchanges data with a master, such as a scanner or bridge.

Configuring a Master-Slave Hierarchy

The controller I/O image can have anywhere from zero to eight (four In and four Out) additional 16-bit parameters called Datalinks. They are configured using *Host* parameters **C161 [Opt Data In 1]** through **C164 [Opt Data In 4]**, and **C165 [Opt Data Out 1]** through **C168 [Opt Data Out 4]**. The number of Datalinks actively used is controlled by the connection size in the controller and the in/out parameters. See the respective controller example sections in [Configuring the I/O on page 39](#) for more information on setting the connection size.

When using a ControlLogix or CompactLogix controller and the Generic Profile, or a MicroLogix 1100/1400 controller, configure the Datalink parameters now as described in this section.

TIP When using a ControlLogix or CompactLogix controller and a drive Add-On Profile for RSLogix 5000 (version 17 or greater) or Logix Designer (version 21 or greater) software, there is no need to configure Datalink parameters at this time. They will be assigned when configuring the drive Add-On Profile (see [Adding the Drive/Adapter to the I/O Configuration on page 42](#)).

Enabling Datalinks To Write Data

IMPORTANT Always use the Datalink parameters in consecutive numerical order, starting with the first parameter. For example, use *Host* parameters C165, C166, and C167 to configure three Datalinks to write data. Otherwise, the network I/O connection will be larger than necessary, which needlessly increases controller response time and memory usage.

Host parameters **C165 [Opt Data Out 1]** through **C168 [Opt Data Out 4]** control which parameters in the drive send values to the network. To configure these parameters, set them to the drive parameter number you want to correlate them to.

The following steps are required to enable Datalinks to write data:

1. Set the values of only the required number of contiguous drive-to-network Datalinks needed to write data to the network and that are to be included in the network I/O connection.
2. Reset the adapter; see [Resetting the Adapter on page 36](#).

After the above steps are complete, the adapter is ready to send output data and transfer status data to the master (controller). Next, configure the controller to recognize and transmit I/O to the adapter. See [Configuring the I/O on page 39](#).

Enabling Datalinks To Read Data

IMPORTANT Always use the Datalink parameters in consecutive numerical order, starting with the first parameter. For example, use *Host* parameters C161, C162, and C163 to configure three Datalinks to read data. Otherwise, the network I/O connection will be larger than necessary, which needlessly increases controller response time and memory usage.

Host parameters **C161 [Opt Data In 1]** through **C164 [Opt Data In 4]** configure which parameters in the drive receive values from the network. To configure these parameters, set them to the parameter number you wish to correlate them to.

The following steps are required to enable Datalinks to read data:

1. Set the values of only the required number of contiguous network-to-drive Datalinks needed to read data from the network and that are to be included in the network I/O connection.
2. Reset the adapter; see [Resetting the Adapter on page 36](#).

After the above steps are complete, the adapter is ready to receive input data from the master (controller). Next, configure the controller to recognize and transmit I/O to the adapter. See [Configuring the I/O on page 39](#).

Setting a Fault Action

By default, when communications are disrupted (the network cable is disconnected) and/or the controller is idle (in program mode or faulted), the drive responds by faulting if it is using I/O from the network. You can configure a different response to these events:

- Disrupted I/O communication by using *Device* parameter **23 [Comm Flt Action]**.

- An idle controller by using *Device* parameter **24 [Idle Flt Action]**.



ATTENTION: Risk of injury or equipment damage exists. *Device* parameters 23 [Comm Flt Action] and 24 [Idle Flt Action] respectively let you determine the action of the adapter and drive if communications are disrupted or the controller is idle. By default, these parameters fault the drive. You may configure these parameters so that the drive continues to run, however, precautions should be taken to ensure that the settings of these parameters do not create a risk of injury or equipment damage. When commissioning the drive, verify that your system responds correctly to various situations (a disconnected network cable or controller in idle state).

Changing the Fault Action

Set the values of *Device* parameters **23 [Comm Flt Action]** and **24 [Idle Flt Action]** to the desired responses:

Value	Action	Description
0	Fault	The drive is faulted and stopped. Datalink data is no longer sent to the drive. (Default)
1	Stop	The drive is stopped as per <i>Host</i> parameter P045 [Stop Mode] setting. Datalink data sent to the drive remains unchanged.
2	Zero Data	The drive is sent "0" values for all Reference and Datalink data. This does not command a stop.
3	Hold Last	The drive continues in its present state.
4	Send Flt Cfg	The drive is sent the Reference and Datalink data that you set in the fault configuration parameters (<i>Device</i> parameters 25 [Flt Cfg Logic], 26 [Flt Cfg Ref], and 27 [Flt Cfg DL 1] through 30 [Flt Cfg DL 4]).

Changes to these parameters take effect immediately. A reset is not required. If communication is disrupted and then re-established, the drive will automatically receive commands over the network again.

If Multi-Drive mode is used, the same fault action is used by the adapter for all of the drives it controls (Drive 0...4).

Setting the Fault Configuration Parameters

When setting *Device* parameters **23 [Comm Flt Action]** and **24 [Idle Flt Action]** to 4 "Send Flt Cfg," the values in the following parameters are sent to the drive after a communications fault and/or idle fault for drive control fault occurs. You must set these parameters to values required by your application.

Parameter	Description
25 [Flt Cfg Logic]	A 16-bit integer value sent to the drive for Logic Command.
26 [Flt Cfg Ref]	A 16-bit integer value sent to the drive for Reference.
27 [Flt Cfg DL 1] through 30 [Flt Cfg DL 4]	A 16-bit integer value sent to the drive for a Datalink.

Changes to these parameters take effect immediately. A reset is not required.

Resetting the Adapter

Changes to switch settings or some adapter parameters require that you reset the adapter before the new settings take effect. You can reset the adapter by cycling power to the drive or by using *Device* parameter 22 [**Reset Module**].



ATTENTION: Risk of injury or equipment damage exists. If the adapter is transmitting control I/O to the drive, the drive may fault when you reset the adapter. Determine how your drive will respond before resetting the adapter.

Set *Device* parameter 22 [**Reset Module**] to 1 “Reset Module”.

Setting for *Device* Parameter 22 [Reset Module]

Value	Description
0	Ready (Default)
1	Reset Module
2	Set Defaults

When you enter 1 “Reset Module”, the adapter will be immediately reset. An alternate method to reset the adapter is by power cycling the drive.

Restoring Adapter Parameters to Factory Defaults

Set *Device* parameter 22 [**Reset Module**] to 2 “Set Defaults”.

Setting for *Device* Parameter 22 [Reset Module]

Value	Description
0	Ready (Default)
1	Reset Module
2	Set Defaults

When you enter 2 “Set Defaults”, the adapter will set **all** of its parameters to their factory default values.

IMPORTANT When performing a Set Defaults action, the drive may detect a conflict and then not allow this function to occur. If this happens, first resolve the conflict and then repeat a Set Defaults action. Common reasons for a conflict include the drive running or a controller in Run mode.

After performing a Set Defaults action, you must enter 1 “Reset Module” or power cycle the drive so that the new values take effect. Thereafter, this parameter will be restored to a value of 0 “Ready”.

Viewing the Adapter Status Using Parameters

The following *Device* parameters provide information about the status of the adapter. You can view these parameters at any time using the PowerFlex 22-HIM-A3 or 22-HIM-C2S HIM or Connected Components Workbench.

Dual-Port EtherNet/IP Adapter Status Parameters

Name	Description
02 [DLs From Net Act]	Displays the number of controller-to-drive Datalinks that are included in the network I/O connection (controller outputs).
03 [DLs To Net Act]	Displays the number of drive-to-controller Datalinks that are included in the network I/O connection (controller inputs).
05 [Net Addr Src]	Displays the source from which the adapter's node address is taken. The source is determined by the adapter Node Address switch settings (see Setting the Node Address Switches on page 18), and the value of <i>Device</i> parameter 04 [Net Addr Sel] which can be any of the following: <ul style="list-style-type: none"> • 1 "Parameters"—uses address from <i>Device</i> parameters 06...09 [IP Addr Cfg x] • 2 "BOOTP" • 3 "DHCP"—the default
19 [Net Rate Act 1]	The data rate used by the adapter's ENET1 network port.
21 [Net Rate Act 2]	The data rate used by the adapter's ENET2 network port.

Updating the Adapter Firmware

The adapter firmware can be updated over the network or through DSI using a tool such as the 1203-USB.

When updating firmware over the network or DSI, you can use the Allen-Bradley ControlFLASH software tool.

To obtain a firmware update for this adapter, go to <http://www.ab.com/support/abdrives/webupdate>. This site contains all firmware update files and associated Release Notes that describe the following items:

- Firmware update enhancements and anomalies.
- How to determine the existing firmware revision.
- How to update the firmware using ControlFLASH.

The adapter firmware can also be updated using ADC (Automatic Device Configuration). See [Using Automatic Device Configuration \(ADC\) with RSLogix 5000 or Logix Designer on page 50](#) for more information.

Notes:

Configuring the I/O


This chapter provides instructions on how to configure a CompactLogix controller to communicate with the Dual-port EtherNet/IP adapter and connected PowerFlex 520-series drive.

Topic	Page
Using RSLinx Classic	39
CompactLogix Example	40
Limitations in Using MicroLogix 1100/1400	62

Using RSLinx Classic

RSLinx Classic, in all its variations (Lite, Gateway, OEM, and so on), is used to provide a communication link between the computer, network, and controller. RSLinx Classic requires its network-specific driver to be configured before communications are established with network devices. To configure the RSLinx driver:

1. Start RSLinx and select **Communications > Configure Drivers** to display the Configure Drivers window.
2. From the Available Driver Types pull-down box, choose “EtherNet/IP Driver” and then click **Add New...** to display the Add New RSLinx Driver window.
3. Use the default name or type a name and click **OK**. The “Configure driver:” window appears.
4. Depending on your application, select either the browse local or remote subnet option, and click **OK**. The Configure Drivers window reappears with the new driver in the Configured Drivers list.

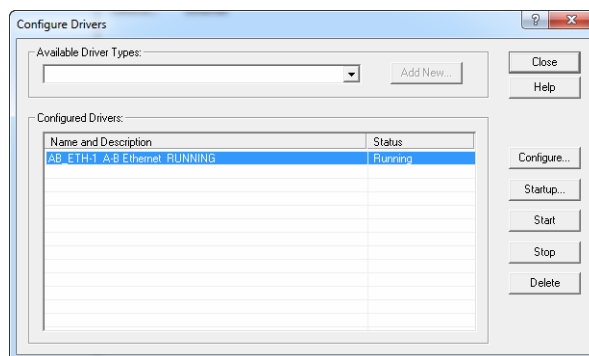


5. Click **Close** to close the Configure Drivers window. Keep RSLinx running.

6. Verify that your computer recognizes the drive. Select **Communications > RSWho** and, in the menu tree, click the “+” symbol next to the Ethernet driver.
7. Note that two other RSLinx drivers (Ethernet devices or Remote Devices through Linx Gateway) may be used. Use one of these drivers if the “EtherNet/IP Driver” cannot see your drive.

CompactLogix Example


After the adapter is configured, the drive and adapter will be a single node on the network. This section provides the steps needed to configure a simple EtherNet/IP network. In our example, we will configure a 1769-L36ERM CompactLogix controller with embedded EtherNet/IP capability to communicate with a drive using Logic Command/Status, Reference/Feedback, and eight Datalinks (four to read and four to write) over the network.

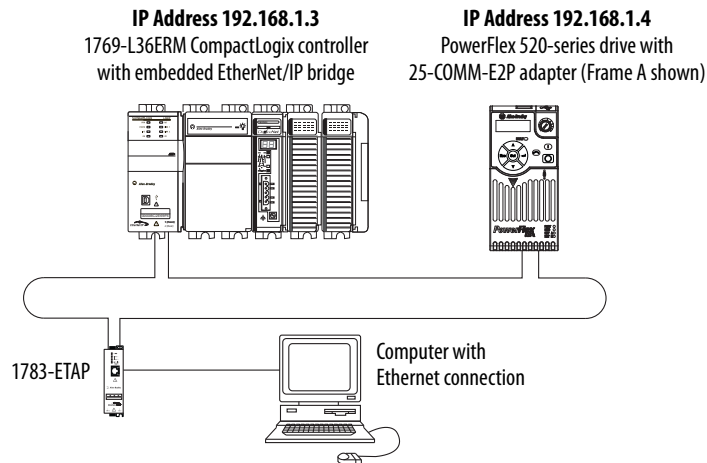

Adding the Controller to the I/O Configuration

To establish communications between the controller and adapter over the network, you must first add the CompactLogix controller and its embedded EtherNet/IP bridge to the I/O configuration.


1. Start RSLogix 5000 or Logix Designer. The application window appears. Select **File** > **New** to display the New Controller window.

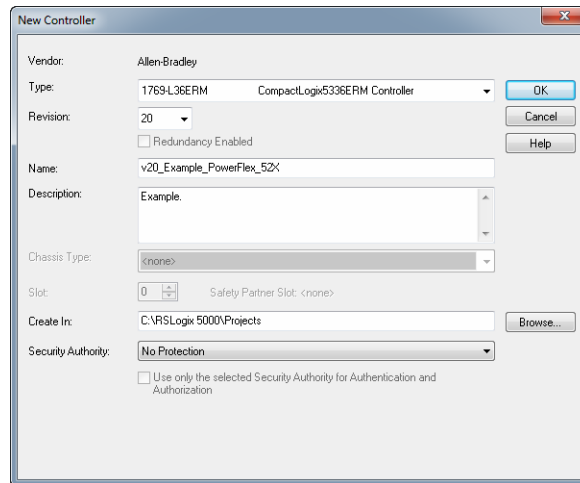


Select the appropriate choices for the fields in the window to match your application. Then click **OK**. The application window reappears with the treewindow in the left pane.

Note: If you are using a controller without an embedded EtherNet/IP bridge, you will also need to add the bridge to the I/O configuration. See the user manual for your controller for details.

2. Configure the IP address/Network Settings on your controller or bridge. In this example, the Network Settings are set for a private network.

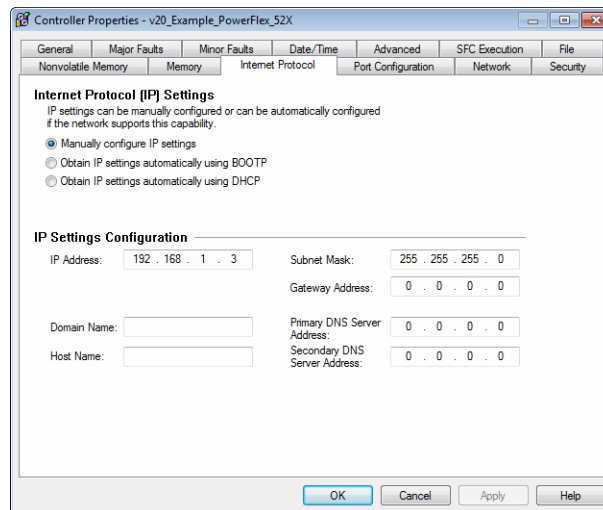

3. Click **OK**. The controller is now configured for the EtherNet/IP network. It appears in the I/O Configuration folder. In our example, a 1769-L36ERM controller appears under the I/O Configuration folder with its assigned name.

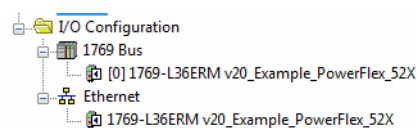

There are two ways to add the adapter into the I/O configuration:

- Drive Add-On Profiles (for RSLogix 5000 version 17 or greater, Logix Designer version 21 or greater)
- Generic Profile (for RSLogix 5000 or Logix Designer, all versions)

These are described in the following separate sections. If your version of RSLogix 5000 or Logix Designer software supports drive Add-On Profiles, we recommend using this method.


Using Drive AOP (Add-On Profiles) with RSLogix 5000 or Logix Designer


When using the drive Add-On Profiles (with RSLogix 5000 version 17 or greater, or Logix Designer version 21 or greater) compared to the Generic Profile (all versions), the drive Add-On Profiles provide these advantages:

- Profiles for specific drives that provide descriptive controller tags for basic control I/O words (Logic Command/Status and Reference/Feedback) and Datalinks. Additionally, Datalinks automatically take the name of the drive parameter to which they are assigned. These profiles virtually eliminate I/O mismatch errors and substantially reduce drive configuration time.
- New Drive tab eliminates the need for a separate drive software configuration tool.
- Drive configuration settings are saved as part of the RSLogix 5000 or Logix Designer project file (.ACD) and also downloaded to the controller.
- Drive Add-On Profiles can be updated anytime. When a new drive is used or to benefit from new updates for Add-On Profiles, you will need the newest Add-On Profile update. Go to www.ab.com/support/abdrives/webupdate to download the latest RSLogix 5000 or Logix Designer drive Add-On Profile.

Adding the Drive/Adapter to the I/O Configuration


To transmit data between the controller and the drive, you must add the drive as a child device to the parent controller. In this example, RSLogix 5000 software version 20 is used with drive Add-On Profile version 1.02.

1. In the treeview, right-click on the  Ethernet icon and select **New Module...** to display the Select Module window. Expand the Drives group to display all of the available drives with their communication adapters.

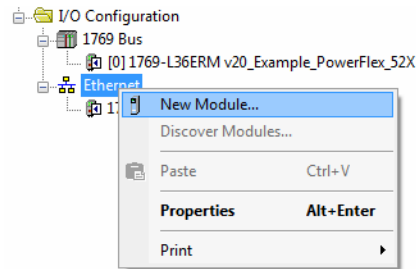


TIP If the PowerFlex drive is not shown, go to www.ab.com/support/abdrives/webupdate and download the latest drive Add-On Profile.

2. In the Select Module Type window, select the drive and its connected adapter from the list. For this example, we selected “PowerFlex 525-E2P.” Then click **Create**. The drive’s New Module window appears.

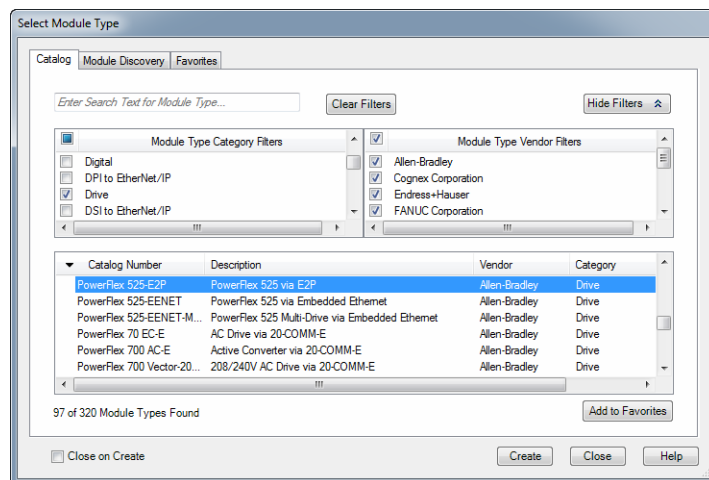


- On the General tab, edit the following data about the drive:

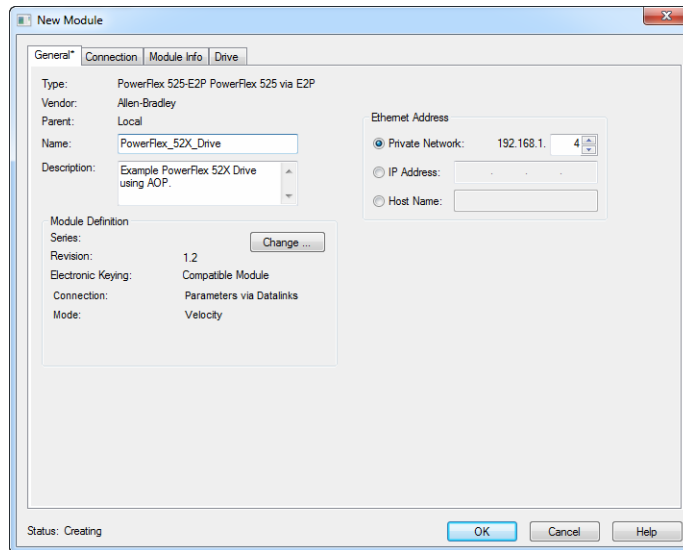


Box	Setting
Name	A name to identify the drive.
Description	Optional – description of the drive.
IP Address	The IP address of the adapter.

- On the New Module window in the Module Definition section, click **Change...** to launch the Module Definition window and begin the drive configuration process.

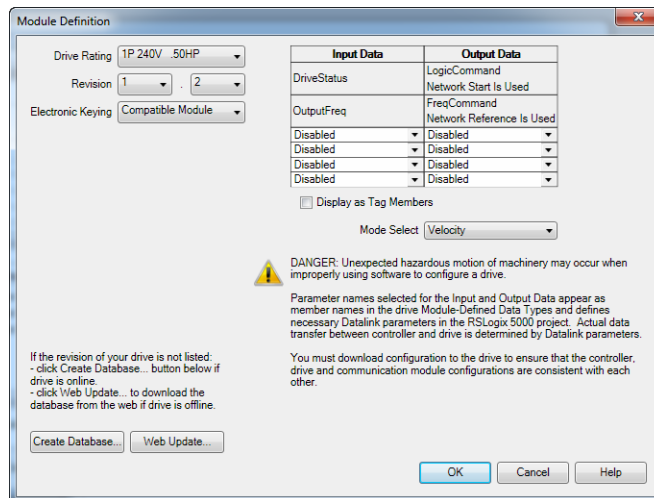

5. In the Module Definition window, edit the following information:

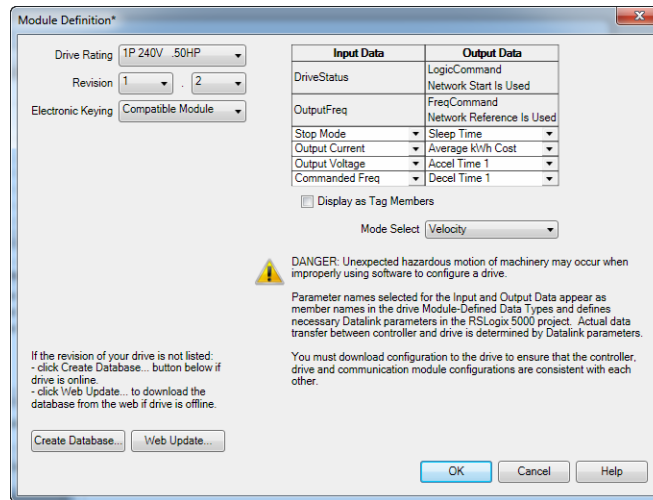


TIP You may create a database from a network accessible drive using the **Create Database...** button (Recommended if missing version of drive or peripheral being used).

Box	Setting
Drive Rating	The voltage and horsepower rating of the drive. If the drive rating is not listed, the drive database is not installed on your computer. To get the drive rating, use the Create Database... , or Web Update... button described above.
Revision	The major and minor revision of the firmware (database) in the drive. If the drive's major and minor revision is not available, the drive database is not installed on your computer. To get the correct database revision, use one of the following buttons at the bottom left of the Module Definition window: <ul style="list-style-type: none"> • Create Database... Creates a database from an online network drive. Clicking this button displays an RSLinx RSWho window. Browse to the online drive (PowerFlex 525), select it, and click OK. The database will be uploaded and stored on the computer. Thereafter, close the Module Definition window and then re-open it to display the new revision. • Web Update... When a drive is not available online, opens the Allen-Bradley Drives Web Updates web site to download a specific database file. After downloading the file, close the Module Definition window and then re-open it to display the new revision.
Electronic Keying	Compatible Module. The "Compatible Module" setting for Electronic Keying ensures the physical module is consistent with the software configuration before the controller and bridge make a connection. Therefore, ensure that you have set the correct revision in this window. See the online Help for additional information on this and other Electronic Keying settings. If keying is not required, select "Disable Keying." Drives do not require keying, and so "Disable Keying" is recommended. When using RSLogix 5000 (version 20) or Logix Designer (version 21 or greater) software and Automatic Device Configuration (ADC) with Firmware Supervisor flash support to store firmware for the drive, always choose "Exact Match." See the table on page 53 for full details when using ADC.
Input Data	Assigns drive or connected peripheral parameters to be READ by the controller using Datalinks.
Output Data	Assigns drive or connected peripheral parameters to be WRITTEN by the controller using Datalinks.
Mode Select	Sets the I/O configuration to either Velocity or Position mode.


On the Module Definition window, notice that the automatically-assigned controller tags Drive Status, Feedback, Logic Command, and Reference are always used.

When using Datalinks you must still assign *Host* parameters **C161 [Opt Data In 1]** through **C164 [Opt Data In 4]** and **C165 [Opt Data Out 1]** through **C168 [Opt Data Out 4]** to point to the appropriate drive or connected peripheral parameters. The procedure to configure the Datalinks on the Module Definition window for the Input Data and Output Data is the same:

- Click the  button to assign a parameter to each input and output Datalink you require.

IMPORTANT Always use the Datalink parameters in consecutive numerical order, starting with the first parameter. (For example, use parameters C161, C162, and C163 to configure three Datalinks to write data and/or parameters C165, C166, C167, and C168 to configure four Datalinks to read data.) Otherwise, the network I/O connection will be larger than necessary, which needlessly increases controller response time and memory usage.

6. Click **OK** on the Module Definition window to save the drive configuration and close the window. The drive's New Module window reappears.
7. On the New Module window, click the Connection tab.

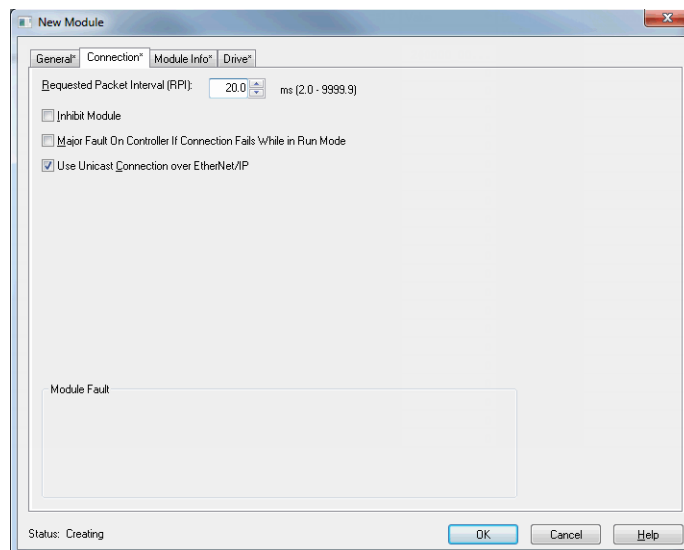


8. In the “Requested Packet Interval (RPI)” box, set the value to 2.0 milliseconds or greater. This value determines the maximum interval that a controller should use to move data to and from the adapter. To conserve bandwidth, use higher values for communicating with low priority devices.

The “Inhibit Module” box, when checked, inhibits the module from communicating with the RSLogix 5000 or Logix Designer project. When the “Major Fault On...” box is checked, a major controller fault will occur when the module’s connection fails while the controller is in the Run Mode. For this example, leave the “Inhibit Module” and “Major Fault On...” boxes unchecked.

The “Use Unicast Connection over EtherNet/IP” box is checked by default. This is the recommended setting. When this box is unchecked, the adapter will send multicast messages on the I/O connection. In this case, the adapter and the EtherNet/IP bridge must be on the same subnet.

9. Click **OK** on the New Module window.

The new node (“PowerFlex 525-E2P PowerFlex_52X_Drive” in this example) now appears under the  Ethernet icon in the I/O Configuration folder. If you double-click on the Input Controller Tag (see [Controller Input Tags on page 47](#)) and Output Controller Tag (see [Controller Output Tags on page 47](#)), you will see that module-defined data types and tags have been automatically created. Note that all tag names are defined and Datalinks include the assigned drive parameter name. After you save and download the configuration, these tags allow you to access the Input and Output data of the drive using the controller’s ladder logic.

Controller Input Tags

Name	Value	Data Type	Description
- PowerFlex_52X_DriveI	{...}	AB:PowerFlex5...	
+ PowerFlex_52X_DriveI.DriveStatus	2#0000_00...	INT	
- PowerFlex_52X_DriveI.Ready	0	BOOL	
- PowerFlex_52X_DriveI.Active	0	BOOL	
- PowerFlex_52X_DriveI.CommandDir	0	BOOL	
- PowerFlex_52X_DriveI.ActualDir	0	BOOL	
- PowerFlex_52X_DriveI.Accelerating	0	BOOL	
- PowerFlex_52X_DriveI.Decelerating	0	BOOL	
- PowerFlex_52X_DriveI.Faulted	0	BOOL	
- PowerFlex_52X_DriveI.AtReference	0	BOOL	
- PowerFlex_52X_DriveI.CommFreqCntrl	0	BOOL	
- PowerFlex_52X_DriveI.CommLogicCntrl	0	BOOL	
- PowerFlex_52X_DriveI.ParamsLocked	0	BOOL	
- PowerFlex_52X_DriveI.DigIn1Active	0	BOOL	
- PowerFlex_52X_DriveI.DigIn2Active	0	BOOL	
- PowerFlex_52X_DriveI.DigIn3Active	0	BOOL	
- PowerFlex_52X_DriveI.DigIn4Active	0	BOOL	
+ PowerFlex_52X_DriveI.OutputFreq	0	INT	
+ PowerFlex_52X_DriveI.StopMode	0	INT	
+ PowerFlex_52X_DriveI.OutputCurrent	0	INT	
+ PowerFlex_52X_DriveI.OutputVoltage	0	INT	
+ PowerFlex_52X_DriveI.CommandedFreq	0	INT	


Controller Output Tags

Name	Value	Data Type	Description
- PowerFlex_52X_DriveO	{...}	AB:PowerFlex5...	
+ PowerFlex_52X_DriveO.LogicCommand	2#0000_00...	INT	
- PowerFlex_52X_DriveO.Stop	0	BOOL	
- PowerFlex_52X_DriveO.Start	0	BOOL	
- PowerFlex_52X_DriveO.Jog	0	BOOL	
- PowerFlex_52X_DriveO.ClearFaults	0	BOOL	
- PowerFlex_52X_DriveO.Forward	0	BOOL	
- PowerFlex_52X_DriveO.Reverse	0	BOOL	
- PowerFlex_52X_DriveO.ForceKeypadCntrl	0	BOOL	
- PowerFlex_52X_DriveO.MOFIncrement	0	BOOL	
- PowerFlex_52X_DriveO.AcceRate1	0	BOOL	
- PowerFlex_52X_DriveO.AcceRate2	0	BOOL	
- PowerFlex_52X_DriveO.DeceRate1	0	BOOL	
- PowerFlex_52X_DriveO.DeceRate2	0	BOOL	
- PowerFlex_52X_DriveO.FreqSel01	0	BOOL	
- PowerFlex_52X_DriveO.FreqSel02	0	BOOL	
- PowerFlex_52X_DriveO.FreqSel03	0	BOOL	
- PowerFlex_52X_DriveO.MOFDecrement	0	BOOL	
+ PowerFlex_52X_DriveO.FreqCommand	0	INT	
+ PowerFlex_52X_DriveO.SleepTime	0	INT	
+ PowerFlex_52X_DriveO.AveragekWhCost	0	INT	
+ PowerFlex_52X_DriveO.AcceTime1	0	INT	
+ PowerFlex_52X_DriveO.DeceTime1	0	INT	


Saving the I/O Configuration to the Controller

After adding the controller and drive/adapter to the I/O configuration, you must download the configuration to the controller. You should also save the configuration to a file on your computer.

1. In the RSLogix 5000 or Logix Designer window, select **Communications > Download**. The Download dialog box appears.

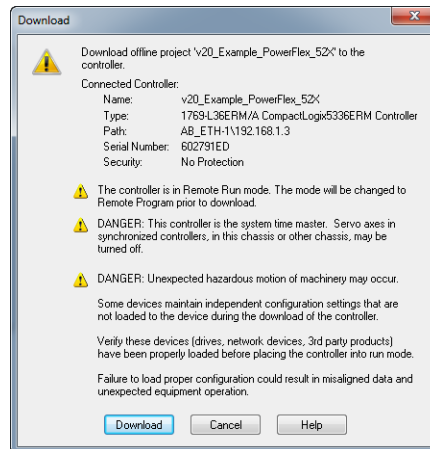


TIP If a message box reports that RSLogix 5000 or Logix Designer is unable to go online, select **Communications > Who Active** to find your controller in the Who Active screen. After finding and selecting the controller, click **Set Project Path** to establish the path. If your controller does not appear, you need to add or configure the EtherNet/IP driver in RSLinx. See the RSLinx online help.

2. Click **Download** to download the configuration to the controller. When the download is successfully completed, RSLogix 5000 or Logix Designer goes into Online Mode and the I/O Not Responding box in the upper-left of the window should be flashing green. Also, a yellow warning symbol  should be displayed on the I/O Configuration folder in the treeview and on the drive profile.
3. If the controller was in Run Mode before clicking **Download**, RSLogix 5000 or Logix Designer prompts you to change the controller mode back to Remote Run. In this case, choose the appropriate mode for your application. If the controller was in Program Mode before clicking **Download**, this prompt will not appear.
4. Select **File > Save**. If this is the first time you saved the project, the Save As dialog box appears. Navigate to a folder, type a file name, and click Save to save the configuration to a file on your computer.
5. To ensure that the present project configuration values are saved, RSLogix 5000 or Logix Designer prompts you to upload them. Click **Yes** to upload and save them.


Correlating the Drive with the Controller

You must now correlate the drive settings to the RSLogix 5000 or Logix Designer project I/O settings so that they match. This requires loading the project I/O settings into the drive.

1. In the treeview under I/O Configuration, right-click on the drive profile (for this example “PowerFlex 525-E2P PowerFlex_52X_Drive”) and select Properties.



2. Select the Drive tab to begin the correlation process.

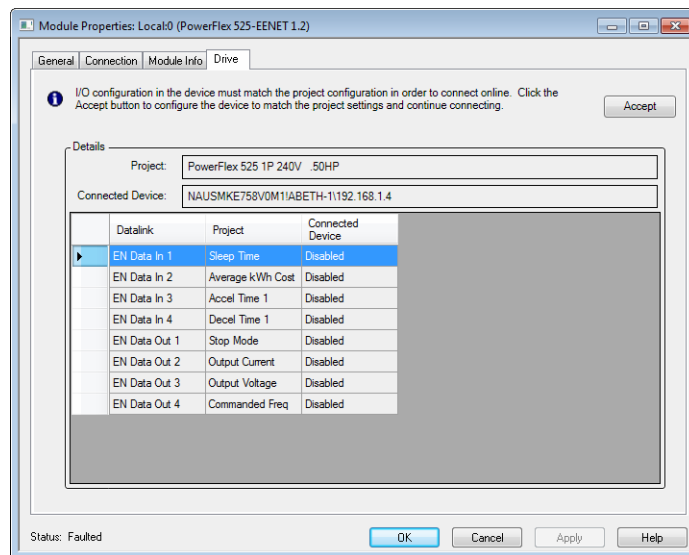


After the drive configuration data has been verified, the Drive tab will display a request to synchronize the configuration with the drive. Click **Accept**.


If the [Differences Found Screen on page 50](#) appears—which is typical, click **Download**. This will download the project settings from the controller to the drive. If **Upload** is clicked, the drive settings are uploaded to the controller.

TIP On subsequent connections to the drive (after the initial download), select **Upload**.

Differences Found Screen

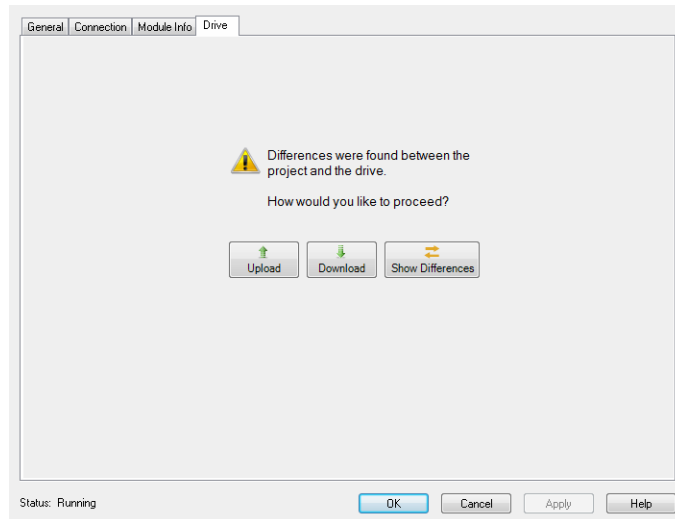

3. The Drive tab displays the current status of the drive.

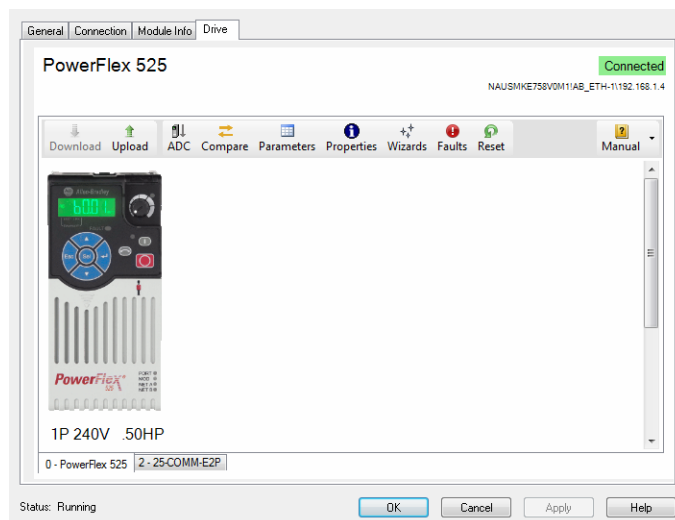

If the download is successful, the Drive tab will show a green **Connected** indicator in the upper right corner of the window. This tab is extremely useful for configuring drive parameters, accessing start-up wizards and troubleshooting.

4. Click **OK** to close the Module Properties window for the drive.

Using Automatic Device Configuration (ADC) with RSLogix 5000 or Logix Designer

Automatic Device Configuration (ADC) is an RSLogix 5000 (version 20) and Logix Designer (version 21 or greater) software feature that supports the automatic download of configuration data upon the Logix controller establishing

an EtherNet/IP network connection to a PowerFlex 525 drive and its associated peripherals.




-
- IMPORTANT**
- ADC is **not** available for DSI peripherals.
 - ADC is **not** available in Multi-drive mode.
 - ADC is only available when the drive is connected using the Dual-port EtherNet/IP adapter to a compatible controller.
-

An RSLogix 5000 (version 20) or Logix Designer (version 21 or greater) project (.ACD file) contains the configuration settings for any PowerFlex drives in the project. When the project is downloaded to the Logix controller, these settings are also transferred and reside in the controller's memory. Prior to ADC in RSLogix 5000 (version 20) or Logix Designer (version 21 or greater), downloading PowerFlex 525 configuration data was a manual process where the user would open the Drive tab in the respective drive Add-On Profile (AOP) in the application and click on the Download icon. ADC now automates the process and saves the user time. It is particularly beneficial in a drive replacement situation when a production line is down.

ADC can also work in tandem with Firmware Supervisor. If Firmware Supervisor is set up and enabled for a drive ("Exact Match" keying must be used), the drive/peripheral will be automatically flashed (if necessary) prior to any ADC operation.

-
- IMPORTANT** **Logix "owns" the configuration of the drive. ADC will be triggered any time the Logix controller detects a configuration signature mismatch when establishing an EtherNet/IP network I/O connection.** The use of other configuration tools, such as a HIM or Connected Components Workbench software should be minimized and restricted to monitor-only operation. Any configuration changes made by these tools will cause a configuration signature mismatch the next time the Logix controller connects to the device and ADC will write over any changes made by the other tool(s). Any drive configuration changes should be made with the drive Add-On Profile.
-

The drive AOP requires user action to enable ADC. This helps ensure that the user understands ADC operation prior to turning it on. The drive AOPs also have an ADC icon on the Drive tab to show general ADC enable/disable status for the drive:


Icon	Meaning
	No ports on the drive have ADC enabled.
	At least one port on the drive has ADC enabled.
	ADC is not supported.

Clicking on the ADC icon will launch the ADC configuration window. This provides a single, convenient location to enable/disable ADC on the drive.


Configuring a PowerFlex 525 Drive for ADC

ADC is configured within the AOP of the PowerFlex 525 drive. Start by creating or opening a PowerFlex 525 drive in the RSLogix 5000 or Logix Designer I/O Configuration folder.

1. In the Module Properties window, select the General tab and click **Change...** to open the Module Definition window.

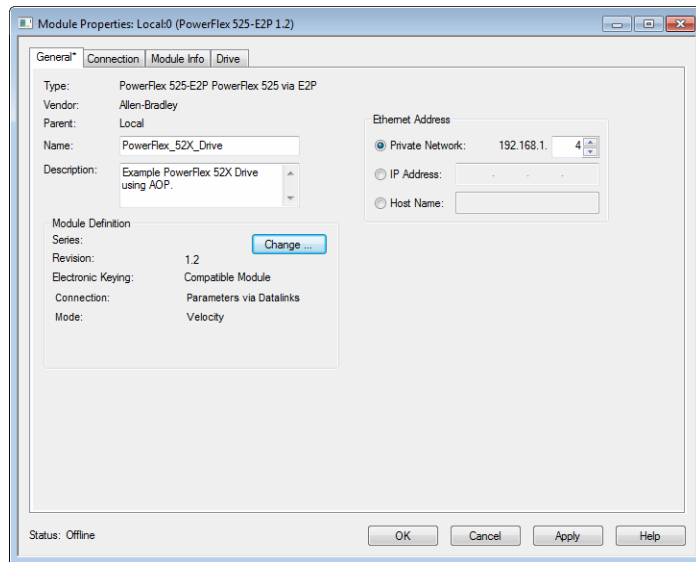

2. Select the appropriate Electronic Keying for your application.

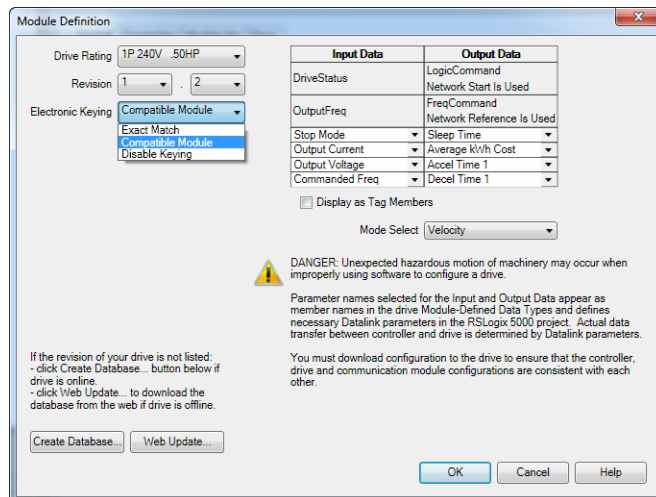


There are three Electronic Keying choices available in the Module Definition window in the drive AOP, but only two are recommended with ADC:


Keying Selection	Recommendation
Exact Match	This selection should only be used if: <ul style="list-style-type: none"> Your system design specification requires that a replacement drive/peripheral be identical – down to the Minor revision of firmware (x.xxx). You will be implementing Firmware Supervisor flash support in addition to ADC. ControlFlash firmware kits for the revision of firmware used for each drive/peripheral must be installed on the PC running RSLogix 5000 or Logix Designer. Flash files can be downloaded from: http://www.ab.com/support/abdrives/webupdate
Compatible Module	This selection is the typical ADC selection when Firmware Supervisor is not used. A replacement drive (including peripherals) will need to have the same or higher firmware revision as the original. Since drives with newer firmware are required to be compatible with older firmware, this allows ADC to work without compatibility concerns. Note that if a Series change accompanies a Major firmware change, the replacement drive may or may not be “compatible” with respect to keying.
Disabled	When using ADC, this selection should generally not be used. This selection allows a replacement drive to have any different Major (x.xxx) and/or Minor (x.xxx) firmware revision. It is up to the user to provide a replacement that has a firmware revision later than or equal to the original drive. If a replacement drive with older firmware is used, the ADC download may fail.

Electronic Keying for HIMs and serial converters are disabled by default. These are typically temporary devices or used for monitoring purposes only and therefore “do not matter” if they are present or not. You still have the option to select these to other Keying selections if desired.

TIP Electronic Keying settings for peripherals can be modified in the Drive tab of the AOP. Select the peripheral tab for the device you wish to modify, then click **Properties**.

Click **OK** when finished.

3. Select the Drive tab and click the ADC icon  to open the ADC Settings.

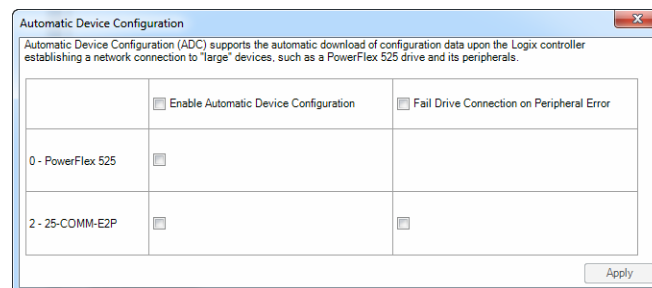

The ADC Settings window provides a single location for ADC configuration of the drive’s ports. Global checkboxes at the top of each column checks or unchecks the entire column. Ports can also be turned on/off individually. See the checkbox selection information in Step 3 for additional details.

Click **OK** when finished.

4. Perform the above steps for each additional PowerFlex 525 drive.
5. Save your project and download the project to the Logix controller.


ADC and Logix Memory

Starting in RSLogix 5000 software version 16, drive configuration settings have been stored in the project's ACD file which is downloaded and stored in the controller. The majority of Logix controllers have megabytes of memory available, so this typically should not be an issue. You can monitor Logix memory usage in the application in the **Controller Properties > Memory** tab.


Storing the Drive's and Peripheral's Firmware in the Logix Controller (Firmware Supervisor)

The Logix Firmware Supervisor function has been extended to provide firmware updates for the peripherals connected to the drive. To configure the controller to check and refresh the correct firmware for the drive and peripherals, perform the following steps:

1. Verify that "Exact Match" keying is selected in the drive's and peripherals' properties screens (the drive's is in the General tab; the peripherals' are under the Drive tab, after right-clicking on each peripheral and choosing **Properties**).
2. Verify that ControlFlash firmware kits for each revision of firmware for each device that should be stored in the controller have been installed on the PC running RSLogix 5000 or Logix Designer software.
3. Verify that a CompactFlash or other storage card has been installed in the controller.
4. Use RSLogix 5000 or Logix Designer to go online with the controller in Program mode. Download your program if you have not done so already.
5. In the treeview, right-click on the controller folder at the top of the Controller Organizer and choose **Properties**. On the Controller Properties window, select the Nonvolatile Memory tab.

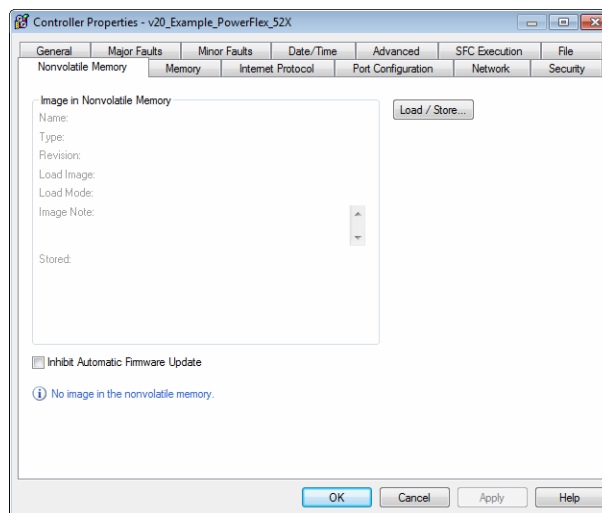


6. Click **Load/Store...**. The Nonvolatile Memory Load/Store window appears.

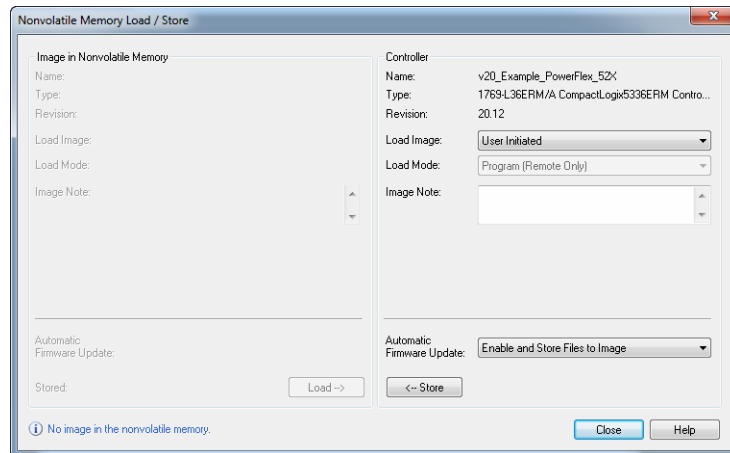

In the Controller section for the Automatic Firmware Update field, select “Enable and Store Files to Image,” and click the <- **Store** button. You may see two different continue confirmation dialog boxes relating to communication disruptions and erasure of the current contents of the storage card. If okay, click **Yes** on each dialog box.

7. The application will go to the Offline state, and the following dialog box will appear.

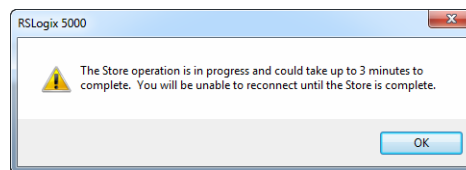

Wait a short period of time for the store operation to complete, and then attempt to go online with the controller again.

Monitoring the ADC Progress

The time it takes for the ADC process to complete will vary from seconds to several minutes depending on several factors:

- The number of peripherals enabled for ADC.
- If a configuration signature for the drive/peripheral indicates a configuration download needs to be performed for the given port.
- Whether Firmware Supervisor is enabled and needs to flash the drive and/or any peripherals.


IMPORTANT ADC can automatically reset the drive as part of the configuration process. This is done because some parameters require a reset before they take effect. If a drive is being replaced with an out-of-the-box drive, you will typically see one or more resets during the ADC process.

An operational drive in a running Logix system will have the following status indicator states:

Status Indicator	State	Description
PORT	Steady Green	The adapter is properly connected and is communicating with the drive.
MOD	Steady Green	The adapter is operating normally and is transferring I/O data to a controller.
NET A	Steady Green	The adapter is operating normally and has at least one CIP connection (I/O or explicit).
NET B	Flashing Green	The adapter is transmitting on the network.

See [Understanding the Status Indicators on page 115](#) for more information.

Additional information may also be displayed on the HIM if it is present (flash status, etc.).

If ADC is unsuccessful, RSLogix 5000 or Logix Designer software can be used to get additional information. When online, the drive at issue should have a yellow triangle  next to it in the RSLogix 5000 or Logix Designer project's I/O Configuration folder. Double-click on the drive to open the drive AOP. The Connection tab will show a Module Fault code and the Drive tab can help you identify issues.

ADC Status Field	Description
Running	Any desired configuration is complete, and the I/O connection is running.
Configuring	ADC is currently updating the configuration of the drive or one of its peripherals. Clicking on the Connection tab will show which device is being updated.
Firmware Updating	ADC is currently updating the firmware of the drive or one of its peripherals. Clicking on the Drive tab will show which device is being updated.
Inhibited	The program has the connection inhibited. You can uninhibit the connection on the Connection tab.
Faulted	A problem is preventing the controller from connecting to the drive (for example, the device at the IP address provided is not a PowerFlex 525 drive). Clicking on the Connection tab will show the cause (Module Fault). Clicking on the Drive tab may also show the faulted ports.

Examples of potential issues/solutions are:

Issue	Solution
“Compatible module” keying selected, but replacement drive or peripheral has an earlier firmware revision than the failed device.	Replace device with a revision that is later than or equal to the failed device. If necessary, use ControlFLASH to flash replacement device first to an acceptable revision level.
Peripheral is required for connection (“Fail Drive Connection on Peripheral Error” was checked), but it is missing.	Add required peripheral or remove peripheral from RSLogix 5000/Logix Designer project for the drive and download project to the controller.
Parameter “out of range” error—ADC wrote a value to a parameter that was out of range (typically would only occur during initial commissioning of a drive system).	Use any available drive software tool to view a linear list of changed parameters to see if the configured value is outside the minimum/maximum value. The drive AOPs are the preferred tool and will highlight any out of range parameter in the Linear List editor. Connected Components Workbench (version 3 or greater) may also be used.


Using the RSLogix 5000 or Logix Designer Generic Profile


The basic RSLogix 5000 (all versions) or Logix Designer (version 21 or greater) Generic Profile is only recommended when:

- A specific drive profile in other versions of RSLogix 5000 or Logix Designer software is unavailable.
- Users are already familiar with a Generic Profile and do not want to convert an existing project to a drive Add-On Profile (RSLogix 5000 version 17 or greater and Logix Designer version 21 or greater).
- A project must maintain specific revision level control.
- The controller cannot be taken offline. RSLogix 5000 (all versions) and Logix Designer (version 21 or greater) software enables the drive Generic Profile to be added while the controller is online and in the Run mode.


Adding the Drive/Adapter to the I/O Configuration

To transmit data between the bridge and the drive, you must add the drive as a child device to the parent bridge.


1. In the treeview, right-click on the  Ethernet icon and select **New Module...** to display the Select Module Type window. Expand the Communications group to display all of the available communication modules or search for “ETHERNET-MODULE”.

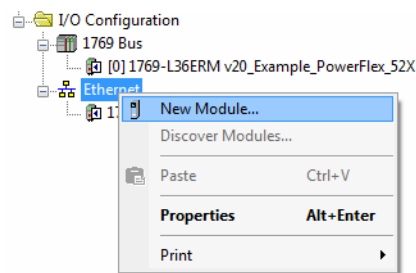

2. Select “ETHERNET-MODULE” from the list in the Select Module Type window to configure the drive’s embedded EtherNet/IP adapter, and then click **Create**. The drive’s New Module window appears.

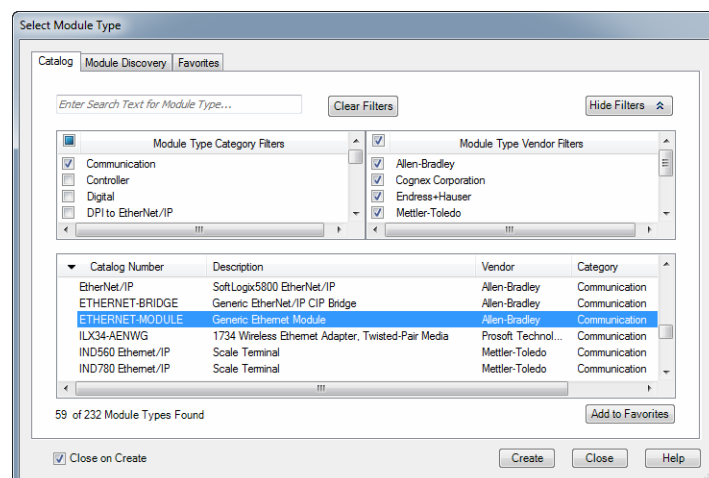

3. Edit the following information about the drive:

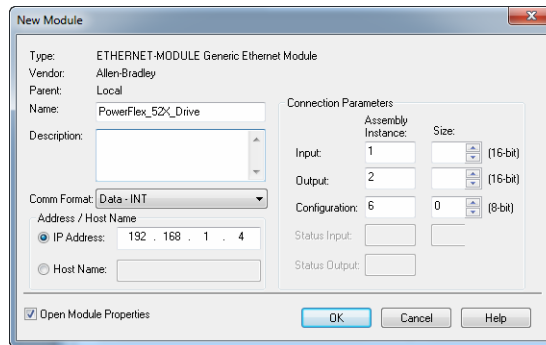

Box	Setting
Name	A name to identify the drive.
Description	Optional – description of the drive.
Comm Format	Data – INT (This setting formats the data in 16-bit words.)
IP Address	The IP address of the drive.
Open Module Properties	When this box is checked, clicking OK opens additional module properties screens to further configure the drive. When unchecked, clicking OK closes the drive's New Module screen. For this example, check this box.

4. Under Connection Parameters, edit the following:

Box	Assembly Instance	Size
Input	1 (This value is required.)	The value will vary based on the total number of <i>Host</i> parameters [Opt Data In x] used for your application, either in Single-drive mode (see details below) or Multi-drive mode (see Using Multi-Drive Mode on page 87).
Output	2 (This value is required.)	The value will vary based on the total number of <i>Host</i> parameters [Opt Data Out x] used for your application, either in Single-drive mode (see details below) or Multi-drive mode (see Using Multi-Drive Mode on page 87).
Configuration	6 (This value is required.)	0 (This value is required.)

Enter the number of 16-bit words that are required for your I/O in the Input Size and Output Size boxes. Since the adapter always uses the 16-bit Logic Status, 16-bit Feedback, and two 16-bit words dedicated for memory allocation of the Generic Ethernet module profile, at least four 16-bit words must be set for the Input Size. The adapter also uses the 16-bit Logic Command and 16-bit Reference, requiring at least two 16-bit words for the Output Size. If any or all of the drive's eight 16-bit Datalinks are used (see [Configuring a Master-Slave Hierarchy on page 33](#)), the Input and Output Size settings must be increased accordingly.


Generic Profile Example of I/O Image

Adapter Word and I/O			
Output Image (Write)	Required	Word 0	Logic Command
		Word 1	Reference
	Optional	Word 2	Datalink 1
		Word 3	Datalink 2
		Word 4	Datalink 3
	Word 5	Datalink 4	
Input Image (Read)	Required	Word 0	Padword ⁽¹⁾
		Word 1	Padword
		Word 2	Logic Status
		Word 3	Feedback
	Optional	Word 4	Datalink 1
		Word 5	Datalink 2
		Word 6	Datalink 3
		Word 7	Datalink 4

(1) Padwords only apply when using the generic profile. Padwords are not used when using the full-featured drive Add-On-Profile.


IMPORTANT The *Host Datalink* parameters [Opt Data In x] and [Opt Data Out x] do not actually contain data. These are user-configurable parameters that only contain the parameter number of the parameter whose data will be made available for write/read in the I/O image. See [Using Datalinks on page 66](#).

For the example below, all four [Opt Data In x] and all four [Opt Data Out x] parameters are used, resulting in an Input Size of “8” and an Output Size of “6.”

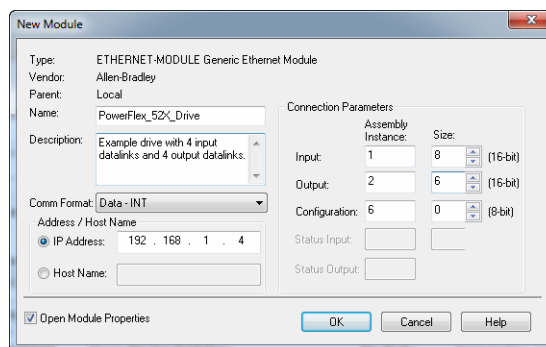

5. After setting the information in the drive’s New Module window, click **OK**. The Module Properties window appears.

6. Click the Connection tab.

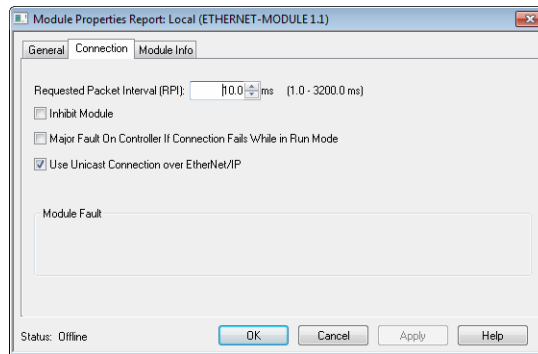

7. In the “Requested Packet Interval (RPI)” box, set the value to 2.0 milliseconds or greater. This value determines the maximum interval that a controller should use to move data to and from the adapter. To conserve bandwidth, use higher values for communicating with low priority devices. For this example, leave the “Inhibit Module” and Major Fault On...” boxes unchecked.

The “Use Unicast Connection over EtherNet/IP” box is checked by default. This is the recommended setting. When this box is unchecked, the adapter will send multicast messages on the I/O connection. In this case, the adapter and the EtherNet/IP bridge must be on the same subnet.

8. Click **OK**. The new node (“ETHERNET-MODULE_PowerFlex_52X_Drive” in this example) now appears under the Ethernet icon in the I/O Configuration folder. If you double-click on the Input Controller Tag (see [Input Image Controller Tags on page 60](#)) and Output Controller Tag (see [Output Image Controller Tags on page 60](#)), you will see that module-defined data types and tags have been automatically created. After you save and download the configuration, these tags allow you to access the Input and Output data of the drive using the controller’s ladder logic.

Input Image Controller Tags

Name	Value	Data Type	Description
+ PowerFlex_52X_Drive.C	{...}	AB:ETHERNET_MODULE:C:0	
- PowerFlex_52X_Drive.I	{...}	AB:ETHERNET_MODULE_INT_16Bytes:I:0	
- PowerFlex_52X_Drive.I.Data	{...}	INT[8]	
+ PowerFlex_52X_Drive.I.Data[0]	0	INT	Padword
+ PowerFlex_52X_Drive.I.Data[1]	0	INT	Padword
+ PowerFlex_52X_Drive.I.Data[2]	0	INT	Logic Status
+ PowerFlex_52X_Drive.I.Data[3]	0	INT	Speed Feedback
+ PowerFlex_52X_Drive.I.Data[4]	0	INT	Datalink In 1
+ PowerFlex_52X_Drive.I.Data[5]	0	INT	Datalink In 2
+ PowerFlex_52X_Drive.I.Data[6]	0	INT	Datalink In 3
+ PowerFlex_52X_Drive.I.Data[7]	0	INT	Datalink In 4

Output Image Controller Tags


Name	Value	Data Type	Description
- PowerFlex_52X_Drive.O	{...}	AB:ETHERNET_MODULE_INT_12Bytes:O:0	
- PowerFlex_52X_Drive.O.Data	{...}	INT[6]	
+ PowerFlex_52X_Drive.O.Data[0]	0	INT	Logic Command
+ PowerFlex_52X_Drive.O.Data[1]	0	INT	Speed Reference
+ PowerFlex_52X_Drive.O.Data[2]	0	INT	Datalink Out 1
+ PowerFlex_52X_Drive.O.Data[3]	0	INT	Datalink Out 2
+ PowerFlex_52X_Drive.O.Data[4]	0	INT	Datalink Out 3
+ PowerFlex_52X_Drive.O.Data[5]	0	INT	Datalink Out 4

Saving the I/O Configuration to the Controller

After adding the bridge and drive/adaptor to the I/O configuration, you must download the configuration to the controller. You should also save the configuration to a file on your computer.

TIP When using RSLogix 5000 or Logix Designer software, you can add the I/O configuration of a Generic Profile while the controller is online and in the Run mode.

1. In the RSLogix 5000 or Logix Designer window, select **Communications** > **Download**. The Download dialog box appears.

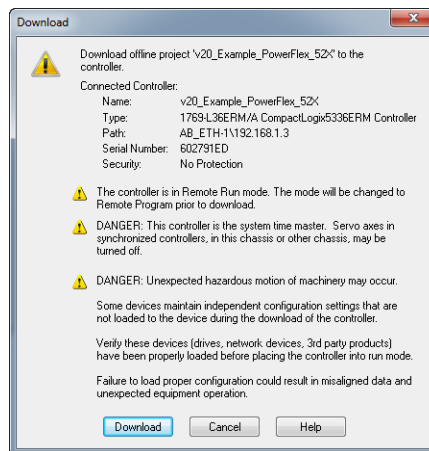

TIP If a message box reports that RSLogix 5000 or Logix Designer is unable to go online, select **Communications** > **Who Active** to find your controller in the Who Active screen. After finding and selecting the controller, click **Set Project Path** to establish the path. If your controller does not appear, you need to add or configure the EtherNet/IP driver in RSLinx. See [Using RSLinx Classic on page 39](#) for details.

2. Click **Download** to download the configuration to the controller. When the download is successfully completed, RSLogix 5000 or Logix Designer goes into the Online mode and the I/O OK box in the upper-left of the screen should be steady green.
3. Select **File** > **Save**. If this is the first time you saved the project, the Save As dialog box appears. Navigate to a folder, type a file name, and click **Save** to save the configuration to a file on your computer.
4. Any Datalinks that were enabled in the controller and drive during I/O configuration must also be configured in the drive. Each Datalink being used must be assigned to a specific parameter in the drive or connected peripheral (see [Configuring a Master-Slave Hierarchy on page 33](#)). If this is not done, the controller will receive or send placeholder data instead of actual drive or peripheral parameter values.
5. Place the controller in Remote Run or Run Mode.

Limitations in Using MicroLogix 1100/1400

Controlling I/O with explicit messages is relatively complex compared to normal implicit I/O control.

ControlLogix and CompactLogix controllers with EtherNet/IP provide the easiest and most integrated form of implicit I/O control for a PowerFlex drive. RSLogix 5000 or Logix Designer programming software for ControlLogix and CompactLogix controllers contains integrated profiles for PowerFlex drives that, with a few clicks of the mouse, automatically create all controller tags and an implicit connection at the specified Requested Packet Interval to control the drive. This connection is monitored at both ends to ensure that the controller and drive are communicating. A watchdog will cause a drive fault if the drive does not respond within approximately 100 milliseconds. Therefore, using a ControlLogix or CompactLogix controller is by far the much preferred method of controlling drives on EtherNet/IP.

If you are not using either of these type of controllers, then PowerFlex drives on EtherNet/IP can be controlled with explicit messages using MicroLogix 1100/1400 controllers with the following limitations:

- An explicit message is a much slower form of control and is non-deterministic. This means that you cannot guarantee how long the drive will take to start up or stop when the command is given. Therefore, all equipment used in this manner should be subject to a risk assessment, taking into account the mechanical and electrical implementation.
- A timeout value (in seconds) in the embedded EtherNet/IP adapter will issue a drive fault if a message is not received from the controller within the specified time. However, the controller has no way of detecting a loss of communications to the drive until the next cycle of explicit messages. This is another factor in the risk assessment.
- Any additional drives to be controlled will require additional explicit messages for their control, and they need to be carefully sequenced. Most controllers have small communication queues (see its User Manual), which need to be carefully managed if messages are not to be lost.
- Each controller has a limited number of communication connections (see its User Manual for maximum connections), which will limit the number of drives that can be connected.

In summary, unlike a ControlLogix or CompactLogix controller, programming a MicroLogix 1100/1400 controller using RSLogix 500 software with explicit messages is more difficult, and produces a more complex program.

Using the I/O

This chapter provides information and examples that explain how to control, configure, and monitor a PowerFlex 520-series drive using the configured I/O.

Topic	Page
About I/O Messaging	63
Understanding the I/O Image	64
Using Logic Command/Status	65
Using Reference/Feedback	65
Using Datalinks	66
Example Ladder Logic Program Information	67
CompactLogix Example	67



ATTENTION: Risk of injury or equipment damage exists. The examples in this publication are intended solely for purposes of example. There are many variables and requirements with any application. Rockwell Automation, Inc. does not assume responsibility or liability (to include intellectual property liability) for actual use of the examples shown in this publication.

About I/O Messaging

On CIP-based networks, including EtherNet/IP, I/O connections are used to transfer the data which controls the PowerFlex drive and sets its Reference. I/O can also be used to transfer data to and from Datalinks in PowerFlex 520-series drives.

The adapter includes the Logic Command, Logic Status, Reference, Feedback, and memory allocation for the Generic Ethernet module profile (all as 16-bit words) in the controller's I/O image. This basic I/O must always be configured in the Ethernet bridge using RSLogix 5000 or Logix Designer software. Additional I/O, if needed, can be set using up to four Datalinks to write data and/or up to four Datalinks to read data. When using any combination of these Datalinks, add one 16-bit word for each Datalink to the basic I/O Input Size and/or Output Size.

[Configuring the Adapter on page 25](#) and [Configuring the I/O on page 39](#) discuss how to configure the adapter and controller on the network for the required I/O. The Glossary defines the different options. This chapter discusses how to use I/O after you have configured the drive and controller.

Understanding the I/O Image

The terms *input* and *output* are defined from the controller's point of view. Therefore, output I/O is data that is produced by the controller and consumed by the adapter. Input I/O is data that is produced by the adapter and consumed as input by the controller. The I/O image will vary based on:

- How many of the drive's 16-bit Datalinks (*Host* parameters **C161 [Opt Data In 1]** through **C164 [Opt Data In 4]** and **C165 [Opt Data Out 1]** through **C168 [Opt Data Out 4]**) are used. *Device* parameters **02 [DLs From Net Act]** and **03 [DLs To Net Act]** must also be configured accordingly if Datalinks are used.
- **ControlLogix/CompactLogix Controllers only**—The drive Add-On Profile (AOP) used in RSLogix 5000 (version 17 or greater) or Logix Designer (version 21 or greater) software, or the Generic Profile (all versions).
- If Multi-drive mode is enabled, and the number of daisy-chained drives that are present.

I/O Controller Image

Since the drive Add-On Profile in RSLogix 5000 (version 17 or greater) and Logix Designer (version 21 or greater) software provides descriptive controller tags, the I/O image (tag size and location) is automatically configured based on the drive being used. When using the Generic Profile in RSLogix 5000 or Logix Designer, however, controller tags are not descriptive.

[I/O Image for PowerFlex 525 Drives on page 64](#) shows the I/O image when using all of the 16-bit Datalinks.

I/O Image for PowerFlex 525 Drives (16-bit Logic Command/Status, Reference/Feedback, and Datalinks)

INT	Output	Input Using...			
		INT	Drive Add-On Profile	INT	Generic Profile
0	Logic Command	0	Logic Status	0	Padword
1	Reference	1	Feedback	1	Padword
2	Datalink 1	2	Datalink 1	2	Logic Status
3	Datalink 2	3	Datalink 2	3	Feedback
4	Datalink 3	4	Datalink 3	4	Datalink 1
5	Datalink 4	5	Datalink 4	5	Datalink 2
				6	Datalink 3
				7	Datalink 4

Single drive mode is the typical configuration, where one node consists of a PowerFlex 520-series drive with a 25-COMM-E2P adapter.

For Multi-Drive mode, where one node can consist of up to five drives, see [Using Multi-Drive Mode on page 87](#).

Using Logic Command/Status

The *Logic Command* is a 16-bit word of control data produced by the controller and consumed by the adapter. The *Logic Status* is a 16-bit word of status data produced by the adapter and consumed by the controller.

When using a ControlLogix or CompactLogix controller, the Logic Command word is always INT 0 in the output image and the Logic Status word is always:

- INT 0 in the input image when using the drive Add-On Profile.
- INT 2 when using the Generic Profile.

This manual contains the bit definitions for compatible products available at the time of publication in [Logic Command/Status Words: PowerFlex 525 Drives on page 157](#).

Using Reference/Feedback

The *Reference* is a 16-bit word that is produced by the controller and consumed by the adapter. The *Feedback* is a 16-bit word produced by the adapter and consumed by the controller.

When using a ControlLogix or CompactLogix controller, the Reference is always INT 1 in the output image (see [I/O Image for PowerFlex 525 Drives on page 64](#)) and the 16-bit Feedback is always:

- INT 1 in the input image when using the drive Add-On Profile.
- INT 3 when using the Generic Profile.

The Reference and Feedback are 16-bit INT values represent drive speed. The scaling for the speed Reference and Feedback is 0.01 Hz. For example, a 16-bit INT Reference value of '3000' would equal a Reference of 30.00 Hz. Note that the commanded maximum speed can never exceed the value of *Host* parameter **P044 [Maximum Freq]**. [PowerFlex 525 Drive Example Speed Reference/Feedback Scaling on page 65](#) shows example References and their results for a PowerFlex 525 drive that has its:

- *Host* parameter **P043 [Minimum Freq]** set to 10.00 Hz.
- *Host* parameter **P044 [Maximum Freq]** set to 50.00 Hz.

PowerFlex 525 Drive Example Speed Reference/Feedback Scaling

Network Reference Value	Speed Commanded Value	Output Speed	Network Feedback Value
10000	100.00 Hz	50.00 Hz ⁽¹⁾	5000
6500	65.00 Hz	50.00 Hz ⁽¹⁾	5000
3250	32.50 Hz	32.50 Hz	3250
0	0.00 Hz	0.00 Hz	0

(1) The drive runs at 50.00 Hz instead of 100.00 Hz or 65.00 Hz because *Host* parameter P044 [Maximum Freq] sets 50.00 Hz as the maximum speed.

IMPORTANT There are several parameters in the drive that will override the start source and speed reference command if enabled. For details on these parameters, see the PowerFlex 525 drive's user manual, publication [520-UM001](#).

Attempting to write a negative value to the Speed Reference will result in the drive ramping to maximum speed due to overflow, the direction of the drive can only be controlled programmatically with the appropriate bits (bits 4 and 5) in the Command Word.

Using Datalinks

A Datalink is a mechanism used by PowerFlex drives to transfer data to and from the controller. Datalinks allow a drive parameter value to be read or written to without using an Explicit Message. When enabled, each Datalink occupies one 16-bit word in a ControlLogix, CompactLogix, or MicroLogix controller.

The following rules apply when using PowerFlex 520-series drive Datalinks:

- Datalinks cannot be used with Multi-drive mode.
- The target of a Datalink can be any appropriate *Host* parameter. For example, *Host* parameter **P041 [Accel Time 1]** can be the target of the Dual-port EtherNet/IP adapter installed in the drive.
- The data passed through the drive's Datalink mechanism is determined by the settings of the following parameters:
 - *Device* Parameter **02 [DLs From Net Act]**
 - *Device* Parameter **03 [DLs To Net Act]**
 - *Host* parameters **C161 [Opt Data In 1]** through **C164 [Opt Data In 4]**
 - *Host* parameters **C165 [Opt Data Out 1]** through **C168 [Opt Data Out 4]**

IMPORTANT A reset is always required after configuring Datalinks so that the changes take effect.

- When an I/O connection that includes Datalinks is active, those Datalinks being used are locked and cannot be changed until that I/O connection becomes idle or inactive.
- When you use a Datalink to change a value, the value is NOT written to the Non-Volatile Storage (NVS). The value is stored in volatile memory and lost when the drive loses power. Thus, use Datalinks when you need to change a value of a parameter frequently.

Datalinks for PowerFlex 520-series drive peripherals (embedded EtherNet/IP adapter on PowerFlex 525 drives only and option modules such as an encoder or communication adapter) are locked when the peripheral has an I/O connection with a controller. When a controller has an I/O connection to the drive, the drive does not allow a reset to defaults, configuration download or anything else that could change the makeup of the I/O connection in a running system. The I/O connection with the controller must first be disabled to allow changes to the respective Datalinks.

Depending on the controller being used, the I/O connection can be disabled by:

- Inhibiting the module in RSLogix 5000 or Logix Designer software
- Putting the controller in Program mode
- Placing the scanner in idle mode
- Disconnecting the drive from the network

Example Ladder Logic Program Information

The example ladder logic programs in the sections of this chapter are intended for PowerFlex 520-series drives.

Functions of the Example Programs

The example programs enable you to:

- Receive Logic Status information from the drive.
- Send a Logic Command to control the drive (for example, start, stop).
- Send a Reference to the drive and receive Feedback from the drive.
- Send/receive Datalink data to/from the drive.

Logic Command/Status Words

These examples use the Logic Command word and Logic Status word for PowerFlex 525 drives. See [Logic Command/Status Words: PowerFlex 525 Drives on page 157](#) to view details.

CompactLogix Example

Creating Ladder Logic Using the Drive Add-On Profiles in RSLogix 5000 or Logix Designer Software


Since the drive Add-On Profile automatically created descriptive controller tags (see [Controller Input Tags](#) and [Controller Output Tags](#) on [page 47](#)) for the entire I/O image in [Configuring the I/O on page 39](#), you can use these tags to directly control and monitor the drive without creating any ladder logic program. However, if you intend to use Human Machine Interface devices (PanelView, etc.) to operate the drive and view its status, you will need to create descriptive user-defined Program tags (see [CompactLogix Program Tags for Drive Add-On Profile Ladder Logic Program Example on page 68](#)) and a ladder logic program that will pass the Controller tag data to the Program tags.

CompactLogix Program Tags for Drive Add-On Profile Ladder Logic Program Example


Name	Value	Data Type	Description
Speed_Reference	0	INT	
Speed_Feedback	0	INT	
Status_Reverse	0	BOOL	
Status_Ready	0	BOOL	
Status_Forward	0	BOOL	
Status_Faulted	0	BOOL	
Status_At_Speed	0	BOOL	
Status_Active	0	BOOL	
Command_Stop	0	BOOL	
Command_Start	0	BOOL	
Command_Jog	0	BOOL	
Command_Forward_Reverse	0	BOOL	
Command_Clear_Faults	0	BOOL	

An example ladder logic program that uses the automatically-created descriptive Controller tags and passes their data to the user-defined Program tags is shown in [CompactLogix Example Ladder Logic Program Using a Drive Add-On Profile for Logic Status/Feedback on page 68](#) and [CompactLogix Example Ladder Logic Program Using a Drive Add-On Profile for Logic Command/Reference on page 69](#). Note that the prefix for the drive Controller tags is determined by the name assigned when configuring the I/O (see [Configuring the I/O on page 39](#)).

CompactLogix Example Ladder Logic Program Using a Drive Add-On Profile for Logic Status/Feedback

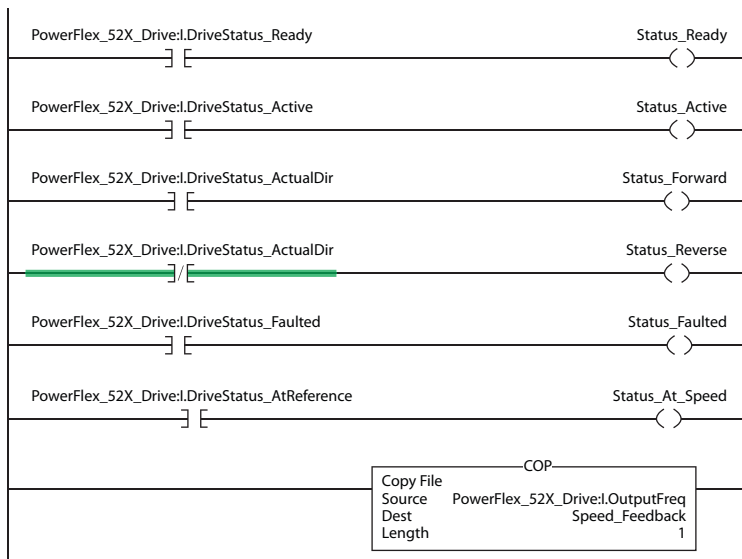

CompactLogix Example Ladder Logic Program Using a Drive Add-On Profile for Logic Command/Reference

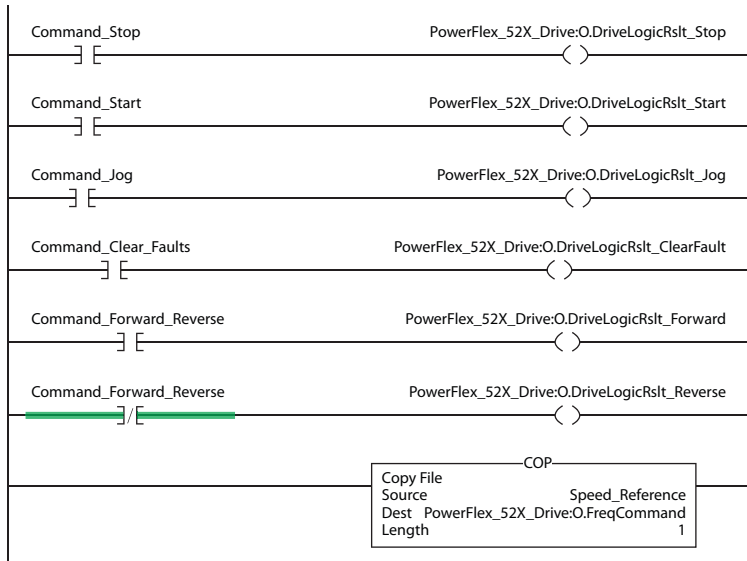

Creating Ladder Logic Using the Generic Profile in RSLogix 5000 or Logix Designer Software

Controller Tags

When you add the drive to the I/O configuration (see [Configuring the I/O on page 39](#)), RSLogix 5000 or Logix Designer automatically creates generic (non-descriptive) controller tags. In this example program, the following controller tags are used.

CompactLogix Controller Tags for Drive Generic Profile Ladder Logic Program Example

Name	Value	Data Type	Description
+ PowerFlex_52X_Drive.C	{...}	AB:ETHERNET_MODULE.C:0	
- PowerFlex_52X_Drive.I	{...}	AB:ETHERNET_MODULE_INT_16Bytes:1:0	
- PowerFlex_52X_Drive.I.Data	{...}	INT[8]	
+ PowerFlex_52X_Drive.I.Data[0]	0	INT	Padword
+ PowerFlex_52X_Drive.I.Data[1]	0	INT	Padword
+ PowerFlex_52X_Drive.I.Data[2]	0	INT	Logic Status
+ PowerFlex_52X_Drive.I.Data[3]	0	INT	Speed Feedback
+ PowerFlex_52X_Drive.I.Data[4]	0	INT	Datalink In 1
+ PowerFlex_52X_Drive.I.Data[5]	0	INT	Datalink In 2
+ PowerFlex_52X_Drive.I.Data[6]	0	INT	Datalink In 3
+ PowerFlex_52X_Drive.I.Data[7]	0	INT	Datalink In 4
- PowerFlex_52X_Drive.O	{...}	AB:ETHERNET_MODULE_INT_12Bytes:0:0	
- PowerFlex_52X_Drive.O.Data	{...}	INT[6]	
+ PowerFlex_52X_Drive.O.Data[0]	0	INT	Logic Command
+ PowerFlex_52X_Drive.O.Data[1]	0	INT	Speed Reference
+ PowerFlex_52X_Drive.O.Data[2]	0	INT	Datalink Out 1
+ PowerFlex_52X_Drive.O.Data[3]	0	INT	Datalink Out 2
+ PowerFlex_52X_Drive.O.Data[4]	0	INT	Datalink Out 3
+ PowerFlex_52X_Drive.O.Data[5]	0	INT	Datalink Out 4

You can expand the Input and Output tags to reveal the input and output configuration (see [CompactLogix Controller Tags for Drive Generic Profile Ladder Logic Program Example on page 70](#)). The Input tag for this example requires eight 16-bit words of data. The Output tag for this example program requires six 16-bit words of data.

Program Tags

To use the Controller tags that are automatically created, you need to create the following Program tags for this example program.


CompactLogix Program Tags for Drive Generic Profile Ladder Logic Program Example

Name	Value	Data Type	Description
+ Speed_Reference	0	INT	
+ Speed_Feedback	0	INT	
Status_Reverse	0	BOOL	
Status_Ready	0	BOOL	
Status_Forward	0	BOOL	
Status_Faulted	0	BOOL	
Status_At_Speed	0	BOOL	
Status_Active	0	BOOL	
Command_Stop	0	BOOL	
Command_Start	0	BOOL	
Command_Jog	0	BOOL	
Command_Forward_Reverse	0	BOOL	
Command_Clear_Faults	0	BOOL	

CompactLogix Example Ladder Logic Program Using a Drive Generic Profile for Logic Status/ Feedback



CompactLogix Example Ladder Logic Program Using a Drive Generic Profile for Logic Command/ Reference

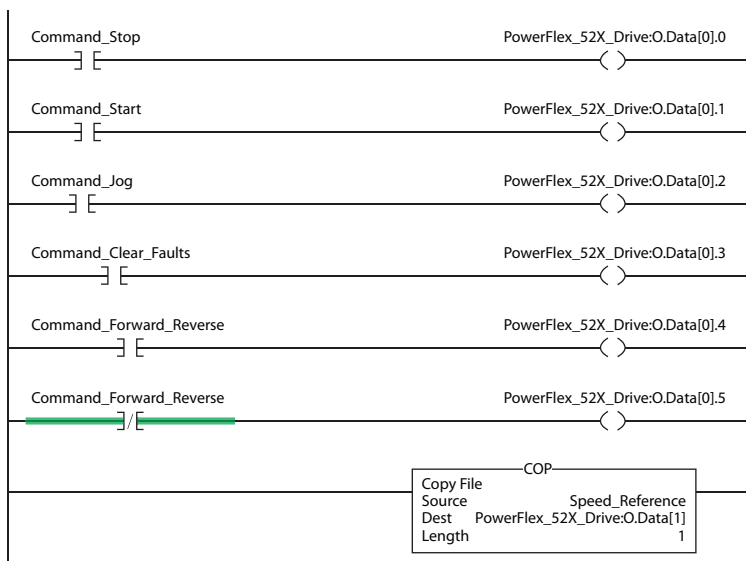

Notes:

Using Explicit Messaging

This chapter provides information and examples that explain how to use Explicit Messaging to configure and monitor the adapter and connected PowerFlex 520-series drive.

Topic	Page
About Explicit Messaging	73
Performing Explicit Messaging	74
CompactLogix Controller Examples	74



ATTENTION: Risk of injury or equipment damage exists. The examples in this publication are intended solely for purposes of example. There are many variables and requirements with any application. Rockwell Automation, Inc. does not assume responsibility or liability (to include intellectual property liability) for actual use of the examples shown in this publication.

ATTENTION: Risk of equipment damage exists. If Explicit Messages are programmed to write parameter data to Non-Volatile Storage (NVS) frequently, the NVS will quickly exceed its life cycle and cause the drive to malfunction. Do not create a program that frequently uses Explicit Messages to write parameter data to NVS. Datalinks do not write to NVS and should be used for frequently changed parameters.

ATTENTION: If you need to make frequent parameter changes using Explicit Messages, set *Host* parameter C121 [Comm Write Mode] to 1 "RAM only".

See [Using the I/O on page 63](#) for information about the I/O Image, using Logic Command/Status, Reference/Feedback, and Datalinks.

About Explicit Messaging

Explicit Messaging is used to transfer data that does not require continuous updates. With Explicit Messaging, you can configure and monitor a device's parameters on the network.

IMPORTANT When an explicit message is performed, by default no connection is made since it is an "unconnected" message. When timing of the message transaction is important, you can create a dedicated message connection between the controller and drive by checking the "Connected" box on the Communications tab message configuration screen during message setup. These message connections are in addition to the I/O connection. However, the trade off for more message connections is decreased network performance. If your application cannot tolerate this, do not check the "Connected" box, which is recommended.

IMPORTANT PowerFlex 520-series drives have explicit messaging limitations. See [Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives on page 74](#) for more information.

Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives


EtherNet/IP Object Class Code	Compatibility	Explicit Messaging Function
Parameter Object 0x0F	Yes	Single parameter reads/write
DPI Parameter Object 0x93	Yes	Single and scattered parameter reads/write

Performing Explicit Messaging

There are five basic events in the Explicit Messaging process. The details of each step will vary depending on the type of controller being used. See the documentation for your controller.

IMPORTANT There must be a request message and a response message for all Explicit Messages, whether you are reading or writing data.

Explicit Messaging Process

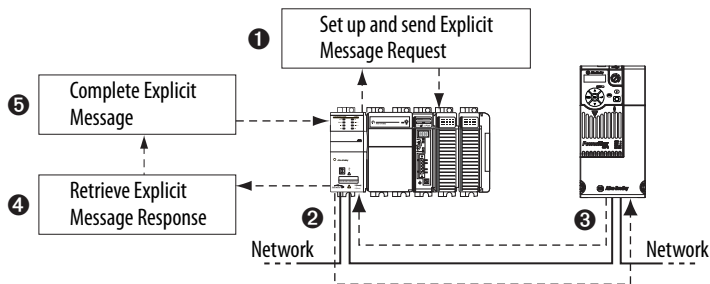

Event	Description
1	You format the required data and set up the ladder logic program to send an Explicit Message request to the scanner or bridge module (download).
2	The scanner or bridge module transmits the Explicit Message Request to the slave device over the network.
3	The slave device transmits the Explicit Message Response back to the scanner. The data is stored in the scanner buffer.
4	The controller retrieves the Explicit Message Response from the scanner's buffer (upload).
5	The Explicit Message is complete.

For information on the maximum number of Explicit Messages that can be executed at a time, see the documentation for the bridge or scanner and/or controller that is being used.

CompactLogix Controller Examples

TIP To display the Message Configuration screen in RSLogix 5000 or Logix Designer, add a message instruction (MSG), create a new tag for the message (Properties: Base tag type, MESSAGE data type, controller scope), and click the button in the message instruction.

For supported classes, instances, and attributes, see [EtherNet/IP Objects on page 129](#).

IMPORTANT The explicit messaging examples in this section can be performed using any software version of RSLogix 5000 or Logix Designer.

The read and write messaging examples in this section are for Device parameters which use Class Code 0x93.

The Message Configuration also has a supported Service Type of "Parameter Read" which is Class code 0x0F, Parameter Object.

Example Ladder Logic Program to Read a Single Parameter

A Get Attribute Single message is used to read a single parameter. This CompactLogix controller read message example reads the value of the 16-bit parameter **b003 [Output Current]** in a PowerFlex 525 drive.

Example Controller Tags to Read a Single Parameter


Operation	Controller Tags for Single Read Message	Data Types
XIC	Execute_Single_Read_Message	BOOL
MSG	Single_Read_Message	MESSAGE

Example Ladder Logic to Read a Single Parameter



Formatting a Message to Read a Single Parameter

Get Attribute Single Message Configuration Screens

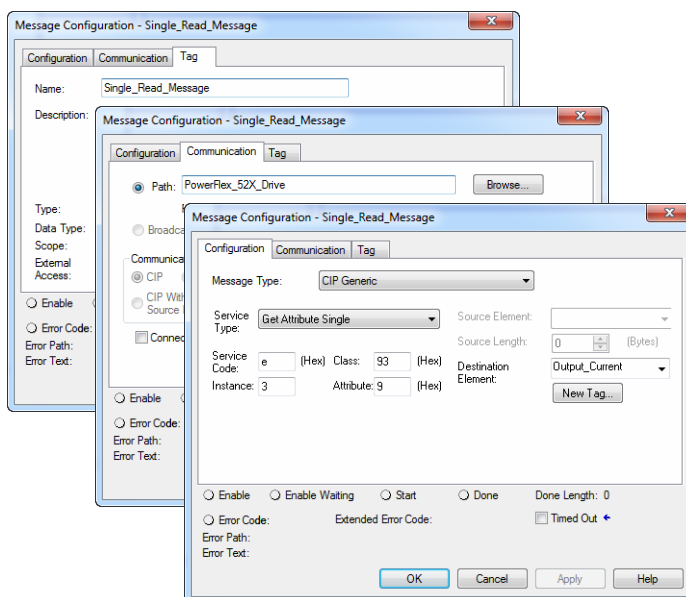

The following table identifies the data that is required in each box to configure a CompactLogix controller message to read a single parameter.

Configuration Tab	Example Value	Description
Message Type	CIP Generic	Used to access the DPI Parameter Object in the adapter.
Service Type ⁽¹⁾	Get Attribute Single	This service is used to read a parameter value.
Service Code ⁽¹⁾	e (Hex.)	Code for the requested service.
Class	93 ⁽³⁾	Class ID for the DPI Parameter Object.
Instance	3 (Dec.)	Instance number is the same as parameter number.
Attribute	9 (Hex.)	Attribute number for the Parameter Value attribute.
Source Element	–	Leave blank (not applicable).
Source Length	0 bytes	Number of bytes of service data to be sent in the message.
Destination	Output_Current ⁽⁴⁾	The tag where the data that is read is stored.
Communication Tab	Example Value	Description
Path ⁽²⁾	PowerFlex_52X_Drive	The path is the route that the message will follow.
Tag Tab	Example Value	Description
Name	Single_Read_Message	The name for the message.

- (1) The default setting for Service Type is “Custom,” enabling entry of a Service Code not available from the Service Type pull-down menu. When choosing a Service Type other than “Custom” from the pull-down menu, an appropriate Hex. value is automatically assigned to the Service Code box which is dimmed (unavailable).
- (2) Click **Browse** to find the path, or type in the name of the device listed in the I/O Configuration folder (for this example, PowerFlex_52X_Drive).
- (3) See [Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives on page 74](#) for limitations of PowerFlex 520-series drives when using DPI Parameter Object Class code 0x93 for explicit messaging.
- (4) In this example, Output Current is a 16-bit parameter requiring the Data Type field to be set to “INT” when creating the controller tag. See the drive documentation to determine the size of the parameter and its data type.

Example Ladder Logic Program to Write a Single Parameter

A Set Attribute Single message is used to write to a single parameter. This CompactLogix controller write message example writes a value to the 16-bit parameter **P041 [Accel Time 1]** in a PowerFlex 525 drive.

Example Controller Tags to Write a Single Parameter


Operation	Controller Tags for Single Write Message	Data Types
XIC	Execute_Single_Write_Message	BOOL
MSG	Single_Write_Message	MESSAGE

Example Ladder Logic to Write a Single Parameter



Formatting a Message to Write a Single Parameter

Set Attribute Single Message Configuration Screens

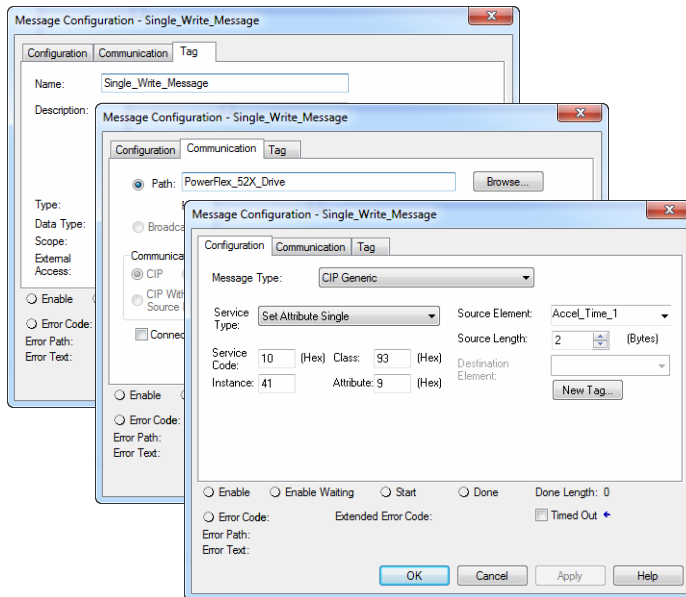

The following table identifies the data that is required in each box to configure a CompactLogix controller message to write a single parameter.

Configuration Tab	Example Value	Description
Message Type	CIP Generic	Used to access the DPI Parameter Object in the adapter.
Service Type ⁽¹⁾	Get Attribute Single	This service is used to read a parameter value.
Service Code ⁽¹⁾	10 (Hex.)	Code for the requested service.
Class	93 ⁽⁵⁾	Class ID for the DPI Parameter Object.
Instance ⁽²⁾	41 (Dec.)	Instance number is the same as parameter number.
Attribute ⁽³⁾	9	Attribute number for the Parameter Value attribute.
Source Element	Accel_Time_1 ⁽⁶⁾	Name of the tag for any service data to be sent from the scanner or bridge to the drive.
Source Length	2 bytes	Number of bytes of service data to be sent in the message.
Destination	—	Leave blank (not applicable).
Communication Tab	Example Value	Description
Path ⁽⁴⁾	PowerFlex_52X_Drive	The path is the route that the message will follow.
Tag Tab	Example Value	Description
Name	Single_Write_Message	The name for the message.

- (1) The default setting for Service Type is “Custom,” enabling entry of a Service Code not available from the Service Type pull-down menu. When choosing a Service Type other than “Custom” from the pull-down menu, an appropriate Hex. value is automatically assigned to the Service Code box which is dimmed (unavailable).
- (2) The instance is the parameter number in the drive.
- (3) Setting the Attribute value to “9” will write the parameter value to the drive’s Non-Volatile Storage (EEPROM) memory, so the parameter value will remain even after the drive is power cycled. **Important:** When set to “9,” be very cautious as the EEPROM may quickly exceed its life cycle and cause the drive to malfunction. **Important:** If you need to make frequent parameter changes using Explicit Messages, set parameter C121 [Comm Write Mode] to 1 “RAM only”.
- (4) Click **Browse** to find the path, or type in the name of the device listed in the I/O Configuration folder (for this example, PowerFlex_52X_Drive).
- (5) See [Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives on page 74](#) for limitations of PowerFlex 520-series drives when using DPI Parameter Object Class code 0x93 for explicit messaging.
- (6) In this example, Accel Time 1 is a 16-bit parameter requiring the Data Type field to be set to “INT” when creating the controller tag. Also, the Source Length field on the Message Configuration screen must correspond to the selected Data Type in bytes (for example, 2 bytes for an INT). See the drive documentation to determine the size of the parameter and its data type.

Explanation of Request and Response Data for Read/Write Multiple Messaging

The data structures in [Data Structures for Scattered Read Messages on page 79](#) and [Data Structures for Scattered Write Messages on page 80](#) use 16-bit words and can accommodate up to 64 parameters in a single message. In the Response Message, a parameter number with Bit 15 set indicates that the associated parameter value field contains an error code (parameter number in response data will be negative).

The PowerFlex 525 Adjustable Frequency AC Drive User Manual, publication [520-UM001](#) lists the data type for each parameter.

Data Structures for Scattered Read Messages

Request (Source Data)		Response (Destination Data)	
INT 0	Parameter Number	INT 0	Parameter Number
1	Pad	1	Parameter Value
2	Parameter Number	2	Parameter Number
3	Pad	3	Parameter Value
4	Parameter Number	4	Parameter Number
5	Pad	5	Parameter Value
6	Parameter Number	6	Parameter Number
7	Pad	7	Parameter Value
8	Parameter Number	8	Parameter Number
9	Pad	9	Parameter Value
10	Parameter Number	10	Parameter Number
11	Pad	11	Parameter Value
12	Parameter Number	12	Parameter Number
13	Pad	13	Parameter Value
14	Parameter Number	14	Parameter Number
15	Pad	15	Parameter Value
16	Parameter Number	16	Parameter Number
17	Pad	17	Parameter Value
18	Parameter Number	18	Parameter Number
19	Pad	19	Parameter Value
20	Parameter Number	20	Parameter Number
21	Pad	21	Parameter Value
22	Parameter Number	22	Parameter Number
23	Pad	23	Parameter Value
24	Parameter Number	24	Parameter Number
25	Pad	25	Parameter Value
26	Parameter Number	26	Parameter Number
27	Pad	27	Parameter Value
28	Parameter Number	28	Parameter Number
29	Pad	29	Parameter Value
30	Parameter Number	30	Parameter Number
31	Pad	31	Parameter Value
32	Parameter Number	32	Parameter Number
33	Pad	33	Parameter Value
34	Parameter Number	34	Parameter Number
35	Pad	35	Parameter Value
⋮	⋮	⋮	⋮
62	Parameter Number	62	Parameter Number
63	Pad	63	Parameter Value

Data Structures for Scattered Write Messages

Request (Source Data)		Response (Destination Data)	
INT 0	Parameter Number	INT 0	Parameter Number
1	Parameter Value	1	Pad
2	Parameter Number	2	Parameter Number
3	Parameter Value	3	Pad
4	Parameter Number	4	Parameter Number
5	Parameter Value	5	Pad
6	Parameter Number	6	Parameter Number
7	Parameter Value	7	Pad
8	Parameter Number	8	Parameter Number
9	Parameter Value	9	Pad
10	Parameter Number	10	Parameter Number
11	Parameter Value	11	Pad
12	Parameter Number	12	Parameter Number
13	Parameter Value	13	Pad
14	Parameter Number	14	Parameter Number
15	Parameter Value	15	Pad
16	Parameter Number	16	Parameter Number
17	Parameter Value	17	Pad
18	Parameter Number	18	Parameter Number
19	Parameter Value	19	Pad
20	Parameter Number	20	Parameter Number
21	Parameter Value	21	Pad
22	Parameter Number	22	Parameter Number
23	Parameter Value	23	Pad
24	Parameter Number	24	Parameter Number
25	Parameter Value	25	Pad
26	Parameter Number	26	Parameter Number
27	Parameter Value	27	Pad
28	Parameter Number	28	Parameter Number
29	Parameter Value	29	Pad
30	Parameter Number	30	Parameter Number
31	Parameter Value	31	Pad
32	Parameter Number	32	Parameter Number
33	Parameter Value	33	Pad
34	Parameter Number	34	Parameter Number
35	Parameter Value	35	Pad
⋮	⋮	⋮	⋮
62	Parameter Number	62	Parameter Number
63	Parameter Value	63	Pad

Example Ladder Logic Program to Read Multiple Parameters

A Scattered Read message is used to read the values of multiple parameters. This CompactLogix controller read message example reads the values of these five 16-bit parameters in a PowerFlex 525 drive:


- Host parameter **b001** [Output Freq]
- Host parameter **b003** [Output Current]
- Host parameter **b004** [Output Voltage]
- Host parameter **b005** [DC Bus Voltage]
- Host parameter **b017** [Output Power]

See [DPI Parameter Object on page 145](#) (Class code 0x93) for parameter numbering.

Example Controller Tags to Read Multiple Parameters


Operation	Controller Tags for Scattered Read Message	Data Types
XIC	Execute_Scattered_Read_Message	BOOL
MSG	Scattered_Read_Message	MESSAGE

Example Ladder Logic to Read Multiple Parameters



Formatting a Message to Read Multiple Parameters

Scattered Read Message Configuration Screens

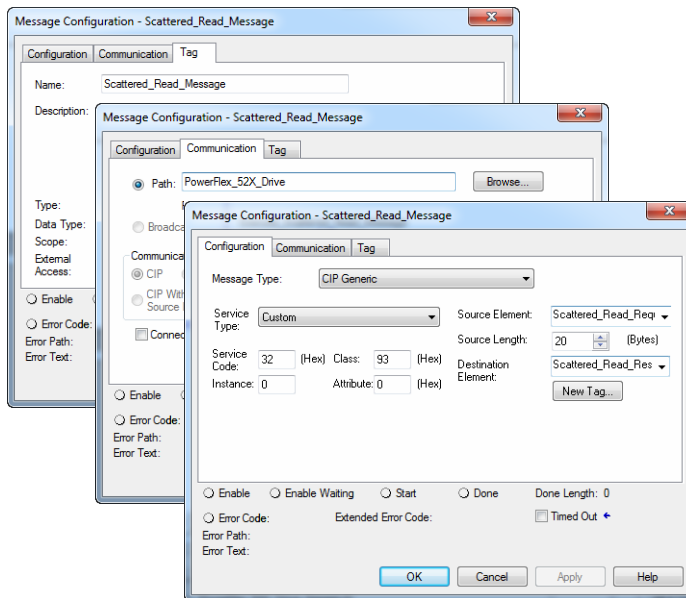

The following table identifies the data that is required in each box to configure a CompactLogix controller message to read multiple parameters.

Configuration Tab	Example Value	Description
Message Type	CIP Generic	Used to access the DPI Parameter Object in the adapter.
Service Type ⁽¹⁾	Custom	Required for scattered messages.
Service Code ⁽¹⁾	0x32 (Hex.)	Code for the requested service.
Class	93 ⁽³⁾	Class ID for the DPI Parameter Object.
Instance	0 (Dec.)	Required for scattered messages.
Attribute	0 (Hex.)	Required for scattered messages.
Source Element	Scattered_Read_Request ⁽⁴⁾	Name of the tag for any service data to be sent from the scanner or bridge to the drive.
Source Length	20 bytes ⁽⁴⁾	Number of bytes of service data to be sent in the message.
Destination	Scattered_Read_Response ⁽⁵⁾	The tag where the data that is read is stored.
Communication Tab	Example Value	Description
Path ⁽²⁾	PowerFlex_52X_Drive	The path is the route that the message will follow.
Tag Tab	Example Value	Description
Name	Scattered_Read_Message	The name for the message.

- (1) The default setting for Service Type is "Custom," enabling entry of a Service Code not available from the Service Type pull-down menu. When choosing a Service Type other than "Custom" from the pull-down menu, an appropriate Hex. value is automatically assigned to the Service Code box which is dimmed (unavailable).
- (2) Click **Browse** to find the path, or type in the name of the device listed in the I/O Configuration folder (for this example, PowerFlex_52X_Drive).
- (3) See [Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives on page 74](#) for limitations of PowerFlex 520-series drives when using DPI Parameter Object Class code 0x93 for explicit messaging.
- (4) In this example, we are reading five 16-bit parameters. Each parameter being read requires two contiguous INT registers. Therefore, a controller tag was created with its Data Type field set to "INT[10]." Also, the Source Length field on the Message Configuration screen must correspond to the selected Data Type in bytes (for this example, 20 bytes for an INT[10] array). Scattered read messages always assume that every parameter being read is a 16-bit parameter, regardless of its actual size. Maximum message length is 256 bytes which can read up to 64 parameters, regardless of their size.
- (5) The controller tag for "Scattered_Read_Response" must be the same size as the controller tag for "Scattered_Read_Request" (for this example, 20 bytes), but can be a different data type.

Example Scattered Read Request Data

In this CompactLogix controller message example, we use the data structure in Figure 101 in the source tag named Scattered Read Request to read these five 16-bit parameters in a PowerFlex 525 drive:

- Host parameter **b001 [Output Freq]**
- Host parameter **b003 [Output Current]**
- Host parameter **b004 [Output Voltage]**
- Host parameter **b005 [DC Bus Voltage]**
- Host parameter **b017 [Output Power]**

See [DPI Parameter Object on page 145](#) (Class code 0x93) for parameter numbering.

Example Scattered Read Request Data

Name	Value	Data Type	Description
Scattered_Read_Request	{...}	INT[10]	
+ Scattered_Read_Request[0]	1	INT	Parameter Number
+ Scattered_Read_Request[1]	0	INT	Pad
+ Scattered_Read_Request[2]	3	INT	Parameter Number
+ Scattered_Read_Request[3]	0	INT	Pad
+ Scattered_Read_Request[4]	4	INT	Parameter Number
+ Scattered_Read_Request[5]	0	INT	Pad
+ Scattered_Read_Request[6]	5	INT	Parameter Number
+ Scattered_Read_Request[7]	0	INT	Pad
+ Scattered_Read_Request[8]	17	INT	Parameter Number
+ Scattered_Read_Request[9]	0	INT	Pad

Example Scattered Read Response Data

The Scattered Read Request message reads the multiple parameters and returns their values to the destination tag (Scattered_Read_Response). [Example Scattered Read Response Converted Data on page 83](#) shows the parameter values.

Example Scattered Read Response Converted Data

Name	Value	Data Type	Description
Scattered_Read_Response	[...]	INT[10]	
+ Scattered_Read_Response[0]	1	INT	Parameter Number
+ Scattered_Read_Response[1]	5000	INT	Value
+ Scattered_Read_Response[2]	3	INT	Parameter Number
+ Scattered_Read_Response[3]	1	INT	Parameter Value
+ Scattered_Read_Response[4]	4	INT	Parameter Number
+ Scattered_Read_Response[5]	1796	INT	Parameter Value
+ Scattered_Read_Response[6]	5	INT	Parameter Number
+ Scattered_Read_Response[7]	349	INT	Parameter Value
+ Scattered_Read_Response[8]	17	INT	Parameter Number
+ Scattered_Read_Response[9]	0	INT	Parameter Value

In this message example, the parameters have the following values:

PowerFlex 525 Drive Parameters	Read Value
b001 [Output Freq]	50.00 Hz
b003 [Output Current]	0.01 Amp (No load)
b004 [Output Voltage]	179.6V AC
b005 [DC Bus Voltage]	349V DC
b017 [Output Power]	0 kW (No load)

Example Ladder Logic Program to Write Multiple Parameters

A Scattered Write message is used to write to multiple parameters. This CompactLogix controller write message example writes the following values to these five 16-bit parameters in a PowerFlex 525 drive:

PowerFlex 525 Drive Parameters	Write Value
A442 [Accel Time 2]	11.10 Sec
A443 [Decel time 2]	22.20 Sec
A415 [Preset Freq 5]	33.30 Hz
A416 [Preset Freq 6]	44.40 Hz
A417 [Preset Freq 7]	55.50 Hz

Example Controller Tags to Write Multiple Parameters

Operation	Controller Tags for Scattered Write Message	Data Types
XIC	Execute_Scattered_Write_Message	BOOL
MSG	Scattered_Write_Message	MESSAGE


Example Ladder Logic to Write Multiple Parameters



IMPORTANT This example scattered write message writes to NVS. Over time, continuous writes will exceed the EEPROM life cycle and cause the drive to malfunction. If you need to make frequent parameter changes using Explicit Messages, set *Host* parameter C121 [Comm Write Mode] to 1 “RAM only”.

Formatting a Message to Write Multiple Parameters

Scattered Write Multiple Message Configuration Screens

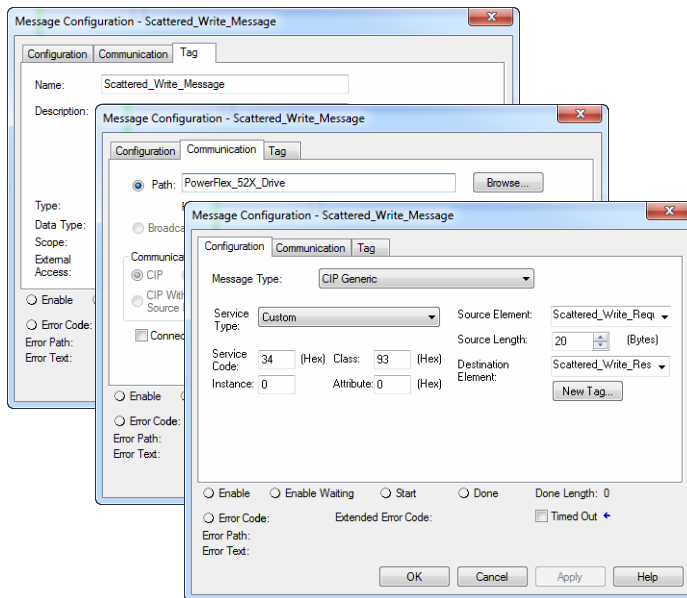

The following table identifies the data that is required in each box to configure a CompactLogix controller message to write multiple parameters.

Configuration Tab	Example Value	Description
Message Type	CIP Generic	Used to access the DPI Parameter Object in the adapter.
Service Type ⁽¹⁾	Custom	Required for scattered messages.
Service Code ⁽¹⁾	0x34 (Hex.)	Code for the requested service.
Class	93 ⁽⁴⁾	Class ID for the DPI Parameter Object.
Instance	0 (Dec.)	Required for scattered messages.
Attribute ⁽²⁾	0 (Hex.)	Required for scattered messages.
Source Element	Scattered_Write_Request ⁽⁵⁾	Name of the tag for any service data to be sent from the scanner or bridge to the drive.
Source Length	20 bytes ⁽⁵⁾	Number of bytes of service data to be sent in the message.
Destination	Scattered_Write_Response ⁽⁶⁾	The tag where the data that is read is stored.
Communication Tab	Example Value	Description
Path ⁽³⁾	PowerFlex_52X_Drive	The path is the route that the message will follow.
Tag Tab	Example Value	Description
Name	Scattered_Write_Message	The name for the message.

- (1) The default setting for Service Type is “Custom,” enabling entry of a Service Code not available from the Service Type pull-down menu. When choosing a Service Type other than “Custom” from the pull-down menu, an appropriate Hex. value is automatically assigned to the Service Code box which is dimmed (unavailable).
- (2) Scattered writes always write parameter values to the drive's Non-Volatile Storage (EEPROM) memory, so these values will remain even after the drive is power cycled. **Important:** Be very cautious as the EEPROM may quickly exceed its life cycle and cause the drive to malfunction. **Important:** If you need to make frequent parameter changes using Explicit Messages, set parameter C121 [Comm Write Mode] to 1 “RAM only”.
- (3) Click **Browse** to find the path, or type in the name of the device listed in the I/O Configuration folder (for this example, PowerFlex_52X_Drive).
- (4) See [Explicit Messaging Class Code Compatibility with PowerFlex 520-series Drives on page 74](#) for limitations of PowerFlex 520-series drives when using DPI Parameter Object Class code 0x93 for explicit messaging.
- (5) In this example, we are writing to five 16-bit parameters. Each parameter being written to requires two contiguous INT registers. Also, the Source Length field on the Message Configuration screen must correspond to the selected Data Type in bytes (for this example, 20 bytes for an array of ten INTs). Scattered write messages always assume that every parameter being written to is a 16-bit parameter, regardless of its actual size. Maximum message length is 256 bytes which can write up to 64 parameters, regardless of their size. For parameter numbering, see [DPI Parameter Object on page 145](#) (Class code 0x93).
- (6) The controller tag for “Scattered_Write_Response” must be the same size as the controller tag for “Scattered_Write_Request” (for this example, 20 bytes). An array of INTs is suggested to be able to read any error codes that are returned.

Example Scattered Write Request Data

In this message example, we use the source tag (Scattered_Write_Request) to write new values to these 16-bit parameters:

PowerFlex 525 Drive Parameters	Write Value
A442 [Accel Time 2]	11.10 Sec
A443 [Decel time 2]	22.20 Sec
A415 [Preset Freq 5]	33.30 Hz
A416 [Preset Freq 6]	44.40 Hz
A417 [Preset Freq 7]	55.50 Hz

[Example Scattered Write Request Converted Data on page 85](#) shows the parameter values.

Example Scattered Write Request Converted Data

Name	Value	Data Type	Description
- Scattered_Write_Request	{...}	INT[10]	
+ Scattered_Write_Request[0]	442	INT	Parameter Number
+ Scattered_Write_Request[1]	1110	INT	Parameter Value
+ Scattered_Write_Request[2]	443	INT	Parameter Number
+ Scattered_Write_Request[3]	2220	INT	Parameter Value
+ Scattered_Write_Request[4]	415	INT	Parameter Number
+ Scattered_Write_Request[5]	3330	INT	Parameter Value
+ Scattered_Write_Request[6]	416	INT	Parameter Number
+ Scattered_Write_Request[7]	4440	INT	Parameter Value
+ Scattered_Write_Request[8]	417	INT	Parameter Number
+ Scattered_Write_Request[9]	5550	INT	Parameter Value

Example Scattered Write Response Data

The results of the message appear in the destination tag named Scattered_Write_Response ([Example Scattered Write Response Data on page 86](#)). Values of “0” indicate no errors occurred.

Example Scattered Write Response Data

Name	Value	Data Type	Description
- Scattered_Write_Response	[. . .]	INT[10]	
+ Scattered_Write_Response[0]	442	INT	Parameter Number
+ Scattered_Write_Response[1]	0	INT	Error Code
+ Scattered_Write_Response[2]	443	INT	Parameter Number
+ Scattered_Write_Response[3]	0	INT	Error Code
+ Scattered_Write_Response[4]	415	INT	Parameter Number
+ Scattered_Write_Response[5]	0	INT	Error Code
+ Scattered_Write_Response[6]	416	INT	Parameter Number
+ Scattered_Write_Response[7]	0	INT	Error Code
+ Scattered_Write_Response[8]	417	INT	Parameter Number
+ Scattered_Write_Response[9]	0	INT	Error Code

Using Multi-Drive Mode

This chapter provides instructions on how to configure a CompactLogix controller to use the PowerFlex 520-series drive in Multi-drive mode.

Topic	Page
Single-Drive Mode vs. Multi-Drive Mode	87
System Wiring	89
Understanding the I/O Image	90
Configuring the RS-485 Network	91
Using Multi-Drive Add-On Profile	91
Multi-Drive Ladder Logic Program for Generic Profile	102
CompactLogix Controller Example Using Generic Profile	103
Multi-Drive Mode Explicit Messaging	111
Additional Information	112



ATTENTION: On PowerFlex 525 drives, support for multi-drive mode using the 25-COMM-E2P Dual-Port adapter is only available on firmware revision **1.004 and later**.




ATTENTION: Risk of injury or equipment damage exists. The examples in this publication are intended solely for purposes of example. There are many variables and requirements with any application. Rockwell Automation, Inc. does not assume responsibility or liability (to include intellectual property liability) for actual use of the examples shown in this publication.

Single-Drive Mode vs. Multi-Drive Mode

Single-drive mode is a typical network installation, where a single EtherNet/IP node consists of a single drive with an EtherNet/IP adapter.


Single-Drive Mode Example for Network

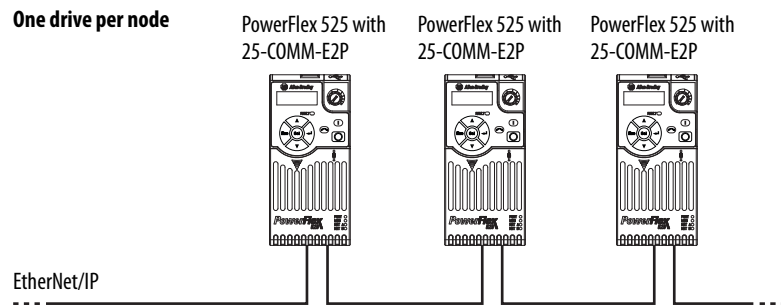

Multi-drive mode is an alternative to the typical network installation, where a single EtherNet/IP node can consist of one to five drives (see [Multi-Drive Mode Example for Network on page 88](#)). The first drive must be a PowerFlex 520-series drive. The remaining drives can be any PowerFlex drive which supports Multi-drive mode.

IMPORTANT For the examples in the chapter, we will use the PowerFlex 525 as a master drive with four daisy-chained PowerFlex 4M drives.

Multi-Drive Mode Example for Network

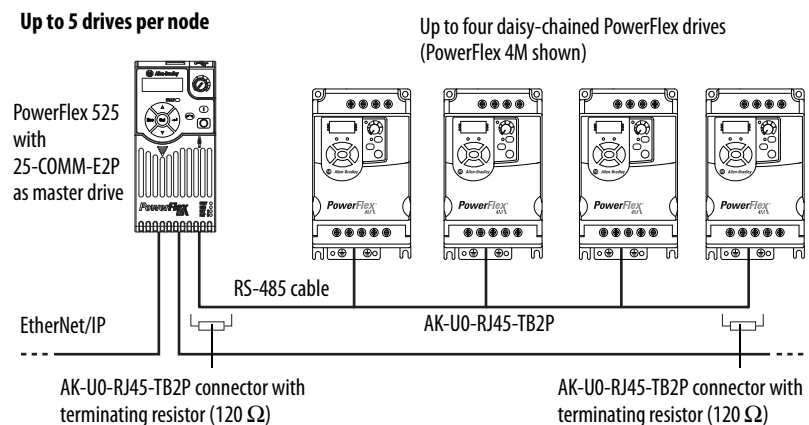

Benefits of Multi-drive mode include:

- Lower hardware costs. No need to purchase additional communication adapters for daisy-chained drives.
- Reduces the network node count. For example, in Single-drive mode 30 drives would consume 30 nodes. In Multi-drive mode, 30 drives can be connected in 6 nodes.
- Controller can control, monitor, and read/write parameters for all five drives.

The trade-offs of Multi-drive mode include:

- If the PowerFlex 520-series drive with Dual-port EtherNet/IP adapter is powered down, then communications with the daisy-chained drives is disrupted and the drives will take the appropriate communications loss action set in each drive.

- Communications throughput to the daisy-chained drives will be slower than if each drive was a separate node on EtherNet/IP (Single-drive mode). This is because the Dual-port EtherNet/IP adapter must take the EtherNet/IP data for the other drives and sequentially send the respective data to each drive over RS-485. The approximate additional throughput time for Logic Command/Reference to be transmitted and received by each drive is:

Drive	Additional Throughput Time versus Single-Drive Mode
PowerFlex 525	0 ms
PowerFlex 525 plus 1 drive	+24 ms
PowerFlex 525 plus 2 drives	+48 ms
PowerFlex 525 plus 3 drives	+72 ms
PowerFlex 525 plus 4 drives	+96 ms


- Since the RS-485 ports are used for daisy-chaining the drives, there is no connection for a peripheral device such as a HIM or USB converter module (1203-USB). DSI Splitter cables cannot be used to add a second connection for a peripheral device.

System Wiring

To daisy-chain the drives to the PowerFlex 525, the AK-U0-RJ45-TB2P terminal block connector can be used for easy installation.



The wiring diagram for using AK-U0-RJ45-TB2P terminal block connectors is shown below.

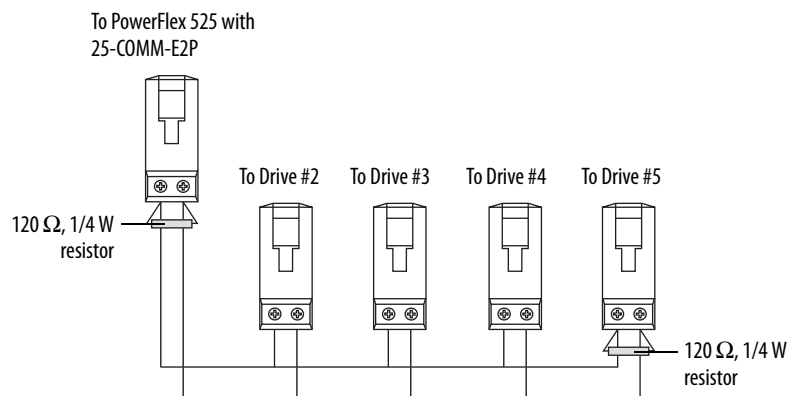

The AK-U0-RJ45-TB2P comes with (5) terminal block connectors and (2) terminating resistors.


Understanding the I/O Image

The terms *input* and *output* are defined from the scanner's point of view. Therefore, Output I/O is data that is output from the scanner and consumed by the EtherNet/IP adapter. Input I/O is status data that is produced by the adapter and consumed as input by the scanner.

The I/O image table will vary based on the configuration of *Host* parameters **C169 [MultiDrv Sel]** and **C175 [DSI I/O Cfg]**. The image table always uses consecutive words starting at word 0.

The [Multi-Drive Example of I/O Image on page 90](#) is an illustration of the Multi-drive I/O image with 16-bit words.

Multi-Drive Example of I/O Image

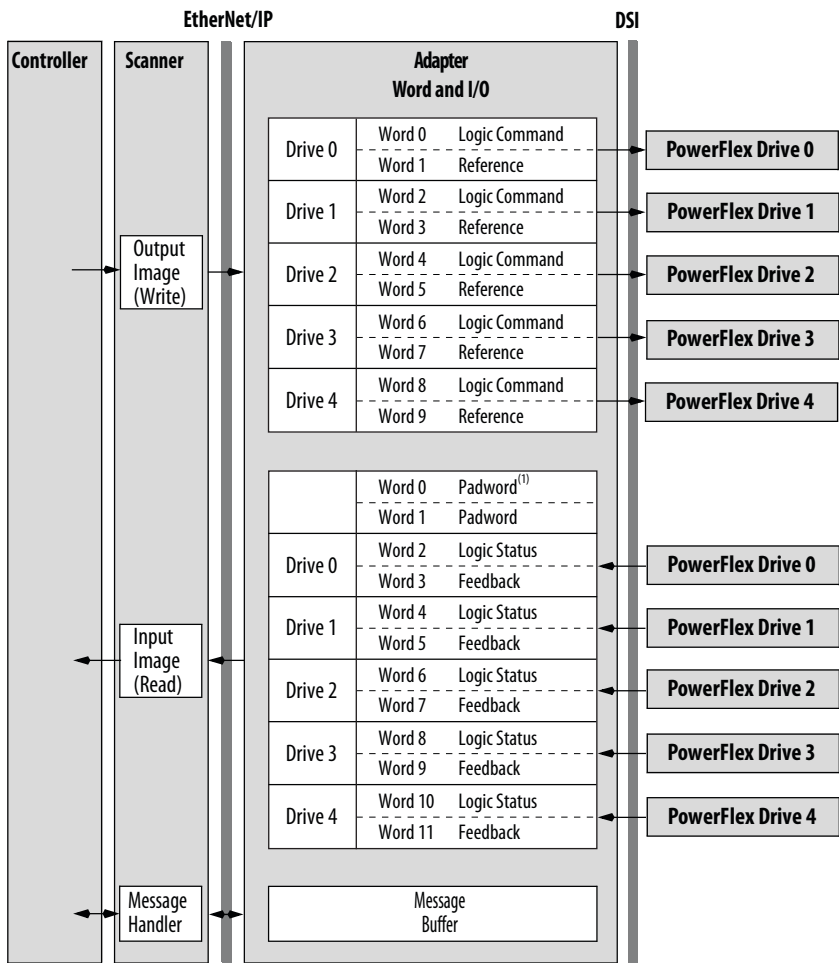

(1) Padwords only apply when using the generic profile. Padwords are not used when using the full-featured drive Add-On-Profile.

Note: If a daisy-chained drive is disconnected from the RS-485 (DSI) network or powered down, the Logic Status and Feedback words for the affected drive will be set to 0.

Configuring the RS-485 Network

The following parameters must be set in the daisy-chained PowerFlex 4M drives and **not** in the master drive:

Parameter	Value
P106 [Start Source]	5 "Comm Port"
P108 [Speed Reference]	5 "Comm Port"
C302 [Comm Data Rate]	4 "19.2K"
C303 [Comm Node Addr]	1...247 (must be unique)
C306 [Comm Format]	0 "RTU-8-N-1"

Note: The RS-485 Multi-drive network is fixed at 19.2K baud rate, 8 data bits, no parity, and 1 stop bit.

IMPORTANT Parameters [Comm Loss Action] and [Comm Loss Time] in the daisy-chained drives are still used in Multi-drive mode. If the RS-485 cable is disconnected or broken, the disconnected drive(s) will take the corresponding Comm Loss Action(s). On the EtherNet/ IP side, *Device* parameters 23 [Comm Flt Action] and 24 [Idle Flt Action] determine the action taken for ALL of the drives on the Multi-drive node.

The following Multi-drive parameters must be set in the master PowerFlex 525 drive:

Parameter	Value
P046 [Start Source 1]	4 "Network Opt"
P047 [Speed Reference1]	4 "Network Opt"
C169 [MultiDrv Sel]	1 "Network Opt" Note: Drive must be power cycled after setting this parameter.
C171 [Drv 1 Addr]	2
C172 [Drv 2 Addr]	3
C173 [Drv 3 Addr]	4
C174 [Drv 4 Addr]	5 Note: Drive must be power cycled after setting this parameter.
C175 [DSI I/O Cfg]	0 "Drive 0" 1 "Drive 0-1" 2 "Drive 0-2" 3 "Drive 0-3" 4 "Drive 0-4" Note: Drive must be power cycled after setting this parameter.

IMPORTANT Parameters can be set using a DSI peripheral (22-HIM-A3 or 22-HIM-C2S) only when *Host* parameter C169 [MultiDrv Sel] is set to 0 "Disabled".

Using Multi-Drive Add-On Profile


Before using the Multi-drive Add-On Profile, ensure that you have completed the following steps:


- The master and daisy-chained drives are powered, networked, and configured. See [System Wiring on page 89](#).

- The RS-485 network is configured. See [Configuring the RS-485 Network on page 91](#).
- The controller has been added to the I/O configuration. See [Adding the Controller to the I/O Configuration on page 40](#).

Adding the Drive to the I/O Configuration


To transmit data between the controller and the drive, you must add the drive as a child device to the parent controller. In this example, RSLogix 5000 software version 20 is used with drive Add-On Profile version 1.02 or later.

1. In the treeview, right-click on the  Ethernet icon and select **New Module...** to display the Select Module window. Expand the Drives group to display all of the available drives with their communication adapters.

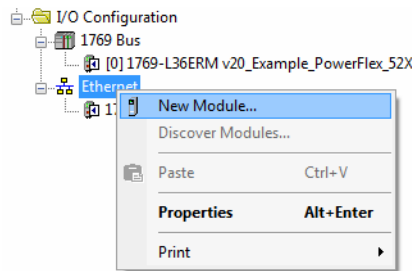


TIP If the PowerFlex drive is not shown, go to www.ab.com/support/abdrives/webupdate and download the latest drive Add-On Profile.

2. In the Select Module Type window, select the drive and its connected adapter from the list. For this example, we selected “Multi-Drive-25-COMM-E2P.” Then click **Create**. The drive’s New Module window appears.

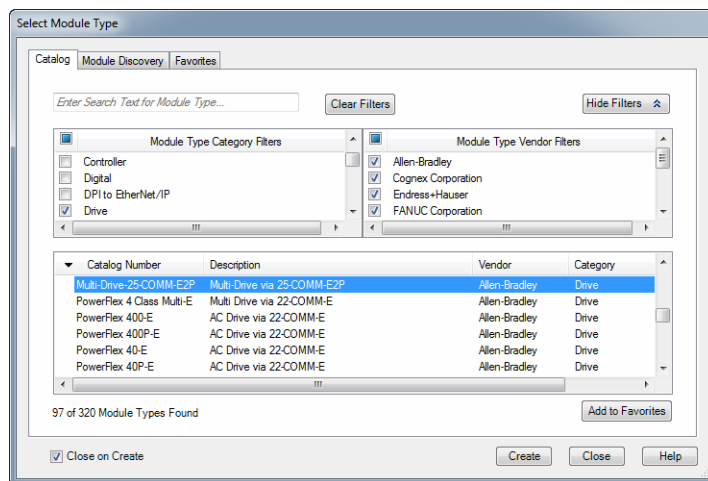


3. On the General tab, edit the following data about the drive:

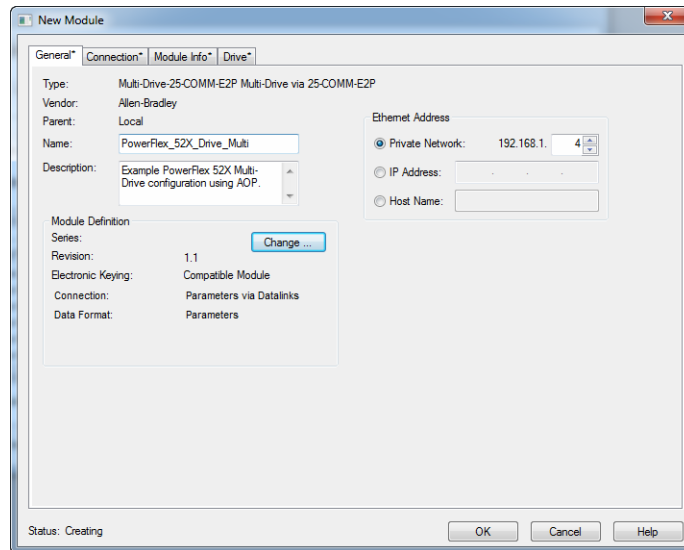


Box	Setting
Name	A name to identify the drive.
Description	Optional – description of the drive/adaptor.
IP Address	The IP address of the adapter.

4. On the New Module window in the Module Definition section, click **Change...** to launch the Module Definition window and begin the drive configuration process.

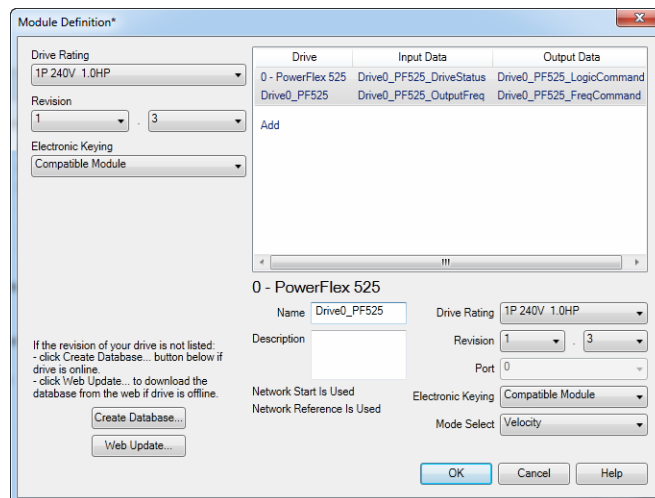

- In the Module Definition window, edit the following information for the master drive:

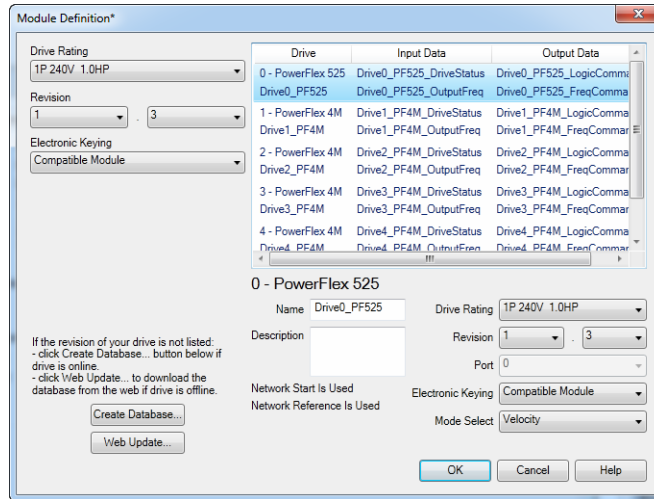


TIP You may create a database from a network accessible drive using the **Create Database...** button (Recommended).

Box	Setting
Drive Rating	The voltage and current rating of the drive. If the drive rating is not listed, the drive database is not installed on your computer. To get the drive rating, use the Create Database... , or Web Update... button described above.
Revision	The major and minor revision of the firmware (database) in the drive. If the drive's major and minor revision is not available, the drive database is not installed on your computer. To get the correct database revision, use one of the following buttons at the bottom left of the Module Definition window: <ul style="list-style-type: none"> Create Database... Creates a database from an online network multi-drive. Clicking this button displays an RSLinx RSWho window. Browse to the online drive (PowerFlex 525), select it, and click OK. The database will be uploaded and stored on the computer. Thereafter, close the Module Definition window and then re-open it to display the new revision. Web Update... When a drive is not available online, opens the Allen-Bradley Drives Web Updates web site to download a specific database file. After downloading the file, close the Module Definition window and then re-open it to display the new revision.
Electronic Keying	Compatible Module. The "Compatible Module" setting for Electronic Keying ensures the physical module is consistent with the software configuration before the controller and bridge make a connection. Therefore, ensure that you have set the correct revision in this window. See the online Help for additional information on this and other Electronic Keying settings. If keying is not required, select "Disable Keying." Drives do not require keying, and so "Disable Keying" is recommended.

On the Module Definition window, notice that the automatically-assigned controller tags Drive Status, Feedback, Logic Command, and Reference are always used.

IMPORTANT The Velocity/Positioning mode select is in the lower right of the window when the master PowerFlex 525 drive is selected.

6. Click **Add** to select and define each daisy-chained drive:

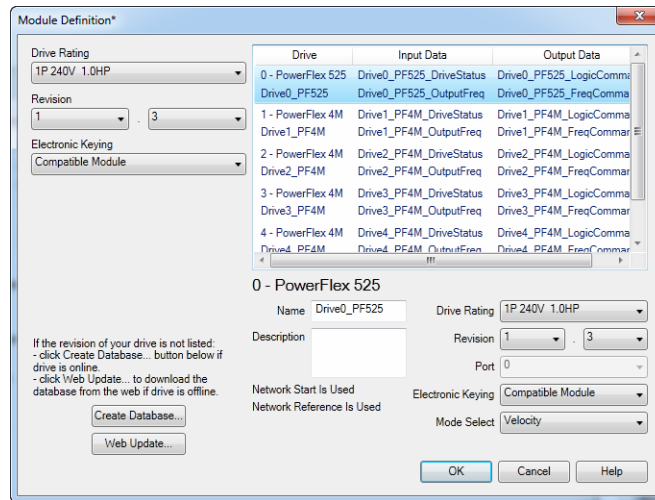


TIP You may create a database from a network accessible drive using the **Create Database...** button (Recommended).

Box	Setting
Name	A name to identify an individual drive.
Description	Optional – description of an individual drive.
Drive Rating	The voltage and current rating of the drive. If the drive rating is not listed, the drive database is not installed on your computer. To get the drive rating, use the Create Database... , or Web Update... button described above.
Revision	The major and minor revision of the firmware (database) in the drive. If the drive's major and minor revision is not available, the drive database is not installed on your computer. To get the correct database revision, use one of the following buttons at the bottom left of the Module Definition window: <ul style="list-style-type: none"> • Create Database... Creates a database from an online network multi-drive. Clicking this button displays an RSLinx RSWho window. Browse to the online drive (PowerFlex 525), select it, and click OK. The database will be uploaded and stored on the computer. Thereafter, close the Module Definition window and then re-open it to display the new revision. • Web Update... When a drive is not available online, opens the Allen-Bradley Drives Web Updates web site to download a specific database file. After downloading the file, close the Module Definition window and then re-open it to display the new revision.
Port	Port assignment for each drive
Electronic Keying	Compatible Module. The "Compatible Module" setting for Electronic Keying ensures the physical module is consistent with the software configuration before the controller and bridge make a connection. Therefore, ensure that you have set the correct revision in this window. See the online Help for additional information on this and other Electronic Keying settings. If keying is not required, select "Disable Keying." Drives do not require keying, and so "Disable Keying" is recommended.
Mode Select	Sets the I/O configuration to either Velocity or Position mode.

7. Click **OK** on the Module Definition window to save the drive configuration and close the window. The drive's New Module window reappears.


8. On the New Module window, click the Connection tab.

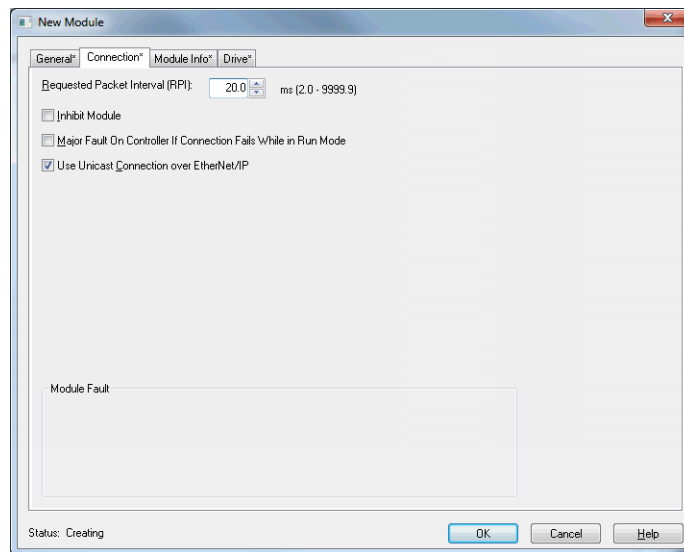

9. In the “Requested Packet Interval (RPI)” box, set the value to 2.0 milliseconds or greater. This value determines the maximum interval that a controller should use to move data to and from the adapter. To conserve bandwidth, use higher values for communicating with low priority devices.

The “Inhibit Module” box, when checked, inhibits the module from communicating with the RSLogix 5000 or Logix Designer project. When the “Major Fault On...” box is checked, a major controller fault will occur when the module’s connection fails while the controller is in the Run Mode. For this example, leave the “Inhibit Module” and “Major Fault On...” boxes unchecked.

The “Use Unicast Connection over EtherNet/IP” box is checked by default. This is the recommended setting. When this box is unchecked, the adapter will send multicast messages on the I/O connection. In this case, the adapter and the EtherNet/IP bridge must be on the same subnet.

10. Click **OK** on the New Module window.
 The new node (“PowerFlex 525-E2P-Multi PowerFlex_52X_Drive-Multi” in this example) now appears under the  Ethernet icon in the I/O Configuration folder. If you double-click on the Input Controller Tag (see [Controller Input Tags on page 97](#)) and Output Controller Tag (see [Controller Output Tags on page 98](#)), you will see that module-defined data types and tags have been automatically created. Note that all tag names are defined for each drive. After you save and download the configuration, these tags allow you to access the Input and Output data of the drives using the controller’s ladder logic.

Controller Input Tags

Name	Value	Data Type	Description
PowerFlex_52X_Drive_Multi	{...}	AB:PowerFlex5...	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_DriveStatus	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_Ready	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_CommandDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_ActualDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_Accelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_Decelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_Faulted	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_AtReference	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_CommFreqCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_CommLogicCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_ParmsLocked	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_DigIn1Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_DigIn2Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_DigIn3Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_DigIn4Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive0_PFS25_OutputFreq	0	INT	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_DriveStatus	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Ready	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_CommandDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_ActualDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Accelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Decelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Alarm	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_Faulted	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_AtReference	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_CommFreqCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_CommLogicCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_ParmsLocked	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_DigIn1Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_DigIn2Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive1_PF4M_OutputFreq	0	INT	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_DriveStatus	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Ready	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_CommandDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_ActualDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Accelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Decelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Alarm	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_Faulted	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_AtReference	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_CommFreqCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_CommLogicCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_ParmsLocked	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_DigIn1Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_DigIn2Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive2_PF4M_OutputFreq	0	INT	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_DriveStatus	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Ready	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_CommandDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_ActualDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Accelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Decelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Alarm	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_Faulted	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_AtReference	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_CommFreqCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_CommLogicCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_ParmsLocked	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_DigIn1Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_DigIn2Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive3_PF4M_OutputFreq	0	INT	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_DriveStatus	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Ready	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_CommandDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_ActualDir	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Accelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Decelerating	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Alarm	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_Faulted	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_AtReference	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_CommFreqCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_CommLogicCnt	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_ParmsLocked	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_DigIn1Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_DigIn2Active	0	BOOL	
PowerFlex_52X_Drive_Multi.Drive4_PF4M_OutputFreq	0	INT	


Controller Output Tags

Name	Value	Data Type	Description
PowerFlex_52X_Drive_Multi.O	{...}	AB:PowerFlex5...	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_LogicCommand	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_Stop	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_Start	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_Jog	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_ClearFaults	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_Forward	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_Reverse	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_ForceKeypadCtrl	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_MOPIncrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_AccelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_AccelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_DecelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_DecelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_FreqSel01	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_FreqSel02	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_FreqSel03	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_MOPDecrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive0_PFF525_FreqCommand	0	INT	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_LogicCommand	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_Stop	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_Start	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_Jog	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_ClearFaults	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_Forward	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_Reverse	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_RelayOutControl	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_MOPIncrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_AccelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_AccelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_DecelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_DecelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_FreqSel01	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_FreqSel02	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_FreqSel03	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_MOPDecrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive1_PFF4M_FreqCommand	0	INT	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_LogicCommand	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_Stop	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_Start	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_Jog	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_ClearFaults	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_Forward	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_Reverse	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_RelayOutControl	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_MOPIncrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_AccelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_AccelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_DecelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_DecelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_FreqSel01	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_FreqSel02	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_FreqSel03	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_MOPDecrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive2_PFF4M_FreqCommand	0	INT	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_LogicCommand	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_Stop	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_Start	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_Jog	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_ClearFaults	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_Forward	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_Reverse	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_RelayOutControl	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_MOPIncrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_AccelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_AccelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_DecelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_DecelRate2	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_FreqSel01	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_FreqSel02	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_FreqSel03	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_MOPDecrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive3_PFF4M_FreqCommand	0	INT	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_LogicCommand	2#0000_00...	INT	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_Stop	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_Start	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_Jog	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_ClearFaults	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_Forward	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_Reverse	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_RelayOutControl	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_MOPIncrement	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_AccelRate1	0	BOOL	
PowerFlex_52X_Drive_Multi.O.Drive4_PFF4M_AccelRate2	0	BOOL	


Saving the I/O Configuration to the Controller

After adding the controller and drives to the I/O configuration, you must download the configuration to the controller. You should also save the configuration to a file on your computer.

1. In the RSLogix 5000 or Logix Designer window, select **Communications > Download**. The Download dialog box appears.

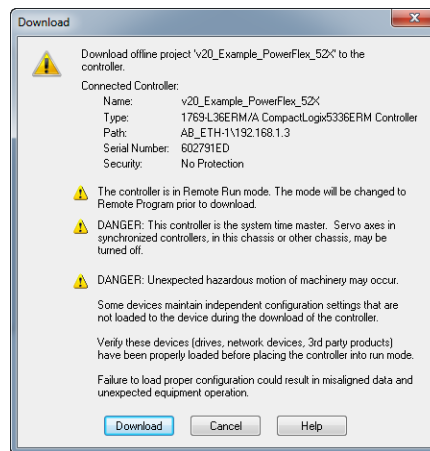


TIP If a message box reports that RSLogix 5000 or Logix Designer is unable to go online, select **Communications > Who Active** to find your controller in the Who Active screen. After finding and selecting the controller, click **Set Project Path** to establish the path. If your controller does not appear, you need to add or configure the EtherNet/IP driver in RSLinx. See the RSLinx online help.

2. Click **Download** to download the configuration to the controller. When the download is successfully completed, RSLogix 5000 or Logix Designer goes into Online Mode and the I/O Not Responding box in the upper-left of the window should be flashing green. Also, a yellow warning symbol  should be displayed on the I/O Configuration folder in the treeview and on the drive profile.
3. If the controller was in Run Mode before clicking **Download**, RSLogix 5000 or Logix Designer prompts you to change the controller mode back to Remote Run. In this case, choose the appropriate mode for your application. If the controller was in Program Mode before clicking **Download**, this prompt will not appear.
4. Select **File > Save**. If this is the first time you saved the project, the Save As dialog box appears. Navigate to a folder, type a file name, and click **Save** to save the configuration to a file on your computer.
5. To ensure that the present project configuration values are saved, RSLogix 5000 or Logix Designer prompts you to upload them. Click **Yes** to upload and save them.


Correlating the Drive with the Controller

You must now correlate the drive settings to the RSLogix 5000 or Logix Designer project I/O settings so that they match. This requires loading the project I/O settings into the drive.

1. In the treeview under I/O Configuration, right-click on the drive profile (for this example “Multi-Drive-25-COMM-E2P PowerFlex_52X_Drive_Multi”) and select Properties.



2. Select the Drive tab to begin the correlation process.

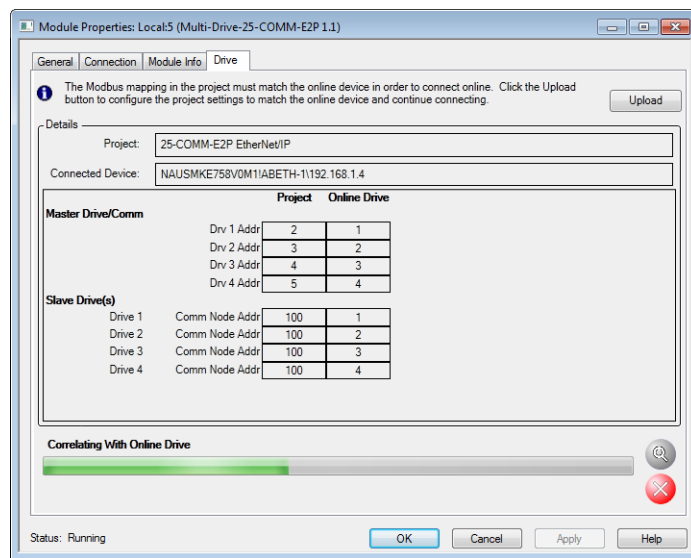


After the drive configuration data has been verified, the Drive tab will display a request to synchronize the configuration with the drive. Click **Upload**. The correlation process will continue. This may take several minutes depending on the number and type of daisy-chained drives.


If the [Differences Found Screen on page 101](#) appears—which is typical, click **Download**. This will download the project settings from the controller to the drives. If **Upload** is clicked, the drive settings are uploaded to the controller.

TIP On subsequent connections to the drive (after the initial download), select **Upload**.

Differences Found Screen

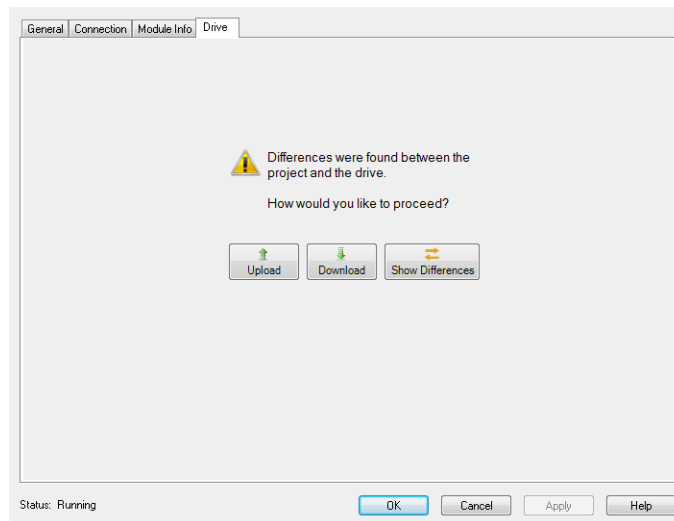

3. The Drive tab displays a screen of the drive.

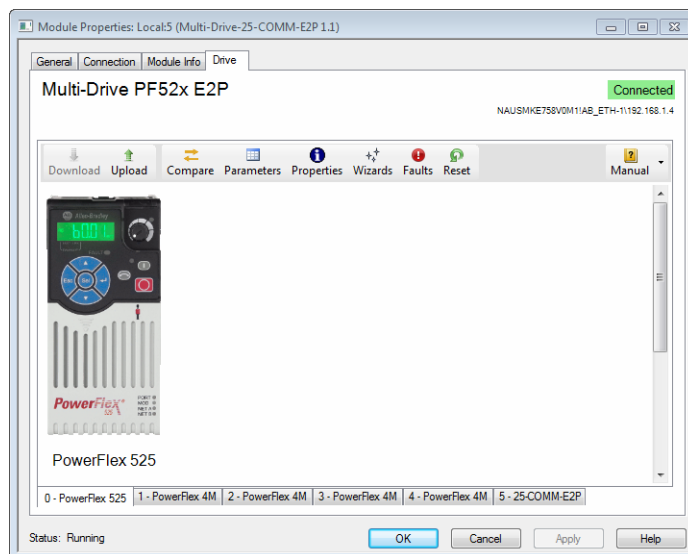

If the download is successful, the Drive tab will show a green **Connected** indicator in the upper right corner of the window. This tab is extremely useful for configuring drive parameters, accessing start-up wizards and troubleshooting. Note that there is a tab for the master as well as each of the daisy-chained drives.

TIP You may now use the automatically generated tags to create your controller logic.

4. Click **OK** to close the Module Properties window for the drive.

Multi-Drive Ladder Logic Program for Generic Profile

The following is an example of the ladder logic program for the Generic Profile and demonstrates using Multi-drive mode with five drives. See [Multi-Drive Mode Example for Network on page 88](#) for an example of a system layout diagram. If you have not set-up your drive using the Generic Profile, see [Using the RSLogix 5000 or Logix Designer Generic Profile on page 56](#) for instructions.

See [Multi-Drive Example of I/O Image on page 90](#) for the number of 16-bit input and output words to use for your application. In this example, the number of input words is 12 and the number of output words is 10.

Function of the Example Program

The example program provided is for the CompactLogix family of controllers, but other Logix-based controllers can also be used similarly. This example program enables you to:

- View status information from the drives such as Ready, Fault, At Speed, and Feedback.
- Control the drives using various Logic Command bits (Stop, Start, etc.) and Reference.
- Perform a single parameter read and write for each drive. The example uses PowerFlex 4M drive parameter **P109 [Accel Time 1]** for both so you can see (read) the change after a write is performed.

The same programming approach can be used with the tags generated by the Multi-drive Add-On Profile. Note that the tags used in this example will be different from those created by the Multi-drive Add-On Profile.

Drive 0 (PowerFlex 525) Settings for the Example Program

- Parameter **C169 [MultiDrv Sel]** is set to 1 “Network Opt”.
- The following parameters are set:

Parameter	Value	Description
P046 [Start Source1]	4	“Network Opt”
P047 [Speed Reference1]	4	“Network Opt”
C175 [DSI I/O Cfg]	4	“Drive 0-4” (5 drives on 1 node)
C171 [Drv 1 Addr] ⁽¹⁾	1	Modbus address of Drive 1
C172 [Drv 2 Addr]	2	Modbus address of Drive 2
C173 [Drv 3 Addr]	3	Modbus address of Drive 3
C174 [Drv 4 Addr]	4	Modbus address of Drive 4

(1) The settings for these parameters must match the node address settings in the respective daisy-chained drives.

Drive 1...4 (PowerFlex 4M) Settings for the Example Program (in all drives)

The following parameters are set:

Parameter	Value			
	Drive 1	Drive 2	Drive 3	Drive 4
P106 [Start Source]	5	5	5	5
P108 [Speed Reference]	5	5	5	5
C302 [Comm Data Rate]	4	4	4	4
C303 [Comm Node Addr]	1	2	3	4
C304 [Comm Loss Action]	0	0	0	0
C305 [Comm Loss Time]	5.0 s	5.0 s	5.0 s	5.0 s
C306 [Comm Format]	0	0	0	0

CompactLogix Controller Example Using Generic Profile

The following common Tags are used:

Tag Name	Type	Description
PowerFlex_52X_Drive_Multi_Generic:0	AB:ETHERNET_MODULE_ :xxx:0:0	Generic EtherNet/IP module I/O tags and configuration
PowerFlex_52X_Drive_Multi_Generic:I	AB:ETHERNET_MODULE_ :xxx:I:0	
PowerFlex_52X_Drive_Multi_Generic:C	AB:ETHERNET_MODULE_ :C:0	
Accel_Time_1	INT	–
Drive_Input_Image	INT [12]	Input Image Table
Drive_Output_Image	INT [10]	Output Image Table

The following Tags are used for Drive 0:


Tag Name	Type	Description
Drive_0_Command_Stop	BOOL	Logic Command bit 0 (STOP)
Drive_0_Command_Start	BOOL	Logic Command bit 1 (START)
Drive_0_Command_Jog	BOOL	Logic Command bit 2 (JOG)
Drive_0_Command_Clear_Faults	BOOL	Logic Command bit 3 (CLEAR FAULTS)
Drive_0_Command_Forward	BOOL	Logic Command bit 4 (FORWARD)
Drive_0_Reference	INT	Speed Reference
Drive_0_Status_Ready	BOOL	Logic Status bit 0 (READY)
Drive_0_Status_Active	BOOL	Logic Status bit 1 (ACTIVE)
Drive_0_Status_Forward	BOOL	Logic Status bit 2 (FORWARD)
Drive_0_Status_Faulted	BOOL	Logic Status bit 7 (FAULT)
Drive_0_Status_At_Reference	BOOL	Logic Status bit 8 (AT SPEED)
Drive_0_Feedback	INT	Speed Feedback
Perform_Parameter_Read_0	BOOL	Initiates the parameter read
Parameter_RD_Value_0	INT	Read value of the parameter
Parameter_RD_Message_0	MESSAGE	Get_Attribute_Single (Read)
Perform_Parameter_Write_0	BOOL	Initiates the parameter value
Parameter_WR_Value_0	INT	Write value to the parameter
Parameter_WR_Message_0	MESSAGE	Set_Attribute_Single (Write)

The same type of Tags are also used for Drive 1 through Drive 4.

Main Routine

The Main Routine reads the network Input Image from the scanner, calls the various drive control subroutines, and writes the network Output Image to the scanner. See [Main Routine on page 104](#).

Main Routine

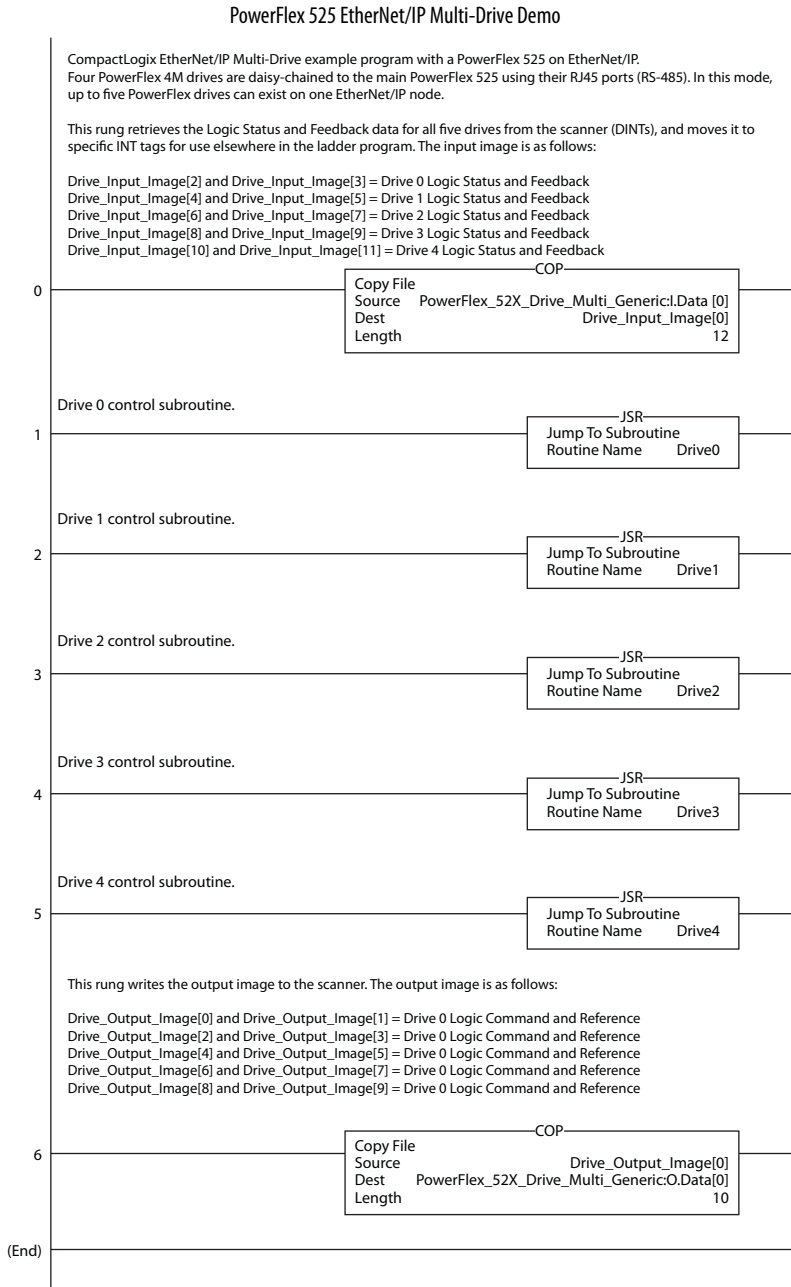


Drive 0...4 Control Routines


The following Drive Control routines provide status information (Logic Status and Feedback), control (Logic Command and Reference), and parameter read/write for each of the respective drives:

Control Routine	See page...
Drive 0	106
Drive 1	107
Drive 2	108
Drive 3	109
Drive 4	110


Drive 0 Control Routine

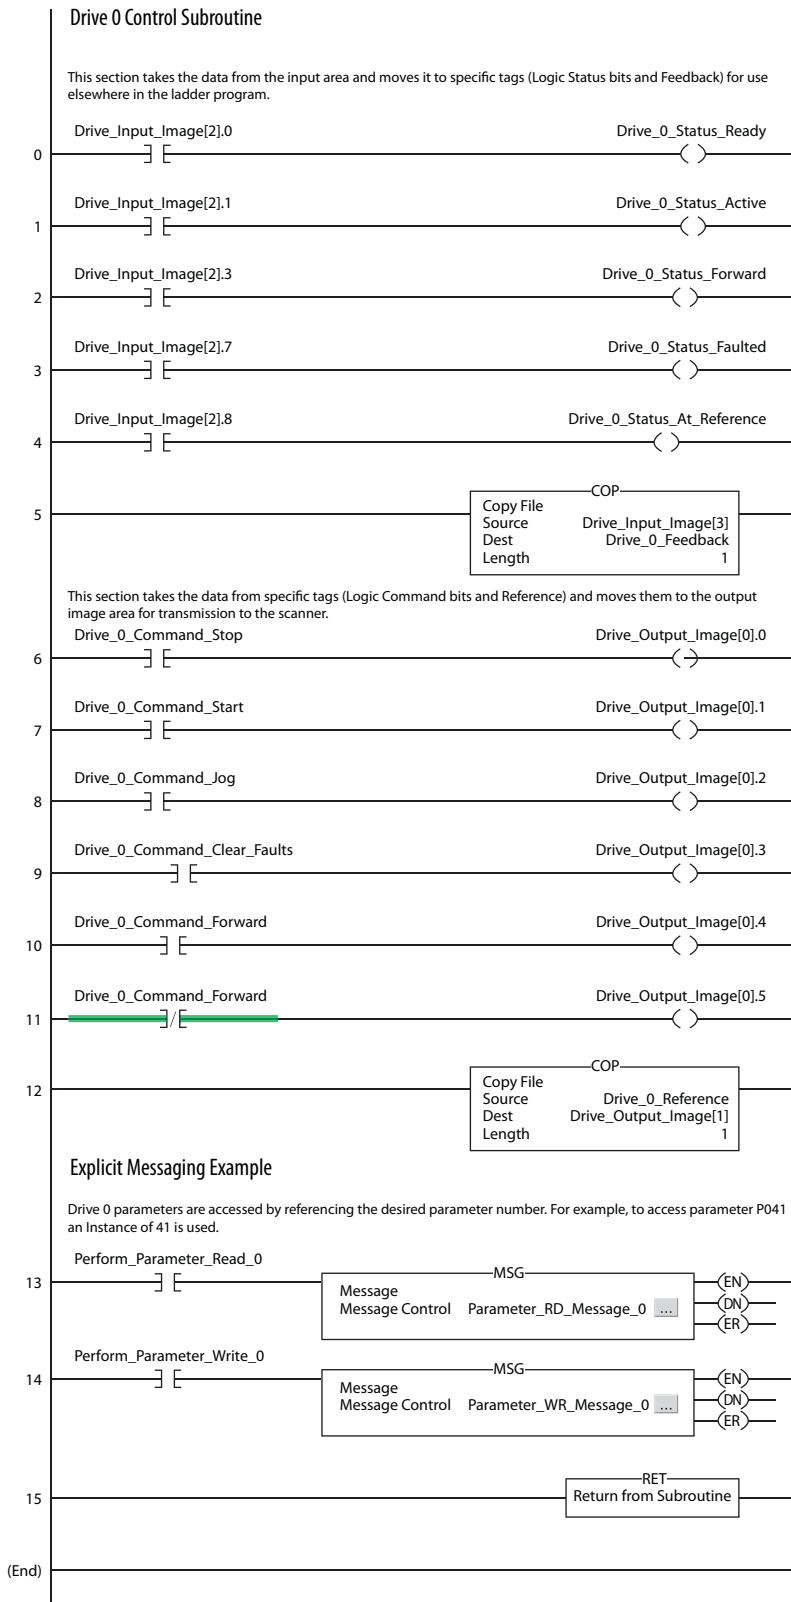


Drive 1 Control Routine

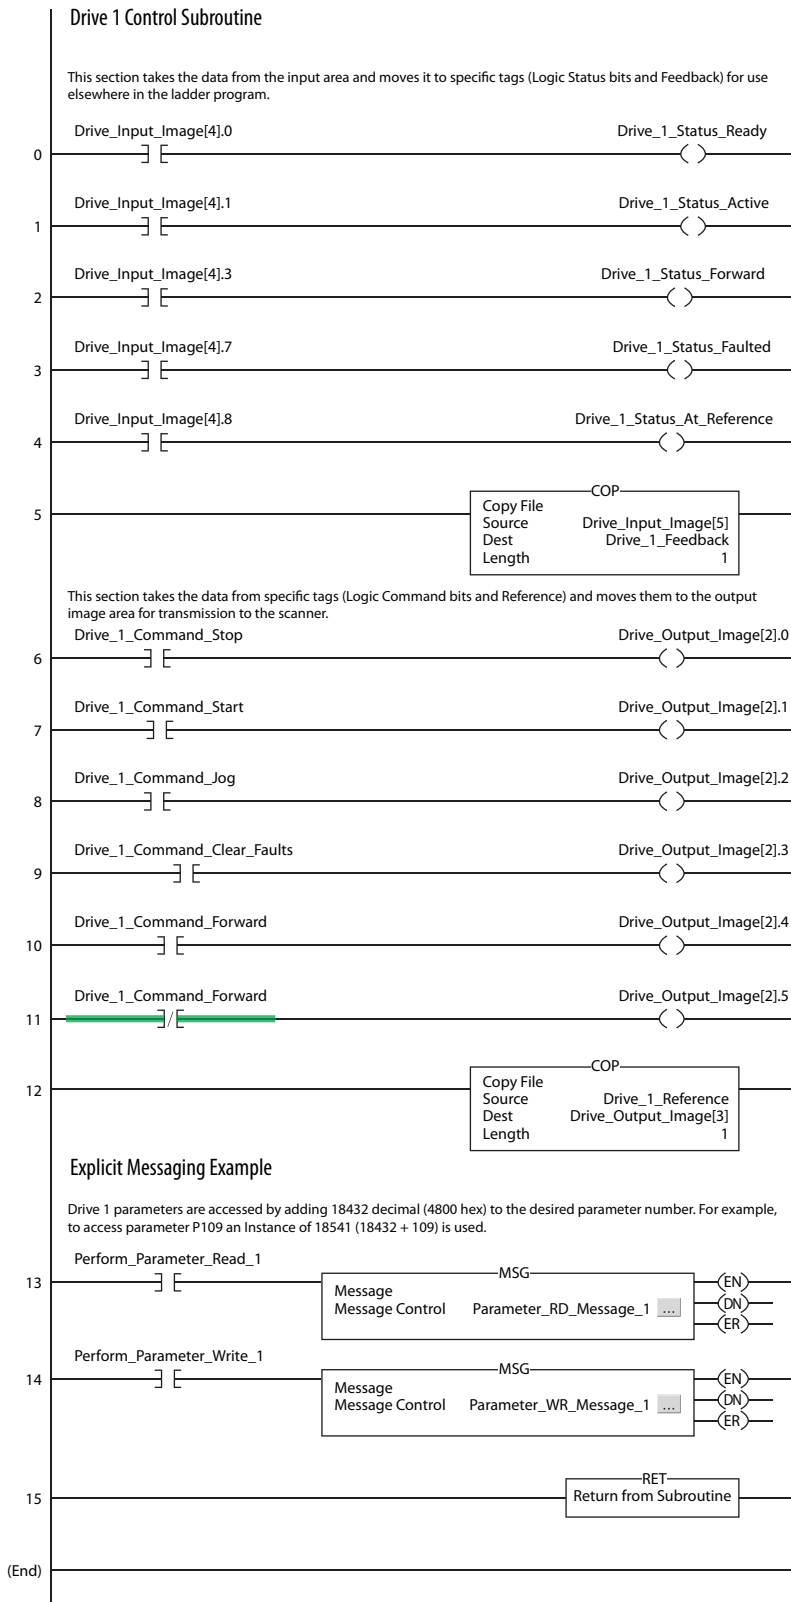


Drive 2 Control Routine

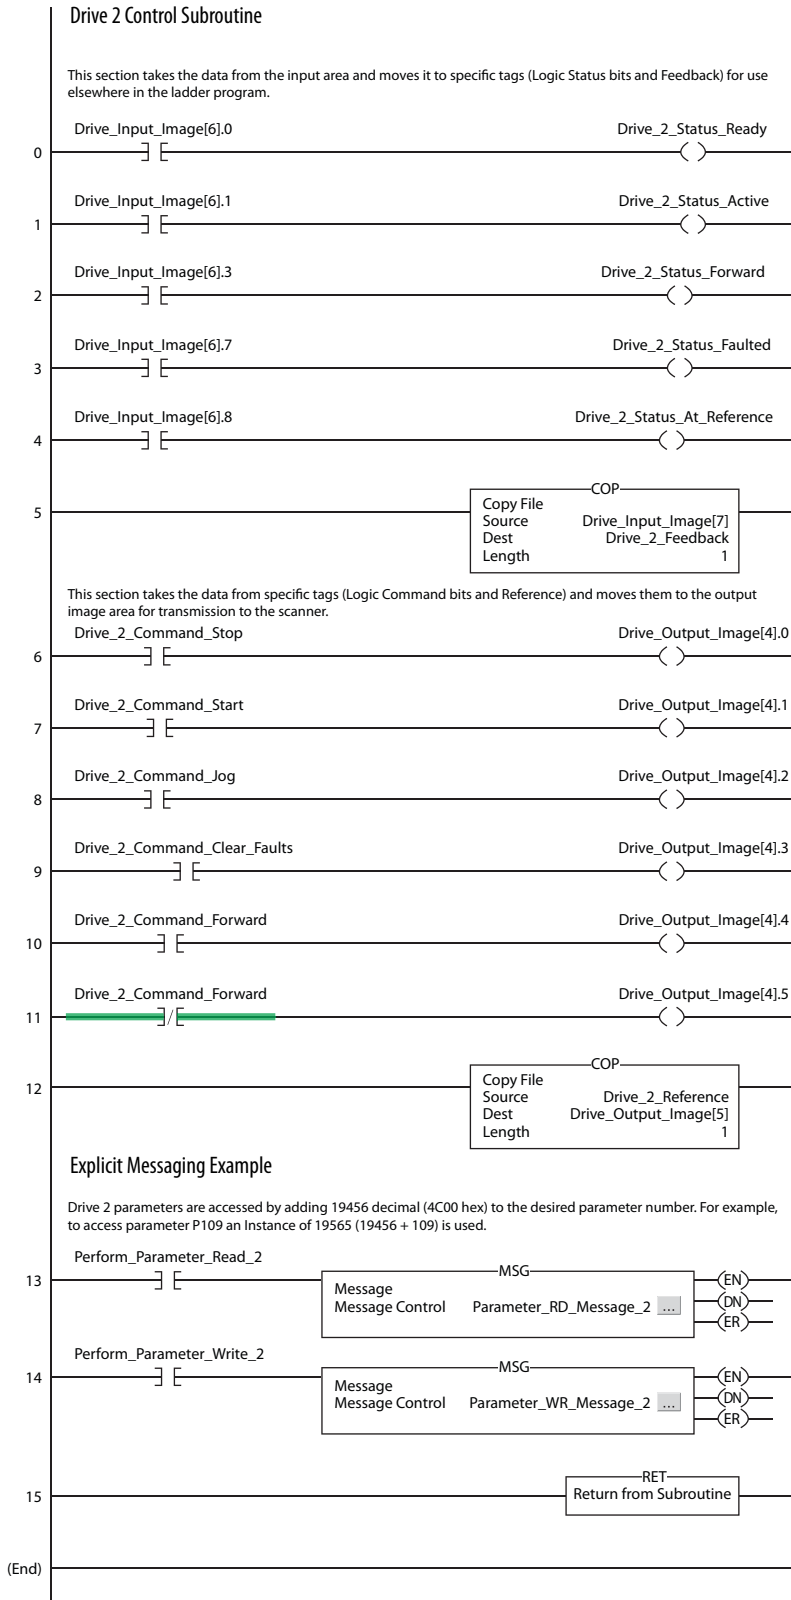

Drive 3 Control Routine

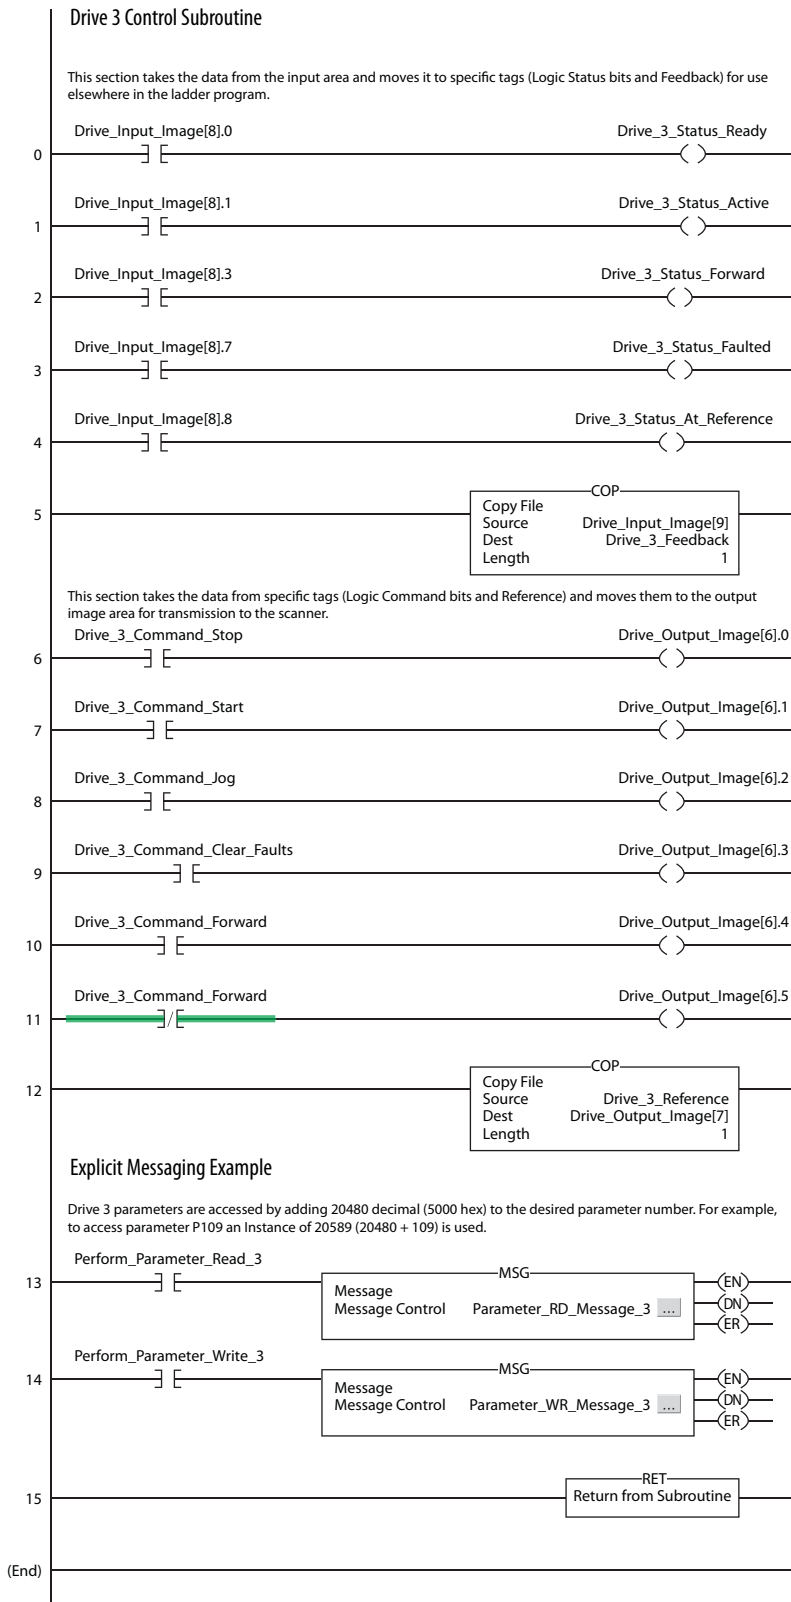

Drive 4 Control Routine

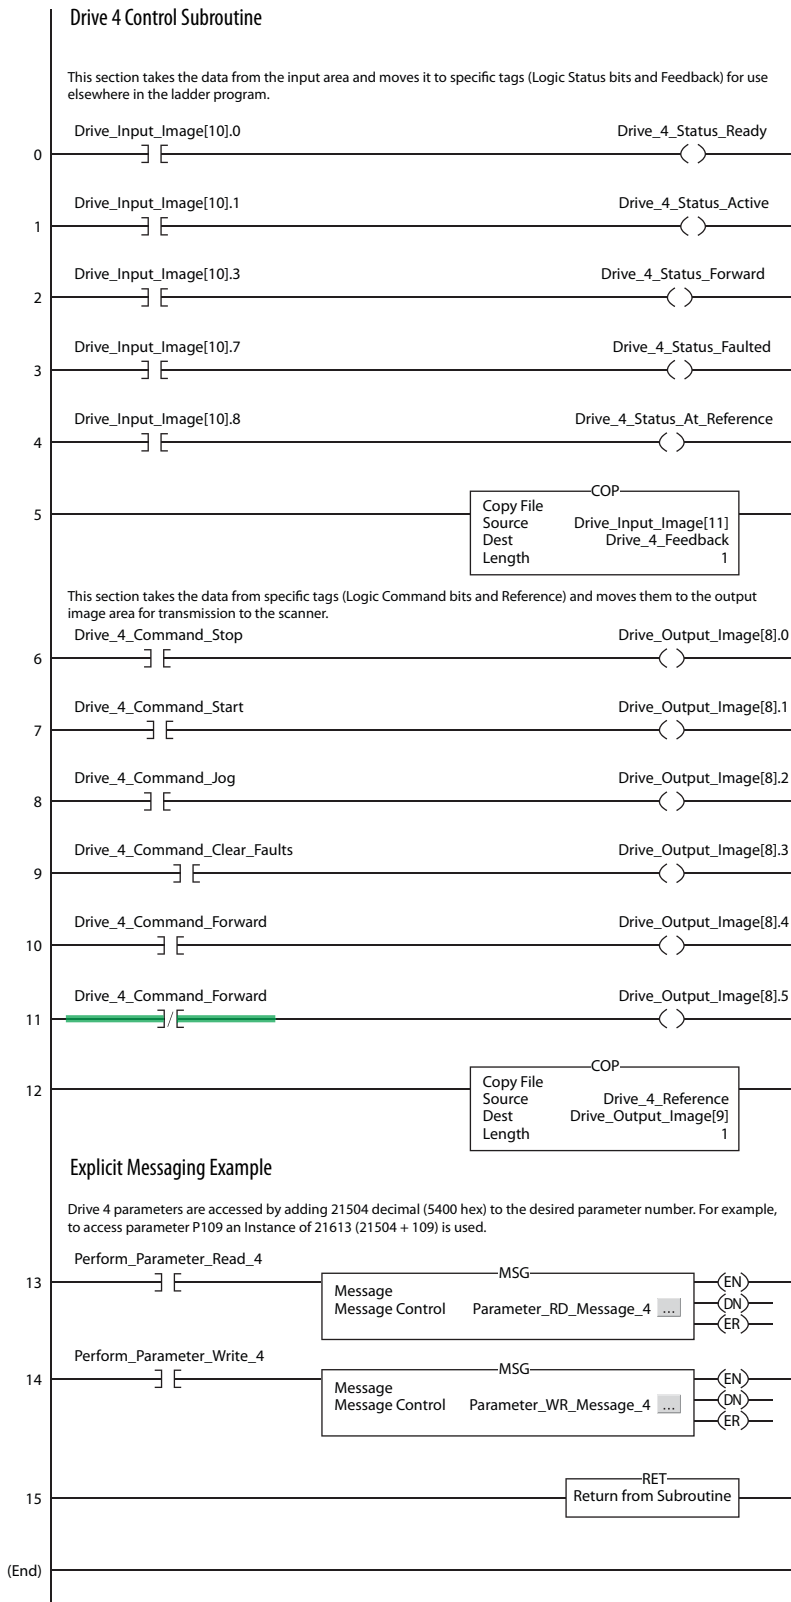

Multi-Drive Mode Explicit Messaging

Parameter addressing for Explicit messaging is different in Multi-drive mode than in Single-drive mode. In Single-drive mode, the Instance value in the message equals the desired parameter number in the drive. In Multi-drive mode, an Instance table is used to account for the parameters in the adapter and up to five drives. The parameters in the adapter and each of the drives are offset by 400 hex (1024 decimal):

Instance (Hex.)	Instance (Dec.)	Device	Parameter
0x0000...0x3FFF	0...16383	Drive 0	0...1023
0x4000...0x43FF	16384...17407	Dual-port EtherNet/IP adapter parameters	0...1023
0x4400...0x47FF	17408...18431	Drive 0	0...1023
0x4800...0x4BFF	18432...19455	Drive 1	0...1023
0x4C00...0x4FFF	19456...20479	Drive 2	0...1023
0x5000...0x53FF	20480...21503	Drive 3	0...1023
0x5400...0x57FF	21504...22527	Drive 4	0...1023
0x5800...0x5BFF	22528...23551	Dual-port EtherNet/IP adapter parameters	0...1023


For example, to access [**Accel Time 1**] (parameter P041 in PowerFlex 525 and P109 in PowerFlex 4M) in each of the drives, the following Instances would be used:

- Drive 0 (PowerFlex 525) Instance = 41
- Drive 1 (PowerFlex 4M) Instance = 18541 (18432 + 109)
- Drive 2 (PowerFlex 4M) Instance = 19565 (19456 + 109)
- Drive 3 (PowerFlex 4M) Instance = 20589 (20480 + 109)
- Drive 4 (PowerFlex 4M) Instance = 21613 (21504 + 109)


Drive 1 Explicit Message Example

The Explicit message examples in the CompactLogix example program perform a read and a write to PowerFlex 4M parameter P109 [Accel Time 1]. The configuration for the read is shown in [Parameter Read Message Configuration on page 112](#) and the write is shown in [Parameter Write Message Configuration on page 112](#).

Parameter Read Message Configuration

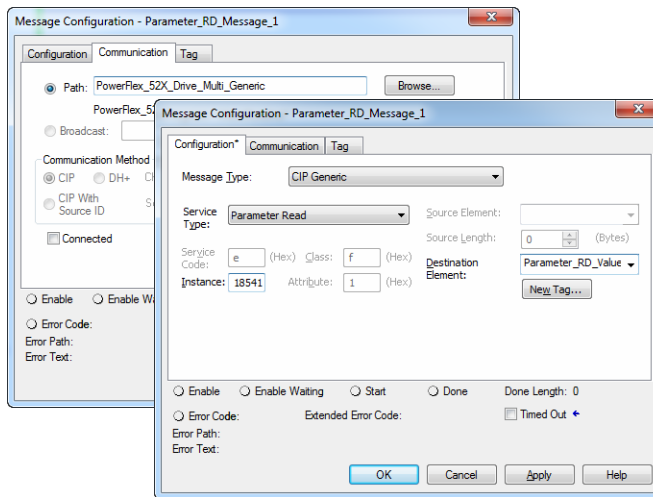

Parameter Write Message Configuration

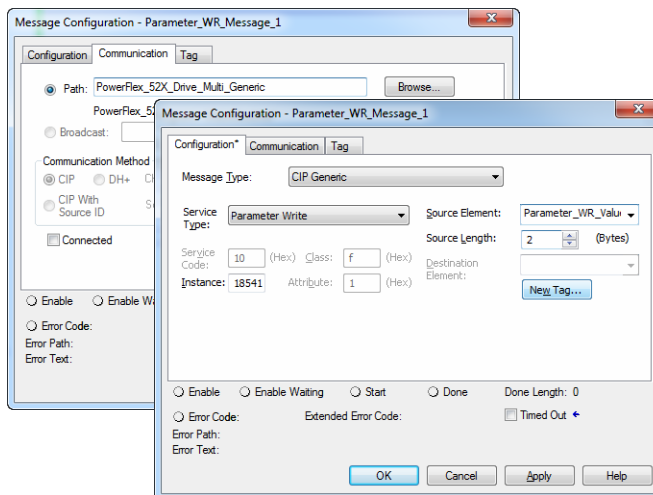

The Class Code is “f” for the Parameter Object and the Instance Attribute is “1” to select retrieving the parameter value. See [Parameter Object on page 136](#) for more information. The Instance value is “18541” to access parameter **P109 [Accel Time 1]** in the first daisy-chained drive.

The Explicit message for the other daisy-chained drives are identical except for the Instance values, see [Multi-Drive Mode Explicit Messaging on page 111](#) for examples.

Additional Information

- When the PowerFlex 525 drive (Drive 0) is powered up, all configured daisy-chained drives must be present before an I/O connection is allowed on EtherNet/IP (before the drives can be controlled).
- If the PowerFlex 525 drive (Drive 0) is powered down, communications with the four daisy-chained drives (Drive 1 to Drive 4) are disrupted and the drives will take their corresponding Comm Loss Actions.

- If any of the daisy-chained drives (Drive 1 to Drive 4) are powered down, the respective Input Image (Logic Status and Feedback) will be set to zero. Status information will not indicate there is a fault at the node, and the I/O connection will not be dropped.

Notes:

Troubleshooting


This chapter provides information for diagnosing and troubleshooting potential problems with the Dual-port EtherNet/IP adapter and network.

Topic	Page
Understanding the Status Indicators	115
PORT Status Indicator	116
MOD Status Indicator	116
NET A Status Indicator	116
NET B Status Indicator	117
Viewing Adapter Diagnostic Items	117
Viewing and Clearing Events	120

Understanding the Status Indicators

The adapter has four status indicators. They can be viewed on the adapter or through the drive cover.

Status Indicators

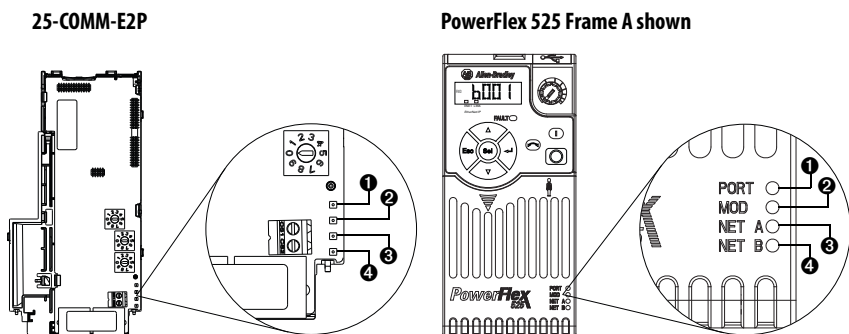

Item	Status Indicator	Description	Page
①	PORT	DSI Connection Status	116
②	MOD	Adapter Status	116
③	NET A	Network Connection Status	116
④	NET B	Adapter Transmission Status	117

PORT Status Indicator

This red/green bicolor LED indicates the status of the adapter's connection to the drive as shown in the table below.

Status	Cause	Corrective Actions
Off	The adapter is not powered.	<ul style="list-style-type: none"> Securely connect the adapter to the drive. Apply power to the drive.
Flashing red	The adapter is not receiving communication from the drive, or a drive is missing in Multi-drive mode.	<ul style="list-style-type: none"> Verify that cables are securely connected. Cycle power to the drive.
Flashing green	The adapter is establishing communications with the drive.	No action required. This status indicator will turn solid green or flashing red.
Steady green	The adapter is properly connected and is communicating with the drive.	No action required.
Orange	The drive is not an Allen-Bradley drive, or the drive is configured for Multi-drive mode using its embedded EtherNet/IP port.	<ul style="list-style-type: none"> Use an Allen-Bradley PowerFlex 520-Series drive. Set <i>Host</i> parameter C169 [MultiDrv Sel] to 1 "Network Opt" and cycle power to the drive.

MOD Status Indicator

This red/green bicolor LED indicates the status of the adapter as shown in the table below.

Status	Cause	Corrective Actions
Off	The adapter is not powered or is not properly connected to the drive.	<ul style="list-style-type: none"> Securely connect the adapter to the drive. Apply power to the drive.
Flashing red	The cause may be one of the following: <ul style="list-style-type: none"> The drive is in firmware upgrade mode. The adapter has an EEPROM fault. The network address switches has been changed since powerup. A duplicate IP address fault has been detected. The DHCP lease has expired. The network address switches are set to "888". The network configuration (IP address, subnet mask, gateway address) is invalid. The User FPGA configuration is invalid. 	View the adapter event queue to determine which of these conditions is present. Then, depending on the cause, take the appropriate corrective action. <ul style="list-style-type: none"> Clear faults in the adapter. Cycle power to the drive. If cycling power does not correct the problem, the adapter parameter settings may have been corrupted. Reset defaults and reconfigure the adapter. If resetting defaults does not correct the problem, update the adapter with the latest firmware revision. Change the network address switches to a value other than "888".
Flashing green	The adapter is operating normally, but is not transferring I/O data to a controller.	<ul style="list-style-type: none"> Place the scanner in RUN mode. Program the controller to recognize and transmit I/O to the adapter. Configure the adapter for the program in the controller. Normal behavior is no I/O is being transferred.
Steady green	The adapter is operating normally and is transferring I/O data to a controller.	No action required.

NET A Status Indicator

This red/green bicolor LED indicates the status for the network connection as shown in the table below.

Status	Cause	Corrective Actions
Off	The cause may be one of the following: <ul style="list-style-type: none"> The adapter is not powered. The adapter is not properly connected to the network. The adapter has not acquired its network configuration (IP address, subnet mask, gateway address) from the BOOTP server. 	<ul style="list-style-type: none"> Securely connect the adapter to the drive. Correctly connect the Ethernet cable to the Ethernet connector. Set a unique IP address with the adapter rotary switches, adapter parameters, or a BOOTP or DHCP server. Apply power to the drive.
Flashing red	The I/O connection has timed out.	<ul style="list-style-type: none"> Place the controller in RUN mode. Check the amount of traffic on the network.
Steady red	The cause may be one of the following: <ul style="list-style-type: none"> A duplicate IP address fault has been detected. The DHCP lease has expired. 	Configure the adapter to use a unique IP address and cycle power to the drive.
Flashing green	The adapter is operating normally, but does not have any CIP connections (I/O or explicit).	<ul style="list-style-type: none"> Place the controller in RUN mode. Program the controller to recognize and transmit I/O, or make a message connection to the adapter. Configure the adapter for the program in the controller.
Steady green	The adapter is operating normally and has at least one CIP connection (I/O or explicit).	No action required.

NET B Status Indicator

This green LED indicates the status of the adapter transmitting on the network as shown in the table below.

Status	Cause	Corrective Actions
Off	This adapter is not transmitting on the network.	If Net A indicator is off: <ul style="list-style-type: none"> Securely connect the adapter to the drive, then connect the adapter to the network using an Ethernet cable. Correctly connect the Ethernet cable to the Ethernet connector. Set a unique IP address with the adapter rotary switches, adapter parameters, or a BOOTP or DHCP server. If Net A indicator is steady red: <ul style="list-style-type: none"> Configure the adapter to use a unique IP address and cycle power to the drive. If Net A indicator is flashing red/green or red: <ul style="list-style-type: none"> Check the IP address in the adapter and scanner, and verify that the controller can communicate with the adapter. Ping the adapter. Normal condition if the adapter is idle.
Flashing green	The adapter is transmitting on the network.	No action required.

Viewing Adapter Diagnostic Items

If you encounter unexpected communications problems, the adapter's diagnostic items may help you or Rockwell Automation personnel troubleshoot the problem. The diagnostic parameters for the Dual-port EtherNet/IP adapter can be viewed using the PowerFlex 22-HIM-A3/-C2S HIM or Connected Components Workbench software.

Dual-port EtherNet/IP Adapter Diagnostic Items in Single-Drive Mode

No.	Name	Description
01	Reserved	–
02	Logic Cmd	The present value of the Logic Command being transmitted to the drive by this adapter.
03	Reference	The present value of the Reference being transmitted to the drive by this adapter.
04	Reserved	–
05	Logic Sts	The present value of the Logic Status being received from the drive by this adapter.
06	Feedback	The present value of the Feedback being received from the drive by this adapter.
07...22	Reserved	–
23	Input Size	Displays the size of the input image in bytes transferred from the network to the drive.
24	Output Size	Displays the size of the output image in bytes transferred from the drive to the network.
25	DL Fr Net 01 Val	The current datalink value being transmitted from this adapter to the drive.
26	DL Fr Net 02 Val	
27	DL Fr Net 03 Val	
28	DL Fr Net 04 Val	
29	DL To Net 01 Val	The current datalink value being received from the drive by this adapter.
30	DL To Net 02 Val	
31	DL To Net 03 Val	
32	DL To Net 04 Val	
33	Opt Comm Errs	A count of the number of adapter to drive communication errors
34	HW Addr 1	Decimal value of each octet in the adapter's Ethernet hardware address. 255.255.255.255.255.255
35	HW Addr 2	
36	HW Addr 3	
37	HW Addr 4	
38	HW Addr 5	
39	HW Addr 6	

Dual-port EtherNet/IP Adapter Diagnostic Items in Single-Drive Mode

No.	Name	Description
40	IP Addr Act 1	Value of each octet in the adapter's present IP address. A value of "0" appears if the adapter does not currently have an IP address. <div style="text-align: center;"> 255.255.255.255 [IP Addr Act 1] [IP Addr Act 2] [IP Addr Act 3] [IP Addr Act 4] </div>
41	IP Addr Act 2	
42	IP Addr Act 3	
43	IP Addr Act 4	
44	Subnet Act 1	Value of each octet in the adapter's present subnet mask. A value of "0" appears if the adapter does not currently have a subnet mask. <div style="text-align: center;"> 255.255.255.255 [Subnet Act 1] [Subnet Act 2] [Subnet Act 3] [Subnet Act 4] </div>
45	Subnet Act 2	
46	Subnet Act 3	
47	Subnet Act 4	
48	Gateway Act 1	Value of each octet in the adapter's present gateway address. A value of "0" appears if the adapter does not currently have a gateway address. <div style="text-align: center;"> 255.255.255.255 [Gateway Act 1] [Gateway Act 2] [Gateway Act 3] [Gateway Act 4] </div>
49	Gateway Act 2	
50	Gateway Act 3	
51	Gateway Act 4	
52	Net Rx Overruns	A count of the number of receive overrun errors reported by the adapter.
53	Net Rx Packets	A count of the number of Ethernet packets that the adapter has received.
54	Net Rx Errors	A count of the number of receive errors reported by the Ethernet hardware.
55	Net Tx Packets	A count of the number of Ethernet packets that the adapter has sent.
56	Net Tx Errors	A count of the number of transmit errors reported by the Ethernet hardware.
57	Missed IO Pkts	A count of the number of incoming I/O connection packets that the adapter did not receive.
58	Net Addr Sw	Displays the setting of the network address switches.
59	MDIX Status	Displays the MDIX status.
60	Boot Flash Count	A count of the number of times the boot firmware has been flash updated.
61	App Flash Count	A count of the number of times the application firmware has been flash updated.
62	FPGA Flash Count	A count of the number of times the FPGA User Program Image has been flash updated.

Dual-port EtherNet/IP Adapter Diagnostic Items in Multi-Drive Mode

No.	Name	Description
01	Reserved	—
02	Drv 0 Logic Cmd	The present value of the Logic Command being transmitted to drive 0 by this adapter.
03	Drv 0 Reference	The present value of the Reference being transmitted to drive 0 by this adapter.
04	Reserved	—
05	Drv 0 Logic Sts	The present value of the Logic Status being received from drive 0 by this adapter.
06	Drv 0 Feedback	The present value of the Feedback being received from drive 0 by this adapter.
07	Drv 1 Logic Cmd	The present value of the Logic Command being transmitted to drive 1 by this adapter.
08	Drv 1 Reference	The present value of the Reference being transmitted to drive 1 by this adapter.
09	Drv 1 Logic Sts	The present value of the Logic Status being received from drive 1 by this adapter.
10	Drv 1 Feedback	The present value of the Feedback being received from drive 1 by this adapter.
11	Drv 2 Logic Cmd	The present value of the Logic Command being transmitted to drive 2 by this adapter.

Dual-port EtherNet/IP Adapter Diagnostic Items in Multi-Drive Mode

No.	Name	Description
12	Drv 2 Reference	The present value of the Reference being transmitted to drive 2 by this adapter.
13	Drv 2 Logic Sts	The present value of the Logic Status being received from drive 2 by this adapter.
14	Drv 2 Feedback	The present value of the Feedback being received from drive 2 by this adapter.
15	Drv 3 Logic Cmd	The present value of the Logic Command being transmitted to drive 3 by this adapter.
16	Drv 3 Reference	The present value of the Reference being transmitted to drive 3 by this adapter.
17	Drv 3 Logic Sts	The present value of the Logic Status being received from drive 3 by this adapter.
18	Drv 3 Feedback	The present value of the Feedback being received from drive 3 by this adapter.
19	Drv 4 Logic Cmd	The present value of the Logic Command being transmitted to drive 4 by this adapter.
20	Drv 4 Reference	The present value of the Reference being transmitted to drive 4 by this adapter.
21	Drv 4 Logic Sts	The present value of the Logic Status being received from drive 4 by this adapter.
22	Drv 4 Feedback	The present value of the Feedback being received from drive 4 by this adapter.
23	Input Size	Displays the size of the input image in bytes transferred from the network to the drive.
24	Output Size	Displays the size of the output image in bytes transferred from the drive to the network.
25...32	Reserved	—
33	Opt Comm Errs	A count of the number of adapter to drive communication errors
34	HW Addr 1	Decimal value of each octet in the adapter's Ethernet hardware address. <pre> 255.255.255.255.255.255 [HW Addr 1] [HW Addr 2] [HW Addr 3] [HW Addr 4] [HW Addr 5] [HW Addr 6] </pre>
35	HW Addr 2	
36	HW Addr 3	
37	HW Addr 4	
38	HW Addr 5	
39	HW Addr 6	
40	IP Addr Act 1	Value of each octet in the adapter's present IP address. A value of "0" appears if the adapter does not currently have an IP address. <pre> 255.255.255.255 [IP Addr Act 1] [IP Addr Act 2] [IP Addr Act 3] [IP Addr Act 4] </pre>
41	IP Addr Act 2	
42	IP Addr Act 3	
43	IP Addr Act 4	
44	Subnet Act 1	Value of each octet in the adapter's present subnet mask. A value of "0" appears if the adapter does not currently have a subnet mask. <pre> 255.255.255.255 [Subnet Act 1] [Subnet Act 2] [Subnet Act 3] [Subnet Act 4] </pre>
45	Subnet Act 2	
46	Subnet Act 3	
47	Subnet Act 4	
48	Gateway Act 1	Value of each octet in the adapter's present gateway address. A value of "0" appears if the adapter does not currently have a gateway address. <pre> 255.255.255.255 [Gateway Act 1] [Gateway Act 2] [Gateway Act 3] [Gateway Act 4] </pre>
49	Gateway Act 2	
50	Gateway Act 3	
51	Gateway Act 4	
52	Net Rx Overruns	A count of the number of receive overrun errors reported by the adapter.

Dual-port EtherNet/IP Adapter Diagnostic Items in Multi-Drive Mode

No.	Name	Description
53	Net Rx Packets	A count of the number of Ethernet packets that the adapter has received.
54	Net Rx Errors	A count of the number of receive errors reported by the Ethernet hardware.
55	Net Tx Packets	A count of the number of Ethernet packets that the adapter has sent.
56	Net Tx Errors	A count of the number of transmit errors reported by the Ethernet hardware.
57	Missed IO Pkts	A count of the number of incoming I/O connection packets that the adapter did not receive.
58	Net Addr Sw	Displays the setting of the network address switches.
59	MDIX Status	Displays the MDIX status.
60	Boot Flash Count	A count of the number of times the boot firmware has been flash updated.
61	App Flash Count	A count of the number of times the application firmware has been flash updated.
62	FPGA Flash Count	A count of the number of times the FPGA User Program Image has been flash updated.

Viewing and Clearing Events

The adapter has an event queue to record significant events that occur in the operation of the adapter. When such an event occurs, an entry consisting of the event's numeric code and a timestamp is put into the event queue. You can view the event queue using the PowerFlex 22-HIM-A3/-C2S HIM or Connected Components Workbench.

The event queue can contain up to 32 entries, which are stored in an EEPROM chip—making the event queue nonvolatile. Eventually the event queue will become full, since its contents are retained through adapter power cycles and resets. At that point, a new entry replaces the oldest entry. Only an event queue clear operation or the corruption of the EEPROM group containing the event queue will clear the event queue contents. In the latter case, the adapter will not generate a fault to indicate that the event queue was corrupted.

Resetting the adapter to defaults has no effect on the event queue, other than to log a Code 58 “Module Defaulted” event.

Many events in the event queue occur under normal operation. If you encounter unexpected communications problems, the events may help you or Allen-Bradley personnel troubleshoot the problem. The following events may appear in the event queue:

Adapter Events

Code	Event	Description
Adapter Events		
0	No Event	Text displayed in an empty event queue entry.
1	Device Power Up	Power was applied to the adapter.
2	Device Reset	The adapter was reset.
3	EEPROM CRC Error	The EEPROM checksum/CRC is incorrect, which limits adapter functionality. Default parameter values must be loaded to clear this condition.
4	App Updated	The adapter application firmware was updated.
5	Boot Updated	The adapter boot firmware was updated.
6	Watchdog Timeout	The software watchdog detected a failure and reset the adapter.
7	Manual Reset	The adapter was reset by changing <i>Device</i> parameter 22 [Reset Module] .
DSI Events		
8	DSI Detected	The adapter detected that the DSI device is connected.

Adapter Events

Code	Event	Description
9	DSI Removed	The adapter detected that the DSI device was disconnected.
10	DSI Logon	The adapter has established communications with the DSI device.
11	DSI Timeout	The adapter has lost communications with the DSI device.
12	DSI Brand Flt	The brand of the DSI device is different from the adapter.
13	Host 0 Logon	The adapter has established communications with host 0.
14	Host 1 Logon	The adapter has established communications with host 1 (multi-drive mode).
15	Host 2 Logon	The adapter has established communications with host 2 (multi-drive mode).
16	Host 3 Logon	The adapter has established communications with host 3 (multi-drive mode).
17	Host 4 Logon	The adapter has established communications with host 4 (multi-drive mode).
18	Host 0 Timeout	The adapter has lost communications with host 0.
19	Host 1 Timeout	The adapter has lost communications with host 1 (multi-drive mode).
20	Host 2 Timeout	The adapter has lost communications with host 2 (multi-drive mode).
21	Host 3 Timeout	The adapter has lost communications with host 3 (multi-drive mode).
22	Host 4 Timeout	The adapter has lost communications with host 4 (multi-drive mode).
23	Host 0 Brand Flt	The brand of host 0 is different from the adapter.
24	Host 1 Brand Flt	The brand of host 1 is different from the adapter (multi-drive mode).
25	Host 2 Brand Flt	The brand of host 2 is different from the adapter (multi-drive mode).
26	Host 3 Brand Flt	The brand of host 3 is different from the adapter (multi-drive mode).
27	Host 4 Brand Flt	The brand of host 4 is different from the adapter (multi-drive mode).
28...30	Reserved	–
Network Events		
31	Net Dup Address	The adapter uses the same IP address as another device on the network.
32	Net Comm Fault	The adapter detected a communications fault on the network and has performed the “Comm Flt” action specified by the user.
33	Net Sent Reset	The adapter received a reset from the network.
34	Net IO Close	An I/O connection from the network to the adapter was closed.
35	Net Idle Fault	The adapter detected a network idle condition on the network and has performed the “Idle Flt” action specified by the user.
36	Net IO Open	An I/O connection from the network to the adapter has been opened.
37	Net IO Timeout	An I/O connection from the network to the adapter has timed out.
38	Reserved	–
39	PCCC IO Close	The device sending PCCC Control messages to the adapter has set the PCCC Control Timeout to zero.
40	PCCC IO Open	The adapter has begun receiving PCCC Control messages (the PCCC Control Timeout was previously set to a non-zero value).
41	PCCC IO Timeout	The adapter has not received a PCCC Control message for longer than the PCCC Control Timeout.
42	Msg Ctrl Open	The timeout attribute in either the CIP Register or Assembly object was written with a non-zero value, allowing control messages to be sent to the adapter.
43	Msg Ctrl Close	The timeout attribute in either the CIP Register or Assembly object was written with a zero value, disallowing control messages to be sent to the adapter.
44	Msg Ctrl Timeout	The timeout attribute in either the CIP Register or Assembly object elapsed between accesses of those objects.
45...54	Reserved	–
55	BOOTP Response	The adapter has received a response to its BOOTP request.
56...57	Reserved	–
58	Module Defaulted	The adapter has been set to factory defaults.
59	FPGA Fact Load	The adapter has loaded the factory configuration into its FPGA.
60	FPGA User Load	The adapter has loaded the user configuration into its FPGA.
61	Net Link 1 Up	A network link was available for the adapter on its Ethernet network port 1 (ENET1).

Adapter Events

Code	Event	Description
62	Net Link 1 Down	The network link was removed from the adapter on its Ethernet network port 1 (ENET1).
63	Net Link 2 Up	A network link was available for the adapter on its Ethernet network port 2 (ENET2).
64	Net Link 2 Down	The network link was removed from the adapter on its Ethernet network port 2 (ENET2).
65...66	Reserved	—
67	Net Ring Up	The Device-Level Ring (DLR) status is Normal.
68	Net Ring Down	The Device-Level Ring (DLR) status is Faulted.
69	Invalid Net Cfg	The adapter's network address configuration parameters are invalid, or the network address provided by the BOOTP or DHCP server is invalid.
70	DHCP Response	The adapter received a response to its DHCP request.
71	DHCP Renew	The adapter renewed its network address lease with the DHCP server.
72	DHCP Rebind	The adapter rebinded its network address lease with the DHCP server.
73	DHCP Release	The adapter's network address lease expired.

Specifications

Appendix A presents the specifications for the adapter.

Communication

Network Protocol	EtherNet/IP
Data Rates	10 Mbps Full Duplex, 10 Mbps Half Duplex, 100 Mbps Full Duplex or 100 Mbps Half Duplex
Connection Limit	30 TCP connections 16 simultaneous CIP explicit messaging connections plus 1 exclusive-owner I/O connection The following activities use a CIP connection: <ul style="list-style-type: none"> Class I I/O connections (for example, from a ControlLogix or CompactLogix controller) Explicit messaging where “connected” is chosen (for example, in a check box in RSLogix 5000 or Logix Designer) The following activities DO NOT use a CIP connection: <ul style="list-style-type: none"> Explicit messaging-based control using PCCC or the Register or Assembly objects, including the MicroLogix 1100/1400 examples in Chapter 4 Explicit messaging where “connected” is NOT chosen, which is typically the default
Requested Packet Interval (RPI)	2 ms minimum
Packet Rate	Up to 1000 total I/O packets per second (500 in and 500 out)

Electrical

Consumption Drive	250 mA @ 14V DC supplied by the host drive
Network	None

Mechanical

Dimensions Height	21 mm (0.83 in.)
Length	131.0 mm (5.15 in.)
Width	48.4 mm (1.9 in.)
Weight	44 g (1.55 oz.)

Environmental

Temperature Operating	-10...50 °C (14...149 °F)
Storage	-40...85 °C (-40...185 °F)
Relative Humidity	-5...95% noncondensing

Regulatory Compliance

See the PowerFlex 525 Adjustable Frequency AC Drive User Manual, publication [520-UM001](#) for regulatory compliance information.

Notes:

Adapter Parameters

Appendix B provides information about the adapter parameters.



Topic	Page
Device Parameters	125


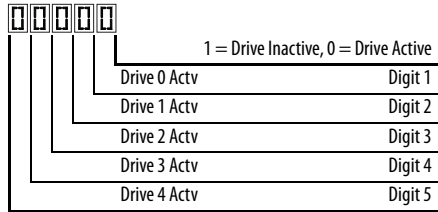
The adapter parameters are displayed in a **Numbered List** view order.

Device Parameters

Parameter		
No.	Name and Description	Details
01	[MultiDrv Sel] Displays the single-drive or multi-drive operating mode based on <i>Host</i> parameter C169 [MultiDrv Sel] setting.	Values: 0 = Disabled 1 = Network Opt 2 = EtherNet/IP Type: Read Only
02	[DLs From Net Act] Displays the number of network-to-drive Datalinks that the drive is using based on the I/O connection opened by the controller.	Minimum: 0 Maximum: 4 Type: Read Only
03	[DLs To Net Act] Displays the number of drive-to-network Datalinks that the controller is using based on the I/O connection opened by the controller.	Minimum: 0 Maximum: 4 Type: Read Only
04	[Net Addr Sel] Selects the source from which the adapter's IP address is acquired when the Node Address switches (see Setting the Node Address Switches on page 18) are set to any value other than (001...254) or 888.	Default: 3 = DHCP Values: 1 = Parameters 2 = BOOTP 3 = DHCP Type: Read/Write Reset Required: Yes
05	[Net Addr Src] Displays the source from which the adapter's IP address is received from.	Values: 0 = Switches 1 = Parameters 2 = BOOTP 3 = DHCP Type: Read Only

Parameter		
No.	Name and Description	Details
06	[IP Addr Cfg 1]	Default: 0
07	[IP Addr Cfg 2]	Default: 0
08	[IP Addr Cfg 3]	Default: 0
09	[IP Addr Cfg 4]	Default: 0
	<p>Sets the IP address octets for the adapter's network address when <i>Device</i> parameter 05 [Net Addr Sel] is set to 1 "Parameters" and the Node Address switches (see Setting the Node Address Switches on page 18) are set to any value other than (001...254) or 888.</p> <p style="text-align: center;"> 192.168.1.62 [IP Addr Cfg 1] [IP Addr Cfg 2] [IP Addr Cfg 3] [IP Addr Cfg 4] </p>	Minimum: 0 Maximum: 255 Type: Read/Write Reset Required: Yes
10	[Subnet Cfg 1]	Default: 0
11	[Subnet Cfg 2]	Default: 0
12	[Subnet Cfg 3]	Default: 0
13	[Subnet Cfg 4]	Default: 0
	<p>Sets the Subnet mask octets for the adapter's network mask when <i>Device</i> parameter 05 [Net Addr Sel] is set to 1 "Parameters" and the Node Address switches (see Setting the Node Address Switches on page 18) are set to any value other than (001...254) or 888.</p> <p style="text-align: center;"> 255.255.255.0 [Subnet Cfg 1] [Subnet Cfg 2] [Subnet Cfg 3] [Subnet Cfg 4] </p>	Minimum: 0 Maximum: 255 Type: Read/Write Reset Required: Yes
14	[Gateway Cfg 1]	Default: 0
15	[Gateway Cfg 2]	Default: 0
16	[Gateway Cfg 3]	Default: 0
17	[Gateway Cfg 4]	Default: 0
	<p>Sets the Gateway address octets for the adapter's local network when <i>Device</i> parameter 05 [Net Addr Sel] is set to 1 "Parameters" and the Node Address switches (see Setting the Node Address Switches on page 18) are set to any value other than (001...254) or 888.</p> <p style="text-align: center;"> 192.168.1.1 [Gateway Cfg 1] [Gateway Cfg 2] [Gateway Cfg 3] [Gateway Cfg 4] </p>	Minimum: 0 Maximum: 255 Type: Read/Write Reset Required: Yes
18	[Net Rate Cfg 1]	Default: 0 = Autodetect
	<p>Sets the speed (10, 100) and duplex (Full, Half) at which the adapter communicates on its Ethernet network port 1 (ENET1). Updates <i>Device</i> parameter 19 [Net Rate Act 1] after a reset.</p>	Values: 0 = Autodetect 1 = 10Mbps Full 2 = 10Mbps Half 3 = 100Mbps Full 4 = 100Mbps Half Type: Read/Write Reset Required: Yes

Parameter		
No.	Name and Description	Details
19	<p>[Net Rate Act 1] Displays the actual speed (10, 100) and duplex (Full, Half) for the adapter's Ethernet network port 1 (ENET1).</p>	<p>Values: 0 = No Link 1 = 10Mbps Full 2 = 10Mbps Half 3 = 100Mbps Full 4 = 100Mbps Half 5 = Dup IP Addr</p> <p>Type: Read Only</p>
20	<p>[Net Rate Cfg 2] Sets the speed (10, 100) and duplex (Full, Half) which the adapter communicates on its Ethernet network port 2 (ENET2). Updates <i>Device</i> parameter 21 [Net Rate Act 2] after a reset.</p>	<p>Default: 0 = Autodetect</p> <p>Values: 0 = Autodetect 1 = 10Mbps Full 2 = 10Mbps Half 3 = 100Mbps Full 4 = 100Mbps Half</p> <p>Type: Read/Write</p> <p>Reset Required: Yes</p>
21	<p>[Net Rate Act 2] Displays the actual speed (10, 100) and duplex (Full, Half) for the adapter's Ethernet network port 2 (ENET2).</p>	<p>Values: 0 = No Link 1 = 10Mbps Full 2 = 10Mbps Half 3 = 100Mbps Full 4 = 100Mbps Half 5 = Dup IP Addr</p> <p>Type: Read Only</p>
22	<p>[Reset Module] No action if set to 0 "Ready". Resets the adapter if set to 1 "Reset Module". Restores the adapter to its factory default settings if set to 2 "Set Defaults". This parameter is a command. It will be reset to 0 "Ready" after the command has been performed. When performing a Set Defaults, the drive may detect a conflict. If this occurs, the drive will not allow a Set Defaults action. You must resolve the conflict before attempting a Set Defaults action for the adapter.</p>	<p>Default: 0 = Ready</p> <p>Values: 0 = Ready 1 = Reset Module 2 = Set Defaults</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
 <p>ATTENTION: Risk of injury or equipment damage exists. If the adapter is transmitting I/O that controls the drive, the drive may fault when you reset the adapter. Determine how your drive will respond before resetting the adapter.</p>		
23	<p>[Comm Flt Action] Sets the fault action of the drive, if the adapter detects that I/O communication has been disrupted. Important: This setting is effective when the drive's control source is transmitted through the adapter. When I/O communication is reestablished, the drive will again be controlled from the network adapter.</p>	<p>Default: 0 = Fault</p> <p>Values: 0 = Fault 1 = Stop 2 = Zero Data 3 = Hold Last 4 = Send Flt Cfg</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
 <p>ATTENTION: Risk of injury or equipment damage exists. <i>Device</i> parameter 23 [Comm Flt Action] lets you determine the action of the adapter and connected drive if I/O communications are disrupted. By default, this parameter faults the drive. you can set this parameter so that the drive continues to run. Precautions should be taken to ensure that the setting of this parameter does not create a risk of injury or equipment damage. When commissioning the drive, verify that your system responds correctly to various situations (for example, a disconnected drive).</p>		

Parameter		
No.	Name and Description	Details
24	<p>[Idle Flt Action]</p> <p>Sets the Idle (Program mode) action of the drive, if the adapter detects that the controller has transitioned to program mode.</p> <p>Important: This setting is effective when the drive's control source is transmitted through the adapter. When the controller is returned to Run mode, the drive will again be controlled from the network adapter.</p>	<p>Default: 0 = Fault</p> <p>Values: 0 = Fault 1 = Stop 2 = Zero Data 3 = Hold Last 4 = Send Flt Cfg</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
 <p>ATTENTION: Risk of injury or equipment damage exists. <i>Device</i> parameter 24 [Idle Flt Action] lets you determine the action of the adapter and connected drive if the controller is idle. By default, this parameter faults the drive. you can set this parameter so that the drive continues to run. Precautions should be taken to ensure that the setting of this parameter does not create a risk of injury or equipment damage. When commissioning the drive, verify that your system responds correctly to various situations (for example, a disconnected drive).</p>		
25	<p>[Flt Cfg Logic]</p> <p>Sets the Logic Command data that is sent to the drive if any of the following is true:</p> <ul style="list-style-type: none"> • <i>Device</i> parameter 23 [Comm Flt Action] is set to 4 "Send Flt Cfg" and I/O communications is disrupted. • <i>Device</i> parameter 24 [Idle Flt Action] is set to 4 "Send Flt Cfg" and the controller is in Program Mode. 	<p>Default: 0000 0000 0000 0000</p> <p>Minimum: 0000 0000 0000 0000</p> <p>Maximum: 1111 1111 1111 1111</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
26	<p>[Flt Cfg Ref]</p> <p>Sets the Reference data that is sent to the drive if any of the following is true:</p> <ul style="list-style-type: none"> • <i>Device</i> parameter 23 [Comm Flt Action] is set to 4 "Send Flt Cfg" and I/O communications is disrupted. • <i>Device</i> parameter 24 [Idle Flt Action] is set to 4 "Send Flt Cfg" and the controller is in Program Mode. 	<p>Default: 0</p> <p>Minimum: 0</p> <p>Maximum: 65535</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
27	[Flt Cfg DL 1]	Default: 0
28	[Flt Cfg DL 2]	Default: 0
29	[Flt Cfg DL 3]	Default: 0
30	[Flt Cfg DL 4]	Default: 0
	<p>Sets the data that is sent to the Datalink in the drive if any of the following is true:</p> <ul style="list-style-type: none"> • <i>Device</i> parameter 23 [Comm Flt Action] is set to 4 "Send Flt Cfg" and I/O communications is disrupted. • <i>Device</i> parameter 24 [Idle Flt Action] is set to 4 "Send Flt Cfg" and the controller is in Program Mode. 	<p>Minimum: 0</p> <p>Maximum: 65535</p> <p>Type: Read/Write</p> <p>Reset Required: No</p>
31	<p>[DSI I/O Act]</p> <p>Displays the Drives that are active in the Multi-drive mode.</p> 	<p>Bit Definitions: 0 = Drive Active 1 = Drive Inactive</p> <p>Digits: 0 = Drive 0 Actv 1 = Drive 1 Actv 2 = Drive 2 Actv 3 = Drive 3 Actv 4 = Drive 4 Actv</p> <p>Type: Read Only</p>

EtherNet/IP Objects

Appendix C presents information about the EtherNet/IP objects that can be accessed using Explicit Messages. For information on the format of Explicit Messages and example ladder logic programs, see [Using Explicit Messaging on page 73](#).

Object	Class Code		Page	Object	Class Code		Page
	Hex.	Dec.			Hex.	Dec.	
Identity Object	0x01	1	130	DPI Device Object	0x92	146	142
Assembly Object	0x04	4	132	DPI Parameter Object	0x93	147	145
Register Object	0x07	7	133	DPI Fault Object	0x97	151	151
Parameter Object	0x0F	15	136	TCP/IP Interface Object	0xF5	245	153
PCCC Object	0x67	103	139	Ethernet Link Object	0xF6	246	155

TIP See the EtherNet/IP specification for more information about EtherNet/IP objects. Information about the EtherNet/IP specification is available on the ODVA web site (<http://www.odva.org>).

Supported Data Types

Data Type	Description
BOOL	8-bit value – low bit is true or false
BOOL[x]	Array of n bits
CONTAINER	32-bit parameter value - sign extended if necessary
DINT	32-bit signed integer
INT	16-bit signed integer
LWORD	64-bit unsigned integer
REAL	32-bit floating point
SHORT_STRING	Struct of: USINT length indicator (L); USINT[L] characters
SINT	8-bit signed integer
STRINGN	Struct of: UINT character length indicator (W); UINT length indicator (L); USINT[W x L] string data
STRING[x]	Array of n characters
STRUCT	Structure name only – no size in addition to elements
TCHAR	8 or 16-bit character
UDINT	32-bit unsigned integer
UINT	16-bit unsigned integer
USINT	8-bit unsigned integer

Identity Object

Class Code

Hexadecimal	Decimal
0x01	1

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x05	No	Yes	Reset
0x0E	Yes	Yes	Get_Attribute_Single
0x01	Yes	Yes	Get_Attribute_All

Instances (Single-Drive)

Instance	Description
0	Class
1	Host drive
2	DSI device
3	25-COMM-E2P

Instances (Multi-Drive)

Instance	Description
0	Class
1	25-COMM-E2P

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
2	Get	Max Instance	UINT	Total number of instances

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Vendor ID	UINT	1 = Allen-Bradley
2	Get	Device Type	UINT	151
3	Get	Product Code	UINT	Number identifying product name and rating
4	Get	Revision: Major Minor	STRUCT of: USINT USINT	Value varies Value varies
5	Get	Status	UINT	Bit 0 = Owned Bit 8 = Minor recoverable fault Bit 10 = Major recoverable fault
6	Get	Serial Number	UDINT	Unique 32-bit number
7	Get	Product Name	SHORT_STRING	Product name
9	Get	Configuration Consistency Value	UNIT	Current Parameter NVS CRC value

Assembly Object

Class Code

Hexadecimal	Decimal
0x04	4

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	Yes	Yes	Set_Attribute_Single

Instances

Instance	Description
1	Status Image – All I/O data being read from the drive (read-only)
2	Command Image – All I/O data written to the drive (read/write)

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Revision	UINT	2
2	Get	Max Instance	UINT	2
100	Set	Control Timeout	UINT	Control timeout in seconds

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Number of Members	UINT	1
2	Get	Members List	ARRAY of STRUCT: UINT UINT Packed EPATH	Size of member data Size of member path Member path
3	Get	Conditional ⁽¹⁾	Array of Bits	Data to be transferred
4	Get	Size	UINT	Size of assembly data in bits

(1) For instance 1, access rule for the data attribute is Get. For instance 2, it is Get/Set.

IMPORTANT Setting an assembly object attribute can be done only when the Control Timeout (class attribute 100) has been set to a non-zero value.

Register Object

Class Code

Hexadecimal	Decimal
0x07	7

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	Yes	Yes	Set_Attribute_Single

Instances (Single-Drive)

Instance	Description
1	Status Image – All I/O data being read from the drive (read-only)
2	Command Image – All I/O data written to the drive (read/write)
3	Logic Status and Feedback (read-only)
4	Logic Command and Reference (read/write)
5	Datalink To Net 1 (read only)
6	Datalink From Net 1 (read/write)
7	Datalink To Net 2 (read only)
8	Datalink From Net 2 (read/write)
9	Datalink To Net 3 (read only)
10	Datalink From Net 3 (read/write)
11	Datalink To Net 3 (read only)
12	Datalink From Net 4 (read/write)
13	Logic Command (Masked) ⁽¹⁾ (read/write)
14	Logic Command (Masked) ⁽¹⁾ (read/write)
15	Logic Command (Masked) ⁽¹⁾ (read/write)
16	Logic Command (Masked) ⁽¹⁾ (read/write)
17	Logic Command (Masked) ⁽¹⁾ (read/write)
18	Logic Command (Masked) ⁽¹⁾ (read/write)
19	Logic Status (read-only)
20	Logic Command (read/write)
21	Feedback (read-only)
22	Reference (read/write)
23	Logic Status (read-only)
24	Logic Command (read/write)
25	Feedback (read-only)
26	Reference (read/write)
27	Logic Status (read-only)
28	Logic Command (read/write)
29	Feedback (read-only)
30	Reference (read/write)
31	Logic Status (read-only)
32	Logic Command (read/write)
33	Feedback (read-only)
34	Reference (read/write)
35	Logic Status (read-only)

Instance	Description
36	Logic Command (read/write)
37	Feedback (read-only)
38	Reference (read/write)

(1) The mask command WORD is set to the value of the second WORD of the data where there are ones in the first WORD of the data. Only the bits of the Logic Command that have the corresponding mask bit set are applied.

Instances (Multi-Drive)

Instance	Description
1	Status Image – All I/O data being read from the drive (read-only)
2	Command Image – All I/O data written to the drive (read/write)
3	Logic Status and Feedback 0 (read-only)
4	Logic Command and Reference 0 (read/write)
5	Logic Status and Feedback 1 (read-only)
6	Logic Command and Reference 1 (read/write)
7	Logic Status and Feedback 2 (read-only)
8	Logic Command and Reference 2 (read/write)
9	Logic Status and Feedback 3 (read-only)
10	Logic Command and Reference 3 (read/write)
11	Logic Status and Feedback 4 (read-only)
12	Logic Command and Reference 4 (read/write)
13	Logic Command, all drives (Masked) ⁽¹⁾ (read/write)
14	Logic Command 0 (Masked) ⁽¹⁾ (read/write)
15	Logic Command 1 (Masked) ⁽¹⁾ (read/write)
16	Logic Command 2 (Masked) ⁽¹⁾ (read/write)
17	Logic Command 3 (Masked) ⁽¹⁾ (read/write)
18	Logic Command 4 (Masked) ⁽¹⁾ (read/write)
19	Logic Status 0 (read-only)
20	Logic Command 0 (read/write)
21	Feedback 0 (read-only)
22	Reference 0 (read/write)
23	Logic Status 1 (read-only)
24	Logic Command 1 (read/write)
25	Feedback 1 (read-only)
26	Reference 1 (read/write)
27	Logic Status 2 (read-only)
28	Logic Command 2 (read/write)
29	Feedback 2 (read-only)
30	Reference 2 (read/write)
31	Logic Status 3 (read-only)
32	Logic Command 3 (read/write)
33	Feedback 3 (read-only)
34	Reference 3 (read/write)
35	Logic Status 4 (read-only)
36	Logic Command 4 (read/write)
37	Feedback 4 (read-only)
38	Reference 4 (read/write)

(1) The mask command WORD is set to the value of the second WORD of the data where there are ones in the first WORD of the data. Only the bits of the Logic Command that have the corresponding mask bit set are applied.

Class Attributes

Attribute ID	Access Rule	Description
1	Read	Revision
2	Read	Maximum Instance
3	Read	Number of Instance
100	Read/Write	Timeout

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Bad Flag	BOOL	If set to 1, then attribute 4 may contain invalid data. 0 = good 1 = bad
2	Get	Direction	BOOL	Direction of data transfer 0 = Product Register (drive to network) 1 = Consume Register (network to drive)
3	Get	Size	UINT	Size of register data in bits
4	Conditional ⁽¹⁾	Data	Array of Bits	Size of assembly data in bits

(1) For this attribute, the Access Rule is Get if Direction = 0. The Access Rule is Set if Direction = 1.

Parameter Object

Class Code

Hexadecimal	Decimal
0x0F	15

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x01	Yes	Yes	Get_Attribute_All
0x05	Yes	No	Reset
0x0E	Yes	Yes	Get_Attribute_Single
0x10	No	Yes	Set_Attribute_Single
0x4B	No	Yes	Get_Enum_String

Instances (Single-Drive)

Instance	Description
0	Class
1	Drive Parameter 1
⋮	⋮
n	Drive Parameter n ⁽¹⁾
n + 1	Adapter Parameter 1
⋮	⋮
n + m	Adapter Parameter m ⁽²⁾

(1) n represents the number of parameters in the drive.

(2) m represents the number of parameters in the adapter.

Instances (Multi-Drive)

Instance	Description
0	Class
1	Adapter Parameter 1
⋮	⋮
m	Adapter Parameter m ⁽¹⁾

(1) m represents the number of parameters in the drive.

In addition, the parameters for the other DSI devices can be accessed using the instance-offset encoding shown in the table below:

Instances (Hex.)	Instances (Dec.)	Single-Drive Mode	Multi-Drive Mode
0x0000...0x3FFF	0...16383	Instances 0...16383 in the drive and adapter	Instances 0...16383 in the adapter
0x4000...0x43FF	16384...17407	Instances 0...1023 in the adapter	Instances 0...1023 in the adapter
0x4400...0x47FF	17408...18431	Instances 0...1023 in the drive	Instances 0...1023 in Drive 0
0x4800...0x4BFF	18432...19455	Instances 0...1023 in the DSI device	Instances 0...1023 in Drive 1
0x4C00...0x4FFF	19456...20479	Instances 0...1023 in the adapter	Instances 0...1023 in Drive 2
0x5000...0x53FF	20480...21503	Not supported	Instances 0...1023 in Drive 3
0x5400...0x57FF	21504...22527	Not supported	Instances 0...1023 in Drive 4

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Revision	UINT	1
2	Get	Max Instance	UINT	Number of parameters
8	Get	Parameter Class Descriptor	WORD	0 = False, 1 = True Bit 0 = Supports parameter instances Bit 1 = Supports full attributes Bit 2 = Must do NVS save command Bit 3 = Parameters are stored in NVS
9	Get	Configuration Assembly Instance	UINT	0
10	Get	Native Language	USINT	1 = English 2 = French 3 = Spanish 4 = Italian 5 = German 6 = Japanese 7 = Portuguese 8 = Chinese Simplified 9 = Reserved 10 = Reserved 11 = Korean 12 = Polish 13 = Reserved 14 = Turkish 15 = Czech

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	(1)	Parameter Value	(2)	(3)
2	Get	Link Path Size	USINT	0 = No link specified n = The size of Attribute 3 in bytes
3	Get	Link Path		(4)
4	Get	Descriptor	WORD	0 = False, 1 = True Bit 1 = Supports ENUMs Bit 2 = Supports scaling Bit 3 = Supports scaling links Bit 4 = Read only Bit 5 = Monitor Bit 6 = Extended precision scaling
5	Get	Data Type	USINT	0xC2 = SINT (8-bits) 0xC3 = INT (16-bits) 0xC4 = DINT (32-bits) 0xC6 = USINT (8-bits) 0xC7 = UINT (16-bits) 0xCA = REAL (32-bits) 0xD2 = WORD (16-bits)
6	Get	Data Size	USINT	(3)
7	Get	Parameter Name String	SHORT_STRING	(3)
8	Get	Units String	SHORT_STRING	(3)
9	Get	Help String	SHORT_STRING	(3)
10	Get	Minimum Value	(1)	(3)
11	Get	Maximum Value	(1)	(3)
12	Get	Default Value	(1)	(3)
13	Get	Scaling Multiplier	UINT	(3)

Attribute ID	Access Rule	Name	Data Type	Description
14	Get	Scaling Divisor	UINT	(3)
15	Get	Scaling Base	UINT	(3)
16	Get	Scaling Offset	UINT	(3)
17	Get	Multiplier Link	UINT	(3)
18	Get	Divisor Link	UINT	(3)
19	Get	Base Link	UINT	(3)
20	Get	Offset Link	UINT	(3)
21	Get	Decimal Precision	USINT	(3)

- (1) Access rule is defined in bit 4 of instance attribute 4. 0 = Get/Set, 1 = Get.
- (2) Specified in descriptor, data type, and data size.
- (3) Value varies based on parameter instance.
- (4) Refer to the CIP Common specification for a description of the link path.

PCCC Object

Class Code

Hexadecimal	Decimal
0x67	103

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x4B	No	Yes	Execute_PCCC
0x4C	No	Yes	Execute_DH+

Instances

Supports Instance 1.

Class Attribute

Not supported.

Instance Attributes

Not supported.

Message Structure for Execute_PCCC

Request		
Name	Data Type	Description
Length	USINT	Length of requestor ID
Vendor	UINT	Vendor number of requestor
Serial Number	UDINT	ASA serial number of request
Other	Product Specific	Identifier of user, task, etc. on the requestor
CMD	USINT	Command byte
STS	USINT	0
TNSW	UINT	Transport word
FNC	USINT	Function code. Not used for all CMDs.
PCCC_params	Array of USINT	CMD/FNC specific parameters

Response		
Name	Data Type	Description
Length	USINT	Length of requestor ID
Vendor	UINT	Vendor number of requestor
Serial Number	UDINT	ASA serial number of request
Other	Product Specific	Identifier of user, task, etc. on the requestor
CMD	USINT	Command byte
STS	USINT	Status byte
TNSW	UINT	Transport word. Same value as the request.
EXT_STS	USINT	Extended Status. Not used for all CMDs.
PCCC_results	Array of USINT	CMD/FNC specific result data

Message Structure for Execute_DH+

Request		
Name	Data Type	Description
DLink	UINT	Destination Link ID
DSta	USINT	Destination Station number
DUser	USINT	Destination "User" number
SLink	UINT	Source Link ID
SSta	USINT	Source Station number
SUser	USINT	Source User number
CMD	USINT	Command byte
STS	USINT	0
TNSW	UINT	Transport word
FNC	USINT	Function code. Not used for all CMDs.
PCCC_params	Array of USINT	CMD/FNC specific parameters

Response		
Name	Data Type	Description
DLink	UINT	Destination Link ID
DSta	USINT	Destination Station number
DUser	USINT	Destination "User" number
SLink	UINT	Source Link ID
SSta	USINT	Source Station number
SUser	USINT	Source User number
CMD	USINT	Command byte
STS	USINT	Status byte
TNSW	UINT	Transport word. Same value as the request.
EXT_STS	USINT	Extended Status. Not used for all CMDs.
PCCC_results	Array of USINT	CMD/FNC specific result data

The Dual-port EtherNet/IP adapter supports the following PCCC command types:

CMD	FNC	Description
0x06	0x03	Identify host and some status
0x0F	0x67	PLC-5 typed write
0x0F	0x68	PLC-5 typed read
0x0F	0x95	Encapsulate other protocol
0x0F	0xA2	SLC 500 protected typed read with 3 address fields
0x0F	0xAA	SLC 500 protected typed write with 3 address fields
0x0F	0xA1	SLC 500 protected typed read with 2 address fields
0x0F	0xA9	SLC 500 protected typed write with 2 address fields
0x0F	0x00	Word range read
0x0F	0x01	Word range write

For more information regarding PCCC commands, see DFI Protocol and Command Set Manual (Allen-Bradley publication [1770-6.5.16](#)).

N-Files

N-File	Description		
N41	<p style="text-align: center;">For Single-Drive Mode Only</p> <p>This N-file lets you read and write control I/O messages. You can write control I/O messages only when all of the following conditions are true:</p> <ul style="list-style-type: none"> The adapter is not receiving I/O from a scanner. For example, there is no scanner on the network, the scanner is in idle (program) mode, the scanner is faulted, or the adapter is not mapped to the scanner. The value of N42:3 is set to a non-zero value. <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;"><i>Write</i></td> <td style="width: 50%; text-align: center;"><i>Read</i></td> </tr> </table>	<i>Write</i>	<i>Read</i>
<i>Write</i>	<i>Read</i>		

N-File	Description	
N41:0	Logic Command Word	Logic Status Word
N41:1	Unused	Unused
N41:2	Reference	Feedback
N41:3	Unused	Unused
N41:4	Datalink From Net 1	Datalink To Net 1
N41:5	Unused	Unused
N41:6	Datalink From Net 2	Datalink To Net 2
N41:7	Unused	Unused
N41:8	Datalink From Net 3	Datalink To Net 3
N41:9	Unused	Unused
N41:10	Datalink From Net 4	Datalink To Net 4
N42	This N-file lets you read and write some values configuring the port	
N42:3	Time-out (read/write): Time (in seconds) allowed between messages to the N41 or N44 file. If the adapter does not receive a message in the specified time, it performs the fault action configured in parameter C143 [EN Comm Flt Action].	
N42:7	Adapter Port Number (read only): DPI port on the drive to which the adapter is connected.	
42:8	Peer Adapters (read only): Bit field of devices having DPI Peer capabilities.	
N44	For Multi-drive mode Only	
	This N-file lets you read and write control I/O messages. You can write control I/O messages only when all of the following conditions are true:	
	<ul style="list-style-type: none"> The adapter is not receiving I/O from a scanner. For example, there is no scanner on the network, the scanner is in idle (program) mode, the scanner is faulted, or the adapter is not mapped to the scanner. The value of N42:3 is set to a non-zero value. 	
	Write	Read
N44:0	Drive 0 Logic Command	Drive 0 Logic Status
N44:1	Unused	Unused
N44:2	Drive 0 Reference	Drive 0 Feedback
N44:3	Drive 1 Logic Command	Drive 1 Logic Status
N44:4	Drive 0 Reference	Drive 1 Feedback
N44:5	Drive 2 Logic Command	Drive 2 Logic Status
N44:6	Drive 2 Reference	Drive 2 Feedback
N44:7	Drive 3 Logic Command	Drive 3 Logic Status
N44:8	Drive 3 Reference	Drive 3 Feedback
N44:9	Drive 4 Logic Command	Drive 4 Logic Status
N44:10	Drive 4 Reference	Drive 4 Feedback
N10...N18	These N-files lets you read and write parameter values in the drive and the adapter.	
	<i>Single-Drive Mode</i>	<i>Multi-Drive Mode</i>
N10:0	Number of parameters in the drive	Number of parameters in Drive 0
N10:1...999	Drive parameters 1...999	Drive 0 parameters 1...999
N11:0...999	Drive parameters 1000...1999	Drive 0 parameters 1000...1999
N12:0...999	Drive parameters 2000...2999	Drive 0 parameters 2000...2999
N13:0	Number of parameters in this adapter	Number of parameters in this adapter
N13:1...999	Parameters 1...999 in this adapter	Parameters 1...999 in this adapter
N14:0	Number of parameters in the DSI device	Number of parameters in Drive 1
N14:1...999	Parameters 1...999 in the DSI device	Drive 1 parameters 1...999
N15:0	Number of parameters in this adapter	Number of parameters in Drive 2
N15:1...999	Parameters 1...999 in this adapter	Drive 2 parameters 1...999
N16:0	Not supported	Number of parameters in Drive 3
N16:1...999	Not supported	Drive 3 parameters 1...999
N17:0	Not supported	Number of parameters in Drive 4
N17:1...999	Not supported	Drive 4 parameters 1...999
N18:0	Not supported	Number of parameters in this adapter
N18:1...999	Not supported	Parameters 1...999 in this adapter

DPI Device Object

Class Code

Hexadecimal	Decimal
0x92	146

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	Yes	Yes	Set_Attribute_Single

Instances

The number of instances depends on the number of components in the device. The total number of components can be read in Instance 0, Class Attribute 4.

Instances (Hex.)	Instances (Dec.)	Single-Drive Mode	Multi-Drive Mode
0x0000...0x3FFF	0...16383	Instances 0...1023 in the drive	Instances 0...1023 in Drive 0
0x4000...0x43FF	16384...17407	Instances 0...1023 in the interface ⁽¹⁾	Instances 0...1023 in the interface ⁽¹⁾
0x4400...0x47FF	17408...18431	DSI	Instances 0...1023 in Drive 1
0x4800...0x4BFF	18432...19455	Option	Instances 0...1023 in Drive 2
0x4C00...0x4FFF	19456...20479	Not supported	Instances 0...1023 in Drive 3
0x5000...0x53FF	20480...21503	Not supported	Instances 0...1023 in Drive 4
0x5400...0x57FF	21504...22527	Not supported	Instances 0...1023 in the Option

(1) Interface is the current interface being used to access the information.

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
0	Get	Family Code	USINT	0x00 = DSI Peripheral 0x09 = Single Mode 0x0B = Multi-Drive Mode 0x1E = 25-COMM-X Option Module 0xFF = HIM
1	Get	Family Text	STRING[16]	Text identifying the device.
2	Set	Language Code	USINT	1 = English 2 = French 3 = Spanish 4 = Italian 5 = German 6 = Japanese 7 = Portuguese 8 = Chinese Simplified 9 = Reserved 10 = Reserved 11 = Korean 12 = Polish 13 = Reserved 14 = Turkish 15 = Czech

Attribute ID	Access Rule	Name	Data Type	Description
3	Get	Product Series	USINT	1 = A 2 = B ...
4	Get	Number of Components	USINT	Number of components (for example, main control board, I/O boards) in the device.
5	Set	User Definable Text	STRING[16]	Text identifying the device with a user-supplied name.
6	Get	Status Text	STRING[12]	Text describing the status of the device.
7	Get	Configuration Code	USINT	Identification of variations.
8	Get	Configuration Text	STRING[16]	Text identifying a variation of a family device.
9	Get	Brand Code	UINT	0x0001 = Allen-Bradley
11	Get	NVS Checksum	UINT	Checksum of the Non-Volatile Storage in a device.
12	Get	Class Revision	UINT	2
13	Get	Character Set Code	USINT	0 = SCANport HIM 1 = ISO 8859-1 (Latin 1) 2 = ISO 8859-2 (Latin 2) 3 = ISO 8859-3 (Latin 3) 4 = ISO 8859-4 (Latin 4) 5 = ISO 8859-5 (Cyrillic) 6 = ISO 8859-6 (Arabic) 7 = ISO 8859-7 (Greek) 8 = ISO 8859-8 (Hebrew) 9 = ISO 8859-9 (Turkish) 10 = ISO 8859-10 (Nordic) 255 = ISO 10646 (Unicode)
14	Get	Product Option Support	BOOL[64]	—
15	Get	Languages Supported	STRUCT of: USINT USINT[n]	Number of Languages Language Codes (see Class Attribute 2)
16	Get	Date of Manufacture	STRUCT of: UINT USINT USINT	Year Month Day
17	Get	Product Revision	STRUCT of: USINT USINT	Major Firmware Release Minor Firmware Release
18	Get	Serial Number	UDINT	Value between 0x00000000 and 0xFFFFFFFF
29	Get	Extended Product Option Support	BOOL[64]	—
30	Get	International Status Text	STRINGN	Text describing the status of device with support for Unicode.
31	Get/Set	International User Definable Text	STRINGN	Text identifying the device with a user-supplied name with support for Unicode.
34	Get	Key Information	STRUCT of: UDINT UDINT UINT UINT UINT USINT USINT USINT USINT USINT[16]	Rating Code Device Serial Number Customization Code Customization Revision Brand Code Family Code Config Code Language Code Major Revision Minor Revision Customer-Generated Firmware UUID
35	Get	NVS CRC	UDINT	A 32-bit CRC of the Non-Volatile Storage in a device.
38	Set	ADC Configuration Signature	USINT[16]	Value stored by the device and zeroed if its configuration changes.

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
3	Get	Component Name	STRING[32]	Name of the component
4	Get	Component Firmware Revision	STRUCT of: USINT USINT	Major Revision Minor Revision
8	Get	Component Serial Number	UDINT	Value between 0x00000000 and 0xFFFFFFFF
9	Get	International Component Name	STRING	Name of the component with support for Unicode.

DPI Parameter Object

Class Code

Hexadecimal	Decimal
0x93	147

Instances

The number of instances depends on the number of components in the device. The total number of components can be read in Instance 0, Attribute 0.

Instances (Hex.)	Instances (Dec.)	Single-Drive Mode	Multi-Drive Mode
0x0000...0x3FFF	0...16383	Instances 0...1023 in the drive	Instances 0...1023 in Drive 0
0x4000...0x43FF	16384...17407	Instances 0...1023 in the adapter	Instances 0...1023 in the adapter
0x4400...0x47FF	17408...18431	Instances 0...1023 in the DSI device	Instances 0...1023 in Drive 1
0x4800...0x4BFF	18432...19455	Instances 0...1023 in the adapter	Instances 0...1023 in Drive 2
0x4C00...0x4FFF	19456...20479	Not supported	Instances 0...1023 in Drive 3
0x5000...0x53FF	20480...21503	Not supported	Instances 0...1023 in Drive 4
0x5400...0x57FF	21504...22527	Not supported	Instances 0...1023 in the adapter

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
0	Get	Number of Instances	UINT	Number of parameters in the device
1	Set	Write Protect Password	UINT	0 = Password disabled n = Password value
2	Set	NVS Command Write	USINT	0 = No Operation 1 = Store values in active memory to NVS 2 = Load values in NVS to active memory 3 = Load default values to active memory 4 = Partial defaults 5 = System defaults
3	Get	NVS Parameter Value Checksum	UINT	Checksum of all parameter values in a user set in NVS
5	Get	First Accessible Parameter	UINT	First parameter available if parameters are protected by passwords. A "0" indicates all parameters are protected.
7	Get	Class Revision	UINT	2

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
6	Get	DPI Offline Read Full	STRUCT of: BOOL[32] CONTAINER CONTAINER CONTAINER STRING[16] STRING[4] UINT UINT UINT UINT UINT UINT UINT USINT USINT UINT UINT CONTAINER UINT UNIT UNIT INT	Descriptor Offline Minimum value Offline Maximum value Offline Default value Parameter name Offline parameter units Online minimum parameter instance Online maximum parameter instance Online default parameter instance Multiplier parameter instance Divisor parameter instance Base parameter instance Offset parameter instance Formula number Pad byte (always zero) Help instance Pad word (always a value of zero) Parameter value Multiplier Divisor Base Offset
7	Get	DPI Online Read Full	STRUCT of: BOOL[32] CONTAINER ⁽¹⁾ CONTAINER CONTAINER CONTAINER UINT UINT STRING[4] UINT UINT UINT INT USINT[3] USINT STRING[16]	Descriptor (see page 148) Parameter value Minimum value Maximum value Default value Next parameter Previous parameter Units (for example, Amps, Hz) Multiplier ⁽²⁾ Divisor ⁽²⁾ Base ⁽²⁾ Offset ⁽²⁾ Link (source of the value) (0 = no link) Always zero (0) Parameter name
8	Get	DPI Descriptor	BOOL[32]	Descriptor (see page 148)
9	Get/Set	DPI Parameter Value	Various	Name of the component with support for Unicode.
10	Get/Set	DPI RAM Parameter Value	Various	Parameter value in NVS. ⁽³⁾
14	Get	DPI Parameter Name	STRING[16]	Parameter name
18	Get	International DPI Offline Parameter Text	Struct of: STRINGN STRINGN	International parameter name International offline units
19	Get	International DPI Online Parameter Text	Struct of: STRINGN STRINGN	International parameter name International online units

Attribute ID	Access Rule	Name	Data Type	Description
20	Get	International DPI Online Read Full	Struct of: BOOL[32] CONTAINER CONTAINER CONTAINER CONTAINER UINT UINT UINT UINT UINT INT USINT[3] USINT BOOL[32] STRINGN STRINGN	Descriptor Parameter value Online minimum value Online maximum value Online default value Next Previous Multiplier Divisor Base Offset Link Pad word (always zero) Extended descriptor International parameter name International online parameter unit
21	Get	DPI Extended Descriptor	UDINT	Extended Descriptor (see page 149)
22	Get	International DPI Offline Read Full	Struct of: BOOL CONTAINER CONTAINER CONTAINER UINT UINT UINT UINT UINT UINT UINT UINT USINT USINT UINT UINT CONTAINER UINT UINT UINT INT BOOL[32] STRINGN STRINGN	Descriptor Offline minimum value Offline maximum value Offline default value Online minimum parameter instance Online maximum parameter instance Online default parameter instance Multiplier parameter instance Divisor parameter instance Base parameter instance Offset parameter instance Formula number Pad word (always zero) Help instance Pad word (always a value of zero) Parameter value Multiplier Divisor Base Offset Extended DSI descriptor International DSI parameter name International DSI offline parameter units

- (1) A CONTAINER is a 32-bit block of data that contains the data type used by a parameter value. If signed, the value is sign extended. Padding is used in the CONTAINER to ensure that it is always 32-bits.
- (2) This value is used in the formulas used to convert the parameter value between display units and internal units. See [Formulas for Converting on page 150](#).
- (3) Do NOT continually write parameter data to NVS. See the attention on [page 73](#).

Descriptor Attributes

Bit	Name	Description
0	Data Type (Bit 1)	Right bit is least significant bit (0).
1	Data Type (Bit 2)	000 = USINT used as an array of Boolean
2	Data Type (Bit 3)	001 = UINT used as an array of Boolean 010 = USINT (8-bit integer) 011 = UINT (16-bit integer) 100 = UDINT (32-bit integer) 101 = TCHAR ((8-bit (not Unicode) or 16-bits (Unicode)) 110 = REAL (32-bit floating point value) 111 = Use bits 16, 17, 18
3	Sign Type	0 = unsigned 1 = signed
4	Hidden	0 = visible 1 = hidden
5	Not a Link Sink	0 = May be the sink end of a link 1 = May not be the sink end of a link
6	Not Recallable	0 = Recallable from NVS 1 = Not Recallable from NVS
7	ENUM	0 = No ENUM text 1 = ENUM text
8	Writable	0 = Read only 1 = Read/write
9	Not Writable When Enabled	0 = Read only 1 = Read/write
10	Instance	0 = Writable when enabled (e.g., drive running) 1 = Not writable when enabled
11	Uses Bit ENUM Mask	This parameter instance supports the Bit ENUM Mask attribute. For more information, see the definition of the attribute.
12	Decimal Place (Bit 0)	Number of digits to the right of the decimal point.
13	Decimal Place (Bit 1)	0000 = 0
14	Decimal Place (Bit 2)	1111 = 15
15	Decimal Place (Bit 3)	
16	Extended Data Type (Bit 4)	Bit 16 is the least significant bit.
17	Extended Data Type (Bit 5)	000 = Reserved
18	Extended Data Type (Bit 6)	001 = UDINT used as an array of Boolean 010 = Reserved 011 = Reserved 100 = Reserved 101 = Reserved 110 = Reserved 111 = Reserved
19	Parameter Exists	Used to mark parameters that are not available to network tools.
20	Not Used	Reserved
21	Formula Links	Indicates the Formula Data is derived from other parameters.
22	Access Level (Bit 1)	A 3-bit field used to control access to parameter data.
23	Access Level (Bit 2)	
24	Access Level (Bit 3)	
25	Writable ENUM	ENUM text: 0 = Read Only, 1 = Read/Write
26	Not a Link Source	0 = May be the source end of a link 1 = May not be the source end of a link
27	Enhanced Bit ENUM	Parameter supports enhanced bit ENUMs.
28	Enhanced ENUM	Parameter supports enhanced ENUMs.
29	Uses DSI Limits Object	Parameter uses the DSI Limits Object. Intelligent offline tools make use of the Limits Object to select limits and units.
30	Extended Descriptor	Parameter uses Extended Descriptor bits, which can be obtained by reading the DSI Extended Descriptor attribute for this parameter.
31	Always Upload/Download	Parameter shall always be included in uploads and downloads.

Extended Descriptor Attributes

Bit	Name	Description
0	Indirect Mode	0 = Analog (selects entire parameters) 1 = Digital (selects individual bits within parameters)
1	Indirect Type 0	Analog input list (Instance 0xFFFF)
2	Indirect Type 1	Digital input list (Instance 0xFFFE)
3	Indirect Type 2	Feedback list (Instance 0xFFFD)
4	Indirect Type 3	Analog output list (Instance 0xFFFC)
5	Indirect Type 4	Digital output list (Instance 0xFFFB)
6	Indirect Type 5	Undefined (Instance 0xFFFA)
7	Indirect Type 6	Undefined (Instance 0xFF9)
8	Indirect Type 7	Undefined (Instance 0xFF8)
9	Indirect Type 8	Undefined (Instance 0xFF7)
10	Indirect Type 9	Undefined (Instance 0xFF6)
11	Indirect Type 10	Undefined (Instance 0xFF5)
12	Indirect Type 11	Undefined (Instance 0xFF4)
13	Indirect Type 12	Undefined (Instance 0xFF3)
14	Indirect Type 13	Undefined (Instance 0xFF2)
15	Indirect Type 14	Parameter-specific list
16	FP Max Decimals Bit 0	These four bits are used on REAL parameters only. They indicate the maximum number of decimal places to be displayed for small values. A value of 0 indicates to not limit the number of decimal places used.
17	FP Max Decimals Bit 1	
18	FP Max Decimals Bit 2	
19	FP Max Decimals Bit 3	
20	Extended Parameter Reference	0 = Not an Extended Parameter Reference 1 = Extended Parameter Reference An Extended Parameter Reference contains a reference to another parameter. The value is formatted the same as an analog mode Indirect Selector parameter (SSpppp, where SS = slot number of device to which this Extended Parameter Reference is pointing, and pppp = number of the parameter or diagnostic item to which this Extended Parameter Reference is pointing). Note that an Extended Parameter Reference can only select parameters unlike an Indirect Selector. An Extended Parameter Reference could be used to configure a Datalink or show the source of a Reference (among other uses).
21	Uses Rating Table Object	This parameter has rating-dependent defaults and limits that can be obtained from the Rating Table Object. The Offline Read Full will include the default value for the smallest rating and limits that will accommodate the full range of values allowed in the family of devices using this particular combination of Family Code and Config Code. The Online Read Full will include the rating-dependent default and limit values for this particular combination of Family Code, Config Code, and Rating Code.
22	Writable Referenced Parameter	This bit must be zero unless the parameter is an Extended Parameter Reference. If the parameter is an Extended Parameter Reference, then: 0 = The referenced parameter may be read-only or writable. 1 = The referenced parameter must always be writable (including while running).
23	Disallow Zero	This bit must be zero unless the parameter is an Indirect Selector or Extended Parameter Reference. If the parameter is an Indirect Selector or Extended Parameter Reference, then: 0 = Allow zero 1 = Disallow zero If this bit is cleared (indicating that a value of zero is allowed), the device must support the "Zero Text" parameter attribute so that a software tool or HIM can obtain text from the Zero Text parameter attribute. If this bit is set (indicating that a value of zero is disallowed), a software tool or HIM will not allow the user to enter a value of zero.
24	Datalink Out	This bit is used by offline tools and indicates that this is a Datalink Out parameter. Bit 20 must also be set.
25	Datalink In	This bit is used by offline tools and indicates that this is a Datalink In parameter. Bits 20 and 22 must also be set.
26	Not Writable While IO Active	This parameter cannot be written if the I/O data being exchanged between the Host and the peripheral is valid.
27	Command Parameter	This parameter commands the drive to take an action, such as "Reset Defaults" or "Autotune," and then returns to a value of zero. Offline software tools will not allow setting this parameter to anything other than a value of zero. If an offline file contains a Command Parameter with a non-zero value, the offline software tool will change the value to zero. Note that command parameters cannot have values that do not return to zero.
28	Current Value Is Default	This bit identifies a parameter that will not change if a "Reset Defaults" is commanded. For example, if a drive contains a Language parameter that is set to German, setting defaults will leave the parameter set to German. Likewise, if the parameter is set to French, setting defaults will leave the parameter set to French.
29	Use Zero Text	If the "Disallow Zero" bit is set, this bit must be cleared. If the "Disallow Zero" bit is cleared, then: 0 = Use Disabled Text parameter class attribute. 1 = Use Zero Text parameter instance attribute.
30...31	Reserved	Reserved

Formulas for Converting

Display Value = ((Internal Value + Offset) x Multiplier x Base) / (Divisor x 10^{Decimal Places})
 Internal Value = ((Display Value x Divisor x 10^{Decimal Places}) / (Multiplier x Base)) - Offset

Common Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	Yes	Yes	Set_Attribute_Single

Object Specific Services

Service Code	Implemented for:		Service Name	Allocation Size (in bytes)	
	Class	Instance		Par. Number	Par. Value
0x32	Yes	No	Get_Attributes_Scattered	4	4
0x34	Yes	Yes	Set_Attributes_Scattered	4	4

The table below lists the parameters for the Get_Attributes_Scattered and Set_Attributes_Scattered object-specific service:

Name	Data Type	Description
Parameter Number	UINT	Parameter to read or write
Parameter Value	UINT	Parameter value write (zero when reading)

The response data appears in the following format:

Name	Data Type	Description
Parameter Number	UINT	Parameter read or write ⁽¹⁾
Parameter Value	UINT	Parameter value read (zero when writing) ⁽²⁾

(1) If an error occurred, bit 15 will be turned on in the response.

(2) If an error occurred, the error code will appear instead of the value.

DPI Fault Object

Class Code

Hexadecimal	Decimal
0x97	151

Products such as PowerFlex drives use this object for faults. Adapters use this object for events.

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	Yes	Yes	Set_Attribute_Single

Instances

The number of instances depends on the maximum number of faults or events supported in the queue. The maximum number of faults/events can be read in Instance 0, Attribute 2.

Instances (Hex.)	Instances (Dec.)	Single-Drive Mode	Multi-Drive Mode
0x0000...0x3FFF	0...16383	Instances 0...1023 in the drive	Instances 0...1023 in Drive 0
0x4000...0x43FF	16384...17407	Instances 0...1023 in the interface ⁽¹⁾	Instances 0...1023 in the interface ⁽¹⁾
0x4400...0x47FF	17408...18431	DSI	Instances 0...1023 in Drive 1
0x4800...0x4BFF	18432...19455	Option	Instances 0...1023 in Drive 2
0x4C00...0x4FFF	19456...20479	Not supported	Instances 0...1023 in Drive 3
0x5000...0x53FF	20480...21503	Not supported	Instances 0...1023 in Drive 4
0x5400...0x57FF	21504...22527	Not supported	Instances 0...1023 in the Option

(1) Interface is the current interface being used to access the information.

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Class Revision	UINT	Revision of object
2	Get	Number of Instances	UINT	Maximum number of faults/events that the device can record in its queue
3	Set	Fault Command Write	USINT	0 = No Operation 1 = Clear Fault/Event 2 = Clear Fault/Event Queue 3 = Reset Device
4	Get	Fault Trip Instance Read	UINT	Fault that tripped the device. For adapters, this value is always 1 when faulted.
6	Get	Number of Recorded Faults	UINT	Number of faults/events in the queue. A "0" indicates the fault queue is empty.
7	Get	Fault Parameter Reference	UINT	Reserved

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
0	Get	Full/All Information	STRUCT of UINT STRUCT of: USINT USINT STRING[16] STRUCT of: LWORD BOOL[16] UINT CONTAINER[n]	Fault code Fault source DSI port DSI Device Object Fault text Fault time stamp Timer value (0 = timer not supported) BOOL[0]: (0 = invalid data, 1 = valid data) BOOL[1]: (0 = elapsed time, 1 = real time) BOOL[2...15]: Not used Reserved Reserved
1	Get	Basic Information	STRUCT of UINT STRUCT of: USINT USINT STRUCT of: LWORD BOOL[16]	Fault code Fault source DSI port DSI Device Object Fault time stamp Timer value (0 = timer not supported) BOOL[0]: (0 = invalid data, 1 = valid data) BOOL[1]: (0 = elapsed time, 1 = real time) BOOL[2...15]: Not used
2	Get	International Fault Text	STRINGN	Text describing the fault with support for Unicode.

TCP/IP Interface Object

Class Code

Hexadecimal	Decimal
0xF5	245

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	No	Yes	Set_Attribute_Single

Instances

The adapter supports one instance of the TCP/IP Interface object.

Number	Description
0	Class Attribute
1	Object Attribute

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Class Revision	UINT	The revision of this object

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Status of TCP/IP Network Interface	UDINT	Bit Value 0...3 = Configuration status 0 = Not configured 1 = Configured using BOOTP, DHCP, or parameters 2 = Configured using Node Address switches 3...15 = Reserved 4 = Reserved 5 = Configuration pending 6 = Duplicate IP address 7...15 = Reserved
2	Get	Configuration Capability	UDINT	Bit Value (0 = False, 1 = True) 0 = Supports BOOTP 1 = DNS Client (able to resolve host names by query to DNS server) 2 = DHCP Client (able to obtain network configuration through DHCP) 3 = DHCP-DNS Update (able to send its host name in the DHCP request) 4 = Configuration Settable (able to set the network configuration using TCP/IP object) 5 = Hardware Configurable (able to set the network configuration using the Node Address switches) 6 = Configuration change requires reset 7 = Address Conflict Detection (ACD) capable 8...31 = Reserved

Attribute ID	Access Rule	Name	Data Type	Description
3	Set	Configuration Control	UDINT	Bit Value 0...3 = Startup configuration 0 = Use configuration saved in NVS 1 = Obtain configuration using BOOTP 2 = Obtain configuration using DHCP 3...15 = Reserved 4 = DNS Enabled (resolves host names by query to DNS server) 5...31 = Reserved
4	Get	Physical Link Object	STRUCT of: UINT Padded EPATH	Path size Path
5	Get	Interface Configuration	STRUCT of: UDINT UDINT UDINT UDINT UDINT STRING	Adapter IP address Adapter subnet mask Adapter gateway address Primary name server Secondary name server Default domain name
6	Set	Host Name	STRING	Host name when using DHCP
10	Set	Select ACD	BOOL	Activates the use of ACD
11	Set	Last Conflict Detected	STRUCT of: USINT USINT[6] USINT[28]	ACD Activity Remote MAC ARP PDU

Ethernet Link Object

Class Code

Hexadecimal	Decimal
0xF6	246

Services

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x4C	No	Yes	Get_and_Clear
0x10	No	Yes	Set_Attribute_Single

Instances

The adapter supports one instance of the TCP/IP Interface object.

Number	Description
0	Class Attributes
1	ENET1 Network Port
2	ENET2 Network Port

Class Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Class Revision	UINT	The revision of this object

Instance Attributes

Attribute ID	Access Rule	Name	Data Type	Description
1	Get	Interface Speed	UDINT	Speed in megabits per second (Mbs)
2	Get	Interface Flags	UDINT	Bit Value 0 = Link status (0 = inactive, 1 = active) 1 = Duplex (0 = half duplex, 1 = full duplex) 2...31 = Reserved
3	Set	Physical Address	USINT[6]	MAC address (XX-XX-XX-XX-XX-XX) The first octet (USINT[0]) is on the left.
4	Get	Interface Counters	STRUCT of: UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT	Octets received Unicast packets received Non-unicast packets received Inbound packets received but discarded Inbound packets with errors (not discarded) Inbound packets with unknown protocol Octets sent Unicast packets sent Non-unicast packets sent Outbound packets discarded Outbound packets with errors

Attribute ID	Access Rule	Name	Data Type	Description
5	Get	Media Counters	STRUCT of: UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT UDINT	RX = Received, TX = Transmitted RX frames not having integral number of octets long RX frames not passing FCS check TX frames having one collision TX frames having multiple collisions Number of times of SQE test error message TX Frames delayed first attempt by busy medium Collisions detected later than 512 bit-times in trans. TX frames failing due to excessive collisions TX frames failing due to intern MAC sublayer TX error Times of carrier sense condition loss during trans RX frames exceeding the maximum frame size RX frames failing due to intern MAC sublayer RX error
6	Set	Interface Control	STRUCT of: WORD UINT	Control bits Forced interface speed
7	Get	Interface Type	USINT	Type of interface; 2 = twisted-pair
10	Get	Interface Label	SHORT_STRING	"1" = ENET1 network port "2" = ENET2 network port

Logic Command/Status Words: PowerFlex 525 Drives

Appendix D presents the definitions of the Logic Command and Logic Status words that are used for PowerFlex 525 drives.

Logic Command Word

Velocity Bit Definitions

Comm Logic Command – C122 = 0 "Velocity"																	
Logic Bits																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Command	Description
															x	Normal Stop	0 = Not Normal Stop 1 = Normal Stop
															x	Start ⁽¹⁾	0 = Not Start 1 = Start
														x		Jog 1 ⁽²⁾	0 = Not Jog 1 = Jog
												x				Clear Fault ⁽³⁾	0 = Not Clear Fault 1 = Clear Fault
										x	x					Unipolar Direction	00 = No Command 01 = Forward Command 10 = Reverse Command 11 = No Command
									x							Keypad	0 = Not Force Keypad Control 1 = Force Keypad Control
								x								MOP Increment	0 = Not MOP Increment 1 = MOP Increment
						x	x									Accel Time	00 = No Command 01 = Use Accel Rate 1 (P041 [Accel Time 1]) 10 = Use Accel Rate 2 (A442 [Accel Time 2]) 11 = Hold Accel Rate Selected
			x	x												Decel Time	00 = No Command 01 = Use Decel Rate 1 (P042 [Decel Time 1]) 10 = Use Decel Rate 2 (A443 [Decel Time 2]) 11 = Hold Decel Rate Selected
			x													Ref Select 1	000 = No Command
		x														Ref Select 2	001 = Freq. Source = P047 [Speed Reference 1] 010 = Freq. Source = P049 [Speed Reference 2]
	x															Ref Select 3	011 = Freq. Source = P051 [Speed Reference 3] 100 = A410 [Preset Freq 0] 101 = A411 [Preset Freq 1] 110 = A412 [Preset Freq 2] 111 = A413 [Preset Freq 3]
x																MOP Decrement	0 = Not MOP Decrement 1 = MOP Decrement

- (1) A Not Stop condition (logic bit 0 = 0) must first be present before a 1 = Start condition will start the drive.
- (2) A Not Stop condition (logic bit 0 = 0) must first be present before a 1 = Jog condition will jog the drive. A transition to a "0" will stop the drive.
- (3) To perform this command, the value must switch from "0" to "1."

Position Bit Definitions

Comm Logic Command – C122 = 1 "Position"																Command	Description
Logic Bits																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
															x	Normal Stop	0 = Not Normal Stop 1 = Normal Stop
															x	Start ⁽¹⁾	0 = Not Start 1 = Start
														x		Jog 1 ⁽²⁾	0 = Not Jog 1 = Jog
													x			Clear Fault ⁽³⁾	0 = Not Clear Fault 1 = Clear Fault
										x	x					Unipolar Direction	00 = No Command 01 = Forward Command 10 = Reverse Command 11 = No Command
									x							Logic Input 1	1 = Logic In 1
								x								Logic Input 2	1 = Logic In 2
				x	x	x										Frequency and Position Steps	000 = Frequency and Position Step 0 001 = Frequency and Position Step 1 010 = Frequency and Position Step 2 011 = Frequency and Position Step 3 100 = Frequency and Position Step 4 101 = Frequency and Position Step 5 110 = Frequency and Position Step 6 111 = Frequency and Position Step 7
				x												Find Home	1 = Find Home
			x													Hold Step	1 = Hold Step
		x														Redefine Position	1 = Pos Redefine
	x															Enable Sync	1 = Sync Enable
x																Disable Travel	1 = Travel Disable

- (1) A Not Stop condition (logic bit 0 = 0) must first be present before a 1 = Start condition will start the drive.
- (2) A Not Stop condition (logic bit 0 = 0) must first be present before a 1 = Jog condition will jog the drive. A transition to a "0" will stop the drive.
- (3) To perform this command, the value must switch from "0" to "1."

Logic Status Word

Velocity Bit Definitions

Comm Logic Status – C122 = 0 "Velocity"																Command	Description
Logic Bits																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
															x	Run Ready	0 = Not Ready to Run 1 = Ready to Run
															x	Active	0 = Not Active 1 = Active (Running)
														x		Command Direction	0 = Reverse 1 = Forward
												x				Actual Direction	0 = Rotating Reverse 1 = Rotating Forward
											x					Accel	0 = Not Accelerating 1 = Accelerating
										x						Decel	0 = Not Decelerating 1 = Decelerating
									x							Reserved	–
								x								Fault	0 = Not Faulted 1 = Faulted
							x									At Speed	0 = Not at Reference 1 = At Reference
						x										Main Frequency	0 = Not Controlled by Active Com 1 = Controlled by Active Com
					x											Operation Command	0 = Not Controlled by Active Com 1 = Controlled by Active Com
				x												Parameters	0 = Not Locked 1 = Locked
			x													Digital Input 1 Status	–
		x														Digital Input 2 Status	–
	x															Digital Input 3 Status	–
x																Digital Input 4 Status	–

Position Bit Definitions

Comm Logic Status – C122 = 1 "Position"																Command	Description	
Logic Bits																		
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			
															x	Run Ready	0 = Not Ready to Run 1 = Ready to Run	
															x	Active	0 = Not Active 1 = Active (Running)	
														x	Command Direction	0 = Reverse 1 = Forward		
												x				Actual Direction	0 = Rotating Reverse 1 = Rotating Forward	
											x					Accel	0 = Not Accelerating 1 = Accelerating	
										x							Decel	0 = Not Decelerating 1 = Decelerating
									x								Travel Position	0 = Reverse Travel Position 1 = Forward Travel Position
								x									Fault	0 = Not Faulted 1 = Faulted
							x										At Speed	0 = Not at Reference 1 = At Reference
						x											At Position	0 = Not at Position 1 = At Position
					x												Drive Home	0 = Not at Home 1 = At Home
				x													Commanded Home	0 = Not Drive Homed 1 = Drive Homed
			x														Sync Hold	0 = Not Sync Hold 1 = Sync Hold
		x															Sync Ramp	0 = Not Sync Ramp 1 = Ramp Sync
	x																Traverse	0 = Traverse Off 1 = Traverse On
x																	Traverse Decel	0 = Not Traverse Decel 1 = Traverse Decel

Notes:

The following terms and abbreviations are used throughout this manual. For definitions of terms not listed here, see the Allen-Bradley Industrial Automation Glossary, publication [AG-7.1](#).

Adapter Devices such as drives, controllers, and computers usually require an adapter to provide a communication interface between them and a network such as EtherNet/IP. An adapter reads data on the network and transmits it to the connected device. It also reads data in the device and transmits it to the network.

The EtherNet/IP Device Level Ring (DLR) adapter connects its PowerFlex 520-series drive to an EtherNet/IP network. Adapters are sometimes also called “cards,” “embedded communication options,” “gateways,” “modules,” and “peripherals.”

ADC (Automatic Device Configuration) An RSLogix 5000 (version 20) and Logix Designer (version 21 or greater) software feature that supports the automatic download of configuration data upon the Logix controller establishing an EtherNet/IP network connection to a PowerFlex 520-series drive and its associated peripherals.

BootP (Bootstrap Protocol) BootP lets the adapter configure itself dynamically at boot time if the network has a BootP server. The BootP server assigns the adapter a preconfigured IP address, a subnet mask, and a gateway address; therefore, you do not have to configure these using the parameters in the adapter. BootP can make it easier to administer an Ethernet network. A free version of Rockwell Software’s BootP Server can be accessed at <http://www.ab.com/networks>.

Bridge A network device that can route messages from one network to another. A bridge also refers to a communications module in a ControlLogix or CompactLogix controller that connects the controller to a network. See also Scanner.

CIP (Common Industrial Protocol) CIP is the transport and application layer protocol used for messaging over EtherNet/IP, ControlNet, and DeviceNet networks. The protocol is used for implicit messaging (real-time I/O) and explicit messaging (configuration, data collection, and diagnostics).

ControlFLASH An Allen-Bradley software tool that lets users electronically update firmware on printed circuit boards.

Controller A controller, also called programmable logic controller, is a solid-state control system that has a user-programmable memory for storage of instructions to implement specific functions such as I/O control, logic, timing, counting, report generation, communication, arithmetic, and data file manipulation. A controller consists of a central processor, input/output interface, and memory. See also Scanner.


- Data Rate** The speed at which data is transferred on the EtherNet/IP network. You can set the adapter to a data rate of 10Mbps Full-Duplex, 10Mbps Half-Duplex, 100Mbps Full-Duplex, or 100Mbps Half-Duplex. If another device on the network sets or auto-negotiates the data rate, you can set the adapter to automatically detect the data rate.
- Datalinks** A Datalink is a type of pointer used by PowerFlex 520-series drives to transfer data to and from the controller. Datalinks allow specified parameter value(s) to be accessed or changed without using explicit messages. When enabled, each 16-bit Datalink in a PowerFlex 520-series drive consumes 4 bytes in the input image table and/or 4 bytes in the output image table of the controller.
- Device-level Ring (DLR)** An Ethernet topology that consist of multiple devices configured in a circle-style connection, implemented at the device level, and with no additional switches required.
- DHCP (Dynamic Host Configuration Protocol)** DHCP lets the option module configure itself dynamically at restart if the network has a DHCP server. The DHCP server assigns the adapter a preconfigured IP address, a subnet mask, and a gateway address; therefore, you do not have to configure these using the parameters in the adapter. DHCP can make it easier to administer an Ethernet network. A free version of the Rockwell Software BOOTP-DHCP Server can be accessed at <http://www.ab.com/networks>.
- Duplex** Duplex describes the mode of communication. *Full-duplex* communications let a device exchange data in both directions at the same time. *Half-duplex* communications let a device exchange data only in one direction at a time. The duplex used by the adapter depends on the type of duplex that other network devices, such as switches, support.
- EDS (Electronic Data Sheet) Files** Simple text files that are used by network configuration tools to describe products so that you can easily commission them on a network. EDS files describe a product device type and revision. EDS files for many Allen-Bradley products can be found at <http://www.ab.com/networks/eds>.
- EtherNet/IP Network** EtherNet/IP (Industrial Protocol) is an open producer-consumer communication network based on the Ethernet standard (IEEE 802.3), TCP/IP, UDP/IP, and CIP. Designed for industrial communications, both I/O and explicit messages can be transmitted over the network. Each device is assigned a unique IP address and transmits data on the network. The number of devices that an EtherNet/IP network can support depends on the class of IP address. For example, a network with a Class C IP address can have 254 nodes.
- General information about EtherNet/IP and the EtherNet/IP specification are maintained by the Open DeviceNet Vendor's Association (ODVA). ODVA is online at <http://www.odva.org>.

- Explicit Messaging** Explicit messages are used to transfer data that does not require continuous updates. They are typically used to configure, monitor, and diagnose devices over the network.
- Fault Action** A fault action determines how the adapter and connected drive act when a communications fault (for example, a cable is disconnected) occurs or when the controller is switched out of run mode. The former uses a communications fault action, and the latter uses an idle fault action.
- Fault Configuration** When communications are disrupted (for example, a cable is disconnected), the adapter and its PowerFlex 520-series drive can respond with a user-defined fault configuration. The user sets the data that is sent to the drive using specific fault configuration parameters in the adapter. When a fault action parameter is set to use the fault configuration data and a fault occurs, the data from these parameters is sent as the Logic Command, Reference, and/or Datalink(s).
- Flash Update** The process of updating firmware in a device. The adapter can be flash updated using various Allen-Bradley software tools.
- Gateway** A device on a network that connects an individual network to a system of networks. When a node needs to communicate with a node on another network, a gateway transfers the data between the two networks. You need to configure the address for the gateway device in the adapter if you want the adapter to communicate with devices that are not on its network.
- Hardware Address** Each Ethernet device has a unique hardware address (sometimes called a MAC address) that is 48 bits. The address appears as six digits separated by colons (for example, xx:xx:xx:xx:xx:xx). Each digit has a value between 0 and 255 (0x00 and 0xFF). This address is assigned in the hardware and cannot be changed. It is required to identify the device if you are using a BootP utility.
- HIM (Human Interface Module)** A device that can be used to configure and control a drive. The PowerFlex 22-HIM-A3 or 22-HIM-C2S HIM can be used to configure PowerFlex 520-series drives and their connected peripherals.
- Hold Last** When communication is disrupted (for example, a cable is disconnected), the adapter and its PowerFlex 520-series drive can respond by holding last. Hold last results in the drive receiving the last data received through the network connection before the disruption. If the drive was running and using the Reference from the adapter, it will continue to run at the same Reference.
- Idle Action** An idle action determines how the adapter and its PowerFlex 520-series drive act when the controller is switched out of run mode.

I/O Data I/O data, sometimes called “implicit messages” or “input/output,” is time-critical data such as a Logic Command and Reference. The terms “input” (To Net) and “output” (From Net) are defined from the controller’s point of view. Output is produced by the controller and consumed by the adapter. Input is produced by the adapter and consumed by the controller.

IP Addresses A unique IP address identifies each node on an EtherNet/IP network. An IP address consists of 32 bits that are divided into four segments of one byte each. It appears as four decimal integers separated by periods (xxx.xxx.xxx.xxx). Each “xxx” can have a decimal value from 0 to 255. For example, an IP address could be 192.168.0.1.

An IP address has two parts: a network ID and a host ID. The class of network determines the format of the address.

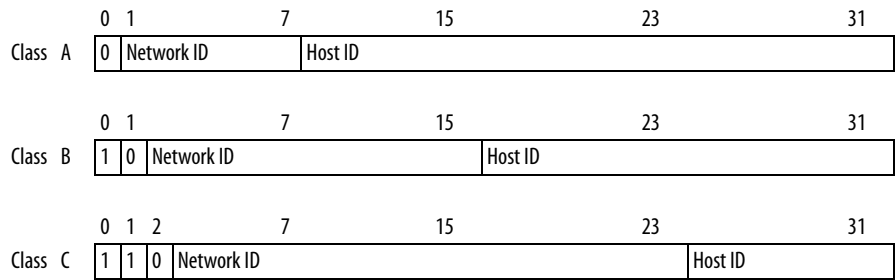

The number of devices on your EtherNet/IP network will vary depending on the number of bytes that are used for the network address. In many cases you are given a network with a Class C address, in which the first three bytes contain the network address (subnet mask = 255.255.255.0). This leaves 8 bits or 256 addresses on your network. Because two addresses are reserved for special uses (0 is an address for the network usually used by the router, and 255 is an address for broadcast messages to all network devices), you have 254 addresses to use on a Class C address block.

To ensure that each device on the Internet has a unique address, contact your network administrator or Internet Service Provider for unique fixed IP addresses. You can then set the unique IP address for the adapter by using a BootP server or by manually configuring parameters in the adapter. The adapter reads the values of these parameters only at power-up.

Logic Command/Logic Status The Logic Command is used to control the PowerFlex 520-series drive (for example, start, stop, direction). It consists of one 32-bit word of output to the adapter from the network. The definitions of the bits in this word are shown in [Appendix D](#).

The Logic Status is used to monitor the PowerFlex 520-series drive (for example, operating state, motor direction). It consists of one 32-bit word of input from the adapter to the network. The definitions of the bits in this word are shown in [Appendix D](#).

- Logix Designer** The Logix Designer application is the rebranding of RSLogix 5000 software and will continue to be the product to program Logix 5000 controllers for discrete, process, batch, motion, safety, and drive-based solutions. It is a 32-bit application that runs on various Windows operating systems. Information about Logix Designer software can be found at <http://www.software.rockwell.com/rslogix>.
- Master-Slave Hierarchy** An adapter configured for a master-slave hierarchy exchanges data with the master device. Usually, a network has one scanner which is the master device, and all other devices (for example, drives connected to EtherNet/IP adapters) are slave devices.
- On a network with multiple scanners (called a multi-master hierarchy), each slave device must have a scanner specified as a master.
- NVS (Non-Volatile Storage)** NVS is the permanent memory of a device. Devices such as the adapter and drive store parameters and other information in NVS so that they are not lost when the device loses power. NVS is sometimes called “EEPROM.”
- PCCC (Programmable Controller Communications Command)** PCCC is the protocol used by some controllers to communicate with devices on a network. Some software products (for example, DriveExplorer and DriveExecutive) also use PCCC to communicate.
- Ping** A message that is sent on the network to determine if a node exists.
- PowerFlex 525 Drives** The Allen-Bradley PowerFlex 525 drives are part of the PowerFlex 520-series of drives.
- PowerFlex 523 Drives** The Allen-Bradley PowerFlex 523 drives are part of the PowerFlex 520-series of drives.
- Reference/Feedback** The Reference is used to send a setpoint (for example, speed, frequency, torque) to the drive. It consists of one 32-bit word of output from the network to the adapter. Feedback is used to monitor the speed of the drive. It consists of one 32-bit word of input from the adapter to the network.
- RSLogix** RSLogix software is a tool for configuring and monitoring controllers to communicate with connected devices. It is a 32-bit application that runs on various Windows operating systems. Information about RSLogix software can be found at <http://www.software.rockwell.com/rslogix>.
- Scanner** A scanner is a separate module (of a multi-module controller) or a built-in component (of a single-module controller) that provides communication with adapters connected to a network. See also Controller.

Status Indicators Status indicators are LEDs that are used to report the status of the adapter, network, and drive. They are on the adapter and can be viewed on the front cover of the drive when the drive is powered.

Stop Action When communication is disrupted (for example, a cable is disconnected), the adapter and drive can respond with a stop action. A stop action results in the drive receiving zero as values for Logic Command, Reference, and Datalink data. If the drive was running and using the Reference from the adapter, it will stay running but at zero Reference.

Subnet Mask An extension to the IP addressing scheme that lets you use a single network ID for multiple physical networks. A bit mask identifies the part of the address that specifies the network and the part of the address that specifies the unique node on the network. A “1” in the subnet mask indicates the bit is used to specify the network. A “0” in the subnet mask indicates that the bit is used to specify the node.

For example, a subnet mask on a network may appear as follows: 11111111
11111111 11111111 11000000 (255.255.255.192). This mask indicates that 26 bits are used to identify the network and 6 bits are used to identify devices on each network. Instead of a single physical Class C network with 254 devices, this subnet mask divides it into four networks with up to 62 devices each.

Switches Network devices that provide virtual connections that help to control collisions and reduce traffic on the network. They are able to reduce network congestion by transmitting packets to an individual port only if they are destined for the connected device. In a control application, in which real time data access is critical, network switches may be required in place of hubs.

TCP (Transmission Control Protocol) EtherNet/IP uses this protocol to transfer Explicit Messaging packets using IP. TCP guarantees delivery of data through the use of retries.

UDP (User Datagram Protocol) EtherNet/IP uses this protocol to transfer I/O packets using IP. UDP provides a simple, but fast capability to send I/O messaging packets between devices. This protocol ensures that adapters transmit the most recent data because it does not use acknowledgements or retries.

UDDT (User-Defined Data Type) A structure data type that you define during the development of an application (for example, to convert 32-bit REAL parameter data to correctly write and read their values).

Zero Data When communications are disrupted (for example, a cable is disconnected), the adapter and drive can respond with zero data. Zero data results in the drive receiving zero as values for Logic Command, Reference, and Datalink data. If the drive was running and using the Reference from the adapter, it will stay running but at zero Reference.

A

adapter

- adding the drive to the I/O configuration, **42, 57, 92**
- applying power, **22**
- commissioning, **24**
- components, **9**
- configuration tools, **25**
- configuring the IP address, **16**
- connecting to drive, **18**
- connecting to the network, **20**
- definition, **161**
- diagnostic parameters, **37, 117**
- events, **120**
- features, **10**
- parameters, **125**
- resetting, **36**
- single-drive/multi-drive mode, **87**
- specifications, **123**
- status indicators, **23, 115**
- troubleshooting, **115**

ADC (Automatic Device Configuration)

- configuring, **52**
- definition, **161**
- monitoring progress, **55**
- using, **50**

B

BOOTP (Bootstrap Protocol)

- definition, **161**
- downloading a BOOTP utility, **28**
- using, **28**
- using the DHCP/BOOTP utility, **28**

bridge

- definition, **161**
- example, **21, 40**

C

CIP (Common Industrial Protocol)

- connections, **123**
- definition, **161**

CompactLogix

- example program for Explicit Messages, **75, 76, 81, 83**
- example program for multi-drive mode, **103**
- example program for single-drive mode, **67, 70**
- formatting Explicit Messages, **75, 77, 81, 84**

configuration tools, **25**

ControlFLASH, **161**

controller

- adding to I/O configuration, **40**
- correlating with the drive, **48, 100**
- definition, **161**
- I/O image, **64**
- saving the I/O configuration, **47, 61, 99**

D

data rate

- definition, **162**

setting, **32**

Datalinks

- definition, **162**
- enabling to read/write data, **33**
- I/O image, **64**
- using, **66**

device-level ring (DLR) topology

- definition, **162**
- network example, **22**

DHCP (Dynamic Configuration Host Protocol)

- definition, **162**

DHCP (Dynamic Host Configuration Protocol)

- using, **28**
- using the DHCP/BOOTP utility, **28**

diagnostic items

- multi-drive mode, **118**
- single-drive mode, **117**

duplex

- definition, **162**
- setting, **32**

E

EDS (Electronic Data Sheet) files, **162**

equipment required, **11**

EtherNet/IP

- network definition, **162**
- network example, **21**
- network example for single-drive/multi-drive mode, **88**
- network set-up, **15**

EtherNet/IP objects

- Assembly, **132**
- DPI Device, **142**
- DPI Fault, **151**
- DPI Parameter, **145**
- Identity, **130**
- List, **129**
- Parameter, **136**
- PCCC, **139**
- Register, **133**

events

- list of, **120**
- viewing/clearing, **120**

Explicit Messages

- about, **73**
- definition, **163**
- examples, **74**
- multi-drive mode, **111**
- performing, **74**

F

fault action

- definition, **163**
- setting, **35**

fault configuration

- definition, **163**
- setting, **35**

features, **10**

flash update, **163**

G

- gateway, **163**
- gateway address
 - setting with BOOTP or DHCP server, **28**
 - setting with parameters, **32**

H

- hardware address
 - definition, **163**
 - in diagnostic items, **117**
 - location of label, **28**
- HIM (Human Interface Module)
 - definition, **163**
 - using, **27**
- hold last
 - definition, **163**
 - setting the fault action, **35**

I

- I/O
 - about, **63**
 - configuring, **39**
 - definition, **164**
 - image, **64**
 - using, **63**
- idle action
 - definition, **163**
 - fault action parameter, **35**
- IP address
 - definition, **164**
 - setting with BOOTP or DHCP server, **28**
 - setting with parameters, **31**

L

- linear topology network example, **21**
- Logic Command/Status
 - bit definitions, **157, 158**
 - definition, **164**
 - in I/O image, **64**
 - using, **65**
- Logix Designer
 - adding devices to the I/O configuration, **42, 57, 92**
 - configuring a drive for ADC, **52**
 - correlating the drive with the controller, **48, 100**
 - definition, **165**
 - saving the I/O configuration, **47, 61, 99**
 - using RSLinx with, **39**

M

- manual
 - conventions, **7**
 - recommended documentation, **7**
 - website, **7**
- master-slave hierarchy
 - configuring, **33**
 - definition, **165**
- MOD status indicator

- locating, **115**
- troubleshooting, **116**

N

- NET A status indicator
 - locating, **115**
 - troubleshooting, **116**
- NET B status indicator
 - locating, **115**
 - troubleshooting, **117**
- node address
 - changing the source, **31**
 - setting, **16**
 - setting with adapter parameters, **31**
 - setting with BOOTP or DHCP server, **28**
 - setting with switches, **18**
- NVS (Non-Volatile Storage), **165**

P

- parameter types, **10**
- PCCC (Programmable Controller Communications Command)
 - definition, **165**
 - object, **139**
- ping, **165**
- PORT status indicator
 - locating, **115**
 - troubleshooting, **116**

Q

- quick start, **13**

R

- Reference/Feedback
 - definition, **165**
 - in I/O image, **64**
 - using, **65**
- RSLogix
 - adding devices to the I/O configuration, **42, 57, 92**
 - configuring a drive for ADC, **52**
 - correlating the drive with the controller, **48, 100**
 - definition, **165**
 - saving the I/O configuration, **47, 61, 99**
 - using RSLinx with, **39**

S

- scanner, **165**
- star topology network example, **21**
- status indicators
 - behavior, **116**
 - definition, **166**
 - locating, **115**
 - MOD, **116**
 - NET A, **116**
 - NET B, **117**
 - PORT, **116**
 - troubleshooting, **116**

subnet mask
 definition, **166**
 setting with BOOTP or DHCP server, **28**
 setting with parameters, **31**
switches, **166**

T

TCP (Transmission Control Protocol), **166**

U

UDDT (User-Defined Data Type), **166**
UDP (User Datagram Protocol), **166**

Z

zero data
 definition, **166**
 setting the fault action, **35**

Notes:

Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products.

At <http://www.rockwellautomation.com/support/>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://www.rockwellautomation.com/support/>.

Installation Assistance

If you experience a problem within the first 24 hours of installation, review the information that is contained in this manual. You can contact Customer Support for initial help in getting your product up and running.

United States or Canada	1.440.646.3434
Outside United States or Canada	Use the Worldwide Locator at http://www.rockwellautomation.com/support/americas/phone_en.html , or contact your local Rockwell Automation representative.

New Product Satisfaction Return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846