




Complete Hardware Guide for EX2200 Ethernet Switches



Modified: 2015-06-23
Revision 16

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Complete Hardware Guide for EX2200 Ethernet Switches
Copyright © 2015, Juniper Networks, Inc.
All rights reserved.

Revision History
July 2014—Revision 16
June 2014—Revision 15
April 2014—Revision 14
March 2014—Revision 13
January 2013—Revision 12
September 2012—Revision 11
September 2012—Revision 10
March 2012—Revision 9
November 2011—Revision 8
September 2011—Revision 7
July 2011—Revision 6
March 2011—Revision 5
December 2010—Revision 4
August 2010—Revision 3
May 2010—Revision 2
February 2010—Revision 1

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

SOFTWARE LICENSE

The terms and conditions for using this software are described in the software license contained in the acknowledgment to your purchase order or, to the extent applicable, to any reseller agreement or end-user purchase agreement executed between you and Juniper Networks. By using this software, you indicate that you understand and agree to be bound by those terms and conditions.

Generally speaking, the software license restricts the manner in which you are permitted to use the software and may contain prohibitions against certain uses. The software license may state conditions under which the license is automatically terminated. You should consult the license for further details.

For complete product documentation, please see the Juniper Networks Web site at www.juniper.net/techpubs.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement (“EULA”) posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xiii
	Junos OS Documentation and Release Notes	xiii
	Documentation Conventions	xiii
	Documentation Feedback	xv
	Requesting Technical Support	xv
	Self-Help Online Tools and Resources	xvi
	Opening a Case with JTAC	xvi
Part 1	Switch and Components Overview and Specifications	
Chapter 1	EX2200 Switch Overview	3
	EX2200 Switches Hardware Overview	3
	EX2200 Switches First View	3
	Uplink Ports	4
	Console Port	4
	Cable Guard	5
	Security Slots	5
	Power over Ethernet (PoE) Ports	5
	Front Panel of an EX2200 Switch	6
	Rear Panel of an EX2200 Switch	7
	EX2200 Switch Models	9
	Chassis Physical Specifications for EX2200 Switches	9
	EX2200 Switch Hardware and CLI Terminology Mapping	10
Chapter 2	Component Descriptions	13
	Chassis Status LEDs in EX2200 Switches	13
	Network Port and Uplink Port LEDs in EX2200 Switches	14
	Management Port LEDs in EX2200 Switches	17
	Power Supply in EX2200 Switches	18
	Cooling System and Airflow in an EX2200 Switch	19
	Airflow Direction in Non-PoE Models of EX2200 Switches, Except for the EX2200-C Models	19
	Airflow Direction in PoE Models of EX2200 switches, Except for the EX2200-C Models	20
Chapter 3	Component Specifications	21
	USB Port Specifications for an EX Series Switch	21
	Mini-USB Port Specifications for an EX2200 Switch	22
	Network Port Connector Pinout Information for an EX2200 Switch	23
	Console Port Connector Pinout Information for an EX Series Switch	23
	RJ-45 to DB-9 Serial Port Adapter Pinout Information for a Switch	25

	Management Port Connector Pinout Information for an EX2200 Switch	25
	Pluggable Transceivers Supported on EX2200 Switches	26
Part 2	Planning for Switch Installation	
Chapter 4	Site Preparation	61
	Site Preparation Checklist for EX2200 Switches	61
	General Site Guidelines	62
	Site Electrical Wiring Guidelines	63
	Environmental Requirements and Specifications for EX Series Switches	65
Chapter 5	Mounting and Clearance Requirements	71
	Rack Requirements for EX2200 Switches	71
	Cabinet Requirements for EX2200 Switches	72
	Requirements for Mounting an EX2200 Switch on a Desktop or Wall	73
	Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches	74
Chapter 6	Cable Specifications	77
	Network Cable Specifications for EX2200 Switches	77
Chapter 7	Planning Power Requirements	79
	Power Specifications for EX2200 Switches	79
	AC Power Cord Specifications for EX2200 Switches	80
Part 3	Installing and Connecting the Switch and Switch Components	
Chapter 8	Installing the Switch	85
	Installing and Connecting an EX2200 Switch	85
	Unpacking an EX2200 Switch	86
	Parts Inventory (Packing List) for an EX2200 Switch	87
	Mounting an EX2200 Switch	88
	Mounting an EX2200 Switch on a Desk or Other Level Surface	89
	Mounting an EX2200 Switch On or Under a Desk Using Screws	92
	Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet	95
	Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet	98
	Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet	102
	Mounting an EX2200 Switch on a Wall	102
	Mounting an EX2200 Switch Except the EX2200-C Model on a Wall	102
	Mounting an EX2200-C Switch on a Wall	105
	Mounting an EX2200 Switch Using the Magnet Mount	109
Chapter 9	Installing Switch Components	113
	Installing a Transceiver in an EX Series Switch	113
Chapter 10	Connecting the Switch	117
	Connecting Earth Ground to an EX Series Switch	117
	Parts and Tools Required for Connecting an EX Series Switch to Earth Ground	118
	Special Instructions to Follow Before Connecting Earth Ground to a Switch	120

	Connecting Earth Ground to an EX Series Switch	122
	Connecting AC Power to an EX2200 Switch	123
	Connecting DC Power to an EX2200 Switch	125
	Connecting a Switch to a Network for Out-of-Band Management	127
	Connecting a Switch to a Management Console	129
	Connecting an EX2200 Switch to a Management Console Using Mini-USB Type-B Console Port	131
	Connecting a Fiber-Optic Cable to a Switch	133
Chapter 11	Performing Initial Configuration	135
	EX2200 Switch Default Configuration	135
	Connecting and Configuring an EX Series Switch (CLI Procedure)	139
	Connecting and Configuring an EX Series Switch (J-Web Procedure)	142
Part 4	Removing Switch Components	
Chapter 12	Removing Switch Components	149
	Removing a Transceiver from a Switch	149
	Disconnecting a Fiber-Optic Cable from a Switch	152
Part 5	Switch and Component Maintenance	
Chapter 13	Routine Maintenance	155
	Maintaining Fiber-Optic Cables in Switches	155
Part 6	Returning Hardware	
Chapter 14	Returning the Switch or Switch Components	159
	Returning an EX2200 Switch or Component for Repair or Replacement	159
	Locating the Serial Number on an EX2200 Switch or Component	160
	Listing the Switch and Components Details with the CLI	160
	Locating the Chassis Serial Number ID Label on an EX2200 Switch	160
	Contacting Customer Support to Obtain Return Materials Authorization for Switches	161
	Packing an EX2200 Switch or Component for Shipping	163
	Packing a Switch for Shipping	164
	Packing Switch Components for Shipping	164
Part 7	Safety Information	
Chapter 15	General Safety Information	169
	General Safety Guidelines and Warnings	169
	Definitions of Safety Warning Levels	170
	Fire Safety Requirements	172
	Qualified Personnel Warning	173
	Warning Statement for Norway and Sweden	174
Chapter 16	Radiation and Laser Warnings	175
	Laser and LED Safety Guidelines and Warnings for Switches	175
	General Laser Safety Guidelines	175
	Class 1 Laser Product Warning	176

	Class 1 LED Product Warning	176
	Laser Beam Warning	177
	Radiation from Open Port Apertures Warning	178
Chapter 17	Installation and Maintenance Safety Information	181
	Installation Instructions Warning	181
	Chassis Lifting Guidelines for EX2200 Switches	183
	Ramp Warning	183
	Rack-Mounting and Cabinet-Mounting Warnings	184
	Wall-Mounting Warnings for EX2200 Switches	189
	Grounded Equipment Warning	189
	Maintenance and Operational Safety Guidelines and Warnings	190
	Battery Handling Warning	190
	Jewelry Removal Warning	191
	Lightning Activity Warning	192
	Operating Temperature Warning	193
	Product Disposal Warning	194
Chapter 18	Power and Electrical Safety Information	197
	General Electrical Safety Guidelines and Warnings	197
	Prevention of Electrostatic Discharge Damage	198
	AC Power Electrical Safety Guidelines	200
	AC Power Disconnection Warning	202
	DC Power Electrical Safety Guidelines	203
	DC Power Disconnection Warning	205
	DC Power Grounding Requirements and Warning	207
	DC Power Wiring Sequence Warning	208
	DC Power Wiring Terminations Warning	210
	TN Power Warning	211
	Action to Take After an Electrical Accident	212
Part 8	Compliance Information	
Chapter 19	Compliance Information	215
	Agency Approvals for EX Series Switches	215
	Compliance Statements for EMC Requirements for EX Series Switches	216
	Canada	216
	European Community	217
	Israel	217
	Japan	217
	Korea	218
	United States	218
	FCC Part 15 Statement	218
	Nonregulatory Environmental Standards	219
	Compliance Statements for Acoustic Noise for EX Series Switches	220
	Declaration of Conformity for EX2200 Switches	221

List of Figures

Part 1	Switch and Components Overview and Specifications	
Chapter 1	EX2200 Switch Overview	3
	Figure 1: Front Panel of an EX2200 Switch with 48 Gigabit Ethernet Ports	6
	Figure 2: Front Panel of an EX2200 Switch with 24 Gigabit Ethernet Ports	6
	Figure 3: Front Panel of an EX2200-C Switch with 12 Gigabit Ethernet Ports (PoE+)	7
	Figure 4: Front Panel of an EX2200-C Switch with 12 Gigabit Ethernet Ports (non-PoE)	7
	Figure 5: Rear Panel of an EX2200 Switch with AC Power Supply	8
	Figure 6: Rear Panel of an EX2200-C-12P Switch with Heatsink	9
Chapter 2	Component Descriptions	13
	Figure 7: Chassis Status LEDs in an EX2200 Switch Except the EX2200-C Switch	13
	Figure 8: Chassis Status LEDs in an EX2200-C Switch	13
	Figure 9: LEDs on the Network Port	14
	Figure 10: LEDs on the Uplink Ports and Port Status Mode LEDs in an EX2200 Switch Except the EX2200-C Switch Model	15
	Figure 11: Port Status Mode LEDs of the Dual-Purpose Uplink Ports of an EX2200-C Switch	15
	Figure 12: LEDs on the Management Port on an EX2200 Switch Except the EX2200-C Switch Model	17
	Figure 13: LEDs on the Management Port on an EX2200-C Switch	17
	Figure 14: Airflow Through Non-PoE Models of EX2200 Switches Except the EX2200-C Switch Model	19
	Figure 15: Airflow Through PoE Models of EX2200 Switches Except the EX2200-C Switch Models	20
Part 2	Planning for Switch Installation	
Chapter 5	Mounting and Clearance Requirements	71
	Figure 16: Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches Except EX2200-C Switch Models	74
	Figure 17: Clearance Requirements for Airflow and Hardware Maintenance for EX2200-C Switch Models	75
	Figure 18: Airflow Through PoE Models of EX2200 Switches Except EX2200-C Switch Models	75
	Figure 19: Airflow Through Non-PoE Models of EX2200 Switches Except EX2200-C Switch Models	76
Chapter 7	Planning Power Requirements	79

	Figure 20: AC Plug Types	81
Part 3	Installing and Connecting the Switch and Switch Components	
Chapter 8	Installing the Switch	85
	Figure 21: Attaching Rubber Feet to a Switch Chassis	90
	Figure 22: Attaching a Cable Guard to an EX2200-C Switch	91
	Figure 23: Securing the EX2200-C Switch Using Security Slots	91
	Figure 24: Measurements for Installing Mounting Screws for EX2200-C Switch	93
	Figure 25: Mounting the EX2200-C Switch On or Under a Desk Using Screws	94
	Figure 26: Attaching a Cable Guard to an EX2200-C Switch	95
	Figure 27: Securing the EX2200-C Switch Using Security Slots	95
	Figure 28: Attaching the Mounting Bracket Along the Front of the Switch	97
	Figure 29: Mounting the Switch on Two Posts of a Rack	98
	Figure 30: Attaching the Front-Mounting Bracket to the Side Mounting-Rail	100
	Figure 31: Attaching the Side Mounting-Rail to the Switch Chassis	100
	Figure 32: Mounting the Switch to the Front Posts of a Rack	101
	Figure 33: Sliding the Rear Mounting-Blades into the Side Mounting-Rail	101
	Figure 34: Attaching Wall-Mount Brackets to a Switch Chassis	104
	Figure 35: Measurements for Installing Mounting Screws	105
	Figure 36: Mounting the Switch on a Wall	105
	Figure 37: Measurements for Installing Mounting Screws for the EX2200-C Switch	107
	Figure 38: Mounting the EX2200-C Switch on a Wall Using Screws	108
	Figure 39: Attaching a Cable Guard to an EX2200-C Switch	108
	Figure 40: Securing the EX2200-C Switch Using Security Slots	109
	Figure 41: Mounting an EX2200-C Switch Using Magnet Mount	111
	Figure 42: Attaching a Cable Guard to an EX2200-C Switch	112
	Figure 43: Securing the EX2200-C Switch Using Security Slots	112
Chapter 9	Installing Switch Components	113
	Figure 44: Installing a Transceiver in an EX Series Switch	115
Chapter 10	Connecting the Switch	117
	Figure 45: Connecting the Grounding Lug to a Switch Mounted on Four Posts of a Rack	121
	Figure 46: Connecting a Grounding Cable to an EX Series Switch	122
	Figure 47: Connecting an AC Power Cord Retainer Clip to the AC Power Cord Inlet on an EX2200 Switch	124
	Figure 48: Connecting an AC Power Cord to the AC Power Cord Inlet on an EX2200 Switch	125
	Figure 49: Securing Ring Lugs to the Terminals on the DC Power Supply	126
	Figure 50: Ethernet Cable Connector	128
	Figure 51: Connecting a Switch to a Network for Out-of-Band Management	129
	Figure 52: Ethernet Cable Connector	130
	Figure 53: Connecting a Switch to a Management Console Through a Console Server	131
	Figure 54: Connecting a Switch Directly to a Management Console	131

	Figure 55: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Switch	133
Chapter 11	Performing Initial Configuration	135
	Figure 56: LCD Panel in an EX3200, EX4200, EX4500, EX4550, or EX8200 Switch	143
	Figure 57: LCD Panel in an EX4300 Switch	143
Part 4	Removing Switch Components	
Chapter 12	Removing Switch Components	149
	Figure 58: Removing a Transceiver from a Switch	151
Part 6	Returning Hardware	
Chapter 14	Returning the Switch or Switch Components	159
	Figure 59: Location of the Serial Number ID Label on EX2200 Switches	161
Part 7	Safety Information	
Chapter 18	Power and Electrical Safety Information	197
	Figure 60: Placing a Component into an Antistatic Bag	199

List of Tables

	About the Documentation	xiii
	Table 1: Notice Icons	xiv
	Table 2: Text and Syntax Conventions	xiv
Part 1	Switch and Components Overview and Specifications	
Chapter 1	EX2200 Switch Overview	3
	Table 3: EX2200 Switch Models	9
	Table 4: Physical Specifications of the EX2200 Switch Chassis	10
	Table 5: CLI Equivalents of Terms Used in Documentation for EX2200 Switches	10
Chapter 2	Component Descriptions	13
	Table 6: Chassis Status LEDs in an EX2200 Switch	14
	Table 7: Link/Activity LED on the Network Ports and Uplink Ports in EX2200 Switches	15
	Table 8: Status LED on the Network Ports, Uplink Ports, and Dual-Purpose Uplink Ports in EX2200 Switches	16
	Table 9: Link/Activity LED on the Management Port on EX2200 Switches	17
	Table 10: Status LED on the Management Port on EX2200 Switches	18
	Table 11: Power Consumed by EX2200 Switches	18
Chapter 3	Component Specifications	21
	Table 12: Mini-USB Type-B Console Port Pinout Information for EX2200-C Switches	22
	Table 13: Network Port Connector Pinout Information for EX2200 Switches	23
	Table 14: EX Series Switches Console Port Connector Pinout Information	24
	Table 15: RJ-45 to DB-9 Serial Port Adapter Pinout Information	25
	Table 16: Management Port Connector Pinout Information for EX2200 Switches	26
	Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches	27
	Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches	46
	Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches	52
Part 2	Planning for Switch Installation	
Chapter 4	Site Preparation	61
	Table 20: Site Preparation Checklist	61

	Table 21: Site Electrical Wiring Guidelines	64
	Table 22: EX Series Switch Environmental Tolerances	66
Chapter 5	Mounting and Clearance Requirements	71
	Table 23: Rack Requirements and Specifications for the Switch	71
	Table 24: Cabinet Requirements and Specifications for the Switch	73
Chapter 7	Planning Power Requirements	79
	Table 25: AC Power Supply Electrical Specifications for EX2200 Switches	79
	Table 26: DC Power Supply Electrical Specifications for EX2200 Switches	79
	Table 27: AC Power Cord Specifications	80
Part 3	Installing and Connecting the Switch and Switch Components	
Chapter 8	Installing the Switch	85
	Table 28: Parts List for EX2200 Switches	87
	Table 29: EX2200 Switch Mounting Methods	88
Chapter 10	Connecting the Switch	117
	Table 30: Parts and Tools Required for Connecting an EX Series Switch to Earth Ground	118
	Table 31: Special Instructions to Follow Before Connecting Earth Ground to a Switch	120

About the Documentation

- Junos OS Documentation and Release Notes on page xiii
- Documentation Conventions on page xiii
- Documentation Feedback on page xv
- Requesting Technical Support on page xv

Junos OS Documentation and Release Notes

For a list of related Junos OS documentation, see <http://www.juniper.net/techpubs/software/junos/>.

If the information in the latest release notes differs from the information in the documentation, follow the *Junos OS Release Notes*.

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

Documentation Conventions

Table 1 on page xiv defines the notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xiv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service

support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Switch and Components Overview and Specifications

- [EX2200 Switch Overview on page 3](#)
- [Component Descriptions on page 13](#)
- [Component Specifications on page 21](#)

CHAPTER 1

EX2200 Switch Overview

- [EX2200 Switches Hardware Overview on page 3](#)
- [EX2200 Switch Models on page 9](#)
- [Chassis Physical Specifications for EX2200 Switches on page 9](#)
- [EX2200 Switch Hardware and CLI Terminology Mapping on page 10](#)

EX2200 Switches Hardware Overview

Juniper Networks EX Series Ethernet Switches provide scalable connectivity for the enterprise market, including branch offices, campus locations, and data centers. The switches run the Juniper Networks Junos operating system (Junos OS), which provides Layer 2 and Layer 3 switching, routing, and security services. The same Junos OS code base that runs on EX Series switches also runs on all Juniper Networks M Series, MX Series, and T Series routers and SRX Series Services Gateways.

Juniper Networks EX2200 Ethernet Switches provide connectivity for low-density environments.

This topic describes:

- [EX2200 Switches First View on page 3](#)
- [Uplink Ports on page 4](#)
- [Console Port on page 4](#)
- [Cable Guard on page 5](#)
- [Security Slots on page 5](#)
- [Power over Ethernet \(PoE\) Ports on page 5](#)
- [Front Panel of an EX2200 Switch on page 6](#)
- [Rear Panel of an EX2200 Switch on page 7](#)

EX2200 Switches First View

EX2200 switches are available in models with 12, 24, or 48 built-in network ports. The compact, fanless model, EX2200-C switches have 12 network ports.

EX2200 switches provide:

- Up to four uplink ports
- 12 (compact, fanless model), 24, or 48 built-in network ports with 10/100/100BASE-T Gigabit Ethernet connectors
- Virtual Chassis capability—You can connect up to four EX2200 switches (including EX2200-C switches) together to form one unit that you manage as a single chassis, called a *Virtual Chassis*, starting in Junos OS Release 12.2.
- Power over Ethernet (PoE or PoE+) on all network ports (in PoE-capable models)

Uplink Ports

Each EX2200 switch except the EX2200-C switch model has four uplink ports that support 1-gigabit small form-factor pluggable (SFP) transceivers for use with fiber connections and copper connections.

Each EX2200-C switch has two dual-purpose uplink ports. Each dual uplink port consists of an RJ-45 port (in which you can connect a copper Ethernet cable) and an SFP port (into which you can plug a transceiver). Only one of the ports can be active at a time. By default, if you connect a copper Ethernet cable to the RJ-45 port, this port becomes the active port provided that there is no connection made on the other port. If you plug a transceiver into the SFP port, this port becomes the active port whether or not a copper Ethernet cable is connected to the other port. You can change this default behavior by explicitly configuring a media type—copper or fiber—for the dual-purpose port using the **media-type** command. For more information, see *Configuring the Media Type on Dual-Purpose Uplink Ports (CLI Procedure)*.

You can use an SFP uplink port connection between EX2200 switches to interconnect the switches into an EX2200 Virtual Chassis. You must explicitly configure the SFP port as a VCP. See *Setting an Uplink Port on an EX Series Switch as a Virtual Chassis Port (CLI Procedure)*.

For information about the supported optical and copper interfaces, see [“Pluggable Transceivers Supported on EX2200 Switches” on page 26](#).

Console Port

Each EX2200 switch except the EX2200-C switch model has an RJ-45 console port that accepts a cable with RJ-45 connector.

The EX2200-C switch has two console ports: an RJ-45 port and a Mini-USB Type-B port. The RJ-45 console port accepts a cable with an RJ-45 connector and the Mini-USB Type-B console port accepts a Mini-B plug (5-pin) connector to connect to the console management device. The switch activates only one console port at a time, either the RJ-45 console port or the Mini USB type-B console port. By default, the RJ-45 port is the active console port and the Mini-USB Type-B port is the passive console port. You can change the default setting of a console port using the **port-type** command. See *Configuring the Console Port Type (CLI Procedure)*.

Cable Guard

On an EX2200-C switch model you can install a cable guard to secure the cables connected to the switch. The cable guard has slots in the front of it through which you can pass all the cables to prevent them from being accidentally unplugged or removed after they are connected. See [“Mounting an EX2200 Switch on a Desk or Other Level Surface” on page 89](#).

Security Slots

Each EX2200-C switch model has security slots on the left and right panels of the chassis. The security slots allow you to lock and secure the chassis in the installation site using a standard cable lock. See [“Mounting an EX2200 Switch on a Desk or Other Level Surface” on page 89](#).

Power over Ethernet (PoE) Ports

EX2200 switches are available in models with or without PoE/PoE+ capability. Models that support PoE/PoE+ provide that support on all network ports. PoE ports provide electrical current to devices—such as IP phones, wireless access points, and security cameras—through network cables, thus eliminating the need for separate power cords for those devices.

EX2200 switches with DC power supply do not provide PoE.



NOTE: Starting with Junos OS Release 12.2R1, PoE commands are enabled on all non-PoE-capable EX2200 switch models. Also the PoE commands do not provide any meaningful information on standalone non-PoE-capable switch models. However, in an EX2200 Virtual Chassis, you can execute PoE commands from a non-PoE-capable switch that is the master, to configure PoE on PoE-capable Virtual Chassis members.

EX2200 switches running Junos OS Release 10.3 or later support powered devices that comply with IEEE 802.3af (PoE) and IEEE 802.3at (PoE+).



NOTE: IEEE 802.3at class 4 powered devices require category 5 or higher Ethernet cables.

EX2200 switches running Junos OS Release 10.2 or earlier support powered devices that comply with IEEE 802.3af (PoE).

The remainder of this topic uses the term PoE to refer to both PoE and PoE+ unless there is a need to distinguish between the two.

Front Panel of an EX2200 Switch

The front panel of an EX2200 switch except the EX2200-C switch models consists of the following components:

- Network ports—depending on the switch model, either of:
 - 24 or 48 10/100/1000BASE-T Gigabit Ethernet ports, with Power over Ethernet (PoE) not available in EX2200-24T, EX2200-24T-DC, and EX2200-48T models
 - 24 or 48 10/100/1000BASE-T Gigabit Ethernet ports, with Power over Ethernet (PoE) available in EX2200-24P and EX2200-48P models
- 4 built-in SFP uplink ports. You can use these ports to forward network traffic or configure them into Virtual Chassis ports (VCPs) to interconnect EX2200 switches into a Virtual Chassis.
- 2 chassis status LEDs
- 4 port status mode LEDs
- Mode button

Figure 1 on page 6 shows the front panel of an EX2200 switch with 48 Gigabit Ethernet ports. Figure 2 on page 6 shows the front panel of an EX2200 switch with 24 Gigabit Ethernet ports.

Figure 1: Front Panel of an EX2200 Switch with 48 Gigabit Ethernet Ports


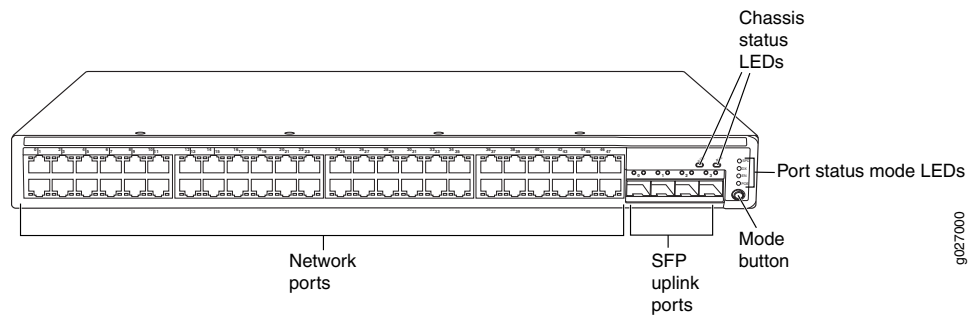


Figure 2: Front Panel of an EX2200 Switch with 24 Gigabit Ethernet Ports

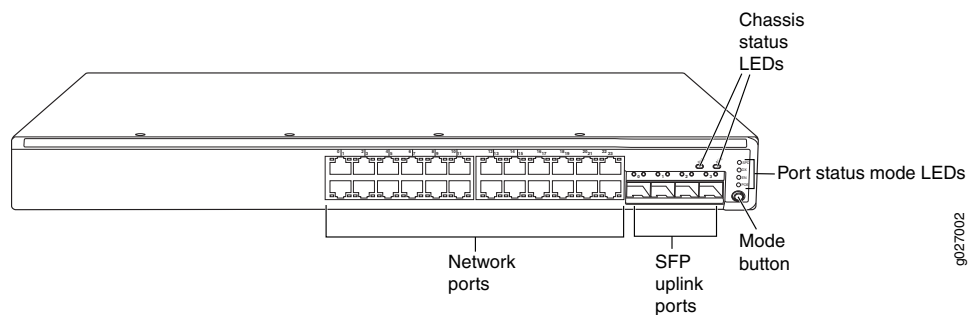

The front panel of an EX2200-C switch consists of the following components:

- Network ports—depending on the switch model, either of:

- 12 10/100/1000BASE-T Ethernet ports, (non-PoE) in EX2200-C-12T
- 12 10/100/1000BASE-T Ethernet ports, (PoE+) in EX2200-C-12P
- 2 built-in dual-purpose uplink ports, each of which includes one 10/100/1000 RJ-45 Ethernet port and one SFP port
- 1 USB port
- 1 Mini-USB console port
- 1 RJ-45 console port
- 1 Management Ethernet port
- 2 chassis status LEDs
- 4 port status mode LEDs in PoE+ and 3 port status mode LEDs in non-PoE
- Mode button

Figure 3 on page 7 shows the front panel of an EX2200-C switch with 12 Gigabit Ethernet PoE+ ports and Figure 4 on page 7 shows the front panel of an EX2200-C switch with 12 Gigabit Ethernet non-PoE ports.

Figure 3: Front Panel of an EX2200-C Switch with 12 Gigabit Ethernet Ports (PoE+)


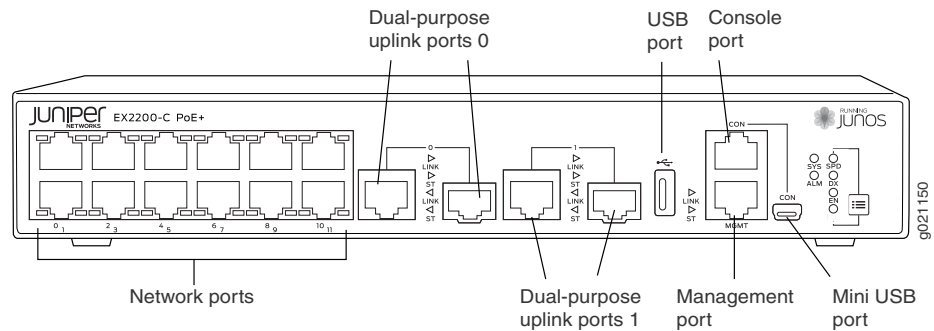


Figure 4: Front Panel of an EX2200-C Switch with 12 Gigabit Ethernet Ports (non-PoE)

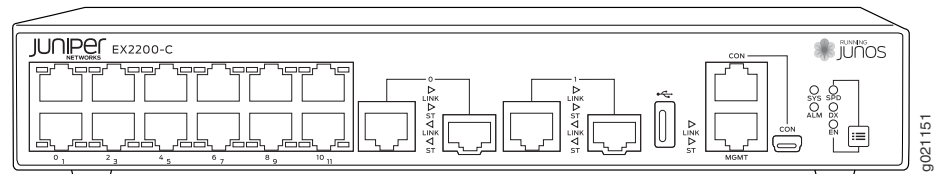

Rear Panel of an EX2200 Switch

The rear panel of the EX2200 switch except the EX2200-C switch models consists of the following components:

- Management Ethernet port
- USB port


- Console port
- Protective earthing terminal
- ESD point
- Air exhaust
- Serial number ID label
- AC power cord inlet or DC power terminals

Figure 5 on page 8 shows the rear panel of an EX2200 switch with an AC power supply.

All EX2200 switches except the EX2200-C switch model have three exhaust openings on the rear panel. The two exhaust openings on the left have fans behind them and are open. The exhaust opening on the right is open on Power over Ethernet (PoE) models and closed on non-PoE models. On PoE models, this opening exhausts the air from the fan at the air intake for the power supply on the side panel.

The power cord retainer clips extend out of the chassis by 3 in.

Figure 5: Rear Panel of an EX2200 Switch with AC Power Supply

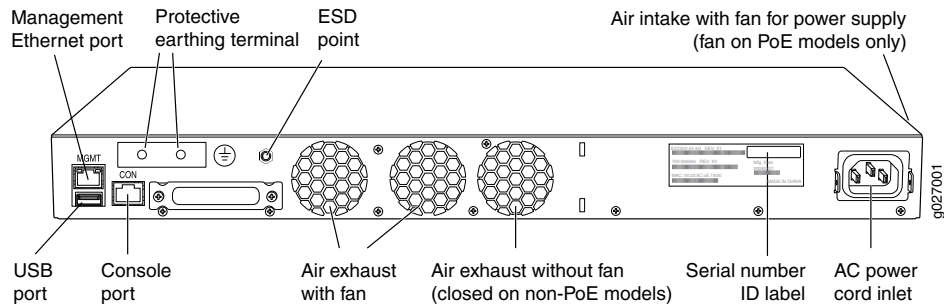


The rear panel of an EX2200-C switch consists of the following components:

- Protective earthing terminal
- ESD point
- Serial number ID label
- AC power cord inlet
- Heatsink-only in PoE+ models

Figure 6 on page 9 shows the rear panel of an EX2200-C-12P switch with heatsink.

EX2200-C switches being fanless models have no exhaust openings. The switch has vents on the top and on both the sides of the chassis. The PoE+ models have heatsink installed in the rear panel to dissipate the heat, while non-PoE models have no heatsink.

Figure 6: Rear Panel of an EX2200-C-12P Switch with Heatsink

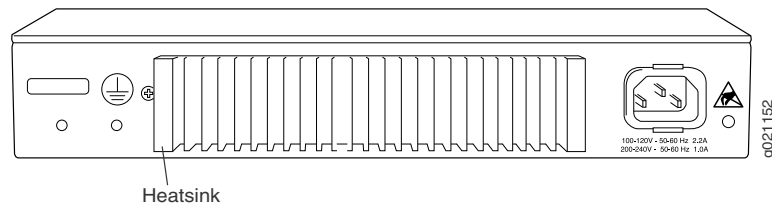

- Related Documentation**
- [EX2200 Switch Models on page 9](#)
 - [Site Preparation Checklist for EX2200 Switches on page 61](#)

EX2200 Switch Models

The EX2200 switch is available with 12, 24, or 48 built-in network ports with full Power over Ethernet (PoE) capability (all 12, 24, or 48 built-in network ports support PoE) or no PoE capability. EX2200 switches with DC power supply do not provide PoE.

[Table 3 on page 9](#) lists the EX2200 switch models.

Table 3: EX2200 Switch Models

Model	Access Ports	Ports in Which PoE Is Available	Maximum PoE Power pport PoEAvailable	First Junos OS Release
EX2200-C-12T-2G	12 Gigabit Ethernet	–	–	11.3R1
EX2200-C-12P-2G	12 Gigabit Ethernet	All 12 ports	100 W	11.3R1
EX2200-24T-4G	24 Gigabit Ethernet	–	–	10.1R1
EX2200-24P-4G	24 Gigabit Ethernet	All 24 ports	405 W	10.1R1
EX2200-24T-4G-DC	24 Gigabit Ethernet	–	–	10.1R1
EX2200-48T-4G	48 Gigabit Ethernet	–	–	10.1R1
EX2200-48P-4G	48 Gigabit Ethernet	All 48 ports	405 W	10.1R1

- Related Documentation**
- [EX2200 Switches Hardware Overview on page 3](#)

Chassis Physical Specifications for EX2200 Switches

The EX2200 switch chassis is a rigid sheet-metal structure that houses the hardware components. [Table 4 on page 10](#) summarizes the physical specifications of the EX2200 switch chassis.

Table 4: Physical Specifications of the EX2200 Switch Chassis

Description	EX2200 Value	EX2200-C Value
Chassis height	1.75 in. (4.45 cm)	1.75 in. (4.4 cm)
Chassis width	<ul style="list-style-type: none"> 17.5 in. (44.5 cm) 19 in. (48.2 cm) with mounting brackets attached 	<ul style="list-style-type: none"> 10.6 in. (26.92 cm) 19 in. (48.26 cm) with mounting brackets
Chassis depth	10.5 in. (26.7 cm)	<ul style="list-style-type: none"> EX2200-C-12T: 9.0 in. (22.8 cm) EX2200-C-12P: 9.4 in. (23.8 cm)
Weight	<ul style="list-style-type: none"> EX2200-24T: 6 lb (2.7 kg) EX2200-24P: 8 lb (3.6 kg) EX2200-24T-DC: 6 lb (2.7 kg) EX2200-48T: 8 lb (3.6 kg) EX2200-48P: 10 lb (4.5 kg) 	<ul style="list-style-type: none"> EX2200-C-12T: 4.6 lb (2.1 kg) EX2200-C-12P: 6.4 lb (2.9 kg)

Related Documentation

- [Rack Requirements for EX2200 Switches on page 71](#)
- [Cabinet Requirements for EX2200 Switches on page 72](#)
- [Mounting an EX2200 Switch on page 88](#)
- [Installing and Connecting an EX2200 Switch on page 85](#)

EX2200 Switch Hardware and CLI Terminology Mapping

This topic describes the hardware terms used in EX2200 switch documentation and the corresponding terms used in the Junos OS command line interface (CLI). See [Table 5 on page 10](#).

Table 5: CLI Equivalents of Terms Used in Documentation for EX2200 Switches

Hardware Item (as displayed in the CLI)	Description (as displayed in the CLI)	Value (as displayed in the CLI)	Item in Documentation	Additional Information
Chassis	One of the following: <ul style="list-style-type: none"> EX2200-C-12T-2G EX2200-C-12P-2G EX2200-24T-4G EX2200-24P-4G EX2200-24T-4G-DC EX2200-48T-4G EX2200-48P-4G 	–	Switch chassis	“Chassis Physical Specifications for EX2200 Switches” on page 9

Table 5: CLI Equivalents of Terms Used in Documentation for EX2200 Switches (*continued*)

Hardware Item (as displayed in the CLI)	Description (as displayed in the CLI)	Value (as displayed in the CLI)	Item in Documentation	Additional Information
FPC (<i>n</i>)	Abbreviated name of the Flexible PIC Concentrator (FPC) One of the following: <ul style="list-style-type: none"> EX2200-C-12T-2G EX2200-C-12P-2G EX2200-24T-4G EX2200-24P-4G EX2200-24T-4G-DC EX2200-48T-4G EX2200-48P-4G 	Value of <i>n</i> is always 0.	The switch does not have actual FPCs. In this case, FPC refers to the switch itself.	<i>Understanding Interface Naming Conventions on EX Series Switches</i>
PIC (<i>n</i>)	Abbreviated name of the Physical Interface Card (PIC)	<i>n</i> is a value in the range of 0–1.	The switch does not have actual PIC devices; see entries for PIC 0 through PIC 1 for the equivalent item on the switch.	<i>Understanding Interface Naming Conventions on EX Series Switches</i>
	One of the following: <ul style="list-style-type: none"> 12x 10/100/1000 BASE-T 24x 10/100/1000 BASE-T 48x 10/100/1000 BASE-T 	PIC 0	Built-in network ports on the front panel of the switch	“EX2200 Switches Hardware Overview” on page 3
	One of the following: <ul style="list-style-type: none"> 2x (10/100/1000 BASE-T or GE SFP) or 2x (100/1000 BASE-X) 4x GE SFP 	PIC 1	Built-in uplink ports and dual-purpose uplink ports on the front panel of the switch	“EX2200 Switches Hardware Overview” on page 3
Xcvr (<i>n</i>)	Abbreviated name of the transceiver	<i>n</i> is a value equivalent to the number of the port in which the transceiver is installed.	Optical transceivers	“Pluggable Transceivers Supported on EX2200 Switches” on page 26
Power supply (<i>n</i>)	Built-in power supply	Value of <i>n</i> is always 0.	AC power supply	“Power Supply in EX2200 Switches” on page 18

Table 5: CLI Equivalents of Terms Used in Documentation for EX2200 Switches (*continued*)

Hardware Item (as displayed in the CLI)	Description (as displayed in the CLI)	Value (as displayed in the CLI)	Item in Documentation	Additional Information
Fan	Fan <i>NOTE:</i> EX2200-C switches are fanless models.	–	Fan	“Cooling System and Airflow in an EX2200 Switch” on page 19

- Related Documentation**
- [EX Series Switches Hardware and CLI Terminology Mapping](#)
 - [EX2200 Switches Hardware Overview on page 3](#)

CHAPTER 2

Component Descriptions

- Chassis Status LEDs in EX2200 Switches on page 13
- Network Port and Uplink Port LEDs in EX2200 Switches on page 14
- Management Port LEDs in EX2200 Switches on page 17
- Power Supply in EX2200 Switches on page 18
- Cooling System and Airflow in an EX2200 Switch on page 19

Chassis Status LEDs in EX2200 Switches

The front panel of an EX2200 switch has two chassis status LEDs labeled SYS and ALM on the far right side of the panel. See [Figure 7 on page 13](#) and [Figure 8 on page 13](#).

Figure 7: Chassis Status LEDs in an EX2200 Switch Except the EX2200-C Switch


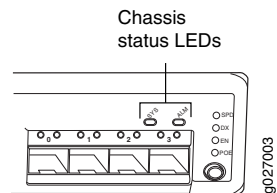


Figure 8: Chassis Status LEDs in an EX2200-C Switch

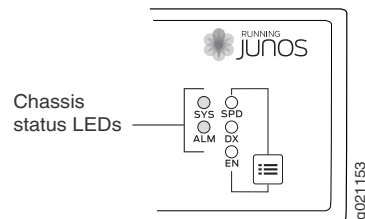

[Table 6 on page 14](#) describes the chassis status LEDs in an EX2200 switch, their colors and states, and the status they indicate.

Table 6: Chassis Status LEDs in an EX2200 Switch

LED Label	Color	State and Description
SYS	Green	<ul style="list-style-type: none"> On steadily—The switch is functioning normally. Blinking—The switch is booting. Off—The switch is powered off or is halted.
ALM	Unlit	There is no alarm or the switch is halted.
	Amber	There is a minor alarm.
	Red	There is a major alarm.

A major alarm (red) indicates a critical error condition that requires immediate action.

A minor alarm (amber) indicates a noncritical condition that requires monitoring or maintenance. A minor alarm that is left unchecked might cause interruption in service or performance degradation.

Both LEDs can be lit simultaneously.

You can view the colors of the two LEDs remotely through the CLI by issuing the operational mode command `show chassis led`.

Related Documentation

- [EX2200 Switches Hardware Overview on page 3](#)
- [Checking Active Alarms with the J-Web Interface](#)
- [Understanding Alarm Types and Severity Levels on EX Series Switches](#)

Network Port and Uplink Port LEDs in EX2200 Switches

Each network port and uplink port on the front panel of an EX2200 switch has two LEDs that indicate link/activity and port status. Each dual-purpose uplink port in an EX2200-C switch has two pairs of LEDs that indicate the link/activity status, one pair for each of the two ports that constitute the dual-purpose uplink port. See [Figure 9 on page 14](#), [Figure 10 on page 15](#), and [Figure 11 on page 15](#).

Figure 9: LEDs on the Network Port

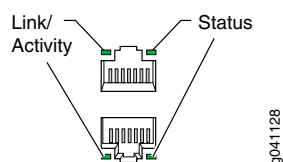


Figure 10: LEDs on the Uplink Ports and Port Status Mode LEDs in an EX2200 Switch Except the EX2200-C Switch Model

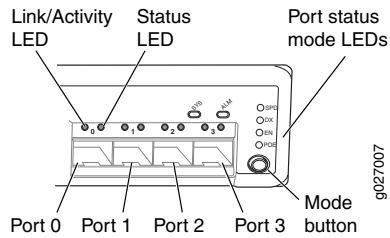


Figure 11: Port Status Mode LEDs of the Dual-Purpose Uplink Ports of an EX2200-C Switch

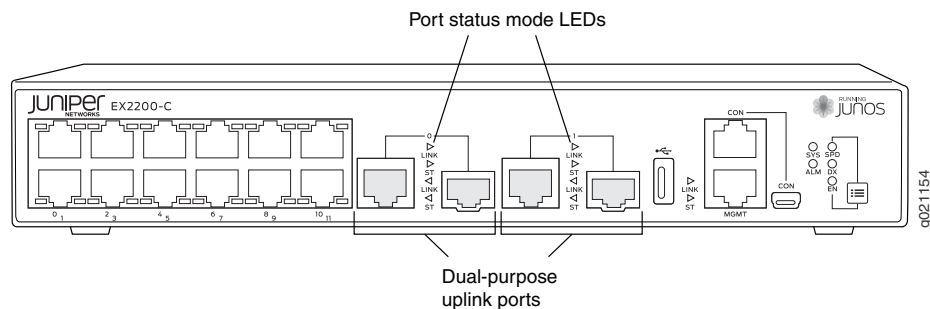


Table 7 on page 15 describes the Link/Activity LED.

Table 7: Link/Activity LED on the Network Ports and Uplink Ports in EX2200 Switches

LED	Color	State and Description
Link/Activity	Green	<ul style="list-style-type: none"> Blinking—The port and the link are active, and there is link activity. On steadily—The port and the link are active, but there is no link activity. Off—The port is not active.

In Figure 9 on page 14, Figure 10 on page 15, and Figure 11 on page 15 show the LEDs that indicate the status of one of the four port parameters—speed, duplex mode, administrative status, and Power over Ethernet (PoE) status. Use the mode button below the POE LED on the far right side of the front panel to toggle the Status LED to show the different port parameters. You can tell which port parameter is indicated by the Status LED by seeing which port status mode LED (SPD, DX, EN, and POE) is lit. (See Figure 10 on page 15).

Table 8 on page 16 describes the Status LED.

Table 8: Status LED on the Network Ports, Uplink Ports, and Dual-Purpose Uplink Ports in EX2200 Switches

Port Parameters	State and Description
Speed	<p>Indicates the speed. The speed indicators for network ports are:</p> <ul style="list-style-type: none"> • One blink per second—10 Mbps • Two blinks per second—100 Mbps • Three blinks per second—1000 Mbps <p>The speed indicators for uplink ports are:</p> <ul style="list-style-type: none"> • On steadily—1000 Mbps • Off—10/100 Mbps <p>The speed indicators for dual-purpose uplink ports of EX2200-C switch model are:</p> <ul style="list-style-type: none"> • One blink per second—10 Mbps • Two blinks per second—100 Mbps • Three blinks per second—1000 Mbps
Duplex mode	<p>Indicates the duplex mode. The status indicators are:</p> <ul style="list-style-type: none"> • On steadily—Port is set to full-duplex mode. • Off—Port is set to half-duplex mode.
Administrative status	<p>Indicates the administrative status. The status indicators are:</p> <ul style="list-style-type: none"> • On steadily—Port is administratively enabled. • Off—Port is administratively disabled.
PoE status	<p>Indicates the PoE status. The status indicators for network ports are:</p> <ul style="list-style-type: none"> • On steadily—PoE is available on the port, a device that draws power from the port is connected to the port, and the device is drawing power from the port. • Blinking—PoE is available on the port, but no power is drawn from the port because of one of the following: <ul style="list-style-type: none"> • No device that draws power from the port is connected to the port. • A device that draws power from the port is connected to the port, but the device is not drawing any power from the port. • Off—PoE is not available on the port. <p>NOTE: PoE Status LED is available on the following EX2200 switch models:</p> <ul style="list-style-type: none"> • EX2200-C-12P-2G • EX2200-24P-4G • EX2200-48P-4G <p>PoE is not available on uplink ports; therefore, the LED for those ports is always unlit.</p>

You can tell which port parameter is indicated by the Status LED on network ports, uplink ports, and dual-purpose uplink ports by issuing the operational mode command ***show chassis led***.

- Related Documentation**
- [EX2200 Switches Hardware Overview on page 3](#)
 - [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
 - [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\)](#)

Management Port LEDs in EX2200 Switches

The management port on an EX2200 switch has two LEDs that indicate link/activity and port status. The EX2200 switches except the EX2200-C switch models have the management port on the rear panel and the EX2200-C switch has the management port on the front panel. See [Figure 12 on page 17](#) and [Figure 13 on page 17](#).

Figure 12: LEDs on the Management Port on an EX2200 Switch Except the EX2200-C Switch Model


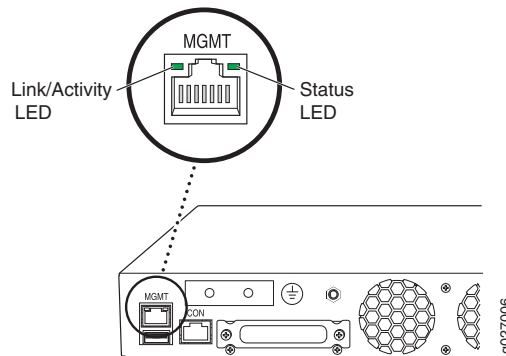


Figure 13: LEDs on the Management Port on an EX2200-C Switch

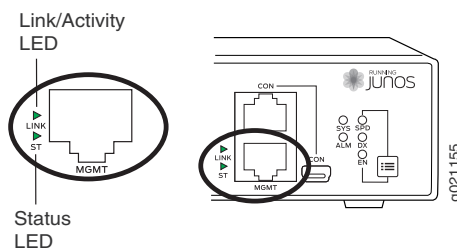

[Table 9 on page 17](#) describes the Link/Activity LED.

Table 9: Link/Activity LED on the Management Port on EX2200 Switches

LED	Color	State and Description
Link/Activity	Green	<ul style="list-style-type: none"> • Blinking—The port and the link are active, and there is link activity. • On steadily—The port and the link are active, but there is no link activity. • Off—The port is not active.

[Table 10 on page 18](#) describes the Status LED.

Table 10: Status LED on the Management Port on EX2200 Switches

LED	Color	State and Description
Status	Green	Indicates the speed. The speed indicators are: <ul style="list-style-type: none"> • One blink per second—10 Mbps • Two blinks per second—100 Mbps

Related Documentation

- [Connecting a Switch to a Network for Out-of-Band Management on page 127](#)

Power Supply in EX2200 Switches

The power supply in EX2200 switches is built in along the rear panel of the chassis, with an AC power cord inlet or DC power terminals on the rear panel to connect power to the switch.

Table 11 on page 18 lists the power consumed by each EX2200 switch model. The maximum power available on a PoE port is 30 W for switches running Junos OS Release 10.3 or later and 15.4 W for switches running Junos OS Release 10.2 or earlier.

Table 11: Power Consumed by EX2200 Switches

Model Number	Number of PoE-Enabled Ports	Maximum Power Consumed by the Switch	Maximum PoE Power Available
EX2200-C-12T	–	30 W	–
EX2200-C-12P	12	30 W (when no PoE power is drawn)	100 W
EX2200-24T	–	50 W	–
EX2200-24P	24	60 W (when no PoE power is drawn)	405 W
EX2200-24T-DC	–	50 W	–
EX2200-48T	–	76 W	–
EX2200-48P	48	91 W (when no PoE power is drawn)	405 W

Related Documentation

- [AC Power Cord Specifications for EX2200 Switches on page 80](#)
- [EX2200 Switches Hardware Overview on page 3](#)
- [Power Specifications for EX2200 Switches on page 79](#)
- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)

- [Connecting Earth Ground to an EX Series Switch on page 117](#)

Cooling System and Airflow in an EX2200 Switch

The cooling system in EX2200 switches, except EX2200-C, the compact, fanless models, consists of two fans along the rear of the chassis that provide side-to-rear chassis cooling. In the PoE models of these switches, there is an additional fan in the power supply.

In the EX2200-C switch the cooling is done by the vents on top and sides of the chassis in non-PoE models and by heatsinks in PoE+ models. Do not block the vents on the chassis. Doing this can lead to overheating of the switch chassis.


This topic describes:

- [Airflow Direction in Non-PoE Models of EX2200 Switches, Except for the EX2200-C Models on page 19](#)
- [Airflow Direction in PoE Models of EX2200 switches, Except for the EX2200-C Models on page 20](#)

Airflow Direction in Non-PoE Models of EX2200 Switches, Except for the EX2200-C Models

Figure 14 on page 19 shows the airflow in non-PoE models of EX2200 switches, except for the EX2200-C models.


Figure 14: Airflow Through Non-PoE Models of EX2200 Switches Except the EX2200-C Switch Model

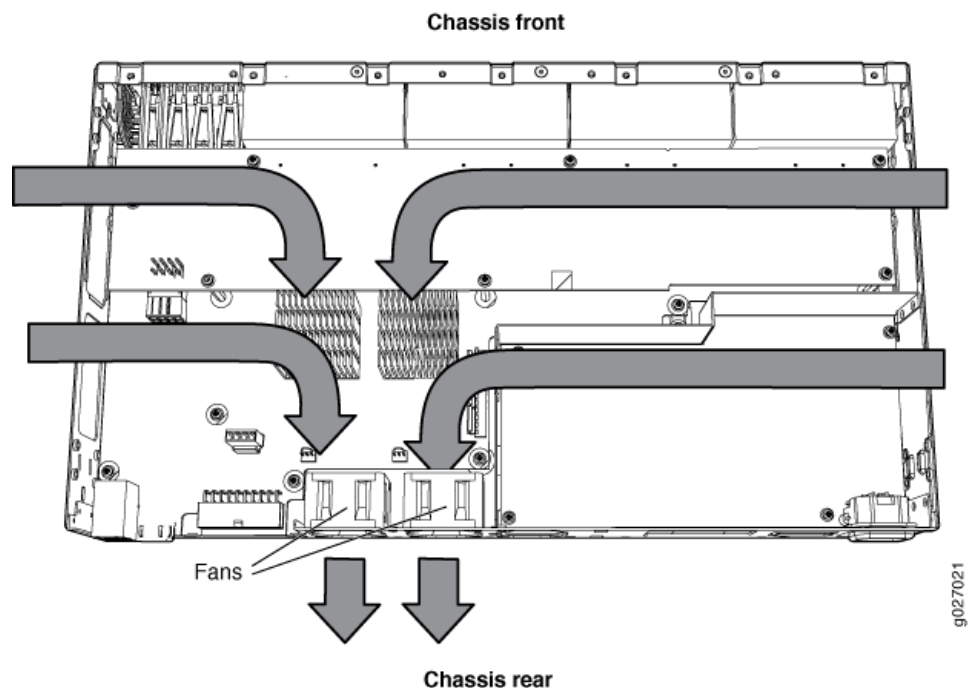

Airflow Direction in PoE Models of EX2200 switches, Except for the EX2200-C Models

Figure 15 on page 20 shows the airflow in PoE models of EX2200 switches, except EX2200-C models.

Figure 15: Airflow Through PoE Models of EX2200 Switches Except the EX2200-C Switch Models

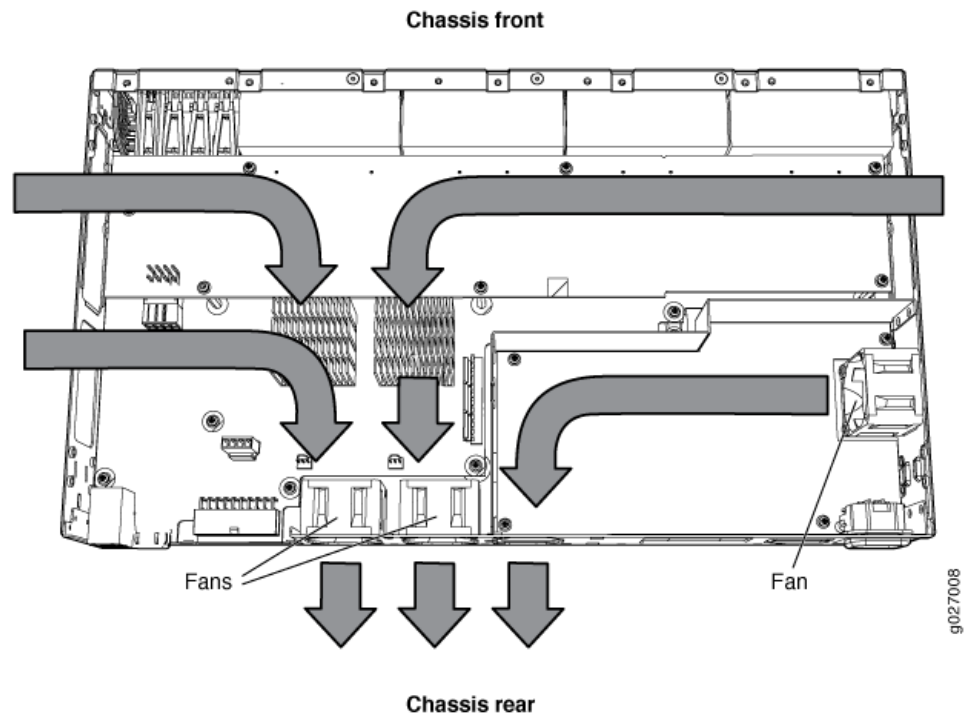

Under normal operating conditions, the fans operate at a moderate speed to reduce noise. Temperature sensors in the chassis monitor the temperature within the chassis. If any fan fails or if the temperature inside the chassis rises above the threshold, the switch raises an alarm and all functioning fans operate at a higher speed than normal. If the temperature inside the chassis rises above the threshold, the switch shuts down automatically.

Related Documentation

- [EX2200 Switches Hardware Overview on page 3](#)
- [Chassis Status LEDs in EX2200 Switches on page 13](#)
- [Understanding Alarm Types and Severity Levels on EX Series Switches](#)
- [Prevention of Electrostatic Discharge Damage on page 198](#)

CHAPTER 3

Component Specifications

- [USB Port Specifications for an EX Series Switch on page 21](#)
- [Mini-USB Port Specifications for an EX2200 Switch on page 22](#)
- [Network Port Connector Pinout Information for an EX2200 Switch on page 23](#)
- [Console Port Connector Pinout Information for an EX Series Switch on page 23](#)
- [RJ-45 to DB-9 Serial Port Adapter Pinout Information for a Switch on page 25](#)
- [Management Port Connector Pinout Information for an EX2200 Switch on page 25](#)
- [Pluggable Transceivers Supported on EX2200 Switches on page 26](#)

USB Port Specifications for an EX Series Switch

The following Juniper Networks USB flash drives have been tested and are officially supported for the USB port on all EX Series switches:

- RE-USB-1G-S
- RE-USB-2G-S
- RE-USB-4G-S



CAUTION: Any USB memory product not listed as supported for EX Series switches has not been tested by Juniper Networks. The use of any unsupported USB memory product could expose your EX Series switch to unpredictable behavior. Juniper Networks Technical Assistance Center (JTAC) can provide only limited support for issues related to unsupported hardware. We strongly recommend that you use only supported USB flash drives.

All USB flash drives used on EX Series switches must have the following features:

- USB 2.0 or later.
- Formatted with a FAT or MS-DOS file system.
- If the switch is running Junos OS Release 9.5 or earlier, the formatting method must use a master boot record. Microsoft Windows formatting, by default, does not use a master boot record. See the documentation for your USB flash drive for information about how your USB flash drive is formatted.

- Related Documentation**
- [EX2200 Switches Hardware Overview on page 3](#)
 - *Rear Panel of an EX3200 Switch*
 - *Rear Panel of an EX3300 Switch*
 - *Rear Panel of an EX4200 Switch*
 - *EX4300 Switches Hardware Overview*
 - *Front Panel of an EX4500 Switch*
 - *Management Panel of an EX4600 Switch*
 - *EX4550 Switches Hardware Overview*
 - *Switch Fabric and Routing Engine (SRE) Module in an EX6200 Switch*
 - *Switch Fabric and Routing Engine (SRE) Module in an EX8208 Switch*
 - *Routing Engine (RE) Module in an EX8216 Switch*
 - *Routing Engine Module in an EX9200 Switch*
 - *Booting an EX Series Switch Using a Software Package Stored on a USB Flash Drive*

Mini-USB Port Specifications for an EX2200 Switch

The EX2200-C switch, the compact, fanless model, has two management console ports: an RJ-45 port, and a Mini-USB Type-B port.

By default, the RJ-45 port is set as the active console port. It can display all the early boot and low-level message output and you can access the switch through this port in the debugger prompt. The Mini-USB Type-B port is the passive console port. You can change the status of the port to active or passive using the **port-type** configuration statement. See *Configuring the Console Port Type (CLI Procedure)*.

The Mini-USB Type-B console port uses a Mini-B plug (5-pin) connector to connect to a console management device. The default baud rate for the console port is 9600 baud.

[Table 12 on page 22](#) provides the pinout information of the Mini-USB Type-B console port.

Table 12: Mini-USB Type-B Console Port Pinout Information for EX2200-C Switches

Pin	Signal	Description
1	VCC	+5 VDC
2	D-	Data -
3	D+	Data +
X	N/C	May be N/C, GND or used as an attached device presence indicator
4	GND	Ground

- Related Documentation**
- See [EX2200 Switches Hardware Overview](#) on page 3 for port location.
 - [Configuring the Console Port Type \(CLI Procedure\)](#)

Network Port Connector Pinout Information for an EX2200 Switch

A network port on an EX2200 switch uses an RJ-45 connector to connect to a device.

The port uses an autosensing RJ-45 connector to support a 10/100/1000Base-T connection. Two LEDs on the port indicate link/activity on the port and the port status. See “[Network Port and Uplink Port LEDs in EX2200 Switches](#)” on page 14.

[Table 13 on page 23](#) provides the pinout information for the RJ-45 connector. An RJ-45 cable, with a connector attached, is supplied with the switch.

Table 13: Network Port Connector Pinout Information for EX2200 Switches

Pin	Signal	Description
1	TRP1+	Transmit/receive data pair 1 Negative Vport (in PoE models)
2	TRP1-	Transmit/receive data pair 1 Negative Vport (in PoE models)
3	TRP2+	Transmit/receive data pair 2 Positive Vport (in PoE models)
4	TRP3+	Transmit/receive data pair 3
5	TRP3-	Transmit/receive data pair 3
6	TRP2-	Transmit/receive data pair 2 Positive Vport (in PoE models)
7	TRP4+	Transmit/receive data pair 4
8	TRP4-	Transmit/receive data pair 4

- Related Documentation**
- [EX2200 Switches Hardware Overview](#) on page 3

Console Port Connector Pinout Information for an EX Series Switch

The console port on an EX Series switch is an RS-232 serial interface that uses an RJ-45 connector to connect to a console management device. The default baud rate for the console port is 9600 baud.

Table 14 on page 24 provides the pinout information for the RJ-45 console connector. An RJ-45 cable and an RJ-45 to DB-9 serial port adapter are supplied with the switch.



NOTE: If your laptop or PC does not have a DB-9 male connector pin and you want to connect your laptop or PC directly to an EX Series switch, use a combination of the RJ-45 to DB-9 female adapter supplied with the switch and a USB to DB-9 male adapter. You must provide the USB to DB-9 male adapter.

Table 14: EX Series Switches Console Port Connector Pinout Information

Pin	Signal	Description
1	RTS Output	Request to send
2	DTR Output	Data terminal ready
3	TxD Output	Transmit data
4	Signal Ground	Signal ground
5	Signal Ground	Signal ground
6	RxD Input	Receive data
7	CD Input	Data carrier detect
8	CTS Input	Clear to send

Related Documentation

- [EX2200 Switches Hardware Overview on page 3](#)
- *Rear Panel of an EX3200 Switch*
- *Rear Panel of an EX3300 Switch*
- *Rear Panel of an EX4200 Switch*
- *EX4300 Switches Hardware Overview*
- *Front Panel of an EX4500 Switch*
- *EX4550 Switches Hardware Overview*
- *Management Panel of an EX4600 Switch*
- *Switch Fabric and Routing Engine (SRE) Module in an EX6200 Switch*
- *Switch Fabric and Routing Engine (SRE) Module in an EX8208 Switch*
- *Routing Engine (RE) Module in an EX8216 Switch*
- [Connecting a Switch to a Management Console on page 129](#)
- *Configuring the Console Port Type (CLI Procedure)*

RJ-45 to DB-9 Serial Port Adapter Pinout Information for a Switch

The console port is an RS-232 serial interface that uses an RJ-45 connector to connect to a management device such as a PC or a laptop. If your laptop or PC does not have a DB-9 male connector pin and you want to connect your laptop or PC to the switch, use a combination of the RJ-45 to DB-9 female adapter supplied with the switch along with a USB to DB-9 male adapter.

Table 15 on page 25 provides the pinout information for the RJ-45 to DB-9 serial port adapter.

Table 15: RJ-45 to DB-9 Serial Port Adapter Pinout Information

RJ-45 Pin	Signal	DB-9 Pin	Signal
1	RTS	8	CTS
2	DTR	6	DSR
3	TXD	2	RXD
4	GND	5	GND
6	RXD	3	TXD
7	DSR	4	DTR
8	CTS	7	RTS

Related Documentation

- [Connecting a Switch to a Management Console on page 129](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting an EX9200 Switch to a Management Console or an Auxiliary Device](#)
- [Connecting and Configuring an EX9200 Switch \(CLI Procedure\)](#)
- [Connecting and Configuring an OCX1100 Switch \(CLI Procedure\)](#)

Management Port Connector Pinout Information for an EX2200 Switch

The management port on an EX2200 switch uses an RJ-45 connector to connect to a management device for out-of-band management.

The port uses an autosensing RJ-45 connector to support a 10/100Base-T connection. Two LEDs on the port indicate link/activity on the port and the administrative status of the port. See “[Management Port LEDs in EX2200 Switches](#)” on page 17.

Table 16 on page 26 provides the pinout information for the RJ-45 connector for the management port. An RJ-45 cable, with a connector attached, is supplied with the switch.

Table 16: Management Port Connector Pinout Information for EX2200 Switches

Pin	Signal	Description
1	TRP1+	Transmit/receive data pair 1
2	TRP1-	Transmit/receive data pair 1
3	TRP2+	Transmit/receive data pair 2
6	TRP2-	Transmit/receive data pair 2

- Related Documentation**
- See [EX2200 Switches Hardware Overview](#) on page 3 for port location.
 - [Connecting a Switch to a Network for Out-of-Band Management](#) on page 127

Pluggable Transceivers Supported on EX2200 Switches

Uplink ports and dual-purpose uplink ports on the front panel in EX2200 switches support SFP transceivers. This topic describes the optical interfaces supported for those transceivers. It also lists the copper interface supported for the SFP transceivers.



NOTE: We recommend that you use only optical transceivers and optical connectors purchased from Juniper Networks with your Juniper Networks device.



CAUTION: If you are having a problem running a Juniper Networks device that is using a third-party optic or cable, the Juniper Networks Technical Assistance Center (JTAC) can help you diagnose the source of the problem. Your JTAC engineer might recommend that you check the third-party optic or cable and potentially replace it with an equivalent Juniper Networks optic or cable that is qualified for the device.



NOTE: EX2200-C switches ensure normal operation in the temperature range 30° F (0° C) through 104° F (40° C) at altitudes up to 1,524 m (5,000 ft). In the following conditions, use extended temperature range SFPs when fiber uplinks are used:

- In the temperature range 104° F through 113° F (40° C up to 45° C) at altitudes up to 1,524 m (5,000 ft)
- In the temperature range 95° F through 113° F (35° C up to 45° C) at altitudes above 1,524 m (5,000 ft) up to 3,048 m (10,000 ft)

The tables in this topic describe the optical interface support over single-mode fiber-optic (SMF) and multimode fiber-optic (MMF) cables and over the copper interface for SFP transceivers:

- [Table 17 on page 27](#)—Optical interface support and copper interface support for Gigabit Ethernet SFP transceivers in EX2200 switches except EX2200-C switches.
- [Table 18 on page 46](#)—Optical interface support for Fast Ethernet SFP transceivers except EX2200-C switches.
- [Table 19 on page 52](#)—Optical interface support and copper interface support for SFP transceivers in EX2200-C switches.

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches

Ethernet Standard	Specification	Value
1000BASE-T	Model number	EX-SFP-1GE-T
	Rate	10/100/1000 Mbps
	Connector type	RJ-45
	Transmitter wavelength	–
	Minimum launch power	–
	Maximum launch power	–
	Minimum receiver sensitivity	–
	Maximum input power	–
	Core/Cladding size	–
	Modal bandwidth	–
	Distance	100 m (328 ft)
	Software required	Junos OS for EX Series switches, Release 10.1 or later
	Support for Virtual Chassis configuration	Yes, starting with Junos OS Release 12.3R3

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value			
1000BASE-SX	Model number	EX-SFP-1GE-SX			
	Rate	1000 Mbps			
	Connector type	LC			
	Fiber count	Dual			
	Transmitter wavelength	850 nm			
	Minimum launch power	−9.5 dBm			
	Maximum launch power	−3 dBm			
	Minimum receiver sensitivity	−21 dBm			
	Maximum input power	0 dBm			
	Fiber type	MMF			
	Core/Cladding size	62.5/125 μm	62.5/125 μm	50/125 μm	50/125 μm
	Fiber grade	FDDI	OM1	–	OM2
	Modal bandwidth	160 MHz/km	200 MHz/km	400 MHz/km	500 MHz/km
	Distance	220 m (722 ft)	275 m (902 ft)	500 m (1640 ft)	550 m (1804 ft)
	Software required	Junos OS for EX Series switches, Release 10.1 or later			
	Support for Virtual Chassis configuration	Yes			

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-1GE-LX
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	−9.5 dBm
	Maximum launch power	−3 dBm
	Minimum receiver sensitivity	−25 dBm
	Maximum input power	−3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μm
	Modal bandwidth	–
	Distance	10 km (6.2 miles)
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-U	Model number	EX-SFP-GE10KT13R14
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1310 nm
	Receiver wavelength	1490 nm
	Minimum launch power	-9 dBm
	Maximum launch power	-3 dBm
	Minimum receiver sensitivity	-30 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-D	Model number	EX-SFP-GE10KT14R13
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1490 nm
	Receiver wavelength	1310 nm
	Minimum launch power	-9 dBm
	Maximum launch power	-3 dBm
	Minimum receiver sensitivity	-30 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-U	Model number	EX-SFP-GE10KT13R15
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1310 nm
	Receiver wavelength	1550 nm
	Minimum launch power	-9 dBm
	Maximum launch power	-3 dBm
	Minimum receiver sensitivity	-21 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-D	Model number	EX-SFP-GE10KT15R13
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1550 nm
	Receiver wavelength	1310 nm
	Minimum launch power	-9 dBm
	Maximum launch power	-3 dBm
	Minimum receiver sensitivity	-21 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-U	Model number	EX-SFP-GE40KT13R15
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1310 nm
	Receiver wavelength	1550 nm
	Minimum launch power	-6.5 dBm
	Maximum launch power	2 dBm
	Minimum receiver sensitivity	-23 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	40 km (24.8 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-BX-D	Model number	EX-SFP-GE40KT15R13
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1550 nm
	Receiver wavelength	1310 nm
	Minimum launch power	-6.5 dBm
	Maximum launch power	2 dBm
	Minimum receiver sensitivity	-23 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	40 km (24.8 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-1GE-LX40K
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Double
	Transmitter wavelength	1310 nm
	Minimum launch power	-14 dBm
	Maximum launch power	-8 dBm
	Minimum receiver sensitivity	-45 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	40 km (24.8 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LH (or 1000BASE-ZX)	Model number	EX-SFP-1GE-LH
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1550 nm
	Minimum launch power	-2 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-25 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	70 km (43.5 miles)
	Software required	Junos OS for EX Series switches, Release 10.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1470
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1470 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1490
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1490 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1510
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1510 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1530
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1530 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1550
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1550 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1570
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1570 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	–32 dBm
	Maximum input power	–8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	–
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1590
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1590 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 17: Optical interface Support and Copper Interface Support for Gigabit Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-GE80KCW1610
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1610 nm
	Minimum launch power	0 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	DOM support	Available
	Software required	Junos OS for EX Series switches, Release 12.1 or later
	Support for Virtual Chassis configuration	Yes

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches

Ethernet Standard	Specification	Value
100BASE-FX	Model number	EX-SFP-IFE-FX
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-20 dBm
	Maximum launch power	-14 dBm
	Minimum receiver sensitivity	-32.5 dBm
	Maximum input power	-8 dBm
	Fiber type	MMF
	Core/Cladding size	62.5/125 μ m
	Fiber grade	FDDI/OM1
	Modal bandwidth	500 MHz/km
	Distance	2 km (1.2 miles)
	Software required	Junos OS for EX Series switches, Release 10.1 or later
	Support for Virtual Chassis configuration	No

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
100BASE-LX	Model number	EX-SFP-IFE-LX
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-15 dBm
	Maximum launch power	-8 dBm
	Minimum receiver sensitivity	-31.5 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	No

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
100BASE-BX-U	Model number	EX-SFP-FE20KT13R15
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1310 nm
	Receiver wavelength	1550 nm
	Minimum launch power	-14 dBm
	Maximum launch power	-8 dBm
	Minimum receiver sensitivity	-45 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	20 km (12.4 miles)
	Software required	Junos OS for EX Series switches, Release 10.1 or later
	Support for Virtual Chassis configuration	No

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
100BASE-BX-D	Model number	EX-SFP-FE20KT15R13
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Single
	Transmitter wavelength	1550 nm
	Receiver wavelength	1310 nm
	Minimum launch power	-14 dBm
	Maximum launch power	-8 dBm
	Minimum receiver sensitivity	-45 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	20 km (12.4 miles)
	Software required	Junos OS for EX Series switches, Release 10.1 or later
	Support for Virtual Chassis configuration	No

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
100BASE-LX40K	Model number	EX-SFP-IFE-LX40K
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-5 dBm
	Maximum launch power	0 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	40 km (24.8 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	No

Table 18: Optical interface Support for Fast Ethernet SFP Transceivers in EX2200 Switches Except EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
100BASE-LH (or 100BASE-ZX)	Model number	EX-SFP-IFE-LH
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-5 dBm
	Maximum launch power	0 dBm
	Minimum receiver sensitivity	-32 dBm
	Maximum input power	-8 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	80 km (49.7 miles)
	Software required	Junos OS for EX Series switches, Release 11.2 or later
	Support for Virtual Chassis configuration	No

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches

Ethernet Standard	Specification	Value			
1000BASE-SX	Model number	EX-SFP-1GE-SX			
	Rate	1000 Mbps			
	Connector type	LC			
	Fiber count	Dual			
	Transmitter wavelength	850 nm			
	Minimum launch power	−9.5 dBm			
	Maximum launch power	−3 dBm			
	Minimum receiver sensitivity	−21 dBm			
	Maximum input power	0 dBm			
	Fiber type	MMF			
	Core/Cladding size	62.5/125 μm	62.5/125 μm	50/125 μm	50/125 μm
	Fiber grade	FDDI	OM1	–	OM2
	Modal bandwidth	160 MHz/km	200 MHz/km	400 MHz/km	500 MHz/km
	Distance	220 m (722 ft)	275 m (902 ft)	500 m (1640 ft)	550 m (1804 ft)
	Software required	Junos OS for EX Series switches, Release 11.3 or later			
	Support for Virtual Chassis configuration	Yes			

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
Extended Temp SFP 1000BASE-SX	Model number	EX-SFP-1GE-SX-EX
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	–
	Transmitter wavelength	–
	Minimum launch power	–
	Maximum launch power	–
	Minimum receiver sensitivity	–
	Maximum input power	–
	Fiber type	MMF
	Core/Cladding size	–
	Modal bandwidth	–
	Transmitter wavelength	850 nm
	Distance	550 m (1804 ft)
	Software required	Junos OS for EX Series switches, Release 11.3 or later
	Support for Virtual Chassis configuration	Yes

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
Extended Temp SFP 100BASE-FX	Model number	EX-SFP-1FE-FX-EX
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	–
	Transmitter wavelength	–
	Minimum launch power	–
	Maximum launch power	–
	Minimum receiver sensitivity	–
	Maximum input power	–
	Fiber type	MMF
	Core/Cladding size	–
	Modal bandwidth	–
	Transmitter wavelength	1310 nm
	Distance	2 km (1.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.3 or later
	Support for Virtual Chassis configuration	Yes

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
100BASE-FX	Model number	EX-SFP-1FE-FX
	Rate	100 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-20 dBm
	Maximum launch power	-14 dBm
	Minimum receiver sensitivity	-32.5 dBm
	Maximum input power	-8 dBm
	Fiber type	MMF
	Core/Cladding size	62.5/125 μ m
	Fiber grade	FDDI/OM1
	Modal bandwidth	500 MHz/km
	Distance	2 km (1.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.3 or later
	Support for Virtual Chassis configuration	Yes

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches (*continued*)

Ethernet Standard	Specification	Value
1000BASE-LX	Model number	EX-SFP-1GE-LX
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1310 nm
	Minimum launch power	-9.5 dBm
	Maximum launch power	-3 dBm
	Minimum receiver sensitivity	-25 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	10 km (6.2 miles)
	Software required	Junos OS for EX Series switches, Release 11.3 or later
	Support for Virtual Chassis configuration	Yes

Table 19: Optical interface Support and Copper Interface Support for SFP Transceivers in EX2200-C Switches (continued)

Ethernet Standard	Specification	Value
1000BASE-LH (or 1000BASE-ZX)	Model number	EX-SFP-1GE-LH
	Rate	1000 Mbps
	Connector type	LC
	Fiber count	Dual
	Transmitter wavelength	1550 nm
	Minimum launch power	-2 dBm
	Maximum launch power	5 dBm
	Minimum receiver sensitivity	-25 dBm
	Maximum input power	-3 dBm
	Fiber type	SMF
	Core/Cladding size	9/125 μ m
	Modal bandwidth	-
	Distance	70 km (43.5 miles)
	Software required	Junos OS for EX Series switches, Release 11.3 or later
	Support for Virtual Chassis configuration	Yes

Related Documentation

- [EX2200 Switches Hardware Overview on page 3](#)
- [Installing a Transceiver in an EX Series Switch on page 113](#)
- [Removing a Transceiver from a Switch on page 149](#)

PART 2

Planning for Switch Installation

- [Site Preparation on page 61](#)
- [Mounting and Clearance Requirements on page 71](#)
- [Cable Specifications on page 77](#)
- [Planning Power Requirements on page 79](#)

CHAPTER 4

Site Preparation

- Site Preparation Checklist for EX2200 Switches on page 61
- General Site Guidelines on page 62
- Site Electrical Wiring Guidelines on page 63
- Environmental Requirements and Specifications for EX Series Switches on page 65

Site Preparation Checklist for EX2200 Switches

The checklist in [Table 20 on page 61](#) summarizes the tasks you need to perform when preparing a site for EX2200 switch installation.

Table 20: Site Preparation Checklist

Item or Task	For More Information	Performed by	Date
Environment			
Verify that environmental factors such as temperature and humidity do not exceed switch tolerances.	"Environmental Requirements and Specifications for EX Series Switches" on page 65		
Power			
Measure distance between external power sources and switch installation site.			
Locate sites for connection of system grounding.			
Calculate the power consumption and requirements.	"Power Specifications for EX2200 Switches" on page 79		
Hardware Configuration			
Choose the number and types of switches you want to install.	"EX2200 Switches Hardware Overview" on page 3		
Rack or Cabinet			

Table 20: Site Preparation Checklist (*continued*)

Item or Task	For More Information	Performed by	Date
Verify that your rack or cabinet meets the minimum requirements for the installation of the switch.	"Rack Requirements for EX2200 Switches" on page 71 "Cabinet Requirements for EX2200 Switches" on page 72		
Plan rack or cabinet location, including required space clearances.	"Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches" on page 74		
Secure the rack or cabinet to the floor and building structure.			
Wall			
Verify that the wall meets the minimum requirements for the installation of the switch.	"Requirements for Mounting an EX2200 Switch on a Desktop or Wall" on page 73		
Verify that there is appropriate clearance in your selected location.	"Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches" on page 74		
Cables			
Acquire cables and connectors:			
<ul style="list-style-type: none"> Determine the number of cables needed based on your planned configuration. Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected. 			
Plan the cable routing and management.			

- Related Documentation**
- [General Safety Guidelines and Warnings on page 169](#)
 - [General Site Guidelines on page 62](#)
 - [Installing and Connecting an EX2200 Switch on page 85](#)
 - [Mounting an EX2200 Switch on page 88](#)

General Site Guidelines

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

Efficient device operation requires proper site planning and maintenance and proper layout of the equipment, rack or cabinet (if used), and wiring closet.

To plan and create an acceptable operating environment for your device and prevent environmentally caused equipment failures:

- Keep the area around the chassis free from dust and conductive material, such as metal flakes.
- Follow prescribed airflow guidelines to ensure that the cooling system functions properly and that exhaust from other equipment does not blow into the intake vents of the device.
- Follow the prescribed electrostatic discharge (ESD) prevention procedures to prevent damaging the equipment. Static discharge can cause components to fail completely or intermittently over time.
- Install the device in a secure area, so that only authorized personnel can access the device.

Related Documentation

- [Prevention of Electrostatic Discharge Damage on page 198](#)
- [Environmental Requirements and Specifications for EX Series Switches on page 65](#)
- *Environmental Requirements and Specifications for OCX1100 Switches*
- *Environmental Requirements and Specifications for a QFX3100 Director Device*
- *Environmental Requirements and Specifications for a QFX3008-I Interconnect Device*
- *Environmental Requirements and Specifications for a QFX3500 Device*
- *Environmental Requirements and Specifications for QFX3600 and QFX3600-I Devices*
- *Environmental Requirements and Specifications for a QFX5100 Device*

Site Electrical Wiring Guidelines

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

[Table 21 on page 64](#) describes the factors you must consider while planning the electrical wiring at your site.



WARNING: It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.

Table 21: Site Electrical Wiring Guidelines

Site Wiring Factor	Guidelines
Signaling limitations	<p>If your site experiences any of the following problems, consult experts in electrical surge suppression and shielding:</p> <ul style="list-style-type: none"> • Improperly installed wires cause radio frequency interference (RFI). • Damage from lightning strikes occurs when wires exceed recommended distances or pass between buildings. • Electromagnetic pulses (EMPs) caused by lightning damage unshielded conductors and electronic devices.
Radio frequency interference	<p>To reduce or eliminate RFI from your site wiring, do the following:</p> <ul style="list-style-type: none"> • Use a twisted-pair cable with a good distribution of grounding conductors. • If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.
Electromagnetic compatibility	<p>If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, seek expert advice.</p> <p>Some of the problems caused by strong sources of electromagnetic interference (EMI) are:</p> <ul style="list-style-type: none"> • Destruction of the signal drivers and receivers in the switch • Electrical hazards as a result of power surges conducted over the lines into the equipment

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Prevention of Electrostatic Discharge Damage on page 198](#)
- [Power Supply in EX2200 Switches on page 18](#)
- [Power Supply in EX3200 Switches](#)
- [Power Supply in EX3300 Switches](#)
- [Power Supply in EX4200 Switches](#)
- [AC Power Supply in EX4300 Switches](#)
- [DC Power Supply in EX4300 Switches](#)
- [AC Power Supply in EX4500 Switches](#)
- [DC Power Supply in EX4500 Switches](#)
- [AC Power Supply in EX4550 Switches](#)
- [DC Power Supply in EX4550 Switches](#)
- [AC Power Supply in an EX4600 Switch](#)
- [DC Power Supply in an EX4600 Switch](#)

- *AC Power Supplies in an EX6200 Switch*
- *DC Power Supply in an EX6200 Switch*
- *AC Power Supply in an EX8200 Switch*
- *DC Power Supply in an EX8200 Switch*
- *AC Power Supply in an EX9204 Switch*
- *DC Power Supply in an EX9204 Switch*
- *AC Power Supply in an EX9208 Switch*
- *DC Power Supply in an EX9208 Switch*
- *AC Power Supply in an EX9214 Switch*
- *DC Power Supply in an EX9214 Switch*
- *Power Supply in an EX Series Redundant Power System*
- *AC Power Supply in OCX1100 Switches*
- *DC Power Supply in OCX1100 Switches*
- *AC Power Supply in a QFX3100 Director Device*
- *AC Power Supply in a QFX3008-I Interconnect Device*
- *Wiring Tray in a QFX3008-I Interconnect Device*
- *AC Power Supply for a QFX3500, QFX3600, or QFX3600-I Device*
- *DC Power Supply for a QFX3500, QFX3600, or QFX3600-I Device*
- *AC Power Supply for a QFX5100 Device*
- *DC Power Supply in a QFX5100 Device*

Environmental Requirements and Specifications for EX Series Switches

The switch must be installed in a rack or cabinet housed in a dry, clean, well-ventilated, and temperature-controlled environment.

Ensure that these environmental guidelines are followed:

- The site must be as dust-free as possible, because dust can clog air intake vents and filters, reducing the efficiency of the switch cooling system.
- Maintain ambient airflow for normal switch operation. If the airflow is blocked or restricted, or if the intake air is too warm, the switch might overheat, leading to the switch temperature monitor shutting down the switch to protect the hardware components.

[Table 22 on page 66](#) provides the required environmental conditions for normal switch operation.

Table 22: EX Series Switch Environmental Tolerances

Switch or device	Environment Tolerance			
	Altitude	Relative Humidity	Temperature	Seismic
EX2200-C	No performance degradation up to 5,000 feet (1524 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C) at altitudes up to 5,000 ft (1,524 m). For information about extended temperature SFPs, see “Pluggable Transceivers Supported on EX2200 Switches” on page 26.	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX2200 (except EX2200-C switches)	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX3200	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX3300	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX4200	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX4300	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX4500	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.

Table 22: EX Series Switch Environmental Tolerances (*continued*)

Switch or device	Environment Tolerance			
	Altitude	Relative Humidity	Temperature	Seismic
EX4550	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	<ul style="list-style-type: none"> EX4550-32F switches—Normal operation ensured in the temperature range 32° F through 113° F (0° C through 45° C) EX4550-32T switches—Normal operation is ensured in the temperature range 32° F through 104° F (0° C through 40° C) 	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX4600	No performance degradation to 6,562 feet (2000 meters)	<p>Normal operation ensured in relative humidity range of 5% through 90%, noncondensing</p> <ul style="list-style-type: none"> Short-term operation ensured in relative humidity range of 5% through 93%, noncondensing <p>NOTE: As defined in NEBS GR-63-CORE, Issue 4, short-term events can be up to 96 hours in duration but not more than 15 days per year.</p>	<ul style="list-style-type: none"> Normal operation ensured in temperature range of 32° F through 104° F (0° C through 40° C) Nonoperating storage temperature in shipping container: -40° F through 158° F (-40° C through 70° C) 	Designed to comply with Zone 4 earthquake requirements per NEBS GR-63-CORE, Issue 4.
EX6210	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX8208	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX8216	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.
EX9204	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 5% through 90% (noncondensing)	<p>Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C)</p> <p>Nonoperating storage temperature in shipping container: -40° F (-40° C) to 158° F (70° C)</p>	Complies with Zone 4 earthquake requirements as per GR-63.

Table 22: EX Series Switch Environmental Tolerances (*continued*)

Switch or device	Environment Tolerance			
	Altitude	Relative Humidity	Temperature	Seismic
EX9208	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 5% through 90% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C) Nonoperating storage temperature in shipping container: -40° F (-40° C) to 158° F (70° C)	Complies with Zone 4 earthquake requirements as per GR-63.
EX9214	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 5% through 90% (noncondensing)	Normal operation ensured in the temperature range 32° F through 104° F (0° C through 40° C) Nonoperating storage temperature in shipping container: -40° F (-40° C) to 158° F (70° C)	Complies with Zone 4 earthquake requirements as per GR-63.
XRE200	No performance degradation up to 10,000 feet (3048 meters)	Normal operation ensured in relative humidity range of 10% through 85% (noncondensing)	Normal operation ensured in the temperature range 41° F through 104° F (5° C through 40° C)	Complies with Zone 4 earthquake requirements as per GR-63, Issue 4.



NOTE: Install EX Series switches only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110–16, 110–17, and 110–18 of the National Electrical Code, ANSI/NFPA 70.

Related Documentation

- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX3200 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX3300 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX4200 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX4300 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for an EX4600 Switch](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for an EX Series Redundant Power System](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX4500 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX4550 Switches](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for an EX6210 Switch](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for an EX8208 Switch](#)

- *Clearance Requirements for Airflow and Hardware Maintenance for an EX8216 Switch*
- *Clearance Requirements for Airflow and Hardware Maintenance for an EX9204 Switch*
- *Clearance Requirements for Airflow and Hardware Maintenance for an EX9208 Switch*
- *Clearance Requirements for Airflow and Hardware Maintenance for an EX9214 Switch*

CHAPTER 5

Mounting and Clearance Requirements

- Rack Requirements for EX2200 Switches on page 71
- Cabinet Requirements for EX2200 Switches on page 72
- Requirements for Mounting an EX2200 Switch on a Desktop or Wall on page 73
- Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74

Rack Requirements for EX2200 Switches

You can mount the EX2200 switches on two-post racks or four-post racks.

Rack requirements consist of:

- Rack type
- Mounting bracket hole spacing
- Rack size and strength
- Rack connection to the building structure

Table 23 on page 71 provides the rack requirements and specifications for the switch.

Table 23: Rack Requirements and Specifications for the Switch

Rack Requirement	Guidelines
Rack type	<p>Use a two-post rack or a four-post rack. You can mount the switch on any two-post or four-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75 in./4.45 cm) increments and that meets the size and strength requirements to support the weight.</p> <p>A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310–D) published by the Electronics Industry Association (http://www.ecianow.org/standards-practices/standards/).</p> <p>The rack must meet the strength requirements to support the weight of the chassis.</p>
Mounting bracket hole spacing	<p>The holes in the mounting brackets are spaced at 1 U (1.75 in. or 4.45 cm), so that the switch can be mounted in any rack that provides holes spaced at that distance.</p>

Table 23: Rack Requirements and Specifications for the Switch (*continued*)

Rack Requirement	Guidelines
Rack size and strength	<ul style="list-style-type: none"> Ensure that the rack complies with the standard defined for 19-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association (http://www.ecianow.org/standards-practices/standards/) . Ensure that the rack rails are spaced widely enough to accommodate the switch chassis' external dimensions . The outer edges of the front-mounting brackets extend the width of the chassis to 19 in. (48.2 cm). The rack must be strong enough to support the weight of the switch. Ensure that the spacing of rails and adjacent racks allows for the proper clearance around the switch and rack.
Rack connection to building structure	<ul style="list-style-type: none"> Secure the rack to the building structure. If earthquakes are a possibility in your geographical area, secure the rack to the floor. Secure the rack to the ceiling brackets as well as wall or floor brackets for maximum stability.

One pair of mounting brackets for mounting the switch on two posts of a rack is supplied with each switch. For mounting the switch on four posts of a rack or cabinet, you can order a four-post rack-mount kit separately.



NOTE: Mounting brackets are not supplied with EX2200-C switch; they are separately orderable.

Related Documentation

- [Chassis Physical Specifications for EX2200 Switches on page 9](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)
- [Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet on page 95](#)
- [Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet on page 98](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)

Cabinet Requirements for EX2200 Switches

You can mount the switch in a cabinet that contains a 19-in. rack.

Cabinet requirements consist of:

- Cabinet size
- Clearance requirements
- Cabinet airflow requirements

[Table 24 on page 73](#) provides the cabinet requirements and specifications for the switch.

Table 24: Cabinet Requirements and Specifications for the Switch

Cabinet Requirement	Guidelines
Cabinet size	<ul style="list-style-type: none"> You can mount the switch in a cabinet that contains a 19-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310–D) published by the Electronics Industry Association (http://www.ecianow.org/standards-practices/standards/). The minimum cabinet size must be able to accommodate the maximum external dimensions of the switch.
Cabinet clearance	<ul style="list-style-type: none"> The outer edges of the mounting brackets extend the width of the chassis to 19 in. (48.2 cm). The minimum total clearance inside the cabinet is 30 in. (76.2 cm) between the inside of the front door and the inside of the rear door.
Cabinet airflow requirements	<p>When you mount the switch in a cabinet, ensure that ventilation through the cabinet is sufficient to prevent overheating.</p> <ul style="list-style-type: none"> Ensure adequate cool air supply to dissipate the thermal output of the switch or switches. Ensure that the hot air exhaust of the chassis exits the cabinet without recirculating into the switch. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top ensures the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. Install the switch in the cabinet in a way that maximizes the open space on the side of the chassis that has the hot air exhaust. Route and dress all cables to minimize the blockage of airflow to and from the chassis. Ensure that the spacing of rails and adjacent cabinets is such that there is proper clearance around the switch and cabinet. A cabinet larger than the minimum required provides better airflow and reduces the chance of overheating.

Related Documentation

- [Chassis Physical Specifications for EX2200 Switches on page 9](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)
- [Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet on page 95](#)
- [Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet on page 98](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)

Requirements for Mounting an EX2200 Switch on a Desktop or Wall

You can install the switch on a desktop or wall. When choosing a location, allow at least 6 in. (15.2 cm) of clearance between the front and back of the chassis and adjacent equipment or walls.

Ensure that the wall onto which the switch is installed is stable and securely supported.

If you are mounting the switch in sheetrock (wall board with a gypsum plaster core) or in wall board not backed by wall studs, use hollow wall anchors capable of supporting

the combined weight of two fully loaded chassis. Insert the screws into wall studs wherever possible to provide added support for the chassis.

Use the wall-mount kit from Juniper Networks to mount the switch on a wall. The wall-mount kit is not part of the standard package and must be ordered separately.


Related Documentation

- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74](#)
- [Wall-Mounting Warnings for EX2200 Switches on page 189](#)
- [Mounting an EX2200 Switch on a Desk or Other Level Surface on page 89](#)
- [Mounting an EX2200 Switch on a Wall on page 102](#)

Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches


When planning the site for installing an EX2200 switch, you must allow sufficient clearance around the installed switch. [Figure 16 on page 74](#) shows the clearance requirement for EX2200 switches except the EX2200-C switch models. [Figure 17 on page 75](#) shows the clearance requirement for the EX2200-C switch models.

Figure 16: Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches Except EX2200-C Switch Models

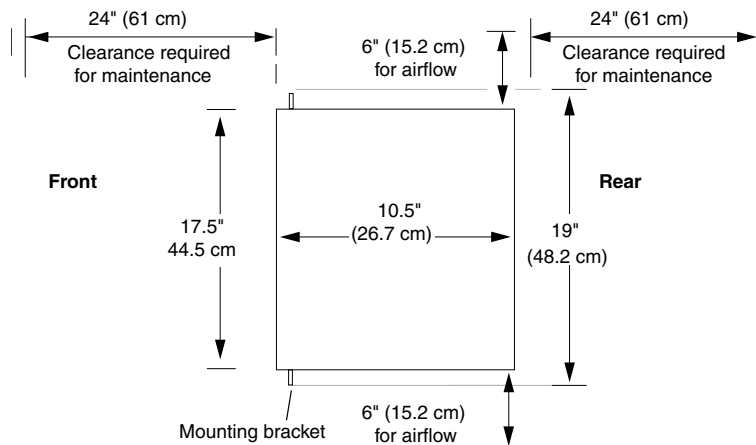

9027009

Figure 17: Clearance Requirements for Airflow and Hardware Maintenance for EX2200-C Switch Models

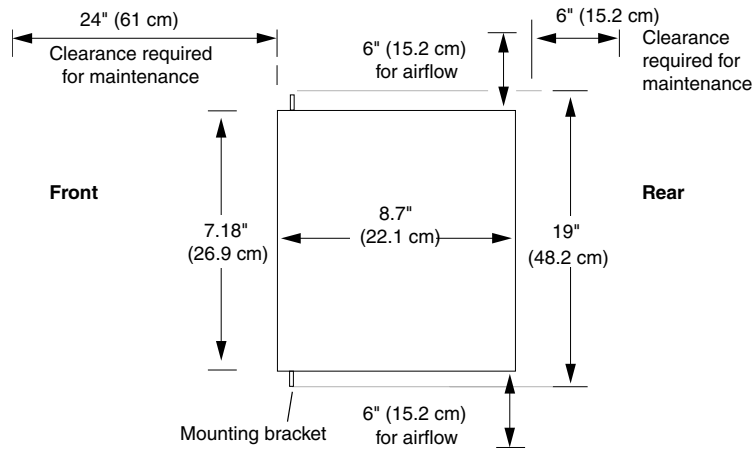

The power cord retainer clips extend out of the rear of the chassis by 3 in.

- Allow at least 6 in. (15.2 cm) of clearance on the side between devices that have fans or blowers installed. Allow 2.8 in. (7 cm) between the side of the chassis and any non-heat-producing surface such as a wall. For the cooling system to function properly, the airflow around the chassis must be unrestricted.

Figure 18 on page 75 shows the airflow in PoE models of EX2200 switches, except for EX2200-C models. Figure 19 on page 76 shows the airflow non-PoE models of EX2200 switches, except for EX2200-C models.

Figure 18: Airflow Through PoE Models of EX2200 Switches Except EX2200-C Switch Models


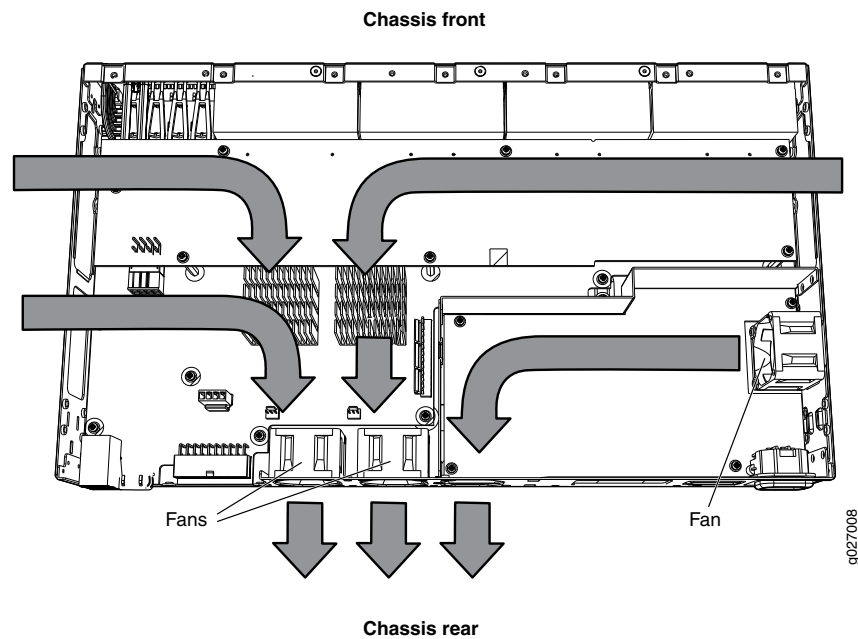


Figure 19: Airflow Through Non-PoE Models of EX2200 Switches Except EX2200-C Switch Models

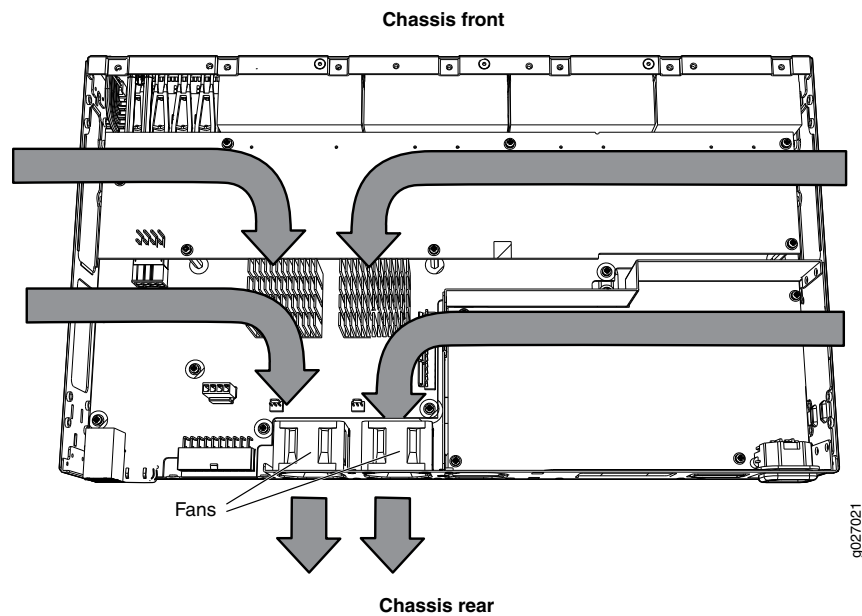

- If you are mounting an EX2200 switch in a rack or cabinet with other equipment, or if you are placing it on the desktop or floor near other equipment, ensure that the exhaust from other equipment does not blow into the intake vents of the chassis.
- Leave at least 24 in. (61 cm) in front of the switch and 6 in. (15.2 cm) behind the switch. For service personnel to remove and install hardware components, you must leave adequate space at the front and back of the switch. NEBS GR-63 recommends that you allow at least 30 in. (76.2 cm) in front of the rack or cabinet and 24 in. (61 cm) behind the rack or cabinet.

Related Documentation

- [Rack Requirements for EX2200 Switches on page 71](#)
- [Cabinet Requirements for EX2200 Switches on page 72](#)
- [General Site Guidelines on page 62](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)
- [Cooling System and Airflow in an EX2200 Switch on page 19](#)

CHAPTER 6

Cable Specifications

- [Network Cable Specifications for EX2200 Switches on page 77](#)

Network Cable Specifications for EX2200 Switches

EX2200 switches have interfaces that use various types of network cables.

For instructions on connecting the switch to a network for out-of-band management using an Ethernet cable with an RJ-45 connector, see [“Connecting a Switch to a Network for Out-of-Band Management” on page 127](#).

For instructions on connecting the switch to a management console using an Ethernet cable with an RJ-45 connector, see [“Connecting a Switch to a Management Console” on page 129](#).

For instructions on connecting a fiber-optic cable to the switch, see [“Connecting a Fiber-Optic Cable to a Switch” on page 133](#).

Related Documentation

- [Management Port Connector Pinout Information for an EX2200 Switch on page 25](#)
- [Console Port Connector Pinout Information for an EX Series Switch on page 23](#)
- [EX2200 Switches Hardware Overview on page 3](#)

CHAPTER 7

Planning Power Requirements

- [Power Specifications for EX2200 Switches on page 79](#)
- [AC Power Cord Specifications for EX2200 Switches on page 80](#)

Power Specifications for EX2200 Switches

This topic describes the power supply electrical specifications for EX2200 switches.

[Table 25 on page 79](#) provides the AC power supply electrical specifications for EX2200 switches.

[Table 26 on page 79](#) provides the DC power supply electrical specifications for EX2200 switches.

Table 25: AC Power Supply Electrical Specifications for EX2200 Switches

Item	Specification
AC input voltage	100 through 240 VAC
AC input line frequency	50 Hz/60 Hz nominal
AC system current rating	<ul style="list-style-type: none">• 7 A at 100 VAC and 2.9 A at 230 VAC (for switches with ports equipped for PoE)• 1.8 A at 100 VAC and 0.5 A at 230 VAC (for switches with no ports equipped for PoE)

Table 26: DC Power Supply Electrical Specifications for EX2200 Switches

Item	Specification
DC input voltage	36 through 75 VDC
DC input current	3.5 A maximum
Power supply output	100 W
Output holdup time	1 ms minimum



NOTE: EX2200 switches with DC power supply do not provide PoE.



NOTE: For DC power supplies, we recommend that you provide at least 3.5 A at 48 VDC and use a facility circuit breaker rated for 10 A minimum. Doing so enables you to operate the switch in any configuration without upgrading the power infrastructure, and allows the switch to function at full capacity using multiple power supplies.

Related Documentation

- [AC Power Cord Specifications for EX2200 Switches on page 80](#)
- [Power Supply in EX2200 Switches on page 18](#)
- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)

AC Power Cord Specifications for EX2200 Switches

A detachable AC power cord is supplied with the AC power supplies. The coupler is type C13 as described by International Electrotechnical Commission (IEC) standard 60320. The plug at the male end of the power cord fits into the power source outlet that is standard for your geographical location.



CAUTION: The AC power cord provided with each power supply is intended for use with that power supply only and not for any other use.



NOTE: In North America, AC power cords must not exceed 4.5 meters (approximately 14.75 feet) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52 and Canadian Electrical Code (CEC) Section 4-010(3). The cords supplied with the switch are in compliance.

Table 27 on page 80 lists AC power cord specifications for the countries and regions listed in the table.

Table 27: AC Power Cord Specifications


Country/Region	Electrical Specifications	Plug Standards	Juniper Model Number
Argentina	250 VAC, 10 A, 50 Hz	IRAM 2073 Type RA/3	CBL-EX-PWR-C13-AR
Australia	250 VAC, 10 A, 50 Hz	AS/NZS 3112 Type SAA/3	CBL-EX-PWR-C13-AU
Brazil	250 VAC, 10 A, 50 Hz	NBR 14136 Type BR/3	CBL-EX-PWR-C13-BR

Table 27: AC Power Cord Specifications (*continued*)

Country/Region	Electrical Specifications	Plug Standards	Juniper Model Number
China	250 VAC, 10 A, 50 Hz	GB 1002-1996 Type PRC/3	CBL-EX-PWR-C13-CH
Europe (except Italy, Switzerland, and United Kingdom)	250 VAC, 10 A, 50 Hz	CEE (7) VII Type VIIG	CBL-EX-PWR-C13-EU
India	250 VAC, 10 A, 50 Hz	IS 1293 Type IND/3	CBL-EX-PWR-C13-IN
Israel	250 VAC, 10 A, 50 Hz	SI 32/1971 Type IL/3G	CBL-EX-PWR-C13-IL
Italy	250 VAC, 10 A, 50 Hz	CEI 23-16 Type I/3G	CBL-EX-PWR-C13-IT
Japan	125 VAC, 12 A, 50 Hz or 60 Hz	SS-00259 Type VCTF	CBL-EX-PWR-C13-JP
Korea	250 VAC, 10 A, 50 Hz or 60 Hz	CEE (7) VII Type VIIGK	CBL-EX-PWR-C13-KR
North America	125 VAC, 13 A, 60 Hz	NEMA 5-15 Type N5-15	CBL-EX-PWR-C13-US
South Africa	250 VAC, 10A, 50 Hz	SABS 164/1:1992 Type ZA/13	CBL-EX-PWR-C13-SA
Switzerland	250 VAC, 10 A, 50 Hz	SEV 6534-2 Type I2G	CBL-EX-PWR-C13-SZ
Taiwan	125 VAC, 11 A and 15 A, 50 Hz	NEMA 5-15P Type N5-15P	CBL-EX-PWR-C13-TW
United Kingdom	250 VAC, 10 A, 50 Hz	BS 1363/A Type BS89/13	CBL-EX-PWR-C13-UK

Figure 20 on page 81 illustrates the plug on the power cord for some of the countries or regions listed in Table 27 on page 80.

Figure 20: AC Plug Types

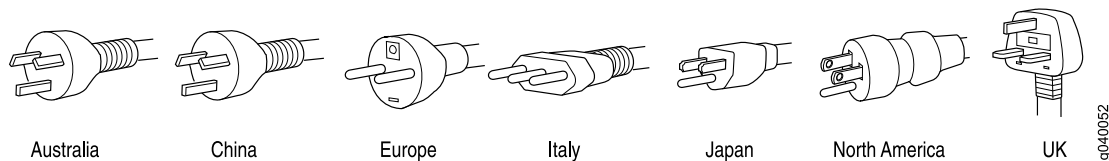

Related Documentation

- [Power Supply in EX2200 Switches on page 18](#)
- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Prevention of Electrostatic Discharge Damage on page 198](#)

PART 3

Installing and Connecting the Switch and Switch Components

- [Installing the Switch on page 85](#)
- [Installing Switch Components on page 113](#)
- [Connecting the Switch on page 117](#)
- [Performing Initial Configuration on page 135](#)

CHAPTER 8

Installing the Switch

- [Installing and Connecting an EX2200 Switch on page 85](#)
- [Unpacking an EX2200 Switch on page 86](#)
- [Parts Inventory \(Packing List\) for an EX2200 Switch on page 87](#)
- [Mounting an EX2200 Switch on page 88](#)
- [Mounting an EX2200 Switch on a Desk or Other Level Surface on page 89](#)
- [Mounting an EX2200 Switch On or Under a Desk Using Screws on page 92](#)
- [Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet on page 95](#)
- [Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet on page 98](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)
- [Mounting an EX2200 Switch on a Wall on page 102](#)
- [Mounting an EX2200 Switch Using the Magnet Mount on page 109](#)

Installing and Connecting an EX2200 Switch

To install and connect an EX2200 switch:

1. Follow instructions in [“Unpacking an EX2200 Switch” on page 86](#).
2. Mount the switch by following instructions appropriate for your site:
 - [“Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet” on page 95](#) (using the mounting brackets provided)
 - [“Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet” on page 98](#) (using the separately orderable four-post rack-mount kit)
 - [“Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet” on page 102](#) (using the 2-in.-recess front brackets from the separately orderable four-post rack-mount kit)
 - [“Mounting an EX2200 Switch on a Desk or Other Level Surface” on page 89](#) (using the rubber feet provided)
 - [“Mounting an EX2200 Switch on a Wall” on page 102](#) (using the screws or separately orderable wall-mount kit)

- [“Mounting an EX2200 Switch On or Under a Desk Using Screws”](#) on page 92 (using the desk/wall mounting screws)
 - [“Mounting an EX2200 Switch Using the Magnet Mount”](#) on page 109 (using the separately orderable magnet sheet)
3. Follow instructions in [“Connecting Earth Ground to an EX Series Switch”](#) on page 117.
 4. Follow instructions in [“Connecting AC Power to an EX2200 Switch”](#) on page 123 or [“Connecting DC Power to an EX2200 Switch”](#) on page 125.
 5. Perform initial configuration of the switch by following instructions in [“Connecting and Configuring an EX Series Switch \(CLI Procedure\)”](#) on page 139 or [“Connecting and Configuring an EX Series Switch \(J-Web Procedure\)”](#) on page 142.
 6. Set the switch's management options by following the appropriate instructions:
 - [Connecting a Switch to a Network for Out-of-Band Management](#) on page 127
 - [Connecting a Switch to a Management Console](#) on page 129

Related Documentation

- [Rack Requirements for EX2200 Switches](#) on page 71
- [Cabinet Requirements for EX2200 Switches](#) on page 72
- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches](#) on page 74

Unpacking an EX2200 Switch

The EX2200 switches are shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box.



CAUTION: EX2200 switches are maximally protected inside the shipping carton. Do not unpack the switches until you are ready to begin installation.

To unpack the switch:

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the system components.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box and verify the contents in it against the parts inventory on the label attached to the carton.
5. Pull out the packing material holding the switch in place.

6. Verify the chassis components received against the packing list included with the switch. An inventory of parts provided with the switch is provided in “[Parts Inventory \(Packing List\) for an EX2200 Switch](#)” on page 87.
7. Save the shipping carton and packing materials in case you need to move or ship the switch later.

Related Documentation

- [Mounting an EX2200 Switch on page 88](#)
- [Installing and Connecting an EX2200 Switch on page 85](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)

Parts Inventory (Packing List) for an EX2200 Switch

The EX2200 switches are shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box.

The switch shipment includes a packing list. Check the parts you receive in the switch shipping carton against the items on the packing list. The parts shipped depend on the configuration you order.

If any part on the packing list is missing, contact your customer service representative or contact Juniper customer care from within the U.S. or Canada by telephone at 1-800-638-8296. For international-dial or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

Table 28 on page 87 lists the parts and their quantities in the packing list.

Table 28: Parts List for EX2200 Switches

Component	Quantity
Switch with built-in power supply	1
AC power cord appropriate for your geographical location (only for AC switch models)	1
Power cord retainer clip (only for AC switch models)	1
Mounting brackets: <ul style="list-style-type: none"> • EX2200 switch—provided • EX2200-C switch—separately orderable 	2
Mounting screws to attach the mounting brackets to the switch chassis: <ul style="list-style-type: none"> • EX2200 switch—provided • EX2200-C switch—separately orderable 	8
Rubber feet	4

Table 28: Parts List for EX2200 Switches (*continued*)

Component	Quantity
RJ-45 cable and RJ-45 to DB-9 serial port adapter	1
Cable guard and 3 number-8 Phillips truss-head screws (EX2200-C models only and separately orderable)	-
Quick Start installation instructions	1
Juniper Networks Product Warranty	1
End User License Agreement	1



NOTE: You must provide mounting screws that are appropriate for your rack or cabinet to mount the chassis on a rack or a cabinet.

- Related Documentation**
- [Unpacking an EX2200 Switch on page 86](#)
 - [EX2200 Switches Hardware Overview on page 3](#)

Mounting an EX2200 Switch

Table 29 on page 88 lists the methods you can use to mount an EX2200 switch.

Table 29: EX2200 Switch Mounting Methods

Mounting Method	Switch Model	Comments
Desk or other level surface (using rubber feet)	<ul style="list-style-type: none"> • EX2200 • EX2200-C 	On a desk or other level surface by using rubber feet provided with the switch
Desk or other level surface (using screws)	EX2200-C	On or under a desk or other level surface by using screws
Two-post rack or cabinet	<ul style="list-style-type: none"> • EX2200 • EX2200-C 	On two posts in a 19-in. rack or cabinet by using the mounting brackets.
Four-post rack or cabinet	<ul style="list-style-type: none"> • EX2200 • EX2200-C 	<ul style="list-style-type: none"> • On four posts in a 19-in. rack or cabinet by using the separately orderable four-post rack-mount kit • On two posts in a 19-in. rack or cabinet by using the two post rack mounting brackets.
Recessed position	EX2200	In a position recessed 2 in. from the front of a 19-in. rack or cabinet by using the 2-in.-recess front brackets in the separately orderable four-post rack-mount kit. You can mount the switch in this recessed position on two-post or four-post racks and cabinets

Table 29: EX2200 Switch Mounting Methods (*continued*)

Mounting Method	Switch Model	Comments
Wall mount	<ul style="list-style-type: none"> EX2200 EX2200-C 	<ul style="list-style-type: none"> On a wall by using screws or separately orderable wall-mount kit On a wall by using screws
Magnet mount	EX2200-C	On or under a surface made of ferrous material using the separately orderable magnet sheet

**WARNING:**

- When mounting an EX2200 switch chassis in a vertical position, orient the front panel of the chassis downward to ensure proper airflow and meet safety requirements in the event of a fire.
- When wall mounting EX2200-24P and EX2200-48P models, install the wall-mount baffle above the units to reduce the risk of objects or substances falling into the air exhaust or power supply, which could cause a fire.

The holes in the mounting brackets are placed at 1 U (1.75 in. or 4.45 cm) apart so that the switch can be mounted in any rack or cabinet that provides holes spaced at that distance.

See the Related Documentation for detailed descriptions of the various rack or cabinet mounting options.

Related Documentation

- [Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet on page 95](#)
- [Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet on page 98](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)
- [Mounting an EX2200 Switch on a Desk or Other Level Surface on page 89](#)
- [Mounting an EX2200 Switch on a Wall on page 102](#)
- [Mounting an EX2200 Switch On or Under a Desk Using Screws on page 92](#)
- [Mounting an EX2200 Switch Using the Magnet Mount on page 109](#)
- [Connecting Earth Ground to an EX Series Switch on page 117](#)

Mounting an EX2200 Switch on a Desk or Other Level Surface

You can mount an EX2200 switch on a desk or other level surface by using the four rubber feet that are shipped with the switch. The rubber feet stabilize the chassis.

Before mounting the switch on a desk or other level surface:

- Verify that the site meets the requirements described in “[Site Preparation Checklist for EX2200 Switches](#)” on page 61.
- Place the desk in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
- Read “[General Safety Guidelines and Warnings](#)” on page 169, with particular attention to “[Chassis Lifting Guidelines for EX2200 Switches](#)” on page 183.



NOTE: Do not block the vents on the top of the EX2200-C switches. Doing this can lead to overheating of the switch chassis.


Ensure that you have the following parts and tools available:

- 4 rubber feet to stabilize the chassis on the a desk or other level surface (provided in the accessory box in the switch carton)
- 1 cable guard and 3 number-8 Phillips truss-head screws (optional and separately orderable) to secure the cable guard to the EX2200-C switch
- 1 standard cable lock (optional and separately orderable) to secure the EX2200-C switch models only from theft by connecting the cable to the security slots on the switch

To mount a switch on a desk or other level surface:

1. Remove the switch from the shipping carton (see “[Unpacking an EX2200 Switch](#)” on page 86).
2. Turn the chassis upside down on the desk or the level surface where you intend to mount the switch.
3. Attach the rubber feet to the bottom of the chassis, as shown in [Figure 21 on page 90](#).
4. Turn the chassis right side up on the desk or the level surface.


Figure 21: Attaching Rubber Feet to a Switch Chassis

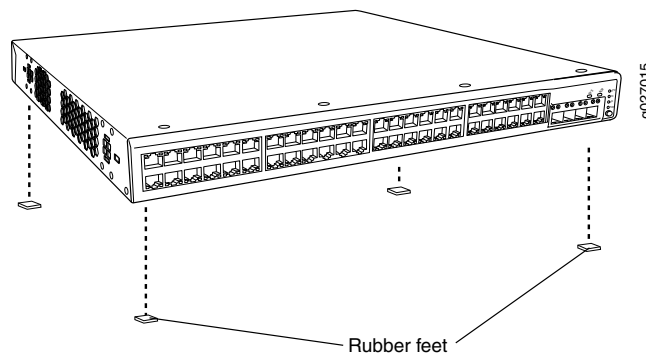

5. (Optional; applies only to EX2200-C models) Attach the cable guard to protect cable connections:
 - a. Use the 3 truss-head screws to attach the cable guard to the bottom of the chassis.


- b. Use the thumbscrews to tighten or loosen the guard to allow you to insert cables. See [Figure 22 on page 91](#).

Figure 22: Attaching a Cable Guard to an EX2200-C Switch

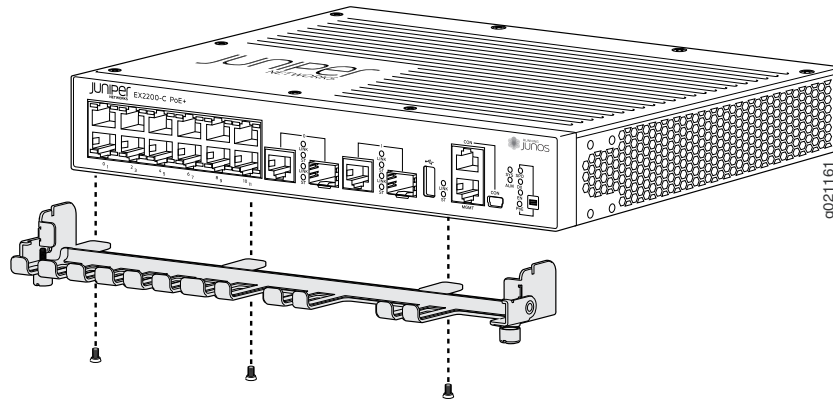

6. (Optional; applies only to EX2200-C models) Attach the standard cable lock to the security slots on the both sides of the switch:
 - a. Rope the cable to a desk or a rack and set the lock to unlocked position.
 - b. Insert the lock into one of the security slot on your chassis and set the lock to the locked position. See [Figure 23 on page 91](#).

Figure 23: Securing the EX2200-C Switch Using Security Slots

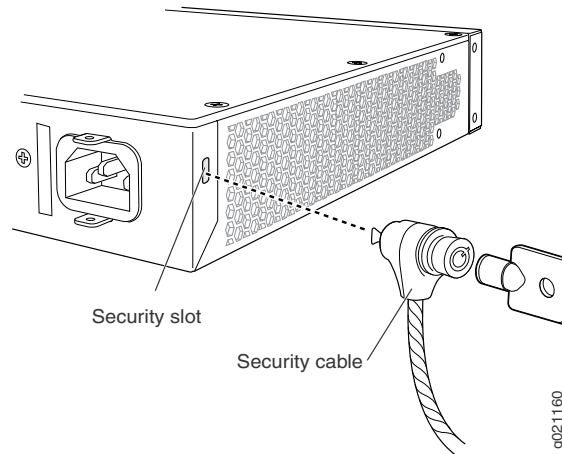

Related Documentation

- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Clearance Requirements for Airflow and Hardware Maintenance for EX2200 Switches on page 74](#)

Mounting an EX2200 Switch On or Under a Desk Using Screws

This topic applies only to the EX2200-C switch, the compact, fanless model.

You can mount an EX2200-C switch on or under a desk or other level surface by using the flexible mounting slots on the bottom of the chassis to secure the switch.

Before mounting the switch on or under a desk or other level surface:

- Verify that the site meets the requirements described in [“Site Preparation Checklist for EX2200 Switches” on page 61](#).
- Place the desk in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
- Read [“General Safety Guidelines and Warnings” on page 169](#), with particular attention to [“Chassis Lifting Guidelines for EX2200 Switches” on page 183](#).
- Remove the switch from the shipping carton (see [“Unpacking an EX2200 Switch” on page 86](#)).



NOTE: Do not block the vents on the top of the EX2200-C switches. Doing this can lead to overheating of the switch chassis.


Ensure that you have the following parts and tools available:

- 3 desk mounting screws (M4 x 30mm or 8-32 x 1.25 in. Phillips pan-head machine screws—not provided)
- Phillips (+) screwdriver, number 2.
- 1 cable guard and 3 number-8 Phillips truss-head screws (optional and separately orderable) to secure the cable guard to the switch
- 1 standard cable lock (optional and separately orderable) to secure the switch from theft by connecting the cable to the security slots on the switch

To mount the switch on or under a desk or other level surface:


1. Drill three holes **A**, **B**, and **C** on or under the desk as shown in [Figure 24 on page 93](#).

Figure 24: Measurements for Installing Mounting Screws for EX2200-C Switch

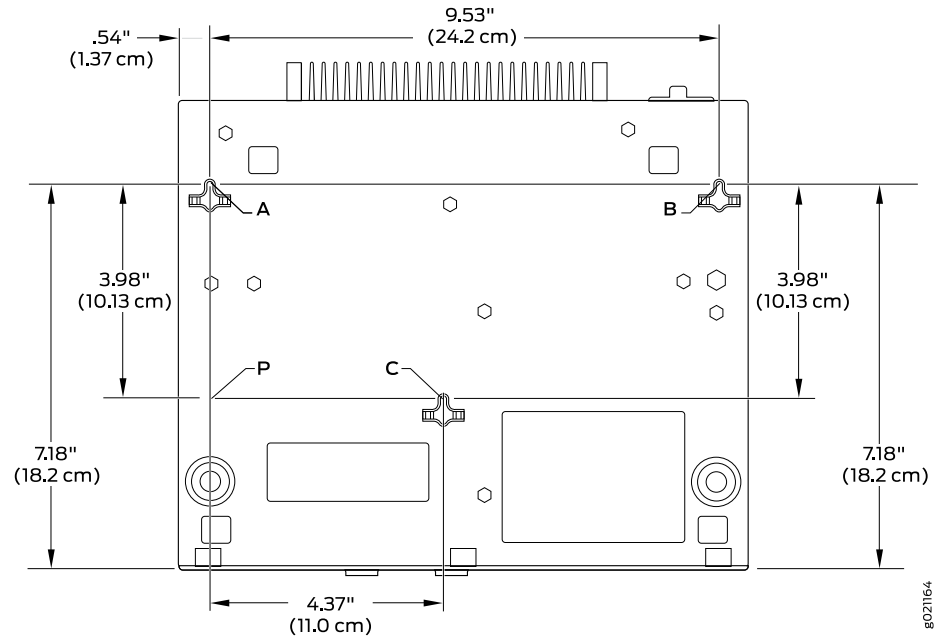


- a. Drill hole **A** and install a mounting screw.
 - b. Drill hole **B** 9.52 in. (22.1 cm) on a level line from hole **A** and install a mounting screw.
 - c. Mark a point **P** 3.98 in. (10.13 cm) on a plumb line down from hole **A**.
 - d. From point **P** 4.37 in. (11.0 cm) on a level line drill hole **C** and install a mounting screw.
2. Tighten the screws only part way in, leaving about 1/4 in. (6 mm) distance between the head of the screw and the desk.
 3. Place the switch on the mounting screws, and slide it forward or backward until it locks in place. See [Figure 25 on page 94](#).

Figure 25: Mounting the EX2200-C Switch On or Under a Desk Using Screws

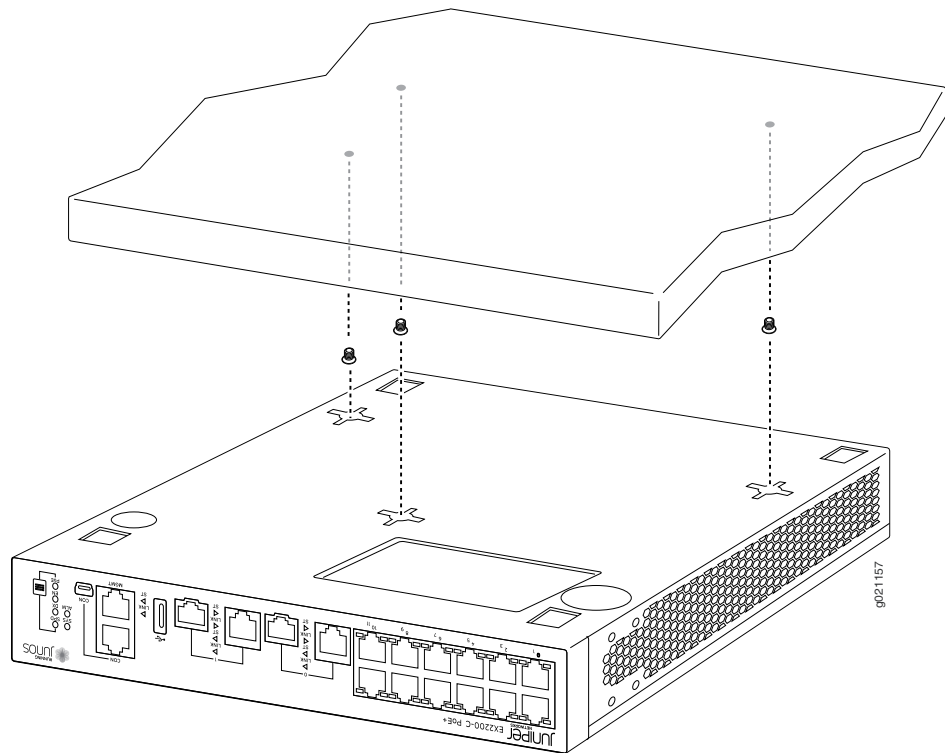


4. (Optional) Attach the cable guard to protect cable connections:
 - a. Use the 3 truss-head screws to attach the cable guard to the bottom of the chassis.
 - b. Use the thumbscrews to tighten or loosen the guard to allow you to insert cables. See [Figure 26 on page 95](#).

Figure 26: Attaching a Cable Guard to an EX2200-C Switch

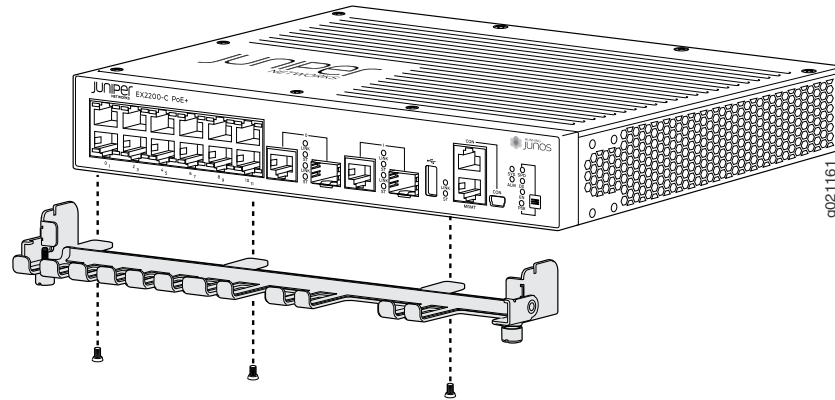

5. (Optional) Attach the standard cable lock to the security slots on the both sides of the switch
 - a. Rope the cable to a desk or a rack and set the lock to unlocked position.
 - b. Insert the lock into one of the security slot on your chassis and set the lock to the locked position. See [Figure 27 on page 95](#).

Figure 27: Securing the EX2200-C Switch Using Security Slots

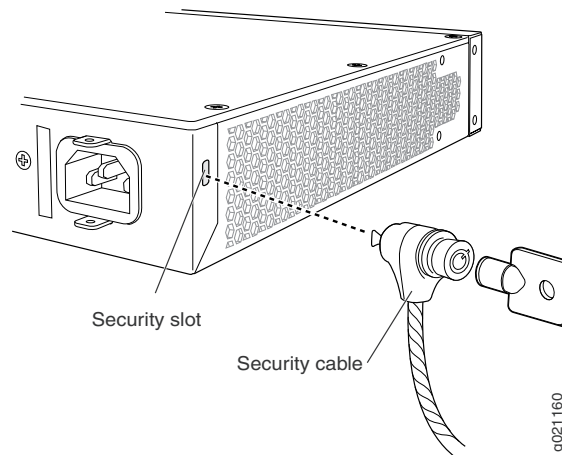

- Related Documentation**
- [Connecting AC Power to an EX2200 Switch on page 123](#)
 - [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
 - [Wall-Mounting Warnings for EX2200 Switches on page 189](#)

Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet

You can mount all EX2200 switches on two posts of a two-post or a four-post 19-in. rack or cabinet using the mounting brackets and screws provided with all EX2200 switches except the EX2200-C switches. For EX2200-C switches, mounting brackets and screws

are separately orderable. (The remainder of this topic uses “rack” to mean “rack or cabinet”.)



NOTE: If you need to mount an EX2200 switch except the EX2200-C switch models in a recessed position on either a two-post rack or a four-post rack, you can use the 2-in.-recess front mount brackets provided in the separately orderable four-post rack-mount kit. EX2200-C cannot be mounted in a recessed position.



NOTE: Do not block the vents on the top of the EX2200-C switches. Doing this can lead to overheating of the switch chassis.

Before mounting the switch on two posts of a two-post or a four-post rack:

- Verify that the site meets the requirements described in “[Site Preparation Checklist for EX2200 Switches](#)” on page 61.
- Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
- Read “[General Safety Guidelines and Warnings](#)” on page 169, with particular attention to “[Chassis Lifting Guidelines for EX2200 Switches](#)” on page 183.

Ensure that you have the following parts and tools available:

- Phillips (+) screwdriver, number 2
- 2 mounting brackets and 8 mounting screws (provided with EX2200 switches except the EX2200-C switch model)
- Screws to secure the chassis to the rack (not provided)
- 2-in.-recess front brackets from the separately orderable four-post rack-mount kit if you will mount the switch in a recessed position (not applicable for EX2200-C switches).



NOTE: One person must be available to lift the switch while another secures the switch to the rack.




CAUTION: If you are mounting multiple units on a rack, mount the heaviest unit at the bottom of the rack and mount the other units from the bottom of the rack to the top in decreasing order of the weight of the units.

To mount the switch on two posts of a two-post or a four-post rack:

1. Remove the switch from the shipping carton (see “Unpacking an EX2200 Switch” on page 86).
2. Place the switch on a flat, stable surface.
3. Align the mounting brackets along the front or rear of the side panels of the switch chassis depending on how you want to mount the switch. For example, if you want to front-mount the switch, align the brackets along the front of the chassis. [Figure 28 on page 97](#) shows attaching the mounting brackets along the front of the EX2200 switch.


Figure 28: Attaching the Mounting Bracket Along the Front of the Switch

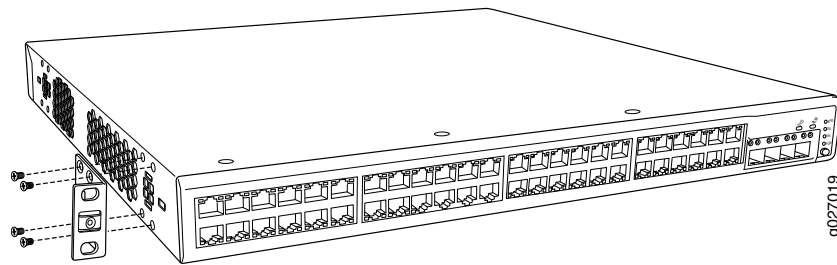

NOTE: The length of the mounting brackets depends on the switch model.

4. Align the bottom holes in the mounting brackets with holes on the side panels of the switch chassis.
5. Insert the mounting screws into the aligned holes. Tighten the screws.
6. Ensure that the other holes in the mounting brackets are aligned with the holes in the side panels. Insert a screw in each hole and tighten the screws.
7. Have one person grasp both sides of the switch, lift the switch, and position it in the rack, aligning the mounting bracket holes with the threaded holes in the rack or cabinet rail. Align the bottom hole in each mounting bracket with a hole in each rack rail, making sure the chassis is level. See [Figure 29 on page 98](#).

Figure 29: Mounting the Switch on Two Posts of a Rack

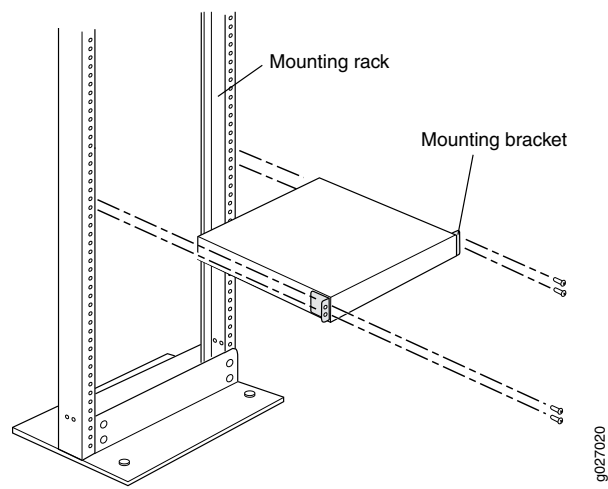

8. Have a second person secure the switch to the rack by using the appropriate screws. Tighten the screws.
9. Ensure that the switch chassis is level by verifying that all screws on one side of the rack are aligned with the screws on the other side.

Related Documentation

- [Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet on page 98](#)
- [Connecting Earth Ground to an EX Series Switch on page 117](#)
- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)

Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet

You can mount an EX2200 switch except an EX2200-C switch model on four posts of a 19-in. rack or cabinet by using the separately orderable four-post rack-mount kit. (The remainder of this topic uses “rack” to mean “rack or cabinet.”)



NOTE: EX2200-C switches cannot be mounted on all four posts of a rack.



NOTE: If you need to mount an EX2200 switch except the EX2200-C switch model in a recessed position on either a two-post rack or a four-post rack, you can use the 2-in.-recess front-mounting brackets provided in the separately orderable four-post rack-mount kit. EX2200-C switches cannot be mounted in a recessed position.

Before mounting the switch on four posts of a rack:

- Verify that the site meets the requirements described in “[Site Preparation Checklist for EX2200 Switches](#)” on page 61.
- Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
- Read “[General Safety Guidelines and Warnings](#)” on page 169, with particular attention to “[Chassis Lifting Guidelines for EX2200 Switches](#)” on page 183.

Ensure that you have the following parts and tools available:

- Phillips (+) screwdriver, number 2
- 6 Phillips 4-40 flat-head mounting screws (provided with the four-post rack-mount kit)
- 8 Phillips 4x6-mm flat-head mounting screws (provided with the four-post rack-mount kit)
- One pair each of flush or 2-in.-recess front-mounting brackets
- One pair of side mounting-rails
- One pair of rear mounting-blades
- Screws to secure the chassis and the rear mounting-blades to the rack (not provided)



NOTE: One person must be available to lift the switch while another secures it to the rack.




CAUTION: If you are mounting multiple units on a rack, mount the heaviest unit at the bottom of the rack and mount the other units from the bottom of the rack to the top in decreasing order of the weight of the units.

To mount the switch on four posts of a rack:

1. Remove the switch from the shipping carton (see “[Unpacking an EX2200 Switch](#)” on page 86).
2. Attach the front-mounting brackets (either the flush or the 2-in.-recess brackets) to the side mounting-rails using 6 Phillips 4-40 flat-head mounting screws. See [Figure 30 on page 100](#).

Figure 30: Attaching the Front-Mounting Bracket to the Side Mounting-Rail

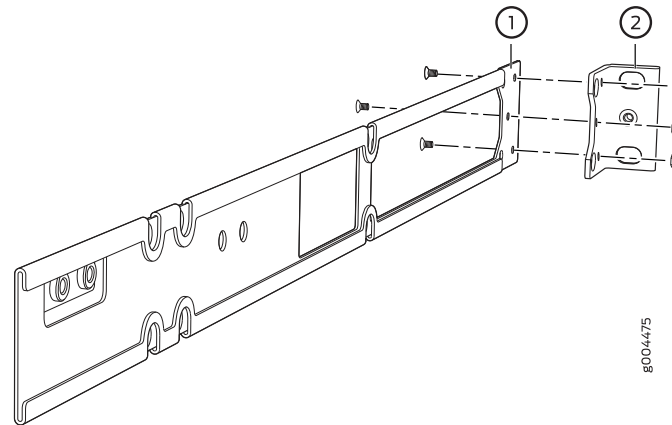


8004475

1— Side mounting-rail	2— Front-mounting bracket
-----------------------	---------------------------

3. Place the switch on a flat, stable surface.
4. Align the side mounting-rails along the side panels of the switch chassis. Align the two holes in the rear of the side mounting-rails with the two holes on the rear of the side panel.
5. Insert Phillips 4x6-mm flat-head mounting screws into the two aligned holes and tighten the screws. Ensure that the two holes in the rear of the side mounting-rails are aligned with the remaining two holes in the side panel. See [Figure 31 on page 100](#).


Figure 31: Attaching the Side Mounting-Rail to the Switch Chassis

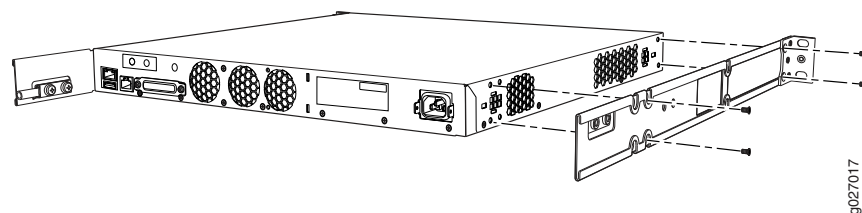

9027017

6. Insert the Phillips 4x6-mm flat-head mounting screws into the remaining two holes in the side mounting-rails and tighten the screws.
7. Have one person grasp both sides of the switch, lift the switch, and position it in the rack, aligning the side mounting-rail holes with the threaded holes in the front post of the rack. Align the bottom hole in both the front-mounting brackets with a hole in each rack rail, making sure the chassis is level. See [Figure 32 on page 101](#).

Figure 32: Mounting the Switch to the Front Posts of a Rack

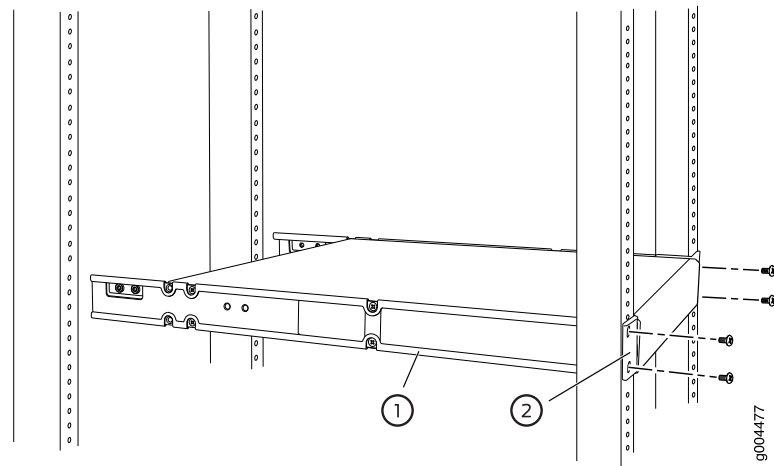


1— Side mounting-rail

2— Front-mounting bracket

8. Have a second person secure the front of the switch to the rack by using the appropriate screws for your rack.
9. Slide the rear mounting-blades into the side mounting-rails. See [Figure 33 on page 101](#).

Figure 33: Sliding the Rear Mounting-Blades into the Side Mounting-Rail

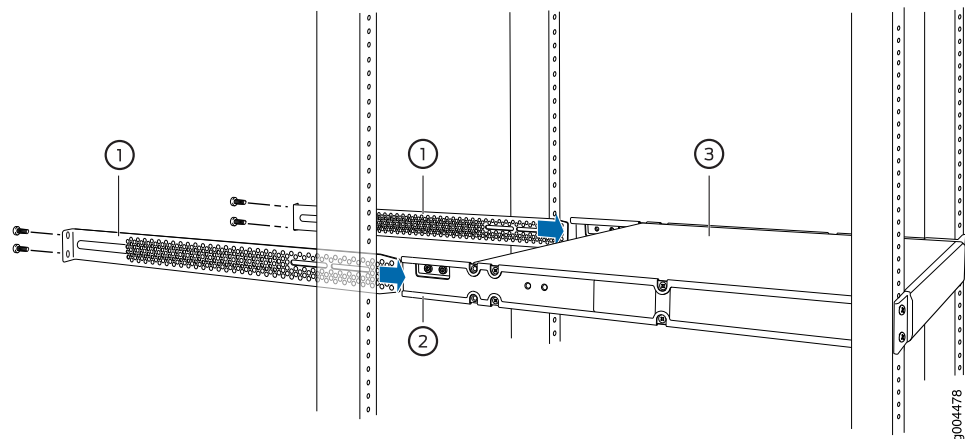

1— Rear mounting-blades

3— Switch

2— Side mounting-rail

10. Attach the rear mounting-blades to the rear post by using the appropriate screws for your rack. Tighten the screws.
11. Ensure that the switch chassis is level by verifying that all the screws on the front of the rack are aligned with the screws at the back of the rack.

Related Documentation

- [Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet on page 95](#)
- [Connecting Earth Ground to an EX Series Switch on page 117](#)

- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet on page 102](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)

Mounting an EX2200 Switch in a Recessed Position in a Rack or Cabinet

You can mount an EX2200 switch except the EX2200-C switch model in a rack or cabinet such that the switch is recessed inside the rack from the rack front by 2 inches. You can use the 2-in.-recess front brackets provided in the separately orderable four-post rack-mount kit to mount the switch in a recessed position.

Reasons that you might want to mount the switch in a recessed position include:

- You are mounting the switch in a cabinet and the cabinet doors will not close completely unless the switch is recessed.
- The switch you are mounting has transceivers installed in the uplink ports—the transceivers in the uplink ports protrude from the front of the switch.

To mount the switch in a recessed position on four posts, follow the instructions in [“Mounting an EX2200 Switch on Four Posts of a Rack or Cabinet” on page 98](#). To mount the switch in a recessed position on two posts, follow the instructions in [“Mounting an EX2200 Switch on Two Posts of a Rack or Cabinet” on page 95](#).

Related Documentation

- [Connecting Earth Ground to an EX Series Switch on page 117](#)
- [Rack-Mounting and Cabinet-Mounting Warnings on page 184](#)

Mounting an EX2200 Switch on a Wall

This topic describes the process of mounting an EX2200 switch on a wall.

1. [Mounting an EX2200 Switch Except the EX2200-C Model on a Wall on page 102](#)
2. [Mounting an EX2200-C Switch on a Wall on page 105](#)

Mounting an EX2200 Switch Except the EX2200-C Model on a Wall

You can mount an EX2200 switch on a wall by using the separately orderable wall-mount kit.



WARNING:

- When mounting an EX2200 switch chassis in a vertical position, orient the front panel of the chassis downward to ensure proper airflow and meet safety requirements in the event of a fire.
- When wall mounting Power over Ethernet (PoE) models (EX2200-24P and EX2200-48P), install the wall-mount baffle above the units to reduce the risk of objects or substances falling into the air exhaust or power supply, which could cause a fire.

Before mounting the switch on a wall:

- Verify that the site meets the requirements described in [“Site Preparation Checklist for EX2200 Switches”](#) on page 61.
- Read [“General Safety Guidelines and Warnings”](#) on page 169, with particular attention to [“Chassis Lifting Guidelines for EX2200 Switches”](#) on page 183.


Ensure that you have the following parts and tools available:

- 2 wall-mount brackets (provided in the wall-mount kit)
- 1 wall-mount baffle (provided in the wall-mount kit)
- 12 wall-mount bracket screws (provided in the wall-mount kit)
- 6 mounting screws (8-32 x 1.25 in. or M4 x 30 mm) (not provided)
- Hollow wall anchors rated to support up to 75 lb (34 kg) if you are not screwing the screws directly into wall studs (not provided)
- Phillips (+) screwdriver, number 2

To mount one or two switches on a wall:


1. Remove the switch from the shipping carton (see [“Unpacking an EX2200 Switch”](#) on page 86).
2. Attach the wall-mount brackets to the sides of the chassis using four wall-mount bracket screws on each side, as shown in [Figure 34](#) on page 104.

Figure 34: Attaching Wall-Mount Brackets to a Switch Chassis

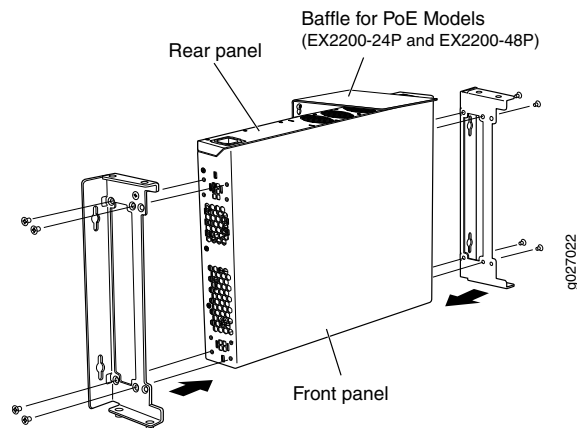


3. If you are mounting two switches together, align the second switch on top of the first and attach it to the mounting brackets using two additional wall-mount bracket screws on each side. (Figure 36 on page 105 shows two aligned switches.)
4. Install four mounting screws in the wall for the wall-mount brackets (and two more for the baffle if you are installing a switch that supports PoE) as shown in Figure 35 on page 105:
 - Use hollow wall anchors rated to support up to 75 lb (34 kg) if you are not inserting the mounting screws directly into wall studs.
 - Turn the screws only part way in, leaving about 1/4 in. (6 mm) distance between the head of the screw and the wall.
 - a. Install screw **A**.
 - b. Install screw **B** 18.68 in. (47.4 cm) from screw **A** on a level line.
 - c. Install screw **C** 5.98 in. (15.2 cm) on a plumb line down from screw **A** and screw **D** 5.98 in. down from screw **B**.
 - d. For PoE models, install screw **E** 2.76 in. (7 cm) up from and 8.32 in. (21.1 cm) to the right of screw **A**.
 - e. For PoE models, install screw **F** 4.49 in. (11.4 cm) to the right of screw **E**.

Figure 35: Measurements for Installing Mounting Screws

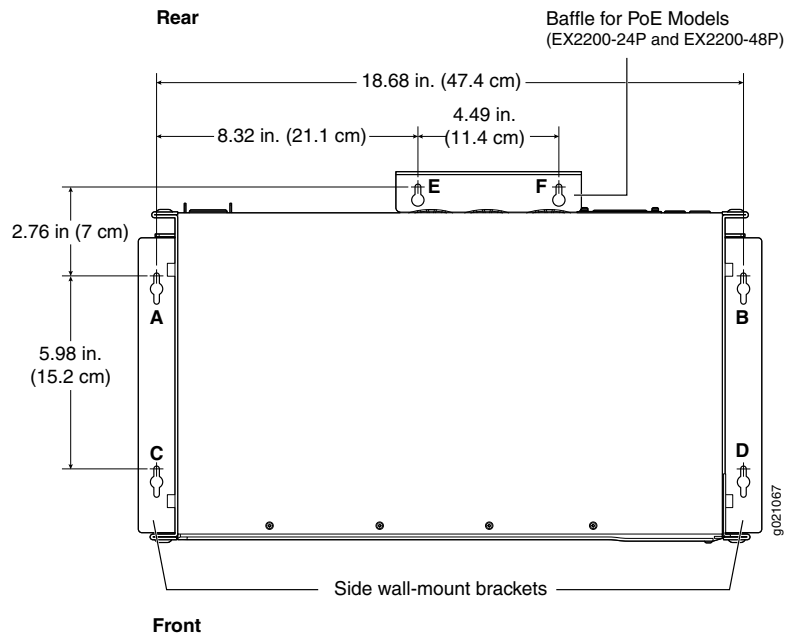

- Lift the unit (one switch or two) by grasping each side, and hang the unit by attaching the brackets to the mounting screws as shown in [Figure 36 on page 105](#).
- For PoE models, install the baffle by attaching it to screws **E** and **F**.
- Tighten all mounting screws.

Figure 36: Mounting the Switch on a Wall

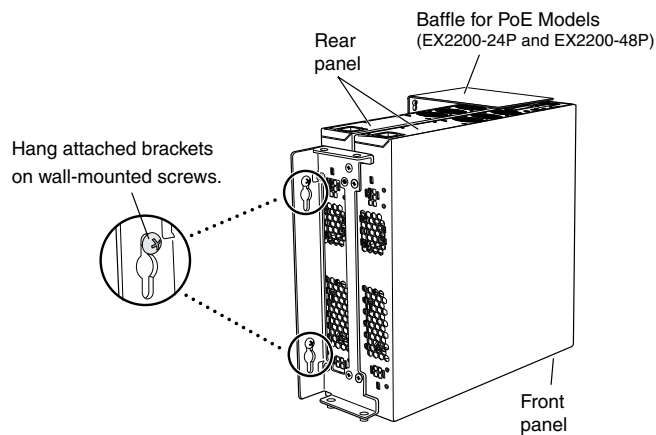

Mounting an EX2200-C Switch on a Wall

You can mount an EX2200-C switch, the compact, fanless model, on a wall by using the flexible mounting slots on the bottom of the chassis to fix to the screws on the wall.



WARNING: When mounting an EX2200-C switch chassis in a vertical position, orient the front panel of the chassis downward to ensure proper airflow and meet safety requirements in the event of a fire.



NOTE: Do not block the vents on the top of the EX2200-C switches. Doing this can lead to overheating of the switch chassis.

Before mounting the switch on a wall:

- Verify that the site meets the requirements described in [“Site Preparation Checklist for EX2200 Switches”](#) on page 61.
- Read [“General Safety Guidelines and Warnings”](#) on page 169, with particular attention to [“Chassis Lifting Guidelines for EX2200 Switches”](#) on page 183.


Ensure that you have the following parts and tools available:

- 3 wall mounting screws (M4 x 30mm or 8-32 x 1.25 in. Phillips pan-head machine screws—not provided)
- Phillips (+) screwdriver, number 2
- 1 cable guard and 3 number-8 Phillips truss-head screws (optional and separately orderable) to secure the cable guard to the switch
- 1 standard cable lock (optional and separately orderable) to secure the switch from theft by connecting the cable to a security slot on the switch

To mount the switch on a wall:


1. Remove the switch from the shipping carton (see [“Unpacking an EX2200 Switch”](#) on page 86).
2. Drill three holes **A**, **B**, and **C** on the wall as shown in [Figure 37](#) on page 107.

Figure 37: Measurements for Installing Mounting Screws for the EX2200-C Switch

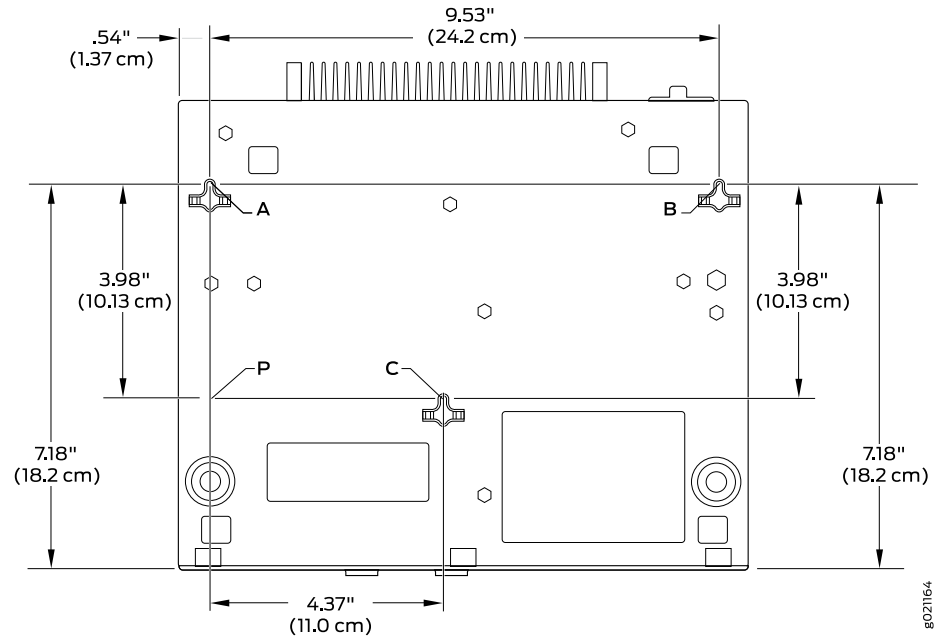


- a. Drill hole **A** and install a mounting screw.
 - b. Drill hole **B** 9.53 in. (24.2 cm) on a level line from hole **A** and install a mounting screw.
 - c. Mark a point **P** 3.98 in. (10.13 cm) on a plumb line down from hole **A**.
 - d. From point **P** 4.37 in. (11.0 cm) on a level line drill hole **C** and install a mounting screw.
3. Tighten the screws only part way in, leaving about 1/4 in. (6 mm) distance between the head of the screw and the wall.
 4. Mount the switch on the mounting screws facing front panel downwards, and slide it downward until it locks in place as shown in [Figure 38 on page 108](#).

Figure 38: Mounting the EX2200-C Switch on a Wall Using Screws

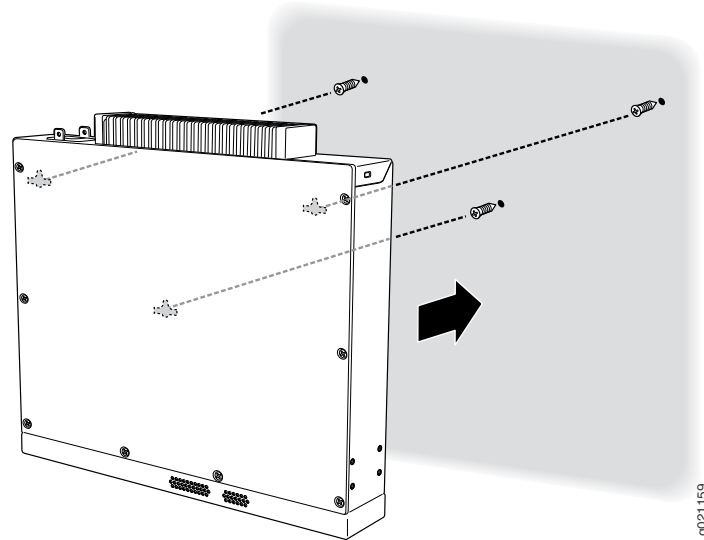


5. (Optional) Attach the optional cable guard to protect cable connections:
 - a. Use the 3 truss-head screws to attach the cable guard to the bottom of the chassis.
 - b. Use the thumbscrews to tighten or loosen the guard to allow you to insert cables. See [Figure 39 on page 108](#).

Figure 39: Attaching a Cable Guard to an EX2200-C Switch

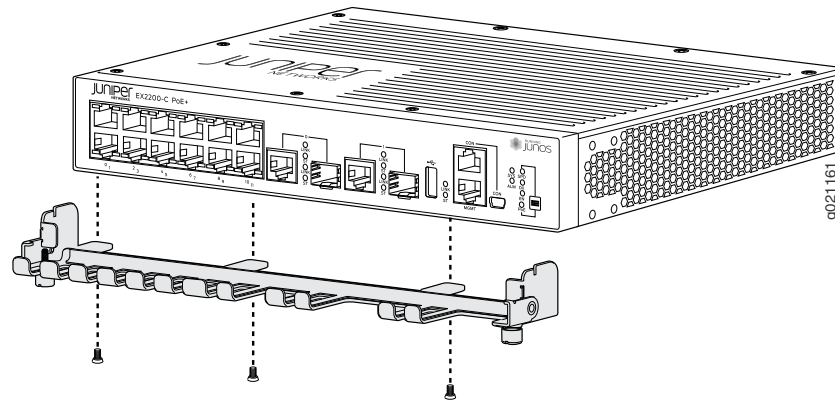

6. (Optional) Attach the optional standard cable lock to a security slot on the side of the switch:
 - a. Rope the cable to a desk or a rack and set the lock to the unlocked position.
 - b. Insert the lock into a security slot on your chassis and set the lock to the locked position. See [Figure 40 on page 109](#).

Figure 40: Securing the EX2200-C Switch Using Security Slots

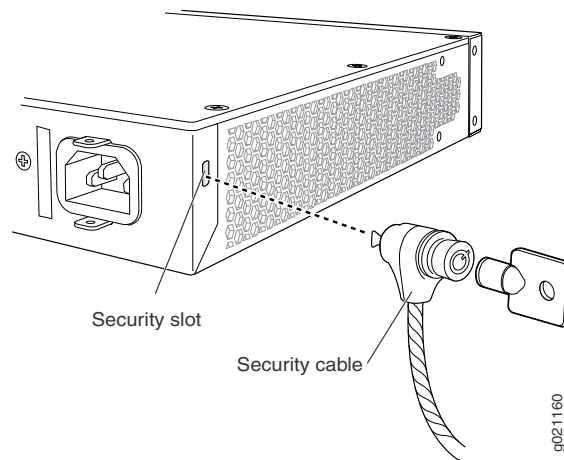

Related Documentation

- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Wall-Mounting Warnings for EX2200 Switches on page 189](#)

Mounting an EX2200 Switch Using the Magnet Mount

This topic applies only to the EX2200-C switch, the compact, fanless model.

You can mount an EX2200-C switch on or under a surface made of ferrous material using the separately orderable magnet sheet.



WARNING: When mounting an EX2200-C switch chassis in a vertical position, orient the front panel of the chassis downward to ensure proper airflow and meet safety requirements in the event of a fire.



NOTE: Do not block the vents on the top of the EX2200-C switches. Doing this can lead to overheating of the switch chassis.

Before mounting the switch using magnet mount:

- Ensure that no rubber feet are installed on the bottom of the switch.
- Verify that the site meets the requirements described in “[Site Preparation Checklist for EX2200 Switches](#)” on page 61.

- Place the desk in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
- Read “[General Safety Guidelines and Warnings](#)” on page 169, with particular attention to “[Chassis Lifting Guidelines for EX2200 Switches](#)” on page 183.
- Remove the switch from the shipping carton (see “[Unpacking an EX2200 Switch](#)” on page 86).

Ensure that you have the following parts and tools available:

- Magnet sheet (separately orderable)
- Flat surface made of ferrous material
- 1 cable guard and 3 number-8 Phillips truss-head screws (optional and separately orderable) to secure the cable guard to the switch
- 1 standard cable lock (optional and separately orderable) to secure the switch from theft by connecting the cable to the security slots on the switch

1. Mount the switch under a ferrous surface using magnet mount:

- a. Turn the chassis upside down.
- b. Place the magnet sheet on the bottom of the chassis.



NOTE: You can place the magnet sheet only at the bottom of the switch.

- c. Mount the magnet sheet along with the switch under the surface where you want to mount the switch.

2. Mount the switch vertically on a ferrous surface using magnet mount:


- a. Place the magnet sheet at the bottom of the chassis.



NOTE: You can place the magnet sheet only at the bottom of the switch.

- b. Mount the magnet along with the switch on the ferrous surface where you want to mount the switch orienting the front panel downwards as shown in [Figure 41 on page 111](#).


Figure 41: Mounting an EX2200-C Switch Using Magnet Mount

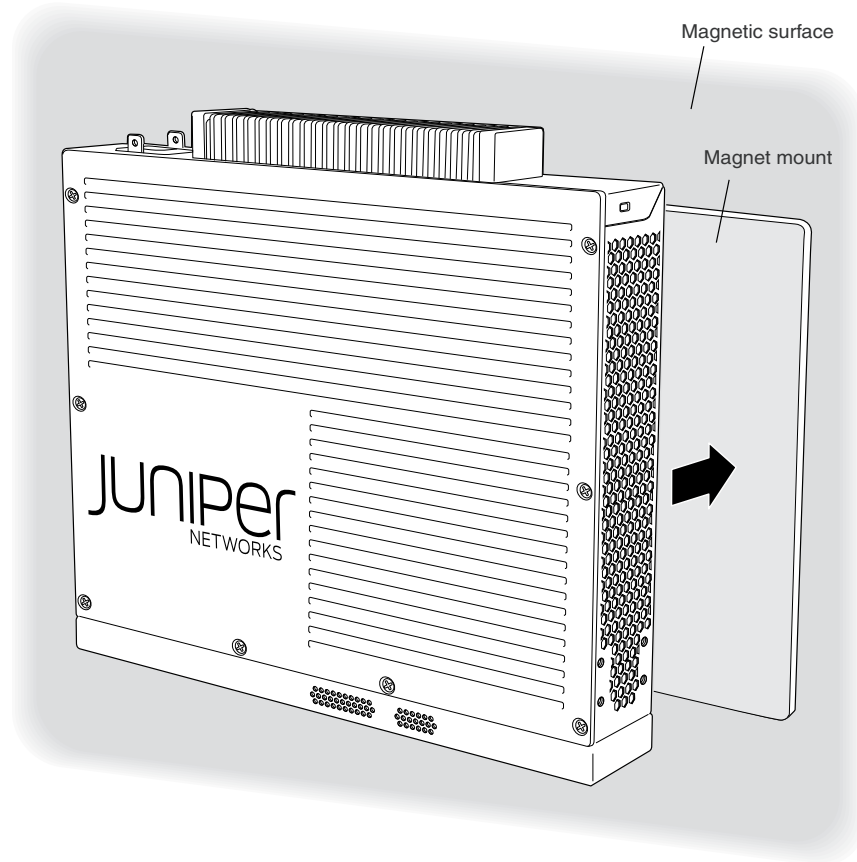

9021158


3. (Optional) Attach the cable guard to protect cable connections:
 - a. Use the 3 truss-head screws to attach the cable guard to the bottom of the chassis.
 - b. Use the thumbscrews to tighten or loosen the guard to allow you to insert cables. See [Figure 42](#) on page 112.

Figure 42: Attaching a Cable Guard to an EX2200-C Switch

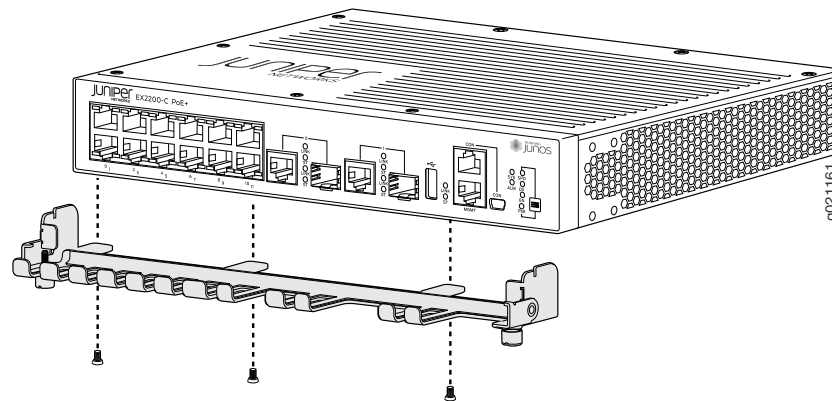

4. (Optional) Attach the standard cable lock to the security slots on the both sides of the switch
 - a. Rope the cable to a desk or a rack and set the lock to unlocked position.
 - b. Insert the lock into one of the security slot on your chassis and set the lock to the locked position. See [Figure 43 on page 112](#).

Figure 43: Securing the EX2200-C Switch Using Security Slots

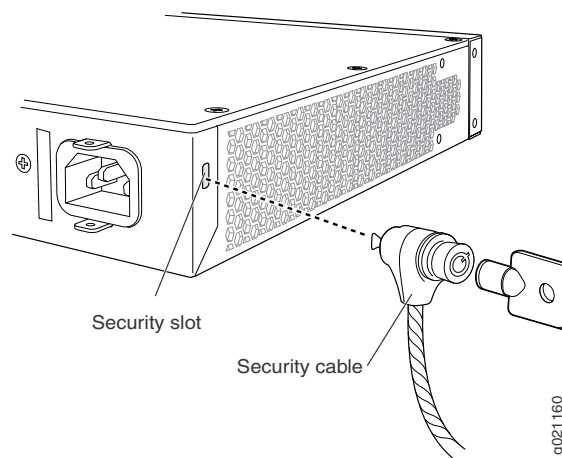

- Related Documentation**
- [Connecting AC Power to an EX2200 Switch on page 123](#)
 - [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
 - [Wall-Mounting Warnings for EX2200 Switches on page 189](#)

Installing Switch Components

- Installing a Transceiver in an EX Series Switch on page 113

Installing a Transceiver in an EX Series Switch

The transceivers for EX Series switches are hot-removable and hot-insertable field-replaceable units (FRUs): You can remove and replace them without powering off the switch or disrupting switch functions.



NOTE: After you insert a transceiver or after you change the media-type configuration, wait for 6 seconds for the interface to display operational commands.



NOTE: We recommend that you use only optical transceivers and optical connectors purchased from Juniper Networks with your Juniper Networks device.



CAUTION: If you are having a problem running a Juniper Networks device that is using a third-party optic or cable, the Juniper Networks Technical Assistance Center (JTAC) can help you diagnose the source of the problem. Your JTAC engineer might recommend that you check the third-party optic or cable and potentially replace it with an equivalent Juniper Networks optic or cable that is qualified for the device.



NOTE: On an EX3200 switch, if you install a transceiver in a 1-Gigabit Ethernet uplink module port, a corresponding network port from the last four built-in ports is disabled. For example, if you install a transceiver in the uplink module port 3 (`ge-0/1/2`), then the built-in port 23 (`ge-0/0/22`) is disabled. The disabled port is not listed in the output of `show interface` commands.

Before you begin installing a transceiver in an EX Series switch, ensure that you have taken the necessary precautions for safe handling of lasers (see “[Laser and LED Safety Guidelines and Warnings for Switches](#)” on page 175).

Ensure that you have a rubber safety cap available to cover the transceiver.

[Figure 44 on page 115](#) shows how to install a QSFP+ transceiver. The procedure is the same for all types of transceivers.

To install a transceiver in an EX Series switch:



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

1. Remove the transceiver from its bag.
2. Check to see whether the transceiver is covered with a rubber safety cap. If it is not, cover the transceiver with a rubber safety cap.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.

3. If the port in which you want to install the transceiver is covered with a dust cover, remove the dust cover and save it in case you need to cover the port later. If you are hot-swapping a transceiver, wait for at least 10 seconds after removing the transceiver from the port before installing a new transceiver.
4. Using both hands, carefully place the transceiver in the empty port. The connectors must face the switch chassis.




CAUTION: Before you slide the transceiver into the port, ensure that the transceiver is aligned correctly. Misalignment might cause the pins to bend, making the transceiver unusable.

5. Slide the transceiver in gently until it is fully seated. If you are installing a CFP transceiver, tighten the captive screws on the transceiver by using your fingers.
6. Remove the rubber safety cap when you are ready to connect the cable to the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

Figure 44: Installing a Transceiver in an EX Series Switch

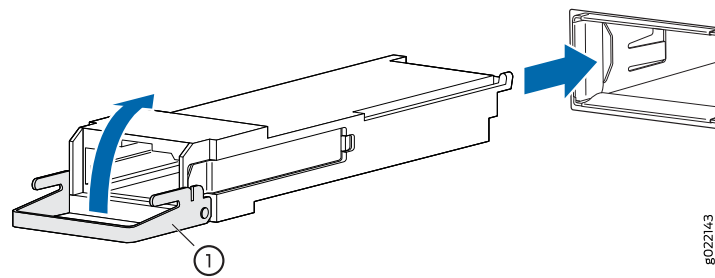

1— Ejector lever

**Related
Documentation**

- [Removing a Transceiver from a Switch on page 149](#)
- [Connecting a Fiber-Optic Cable to a Switch on page 133](#)
- [Pluggable Transceivers Supported on EX Series Switches](#)

Connecting the Switch

- [Connecting Earth Ground to an EX Series Switch on page 117](#)
- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting a Switch to a Network for Out-of-Band Management on page 127](#)
- [Connecting a Switch to a Management Console on page 129](#)
- [Connecting an EX2200 Switch to a Management Console Using Mini-USB Type-B Console Port on page 131](#)
- [Connecting a Fiber-Optic Cable to a Switch on page 133](#)

Connecting Earth Ground to an EX Series Switch

To ensure proper operation and to meet safety and electromagnetic interference (EMI) requirements, you must connect an EX Series switch to earth ground before you connect power to the switch. You must use the protective earthing terminal on the switch chassis to connect the switch to earth ground (see [Figure 46 on page 122](#)).



WARNING: The switch is installed in a restricted-access location. It has a separate protective earthing terminal on the chassis that must be permanently connected to earth ground to adequately ground the chassis and protect the operator from electrical hazards.



CAUTION: Before switch installation begins, ensure that a licensed electrician has attached an appropriate grounding lug to the grounding cable that you supply. Using a grounding cable with an incorrectly attached lug can damage the switch.

This topic describes:

- [Parts and Tools Required for Connecting an EX Series Switch to Earth Ground on page 118](#)
- [Special Instructions to Follow Before Connecting Earth Ground to a Switch on page 120](#)
- [Connecting Earth Ground to an EX Series Switch on page 122](#)

Parts and Tools Required for Connecting an EX Series Switch to Earth Ground

Table 30 on page 118 lists the earthing terminal location, grounding cable requirements, grounding lug specifications, screws and washers required, and the screwdriver needed for connecting a switch to earth ground. Before you begin connecting a switch to earth ground, ensure you have the parts and tools required for your switch.

Table 30: Parts and Tools Required for Connecting an EX Series Switch to Earth Ground

Switch	Earthing Terminal Location	Grounding Cable Requirements	Grounding Lug Specifications	Screws and Washers	Screwdriver	Additional Information
EX2200	Rear panel of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent—not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer—not provided Two #10 flat washers—not provided 	Phillips (+) number 2	
EX3200	Rear panel of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent—not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer—not provided Two #10 flat washers—not provided 	Phillips (+) number 2	See “Special Instructions to Follow Before Connecting Earth Ground to a Switch” on page 120.
EX3300	Rear panel of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent—not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer—not provided Two #10 flat washers—not provided 	Phillips (+) number 2	
EX4200	Left side of chassis	14 WG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent—not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer—not provided Two #10 flat washers—not provided 	Phillips (+) number 2	See “Special Instructions to Follow Before Connecting Earth Ground to a Switch” on page 120.

Table 30: Parts and Tools Required for Connecting an EX Series Switch to Earth Ground (continued)

Switch	Earthing Terminal Location	Grounding Cable Requirements	Grounding Lug Specifications	Screws and Washers	Screwdriver	Additional Information
EX4300	Left side of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent— not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer— not provided Two #10 flat washers— not provided 	Phillips (+) number 2	See “Special Instructions to Follow Before Connecting Earth Ground to a Switch” on page 120.
EX4500	Left side of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent— not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer— not provided Two #10 flat washers— not provided 	Phillips (+) number 2	See “Special Instructions to Follow Before Connecting Earth Ground to a Switch” on page 120.
EX4550	Left side of chassis	14 AWG (2 mm ²), minimum 90°C wire, or as permitted by the local code	Panduit LCC10-14BWL or equivalent— not provided	<ul style="list-style-type: none"> Two 10-32 x .25 in. screws with #10 split-lock washer— not provided Two #10 flat washers— not provided 	Phillips (+) number 2	See “Special Instructions to Follow Before Connecting Earth Ground to a Switch” on page 120.
EX6210	Rear panel of chassis (on lower left side)	The grounding cable must be the same gage as the power feed cables and as permitted by the local code.	Panduit LCD2-14A-Q or equivalent —provided	<ul style="list-style-type: none"> Two ¼-20 x 0.5 in. screws with #¼” split-washer —provided Two #¼” flat washers— provided 	Phillips (+) number 2	
EX8208	Left side of chassis	6 AWG (13.3 mm ²), minimum 60°C wire, or as permitted by the local code	Panduit LCD2-14A-Q or equivalent —provided	<ul style="list-style-type: none"> Two ¼-20 x 0.5 in. screws with #¼” split-washer —provided Two #¼” flat washers— provided 	Phillips (+) number 2	

Table 30: Parts and Tools Required for Connecting an EX Series Switch to Earth Ground (continued)

Switch	Earthing Terminal Location	Grounding Cable Requirements	Grounding Lug Specifications	Screws and Washers	Screwdriver	Additional Information
EX8216	Two earthing terminals: <ul style="list-style-type: none"> • Left side of chassis • Rear panel of chassis 	2 AWG (33.6 mm ²), minimum 60°C wire, or as permitted by the local code	Panduit LCD2-14A-Q or equivalent—provided	<ul style="list-style-type: none"> • Two ¼-20 x 0.5 in. screws with #¼" split-washer—provided • Two #¼" flat washers—provided 	Phillips (+) number 2	See "Special Instructions to Follow Before Connecting Earth Ground to a Switch" on page 120.
EX9204	Rear panel of chassis	One 6 AWG (13.3 mm ²), minimum 60°C wire, or one that complies with the local code	Thomas&Betts LCN6-14 or equivalent—provided	<ul style="list-style-type: none"> • Two ¼-20 x 0.5 in. screws with #¼" split-washer—provided • Two #¼" flat washers—provided 	Phillips (+) number 2	See <i>Grounding Cable and Lug Specifications for EX9200 Switches</i> .
EX9208	Rear panel of chassis	One 6 AWG (13.3 mm ²), minimum 60°C wire, or one that complies with the local code	Thomas&Betts LCN6-14 or equivalent—provided	<ul style="list-style-type: none"> • Two ¼-20 x 0.5 in. screws with #¼" split-washer—provided • Two #¼" flat washers—provided 	Phillips (+) number 2	See <i>Grounding Cable and Lug Specifications for EX9200 Switches</i> .
EX9214	Rear panel of chassis	One 6 AWG (13.3 mm ²), minimum 60°C wire, or one that complies with the local code	Thomas&Betts LCN6-14 or equivalent—provided	<ul style="list-style-type: none"> • Two ¼-20 x 0.5 in. screws with #¼" split-washer—provided • Two #¼" flat washers—provided 	Phillips (+) number 2	See <i>Grounding Cable and Lug Specifications for EX9200 Switches</i> .

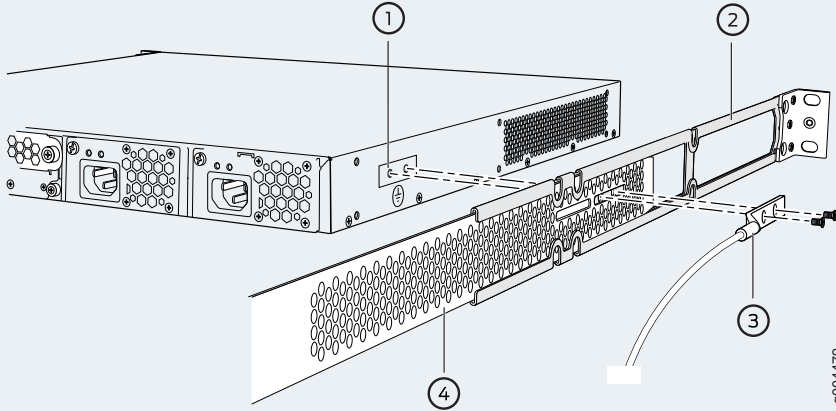
Special Instructions to Follow Before Connecting Earth Ground to a Switch

Table 31 on page 120 lists the special instructions that you might need to follow before connecting earth ground to a switch.

Table 31: Special Instructions to Follow Before Connecting Earth Ground to a Switch

Switch	Special Instructions
EX3200	NOTE: Some early variants of EX3200 switches for which the Juniper Networks model number on the label next to the protective earthing terminal is from 750-021xxx through 750-030xxx require 10-24x.25 in. screws.

Table 31: Special Instructions to Follow Before Connecting Earth Ground to a Switch (*continued*)


Switch	Special Instructions				
EX4200	<p>NOTE: Some early variants of EX4200 switches for which the Juniper Networks model number on the label next to the protective earthing terminal is from 750-021xxx through 750-030xxx require 10-24x.25 in. screws.</p> <p>NOTE: The protective earthing terminal on an EX4200 switch mounted on four posts of a rack is accessible through the slot on the left rear bracket only if the rack is 27.5 in. through 30.5 in. deep for a switch mounted flush with the rack front and 29.5 in. through 32.5 in. deep for a switch mounted 2 in. recessed from the rack front. See Figure 45 on page 121.</p> <p>Figure 45: Connecting the Grounding Lug to a Switch Mounted on Four Posts of a Rack</p>  <table border="1" data-bbox="683 1108 1419 1192"> <tbody> <tr> <td>1— Protective earthing terminal</td> <td>3—Grounding lug</td> </tr> <tr> <td>2—Side mounting-rail</td> <td>4—Rear mounting-blade</td> </tr> </tbody> </table> <p>NOTE: The brackets must be attached to the chassis before the grounding lug is attached. (The brackets are shown pulled away from the chassis so that the protective earthing terminal is seen.)</p>	1— Protective earthing terminal	3—Grounding lug	2—Side mounting-rail	4—Rear mounting-blade
1— Protective earthing terminal	3—Grounding lug				
2—Side mounting-rail	4—Rear mounting-blade				
EX4300	<p>NOTE: The protective earthing terminal on an EX4300 switch mounted on four posts of a rack is accessible through the slot on the left rear bracket only if the rack is 27.5 in. through 30.5 in. deep for a switch mounted flush with the rack front and 29.5 in. through 32.5 in. deep for a switch mounted 2 in. recessed from the rack front.</p>				
EX4500	<p>NOTE: If you plan to mount your switch on four posts of a rack or cabinet, mount your switch in the rack or cabinet before attaching the grounding lug to the switch. See <i>Mounting an EX4500 Switch on Four Posts in a Rack or Cabinet</i>.</p> <p>NOTE: The protective earthing terminal on an EX4500 switch mounted on four posts of a rack is accessible through the slot on the left rear bracket only if the rack is 27.5 in. through 30.5 in. deep for a switch mounted flush with the rack front and 29.5 in. through 32.5 in. deep for a switch mounted 2 in. recessed from the rack front.</p>				
EX4550	<p>NOTE: The protective earthing terminal on an EX4550 switch mounted on four posts of a rack is accessible through the slot on the left rear bracket only if the rack is 27.5 in. through 30.5 in. deep for a switch mounted flush with the rack front and 29.5 in. through 32.5 in. deep for a switch mounted 2 in. recessed from the rack front.</p>				
EX8216	<p>NOTE: Only one of the two protective earthing terminals needs to be permanently connected to earth ground.</p>				

Connecting Earth Ground to an EX Series Switch

To connect earth ground to a switch:

1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
2. Place the grounding lug attached to the grounding cable over the protective earthing terminal. See [Figure 46 on page 122](#).

Figure 46: Connecting a Grounding Cable to an EX Series Switch

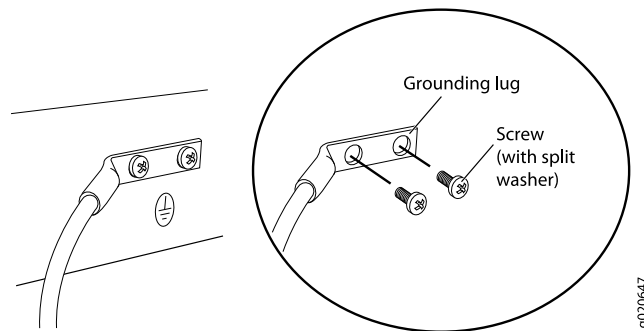

3. Secure the grounding lug to the protective earthing terminal with the washers and screws.
4. Dress the grounding cable and ensure that it does not touch or block access to other switch components.



WARNING: Ensure that the cable does not drape where people could trip over it.

Related Documentation

- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting AC Power to an EX3200 Switch](#)
- [Connecting DC Power to an EX3200 Switch](#)
- [Connecting AC Power to an EX3300 Switch](#)
- [Connecting DC Power to an EX3300 Switch](#)
- [Connecting AC Power to an EX4200 Switch](#)
- [Connecting DC Power to an EX4200 Switch](#)
- [Connecting AC Power to an EX4300 Switch](#)
- [Connecting DC Power to an EX4300 Switch](#)
- [Connecting AC Power to an EX4500 Switch](#)
- [Connecting DC Power to an EX4500 Switch](#)

- [Connecting AC Power to an EX4550 Switch](#)
- [Connecting DC Power to an EX4550 Switch](#)
- [Connecting AC Power to an EX6200 Switch](#)
- [Connecting DC Power to an EX6200 Switch](#)
- [Connecting AC Power to an EX8200 Switch](#)
- [Connecting DC Power to an EX8200 Switch](#)
- [Connecting AC Power to an EX9204 Switch](#)
- [Connecting DC Power to an EX9204 Switch](#)
- [Connecting AC Power to an EX9208 Switch](#)
- [Connecting DC Power to an EX9208 Switch](#)
- [Connecting AC Power to an EX9214 Switch](#)
- [Connecting DC Power to an EX9214 Switch](#)
- [General Safety Guidelines and Warnings on page 169](#)
- [Grounded Equipment Warning on page 189](#)

Connecting AC Power to an EX2200 Switch

The power supply in an EX2200 switch is located on the rear panel.

Ensure that you have the following parts and tools available:

- A power cord appropriate for your geographical location
- A power cord retainer clip

Ensure that you have connected the switch chassis to earth ground.



CAUTION: To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the switches to earth ground before you connect them to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see [“Connecting Earth Ground to an EX Series Switch” on page 117](#). An EX2200 switch gets additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using the AC power cord appropriate for your geographical location (see [“AC Power Cord Specifications for EX2200 Switches” on page 80](#)).

To connect AC power to the switch:

1. Squeeze the two sides of the power cord retainer clip and insert the L-shaped ends of the wire clip into the holes in the bracket on each side of the AC power cord inlet on the rear panel (Figure 47 on page 124).

The power cord retainer clip extends out of the chassis by 3 in.


2. Locate the power cord or cords shipped with the switch; the cords have plugs appropriate for your geographical location. See “AC Power Cord Specifications for EX2200 Switches” on page 80.



WARNING: Ensure that the power cord does not drape where people can trip on it or block access to switch components.


3. Insert the coupler end of the power cord into the AC power cord inlet on the rear panel.
4. Push the power cord into the slot in the adjustment nut of the power cord retainer clip. Turn the nut until it is tight against the base of the coupler and the slot in the nut is turned 90° from the top of the switch (see Figure 48 on page 125).
5. If the AC power source outlet has a power switch, set it to the OFF (O) position.
6. Insert the power cord plug into an AC power source outlet.
7. If the AC power source outlet has a power switch, set it to the ON (I) position.

Figure 47: Connecting an AC Power Cord Retainer Clip to the AC Power Cord Inlet on an EX2200 Switch

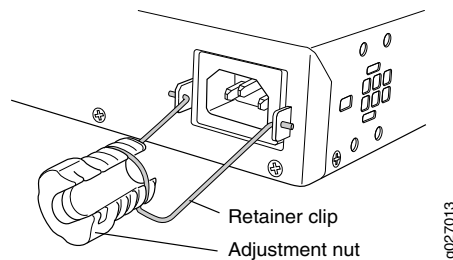

NOTE: The retainer brackets on your switch might be above and below the power inlet rather than on either side.

Figure 48: Connecting an AC Power Cord to the AC Power Cord Inlet on an EX2200 Switch

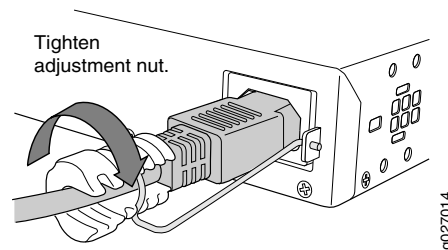

Related Documentation

- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Power Supply in EX2200 Switches on page 18](#)

Connecting DC Power to an EX2200 Switch

The power supply is built in along the rear panel.



WARNING: DC-powered switches are intended for installation only in a restricted access location.

Before you begin connecting DC power to the switch, ensure that you have connected the switch chassis to earth ground.



CAUTION: Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit).

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the switch to earth ground before you connect them to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see [“Connecting Earth Ground to an EX Series Switch” on page 117](#).



NOTE: Grounding is required for DC systems and recommended for AC systems. An AC-powered switch gets additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using the AC power cord appropriate for your geographical location.

Ensure that you have the following parts and tools available:

- DC power source cables (14 AWG) with ring lug (Molex 0190700067 or equivalent) (not provided) attached to them by a licensed electrician
- Phillips (+) screwdriver, number 2

To connect DC power to the switch:

1. Ensure that the input circuit breaker is open so that the cable leads will not become active while you are connecting DC power.



NOTE: The DC power supply in the switch has four terminals labeled A+, B+, A-, and B- for connecting DC power source cables labeled positive (+) and negative (-). The terminals are covered by a clear plastic cover.



NOTE: The A+ and B+ terminals are referred to as +RTN and A- and B- terminals are referred to as -48 V in “[DC Power Wiring Sequence Warning](#)” on page 208 and “[DC Power Electrical Safety Guidelines](#)” on page 203.


2. Grasp the plastic cover in the middle, gently flex it outwards, and pull it out. Save the cover.
3. Remove the screws on the terminals using the screwdriver. Save the screws.



WARNING: Ensure that the power cables do not block access to switch components or drape where people can trip on them.

4. Connect the power supply to the power sources. Secure power source cables to the power supply by screwing the ring lugs attached to the cables to the appropriate terminals by using the screw from the terminals (see [Figure 49](#) on page 126).

Figure 49: Securing Ring Lugs to the Terminals on the DC Power Supply

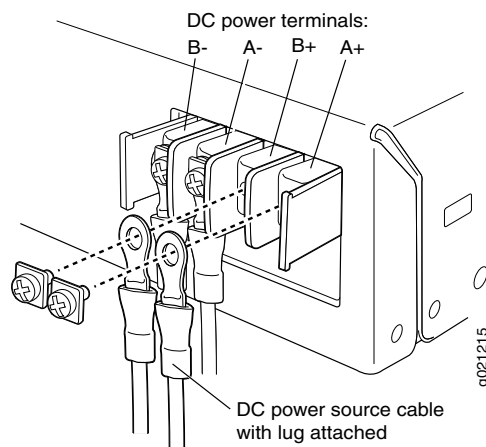

- To connect the power supply to a power source:
 - a. Secure the ring lug of the positive (+) DC power source cable to the A+ or B+ terminal on the DC power supply.
 - b. Secure the ring lug of the negative (–) DC power source cable to the A– or B– terminal on the DC power supply.
 - c. Tighten the screws on the power supply terminals until snug using the screwdriver. Do not overtighten—apply between 8 in.-lb (0.9 Nm) and 9 in.-lb (1.02 Nm) of torque to the screws.
- To connect the power supply to two power sources:
 - a. Secure the ring lug of the positive (+) DC power source cable from the first DC power source to the A+ terminal on the power supply.
 - b. Secure the ring lug of the negative (–) DC power source cable from the first DC power source to the A– terminal on the power supply.
 - c. Secure the ring lug of the positive (+) DC power source cable from the second DC power source to the B+ terminal on the power supply.
 - d. Secure the ring lug of the negative (–) DC power source cable from the second DC power source to the B– terminal on the power supply.
 - e. Tighten the screws on the power supply terminals on both the power supplies until snug using the screwdriver. Do not overtighten—apply between 8 in.-lb (0.9 Nm) and 9 in.-lb (1.02 Nm) of torque to the screws.
- 5. Hook the plastic cover on one side of the terminal block and gently flex it inwards to hook it on the other side also.
- 6. Close the input circuit breaker.

Related Documentation

- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Power Supply in EX2200 Switches on page 18](#)

Connecting a Switch to a Network for Out-of-Band Management


This topic applies to multiple hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to OCX1100 switches.

You can monitor and manage these devices by using a dedicated management channel. Each device has a management port with an RJ-45 connector for out-of-band management. Use the management port to connect the switch or external Routing Engine to the management device.

Ensure that you have an Ethernet cable with an RJ-45 connector available. One such cable is provided with the device. [Figure 50 on page 128](#) shows the RJ-45 connector of the Ethernet cable supplied with the device.

Figure 50: Ethernet Cable Connector



To connect a device to a network for out-of-band management (see [Figure 51 on page 129](#)):


1. Connect one end of the Ethernet cable to the management port (labeled **MGMT** or **ETHERNET**) on the device.

For the location of the **MGMT** or **ETHERNET** port on different devices:

- See [“EX2200 Switches Hardware Overview” on page 3](#).
- See *Rear Panel of an EX3200 Switch*.
- See *Rear Panel of an EX3300 Switch*.
- See *Rear Panel of an EX4200 Switch*.
- See *EX4300 Switches Hardware Overview*
- See *Front Panel of an EX4500 Switch*.
- See *EX4550 Switches Hardware Overview*
- See *Switch Fabric and Routing Engine (SRE) Module in an EX6200 Switch*.
- See *Switch Fabric and Routing Engine (SRE) Module in an EX8208 Switch*.
- See *Routing Engine (RE) Module in an EX8216 Switch*.
- See *Front Panel of an XRE200 External Routing Engine*.
- See *OCX1100 Switches Hardware Overview*.

2. Connect the other end of the Ethernet cable to the management device.

Figure 51: Connecting a Switch to a Network for Out-of-Band Management

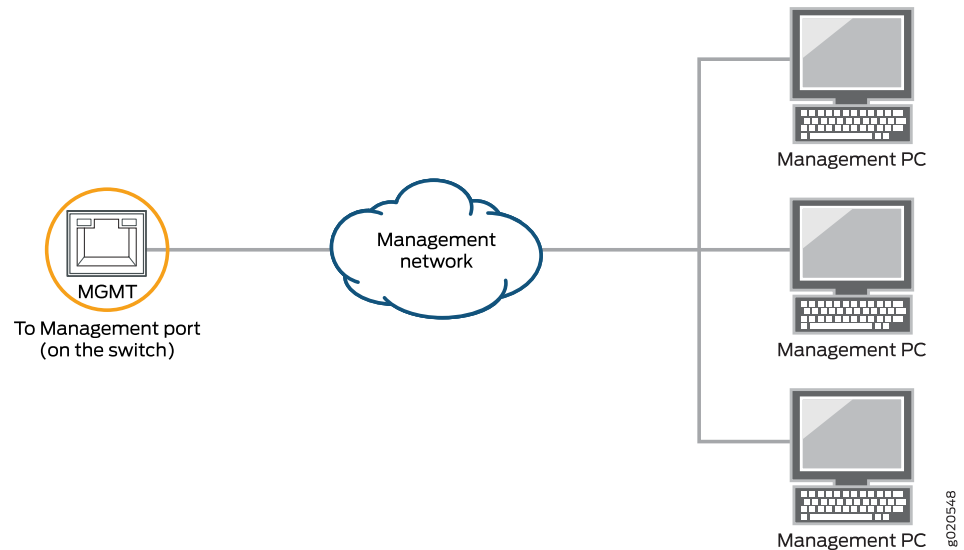

Related Documentation

- [Connecting a Switch to a Management Console on page 129](#)
- [Management Port Connector Pinout Information for an EX2200 Switch on page 25](#)
- [Management Port Connector Pinout Information for an EX3200 Switch](#)
- [Management Port Connector Pinout Information for an EX3300 Switch](#)
- [Management Port Connector Pinout Information for an EX4200 Switch](#)
- [Management Port Connector Pinout Information for an EX4300 Switch](#)
- [Management Port Connector Pinout Information for an EX4500 Switch](#)
- [Management Port Connector Pinout Information for an EX4550 Switch](#)
- [Management Port Connector Pinout Information for an EX6200 Switch](#)
- [Management Port Connector Pinout Information for an EX8200 Switch](#)
- [Management Port Connector Pinout Information for an XRE200 External Routing Engine](#)
- [Cables Connecting the EX6200 Switch to Management Devices](#)
- [Cables Connecting the EX8200 Switch to Management Devices](#)
- [Management Port Connector Pinout Information for an OCX1100 Switch](#)

Connecting a Switch to a Management Console

This topic applies to multiple hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to OCX1100 switches.


You can configure and manage these devices by using a dedicated console. Every device has a console port with an RJ-45 connector. Use the console port to connect the device

to the management console or to a console server. The console port accepts a cable with an RJ-45 connector.

Ensure that you have an Ethernet cable with an RJ-45 connector available. An RJ-45 cable and an RJ-45 to DB-9 serial port adapter are supplied with the device.

[Figure 52 on page 130](#) shows the RJ-45 connector of the Ethernet cable supplied with the device.

Figure 52: Ethernet Cable Connector



NOTE: If your laptop or PC does not have a DB-9 male connector pin and you want to connect your laptop or PC directly to the device, use a combination of the RJ-45 to DB-9 female adapter supplied with the device and a USB to DB-9 male adapter. You must provide the USB to DB-9 male adapter.

To connect the device to a management console (see [Figure 53 on page 131](#) and [Figure 54 on page 131](#)):

1. Connect one end of the Ethernet cable into the console port (labeled **CON**, **CONSOLE**, or **CON1**) on the device.

For the location of the **CON/CONSOLE** port on different devices:

- See [“EX2200 Switches Hardware Overview” on page 3](#).
 - See *Rear Panel of an EX3200 Switch*.
 - See *Rear Panel of an EX3300 Switch*.
 - See *Rear Panel of an EX4200 Switch*.
 - See *EX4300 Switches Hardware Overview*
 - See *Front Panel of an EX4500 Switch*.
 - See *EX4550 Switches Hardware Overview*
 - See *Switch Fabric and Routing Engine (SRE) Module in an EX6200 Switch*.
 - See *Switch Fabric and Routing Engine (SRE) Module in an EX8208 Switch*.
 - See *Routing Engine (RE) Module in an EX8216 Switch*.
 - See *Front Panel of an XRE200 External Routing Engine*.
 - See *Management Panel of an EX4600 Switch*
 - *OCX1100 Switches Hardware Overview*
2. Connect the other end of the Ethernet cable into the console server (see [Figure 53 on page 131](#)) or management console (see [Figure 54 on page 131](#)).

To configure the device from the management console, see “[Connecting and Configuring an EX Series Switch \(CLI Procedure\)](#)” on page 139 or “[Connecting and Configuring an EX Series Switch \(J-Web Procedure\)](#)” on page 142 or [Connecting and Configuring an OCX1100 Switch \(CLI Procedure\)](#).



NOTE: EX2200-24T-4G-DC and OCX1100 switches do not support switch connection and configuration through the J-Web interface.

Figure 53: Connecting a Switch to a Management Console Through a Console Server

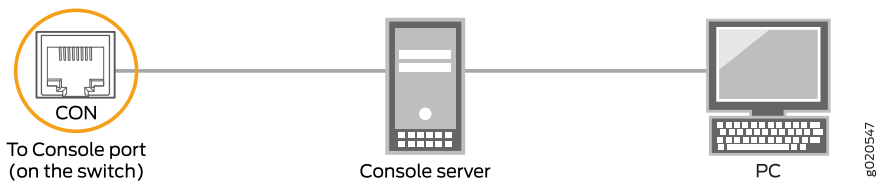


Figure 54: Connecting a Switch Directly to a Management Console



Related Documentation

- [Configuring the Console Port Type \(CLI Procedure\)](#)
- [Connecting a Switch to a Network for Out-of-Band Management on page 127](#)
- [Console Port Connector Pinout Information for an EX Series Switch on page 23](#)
- [Cables Connecting the EX6200 Switch to Management Devices](#)
- [Cables Connecting the EX8200 Switch to Management Devices](#)
- [Console Port Connector Pinout Information for an OCX1100 Switch](#)

Connecting an EX2200 Switch to a Management Console Using Mini-USB Type-B Console Port

You can configure and manage EX2200–C switches by using the RJ-45 console port or the Mini-USB Type-B console port. However, the console input will be active only on one port at a time, that is, only one port will be set active at a time.

If your laptop or PC does not have a DB-9 male connector pin or RJ-45 connector pin, you can connect your laptop or PC directly to an EX2200–C switch using a mini-USB cable that has a Standard-A USB connector on one end and a Mini-USB Type-B (5 pin) connector on the other end.

This section describes the process of connecting an EX2200–C switch to the management console using the Mini-USB Type-B console port.

For information about configuring and managing an EX2200–C switch using the RJ-45 console port, see [“Connecting a Switch to a Management Console” on page 129](#).

Before you begin connecting an EX2200–C switch using Mini-USB Type-B console port:

- Ensure that the USB to Serial driver is installed on the host machine. You can download the driver from <https://webdownload.juniper.net/swdl/dl/secure/site/1/record/5029.html>.
- Ensure that the hyper terminal properties of the console server or laptop are set as follows:
 - Baud rate—9600
 - Flow control—None
 - Data—8
 - Parity—None
 - Stop bits—1
 - DCD state—Disregard

Ensure that you have the following parts and tools available:

- 1 mini-USB cable with Standard-A and Mini-USB Type-B (5-pin) connectors (not provided).

To connect the switch to the console using Mini-USB Type-B console port:

1. Connect the Standard-A connector of the mini-USB cable to the host machine (PC or Laptop).
2. Connect the Mini-USB Type-B (5-pin) connector of the mini-USB cable to the Mini-USB Type-B console port (labeled **CON**) on the switch.
3. Set the Mini-USB Type-B console port as the active console port by using the command **port-type**.
By default, the RJ-45 port is set as an active console port and the Mini-USB Type-B port is the passive console port. For information about configuring the console port type, see *Configuring the Console Port Type (CLI Procedure)*.
4. Reboot the switch.
5. Reboot the switch.

Once the connection is established, you will get the control and the log messages on the Mini-USB Type-B console port.

Related Documentation

- *Configuring the Console Port Type (CLI Procedure)*
- [Connecting a Switch to a Network for Out-of-Band Management on page 127](#)
- [Console Port Connector Pinout Information for an EX Series Switch on page 23](#)
- *Cables Connecting the EX6200 Switch to Management Devices*

- *Cables Connecting the EX8200 Switch to Management Devices*

Connecting a Fiber-Optic Cable to a Switch

EX Series and OCX1100 switches support optical transceivers, which are field-replaceable units (FRUs). You can connect fiber-optic cables to these transceivers.

Before you begin connecting a fiber-optic cable to an optical transceiver installed in a switch, ensure that you have taken the necessary precautions for safe handling of lasers (see “[Laser and LED Safety Guidelines and Warnings for Switches](#)” on page 175).


To connect a fiber-optic cable to an optical transceiver installed in a switch:



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

1. If the fiber-optic cable connector is covered with a rubber safety cap, remove the cap. Save the cap.
2. Remove the rubber safety cap from the optical transceiver. Save the cap.
3. Insert the cable connector into the optical transceiver (see [Figure 55 on page 133](#)).

Figure 55: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Switch

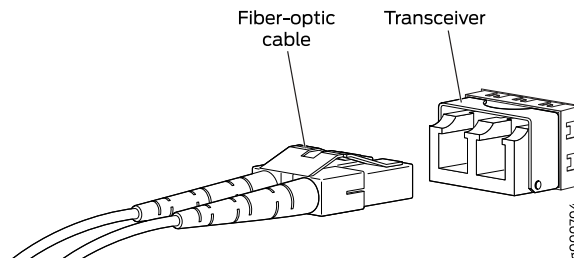

4. Secure the cables so that they are not supporting their own weight. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on a loop helps cables maintain their shape.



CAUTION: Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

Do not let fiber-optic cables hang free from the connector. Do not allow fastened loops of cables to dangle, which stresses the cables at the fastening point.

**Related
Documentation**

- [Disconnecting a Fiber-Optic Cable from a Switch on page 152](#)
- [Installing a Transceiver in an EX Series Switch on page 113](#)
- [Maintaining Fiber-Optic Cables in Switches on page 155](#)
- [Pluggable Transceivers Supported on EX Series Switches](#)
- [Installing a Transceiver in an OCX1100 Switch](#)
- [Pluggable Transceivers Supported on OCX1100 Switches](#)

Performing Initial Configuration

- [EX2200 Switch Default Configuration on page 135](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)

EX2200 Switch Default Configuration

Each EX Series switch is programmed with a factory default configuration that contains the values set for each configuration parameter when a switch is shipped. The default configuration file for an EX2200 switch configures Ethernet switching and storm control on all interfaces, configures Power over Ethernet (PoE) on all interfaces of models that provide PoE, and enables the LLDP, LLDP-MED, and RSTP protocols and IGMP snooping.

When you commit changes to the configuration, a new configuration file is created that becomes the active configuration. You can always revert to the factory default configuration—because an EX2200 switch does not have an LCD panel, use the CLI commands to revert to the factory default configuration. See *Reverting to the Default Factory Configuration for the EX Series Switch*.

The following factory default configuration file is for an EX2200 switch with 24 ports, all of which have PoE capability:



NOTE: The factory default configuration file is different for different EX2200 switch models.

The number of interfaces in the default configuration file depends on the number of ports in the EX2200 switch.

The `poe` stanza does not appear for models without PoE.

Uplink ports for the EX2200 switches except the EX2200-C models will be listed as `ge-0/1/0` to `ge-0/1/3` and for the EX2200-C switches as `ge-0/1/0` to `ge-0/1/1`.

```

system {
  syslog {
    user * {
      any emergency;
    }
  }
}

```

```
    }
    file messages {
        any notice;
        authorization info;
    }
    file interactive-commands {
        interactive-commands any;
    }
}
commit {
    factory-settings {
        reset-chassis-lcd-menu;
        reset-virtual-chassis-configuration;
    }
}
}
interfaces {
    ge-0/0/0 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/1 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/2 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/3 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/4 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/5 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/6 {
        unit 0 {
            family ethernet-switching;
        }
    }
    ge-0/0/7 {
        unit 0 {
            family ethernet-switching;
        }
    }
}
```



```
}
ge-0/0/8 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/9 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/10 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/11 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/12 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/13 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/14 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/15 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/16 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/17 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/18 {
  unit 0 {
    family ethernet-switching;
  }
}
}
```

```
ge-0/0/19 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/20 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/21 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/22 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/0/23 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/1/0 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/1/1 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/1/2 {
  unit 0 {
    family ethernet-switching;
  }
}
ge-0/1/3 {
  unit 0 {
    family ethernet-switching;
  }
}
}
protocols {
  igmp-snooping {
    vlan all;
  }
  rstp;
  lldp {
    interface all;
  }
  lldp-med {
    interface all;
  }
}
```

```

    }
  }
  ethernet-switching-options {
    storm-control {
      interface all;
    }
  }
}

```

Related Documentation

- [Configuration Files Terms](#)
- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Understanding Configuration Files for EX Series Switches](#)
- [EX2200 Switches Hardware Overview on page 3](#)

Connecting and Configuring an EX Series Switch (CLI Procedure)

There are two ways to connect and configure an EX Series switch: one method is through the console by using the CLI and the other is by using the J-Web interface.



NOTE: EX2200-24T-4G-DC switches do not support switch connection and configuration through the J-Web interface.

This topic describes the CLI procedure.



NOTE: To run the `ezsetup` script, the switch must have the factory default configuration as the active configuration. If you have configured anything on the switch and want to run `ezsetup`, revert to the factory default configuration. See [Reverting to the Default Factory Configuration for the EX Series Switch](#).

Using the CLI, set the following parameter values in the console server or PC:

- Baud rate—9600
- Flow control—None
- Data—8
- Parity—None
- Stop bits—1
- DCD state—Disregard

To connect and configure the switch from the console by using the CLI:

1. Connect the console port to a laptop or PC by using the RJ-45 to DB-9 serial port adapter. The RJ-45 cable and RJ-45 to DB-9 serial port adapter are supplied with the switch.

For the location of the console port on different EX Series switches:

- See [“EX2200 Switches Hardware Overview”](#) on page 3.
- See *Rear Panel of an EX3200 Switch*.
- See *Rear Panel of an EX3300 Switch*.
- See *Rear Panel of an EX4200 Switch*.
- See *EX4300 Switches Hardware Overview*
- See *Front Panel of an EX4500 Switch*.
- See *EX4550 Switches Hardware Overview*
- See *Switch Fabric and Routing Engine (SRE) Module in an EX6200 Switch*.
- See *Switch Fabric and Routing Engine (SRE) Module in an EX8208 Switch*.
- See *Routing Engine (RE) Module in an EX8216 Switch*.



NOTE: In EX2200-C, EX4300, and EX4550 switches, you can also use the Mini-USB Type-B console port to connect to a laptop or PC.

- For EX2200-C switches, see [“Connecting an EX2200 Switch to a Management Console Using Mini-USB Type-B Console Port”](#) on page 131.
- For EX4300 switches, see *Connecting an EX4300 Switch to a Management Console Using the Mini-USB Type-B Console Port*.
- For EX4550 switches, see *Connecting an EX4550 Switch to a Management Console Using the Mini-USB Type-B Console Port*.

2. At the Junos OS shell prompt `root%`, type **ezsetup**.
3. Enter the hostname. This is optional.
4. Enter the root password you plan to use for this device. You are prompted to re-enter the root password.
5. Enter **yes** to enable services like Telnet and SSH. By default, Telnet is not enabled and SSH is enabled.



NOTE: When Telnet is enabled, you will not be able to log in to an EX Series switch through Telnet by using root credentials. Root login is supported only for SSH access.

6. Use the Management Options page to select the management scenario:



NOTE: On EX4500, EX6200, and EX8200 switches, only the out-of-band management option is available.

- *Configure in-band management.* In in-band management, you configure a network interface or an uplink module (expansion module) interface as the management interface and connect it to the management device.
In this scenario, you have the following two options:
 - Use the default VLAN.
 - Create a new VLAN—If you select this option, you are prompted to specify the VLAN name, VLAN ID, management IP address, and default gateway. Select the ports that must be part of this VLAN.
 - *Configure out-of-band management.* In out-of-band management, you use a dedicated management channel (MGMT port) to connect to the management device. Specify the IP address and gateway of the management interface. Use this IP address to connect to the switch.
7. Specify the SNMP read community, location, and contact to configure SNMP parameters. These parameters are optional.
 8. Specify the system date and time. Select the time zone from the list. These options are optional.
 9. The configured parameters are displayed. Enter **yes** to commit the configuration. The configuration is committed as the active configuration for the switch.
 10. (For EX4500 switches only) Enter the operational mode command **request chassis pic-mode intraconnect** to set the PIC mode to intraconnect.

You can now log in with the CLI or the J-Web interface to continue configuring the switch. If you use the J-Web interface to continue configuring the switch, the Web session is redirected to the new management IP address. If the connection cannot be made, the J-Web interface displays instructions for starting a J-Web session.

Related Documentation

- [Connecting and Configuring an EX Series Switch \(J-Web Procedure\) on page 142](#)
- [Installing and Connecting an EX2200 Switch on page 85](#)
- [Installing and Connecting an EX3200 Switch](#)
- [Installing and Connecting an EX3300 Switch](#)
- [Installing and Connecting an EX4200 Switch](#)
- [Installing and Connecting an EX4300 Switch](#)
- [Installing and Connecting an EX4550 Switch](#)
- [Installing and Connecting an EX4500 Switch](#)
- [Installing and Connecting an EX6210 Switch](#)
- [Installing and Connecting an EX8208 Switch](#)

- *Installing and Connecting an EX8216 Switch*

Connecting and Configuring an EX Series Switch (J-Web Procedure)

There are two ways to connect and configure an EX Series switch: one method is through the console by using the CLI and the other is by using the J-Web interface.



NOTE: EX2200-24T-4G-DC switches do not support switch connection and configuration through J-Web procedure.

This topic describes the J-Web procedure.



NOTE: Before you begin the configuration, enable a DHCP client on the management PC that you will connect to the switch so that the PC can obtain an IP address dynamically.



NOTE: Read the following steps before you begin the configuration. You must complete the initial configuration by using EZSetup within 10 minutes. The switch exits EZSetup after 10 minutes and reverts to the factory default configuration, and the PC loses connectivity to the switch.

- EX2200 and EX2200-C switch—The LEDs on the network ports on the front panel blink when the switch is in the initial setup mode.
- EX3200, EX3300, EX4200, EX4300, EX4500, EX4550, EX6200, or EX8200 switch—The LCD panel displays a count-down timer when the switch is in initial setup mode.

To connect and configure the switch by using the J-Web interface:

1. Transition the switch into initial setup mode:
 - EX2200 and EX2200-C switch—Press the mode button located on the lower right corner of the front panel for 10 seconds.
 - EX3200, EX3300, EX4200, EX4300, EX4500, EX4550, EX6200, or EX8200 switch—Use the **Menu** and **Enter** buttons located to the right of the LCD panel (see [Figure 56 on page 143](#) or [Figure 57 on page 143](#)):

Figure 56: LCD Panel in an EX3200, EX4200, EX4500, EX4550, or EX8200 Switch


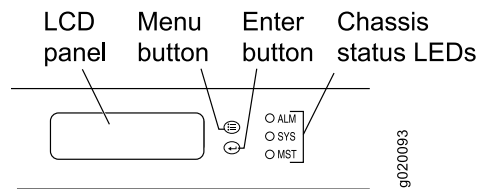


Figure 57: LCD Panel in an EX4300 Switch

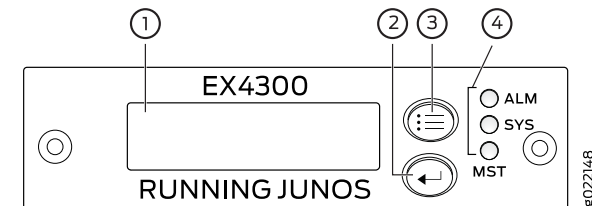

1—LCD panel	3—LCD panel Menu button
2—LCD panel Enter button	4—Chassis status LEDs

1. Press the **Menu** button until you see **MAINTENANCE MENU**. Then press the **Enter** button.
 2. Press **Menu** until you see **ENTER EZSetup**. Then press **Enter**.

If EZSetup does not appear as an option in the menu, select **Factory Default** to return the switch to the factory default configuration. EZSetup is displayed in the menu of standalone switches only when a switch is set to the factory default configuration.
 3. Press **Enter** to confirm setup and continue with EZSetup.
2. Connect the Ethernet cable from the Ethernet port on the PC to the switch.
 - EX2200, EX3200, or EX4200 switch—Connect the cable to port 0 (ge-0/0/0) on the front panel of the switch.
 - EX3300, EX4500, or EX4550 switch—Connect the cable to the port labeled **MGMT** on the front panel (LCD panel side) of the switch.
 - EX4300 switch—Connect the cable to the port labeled **MGMT** on the rear panel of the switch.

- EX6200 switch—Connect the cable to one of the ports labeled **MGMT** on the Switch Fabric and Routing Engine (SRE) module in slot 4 or 5 in an EX6210 switch.
- EX8200 switch—Connect the cable to the port labeled **MGMT** on the Switch Fabric and Routing Engine (SRE) module in slot SRE0 in an EX8208 switch or on the Routing Engine (RE) module in slot RE0 in an EX8216 switch.

These ports are configured as the DHCP server with the default IP address, 192.168.1.1. The switch can assign an IP address to the management PC in the IP address range 192.168.1.2 through 192.168.1.253.

3. From the PC, open a Web browser, type **http://192.168.1.1** in the address field, and press **Enter**.
4. On the J-Web login page, type **root** as the username, leave the password field blank, and click **Login**.
5. On the Introduction page, click **Next**.
6. On the Basic Settings page, modify the hostname, the root password, and date and time settings:
 - Enter the hostname. This is optional.
 - Enter a password and reenter the password.
 - Specify the time zone.
 - Synchronize the date and time settings of the switch with the management PC or set them manually by selecting the appropriate option button. This is optional.

Click **Next**.

7. Use the Management Options page to select the management scenario:



NOTE: On EX4500, EX6210, and EX8200 switches, only the out-of-band management option is available.

- **In-band Management—Use VLAN 'default' for management.**

Select this option to configure all data interfaces as members of the default VLAN. Click **Next**. Specify the management IP address and the default gateway for the default VLAN.

- **In-band Management—Create new VLAN for management.**

Select this option to create a management VLAN. Click **Next**. Specify the VLAN name, VLAN ID, member interfaces, management IP address, and default gateway for the new VLAN.

- **Out-of-band Management—Configure management port.**

Select this option to configure only the management interface. Click **Next**. Specify the IP address and default gateway for the management interface.

8. Click **Next**.

9. On the Manage Access page, you can select options to enable Telnet, SSH, and SNMP services. For SNMP, you can configure the read community, location, and contact.
10. Click **Next**. The Summary screen displays the configured settings.
11. Click **Finish**. The configuration is committed as the active switch configuration.



NOTE: After the configuration is committed, the connectivity between the PC and the switch might be lost. To renew the connection, release and renew the IP address by executing the appropriate commands on the management PC or by removing and reinserting the Ethernet cable.

12. (For EX4500 switches only) In the CLI, enter the **request chassis pic-mode intraconnect** operational mode command to set the PIC mode to intraconnect.

You can now log in by using the CLI or the J-Web interface to continue configuring the switch.

If you use the J-Web interface to continue configuring the switch, the Web session is redirected to the new management IP address. If the connection cannot be made, the J-Web interface displays instructions for starting a J-Web session.

Related Documentation

- [Connecting and Configuring an EX Series Switch \(CLI Procedure\) on page 139](#)
- [Installing and Connecting an EX2200 Switch on page 85](#)
- [Installing and Connecting an EX3200 Switch](#)
- [Installing and Connecting an EX3300 Switch](#)
- [Installing and Connecting an EX4200 Switch](#)
- [Installing and Connecting an EX4300 Switch](#)
- [Installing and Connecting an EX4500 Switch](#)
- [Installing and Connecting an EX4550 Switch](#)
- [Installing and Connecting an EX6210 Switch](#)
- [Installing and Connecting an EX8208 Switch](#)
- [Installing and Connecting an EX8216 Switch](#)

PART 4

Removing Switch Components

- [Removing Switch Components on page 149](#)

Removing Switch Components

- [Removing a Transceiver from a Switch on page 149](#)
- [Disconnecting a Fiber-Optic Cable from a Switch on page 152](#)

Removing a Transceiver from a Switch

The transceivers for EX Series switches and OCX1100 switches are hot-removable and hot-insertable field-replaceable units (FRUs): You can remove and replace them without powering off the switch or disrupting switch functions.



NOTE: After you remove a transceiver or when you change the media-type configuration, wait for 6 seconds for the interface to display the operational commands.

Before you begin removing a transceiver from a switch, ensure that you have taken the necessary precautions for safe handling of lasers (see [“Laser and LED Safety Guidelines and Warnings for Switches” on page 175](#)).

Ensure that you have the following parts and tools available:

- An antistatic bag or an antistatic mat
- Rubber safety caps to cover the transceiver and fiber-optic cable connector
- A dust cover to cover the port

[Figure 58 on page 151](#) shows how to remove a QSFP+ transceiver. The procedure is the same for all types of transceivers except the CFP transceivers.

To remove a transceiver from a switch:

1. Place the antistatic bag or antistatic mat on a flat, stable surface.
2. Label the cable connected to the transceiver so that you can reconnect it correctly.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.



.....
WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.
.....



.....
CAUTION: Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.
.....

3. Remove the cable connected to the transceiver (see [“Disconnecting a Fiber-Optic Cable from a Switch” on page 152](#)). Cover the transceiver and the end of each fiber-optic cable connector with a rubber safety cap immediately after disconnecting the fiber-optic cables.

4. To remove an SFP, SFP+, XFP, or QSFP+ transceiver:
 - a. By using your fingers, pull open the ejector lever on the transceiver to unlock the transceiver.




CAUTION: Before removing the transceiver, make sure you open the ejector lever completely until you hear it click. This prevents damage to the transceiver.

- b. Grasp the transceiver ejector lever and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

Figure 58: Removing a Transceiver from a Switch

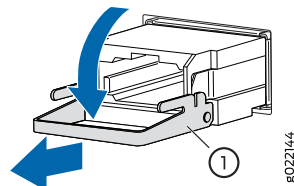

1—Ejector lever

5. To remove a CFP transceiver:
 - a. Loosen the screws on the transceiver by using your fingers.
 - b. Grasp the screws on the transceiver and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

6. By using your fingers, grasp the body of the transceiver and pull it straight out of the port.
7. Place the transceiver in the antistatic bag or on the antistatic mat placed on a flat, stable surface.
8. Place the dust cover over the empty port.

Related Documentation

- [Installing a Transceiver in an EX Series Switch on page 113](#)
- [Pluggable Transceivers Supported on EX Series Switches](#)

- [Installing a Transceiver in an OCX1100 Switch](#)
- [Pluggable Transceivers Supported on OCX1100 Switches](#)

Disconnecting a Fiber-Optic Cable from a Switch

EX Series switches and OCX1100 switches have field-replaceable unit (FRU) optical transceivers to which you can connect fiber-optic cables.

Before you begin disconnecting a fiber-optic cable from an optical transceiver installed in a switch, ensure that you have taken the necessary precautions for safe handling of lasers. See “[Laser and LED Safety Guidelines and Warnings for Switches](#)” on page 175.

Ensure that you have the following parts and tools available:

- A rubber safety cap to cover the transceiver
- A rubber safety cap to cover the fiber-optic cable connector

To disconnect a fiber-optic cable from an optical transceiver installed in the switch:

1. Disable the port in which the transceiver is installed by issuing the following command:

```
[edit interfaces]
user@switch# set interface-name disable
```



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

2. Carefully unplug the fiber-optic cable connector from the transceiver.
3. Cover the transceiver with a rubber safety cap.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.

4. Cover the fiber-optic cable connector with the rubber safety cap.

Related Documentation

- [Connecting a Fiber-Optic Cable to a Switch on page 133](#)
- [Removing a Transceiver from a Switch on page 149](#)
- [Maintaining Fiber-Optic Cables in Switches on page 155](#)
- [Pluggable Transceivers Supported on EX Series Switches](#)
- [Pluggable Transceivers Supported on OCX1100 Switches](#)

PART 5

Switch and Component Maintenance

- [Routine Maintenance on page 155](#)

Routine Maintenance

- [Maintaining Fiber-Optic Cables in Switches on page 155](#)

Maintaining Fiber-Optic Cables in Switches

Fiber-optic cables connect to optical transceivers that are installed in EX Series switches and OCX1100 switches.

To maintain fiber-optic cables:

- When you unplug a fiber-optic cable from a transceiver, place rubber safety caps over the transceiver and on the end of the cable.
- Anchor fiber-optic cables to prevent stress on the connectors. When attaching a fiber-optic cable to a transceiver, be sure to secure the fiber-optic cable so that it is not supporting its own weight as it hangs to the floor. Never let a fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cables beyond their minimum bend radius. Bending fiber-optic cables into arcs smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cables in and out of optical instruments can damage the instruments, which are expensive to repair. Attach a short fiber extension to the optical equipment. Any wear and tear due to frequent plugging and unplugging is then absorbed by the short fiber extension, which is easier and less expensive to replace than the instruments.
- Keep fiber-optic cable connections clean. Micro-deposits of oil and dust in the canal of the transceiver or cable connector can cause loss of light, reduction in signal power, and possibly intermittent problems with the optical connection.
 - To clean the transceiver canal, use an appropriate fiber-cleaning device such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions in the cleaning kit you use.
 - After cleaning the transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit such as the Opptex Cletop-S Fiber Cleaner. Follow the directions in the cleaning kit you use.

**Related
Documentation**

- [Connecting a Fiber-Optic Cable to a Switch on page 133](#)
- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- *Pluggable Transceivers Supported on EX Series Switches*
- *Pluggable Transceivers Supported on OCX1100 Switches*

PART 6

Returning Hardware

- [Returning the Switch or Switch Components on page 159](#)

Returning the Switch or Switch Components

- [Returning an EX2200 Switch or Component for Repair or Replacement on page 159](#)
- [Locating the Serial Number on an EX2200 Switch or Component on page 160](#)
- [Contacting Customer Support to Obtain Return Materials Authorization for Switches on page 161](#)
- [Packing an EX2200 Switch or Component for Shipping on page 163](#)

Returning an EX2200 Switch or Component for Repair or Replacement

If you need to return an EX2200 switch or hardware component to Juniper Networks for repair or replacement, follow this procedure:

1. Determine the serial number of the component. For instructions, see [“Locating the Serial Number on an EX2200 Switch or Component” on page 160](#).
2. Obtain an RMA number from JTAC as described in [“Contacting Customer Support to Obtain Return Materials Authorization for Switches” on page 161](#).



NOTE: Do not return any component to Juniper Networks unless you have first obtained an RMA number. Juniper Networks reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer through collect freight.

3. Pack the switch or component for shipping as described in [“Packing an EX2200 Switch or Component for Shipping” on page 163](#).

For more information about return and repair policies, see the customer support page at <http://www.juniper.net/support/guidelines.html>.

Related Documentation

- [EX2200 Switches Hardware Overview on page 3](#)

Locating the Serial Number on an EX2200 Switch or Component

If you are returning an EX2200 switch or hardware component to Juniper Networks for repair or replacement, you must locate the serial number of the switch or component. You must provide the serial number to the Juniper Networks Technical Assistance Center (JTAC) when you contact them to obtain Return Materials Authorization (RMA).

If the switch is operational and you can access the CLI, you can list serial numbers for the switch and for some components with a CLI command. If you do not have access to the CLI or if the serial number for the component does not appear in the command output, you can locate the serial number ID label on the physical switch (see [Figure 59 on page 161](#)) or component.



NOTE: If you want to find the serial number on the physical switch component, you will need to remove the component from the switch chassis, for which you must have the required parts and tools available.

- [Listing the Switch and Components Details with the CLI on page 160](#)
- [Locating the Chassis Serial Number ID Label on an EX2200 Switch on page 160](#)

Listing the Switch and Components Details with the CLI


To list the switch and switch components and their serial numbers, enter the following CLI command:

```
user@switch> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Routing Engine 0 REV 2A   750-026464  CV0209096579  EX2200-24P-4G, POE
FPC 0         REV 2A   750-026464  CV0209096579  EX2200-24P-4G, POE
  CPU
  PIC 0
  PIC 1         REV 2A   750-026464  CV0209096579  24x 10/100/1000 Base-T
Power Supply 0
Fan Tray
```

Locating the Chassis Serial Number ID Label on an EX2200 Switch

EX2200 switches have serial number ID labels located on the rear panel of the chassis (see [Figure 59 on page 161](#)).

Figure 59: Location of the Serial Number ID Label on EX2200 Switches

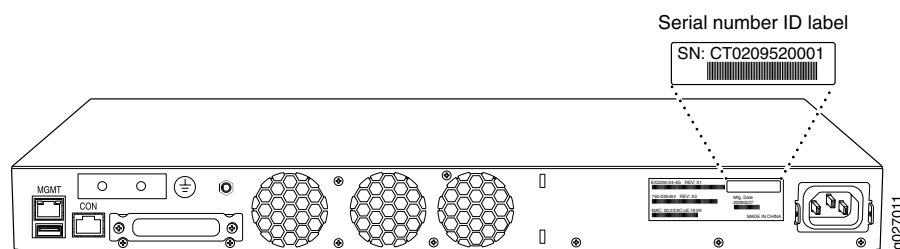

Related Documentation

- [Contacting Customer Support to Obtain Return Materials Authorization for Switches on page 161](#)
- [Returning an EX2200 Switch or Component for Repair or Replacement on page 159](#)

Contacting Customer Support to Obtain Return Materials Authorization for Switches

If you are returning a switch or hardware component to Juniper Networks for repair or replacement, obtain a Return Materials Authorization (RMA) from Juniper Networks Technical Assistance Center (JTAC).

After locating the serial number of the switch or hardware component you want to return, open a Case with Juniper Networks Technical Assistance Center (JTAC) on the Web or by telephone.

For instructions on locating the serial number of the switch or hardware component you want to return:

- See [“Locating the Serial Number on an EX2200 Switch or Component” on page 160](#)
- See [Locating the Serial Number on an EX3200 Switch or Component](#)
- See [Locating the Serial Number on an EX3300 Switch or Component](#)
- See [Locating the Serial Number on an EX4200 Switch or Component](#)
- See [Locating the Serial Number on an EX4300 Switch or Component](#)
- See [Locating the Serial Number on an EX4500 Switch or Component](#)
- See [Locating the Serial Number on an EX4550 Switch or Component](#)
- See [Locating the Serial Number on an EX4600 Switch or Component](#)
- See [Locating the Serial Number on an EX6200 Switch or Component](#)
- See [Locating the Serial Number on an EX8200 Switch or Component](#)
- See [Locating the Serial Number on an EX9204 Switch or Component](#)
- See [Locating the Serial Number on an EX9208 Switch or Component](#)
- See [Locating the Serial Number on an EX9214 Switch or Component](#)
- See [Locating the Serial Number on an XRE200 External Routing Engine or Component](#)

- See *Locating the Serial Number on an EX Series Redundant Power System or Redundant Power System Components*
- See *Locating the Serial Number on an OCX1100 Switch or Component*

Before you request an RMA from JTAC, be prepared to provide the following information:

- Your existing case number, if you have one
- Serial number of the component
- Your name, organization name, telephone number, fax number, and shipping address
- Details of the failure or problem
- Type of activity being performed on the switch when the problem occurred
- Configuration data displayed by one or more **show** commands

You can contact JTAC 24 hours a day, seven days a week on the Web or by telephone:

- Case Manager at CSC: <http://www.juniper.net/cm/>
- Telephone: +1-888-314-JTAC1-888-314-5822, toll free in U.S., Canada, and Mexico



NOTE: For international or direct-dial options in countries without toll free numbers, see <http://www.juniper.net/support/requesting-support.html>.

If you are contacting JTAC by telephone, enter your 11-digit case number followed by the pound (#) key for an existing case, or press the star (*) key to be routed to the next available support engineer.

The support representative validates your request and issues an RMA number for return of the component.

Related Documentation

- [Packing an EX2200 Switch or Component for Shipping on page 163](#)
- *Packing an EX3200 Switch or Component for Shipping*
- *Packing an EX3300 Switch or Component for Shipping*
- *Packing an EX4200 Switch or Component for Shipping*
- *Packing an EX4200 Switch or Component for Shipping*
- *Packing an EX4300 Switch or Component for Shipping*
- *Packing an EX4500 Switch or Component for Shipping*
- *Packing an EX4550 Switch or Component for Shipping*
- *Packing an EX6200 Switch or Component*
- *Packing an EX8200 Switch or Component*
- *Packing an EX9200 Switch or Component*

- *Packing an EX Series Redundant Power System or Redundant Power System Components for Shipping*
- [Returning an EX2200 Switch or Component for Repair or Replacement on page 159](#)
- *Returning an EX3200 Switch or Component for Repair or Replacement*
- *Returning an EX3300 Switch or Component for Repair or Replacement*
- *Returning an EX4200 Switch or Component for Repair or Replacement*
- *Returning an EX4300 Switch or Component for Repair or Replacement*
- *Returning an EX4500 Switch or Component for Repair or Replacement*
- *Returning an EX4550 Switch or Component for Repair or Replacement*
- *Returning an EX6200 Switch or Component for Repair or Replacement*
- *Returning an EX8200 Switch or Component for Repair or Replacement*
- *Returning an EX9200 Switch or Component for Repair or Replacement*
- *Returning an EX Series RPS or RPS Component for Repair or Replacement*
- *Packing an OCX1100 Switch or Component for Shipping*
- *Returning an OCX1100 Switch or Component for Repair or Replacement*

Packing an EX2200 Switch or Component for Shipping

If you are returning an EX2200 switch or component to Juniper Networks for repair or replacement, pack the item as described in this topic.

Before you begin, ensure that you have retrieved the original shipping carton and packing materials. Contact your JTAC representative if you do not have these materials, to learn about approved packing materials. See [“Contacting Customer Support to Obtain Return Materials Authorization for Switches” on page 161](#).

Ensure that you have the following parts and tools available:

- Antistatic bag, one for each switch or component
- Phillips (+) screwdriver, number 2

This topic describes:

- [Packing a Switch for Shipping on page 164](#)
- [Packing Switch Components for Shipping on page 164](#)

Packing a Switch for Shipping

To pack a switch for shipping:

1. On the console or other management device connected to the switch, enter the CLI operational mode and issue the following command to shut down the switch software:

```
user@switch> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.
2. Disconnect power from the switch by performing one of the following:
 - If the power source outlet has a power switch, set it to the OFF (O) position.
 - If the power source outlet does not have a power switch, gently pull out the male end of the power cord connected to the power source outlet.
3. Remove the cables that connect the switch to all external devices. See [“Disconnecting a Fiber-Optic Cable from a Switch” on page 152](#).
4. Remove all optical transceivers installed in the switch. See [“Removing a Transceiver from a Switch” on page 149](#).
5. If the switch is mounted on a wall or on two posts, have one person hold the switch while another person unscrews and removes the mounting screws.
6. Use the Phillips (+) screwdriver, number 2 to remove the screws.
7. Remove the switch from the wall, rack, cabinet, or desk and place the switch in an antistatic bag.
8. Slip on the end caps of the packaging foam on both sides of the switch.
9. Place the switch in the shipping carton.
10. Place the packing foam on top of and around the switch.
11. If you are returning accessories or FRUs with the switch, pack them as instructed in [“Packing Switch Components for Shipping” on page 164](#).
12. Close the top of the cardboard carton and seal it with packing tape.
13. Write the RMA number on the exterior of the carton to ensure proper tracking.

Packing Switch Components for Shipping

To pack and ship switch components:

- Place individual components in antistatic bags.
- Ensure that the components are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Close the top of the cardboard shipping carton and seal it with packing tape.
- Write the RMA number on the exterior of the carton to ensure proper tracking.

- Related Documentation**
- [Returning an EX2200 Switch or Component for Repair or Replacement on page 159](#)

PART 7

Safety Information

- [General Safety Information on page 169](#)
- [Radiation and Laser Warnings on page 175](#)
- [Installation and Maintenance Safety Information on page 181](#)
- [Power and Electrical Safety Information on page 197](#)

CHAPTER 15

General Safety Information

- [General Safety Guidelines and Warnings on page 169](#)
- [Definitions of Safety Warning Levels on page 170](#)
- [Fire Safety Requirements on page 172](#)
- [Qualified Personnel Warning on page 173](#)
- [Warning Statement for Norway and Sweden on page 174](#)

General Safety Guidelines and Warnings

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.

- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.
- Ensure that the separate protective earthing terminal provided on this device is permanently connected to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.
- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

Related Documentation

- [AC Power Electrical Safety Guidelines on page 200](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 190](#)
- [Installation Instructions Warning on page 181](#)
- [Grounded Equipment Warning on page 189](#)

Definitions of Safety Warning Levels

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

The documentation uses the following levels of safety warnings (there are two “Warning” formats):



.....

NOTE: You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.

.....



CAUTION: You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.



WARNING: This symbol alerts you to the risk of personal injury from a laser.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos

elétricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [Installation Instructions Warning on page 181](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 190](#)
- [Grounded Equipment Warning on page 189](#)
- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- [Laser and LED Safety Guidelines and Warnings for the QFX Series](#)
- [Warning Statement for Norway and Sweden on page 174](#)

Fire Safety Requirements

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

In the event of a fire emergency involving switches and other network equipment, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks switch or other network device provided by Juniper. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Action to Take After an Electrical Accident on page 212](#)

Qualified Personnel Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Only trained and qualified personnel should install or replace the device.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [AC Power Electrical Safety Guidelines on page 200](#)
- [DC Power Electrical Safety Guidelines on page 203](#)

Warning Statement for Norway and Sweden

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: The equipment must be connected to an earthed mains socket-outlet.

Advarsel Apparatet skal kobles til en jordet stikkontakt.

Varning! Apparaten skall anslutas till jordat nätuttag.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)

Radiation and Laser Warnings

- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- [Radiation from Open Port Apertures Warning on page 178](#)

Laser and LED Safety Guidelines and Warnings for Switches

EX Series switches, OCX1100 switches, and the XRE200 External Routing Engine are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per EN 60825-1 requirements.

Observe the following guidelines and warnings:

- [General Laser Safety Guidelines on page 175](#)
- [Class 1 Laser Product Warning on page 176](#)
- [Class 1 LED Product Warning on page 176](#)
- [Laser Beam Warning on page 177](#)

General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Class 1 Laser Product Warning



.....
WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.
.....



.....
WARNING: **Avvertenza** Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.
.....

Class 1 LED Product Warning



.....
WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.
.....



.....
WARNING: **Avvertenza** Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.
.....

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.



WARNING: Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.



WARNING: Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.



WARNING: Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.



WARNING: Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.



WARNING: Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.



WARNING: Advarsel Stirr eller se ikke direkte p strlen med optiske instrumenter.



WARNING: Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.



WARNING: ¡Atención! No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.



WARNING: Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 169](#)
 - [Radiation from Open Port Apertures Warning on page 178](#)
 - [Installation Instructions Warning on page 181](#)
 - [Grounded Equipment Warning on page 189](#)
 - [Pluggable Transceivers Supported on EX Series Switches](#)
 - [Pluggable Transceivers Supported on OCX1100 Switches](#)

Radiation from Open Port Apertures Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- [Installation Instructions Warning on page 181](#)
- [Grounded Equipment Warning on page 189](#)
- [Laser and LED Safety Guidelines and Warnings for the QFX Series](#)

Installation and Maintenance Safety Information

- Installation Instructions Warning on page 181
- Chassis Lifting Guidelines for EX2200 Switches on page 183
- Ramp Warning on page 183
- Rack-Mounting and Cabinet-Mounting Warnings on page 184
- Wall-Mounting Warnings for EX2200 Switches on page 189
- Grounded Equipment Warning on page 189
- Maintenance and Operational Safety Guidelines and Warnings on page 190

Installation Instructions Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Read the installation instructions before you connect the device to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

Attention Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- [Laser and LED Safety Guidelines and Warnings for the QFX Series](#)
- [Grounded Equipment Warning on page 189](#)
- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting AC Power to an EX3200 Switch](#)
- [Connecting AC Power to an EX3300 Switch](#)
- [Connecting AC Power to an EX4200 Switch](#)
- [Connecting AC Power to an EX4300 Switch](#)
- [Connecting AC Power to an EX4500 Switch](#)
- [Connecting AC Power to an EX4550 Switch](#)
- [Connecting AC Power to an EX4600 Switch](#)
- [Connecting AC Power to an EX6200 Switch](#)
- [Connecting AC Power to an EX8200 Switch](#)
- [Connecting AC Power to an EX9204 Switch](#)
- [Connecting AC Power to an EX9208 Switch](#)
- [Connecting AC Power to an EX9214 Switch](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting DC Power to an EX3200 Switch](#)
- [Connecting DC Power to an EX4200 Switch](#)
- [Connecting DC Power to an EX4300 Switch](#)
- [Connecting DC Power to an EX4500 Switch](#)
- [Connecting DC Power to an EX4600 Switch](#)
- [Connecting DC Power to an EX4550 Switch](#)
- [Connecting DC Power to an EX6200 Switch](#)
- [Connecting DC Power to an EX8200 Switch](#)

- *Connecting DC Power to an EX9204 Switch*
- *Connecting DC Power to an EX9208 Switch*
- *Connecting DC Power to an EX9214 Switch*
- *Connecting AC Power to an XRE200 External Routing Engine*
- *Connecting DC Power to an XRE200 External Routing Engine*
- *Connecting AC Power to an OCX1100 Switch*
- *Connecting DC Power to an OCX1100 Switch*
- *Connecting AC Power to a QFX3100 Director Device*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Single-Phase Wiring Trays*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Three-Phase Delta Wiring Trays*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Three-Phase Wye Wiring Trays*
- *Connecting AC Power to a QFX3500, QFX3600, or QFX3600-I Device*
- *Connecting DC Power to a QFX3500, QFX3600, or QFX3600-I Device*
- *Connecting AC Power to a QFX5100 Device*
- *Connecting DC Power to a QFX5100 Device*

Chassis Lifting Guidelines for EX2200 Switches

Observe the following guidelines for lifting and moving an EX2200 switch:

- Before installing the switch, read the guidelines in [“Site Preparation Checklist for EX2200 Switches” on page 61](#) to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Before lifting or moving the switch, disconnect all external cables.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [Installation Instructions Warning on page 181](#)
- [Mounting an EX2200 Switch on page 88](#)

Ramp Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: When installing the device, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [Installation Instructions Warning on page 181](#)
- [Grounded Equipment Warning on page 189](#)

Rack-Mounting and Cabinet-Mounting Warnings

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



WARNING: To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The device must be installed in a rack that is secured to the building structure.
- The device should be mounted at the bottom of the rack if it is the only unit in the rack.

- When mounting the device on a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.

- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.

- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, o posteriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
 - Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
 - Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
 - Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.
-

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [Installation Instructions Warning on page 181](#)
- [Grounded Equipment Warning on page 189](#)
- [Mounting an EX2200 Switch on page 88](#)
- *Mounting an EX3200 Switch*
- *Mounting an EX3300 Switch*
- *Mounting an EX4200 Switch*
- *Mounting an EX4300 Switch*
- *Mounting an EX4500 Switch*
- *Mounting an EX4550 Switch*
- *Mounting an EX4600 Switch in a Rack or Cabinet*
- *Mounting an EX6210 Switch on a Rack or Cabinet*
- *Mounting an EX8208 Switch on a Rack or Cabinet*
- *Mounting an EX8216 Switch on a Rack or Cabinet*
- *Mounting an EX9200 Switch on a Rack or Cabinet Using a Mechanical Lift*
- *Mounting an EX9204 Switch on a Rack or Cabinet Without Using a Mechanical Lift*
- *Mounting an EX9208 Switch on a Rack or Cabinet Without Using a Mechanical Lift*
- *Mounting an OCX1100 Switch*
- *Mounting a QFX3100 Director Device on Four Posts in a Rack or Cabinet*
- *Mounting a QFX3100 Director Device on Two Posts in a Rack or Cabinet*
- *Mounting a QFX3008-I Interconnect Device on a Rack or Cabinet Using a Mechanical Lift*
- *Mounting a QFX3600 or QFX3600-I Device on Four Posts in a Rack or Cabinet*
- *Mounting a QFX3600 or QFX3600-I Device on Two Posts in a Rack or Cabinet*
- *Mounting a QFX3500 Device in a Rack or Cabinet*

- [Mounting a QFX5100 Device in a Rack or Cabinet](#)

Wall-Mounting Warnings for EX2200 Switches



WARNING:

- When mounting an EX2200 switch chassis in a vertical position, orient the front panel of the chassis downward to ensure proper airflow and meet safety requirements in the event of a fire.
- When wall mounting Power over Ethernet (PoE) models (EX2200-24P and EX2200-48P), install the wall-mount baffle above the units to reduce the risk of objects or substances falling into the air exhaust or power supply, which could cause a fire.

Related Documentation

- [Mounting an EX2200 Switch on a Wall on page 102](#)

Grounded Equipment Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: The device is intended to be grounded. During normal use, ensure that you have connected earth ground to the chassis.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.

Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

Related Documentation • [General Safety Guidelines and Warnings on page 169](#)

Maintenance and Operational Safety Guidelines and Warnings

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

While performing the maintenance activities for devices, observe the following guidelines and warnings:

- [Battery Handling Warning on page 190](#)
- [Jewelry Removal Warning on page 191](#)
- [Lightning Activity Warning on page 192](#)
- [Operating Temperature Warning on page 193](#)
- [Product Disposal Warning on page 194](#)

Battery Handling Warning



WARNING: Replacing a battery incorrectly might result in an explosion. Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Waarschuwing Er is ontploffingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittama. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent,

recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

Advarsel Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.

Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104° F (40° C) for EX6200 switches, EX8208 switches, EX8216 switches, QFX Series devices, OCX1100 switches, and XRE200 External Routing Engines and 113° F (45° C) for EX2200, EX3300, EX3200, EX4200, EX4300, EX4500, and EX4550 switches. To prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

Waarschuwing Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

Varoitus Ettei Juniper Networks switch-sarjan reititin ylikuumentuusi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

Attention Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

Warnung Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

Avvertenza Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

Advarsel Unngå overoppheting av eventuelle rutere i Juniper Networks switch Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

Aviso Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

¡Atención! Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aberturas para ventilación.

Varning! Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this device must be handled according to all national laws and regulations.

Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [AC Power Electrical Safety Guidelines on page 200](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [Laser and LED Safety Guidelines and Warnings for Switches on page 175](#)
- [Laser and LED Safety Guidelines and Warnings for the QFX Series](#)
- [Installation Instructions Warning on page 181](#)
- [Grounded Equipment Warning on page 189](#)

Power and Electrical Safety Information

- General Electrical Safety Guidelines and Warnings on page 197
- Prevention of Electrostatic Discharge Damage on page 198
- AC Power Electrical Safety Guidelines on page 200
- AC Power Disconnection Warning on page 202
- DC Power Electrical Safety Guidelines on page 203
- DC Power Disconnection Warning on page 205
- DC Power Grounding Requirements and Warning on page 207
- DC Power Wiring Sequence Warning on page 208
- DC Power Wiring Terminations Warning on page 210
- TN Power Warning on page 211
- Action to Take After an Electrical Accident on page 212

General Electrical Safety Guidelines and Warnings

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metallically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metallically to OSP wiring.



CAUTION: Before removing or installing components of a device, attach an electrostatic discharge (ESD) grounding strap to an ESD point and place the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the switch.

- Install the device in compliance with the following local, national, and international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that grounding surfaces are cleaned and brought to a bright finish before grounding connections are made.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install an equipment that it appears to be damaged.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [AC Power Electrical Safety Guidelines on page 200](#)
- [DC Power Electrical Safety Guidelines on page 203](#)

Prevention of Electrostatic Discharge Damage

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD grounding strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 60 on page 199](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.




WARNING: For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD grounding strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 60 on page 199](#)). If you are returning a component, place it in an antistatic bag before packing it.

Figure 60: Placing a Component into an Antistatic Bag

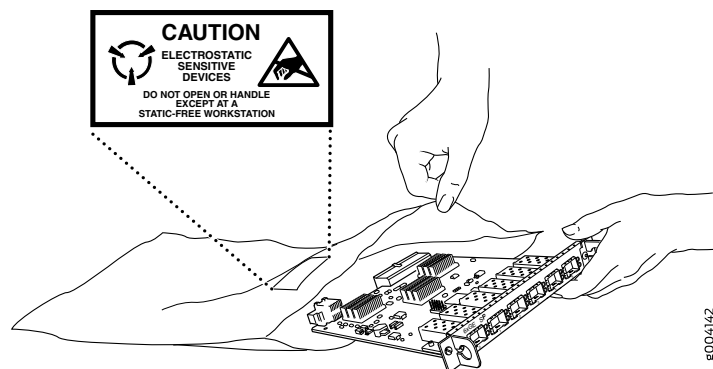

8004142



CAUTION: ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- See [EX2200 Switches Hardware Overview on page 3](#) for the ESD point location.
- See [Rear Panel of an EX3200 Switch](#) for the ESD point location.
- See [Rear Panel of an EX3300 Switch](#) for the ESD point location.
- See [Rear Panel of an EX4200 Switch](#) for the ESD point location.
- See [EX4300 Switches Hardware Overview](#) for the ESD point location.
- See [Front Panel of an EX4500 Switch](#) for the ESD point location.
- See [EX4550 Switches Hardware Overview](#) for the ESD point location.
- See [Chassis Physical Specifications of an EX6210 Switch](#) for the ESD point location.
- See [Chassis Physical Specifications of an EX8208 Switch](#) for the ESD point location.
- See [Chassis Physical Specifications of an EX8216 Switch](#) for the ESD point location.
- See [EX9204 Switch Hardware Overview](#) for the ESD point location.
- See [EX9208 Switch Hardware Overview](#) for the ESD point location.
- See [EX9214 Switch Hardware Overview](#) for the ESD point location.
- See [OCX1100 Switches Hardware Overview](#) for the ESD point location.
- See [QFX3008-I Interconnect Device Overview](#) for the ESD point location.
- See [Front Panel of a QFX3500 Device](#) for the ESD point location.
- See [Front Panel of a QFX3600 Device](#) for the ESD point location.
- See [Physical Description of a Redundant Power System](#)
- See [Port Panel of an EX4600 Switch](#) for the ESD point location.
- See [Port Panel of a QFX5100-48S Device](#) for the ESD point location.
- See [Port Panel of a QFX5100-24Q Device](#) for the ESD point location.
- See [Port Panel of a QFX5100-96S Device](#) for the ESD point location.

AC Power Electrical Safety Guidelines

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



CAUTION: For devices with AC power supplies, an external surge protective device (SPD) must be used at the AC power source.

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:

“**CAUTION:** THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”

“**ATTENTION:** CET APPAREIL COMPORTE PLUS D'UN CORDON D'ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D'ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”

- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

Power Cable Warning (Japanese)

WARNING: The attached power cable is only for this product. Do not use the cable for another product.

注意

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

g017253

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Multiple Power Supplies Disconnection Warning](#)
- [Connecting AC Power to an EX2200 Switch on page 123](#)
- [Connecting AC Power to an EX3200 Switch](#)
- [Connecting AC Power to an EX3300 Switch](#)
- [Connecting AC Power to an EX4200 Switch](#)

- *Connecting AC Power to an EX4300 Switch*
- *Connecting AC Power to an EX4500 Switch*
- *Connecting AC Power to an EX4550 Switch*
- *Connecting AC Power to an EX4600 Switch*
- *Connecting AC Power to an EX6200 Switch*
- *Connecting AC Power to an EX8200 Switch*
- *Connecting AC Power to an EX9204 Switch*
- *Connecting AC Power to an EX9208 Switch*
- *Connecting AC Power to an EX9214 Switch*
- *Connecting AC Power to an XRE200 External Routing Engine*
- *Connecting AC Power to an OCX1100 Switch*
- *Connecting AC Power to a QFX3100 Director Device*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Single-Phase Wiring Trays*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Three-Phase Delta Wiring Trays*
- *Connecting AC Power to a QFX3008-I Interconnect Device with Three-Phase Wye Wiring Trays*
- *Connecting AC Power to a QFX3500, QFX3600, or QFX3600-I Device*
- *Connecting AC Power to a QFX5100 Device*

AC Power Disconnection Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Before working on the switch or near power supplies, unplug all the power cords from an AC switch.

Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

Varoitus Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut på vekselstrømsenheter.

Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [AC Power Electrical Safety Guidelines on page 200](#)

DC Power Electrical Safety Guidelines

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

- A DC-powered device is equipped with a DC terminal block that is rated for the power requirements of a maximally configured device.



NOTE: To supply sufficient power, terminate the DC input wiring on a facility DC source that is capable of supplying:

- Minimum of 7.5 A at –48 VDC for EX2200 and EX3300 switches
- Minimum of 8 A at –48 VDC for EX3200 and EX4200 switches
- Minimum of 20 A at –48 VDC for EX4300, EX4500, and EX4550 switches
- Minimum of 50 A at –48 VDC for EX6210 switches
- Minimum of 60 A at –48 VDC for EX8208 switches
- Minimum of 100 A at –48 VDC for EX8216 switches
- Minimum of 7 A at –48 VDC for QFX3500, EX4600, and QFX5100 devices
- Minimum of 8 A at –48 VDC for QFX3600 devices
- Minimum of 7 A at –48 VDC for OCX1100 switches

Incorporate an easily accessible disconnect device into the facility wiring. Be sure to connect the ground wire or conduit to a solid office earth ground. A closed loop ring is recommended for terminating the ground conductor at the ground stud.

- Run two wires from the circuit breaker box to a source of 48 VDC.
- A DC-powered device that is equipped with a DC terminal block is intended only for installation in a restricted access location. In the United States, a restricted access area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



NOTE: Primary overcurrent protection is provided by the building circuit breaker. This breaker must protect against excess currents, short circuits, and earth grounding faults in accordance with NEC ANSI/NFPA 70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.
- For personal safety, connect the green and yellow wire to safety (earth) ground at both the device and the supply side of the DC wiring.
- The marked input voltage of –48 VDC for a DC-powered device is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the device is a positive ground system, you must connect the positive lead to the terminal labeled RTN, the negative lead to the terminal labeled –48 VDC, and the earth ground to the device grounding points.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [DC Power Disconnection Warning on page 205](#)
- [DC Power Grounding Requirements and Warning on page 207](#)
- [DC Power Wiring Sequence Warning on page 208](#)
- [DC Power Wiring Terminations Warning on page 210](#)
- [Connecting DC Power to an EX2200 Switch on page 125](#)
- [Connecting DC Power to an EX3200 Switch](#)
- [Connecting DC Power to an EX4200 Switch](#)
- [Connecting DC Power to an EX4300 Switch](#)
- [Connecting DC Power to an EX4500 Switch](#)
- [Connecting DC Power to an EX4550 Switch](#)
- [Connecting DC Power to an EX4600 Switch](#)
- [Connecting DC Power to an EX6200 Switch](#)
- [Connecting DC Power to an EX8200 Switch](#)
- [Connecting DC Power to an EX9204 Switch](#)
- [Connecting DC Power to an EX9208 Switch](#)
- [Connecting DC Power to an EX9214 Switch](#)
- [Connecting DC Power to an OCX1100 Switch](#)
- [Connecting DC Power to an XRE200 External Routing Engine](#)
- [Connecting DC Power to a QFX3500, QFX3600, or QFX3600-I Device](#)
- [Connecting DC Power to a QFX5100 Device](#)

DC Power Disconnection Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

Waarschuwing Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

Varoitus Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

Attention Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifiez que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

Warnung Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

Avvertenza Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

Advarsel Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

Aviso Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

¡Atención! Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF),

y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

Warning! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [DC Power Grounding Requirements and Warning on page 207](#)
- [DC Power Wiring Sequence Warning on page 208](#)
- [DC Power Wiring Terminations Warning on page 210](#)

DC Power Grounding Requirements and Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



WARNING: When you install the device, the ground connection must always be made first and disconnected last.

Waarschuwing Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

Varoitus Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

Attention Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

Warnung Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

Avvertenza In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

Advarsel Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

Aviso Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

¡Atención! Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

Varning! Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [DC Power Disconnection Warning on page 205](#)
- [DC Power Wiring Sequence Warning on page 208](#)
- [DC Power Wiring Terminations Warning on page 210](#)

DC Power Wiring Sequence Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then –48 V to –48 V. When disconnecting power, the proper wiring sequence is –48 V to –48 V, +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

Waarschuwing De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en –48 V naar –48 V. De juiste bedradingsvolgorde losgemaakt is en –48 naar –48 V, +RTN naar +RTN, aarde naar aarde.

Varoitus Oikea yhdistettävä kytkentajarjestys on maajohto maajohtoon, +RTN varten +RTN, –48 V varten –48 V. Oikea irrotettava kytkentajarjestys on –48 V varten –48 V, +RTN varten +RTN, maajohto maajohtoon.

Attention Câblez l'alimentation CC En utilisant les crochets appropriés à l'extrémité de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis –48 V à –48 V. En débranchant la puissance, l'ordre approprié de câblage est –48 V à –48 V, +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse

devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

Warnung Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlusssequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann -48V zu -48V. Die richtige Sequenz zum Abtrennen der Stromversorgung ist -48V zu -48V, +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

Avvertenza Mostra la morsettiera dell alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

Advarsel Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, -48 V til -48 V. Riktig frakoples tilkoplingssekvens er -48 V til -48 V, +RTN til +RTN, jord til jord.

Aviso Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se muele para moler, +RTN a +RTN, entonces -48 V a -48 V. Al desconectar potencia, la secuencia apropiada del cableado es -48 V a -48 V, +RTN a +RTN, entonces molió para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

Atenção! Wire a fonte de alimentação de DC Usando os talões apropriados na extremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então -48 V a -48 V. Ao desconectar a potência, a seqüência apropriada da fiação é -48 V a -48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

Varning! Korrekt kopplingssekvens ar jord till jord, +RTN till +RTN, -48 V till -48 V. Korrekt kopplas kopplingssekvens ar -48 V till -48 V, +RTN till +RTN, jord till jord.

Related Documentation

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [DC Power Disconnection Warning on page 205](#)
- [DC Power Grounding Requirements and Warning on page 207](#)

- [DC Power Wiring Terminations Warning on page 210](#)

DC Power Wiring Terminations Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

Waarschuwing Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Varoitus Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitintää, esimerkiksi suljettua silmukkaa tai kourumaista liitintää, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitintöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

Attention Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

Warnung Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

Avvertenza Quando occorre usare trecce, usare connettori omologati, come quelli a occhio o a forcilla con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

Advarsel Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og lederen.

Aviso Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo

em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

¡Atención! Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Varning! När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [DC Power Electrical Safety Guidelines on page 203](#)
- [DC Power Disconnection Warning on page 205](#)
- [DC Power Grounding Requirements and Warning on page 207](#)
- [DC Power Wiring Sequence Warning on page 208](#)

TN Power Warning

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.



WARNING: The device is designed to work with a TN power system.

Waarschuwing Het apparaat is ontworpen om te functioneren met TN energiesystemen.

Varoitus Koje on suunniteltu toimimaan TN-sähkövoimajärjestelmien yhteydessä.

Attention Ce dispositif a été conçu pour fonctionner avec des systèmes d'alimentation TN.

Warnung Das Gerät ist für die Verwendung mit TN-Stromsystemen ausgelegt.

Avvertenza Il dispositivo è stato progettato per l'uso con sistemi di alimentazione TN.

Advarsel Utstyret er utfomet til bruk med TN-strømsystemer.

Aviso O dispositivo foi criado para operar com sistemas de corrente TN.

¡Atención! El equipo está diseñado para trabajar con sistemas de alimentación tipo TN.

Varning! Enheten är konstruerad för användning tillsammans med elkraftssystem av TN-typ.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [Grounded Equipment Warning on page 189](#)
- [Multiple Power Supplies Disconnection Warning](#)

Action to Take After an Electrical Accident

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic also applies to hardware devices in the QFX Series and to OCX1100 switches.

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 169](#)
- [General Electrical Safety Guidelines and Warnings on page 197](#)
- [AC Power Electrical Safety Guidelines on page 200](#)
- [DC Power Electrical Safety Guidelines on page 203](#)

PART 8

Compliance Information

- [Compliance Information on page 215](#)

Compliance Information

- [Agency Approvals for EX Series Switches on page 215](#)
- [Compliance Statements for EMC Requirements for EX Series Switches on page 216](#)
- [Compliance Statements for Acoustic Noise for EX Series Switches on page 220](#)
- [Declaration of Conformity for EX2200 Switches on page 221](#)

Agency Approvals for EX Series Switches

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

These hardware devices comply with the following standards:

- Safety
 - CAN/CSA-C22.2 No. 60950-1 Information Technology Equipment
 - UL 60950-1 Information Technology Equipment
 - EN 60950-1 Information Technology Equipment
 - IEC 60950-1 Information Technology Equipment
 - EN 60825-1 Safety of Laser Products - Part 1: Equipment classification and requirements
- EMC
 - FCC 47CFR Part 15 Class A (USA)
 - EN 55022 Class A Emissions (Europe)
 - ICES-003 Class A
 - VCCI Class A (Japan)
 - AS/NZS CISPR 22 Class A (Australia/New Zealand)
 - CISPR 22 Class A
 - EN 55024
 - EN 300386

- EN 61000-3-2 Power Line Harmonics
- EN 61000-3-3 Voltage Fluctuations and Flicker
- EN 61000-4-2 ESD
- EN 61000-4-3 Radiated Immunity
- EN 61000-4-4 EFT
- EN 61000-4-5 Surge
- EN 61000-4-6 Low Frequency Common Immunity
- EN 61000-4-11 Voltage Dips and Sags

- Related Documentation**
- [Compliance Statements for EMC Requirements for EX Series Switches on page 216](#)
 - [Compliance Statements for Acoustic Noise for EX Series Switches on page 220](#)

Compliance Statements for EMC Requirements for EX Series Switches

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

This topic describes the EMC requirements for these hardware devices for:

- [Canada on page 216](#)
- [European Community on page 217](#)
- [Israel on page 217](#)
- [Japan on page 217](#)
- [Korea on page 218](#)
- [United States on page 218](#)
- [FCC Part 15 Statement on page 218](#)
- [Nonregulatory Environmental Standards on page 219](#)

Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. Industry Canada does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should ensure that it is permissible to connect the equipment to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single line individual service can be extended by means

of a certified connector assembly. The customer should be aware that compliance with the above conditions might not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, might give the telecommunications company cause to request the user to disconnect the equipment.




CAUTION: Users should not attempt to make electrical ground connections by themselves, but should contact the appropriate inspection authority or an electrician, as appropriate.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution might be particularly important in rural areas.

European Community


This is a Class A device. In a domestic environment this device might cause radio interference, in which case the user needs to take adequate measures.

Israel

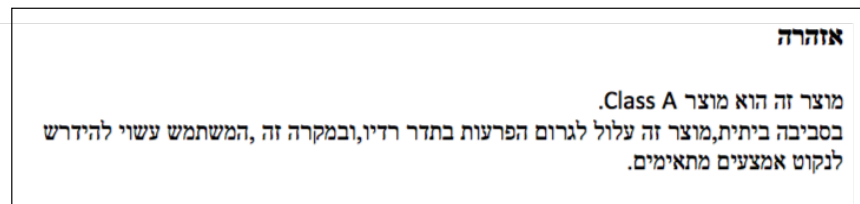

Translation from Hebrew—Warning: This product is Class A. In residential environments, the product may cause radio interference, and in such a situation, the user may be required to take adequate measures.

Japan



The preceding translates as follows:

This is a Class A device. In a domestic environment this device might cause radio interference, in which case the user needs to take adequate measures.

VCCI-A

Korea

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Korean Class A Warning 9040913

The preceding translates as follows:

This equipment is Industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home

United States

The device has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users need to correct the interference at their own expense.

FCC Part 15 Statement

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, might cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

Nonregulatory Environmental Standards

NEBS compliance—These EX Series switches are Network Equipment Building System (NEBS) compliant:

- EX2200-24T and EX2200-48T
- EX3200-24T, EX3200-48T
- EX3300-24T, EX3300-48T
- EX4200-24T, EX4200-24F, EX4200-24F-S, EX4200-48T and EX4200-48T-S
- EX4300-24T, EX4300-24T-S, EX4300-24P, EX4300-24P-S, EX4300-32F, EX4300-32F-S, EX4300-48T, EX4300-48T-AFI, EX4300-48T-S, EX4300-48P, and EX4300-48P-S
- All EX4500 switches with AC power supplies
- EX4550-32T-AFO, EX4550-32T-AFI, EX4550-32F-AFO, EX4550-32F-AFI, and EX4550-32F-S
- EX4600-40F and EX4600-40F-S
- All EX6200 switches



NOTE: For the EX6200-48P line cards, the intra-building ports must use shielded intra-building cabling or wiring that is grounded at both ends.

- All EX8200 switches

Those switch switches meet the following NEBS compliance standards:

- SR-3580 NEBS Criteria Levels (Level 4 Compliance)
- GR-1089-CORE: EMC and Electrical Safety for Network Telecommunications Equipment
- GR-63-CORE: NEBS, Physical Protection
 - The equipment is suitable for installation as part of the Common Bonding Network (CBN).
 - The equipment is suitable for installation in locations where the National Electrical Code (NEC) applies.
 - The battery return connection is to be treated as an Isolated DC return (DC-I), as defined in GR-1089-CORE.

Related Documentation

- [Agency Approvals for EX Series Switches on page 215](#)
- [Compliance Statements for Acoustic Noise for EX Series Switches on page 220](#)

Compliance Statements for Acoustic Noise for EX Series Switches

This topic applies to hardware devices in the EX Series product family, which includes EX Series switches, the EX Series Redundant Power System (RPS), and the XRE200 External Routing Engine.

Maschinenlärminformations-Verordnung - 3. GPSGV, der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779

Translation:

The emitted sound pressure is below 70 dB(A) per EN ISO 7779.

- Related Documentation**
- [Agency Approvals for EX Series Switches on page 215](#)
 - [Compliance Statements for EMC Requirements for EX Series Switches on page 216](#)

Declaration of Conformity for EX2200 Switches

		
Declaration of Conformity		
		
Juniper Networks, Inc. 1194 N. Mathilda Ave Sunnyvale, CA 94089 USA		
declares that under our sole responsibility the product series		
EX2200		
With model numbers: EX2200-24T-4G EX2200-48T-4G EX2200-24P-4G EX2200-48P-4G		
is in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:		
Low Voltage Directive 2006/95/EC EMC Directive 2004/108/EC		
The following harmonized standards were applied:		
EN 300 386 v1.4.1: (2008-04) Telecom Network Equipment - EMC requirements (Telco Center) EN 55022 +A1 Class A: 2006 European Radiated Emissions EN 55024 +A1+A2: 1998 Information Technology Equipment Immunity Characteristics EN 60950-1: 2005 2nd Edition		
This product carries the CE Mark, which was first affixed in 2010.		
Place Sunnyvale, CA	Signature  Kevin Kimma Compliance Manager 1194 N. Mathilda Ave Sunnyvale, CA 94089 USA	Date 2/18/2010
<small>Doc: 10_EX2200-24T-24P-48T-48P</small>		

S021001



Related Documentation

- [Agency Approvals for EX Series Switches on page 215](#)
- [Compliance Statements for EMC Requirements for EX Series Switches on page 216](#)
- [Compliance Statements for Acoustic Noise for EX Series Switches on page 220](#)