



Objectives

- After studying the contained information you will be able to accomplish the following:
 - Perform the proper adjustment to the air-gap setting
 - Perform the proper adjustment to the manual brake release



Tools and Materials

- What you will need:
 - 1 10mm Nut-driver
 - 1 8mm Nut-driver
 - 1 Medium Flat Tip Screwdriver
 - 1 External Snapping Pliers
 - 1 Metric Feeler Gage Pack



Safety

- Always follow the proper lockout/tagout procedures.



- Use the proper safety equipment at all times.




Step 1

- Disconnect all power sources to the motor.



Step 2

- Using the 8mm nut-driver, remove the four (4) small screws that hold the fan guard in place.

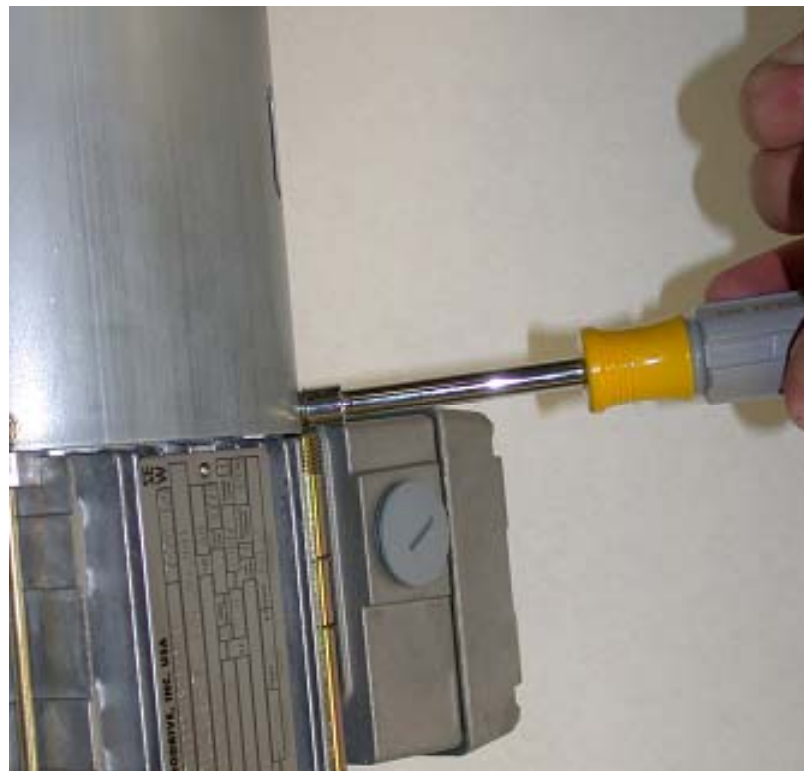

Step 3

- Remove the fan guard.



Step 4

- Using the external snapping pliers, remove the snapping that secures the fan.




Z-Fan Instructions

Cast Iron Z-Fan Removal Instructions

1

Use pullers and air wrench to remove the Z-Fan

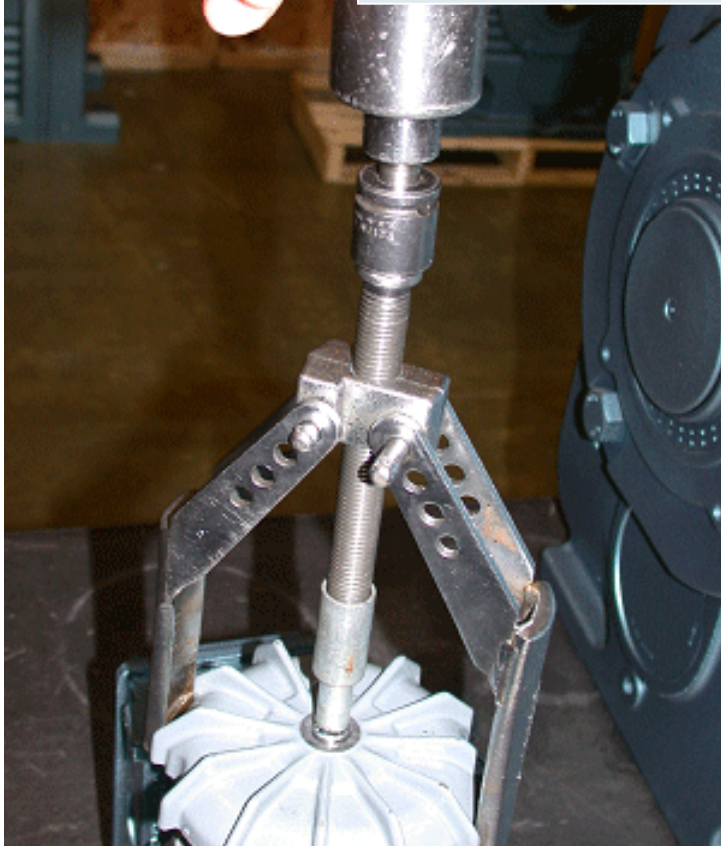

2

Ensure proper placement of puller jaws between fan blades



3


Remove the Z-Fan from the motor



Return to Disc Replacement

Step 5

- With the medium sized flat-tip screwdriver, gently pry the fan up and down to loosen and remove it. Use caution to avoid damaging the fan!

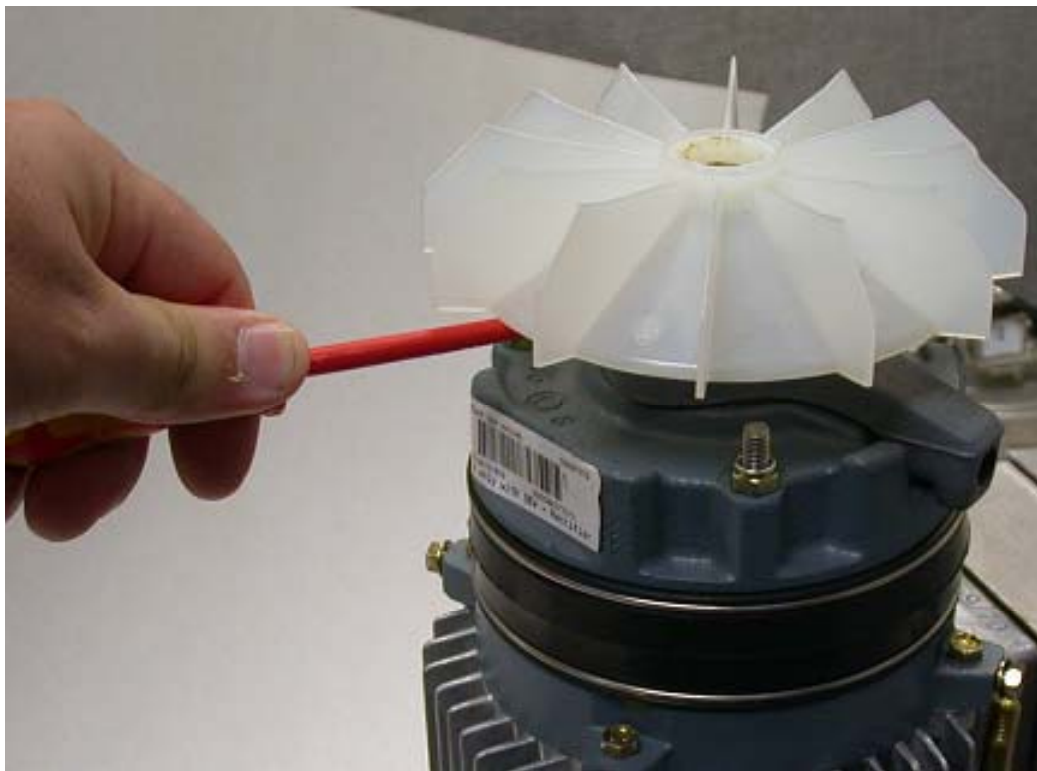

Step 6

- Using the flat tip screw driver, remove the 2 brake sealing band clamps (if applicable).




Step 7

- Remove the brake sealing band with the flat tip screwdriver, using caution not to damage the sealing band.



Step 8

- Using the metric feeler gauge, determine the current air-gap setting.

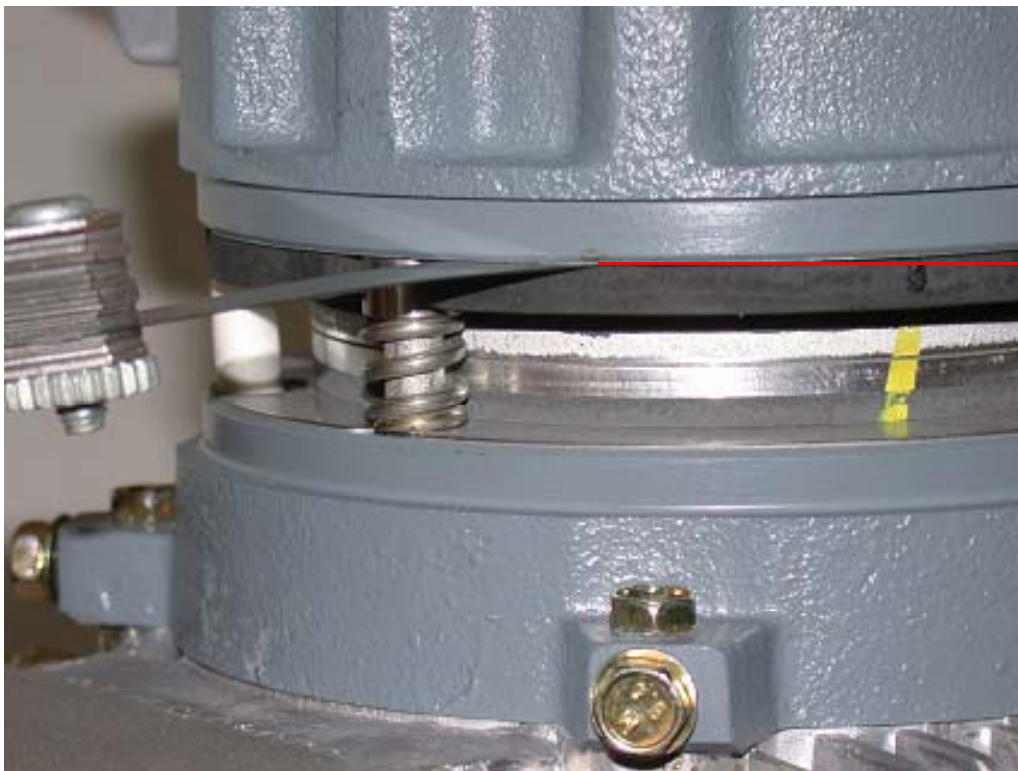

Caution!

The air-gap is located between the coil body and the stationary disc.

The measurement must be taken here for a proper reading.

Step 9

- To determine the proper air-gap, please refer to the first chart on page 4 of the Motor and Brakemotor Operating Instructions (Document # 09 793 77).

Re-adjusting the Brake Air Gap

A properly adjusted brake air gap is critical for correct operation. The following table indicates the required air gap measurement.

Motor Size	Brake Size	Air Gap
DT71 - DT100	BM(G)05 - BM(G)4	0.010"-0.024" (0.25-0.6 mm)
DV112 - DV225	BM(G)8 - BM31	0.012"-0.047" (0.3-1.2 mm)
DV180 - DV225	BM32-BM62 Double Disc	0.016"-0.047" (0.4-1.2 mm)
	BMG61	0.012"-0.047" (0.3mm - 1.2mm)
DV250 - DV280	BMG122 Double Disc	0.016"-0.047" (0.4mm-1.2mm)

Prolonged use of the brake will wear the brake disc lining. This wear increases the air gap. When the air gap approaches its maximum value, the brake must be re-adjusted. To re-adjust the brake, follow the procedure below.

- Remove the fan cover (14), fan snapping, fan (17), rubber seal (2), and any accessories at the fan end.
- Insert feeler gauge between the brake coil body (21) and the stationary (22), tighten the adjusting nuts (19) until the minimum value for the air gap is reached equally around the brake. With motor size 160L and brakes BM(G)05 to BM(G)8, first screw the threaded bushings (24) into indshield. After setting the air gap, lock the bushings (24) against oil body.

Free play of 0.06" to 0.08" (1.5 to 2 mm) in the releasing arm. See **Hand Release Mechanism**.

Measurement of the Brake Disc (26)

Operation of the brake may wear the brake disc (26) beyond ac limits. The thickness of the brake disc can be measured to determine if replacement is required.

Motor Size	Brake Size	Min. Disc (26) Thickness
- DT100	BM(G)5 - BM4	0.354" (9mm)
- DV225	BM(G)8 - BM62	0.394" (10mm)
- DV280	BM(G)61 - BMG122	0.472" (12mm)

If the brake disc (26) is worn below the measurement given, it must be replaced. If the thickness is greater than the specification above, the brake will not operate properly and the brake can be re-adjusted.

Hand Release Mechanism

Some brakes are supplied with a hand-operated release lever. This allows the brake to be released without applying power, allowing for adjustment of the driven machinery.

There are two brake release mechanisms available:

The "BMHR" (4) type requires a lever to be inserted into the release arm. To open the brake, pull the lever away from the motor. It will re-engage automatically, once the lever is released. The lever, when not used, is attached to the motor's cooling fins with clamps.

The screw-type "BMHF" (5) arrangement requires a hexagon key which, when turned clockwise, opens the brake.

Since the stationary disc (22) will move away from the coil body during the brake's operation, it is vital that there is free play (floating clearance) on the release arm of 0.060"-0.080" (1.5-2.0 mm). The springs (11) should be placed between the arm (7) and the nuts (12) to eliminate noise.

The brake release mechanism is not used to change the brake's torque setting. There must always be clearance on the lever.

Troubleshooting

Fault: Motor does not run

- Check the motor and brake wiring for damage and proper connection.
- At the motor, measure the line voltage, line current and motor resistance of all three phases.
- If all three phases read a similar current value the following conditions may exist:
 - The motor may be blocked by either an excessive external load, or problems in the reducer or the brake. In both cases, the motor should draw locked rotor (in-rush) current. Consult SEW-Eurodrive catalogs for these values. Release the brake mechanically, reset the air gap if needed, or disconnect the load from the output shaft.
 - If the brake is at fault electrically see #4 below.
 - If the current differs significantly from the rated locked rotor current, the motor is either an incorrect voltage, or it is jumpered for the wrong voltage.
- If the brake can be released mechanically, but does not respond to voltage, check the brake for electrical problems.
 - Make sure the wiring is according to the instructions. Pay special attention to the brake voltage.
 - Energize the brake circuit and measure the AC voltage on the rectifier terminals 2 and 3 (BG/BGE rectifiers). The measured voltage should correspond to the nameplate inscription: "Brake V."
 - Measure the DC voltage across terminals 3 and 5 of the brake rectifier which should be about 35% to 45% of the previously measured AC voltage.
 - If there is no fault found to this point, measure the resistance of the brake coils. Disconnect the coil from the rectifier for this measurement. See the table on Page 2 for the brake coil resistance values.
 - Measure the resistance of each brake coil lead to the brake coil body. This test should show an open circuit. If a short is found, the brake coil is damaged.

If the results of all these checks (electrical connection, mechanical checks and adjustments, and electrical tests) indicate that the brake should work, then the most likely cause of the brake's failure to release is a damaged brake rectifier.

Fault: Brake stopping time is too slow

If the brake has been operating well for some time and a gradual increase in stopping time has occurred, the release arm may have come in contact with the coil body. Verify that the brake release arm end play is correct, and check for excessive brake disc wear (see previous instructions).

If the brake has been in operation for some time, and the stopping time becomes erratic, dirt accumulation around the stationary disc guides may be the cause. Remove the brake's rubber sealing collar and clean with an air hose.


If the application is new, check the brake's wiring and air gap. If the brake is not wired for fast response, then changing the brake wiring to fast response will decrease the stopping time. Vertical motion and indexing applications may also require the fast response connection. Increasing the brake's torque may remedy the situation, but will also increase stress on the transmission.

On applications requiring excessive brake work, the lining's surface may become glazed due to extreme heat. The application of a BGE rectifier will improve this situation dramatically. BGE rectifiers are standard equipment on motor sizes DV112 - DV280, but optional on the smaller sizes DT71-DT100. Contact SEW-Eurodrive for more information.

Motor Size	Brake Size	Air Gap
DT71 - DT100	BM(G)05 - BM(G)4	0.010"-0.024" (0.25-0.6 mm)
DV112 - DV225	BM(G)8 - BM31	0.012"-0.047" (0.3-1.2 mm)
DV180 - DV225	BM32-BM62 Double Disc	0.016"-0.047" (0.4-1.2 mm)
	BMG61	0.012"-0.047" (0.3mm - 1.2mm)
DV250 - DV280	BMG122 Double Disk	0.016"-0.047" (0.4mm-1.2mm)

Step 10

- Using the metric feeler gage and the 10mm nut driver, tighten or loosen the three retaining nuts, until you achieve the proper air-gap.

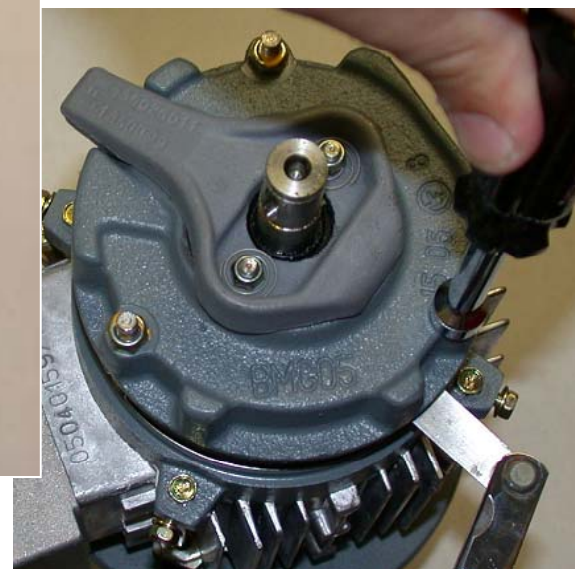



Caution!

Adjustments to the air-gap must be made evenly.

Adjust each nut and recheck adjustment once the final gap has been set.

Step 11

- Note: Any adjustment to the air gap will also affect the play in the manual release.

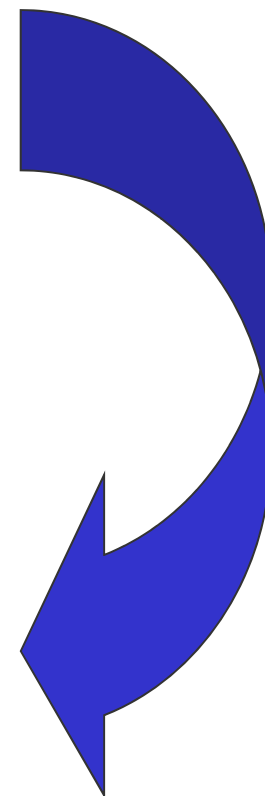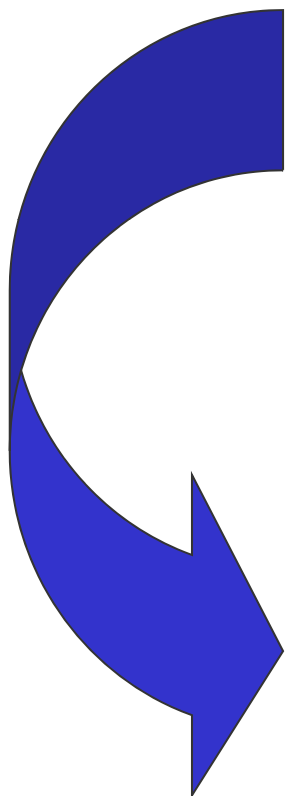

Step 12

- To determine the correct free play (clearance), please refer to the next to last paragraph on page 4 of the Motor and Brakemotor Operating Instructions (Document # 09 793 77).

Re-adjusting the Brake Air Gap
 A properly adjusted brake air gap is critical for correct operation. The following table indicates the required air gap measurement.

Motor Size	Brake Size	Air Gap
DT71 - DT100	BM(G)05 - BM(G)4	0.010"-0.024" (0.25-0.6 mm)
DV112 - DV225	BM(G)8 - BM31	0.012"-0.047" (0.3-1.2 mm)
DV180 - DV225	BM32-BM82 Double Disc	0.016"-0.047" (0.4-1.2 mm)
DV250 - DV280	BM(G)61	0.012"-0.047" (0.3mm - 1.2mm)
	BM(G)22 Double Disk	0.016"-0.047" (0.4mm-1.2mm)

Prolonged use of the brake will wear the brake disc lining. This wear increases the air gap. When the air gap approaches its maximum value, the brake must be readjusted. To readjust the brake, follow the procedure below.

- Remove the fan cover (14), fan snapping, fan (17), rubber seal (2), and any accessories at the fan end.
- Insert a feeler gauge between the brake coil body (21) and the stationary disc (22). Tighten the adjusting nuts (19) until the minimum value for the air gap is reached equally around the brake. With motor size 160L and up (brakes BM30 to BM52) first screw the threaded bushings (24) into the endshield. After setting the air gap, lock the bushings (24) against the nut.

Use a feeler gauge of 0.06" to 0.08" (1.5 to 2 mm) in the releasing arm. See the table below for the correct thickness.

Wear of the Brake Disc (26)
 Prolonged use of the brake may wear the brake disc (26) beyond acceptable limits. The thickness of the brake disc can be measured to determine when replacement is required.

Mo	Brake Size	Min. Disc (26) Thickness
100	BM(G)05 - BM4	0.254" (6mm)
225	BM8 - BM32	0.394" (10mm)
280	BM(G)61 - BM(G)22	0.472" (12mm)

If the brake disc (26) is worn below the measurement given, it must be replaced. If the thickness is greater than the specification above, the brake disc is still usable and the brake can be re-adjusted.

The Hand Release Mechanism
 Most of our brakes are supplied with a hand-operated release lever. This allows opening of the brake without applying power, allowing for adjustments on the driven machinery.

There are two brake release mechanisms available:

- The "BMHR" (4) type requires a lever to be inserted into the release arm. To open the brake, pull the lever away from the motor. It will reengage automatically, once the lever is released. The lever, when not used, is attached to the motor's cooling fins with clamps.
- The screw-type "BMHF" (5) arrangement requires a hexagon key which, when turned clockwise, opens the brake.

Since the stationary disc (22) will move away from the coil body during the brake's operation, it is vital that there is free play (floating clearance) on the release arm of 0.060"-0.080" (1.5-2.0 mm). The springs (11) should be placed between the arm (7) and the nuts (12) to eliminate noise.

The brake release mechanism is not used to change the brake's torque setting. There must always be clearance on the lever.

Troubleshooting
Fault: Motor does not run

- Check the motor and brake wiring for damage and proper connection.
- At the motor, measure the line voltage, line current and motor resistance of all three phases.
- If all three phases read a similar current value the following conditions may exist:
 - The motor may be blocked by either an excessive external load, or problems in the reducer or the brake. In both cases, the motor should draw locked rotor (in-rush) current. Consult SEW-Eurodrive catalogs for these values. Release the brake mechanically, reset the air gap if needed, or disconnect the load from the output shaft.
 - If the brake is at fault electrically see #4 below.

If the current differs significantly from the rated locked rotor current, the motor is either an incorrect voltage, or it is jumpered for the wrong voltage.

- If the brake can be released mechanically, but does not respond to voltage, check the brake for electrical problems.
- Make sure the wiring is according to the instructions. Pay special attention to the brake voltage.
- Energize the brake circuit and measure the AC voltage on the rectifier terminals 2 and 3 (BG/BGE rectifiers). The measured voltage should correspond to the nameplate inscription: "Brake V".
- Measure the DC voltage across terminals 3 and 5 of the brake rectifier which should be about 35% to 45% of the previously measured AC voltage.
- If there is no fault found to this point, measure the resistance of the brake coils. Disconnect the coil from the rectifier for this measurement. See the table on Page 2 for the brake coil resistance values.
- Measure the resistance of each brake coil lead to the brake coil body. This test should show an open circuit. If a short is found, the brake coil is damaged.

If the results of all these checks (electrical connection, mechanical checks and adjustments, and electrical tests) indicate that the brake should work, then the most likely cause of the brake's failure to release is a damaged brake rectifier.

Fault: Brake stopping time is too slow
 If the brake has been operating well for some time and a gradual increase in stopping time has occurred, the release arm may have come in contact with the coil body. Verify that the brake release arm end play is correct, and check for excessive brake disc wear, (see previous instructions).

If the brake has been in operation for some time, and the stopping has become erratic, dust accumulation around the stationary disc guides may be the cause. Remove the brake's rubber sealing collar and clean with an air hose.


If the application is new, check the brake's wiring and air gap. If the brake is not wired for fast response, then changing the brake wiring to fast response will decrease the stopping time. Vertical motion and indexing applications may also require the fast response connection. Increasing the brake's torque may remedy the situation, but will also increase stress on the transmission.

On applications requiring excessive brake work, the lining's surface may become glazed due to extreme heat. The application of a BGE rectifier will improve this situation dramatically. BGE rectifiers are standard equipment on motors size DV112 - DV280, but optional on the smaller sizes DT71-DT100. Contact SEW-Eurodrive for more information.


Since the stationary disc (22) will move away from the coil body during the brake's operation, it is vital that there is free play (floating clearance) on the release arm of 0.060"-0.080" (1.5-2.0 mm). The springs (11) should be placed between the arm (7) and the nuts (12) to eliminate noise.

Step 13

- Using the 8mm nut driver and the metric feeler gage, adjust the manual release arm until the proper amount of play is achieved.

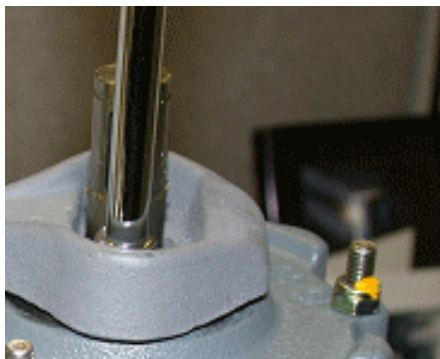

Verify the free play on the release arm.
adjust the locking nuts as needed to achieve
1.5 – 2.0 mm gap. (S Dimension)

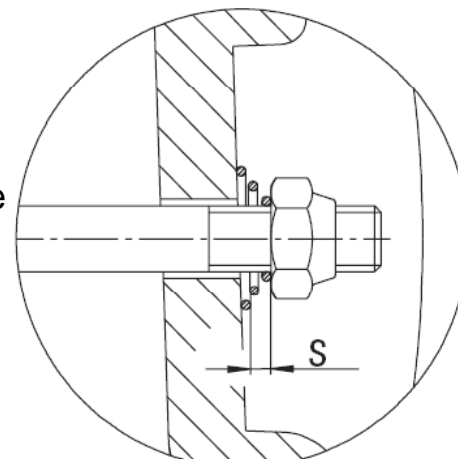


Caution!

There must always be clearance on the lever.

Note: The brake release mechanism is not used to change the brake's torque setting.


Step 14

- Using the flat tip screwdriver, re-install the rubber brake band, using caution to not damage the band.

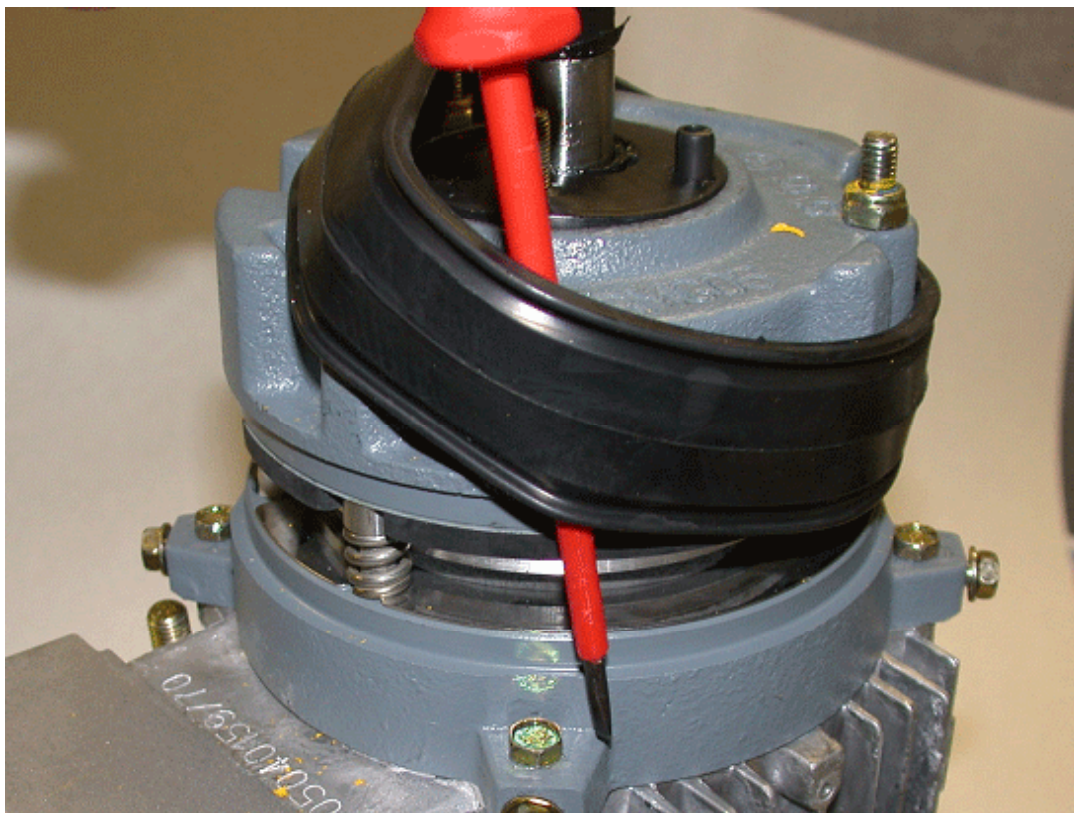


Step 15

- Re-install the 2 brake band clamps using the flat tip screwdriver.

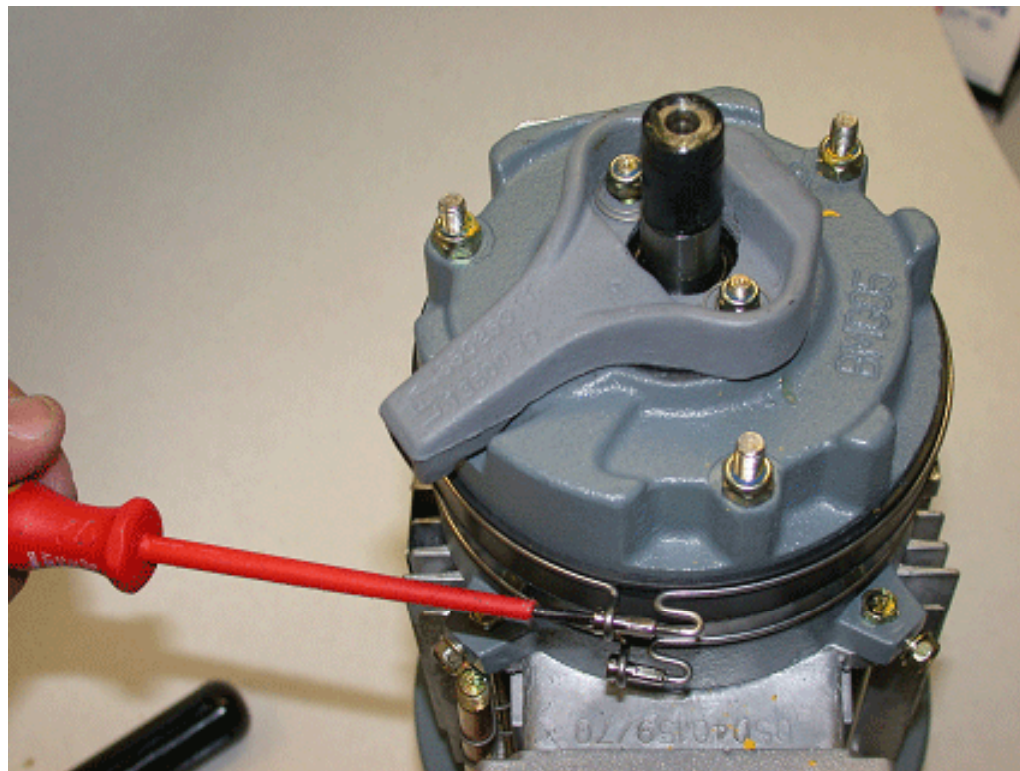

Step 16

- Re-install the fan.

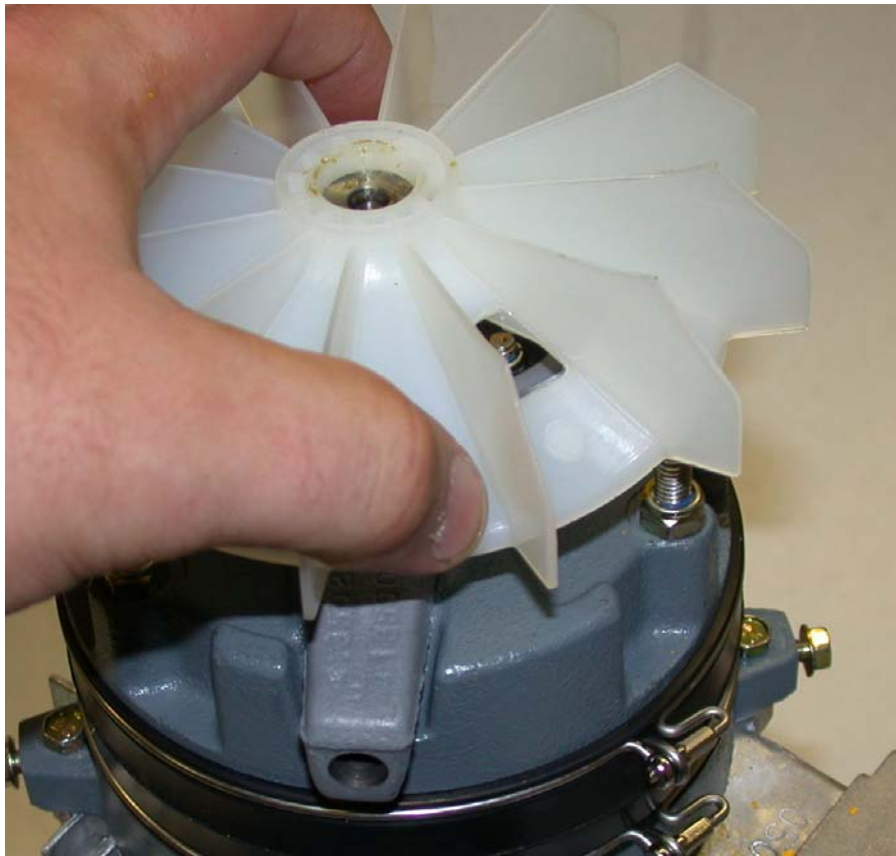

Z-Fan Instructions

Cast Iron Z-Fan Installation Instructions

Heat the Z-Fan in an oven to approximately 250 degrees Fahrenheit



1



2

Install the Z-fan



3

Install the Circlip




4

Return to Brake Adjustment


Step 17

- Re-install the snapping using the snapping pliers.

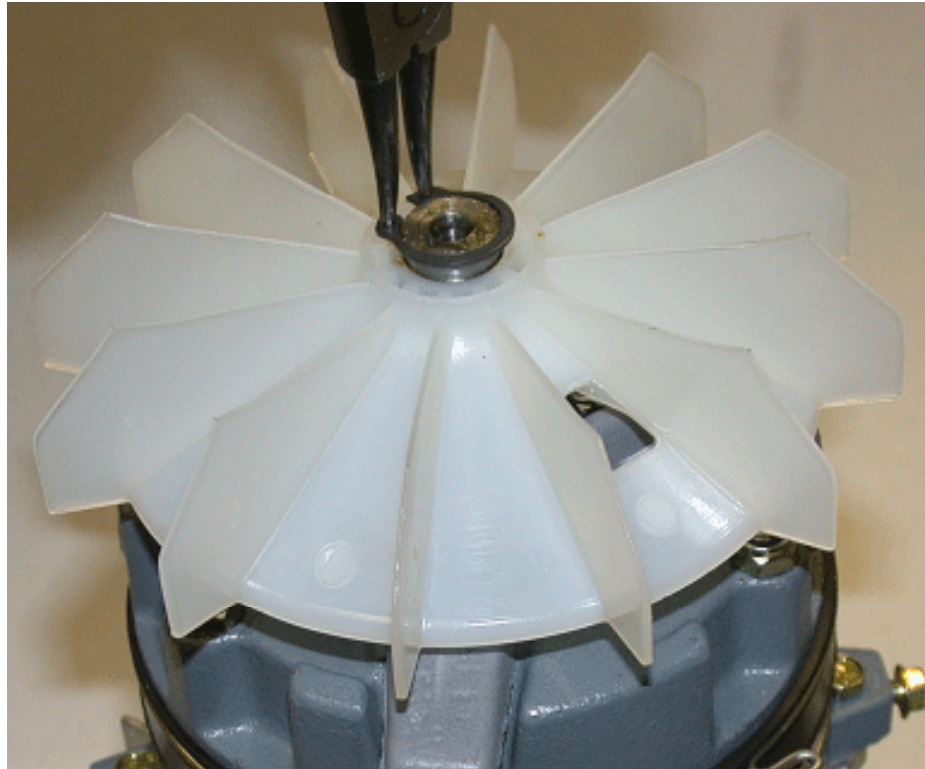

Step 18

- Re-install the motor fan guard, using the 8mm nut driver.

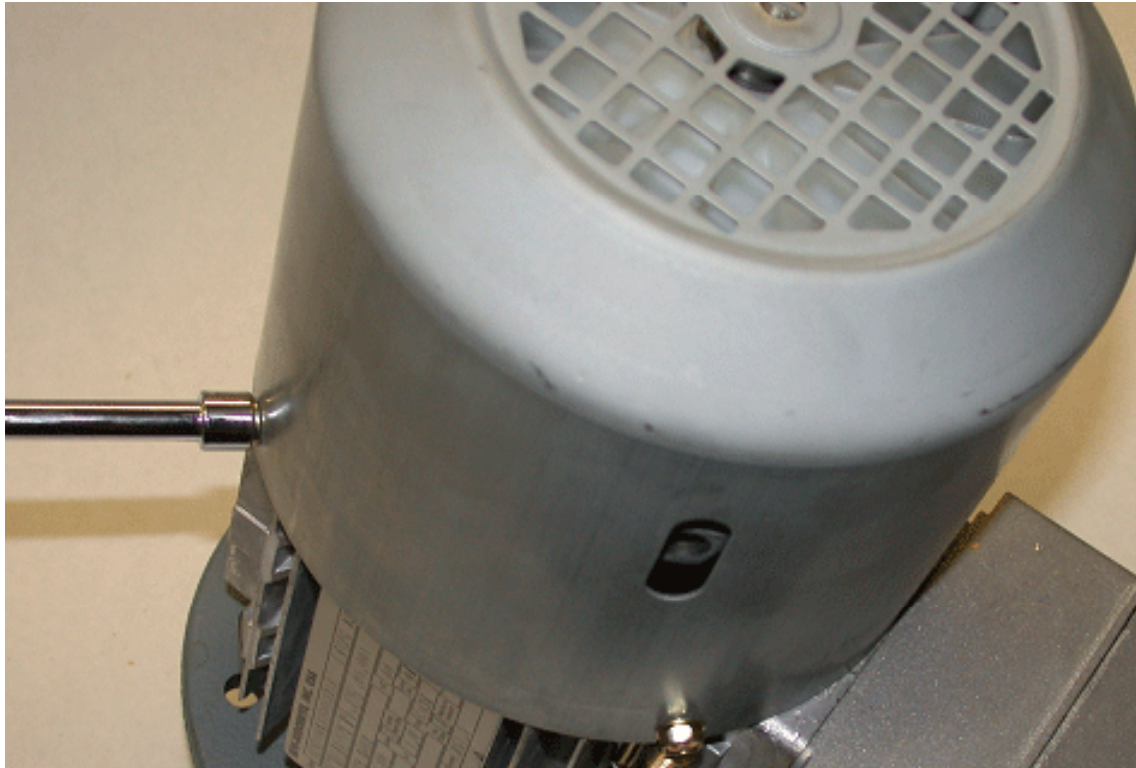

Step 19

- Reconnect power and confirm the proper operation of the brakemotor and attached equipment.

