



User's Manual

PWM 9

Diagnostic Kit

Software
508334-07

Contents

1 General	7
1.1 How to use this manual.....	7
1.2 Safety precautions.....	8
1.3 Calibration.....	10
1.4 Description of the components.....	11
1.4.1 Contents of the PWM case.....	11
1.4.2 PWM basic unit.....	12
1.5 Items supplied.....	13
1.6 Description of the PWM 9 phase angle measuring unit.....	17
1.7 PWM 9 functions.....	18
1.8 Power supply unit.....	19
1.9 Software.....	20
1.10 Description of the displays.....	21
2 Identifying the encoder output signals (encoder interfaces)	23
2.1 Incremental interfaces.....	23
2.2 Absolute interfaces.....	24
3 General measuring setup	25
3.1 Measuring equipment.....	25
3.2 Connecting the measuring equipment.....	25
4 Basic oscilloscope settings	27
4.1 Requirements to the oscilloscope.....	27
4.2 Analog interfaces 1 Vpp and 11 μ App.....	27
4.2.1 Measuring incremental signals.....	27
4.2.2 Measuring the reference mark signal.....	28
4.2.3 Measuring TTL/HTL square-wave signals.....	29
5 Measuring with PWM 9	31
5.1 Measuring in PWT MODE 11 μ App or 1 Vpp.....	31
5.1.1 Checking the signal quality in the PWT MODE.....	32
5.1.2 Checking the signal amplitude in the PWT MODE.....	33
5.1.3 Checking the reference mark signal in the PWT MODE.....	35
5.1.4 Tolerances for measuring the reference mark signal (examples).....	37
5.2 Adjustment aid for mounting the scanning heads of exposed encoders.....	38
5.2.1 Preparations.....	39
5.2.2 Beginning of measurement.....	42
5.2.3 Basic adjustment.....	42
5.2.4 Measurement: One reference mark.....	43
5.2.5 Measurement: Multiple reference marks.....	44
5.2.6 Messages in the PWT MODE.....	45
5.2.7 Errors during measurement.....	49
5.3 Measuring in the PWM MODE.....	51
5.3.1 Description of the PWM MODE display.....	52
5.3.2 Description of the soft-key row.....	53
5.3.3 Description of the INFO soft key.....	54
5.3.4 Description of the OPT soft key (options).....	55
5.3.5 Assignment of the BNC sockets.....	56
5.3.6 Changing the BNC sockets and memory assignment.....	56
5.3.7 Possible assignments of the BNC sockets.....	57
5.3.8 Display of on-to-off ratio and phase shift.....	59
5.3.9 MODE display.....	61
5.3.10 UNIVERSAL COUNTER MODE.....	62
5.3.11 Mode DETERMINE PULSE NUMBER.....	63
5.3.12 MEASURE U/I mode.....	66
5.3.13 MEASURE AMPLITUDE mode.....	70

5.4 EXPERT MODE	75
5.4.1 Selecting EXPERT MODE functions	75
5.4.2 Changing the U-MSYS supply voltage	76
5.4.3 Input of PRESET VALUE	77
5.4.4 PEAK HOLD	78
5.4.5 Description of PARAMETER programming	80
5.4.6 Parameter settings	81
5.5 Measuring with the multi-functional interface board	
1 Vpp, absolute, Zn/Z1, EnDat, SSI 91	
5.5.1 Encoders with Zn/Z1 track and 1 Vpp interface	91
5.5.2 Encoders with EnDat and 1 Vpp interface	92
5.5.3 Encoders with SSI and 1 Vpp interface (5 V operating voltage)	92
5.5.4 Encoders with programmable SSI and 1 Vpp interface (10 – 30 V operating voltage)	92
5.6 Operating the 1 Vpp absolute interface.....	93
5.6.1 Selecting the interface on the power-on screen	93
5.6.2 Selecting the interface via parameter	94
5.6.3 Fast changeover from AB to CD track	95
5.6.4 Possible settings when programmable SSI interface is selected	96
6 Activating another PWM measuring mode.....	99
6.1 General explanations of the different modes	99
6.2 Activating the PWT MODE.....	100
6.3 Switching from PWT MODE to PWM MODE.....	100
6.4 Switching from PWM MODE to PWT MODE.....	101
6.5 Activating the EXPERT MODE	102
6.6 Restoring the factory default configuration	102
7 Overview of the adapter cables.....	103
7.1 Adapter (assignment converter) for non-HEIDENHAIN wiring	103
7.2 1 Vpp and TTL interface boards.....	104
7.3 11 µApp interface board	105
7.4 HTL interface board.....	106
7.5 Interface board absolute / 1 Vpp, sinusoidal commutating signal Zn/Z1	107
7.6 Interface board absolute/1 Vpp, EnDat/SSI/SSI programmable encoders; measurement at encoder side	108
7.7 Interface board absolute/1 Vpp, EnDat encoders; measurement at control side	109
7.8 Interface board absolute/1 Vpp, motor encoders EnDat/SSI/ SSI programmable	110
7.9 TNC with 15-pin/25-pin D-sub connectors and 1 Vpp, TTL, 11 µApp interface boards (position encoders)	111
7.10 TNC with 25-pin D-sub connectors, Zn/Z1 (1 Vpp), EnDat (1 Vpp) (motor encoders)	112
7.11 Encoders with TTL → 11 µApp switch	113
7.11.1 Overview of TTL/11 µApp adapter cables and feed-through mode	114
7.11.2 Measuring TTL output signals in feed-through mode	114
7.11.3 Measuring 1 Vpp output signals in feed-through mode	115
7.11.4 Overview of adapter cables: Direct drives – incremental encoders	116
7.11.5 Overview of adapter cables: Direct drives – absolute encoders	117
7.12 FANUC TTL adapter	118
7.13 1 Vpp/DRIVE-CLiQ adapter cables.....	119
8 Interface description.....	121
8.1 General.....	121
8.2 Analog interfaces	121
8.2.1 Incremental signals11 µApp	121
8.2.2 Incremental signals 1 Vpp	123
8.2.3 Incremental signals1 Vpp with commutating signals	127

8.3 Square-wave interfaces	128
8.3.1 Incremental signals TTL with square-wave interface	128
8.3.2 Incremental signals HTL with square-wave interface	131
8.4 Absolute interfaces.....	134
8.4.1 Serial	134
8.4.2 Synchronous serial SSI	144
8.4.3 Synchronous serial SSI programmable	146
9 Pin layouts	151
9.1 Interface boards.....	151
9.2 Power supply connector (female).....	152
9.3 EnDat 2.1	153
9.4 SSI serial interface.....	154
9.5 Serial interface SSI programmable	154
9.6 Standard HEIDENHAIN cables	155
9.7 Motor encoders and absolute encoders.....	160
9.8 Adapter cable 17-pin/25-pin; PWM to subsequent electronics (Mot.Enc.1 Vpp).....	162
9.9 Round adapter, 9-pin/15-pin D-sub connector (Pos.Enc./Pos.Enc) (11 μ App).....	163
9.10 Connecting cable 1 Vpp/TTL/HTL, 12-pin/12-pin for PWM OUT.....	164
9.11 Connecting cable 1 Vpp 12-pin/12-pin for PWM IN.....	165
9.12 Connecting cable TTL/HTL 12-pin/12-pin for PWM IN.....	166
9.13 Connecting cable 1 Vpp 12-pin/12-pin for PWM OUT	167
9.14 Connecting cable TTL/HTL 12-pin/12-pin for PWM OUT.....	168
9.15 Connecting cable 11 μ App 9-pin/9-pin for PWM OUT.....	169
9.16 Connecting cable 11 μ App 9-pin/9-pin for PWM IN.....	170
9.17 Adapter cable 12-pin/15-pin; PWM to TTL D-sub subsequent electronics (Pos.Enc.)	171
9.18 Adapter cable 15-pin D-sub (Pos.Enc.); 9-pin (Pos.Enc.) for PWM OUT (1 Vpp)	172
9.19 Adapter cable 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT (1 Vpp)	173
9.20 Adapter cable 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT (TTL).....	174
9.21 Adapter connector 11 μ App 15-pin, assignment converter internal shield PIN 5 to PIN 13	175
9.22 Adapter cable 12-pin/12-pin; PWM to TTL interface electronics (APE) (Pos.Enc.)	176
9.23 Adapter cable 17-pin/17-pin; PWM to motor (Pos.Enc.EnDat)	177
9.24 Adapter TTL M23 12-pin (Pos.Enc.) \rightarrow 11 μ App M23 9-pin (Pos.Enc.).....	178
9.25 Adapter cable to IK 115 / IK 215 interface card	179
9.26 Adapter, round 12-pin/15-pin D-sub connector(Pos.Enc./Pos.Enc) (1 Vpp/TTL).....	180
9.27 Adapter with 14-pin PCB connector	181
9.28 Adapter cable TTL Sub-D 15-pin. (Pos.Enc.) \rightarrow 11 μ App M23, 9-pin (Pos.Enc.)	182
9.29 Adapter cable 17-pin/15-pin; PWM to subsequent electronics (Pos.Enc.EnDat).....	183
9.30 Adapter cable 17-pin/25-pin; PWM to subsequent electronics (Mot.Enc.EnDat)	184
9.31 Adapter cable 17-pin/17-pin; PWM to motor (Mot.Enc. 1 Vpp)	185
9.32 Adapter cable 17-pin/17-pin; PWM to motor (Mot.Enc.EnDat).....	186
9.33 Adapter connector Zn/Z1 ID 349312-01 transforming Mot.Enc. into Pos.Enc.	187
9.34 Adapter connector Zn/Z1 ID 349312-02 transforming Pos.Enc. into Mot.Enc.	188
9.35 Adapter connector EnDat/SSI ID 349312-03 transforming Mot.Enc. into Pos.Enc. ..	189
9.36 Adapter connector EnDat/SSI ID 349312-04 transforming Pos.Enc. into Mot.Enc. ...	190
9.37 Adapter cable for connecting the PWM to the PCB connector of the encoder	191
9.38 Adapter cable 12-pin/14-pin; PWM to encoders with M12 connectors (1 Vpp/TTL) .	192
9.39 Adapter cable 12-pin/15-pin; PWM to TTL interface electronics (APE) D-sub (Pos.Enc.)	193
9.40 Adapter cable 11 μ App 9/15-pin for PWM OUT	194
9.41 Adapter connector; coupling to connector; 12-pin; M23/M23 (1 Vpp/TTL).....	195
9.42 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector (Pos.Enc./Mot.Enc. 1 Vpp/ZnZ1 and 1 Vpp/ZnZ1).....	196
9.43 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector (Pos.Enc./Mot.Enc. 1 Vpp/EnDat).....	197

9.44 Adapter cable 17-pin/15-pin; TNC with 15-pin D-sub connector (Pos.Enc. 1 Vpp/EnDat)	198
9.45 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector (Pos.Enc./Mot.Enc. 1 Vpp/ZnZ1).....	199
9.46 Adapter cable 25-pin D-sub (Mot.Enc.); 12-pin (Pos.Enc.) for PWM IN.....	200
9.47 Adapter cable 17-pin/14-pin; PWM to encoders with M12 connectors (EnDat).....	201
9.48 Adapter cable FANUC TTL 20-pin / HEIDENHAIN TTL 12-pin	202
9.49 Adapter cable FANUC TTL 20-pin / HEIDENHAIN TTL 12-pin	203
9.50 Adapter cable 12-pin/12-pin; PWM to PCB connector (1 Vpp, TTL, HTL) (Pos.Enc.).	204
9.51 Adapter cable with 15-pin PCB connector.....	205
9.52 Adapter cable DRIVE-CLiQ 1 Vpp 12/25-pin for PWM OUT	206
10 FST 2 leak tester	207
10.1 Description	207
10.2 Explanation of the control elements.....	207
10.3 Application example	208
10.4 Specifications	209
11 ROD 486 rotary encoder	211
11.1 Description	211
11.2 Specifications	211
12 Specifications	213
12.1 PWM 9 basic unit	213
12.2 11 μ App interface board	216
12.3 1 Vpp interface board	217
12.4 1 Vpp absolute interface board.....	219
12.5 TTL interface board	221
12.6 HTL interface board.....	222
12.7 PWM power supply unit.....	223
13 Contacts.....	225
13 Your HEIDENHAIN helpline	225
13 The HEIDENHAIN technical helpline	225
13 HEIDENHAIN helpline for repairs, spare parts, exchange units, complaints and service contracts	225
13 Technical training.....	225

1 General

1.1 How to use this manual

About this manual

This User's Manual is valid for the PWM 9 Encoder Diagnostics Kit, ID 517651-09 with the software 508334-07.

Update service

This manual is regularly updated.

The current (printable) version is available on the Internet in PDF format: www.heidenhain.de



Note

Printed copies are only distributed to the participants of our service training courses and are enclosed with new test units.

Explanation of the symbols

Symbols represent the type of information.



Note

E.g., reference to more detailed information in another chapter.



Attention

E.g., indication of error messages that may be displayed or repetition of program steps.



DANGER

E.g., information that incorrect operation may cause the danger of electric shock or lead to the destruction of components.

Other documentation

For more information please refer to the following documentation:

- Documentation of the machine tool builder
- Interface descriptions (HEIDENHAIN)
- Mounting instructions of the encoders
- Encoder brochures (www.heidenhain.de)

Target group

The activities described in this manual may only be performed by specialists for service, maintenance and commissioning who have profound knowledge of electronics, electrical engineering and NC machine-tool technology.



Note

Keep these instructions for later reference!

Screen displays



Note

The pictures of displays in the manual depend on the encoder type connected and on the setting of the PWM. Thus, they may differ from your testing situation. The images only serve as examples!

1.2 Safety precautions




Note

Observe the safety precautions below to avoid injury or damage to persons or products. To avert potential dangers, only use the product in the manner described!

Before you integrate the test units into the position control loop of an NC-controlled machine tool make sure that

1. the machine is switched off
2. all connectors are disengaged
Observe the ESD precautions!

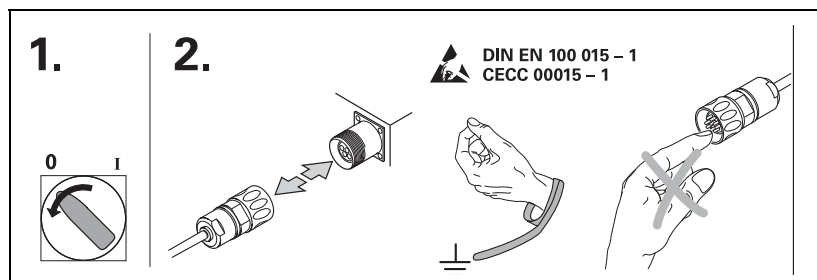

DANGER

Do not operate defective units!
Do not operate the device, if power cord, power supply unit or test unit are damaged!
Do not change any parameters or encoder voltages at the test units while the machine tool is moving and a test unit is connected to the position control loop!
Ensure that vertical axes cannot fall down!



Attention

Correct evaluation of the malfunction of an NC-controlled machine requires fundamental knowledge about the machine tool, its drives, inverters and NCs as well as their interaction with the measuring systems.

Improper operation of the NC, incorrect NC programming, or incorrect or non-optimized machine parameter values can lead to faulty machine performance.

Careless treatment or use may cause considerable damage or injury to property or persons.

HEIDENHAIN does not accept any responsibility for direct or indirect damage caused to persons or property through improper use or incorrect operation of the machine.

Apart from the information in this manual the general instructions for safety and the prevention of accidents must be observed.

The machine manufacturer must be contacted for error diagnosis.




Note

Support is provided by HEIDENHAIN Traunreut or by the HEIDENHAIN agencies, see "Contacts" on page 225

Note

Use protective caps to protect the connector contacts and the electronics from electrostatic charge and from contamination!

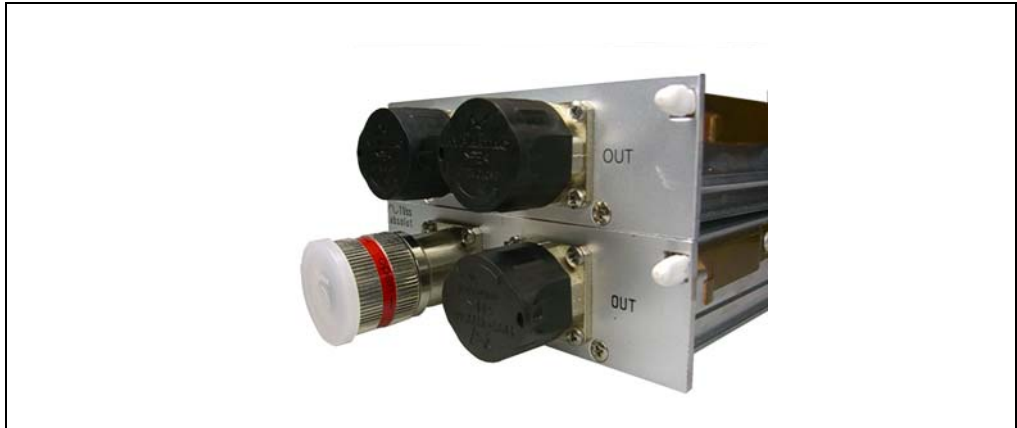

1.3 Calibration




In general the PWM is maintenance-free, since it does not contain any components that are subject to wear.

To ensure exact and correct operation we recommend sending the PWM incl. the interface boards to the calibration service of HEIDENHAIN Traunreut every 2 years.




Note

Calibration includes a software update!

<p>Calibration sticker on PWM 9</p>	
<p>Calibration sticker on the interface board</p>	
<p>Calibration date</p> <p>Recommended next calibration date</p>	

1.4 Description of the components



1.4.1 Contents of the PWM case


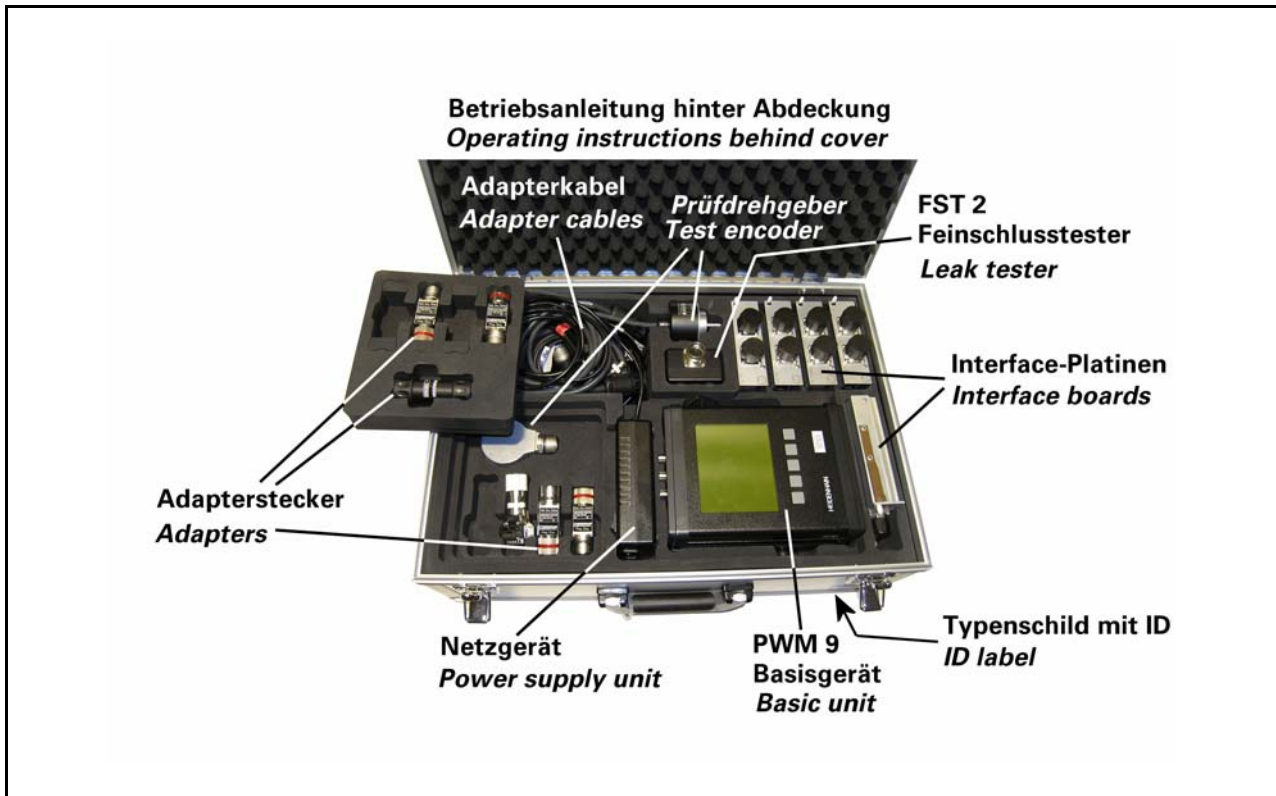


Note

Example configuration; the photos show the contents of the case with optional accessories!

1.4.2 PWM basic unit

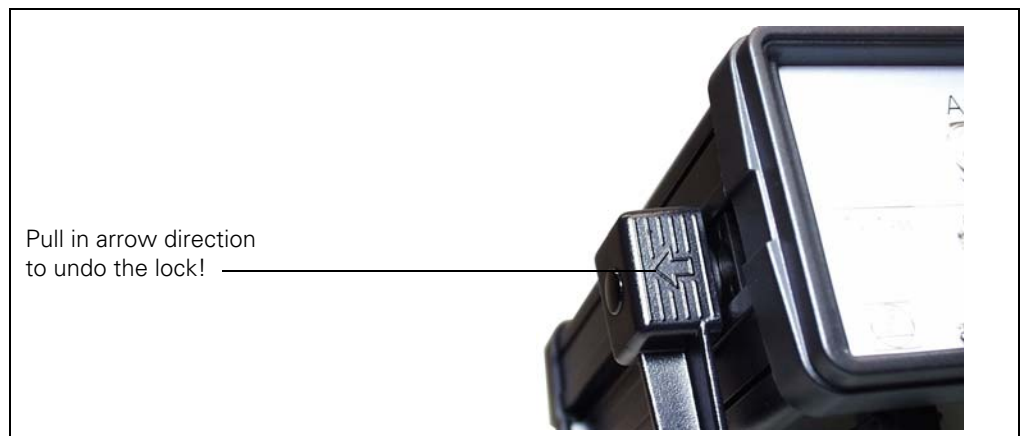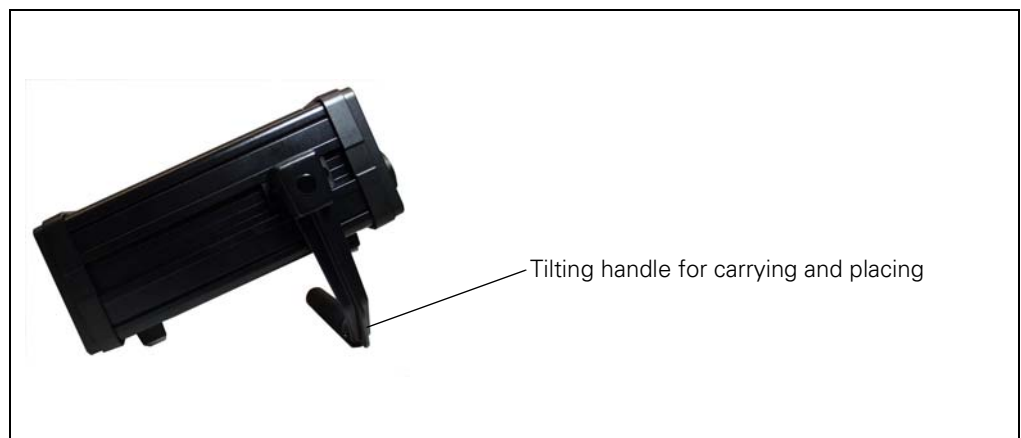

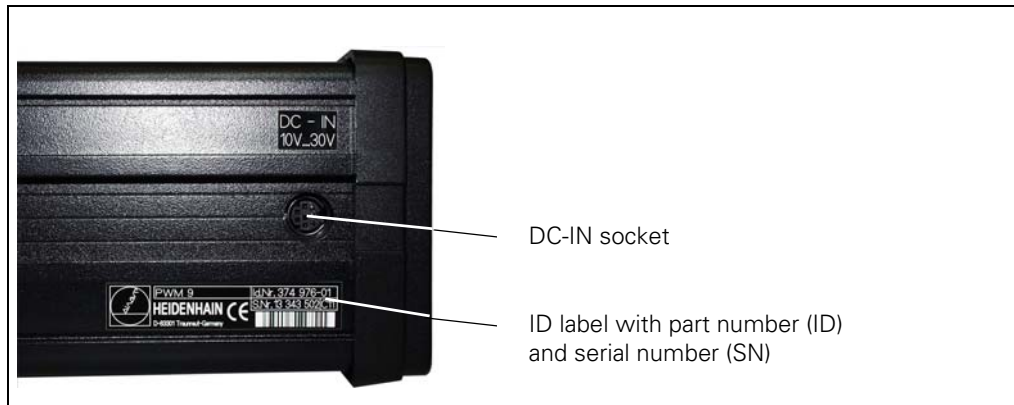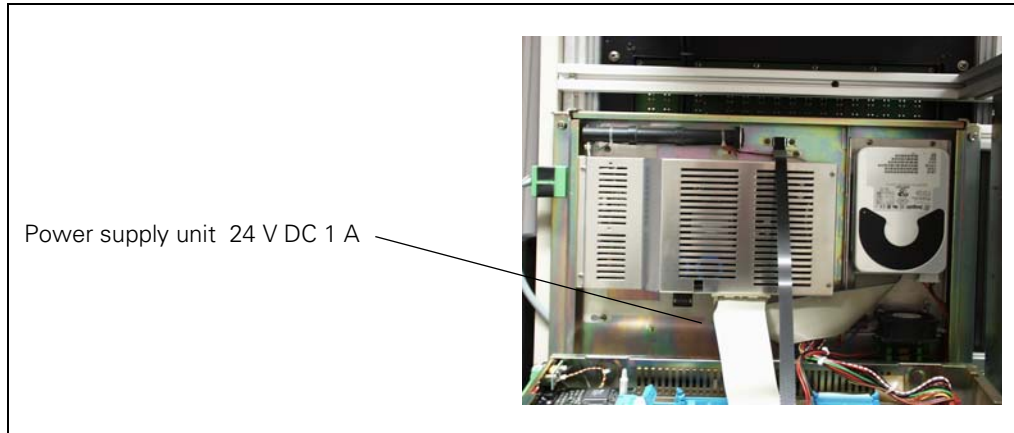

Note

State the ID number in all requests!

1.5 Items supplied

The PWM 9 universal testing device ID 512134-01 comprises:

Qty.	Designation	See chapter	ID
1	PWM 9 (basic unit)		374976-01
1	Power adapter (110 – 240 V)		313797-04
1	Power cable (3 m)		223775-01
1	Adapter cable (10 – 30 V DC, 3 m)		317293-01
3	BNC connecting cable		254150-02
1	Connecting cable 9-pin (11 μ App)	7.3	309773-01
1	Connecting cable 12-pin (1 Vpp, TTL, HTL)	7.2, 7.4	298399-01
1	Connecting cable 17-pin (absolute, 1 Vpp)	7.5, 7.6, 7.8, 7.10	323897-01
1	Aluminum case with foam padding		822051-01
1	Benutzerhandbuch, German		517651-0x
1	User's Manual, English		517651-2x

Options

Qty.	Designation	See chapter	ID	
1	Manuel d'Utilisation, French		517651-3x	
1	11 µApp interface board	7.3	323083-01	
1	Recommended accessories: FST 2 leak tester			251697-01
1	1 Vpp/11 µApp adapter connectors			364914-02
1	Adapter connector 15-pin D-sub (Pos.Enc.); 9-pin (Pos.Enc.) for PWM IN	7.3, 7.9	294894-02	
1	Connecting cable 11 µApp 9-pin/9-pin for PWM OUT	7.3	309773-xx	
1	Connecting cable 11 µApp 9-pin/9-pin for PWM IN	7.3	309774-xx	
1	Adapter cable 2 m, 15-pin D-sub (Pos.Enc.); 9-pin (Pos.Enc.) for PWM OUT	7.9	310198-02 289439-02	
1	Adapter cable 9/15-pin for PWM OUT	7.3	368171-xx	
1	Adapter connector 15-pin, assignment converter internal shield PIN 5 to PIN 13	7.3	317505-05	
1	1 Vpp interface board	7.2	323077-02	
1	Recommended accessories: ROD 486 rotary encoder (1000 lines) for testing			376886-0H
1	Adapter connector Female connector/male connector (1 Vpp or TTL)			373848-01
1	Adapter cable 12-pin/15-pin; PWM to TTL D-sub subsequent electronics (Pos.Enc.)	7.11.1	310196-xx	
1	Adapter cable 12-pin/15-pin; PWM to TTL interface electronics (APE) D-sub (Pos.Enc.)	7.11.1	331693-xx	
1	Adapter cable 12-pin/12-pin; PWM to TTL interface electronics (APE) (Pos.Enc.)	7.11.1	323466-xx	
1	Adapter cable 2 m, 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT	7.9	310199-02	
1	Adapter, round 12-pin/15-pin D-sub connector (Pos.Enc./Pos.Enc.) (1 Vpp/TTL)	7.2, 7.9	324555-01	
1	Adapter cable 12-pin/14-pin; PWM to encoders with M12 connectors (1 Vpp/TTL), (Pos.Enc.)	7.2	352611-03	
1	Adapter cable 1 m, 25-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM IN	7.9	533055-01	
1	Adapter cable DRIVE-CLiQ , 1 m, 25-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM IN	7.13	533055-01	
1	Adapter cable 12-pin/12-pin; PWM to PCB connector (1 Vpp, TTL, HTL) (Pos.Enc.)	7.2, 7.4	591118-xx	
1	Adapter cable DRIVE-CLiQ , 12-pin/25-pin for PWM OUT	7.13	758082-01	
1	Connecting cable 12-pin/12-pin for PWM OUT	7.2	298399-xx	
1	Connecting cable 12-pin/12-pin for PWM OUT	7.2	298401-xx	
1	Connecting cable 12-pin/12-pin for PWM IN	7.2	298400-xx	
1	TTL interface board	7.12	323079-01	
1	Adapter cable FANUC TTL 20-pin/HEIDENHAIN TTL 12-pin female			556558-xx
1	Adapter cable FANUC TTL 20-pin/ HEIDENHAIN TTL 12-pin male			577345-01

Qty.	Designation	See chapter	ID
1	Adapter cable 2 m, 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT	7.9	310199-02
1	Connecting cable 12-pin/12-pin for PWM OUT	7.2	298399-xx
1	Connecting cable 12-pin/12-pin for PWM OUT	7.2	298401-xx
1	Connecting cable 12-pin/12-pin for PWM IN	7.2	298400-xx
1	HTL interface board	7.4	322732-01
1	Connecting cable 12-pin/12-pin for PWM OUT	7.4	298399-xx
1	Connecting cable 12-pin/12-pin for PWM OUT	7.4	298401-xx
1	Connecting cable 12-pin/12-pin for PWM IN	7.4	298400-xx
1	Absolute/1 Vpp interface board Recommended accessories:	7.5	312186-02
1	Adapter connector Zn/Z1 transforms Mot.Enc. into Pos.Enc.	7.5	349312-01
1	Adapter connector Zn/Z1 transforms Pos.Enc. into Mot.Enc.)	7.5	349312-02
1	Adapter connector EnDat/SSI transforms Mot.Enc. into Pos.Enc.	7.8	349312-03
1	Adapter connector EnDat/SSI transforms Pos.Enc. into Mot.Enc.	7.8	349312-04
1	Connecting cable 1 m: incremental Zn / Z1 (Mot.Enc.)	7.5	336847-10
1	Connecting cable 1 m: absolute EnDat (Mot.Enc.)	7.8	340302-01
1	Adapter cable 1 m with 12-pin PCB connector for 1 Vpp encoders (EnDat or SSI; Pos.ENC.EnDat)	7.8	349839-02
1	Adapter cable 1 m with 14-pin PCB connector for 1 Vpp encoders with Zn/Z1 track (Pos.Enc.EnDat)	7.5	330980-01
1	Adapter cable 1 m with 15-pin PCB connector for absolute EnDat encoders (Pos.ENC.EnDat)	7.8	635349-01
1	Adapter cable 3 m, 17-pin/17-pin; PWM to motor (Pos.Enc.EnDat)	7.5, 7.6	323897-03
1	Adapter cable 2 m, to IK 215 interface card	7.6, 7.7	324544-02
1	Adapter cable 3 m, 17-pin/15-pin; PWM to subsequent electronics (Mot.Enc.EnDat)	7.6, 7.7	332115-03
1	Adapter cable 0.3 m, 15-pin D-sub (Pos.Enc.); 17-pin (Pos.Enc.) for PWM OUT	7.7	510617-N3
1	Adapter cable 3 m, 17-pin/25-pin; PWM to subsequent electronics (Mot.Enc.1 Vpp)	7.5, 7.10	289440-03
1	Adapter cable 3 m, 17-pin/15-pin; PWM to subsequent electronics (Mot.Enc.EnDat)	7.8, 7.10	336376-03
1	Adapter cable 0.3 m, 25-pin D-sub (Mot.Enc.); 17-pin (Pos.Enc.) for PWM IN	7.10	509666-N3
1	Adapter cable 0.3 m, 25-pin D-sub (Mot.Enc. 1 Vpp/EnDat), 17-pin (Pos.Enc. 1 Vpp/EnDat) for PWM OUT	7.10	509667-N3
1	Adapter cable 0.3 m, 25-pin D-sub (Mot.Enc. 1 Vpp/ZnZ1), 17-pin (Pos.Enc. 1 Vpp/ZnZ1) for PWM OUT	7.10	511886-N3
1	Adapter cable 0.3 m, 15-pin D-sub (Pos.Enc.); 17-pin (Pos.Enc.) for PWM IN	7.6, 7.7	510616-N3
1	Voltage controller 5 V for cable lengths > 6 m (Pos.Enc.EnDat); HEIDENHAIN	7.6, 7.8	370225-01
1	Voltage controller 5 V for cable lengths > 6 m (Mot.Enc.EnDat); Siemens	7.8	370224-01

Other connecting cables and adapter cables: See illustrations in this manual.



Note

Other cable lengths on request!
Application of the adapter cables: see "Overview of the adapter cables" on page 103.

1.6 Description of the PWM 9 phase angle measuring unit

PWM 9 is a universal measuring unit for inspecting and adjusting HEIDENHAIN incremental linear and angle encoders.

The device features **PWT MODE** and **PWT MODE** functionalities.

The graphic bar display in the PWT MODE facilitates the quantitative and qualitative assessment of the analog incremental signals and of the reference signal. The integrated adjustment aid (PWT MODE) for exposed encoders is of help when mounting the scanning head.

In the PWT MODE on-to-off ratio, phase angle, encoder current consumption and encoder voltage are measured and settings made that are relevant for PWM 9.

A number of interface boards are available for checking the different encoder output signals; they can be inserted easily into the PWM from outside.

The values can be read on an LCD monitor. Five soft keys provide ease of operation.

Three BNC sockets (A/B/C) are available for checking the encoder output signals on an oscilloscope (recommended by HEIDENHAIN).

PWM 9 can be connected in series between the encoder and the subsequent electronics.

It does not influence the axis functions of the machine axes.

For inspecting and adjusting HEIDENHAIN measuring systems "at the workplace", the PWM 9 can also be used without subsequent electronics.

1.7 PWM 9 functions

PWM 9 features three operating modes:


PWT MODE (power-on MODE)

Graphic bar display of

- Signal amplitude
- Signal quality
- Width of reference signal
- Position of reference signal


Check-Ref function

- Adjusting aid for mounting the scanning heads of exposed encoders
- Check of distance-coded reference marks

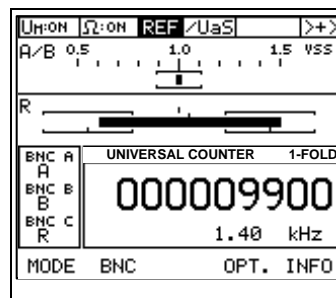

PWM MODE

- Display of phase angle and on-to-off ratio
- Display of scanning frequency
- Display of signal amplitude, current consumption and encoder supply voltage
- Display of internal UNIVERSAL COUNTER and of encoder signal periods (pulse count)
- Display of reference signal, fault-detection signal and counting direction
- Output of the amplified scanning signals (11 μ App, 1 Vpp interface boards) or of the original scanning signals (TTL, HTL interface boards) via three BNC sockets (e.g. to an oscilloscope)

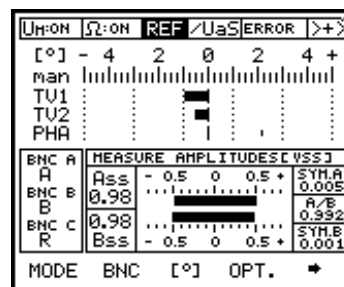

EXPERT MODE

- Access to parameter programming (e.g. interpolation setting)
- Input of a preset value for the internal UNIVERSAL COUNTER
- Setting the encoder voltage
- Min./max. PEAK-HOLD function of the PHA/TV display



1.8 Power supply unit

Possibilities of powering PWM 9

- Line operation with 24 V PWM power supply unit (included in delivery)
- Power supply from an external floating DC voltage source 10 – 30 V/approx. 1 A (adapter cable included in delivery)
- Via subsequent electronics with measuring system, PWM 9 and subsequent electronics connected in series
(Note: Power consumption of PWM 9 is approx. 5.5 W)
The type of encoder power supply (PWM or subsequent electronics) is selected via the PWM 9 soft keys.
If a voltage is connected to the DC-IN socket of the PWM 9, the PWM 9 basic unit is always powered from this source.

If PWM 9 and/or the measuring system are to be powered by the subsequent electronics,

- the encoder voltage monitor of the subsequent electronics is active.
- you can select how the encoder voltage of the subsequent electronics is fed to the encoder via PWM 9:
 1. Directly to the encoder (with parameter P2 in EXPERT-MODE and soft key)
 2. Via the switching controller (integrated in the PWM 9) with potential segregation and possibility of setting the encoder voltage.



Note

Detailed description see "Parameter P2 = Selection of encoder operating voltage" on page 81

1.9 Software

The software version is displayed on the power-on screen and when you press the INFO soft key (see "Description of the INFO soft key" on page 54).

On the power-on screen the PWM 9 offers the possibility of selecting German, English or French dialogs:

Dialog	Software no.
German / English / French	508334-xx ^{a)}


a) The last two digits (xx) of the software number represent the software version.

The software is continuously improved and adapted to new conditions. We recommend that at least every two years you have the software updated by HEIDENHAIN Traunreut or by a HEIDENHAIN agency (see "Calibration" on page 10).



Attention

This manual applies to PWM 9 with the software 508334-07.

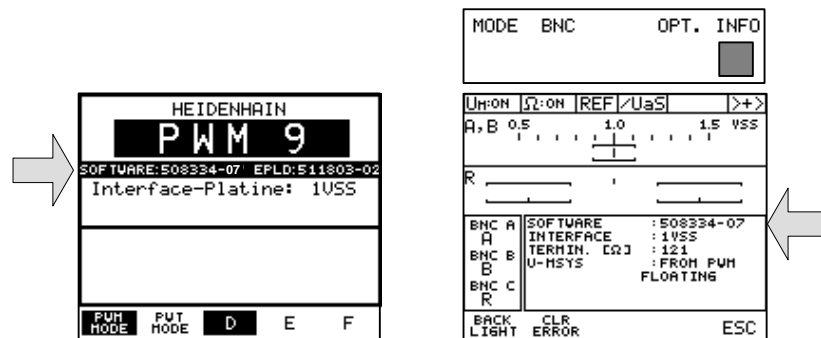

1.10 Description of the displays

Power-on screen

The screenshot shows the following information:

- 1**: PWM 9 HEIDENHAIN
- 1**: SOFTWARE: 508334-xx EPLD: 511803-xx
- 1**: Interface-Platine: 1USS
- 1**: EXPERT-MODE PROG. SSI
- 11**: KORREKTURWERTE VORHANDEN
- NETZTEIL 10 VOLT JA
- U/I - MESSEN JA
- AMPLITUDEN MESSEN -A JA
- AMPLITUDEN MESSEN -R JA
- 2**: FUH MODE PUT MODE D E F

11 Internal calibration values (JH Service only)

PWT mode

The screenshot shows the following information:

- 3**: UH:ON [Ω:OFF] REF / UaS [>+>]
- 4**: A/B 0,5 1,0 1,5 VSS
- 5**: R
- 6**: BNC A UNIVERSAL COUNTER 40-F
- 6**: A 001239665
- 6**: B
- 6**: BNC C 2.35 kHz
- 6**: R
- 7**: MODE BNC OPT. INFO
- 8**: (Current assignment of the BNC sockets)

3 Concurrent encoder status display
4 Signal amplitude / signal quality
5 Width and position of ref. mark
6 Display for different PWM modes (here: UNIVERSAL COUNTER and frequency)
7 Soft-key row for operation
8 Current assignment of the BNC sockets

PWM mode

The screenshot shows the following information:

- 9**: UH:ON [Ω:ON] REF / UaS [>+>]
- 9**: [°] - 8 4 0 4 8 +
- 9**: man
- 9**: TV1
- 9**: TV2
- 9**: PHA
- 10**: BNC A UNIVERSAL COUNTER 40-F
- 10**: A 000096916
- 10**: B
- 10**: BNC C 1.00 kHz
- 10**: R
- 10**: MODE BNC [°] OPT. INFO

9 Measuring range and scaling of PHA / TV display
10 Display of **PHA**se shift / **Tast**Verhältnis (on-to-off ratio)
 TV1 = 0° signal
 TV2 = 90° signal

2 Identifying the encoder output signals (encoder interfaces)

2.1 Incremental interfaces

Identification from the encoder designation




Note

The identification of the interface type is valid for standard HEIDENHAIN encoders.
Deviations from the designation structure are possible (in particular with customer-specific encoders).


Example					Nomenclature
Linear encoder	LS	4	8	6	0 = 11 μApp 2 = TTL without interpolation 3 = HTL (only rotary encoders, e.g. ROD 436) 5 = 11 μApp (e.g. ROD 450, LIDA 150 old) 6 = TTL (supply voltage 10 – 30 V! TTL signals, only rot. encoder applications) 7 = TTL with interpolation (x5, x10, x50, x100) 8 = 1 Vpp
Rotary encoder	ROD	4	2	6	
Modular rotary encoder	ERN	13	8	7	
Scanning head	LIDA	4	7		
Exposed linear encoder	LIDA	4	7	5	

Other identifiers


- A 9-pin M23 connector always means an 11 μ App interface.
(Exception: Current motor connector)



- Encoders connected to the encoder inputs of **EXE** interpolation electronics are always 11 μ App encoders (9-pin connector)



- Encoders connected to the encoder inputs of **IBV** interpolation electronics are always 1 Vpp encoders (12-pin connector)



Note

For encoders with D-sub connectors no conclusions can be drawn about the interface.

2.2 Absolute interfaces

- Encoders with a **C** or **Q** in their names operate with an absolute interface (EnDat, SSI or customer-specific)

Examples:

L **C** 415 E **C** N413 E **Q** N425 RO **C** 431 RO **Q** 425

Differences of absolute interfaces:

- 1** = EnDat purely serial, without A/B signals
- 8** = EnDat with A/B signals (1 Vpp)
- 9** = Customer-specific interface produced by HEIDENHAIN: LC 495

Legend:

- F** = Fanuc
- M** = Mitsubishi
- P** = Panasonic
- Y** = Yaskawa
- S** = SIEMENS (DRIVE-CLiQ)

Designations of rotary encoders:

- ROC** = Singleturn (measuring range 1 revolution, 360°)
- ROQ** = Multiturn (with gear, e.g. for 4096 revolutions)

Note: An orange bracket points from the '431' in 'RO C 431' to the text 'Position value 31 bits (rotary encoder)'.

There are EnDat encoders with and without incremental A/B sinusoidal signals.

The **order designation** indicates whether an absolute encoder outputs incremental signals:

EnDat 21 **without** incremental signals

EnDat 22 **without** incremental signals

EnDat 01 **with** incremental signals A/B 1 Vpp

EnDat 02 **with** incremental signals A/B 1 Vpp

EnDat Hx **with** incremental signals HTL (new as of 2014)

EnDat Tx **with** incremental signals TTL (new as of 2014)

x stands for: **a** = 2-fold interpolation

b = no interpolation

c = scanning signals x2



Note

Encoders with Siemens DRIVE-CLiQ interface cannot be examined!

In general, absolute encoders can only be checked to a limited extent with the PWM 9.


In this case, the absolute signals can only be measured with a digital oscilloscope via the BNC outputs.

Absolute interfaces can be examined with the successor models PWM 20 and PWM 21.

For detailed information on the interfaces refer to the brochure "Interfaces of HEIDENHAIN Encoders", ID 1078628-xx.

3 General measuring setup

3.1 Measuring equipment

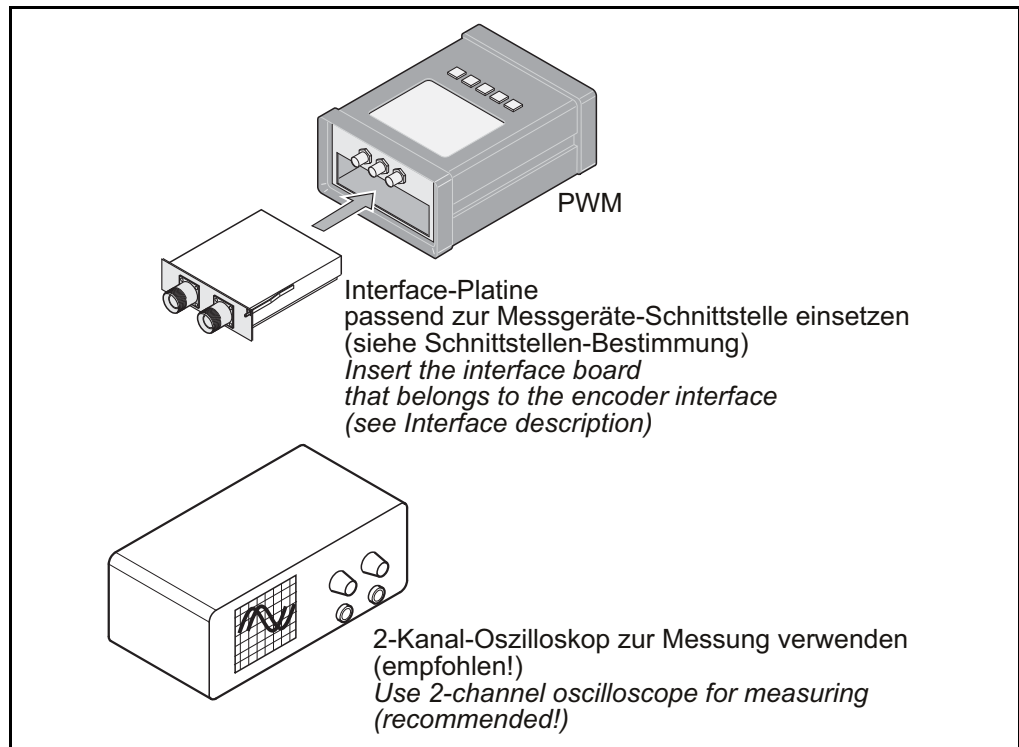


3.2 Connecting the measuring equipment



DANGER


Ensure that machine and PWM are off when you connect the equipment!

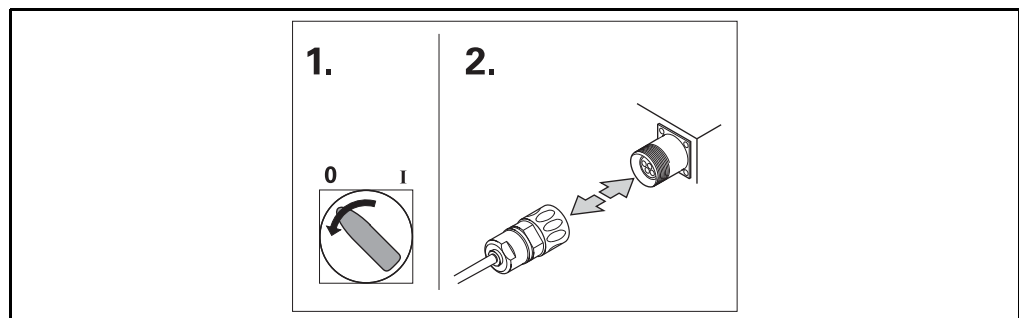

DANGER

Do not deactivate or alter any voltages or parameters at the PWM, while operating the PWM in the position control loop!

Uncontrolled axis movements may occur!

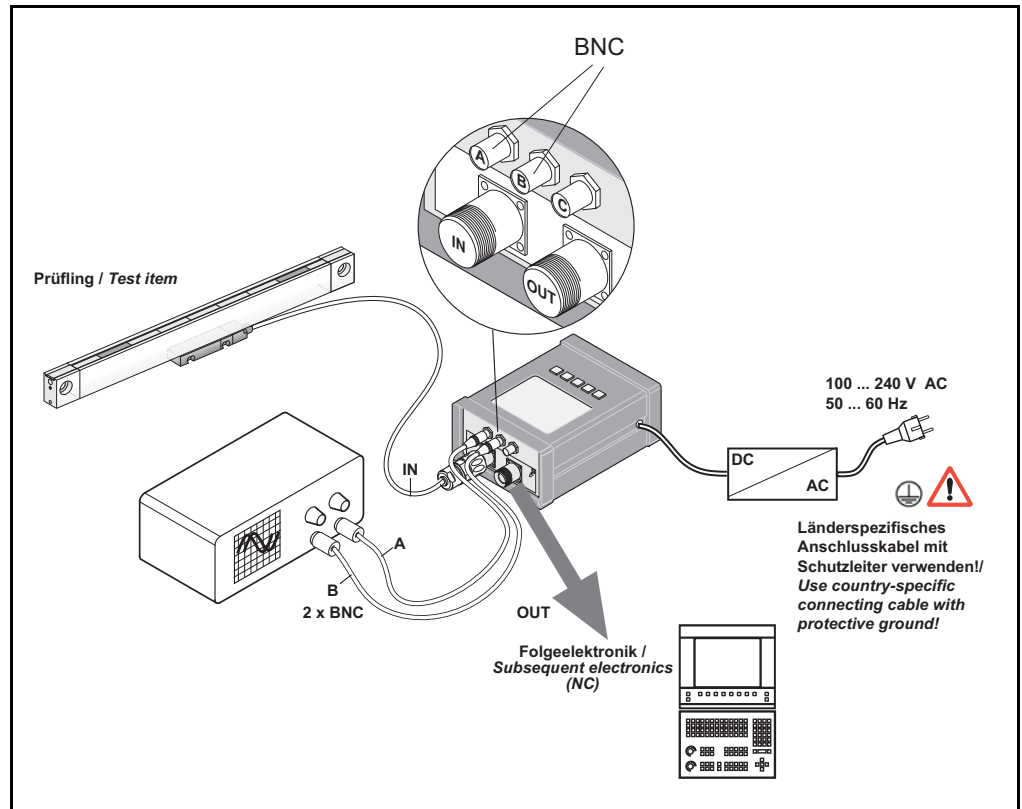

- Connect the encoder (test item) with the "IN" input of the PWM.
- Connect the oscilloscope to the PWM (BNC A and BNC B) using two BNC cables.
- Connect the subsequent electronics to PWM "OUT".
- Switch on the PWM power supply unit.
- Switch on the subsequent electronics.



Note

For connection to the power supply system the protective ground of the PWM 9 must be connected. (Do not use an isolating transformer!) Otherwise, signal errors may be produced!

If possible, use the power socket on the machine to power the PWM.
Power the PWM 9 and the oscilloscope from the same power socket.

4 Basic oscilloscope settings

4.1 Requirements to the oscilloscope

- Analog or digital storage oscilloscope (DSO) with two channels
- Chopper mode
- Automatic and manual triggering




Note

Supportive measurement with an oscilloscope is recommended!

4.2 Analog interfaces 1 Vpp and 11 μ App

4.2.1 Measuring incremental signals

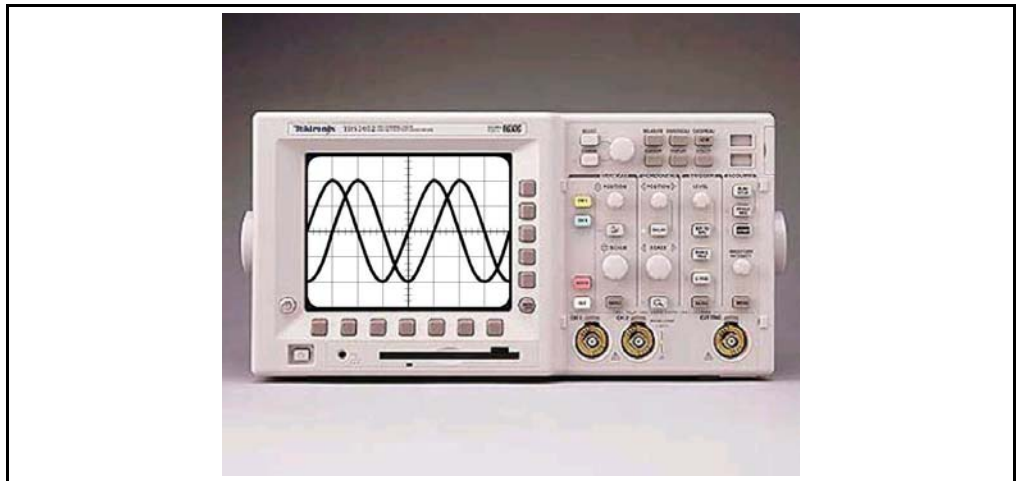

Note

The names of the oscilloscope operating elements are not standardized and may differ from your device!

Vertical deflection (voltage sensitivity)

- Switch channels A and B to chopper mode (**CHOP**)
- Set the deflection coefficient (**sensitivity**) of channels A and B
for 11 μ App encoder: **0.5 V/DIV**
for 1 Vpp encoder: **0.2 V/DIV**

Horizontal deflection (time setting)


- Set the time coefficient (**Time basis**) to **0.5 ms/DIV**

Triggering

- Trigger automatically (**AUTO**)
- Trigger on **channel A**
- Trigger on **positive edge**


Calibration of the two oscilloscope channels

- Set the input coupling switch (AC/DC/GND) of the channels A and B to ground **GND**
- Use the Y-position potentiometers to shift the lines of the channels A and B congruently to the **screen center** (see fig.)

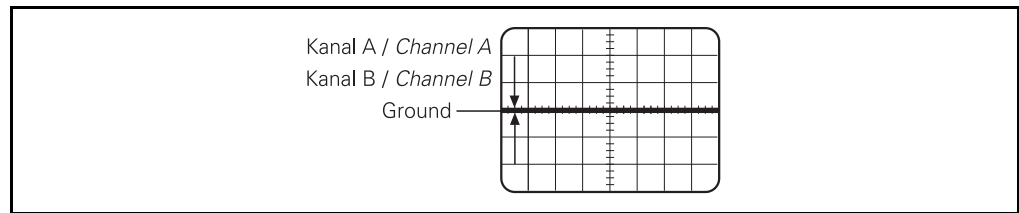

- Set the input coupling switch (AC/DC/GND) of the channels A and B to **DC**

4.2.2 Measuring the reference mark signal

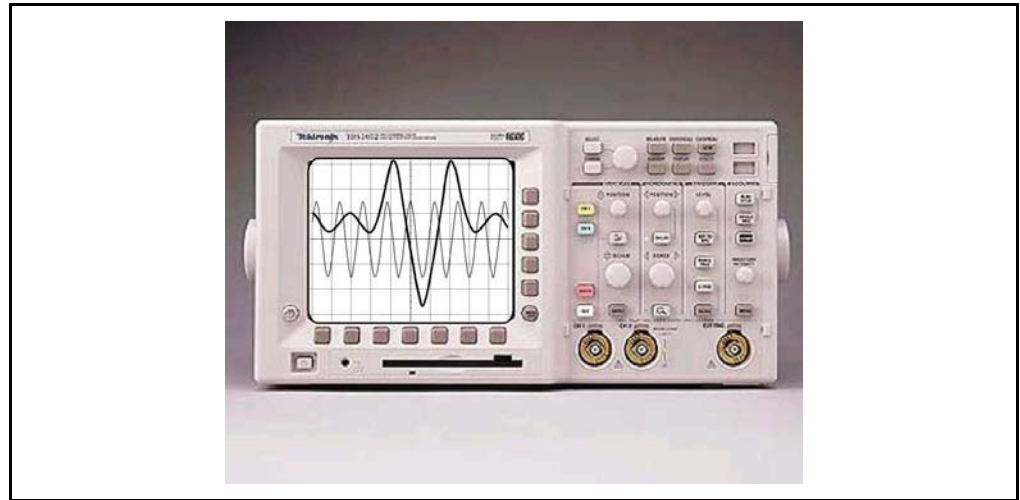

Vertical deflection (voltage sensitivity)

- Switch channels A and B to chopper mode (**CHOP**)
- Set the deflection coefficient (**sensitivity**) of channels A and B
 - for 11 μ App encoder: **0.5 V/DIV**
 - for 1 Vpp encoder: **0.2 V/DIV**

Horizontal deflection (time setting)

- Set the time coefficient (**Time basis**) to **0.5 ms/DIV**


Triggering

- **Manual triggering** (AC or DC)
- Trigger on **channel A**
- Trigger on **negative edge**



Note


Traverse the reference mark to be examined in an oscillating manner ("forward/backward").

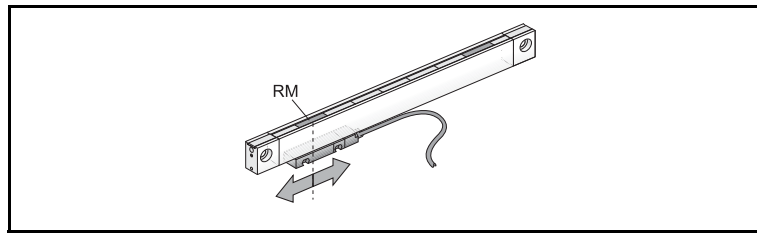

Turn the trigger potentiometer of the oscilloscope to set the trigger threshold (LEVEL) such that the reference mark signal is displayed as a "stationary" image on the screen. You may have to "pre-trigger", if you use a digital storage oscilloscope (DSO). The sine-wave display of Ue1+2 on the scope does not represent the actual amplitude height. Ue1+2 serves as an ancillary signal for measuring the reference mark width and position.


Calibration of the two oscilloscope channels

- Set the input coupling switch (AC/DC/GND) of the channels A and B to **GND** (\perp or 0)
- Use the Y-position potentiometers to shift the lines of the channels A and B congruently to the **screen center** (see fig.)

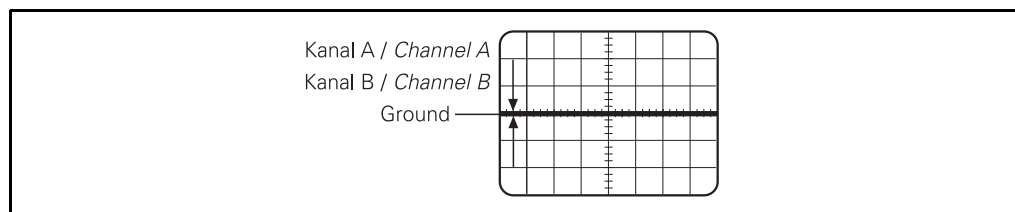

- Set the input coupling switch (AC/DC/GND) of the channels A and B to **DC**

4.2.3 Measuring TTL/HTL square-wave signals

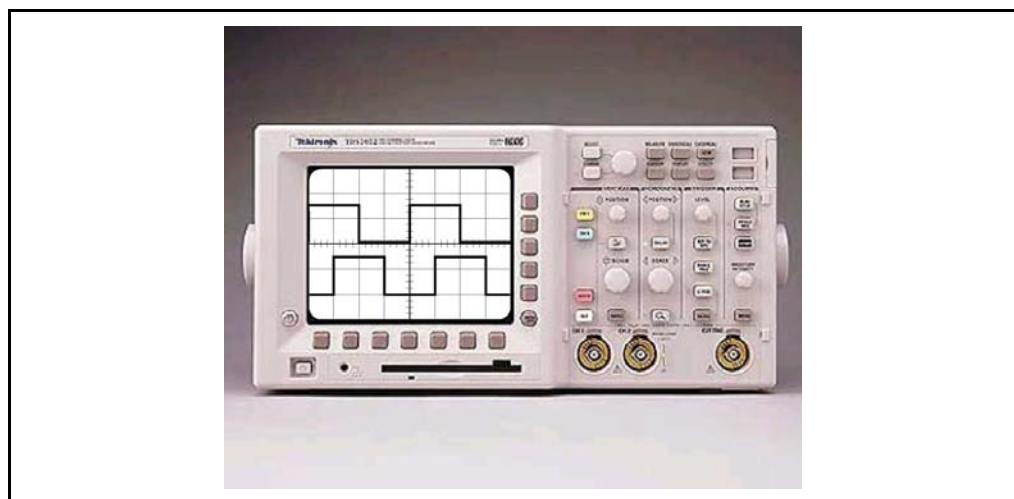

Note

The oscilloscope setting is the same for incremental signals and reference mark signals.

**Vertical deflection
(voltage
sensitivity)**

- Switch channels A and B to chopper mode (**CHOP**)
- Set the deflection coefficient (**Sensitivity**) of channels A and B
for TTL: 2 V/DIV
for HTL: Sensitivity depends on supply voltage (10 ... 30 V)

**Horizontal
deflection
(time setting)**


- Set the time coefficient (**Time basis**) to **0.5 ms/DIV**

Triggering

- Trigger automatically (**AUTO**)
- Trigger on **channel A**
- Trigger on **positive edge**

**Calibration of the
two oscilloscope
channels**

- Set the input coupling switch (AC/DC/GND) of the channels A and B to ground **GND**
- Use the Y-potentiometers to shift the line of channel A, e.g. to the screen center and the line of channel B to the lower grid line (see fig.)

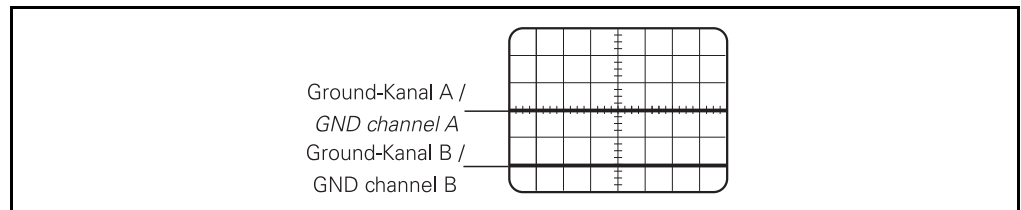

- Set the input coupling switch (AC/DC/GND) of the channels A and B to **DC**

5 Measuring with PWM 9

5.1 Measuring in PWT MODE 11 μ App or 1 Vpp



Note


Only analog interfaces (11 μ App and 1 Vpp) can be measured in the PWT MODE.

The stated tolerances (ranges within the brackets) are standard values!
The tolerances of measuring systems for high resolutions (e.g. angle encoders) and large temperature ranges (e.g. motor encoders) are tighter. In this case the limits formed by the brackets are invalid.

Encoders with tighter tolerances must be checked in the PWM mode.


The PWM only works if the interface board is inserted!

The PWT MODE serves to check analog signals and reference marks and it assists you in mounting measuring systems (in particular "exposed systems").

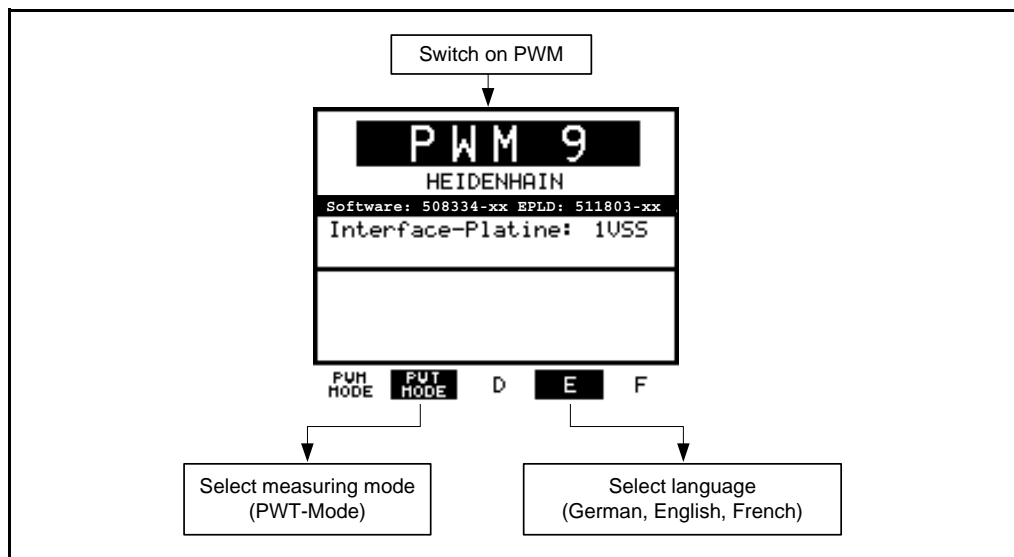

Display in PWT MODE

- Signal amplitude
- Signal quality
- Position of reference mark
- Width of reference mark

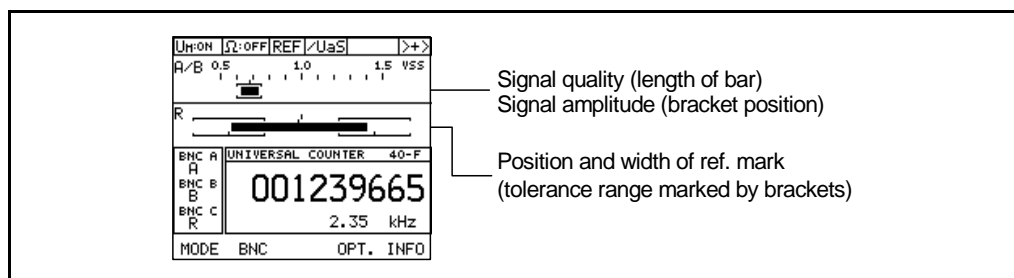

Note



For more information on the display, see chapter "Measuring in the PWM MODE" on page 51

5.1.1 Checking the signal quality in the PWT MODE



Note

The measuring system must be moved to make a statement on the signal quality.

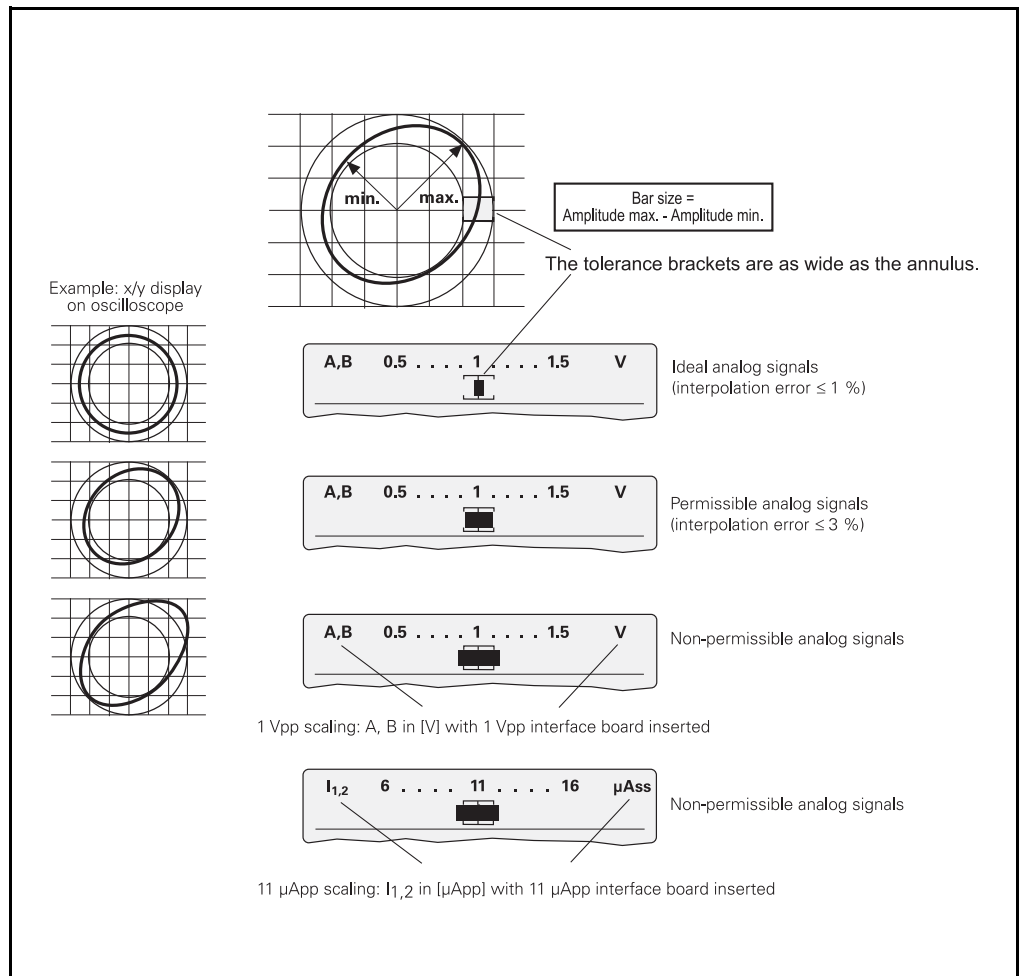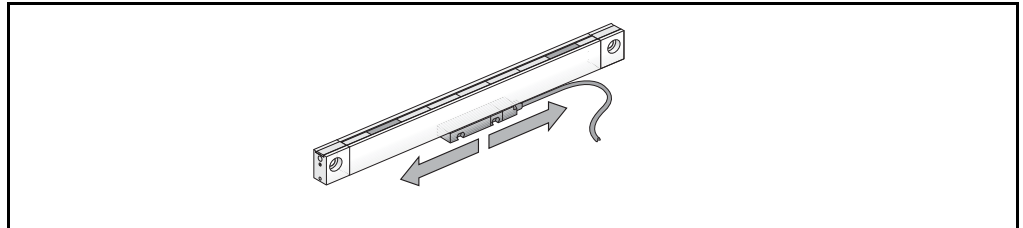

Note

- The bar has to be within the brackets
- The shorter the bar, the better is the signal quality
- Tolerance range see "Interface description" on page 121


5.1.2 Checking the signal amplitude in the PWT MODE




Note

The signal amplitude can also be measured **at standstill**.
 Tolerance range see "Interface description" on page 121
 11 μ App or 1 Vpp signals are measured depending on the interface board.


Signal amplitude

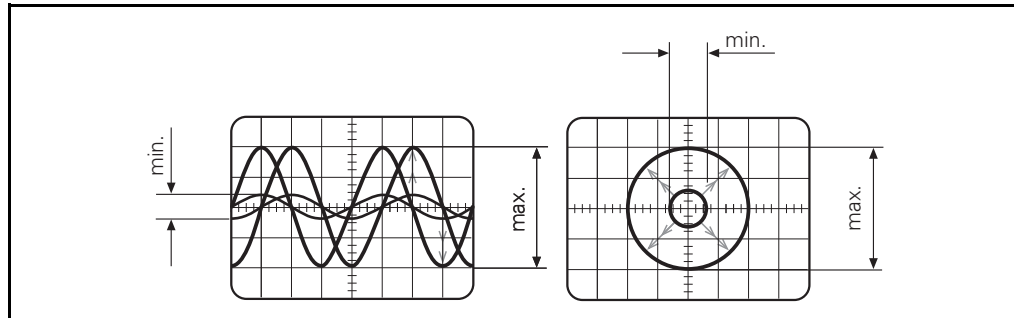

1 Vpp

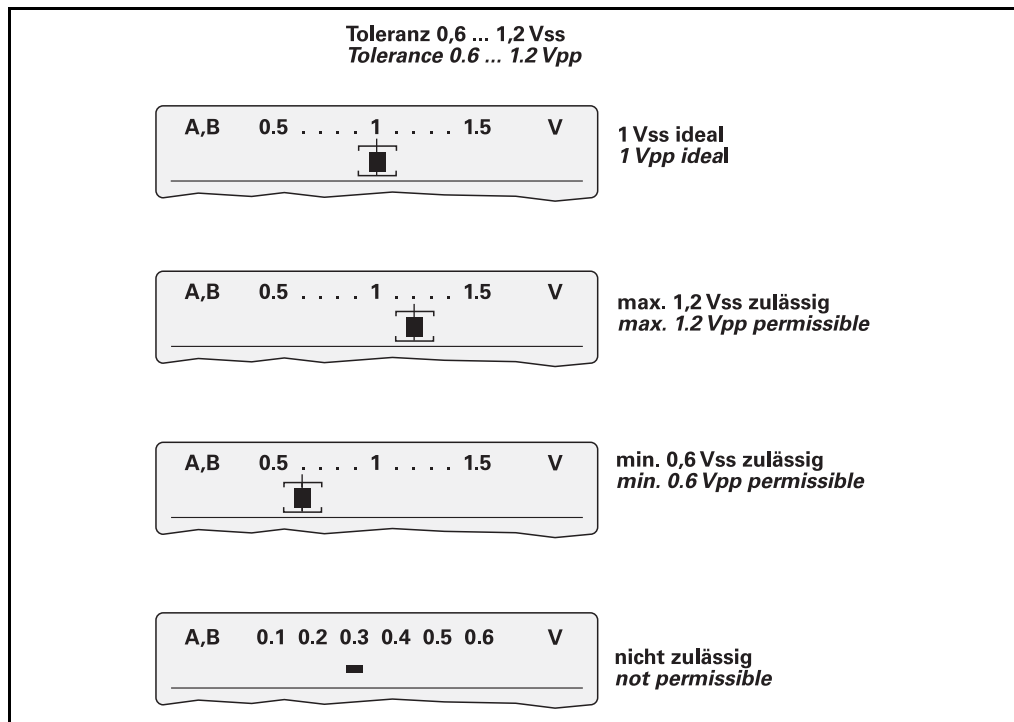

11 μ App

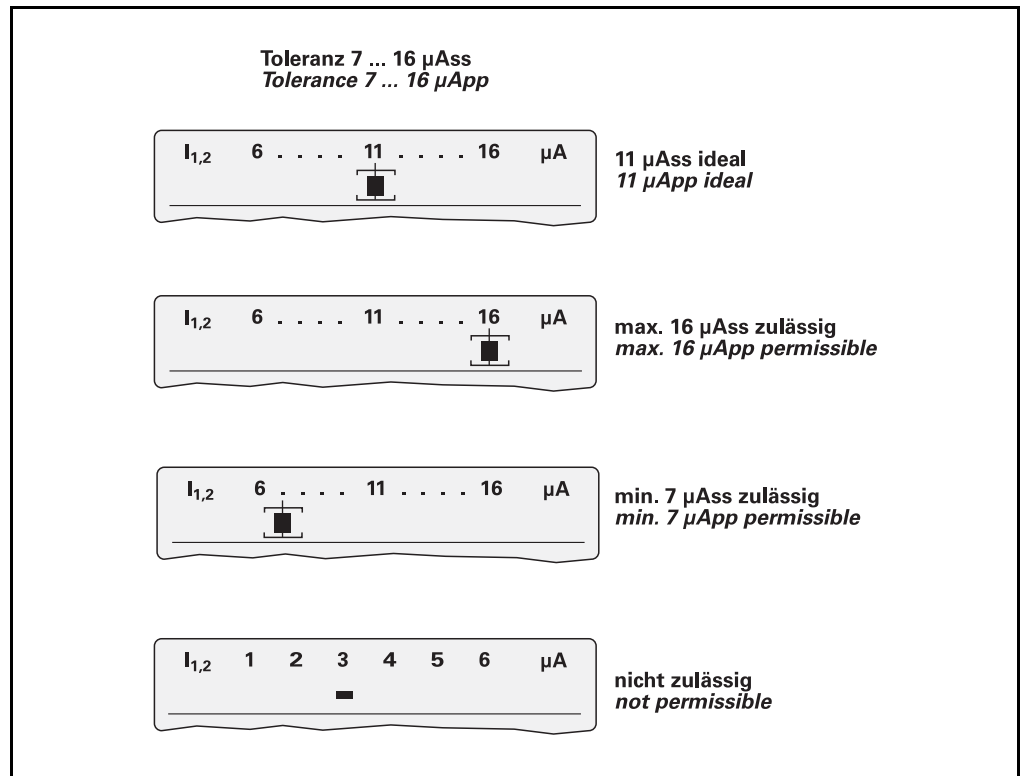


5.1.3 Checking the reference mark signal in the PWT MODE

In the PWT MODE the quality of the reference mark signal can be assessed.
The width and the position of the reference mark signal are measured.



Note

The reference mark (= RM) can only be measured dynamically!

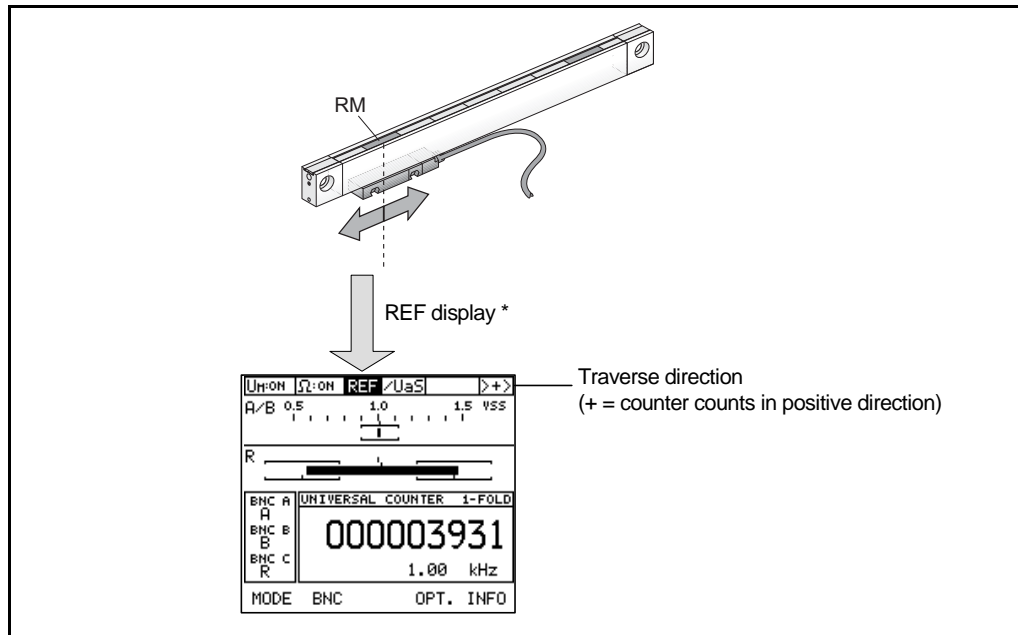

* The reference mark signal is a very short impulse and is displayed longer (~ 1 s)!




Note

The REF display in the status line does not indicate that the reference mark signal is within the specified tolerance range.

The REF display serves to "search" the reference marks of measuring systems.

If you use an oscilloscope for reference mark measurement (recommended!), see the settings in chapter "Measuring the reference mark signal" on page 28.


Schematic oscilloscope display (not to scale)

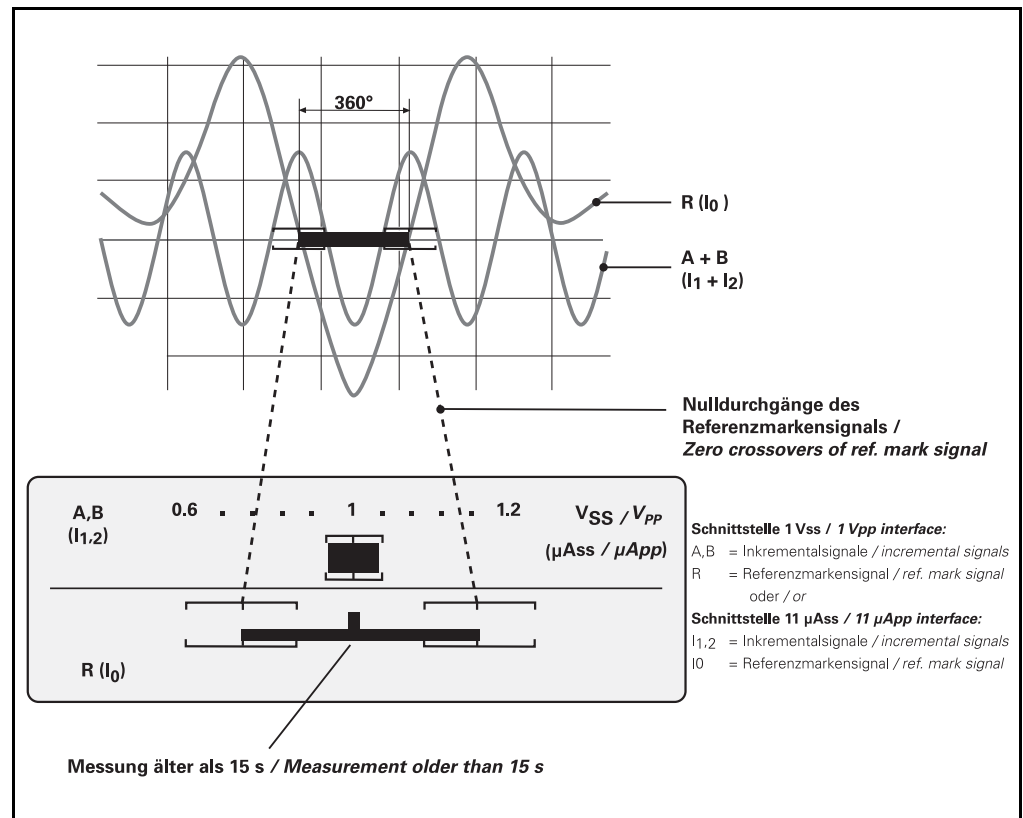


Note

For measurements that are older than 15 seconds, the width of the bar is halved.


5.1.4 Tolerances for measuring the reference mark signal (examples)

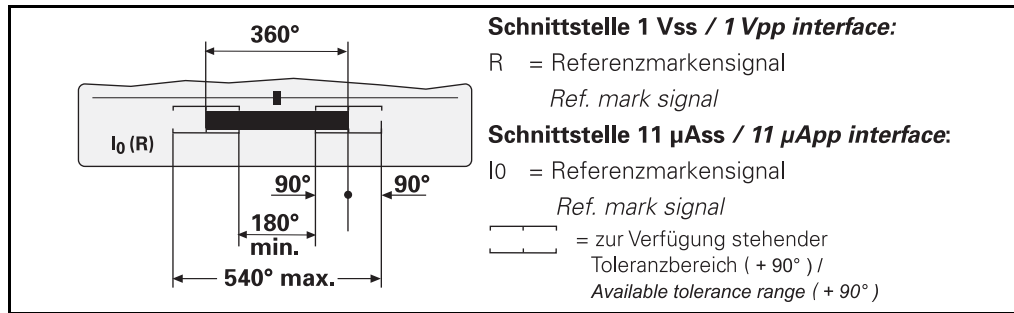


Position

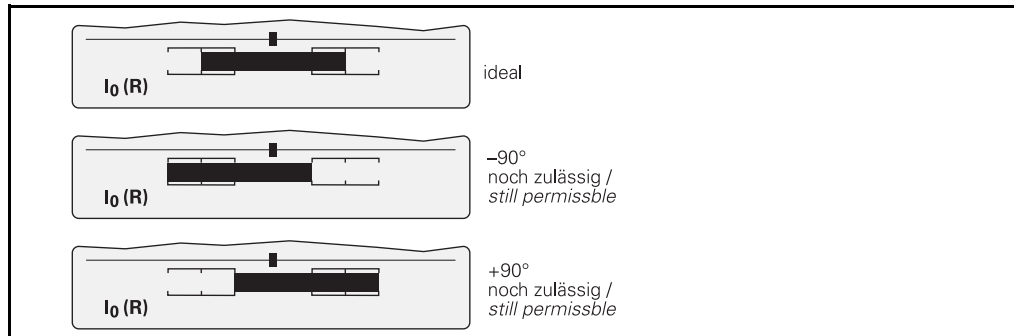

Width

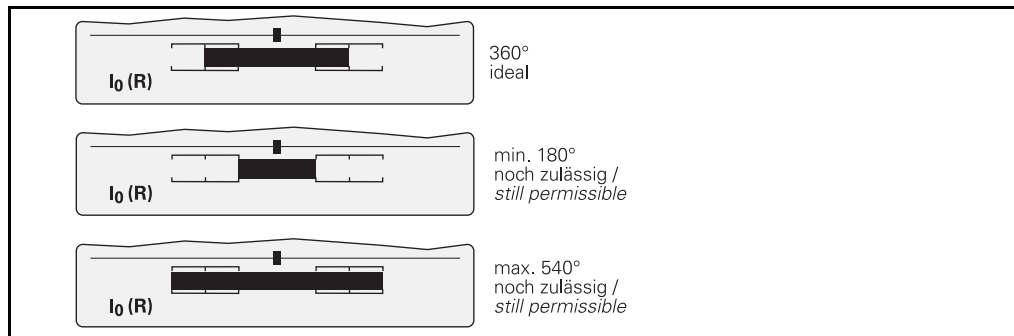

Tolerance exceeded

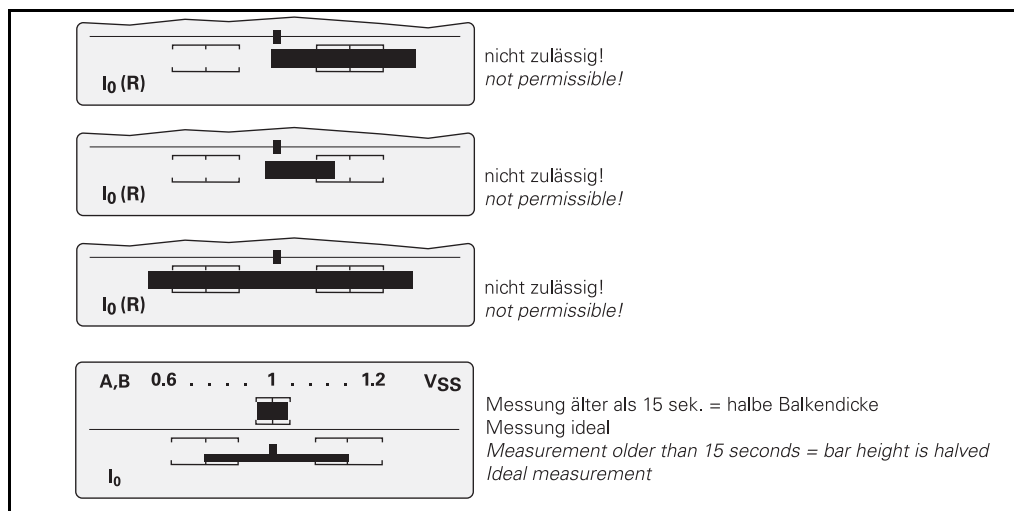

Note

The reference signal bar has to be within the tolerance brackets.
 The ideal reference mark signal is 360° wide and shows no position error.

5.2 Adjustment aid for mounting the scanning heads of exposed encoders

The CHECK-REF measuring function measures the positions and widths of all reference marks traversed, and saves them in the PWM. The PWM then calculates the average reference-mark position and width deviation of all reference marks measured. Then the software checks if this deviation can be compensated for by mechanical adjustment of the scanning head. The result is displayed by the following messages:

“All reference marks optimum”

All measured reference-mark signal edges are within $\pm 60^\circ$, i.e. in the tolerance range of the reference-signal brackets.

“Adjustment recommended”


One or more reference-mark signal edges are at the tolerance limit of the reference-signal brackets ($\pm 90^\circ$).

“Adjustment required”

This message is generated as soon as a reference-mark signal edge is outside the tolerance limit of the reference-signal brackets ($> \pm 90^\circ$).

“Adjustment impossible”

The reference-mark signal edges are outside of the area that can be compensated mechanically. A reliable reference signal function cannot be ensured. Exchange the scale or scanning head and repeat the measurement.

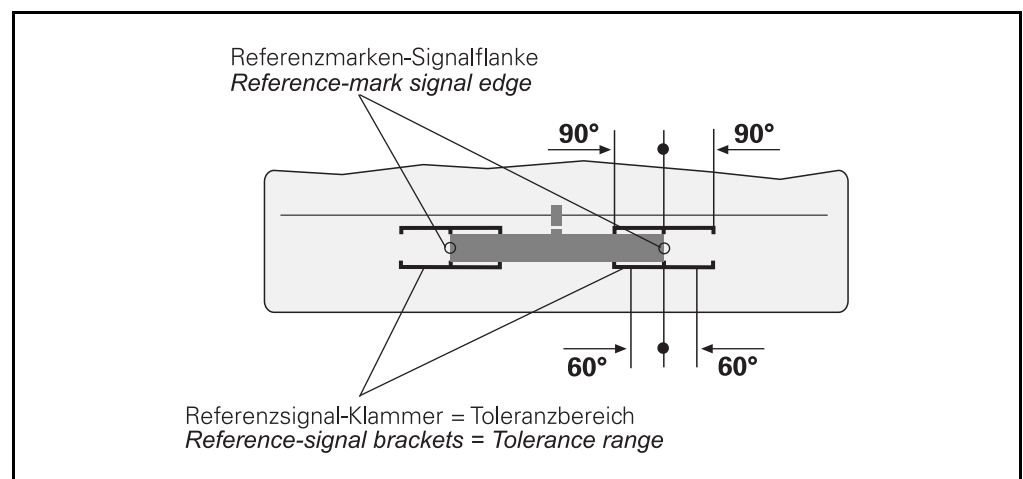

5.2.1 Preparations

In order to obtain correct measuring results, it is essential that you observe the sequence given in this manual.

Maintaining the mounting dimensions of the encoder is a prerequisite for the measurement!

The measuring procedure is as follows:

- Beginning of measurement
- Basic adjustment
- Measurement: One reference mark
- Measurement: Multiple reference marks
- Messages in the PWT MODE
 - "All reference marks optimum"
 - "Adjustment recommended" (in tolerance range)
 - "Adjustment required" - precision adjustment
 - "Adjustment impossible"

Legend



Action; key to be pressed




Automatic calling of the next screen



Traverse direction



Alignment of the scanning head

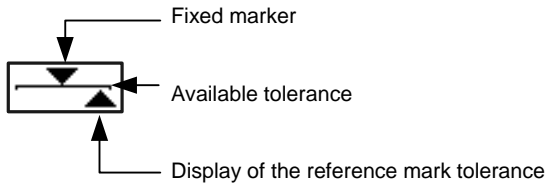

No measurement of the reference mark for movements against the measuring direction (reverse)




Note


The measuring procedure differs depending on the number of reference marks:

- Measurement with **one** reference mark
- Measurement with **multiple** reference marks


Measurement with one reference mark

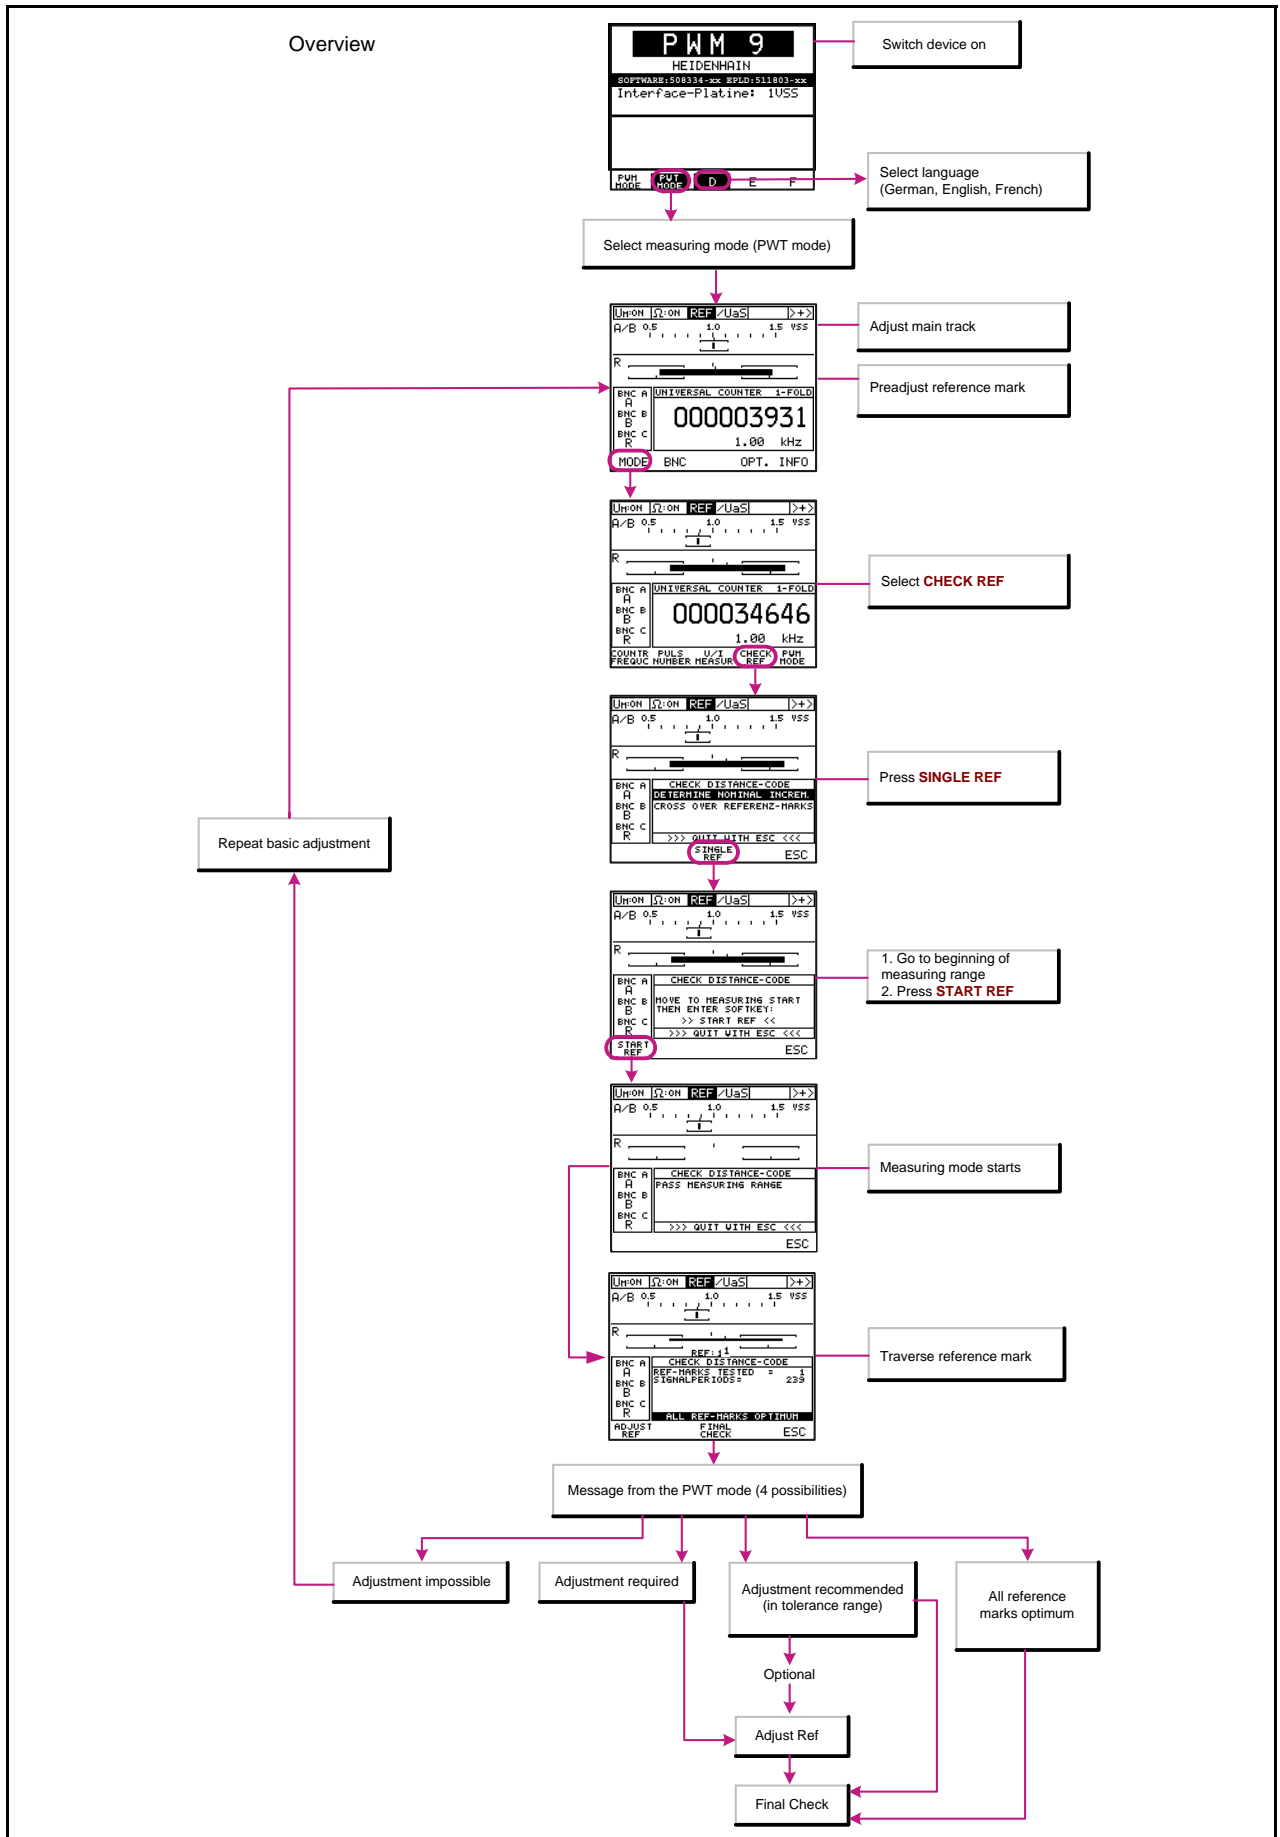

Measurement with multiple reference marks

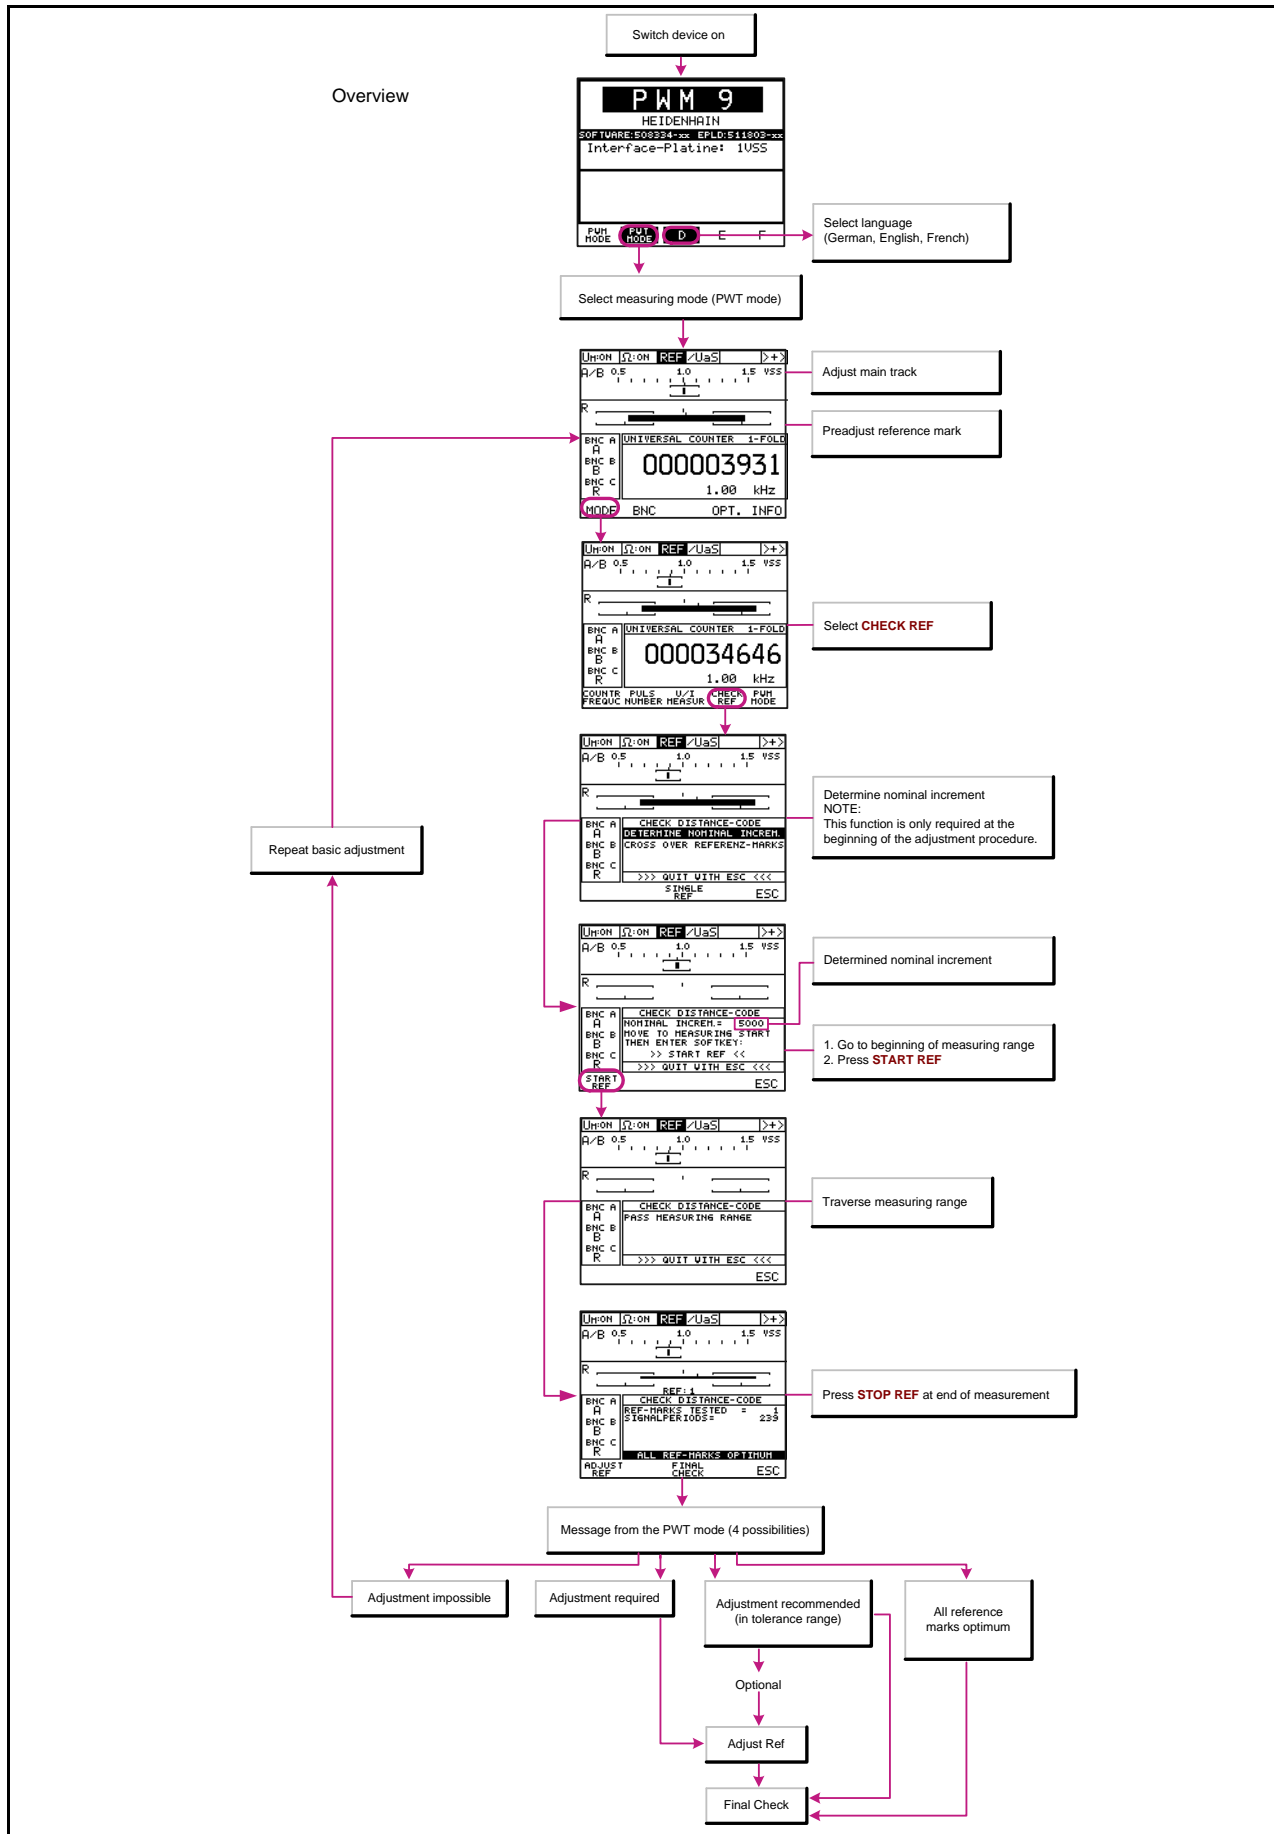

5.2.2 Beginning of measurement

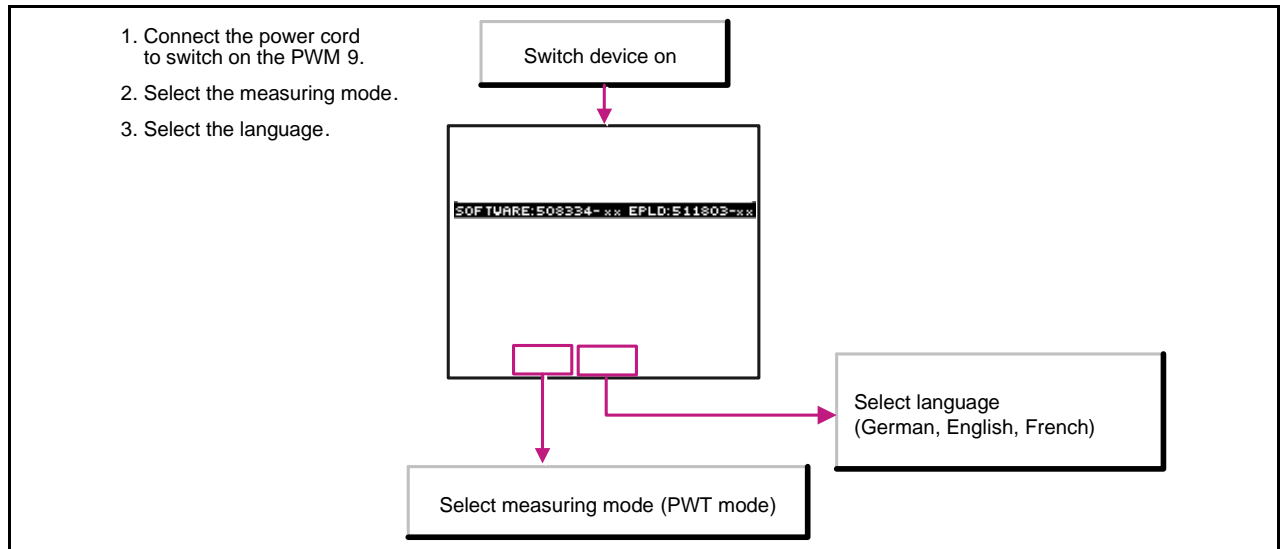


5.2.3 Basic adjustment



Note


For a detailed description on adjusting the main track refer to the instructions of your measuring system.

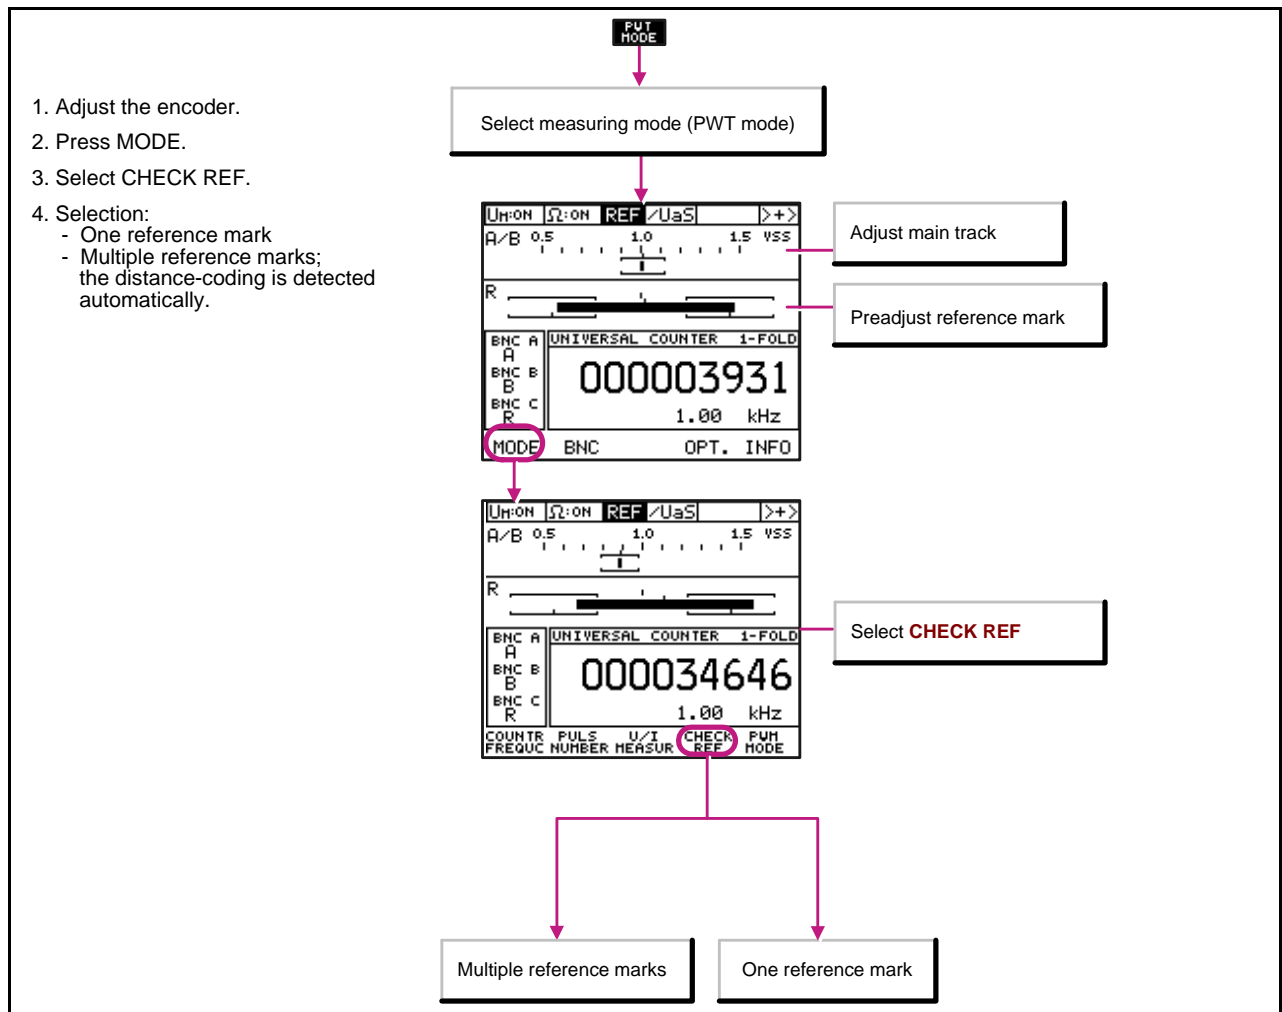


5.2.4 Measurement: One reference mark

1. Press SINGLE REF.
The measuring mode starts automatically.
2. Move the scanning head over the reference mark.
3. Message from the PWT mode
4. The next steps depend on the message from the PWT mode.


One reference mark

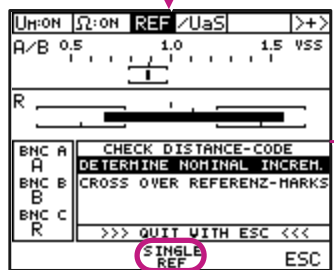


Press **SINGLE REF**

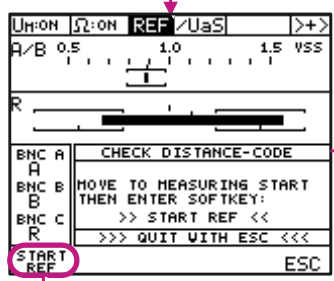

1. Go to beginning of measuring range
2. Press **START REF**

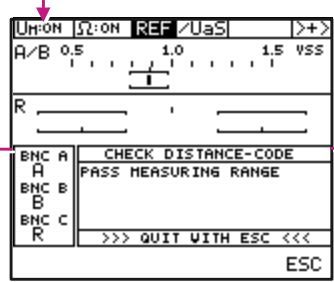

Measuring mode starts

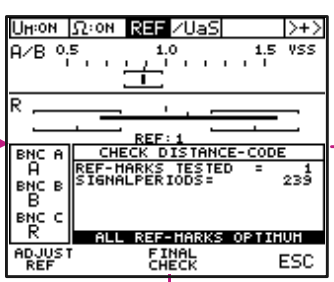

Traverse reference mark

Message from the PWT mode (4 possibilities)

Adjustment impossible

Adjustment required

Adjustment recommended
(in tolerance range)

All reference marks optimum

5.2.5 Measurement: Multiple reference marks




Note


Move the scale or the scanning head in one direction only. The message "WRONG DIRECTION" may be generated when the scale or scanning head are in standstill. This message can be ignored, since absolute standstill without change of traversing direction is hardly possible when the scanning head is traversed by hand.

1. Determine the nominal increment:
The scale / scanning head must be moved in one direction over 5 reference marks in order for the nominal increment to be determined and displayed.
2. Go to the beginning of the measuring range.
3. Press **START REF**.
4. Traverse the measuring range.
5. At the end of the measurement press **STOP REF**.
6. Message from the PWT mode.
7. The next steps depend on the message from the PWT mode.

Multiple reference marks

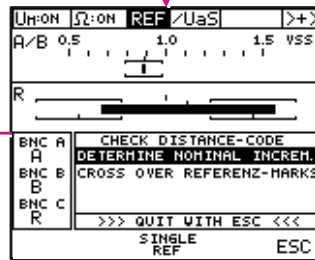


Determine nominal increment
Note
This function is only required at the beginning of the adjustment procedure.

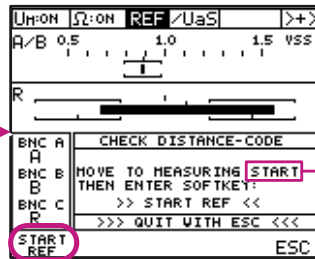


Determined value for nominal increment

1. Go to beginning of measuring range
2. Press **START REF**

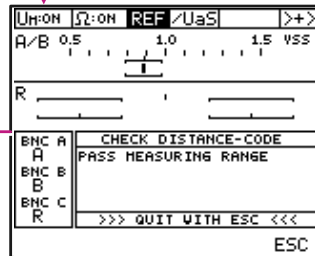

Traverse measuring range

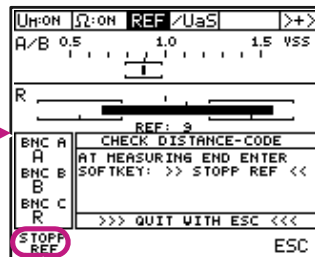

Press **STOP REF** at end of measurement

Message from the PWT mode (4 possibilities)

Adjustment impossible

Adjustment required

Adjustment recommended
(in tolerance range)

All reference marks
optimum



Note

The error message **Distance-code connection** is generated when the first reference mark of an angle encoder with distance-coded reference marks (e.g. ROD 780C, "C" stands for "distance-coded reference marks" traversed).


The first distance-coded reference mark of a rotary encoder is marked; on angle encoders with scale tapes (e.g. ERA) it is located at the butt joints.

The message "NOMINAL INCREM. ERROR" is displayed when the nominal increment is determined, if the traversing speed is too high or if the reference mark with the first distance coding is traversed.

5.2.6 Messages in the PWT MODE

There are four different messages:

- Adjustment impossible
- Adjustment required
- Adjustment recommended (the signals are **still** in the tolerance range)
- All reference marks optimum

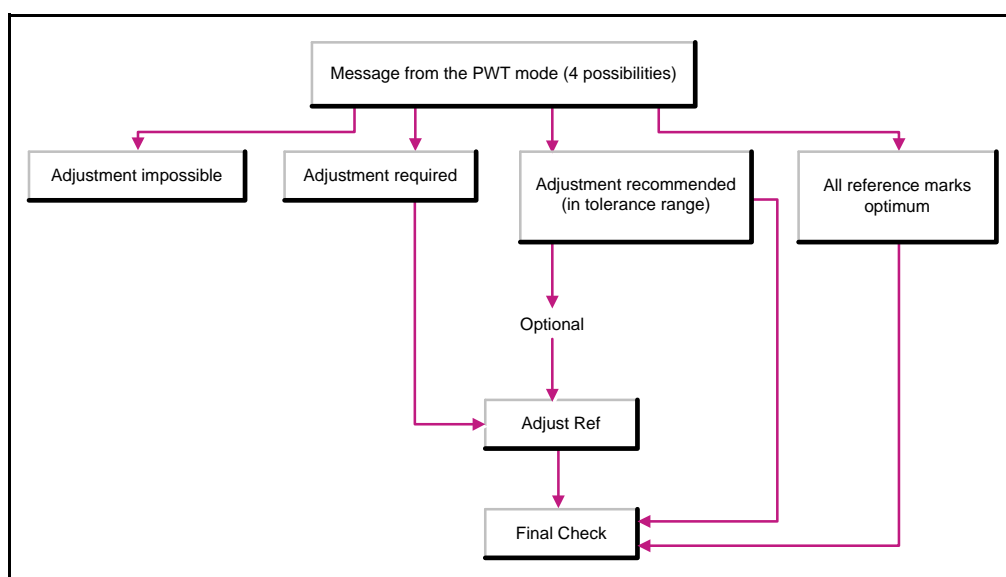


**Message:
Adjustment impossible**

1. Repeat the basic adjustment and read the section "Errors during measurement" on page 49
2. If the message "Adjustment impossible" recurs: Check the mounting tolerances

Message from PWT mode (4 possibilities)

Adjustment impossible

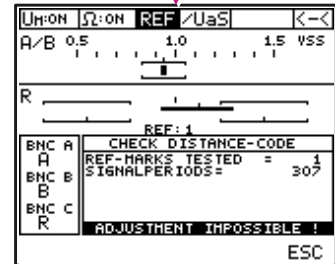

Repeat measurement

**Message:
Adjustment
required**

When this message is displayed, scale and scanning head require precision adjustment.




Attention

During precision adjustment of scale/scanning head, the set basic adjustment can be influenced or modified. In this event, you will have to repeat the entire measurement.


1. Press ADJUST REF.
2. Traverse scale / scanning head in the prescribed traverse direction until the display of the traverse direction changes.
- Note:** It is essential that you observe the prescribed traverse direction.
3. Traverse in the opposite direction until the directional arrows appear.
4. Depending on the message align the scale / scanning head.
5. Traverse the scale / scanning head in the displayed traverse direction in order to update the measurement.
6. If the "optimal" message is not displayed, repeat the steps 3 to 5 until "in tolerance" or "optimal" appears.
7. Press ESC.
8. Final check.

Message from the PWT mode (4 possibilities)


Adjustment required

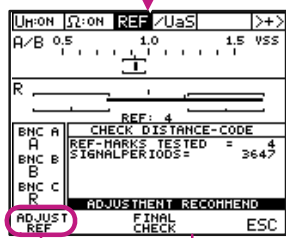

Press **ADJUST REF**

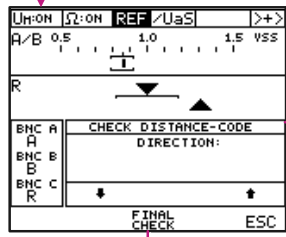


Traverse the reference mark.
Move the scale / scanning head.
Observe the displayed traverse direction!

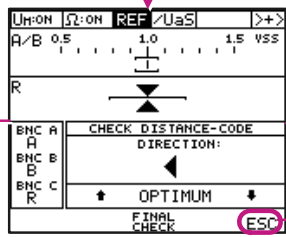

If required change the traverse direction until the directional arrows appear.
Align the scale / scanning head.

Repeat process for final check

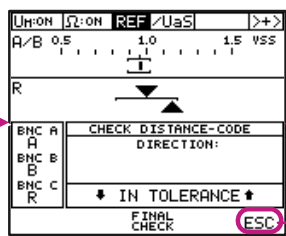

If the message **OPTIMUM** does not appear:
1. Change traverse direction as per display.
2. Align the scale / scanning head until **IN TOLERANCE** or **OPTIMUM** is displayed.


Legend:

- Traverse direction
- Alignment of the scanning head
- Fixed marker
Tolerance range
Display of the reference mark tolerance
- Optimum adjustment
- No measurement of the reference mark for motions against the measuring direction (reverse)

Message:

**All reference marks optimum or Adjustment recommended (in tolerance range)
The procedure is the same for both messages.**


1. Secure the scale/scanning head after the measurement. The mounting instructions of the encoder include detailed instructions for this.
2. Press FINAL CHECK.
3. Go to the beginning of the measuring range.
4. Press START REF.
5. Traverse the measuring range.
6. At the end of the measuring range press STOP REF.
7. The message "All reference marks optimum" appears. If "Adjustment required" is displayed you will have to perform a precision adjustment of the scale or the scanning head.
8. Press ESC.
9. Press U-MSYS OFF to switch the encoder voltage off.

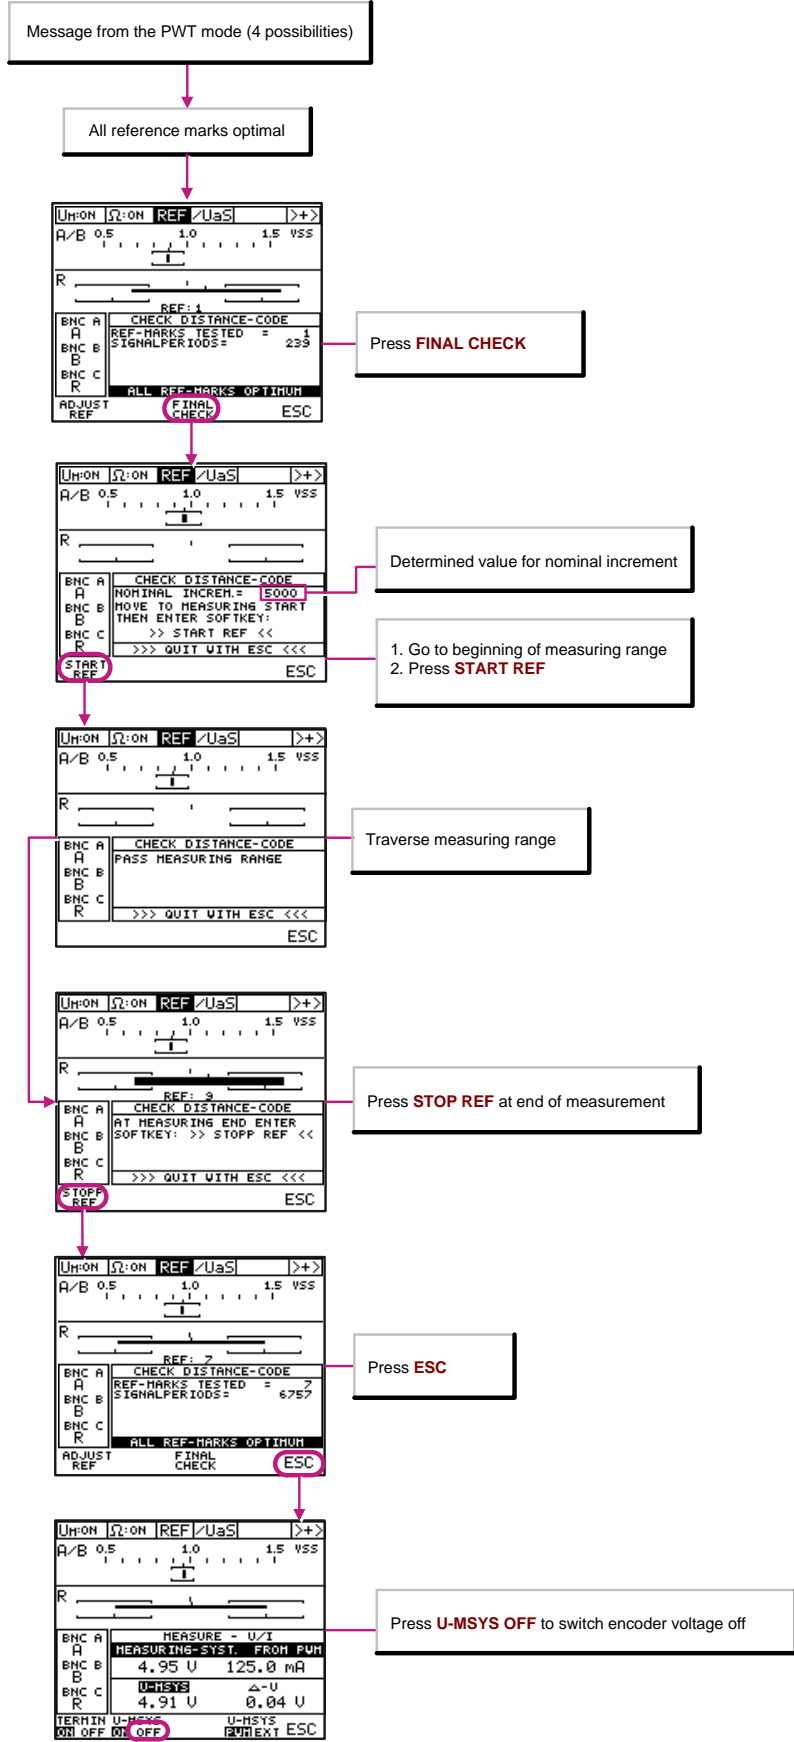

5.2.7 Errors during measurement

Error during determination of the nominal increment


1. Repeat the basic adjustment
2. If the message "NOMINAL INCREMENT ERROR" is generated, check the mounting tolerances
3. If you are still unable to determine the nominal increment, contact the HEIDENHAIN Service

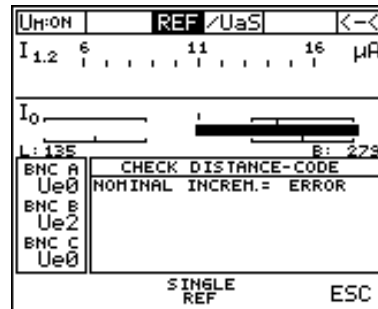

Error on checking the distance-coding or on finding the average position and width of the ref. marks

If the traverse rate is too high, "FREQU >" and/or "ERROR: DISTANCE CODE" are displayed:


1. Press ESC
2. Press MODE
3. Select CHECK REF
4. Press START REF
5. Traverse slowly and at constant speed

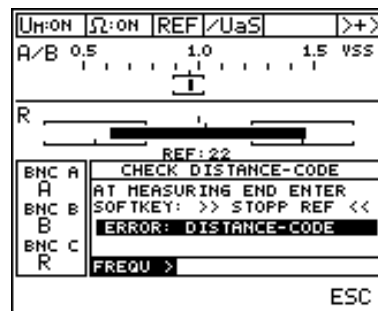

Signal amplitude error


Signal amplitude below minimum when turning scale or scanning head

Turn the scale or scanning head such that the signal amplitude is within the tolerance range.

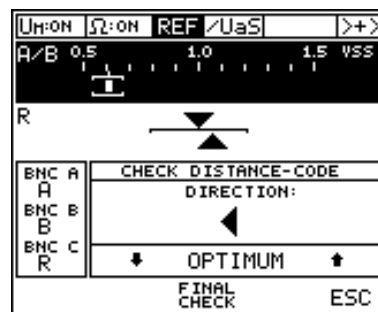

Faulty mechanical mounting

If the error message
ADJUSTMENT IMPOSSIBLE
is displayed, check the mechanical
mounting (mounting tolerances) and
repeat the adjustment.

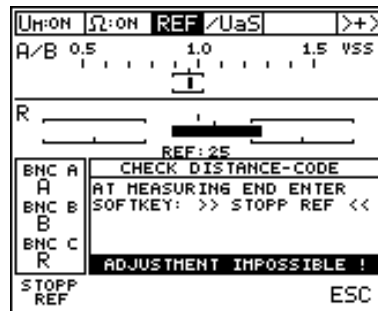

Further operation impossible (software crash)

1. Press ESC
 2. Repeat the entire measurement
- or:
1. Switch the unit off and on
 2. Repeat the entire measurement

5.3 Measuring in the PWM MODE





Note

For measuring setup, MODE setting and oscilloscope setting see the respective chapters of this manual.


In the example below, the 1 Vpp output signals of a measuring system are checked. The 1 Vpp interface board is inserted. The encoder (test item) is connected as described in the measuring setup.

Active functions are displayed inversely (dark).

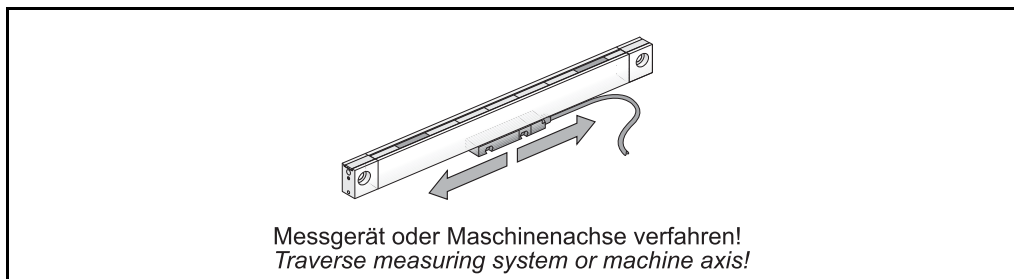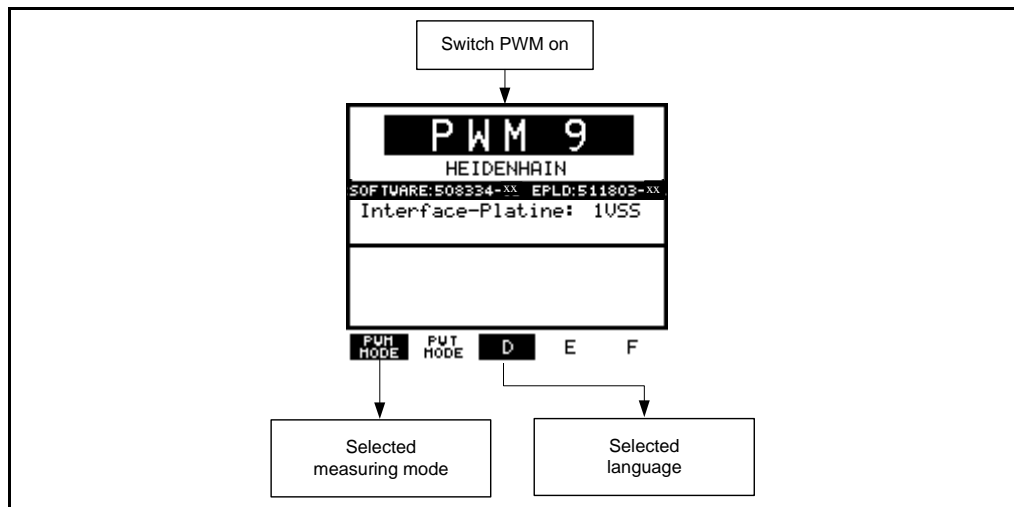


5.3.1 Description of the PWM MODE display

Status display

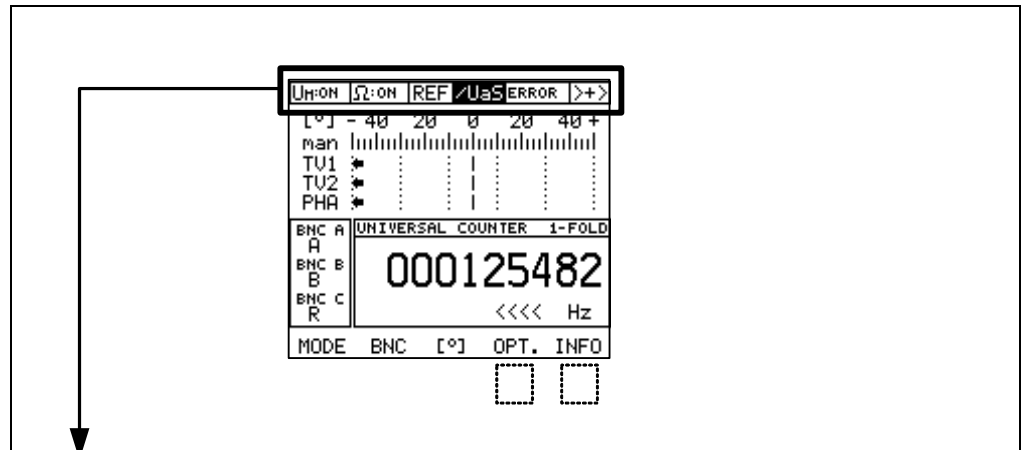

UM: ON	The supply voltage of the measuring system is on. (Press the OPT soft key to change the setting.)
UM: OFF	The supply voltage of the measuring system is off. (Press the OPT soft key to change the setting.)
Ω: ON	Terminating resistor switched on; setting depends on interface board. (Press the OPT soft key to change the setting.)
Ω: OFF	The terminating resistor is off. (Press the OPT soft key to change the setting.)
REF	No reference signal
REF	Reference signal detected (no real-time display; display duration approx. 1 s)
/UaS	No fault detection signal
/UaS ERROR	The fault detection signal indicates that the level of the encoder output signal is below the functional limit (ERROR display is saved).
/UaS	If /UaS remains "dark", there may be two different causes: 1. Signal error (see /UaS ERROR) 2. The encoder does not support /UaS. The signal pin is not connected; this is considered an error (low active). Exception: In some encoders that do not support the fault detection signal, the /UaS pin is connected to +5 V. /UaS always indicates "No fault detection signal"! Note: Observe the mounting instructions of the encoder!
/UaS ERROR	No fault detection signal is present, but the fault-detection memory (ERROR) was set by a previous event. The ERROR can be cleared by: 1. Calling a new PWM MODE 2. Pressing the soft key INFO "CLR ERROR"
> + >	Positive counting direction
< - <	Negative counting direction

5.3.2 Description of the soft-key row

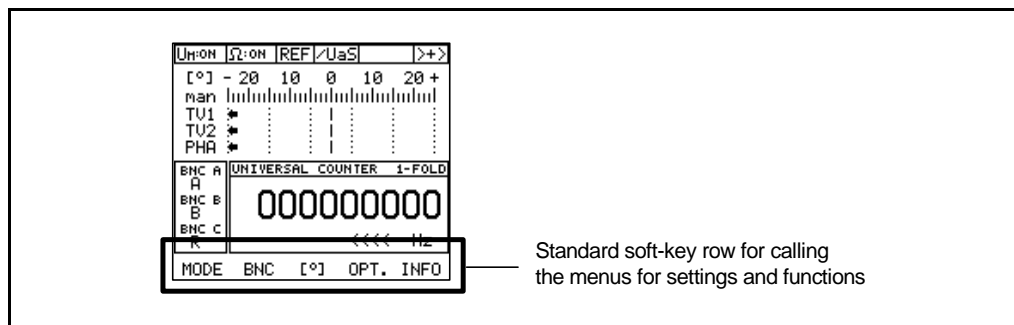

Soft-key row when a multi-purpose interface board absolute / 1 Vpp, ID 312 186-02 is inserted

After the power-on screen the encoder interface to be tested must be selected. In this example a 1Vpp encoder with AB and CD output signals was selected (rotary encoder with commutating signals, e.g. ERN 1387).

-
-
-
-
- Select by soft key and confirm with ESC

1 Vpp	1 Vpp interface, "standard"
1 Vpp AB	Encoder with sinusoidal commutating track (Zn/Z1) Incremental track AB (= Zn) e.g. ERN 1387 2048 sinusoidal signals/rev.
1 Vpp CD	Commutation track CD (= Z1) e.g. ERN 1387 1 sine and cosine signal/rev.
SSI/ENDAT	Encoder with EnDat or SSI interface (same functional test)
PROG. SSI	Encoder with programmed SSI interface (SSI 09 and SSI 10 with 10 – 30 V operating voltage)



Note

With absolute encoders only the incremental signals are measured. The PWM does not evaluate the absolute output signals.

Via the BNC outputs, the absolute data signals can be viewed with an oscilloscope (only possible if the encoder is operated with a subsequent electronics).

For absolute output signals HEIDENHAIN offers special computer interface cards for diagnosing.

5.3.3 Description of the INFO soft key

Press ESC to return to the standard soft-key row

Example 1

- PWM software number
- 1Vpp interface board
- Terminating resistor 121 ohms
- Encoder supply: from PWM, floating

Example 2

- 20-fold interpolation
- Encoder supply: from subsequent electronics

■ Press MORE INFO (to switch to the next INFO screen)

Example 3

- The encoder power supply is set to 'subsequent electronics' (EXTERNAL), but no voltage is detected coming from the subsequent electronics. To check the encoder the device must be switched to 'from PWM'.

■ Press CHANGE = from PWM

Example 4

- 11 μ App interface board
- Signal amplification $300 \frac{\text{mV}}{\mu\text{A}}$

■ Press BACK LIGHT (back light on or off)
 ■ Press CLR ERROR (clears /UaS ERROR in status display)
 ■ Press ESC (closes the INFO screen)

5.3.4 Description of the OPT soft key (options)



Note

PWM settings are made in the Options mode.



DANGER

Do not change the encoder voltages **U-MSYS** and supply sources **ADJUST**, if the PWM is operated in an active position control loop!

Activation of the OPTIONS soft-key row

Possible functions:

Soft-key row when EXPERT MODE is not active

Soft-key row when EXPERT MODE is active

TERMIN ON OFF	The terminating resistors for the scanning signals can be switched ON and OFF (only with TTL, HTL or 1 Vpp interface board). The current setting is stored in the PWM and reloaded after power interruption
----------------------	---

Interface board	Terminating resistor [Ω]		
	0 V	+U Encoder	Selectable
TTL	91	215	Yes
HTL	1200	1200	Yes
1 Vpp	121		Yes
11 μ App	–	–	–
Absolute/1 Vpp	121 (Zn), 1000 (Z1)		No

U-MSYS ON OFF	The encoder operating voltage can be switched ON or OFF
ADJUST ON OFF	Display only in active EXPERT MODE and if parameter P2 (U-MSYS) is set to "EXTERNAL"
EXPRT MODE	Display only in active EXPERT MODE; see "Activating the EXPERT MODE" on page 102 and "EXPERT MODE" on page 75
ESC	Terminates the "Options"



Note

The inverse display shows the active status.

5.3.5 Assignment of the BNC sockets


BNC A A BNC B B BNC C C	Display of the current assignment of the BNC sockets A, B and C Example: Incremental signal 1 Vpp, A signal (= 0°) on BNC socket A; B signal (= 90°) on socket B; can be viewed on an oscilloscope
--	--

5.3.6 Changing the BNC sockets and memory assignment

- Closes the BNC menu
- BNC memories:
Each of the **4 BNC memories** can be assigned individually.


Example of memory assignment

Memory 1



Measure incremental signal

Memory 2



Measure ref. mark signal



Note

The selected memory (1, 2, 3, 4) always “remembers” the last setting of the BNC assignment.
Each keystroke activates the next memory. The inversely displayed memory is active!



Note

The data is stored on the interface board.

5.3.7 Possible assignments of the BNC sockets



Note

The BNC assignment depends on the interface board!



Note


Using the BNC sockets

- When using the BNC sockets to measure the encoder signals with the oscilloscope, the operator must ensure adequate ESD protection.
- A floating oscilloscope or an isolating transformer should be used to make sure that the display of the encoder signals is as interference-free as possible. Always use the power socket of the electrical cabinet of the machine to power the oscilloscope. This avoids signal distortions which may result from different ground potentials.






Note

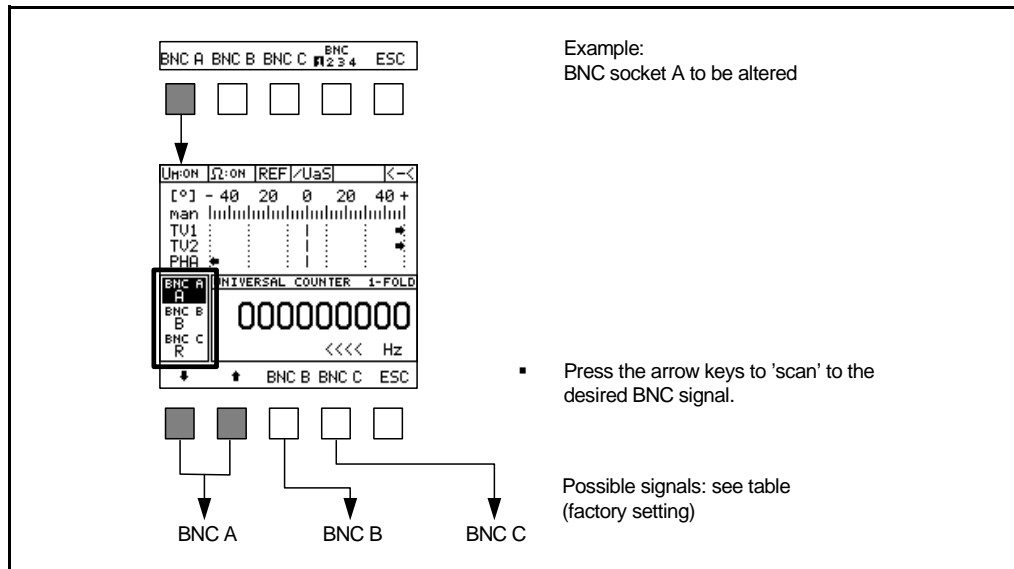The assignment of the BNC sockets is stored on the interface board.



The bold signals are the factory default settings for the respective memory locations (1 ... 4).
 To restore this status use the "Factory Default" function.
 (See "Restoring the factory default configuration" on page 102.)

Selectable encoder signals			BNC memory assignment ³⁾	Output signals	Interface board
BNC A	BNC B	BNC C			
Ue1 Ue0 Ue1 Ue0 Ue2 Ue1 + Ue2	Ue2 Ue1 + Ue2 Ue2 Ue0 Ue1	Ue0 UP UP /UaS ¹⁾	1 2 3 4 Possible signals	Incremental signals ~ 11 µApp	11 µApp ID 323083-01
A R A R B A + B	B A + B B R	R UP UP /UaS ¹⁾	1 2 3 4 Possible signals	Incremental signals A, B ~ 1 Vpp	1 Vpp ID 323077-02
C R C R D C + D	D C + D D R	R ²⁾ UP UP /UaS ¹⁾	1 2 3 4 Possible signals	Commutation signals C, D ~ 1 Vpp	Absolute/1 Vpp ID 312186-02
A CLK+ CLK- DAT+ DAT-	B DAT+ DAT- DAT- CLK+ CLK-	UP /UaS ¹⁾ UP /UaS ¹⁾ CLK+ CLK-	1 2 3 4 Possible signals	Incremental signals ~ 1 Vpp Absolute signals  EnDat/SSI	Absolute/1 Vpp ID 312186-02
Ua1 /Ua1 Ua0 Ua1 Ua2 /Ua2 /Ua0	Ua2 /Ua2 /Ua0 /Ua1 Ua1 Ua0	Ua0 /Ua0 UP /UaS	1 2 3 4 Possible signals	Incremental signals  TTL	TTL ID 323079-01
Ua1 /Ua1 Ua0 Ua1 Ua2 /Ua2 /Ua0	Ua2 /Ua2 /Ua0 /Ua1 Ua1 Ua0	Ua0 /Ua0 UP /UaS	1 2 3 4 Possible signals	Incremental signals  HTL	HTL ID 322732-01

¹⁾ The signal is not an encoder signal, but is generated on the interface board

²⁾ The signal is related to the AB-track of the encoder

³⁾ Factory default setting (bold) can be altered according to your requirements

5.3.8 Display of on-to-off ratio and phase shift



Note

Display of the tolerances for on-to-off ratio **1** (TV1 signal = 0° signal), on-to-off ratio **2** (TV2 signal = 90° signal) and **PHA**se shift between the two incremental signals (PHA).

■ Select scaling

Changeover of measuring range of PHA/TV scaling; the following ranges can be selected:

auto 5° 10° 25° 50°

Examples:

Manual scaling "man":
 Scale ± 25°
 TV1 (+ 10° deviation)
 TV2 (➡ = range exceeded ≥ 25°)
 PHA (+ 1.25° deviation)

Automatic scaling "A":
 When automatic scaling is active the longest bar determines the measuring range (in the example ± 50°).



Note

Tolerances for on-to-off ratio and phase angle see "Interface description" on page 121



Attention

Always observe the tolerances specified in the original mounting instructions of the encoder to be tested

Definition of terms TV1/TV2

On-to-off ratio error of incremental signal 1, incremental signal 2

Analog incremental signals are triggered at zero crossover, i.e. they are converted into square-wave signals.

One period (= high time plus low time of the square-wave signal) is subdivided into 360°.

If high time and low time of the square-wave signal are the same (ideal case), i.e. 180° each (180° + 180° = 360°), the on-to-off ratio error is 0°.


If the high time of the square-wave signal is longer than the low time, one speaks of a positive on-to-off ratio error.

An on-to-off ratio error of e.g. + 10° means that the high time of the square-wave signal is 190° (180° + 10°) and its low time 170° (180° - 10°).

PHA

Phase shift between incremental signal 1 and incremental signal 2

If the incremental signal 1 precedes the incremental signal 2 by 90°, one speaks of a phase shift error of 0° (ideal case). Deviations from the optimum phase shift of 90° are indicated as phase-shift error (in degrees).

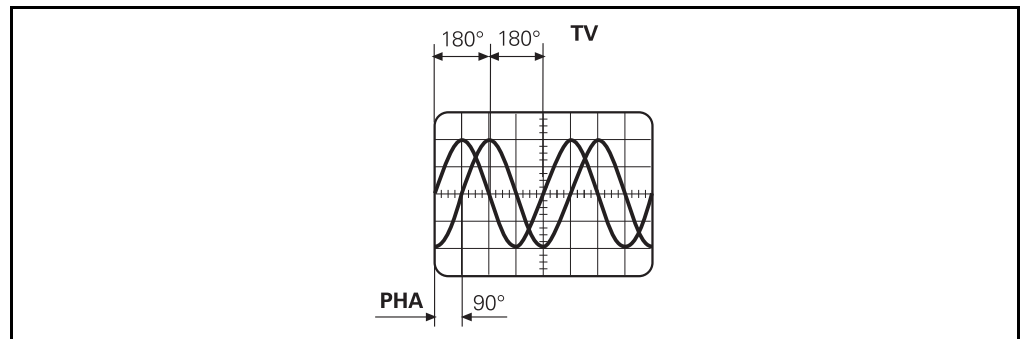


PHA/TV display

PHA and TV are displayed as bars. The scaling of the PHA/TV display can be adapted to different measuring ranges.

Settings are made via the [°] soft key.

With automatic changeover of the measuring range, the range (in degrees) of the PHA/TV display is automatically adapted to the biggest error (longest bar).

Examples of PHA/TV displays

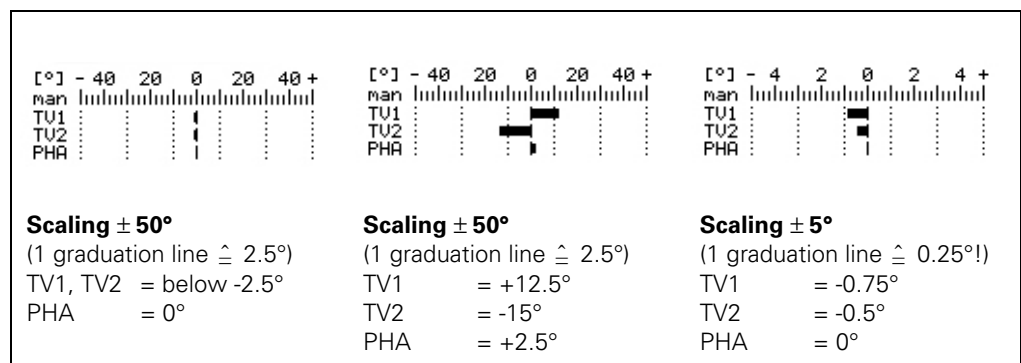

For the permissible signal tolerances please refer to the mounting instructions of your measuring system or to chapter "Interface description" on page 121 of this manual.



Note

If the output signals are ideal, the displayed bars are small. The width of the bars also depends on the scaling!

5.3.9 MODE display



Note

Pressing MODE leads you to the functions of encoder diagnosis.

<p>Display of function</p> <ul style="list-style-type: none"> Select functions On to 2nd row Only in active EXPERT MODE, otherwise: ESC! Back to 1st MODE row PEAK HOLD function (maximum tolerance values are frozen) <p>Only possible in active EXPERT MODE!</p>		
COUNTR. FREQUC		UNIVERSAL COUNTER and frequency measurement
PULSE NUMBER		Determine pulse number (e.g. count the graduation lines of a rotary encoder) Test of counting function
U/I MEASURE		Measure U/I (measure operating voltage and current consumption of an encoder)
MEASURE AMPL.		Measure signal amplitudes (measure amplitudes of the output signals)

5.3.10 UNIVERSAL COUNTER MODE

The UNIVERSAL COUNTER counts the interpolated or triggered incremental signals (depending on the interface board).




Note

The functionality of the UNIVERSAL COUNTER can be adapted by means of the counter parameters (see "Parameter P6 = Set INTERPOLATION" on page 88.)

- 1-fold to 1024-fold interpolation (analog incremental signals)
- Edge evaluation 1-fold, 2-fold, 4-fold (incremental square-wave signals)
- Entry of preset value (for the counter)
- Change of counting direction
- Change of "Start Counter" parameters


Automatically clear UNIVERSAL COUNTER

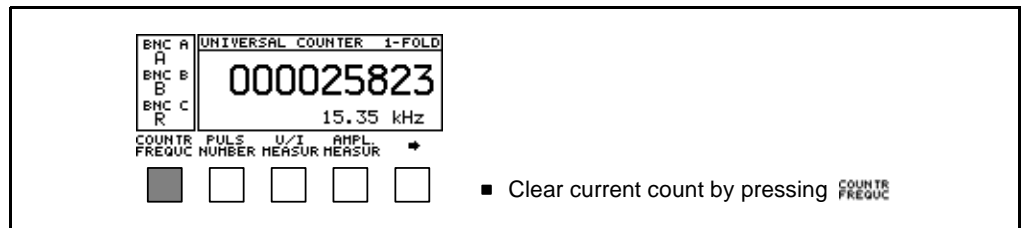

Note

Possible in PWM and PWT mode!

Manually clear UNIVERSAL COUNTER

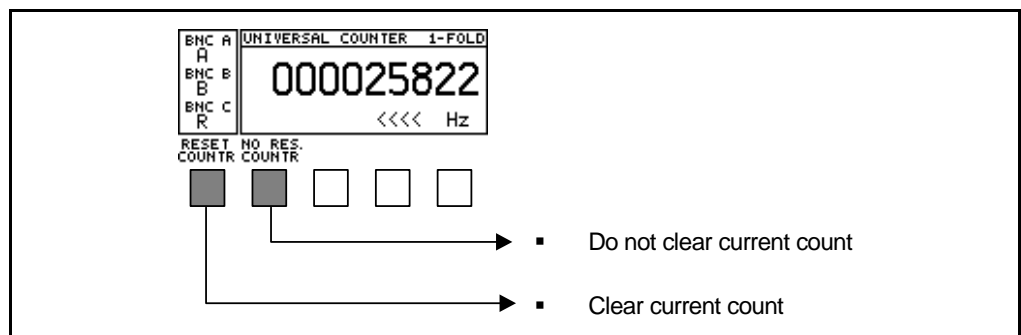


Note

Only possible in the PWM MODE with active EXPERT MODE!

5.3.11 Mode DETERMINE PULSE NUMBER

The PULSE NUMBER function has been developed to determine the line counts of rotary encoders.

This simple method is also suitable for testing the counting function and reference signal function of linear encoders.

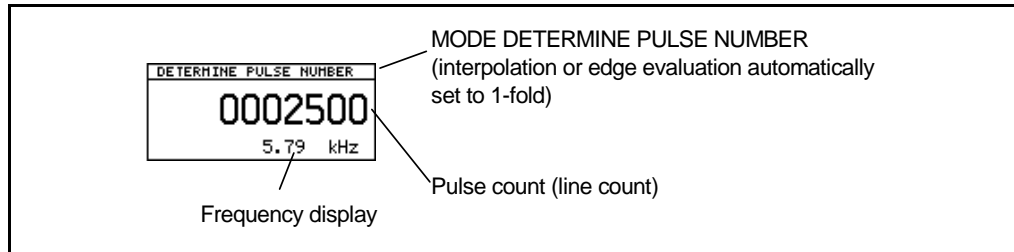

Measuring function

1. When "DETERMINE PULSE NUMBER" is activated, the PULSE COUNTER is cleared and the interpolation or edge evaluation set to 1-fold.
2. The counter "waits" and the first reference mark starts the PULSE COUNTER. The counter starts counting.
3. The next reference mark stops the counter; the display contains the number of increments that were counted between the two reference marks.
4. The display remains "frozen" (counter break) until the next reference mark is reached. Then the cycle (1 to 4) restarts.



Note

Difference to the PWT MODE:

In the function DETERMINE PULSE NUMBER of the PWT MODE each reference mark is evaluated (without counter breaks); see "PWT bar display of ref. mark width and position" on page 214.

Each reference mark restarts the counter and the current count is displayed.

See linear encoders example.

Example 1: Rotary encoder with 2048 lines per revolution

1)

- Start DETERMINE PULSE NUMBER (press soft key)
- Counter sets display to 0 (reset)
- Counter "waits" for reference mark

Note:

Reference mark is abbreviated RM.

2)

Counter starts when an RM is traversed and counts until the next RM is reached.

3)

Counter stops when RM is reached; line count is displayed.

Note:

The current count must be identical with the line count on the ID plate of the rotary encoder.
The TNC displays an error message if that is not the case.

4)

The counter display is "frozen" until the next RM is reached (minimum duration approx. 0.5 seconds).

After an idle cycle "Determine pulse number" restarts. (Counter reset and start with RM, continue with item 2.)

Note:

During the display period (0.5 seconds) no pulse count is determined (idle cycle). In the event of high speeds this may take several revolutions.






5)

Changing the direction of rotation changes the sign.

Note:

In the PWT MODE each RM sets the counter to zero (reset). The counter restarts counting with each RM.

If the error message FREQU > is displayed, the scanning frequency was exceeded and the test result is invalid (see "PWT bar display of ref. mark width and position" on page 214 .)

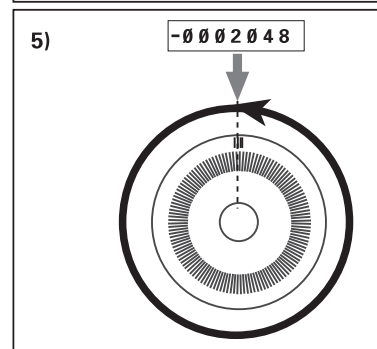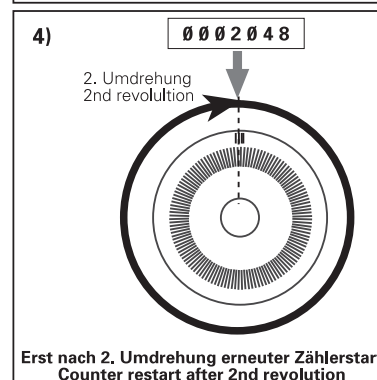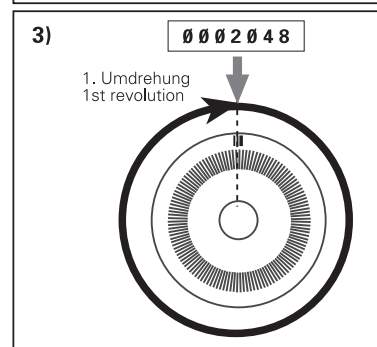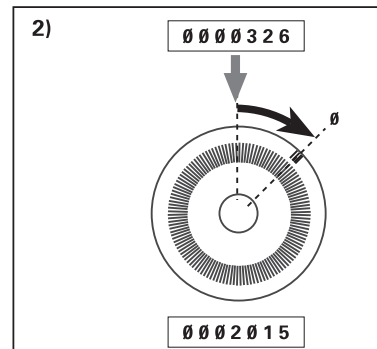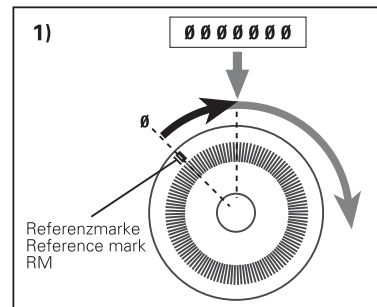


Example 2: Test of counting function of a linear encoder with 1 reference mark (RM)

1)

Position the scanning unit "next to" RM.
 PULSE NUMBER soft key.
 - Counter reset
 - Counter "waits" for RM


1)

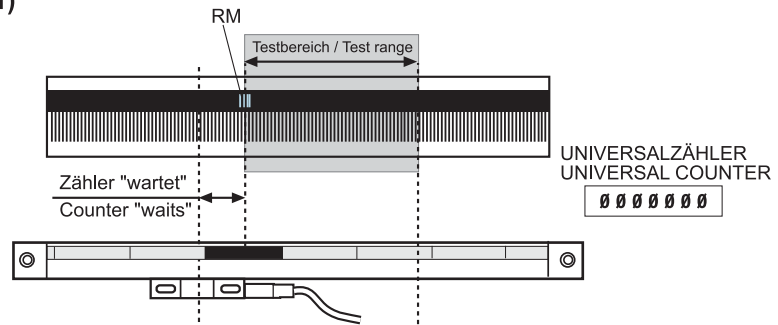

2)

Traverse scanning unit over RM.
 - Counter starts with RM and counts the measuring range.


2)

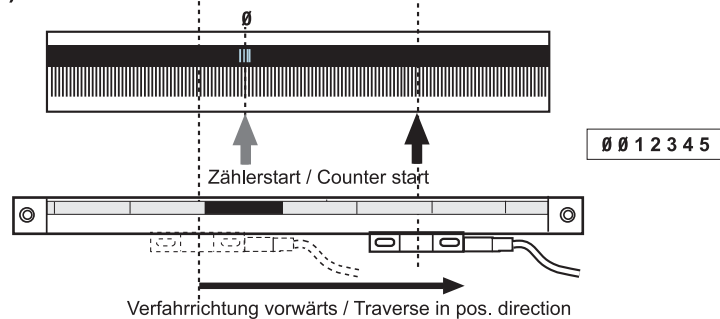

3)

Traverse back over the RM.

3)

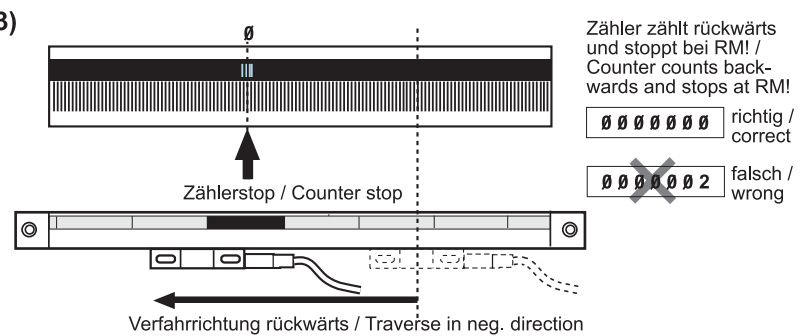

Note

If the RM and counting functions of the linear encoder are error-free, the **PULSE NUMBER display is 0**.

If it is not 0, the RM function of the encoder is faulty!

5.3.12 MEASURE U/I mode

The PWM/PWT mode MEASURE U/I serves to measure current consumption and supply voltage of the encoder.



Note

Depending on the interface board the sensor voltages may be supported as well.

The sensor lines in subsequent electronics have the task to tap the encoder supply voltage with high resistance directly at the encoder and to lead it back to the subsequent electronics.

Voltage drops on the encoder supply lines can then be compensated in subsequent electronics equipped for this purpose.

Many TTL, HTL and 1 Vpp encoders feature sensor lines.

Display of encoder supply voltage

Supply voltage (at PWM) and current consumption

Voltage drop (on supply lines)

Supply voltage at unit under test; measured via sensor lines at high impedance

MEASURE - U/I	
HEASURING-SYST. FROM PWM	
5.03 V	0.0 mA
U-MSYS	Δ-U
0.00 V	5.03 V

Display if no encoder connected

MEASURE - U/I	
HEASURING-SYST. FROM PWM	
5.01 V	86.9 mA
U-MSYS	Δ-U
-5.00 V	10.01 V

Display if sensor lines connected to reverse polarity



Note

In the PWM/PWT mode MEASURE U/I the encoder supply lines and the sensor lines are separated.

In all other PWM modes the encoder supply lines are connected to the sensor lines in order to reduce the voltage drops on the encoder supply lines.

The current consumption of the terminating resistors (with TTL and HTL interface boards) is displayed in the current display together with the current consumption of the encoder.



Attention

If the PWM 9 is connected in series to a subsequent electronics that supports the remote-sense mode (e.g. HEIDENHAIN interface card), it should not be in the MEASURE U/I MODE when the voltage of the subsequent electronics is switched on.


Reason:

When the subsequent electronics is switched on, it measures the sensor voltage and adjusts the encoder supply voltage according to the measured value.

In the MEASURE U/I MODE the PWM 9 opens the sensor lines to the encoder to enable the PWM to measure the sensor voltage. Thus, the subsequent electronics only can "see" the sensor lines up to the PWM 9 which in turn no longer considers the line to the subsequent electronics.

In the event of long lines between **PWM 9 and encoder** or high currents (LC units) the voltage drop on the lines may be very high and therefore impair the function of the encoder!

Example: Sensor voltage

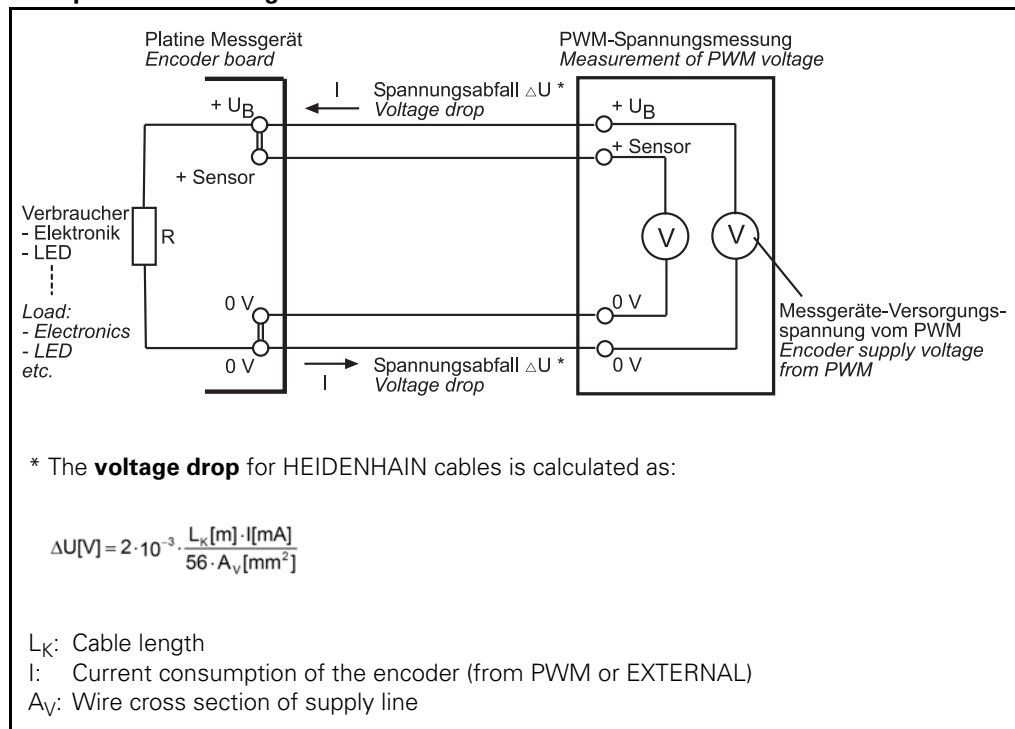

Displays in the PWM MODE MEASURE U/I



Note

Depending on the selected power supply (FROM PWM or EXTERNAL) different information may be displayed.

MEASURE U/I MODE on encoders with sensor lines

(TTL, HTL, 1 Vpp interface boards)

- Encoder powered via PWM (parameter P2 U-MSYS: from PWM)
(see "Parameter settings" on page 81)

MEASURE - U/I	
MEASURING-SYST. FROM PWM	
12.3 U	94 mA
U-MSYS	Δ-U
12.3 U	0.0 U

The encoder is powered by the PWM.

Supply voltage and current consumption of the encoder

Supply voltage of the encoder and voltage drop on the supply lines (sensor voltage)

- Encoder powered via subsequent electronics (parameter P2 U-MSYS EXTERNAL)

MEASURE - U/I	
MEASURING-SYST. CUSTOMER	
12.0 U	89 mA
U-MSYS	Δ-U
12.0 U	0.0 U

The encoder is powered directly by the subsequent electronics.

Encoder current consumption

Power supply of encoder and voltage drop on supply lines (sensor voltage)

Special characteristic of HTL interface board

Floating power supply is not possible (parameter P2 U-MSYS: from PWM or EXTERNAL).

MEASURE U/I with HTL interface board:

Only non-floating encoder power supply possible!

MEASURE - U/I	
MEASURING-SYST. FROM PWM	
12.3 U	94 mA
U-MSYS	Δ-U
12.3 U	0.0 U

FROM PWM

or


MEASURE - U/I	
MEASURING-SYST. CUSTOMER	
12.0 U	89 mA
U-MSYS	Δ-U
12.0 U	0.0 U

CUSTOMER (= subsequent electronics)


MEASURE U/I MODE on encoders without sensor lines

(11 μ App interface board)

- Encoder powered via PWM (parameter P2 U-MSYS: from PWM)

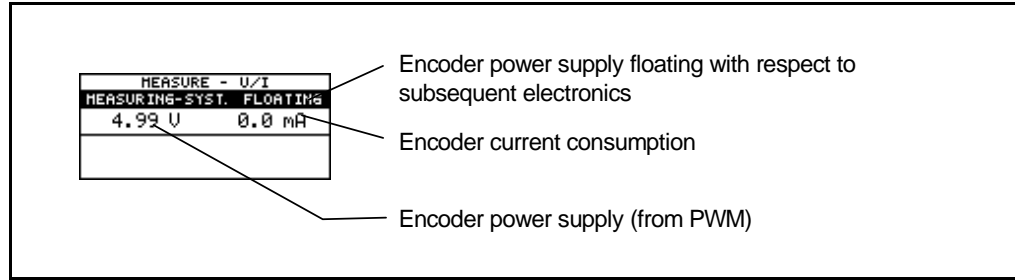

- Encoder powered via subsequent electronics and parameter P2 U-MSYS EXTERNAL

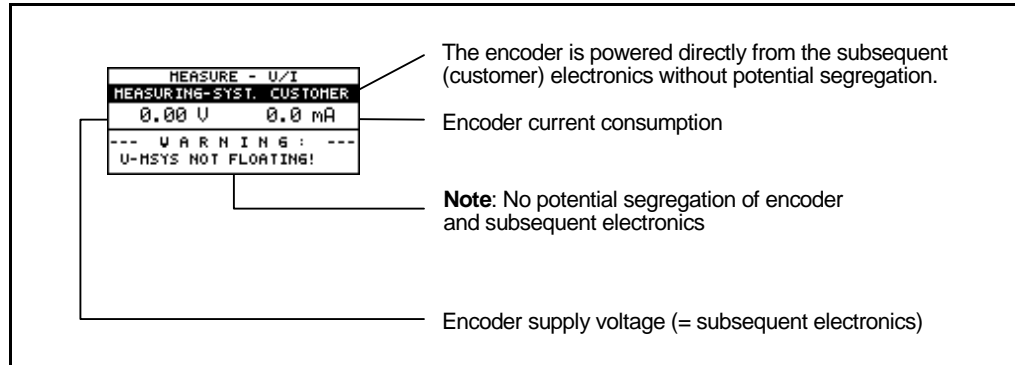

5.3.13 MEASURE AMPLITUDE mode

In this mode, the peak-to-peak values of the signal amplitudes of the incremental signals 1 and 2 are measured. The measuring result is always the amplitude of a single signal period.



Note

With sinusoidal encoder signals (11 μ App and 1 Vpp) the positive and the negative peaks are measured against U0, with square-wave encoder signals (TTL and HTL) the LOW level and the HIGH level are measured against 0 V.

The maximum measuring ranges for the different interface boards are listed in the table below:

Interface board	11 μ App	1 Vpp / absolute 1 Vpp	TTL	HTL
Max. measuring range	33 μ App PWM MODE 17 μ App PWT MODE	1.66 Vpp	low: 0 – 2.5 V high: 2.5 – 7.5 V	low: 0 – 7.5 V high: 7.5 – 22.5 V


If the EXPERT MODE is active, the encoder supply can be altered in the MEASURE AMPLITUDE MODE when using the 11 μ App or the 1 Vpp interface boards.

■ Switch menu bar to set the encoder voltage

■ Encoder voltage can be altered

Display of encoder voltage output by PWM


Explanation of the display for 1 Vpp and 11 µApp signal amplitude measurement

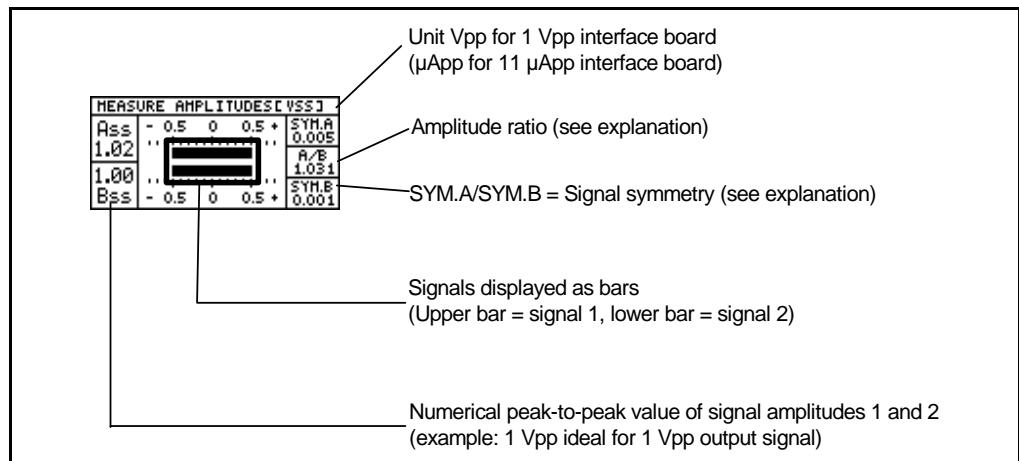

Note

Permissible tolerances for the output signals see "Interface description" on page 121

Explanation:

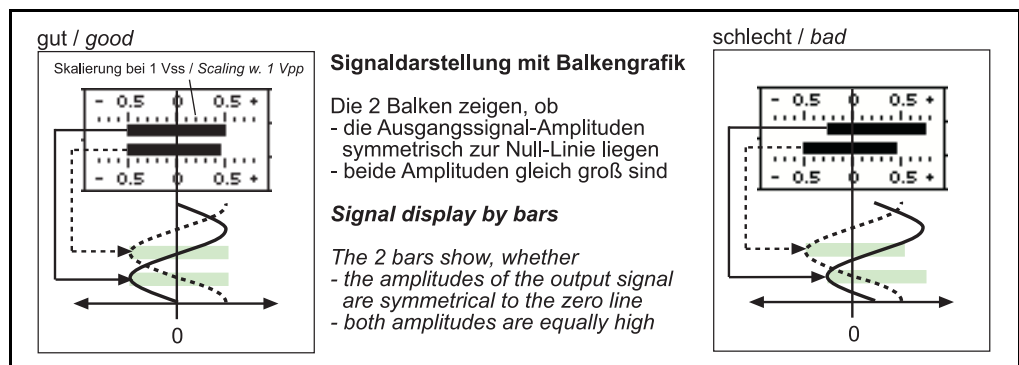


Note

The bar display allows for "rough estimation". Exact values are obtained by measuring the on-to-off ratio and the amplitude ratio, etc. An oscilloscope is recommended for signal evaluation!

Display of signal symmetry (SYM.1 and SYM.2)

Measuring the signal amplitude with the 11 µApp interface board
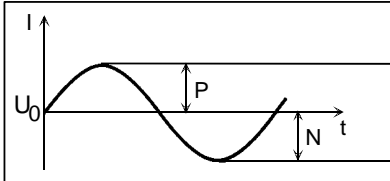
<p>SYM.1: Symmetrie1, Verhältnis positiver zu negativer Halbwelle von Inkrementalsignal Ie1 <i>Symmetry1, ratio of positive to negative half-wave of incremental signal Ie1</i></p> <p>SYM.2: Symmetrie2, Verhältnis positiver zu negativer Halbwelle vom Inkrementalsignal Ie2</p> <p>Berechnung: $\frac{P-N}{2 \times M}$ Ergebnis: Ideal = 0</p> <p><i>Symmetry2, ratio of positive to negative half-wave of incremental signal Ie2</i></p> <p>Calculation: $\frac{P-N}{2 \times M}$ Result: ideal = 0</p> <p>I1 / I2: Amplitudenverhältnis, Signalamplitude Inkrementalsignal Ie1 zu Ie2</p> <p>Berechnung: $\frac{M_{Ie1}}{M_{Ie2}}$ Ergebnis: Ideal = 1</p> <p><i>Amplitude ratio, signal amplitude increm. signal Ie1 to Ie2</i></p> <p>Calculation: $\frac{M_{Ie1}}{M_{Ie2}}$ Result: ideal = 1</p>	
---	---

<p>Ref. point of signal amplitude measurement (U_0)</p>	<p>Result displayed in µApp</p>																																				
<table border="1" style="border-collapse: collapse; width: 100%; text-align: center;"> <thead> <tr> <th colspan="6">MEASURE AMPLITUDESCLASS</th> </tr> </thead> <tbody> <tr> <td>Ie1</td> <td>- 10</td> <td>0</td> <td>10</td> <td>+</td> <td>SYM.1</td> </tr> <tr> <td>11.2</td> <td colspan="4">.....</td> <td>0.003</td> </tr> <tr> <td>I1/I2</td> <td colspan="4">.....</td> <td>1.016</td> </tr> <tr> <td>Ie2</td> <td>- 10</td> <td>0</td> <td>10</td> <td>+</td> <td>SYM.2</td> </tr> <tr> <td>11.2</td> <td colspan="4">.....</td> <td>0.903</td> </tr> </tbody> </table>	MEASURE AMPLITUDESCLASS						Ie1	- 10	0	10	+	SYM.1	11.2				0.003	I1/I2				1.016	Ie2	- 10	0	10	+	SYM.2	11.2				0.903	<p>Bar display of incremental signal 1; the position of the bars represents the symmetry of the incremental signals.</p> <p>Bar display of incremental signal 2</p> <p>Maximum range of signal amplitude measurement $33 \mu A_{pp}$ ($\pm 16.5 \mu A_{pp}$)</p>
MEASURE AMPLITUDESCLASS																																					
Ie1	- 10	0	10	+	SYM.1																																
11.2				0.003																																
I1/I2				1.016																																
Ie2	- 10	0	10	+	SYM.2																																
11.2				0.903																																
<p>Numerical peak-to-peak value of signal amplitude measurement for incremental signals 1 and 2 in µApp</p>																																					

Measuring the signal amplitude with the 1 Vpp interface board (and absolute/1 Vpp)


SYM.A: Symmetrie A, Verhältnis positiver zu negativer Halbwelle vom Inkrementalsignal A.
Symmetry A, ratio of positive to negative half-wave of incremental signal A.

SYM.B: Symmetrie B, Verhältnis positiver zu negativer Halbwelle vom Inkrementalsignal B.
Symmetry B, ratio of positive to negative half-wave of incremental signal B.

Berechnung: $\frac{P-N}{2 \times M}$ Ergebnis: Ideal = 0
 Calculation: Result: ideal = 0

A / B: Amplitudenverhältnis, Signalamplitude Inkrementalsignal A zu B
Amplitude ratio, signal amplitude increm. signal A to B

Berechnung: $\frac{M_A}{M_B}$ Ergebnis: Ideal = 1
 Calculation: Result: ideal = 1

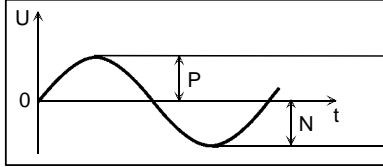

Ref. point of signal amplitude measurement (U_0)

Result displayed in Vpp

Bar display of incremental signal A; the position of the bars represents the symmetry of the incremental signals.

Bar display of incremental signal B

Maximum range of signal amplitude measurement 1.66 Vpp

Numerical peak-to-peak value of signal amplitude measurement for incremental signals A and B in Vpp
 Display when measuring range is exceeded:
 >>> Maximum limit exceeded
 <<< Minimum limit exceeded

MEASURE AMPLITUDE [VSS]				
A _{SS}	- 0.5	0	0.5 +	SYMA
1.02			0.005
1.00			A/B
			1.031
B _{SS}	- 0.5	0	0.5 +	SYMB
			0.001

Measuring the signal amplitude with the TTL or HTL interface board

The result is displayed in V

Incremental signal 1

Incremental signal 2

High level of a signal amplitude in volts

Low level of a signal amplitude in volts

BNC A	Ua1	Ua2
high	3.60	3.60
low	0.10	0.05

In the related soft-key row the following settings can be made:

TERMIN ON OFF	Activate or deactivate the terminating resistors (defined load of the square-wave signals). The active selection is highlighted.
UA1 /UA1 UA2 /UA2	Switch to the inverted signals. (In the field there are HTL encoders that do not operate with cross signals ($\overline{Ua1}$, $\overline{Ua2}$, $\overline{Ua0}$). In this case the display of the inverted signals is „ - - - - „.)
ESC	Terminate signal amplitude measurement.



Note

When do you have to activate the terminating resistor?

Setting for square-wave interfaces (TTL/HTL):

“ON” Standard setting; the terminating resistor is active irrespective of whether there is a subsequent electronics.

“OFF” Can be switched off for testing. (Reduction of the driving current of the subsequent electronics; not required for standard tests!)

Setting for 1Vpp interfaces:

“ON” Standard setting; the terminating resistor is active irrespective of whether there is a subsequent electronics.

“OFF” The terminating resistor is only switched off, if the adapter cable ID 324556-01 (no longer part of our product range; replaced by Interface board absolute/1 Vpp ID 312186-02) is used.

5.4 EXPERT MODE

Activating the EXPERT-MODE: see "Activating the EXPERT MODE" on page 102

In addition to the basic functions, the PWM offers further (expert) functions in the EXPERT MODE:

- Parameter programming
- Changing the encoder power supply
- Setting the interpolation
- Input of a preset
- PEAK HOLD function (storage of peak value)

5.4.1 Selecting EXPERT MODE functions

Example: PWM MODE and EXPERT MODE are active

■ Press OPT

■ Press EXPERT MODE

Note:
Depending on the parameter settings, other soft keys may be displayed!

EXPERT MODE functions
 ■ U-MSYS
 ■ PRESET
 ■ PARAMETER
 can be selected

5.4.2 Changing the U-MSYS supply voltage

U-MSYS <<<<	Reduce U-measuring system: The supply voltage of the measuring system can be reduced to approx. 3 V (HTL interface board: 10 V).
U-MSYS >>>>	Increase U-measuring system: The supply voltage of the measuring system can be increased to approx. 6 V (9 V*); (HTL interface board: 19 V, when operated with 24 V PWM power supply unit). * Parameter P3: U-MSYS limited to approx. 6 V (standard setting); limit can be increased to 9 V.

For testing the encoder supply voltage can be altered by pressing the keys "U-MSYS<<<<" or "U-MSYS>>>>".

Without subsequent electronics:

The connected encoder is powered with the optimum voltage depending on the interface board. (Example: For a 1 Vpp interface board, 5 V are set.)

With subsequent electronics:

The connected encoder is powered with the same voltage as is fed to the subsequent electronics.

Example: The NC provides an encoder power supply of 4.85 V; the PWM also sets the encoder voltage to 4.85 V.



Note

This function serves to check and simulate voltage drops on lines and voltage monitoring on subsequent electronics.

5.4.3 Input of PRESET VALUE



Note

If the PWM is operated as parallel counter in a position control loop, a preset value can be entered which corresponds to that of the subsequent electronics. PWM counter and subsequent electronics can be started simultaneously via parameter 9. In this mode both current counts can be compared during axis traverse.

■ Press PRE-SET


PRE-SET	Activate the PRESET editor. For the UNIVERSAL COUNTER a preset value can be entered.
----------------	---

Editor for PRESET value

Display of PRESET value

■ Load current count to universal counter

↓	Set preset size and sign
↑	
←	Select the decade
→	

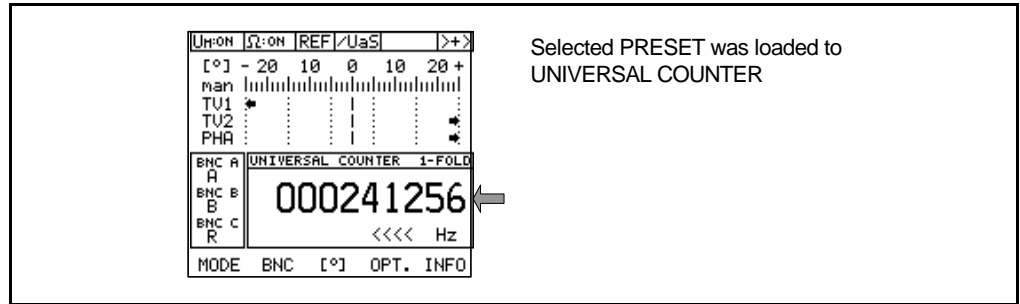

Note

Via parameter settings the PWM can be adapted individually to the subsequent electronics. (For parallel measurement: Counting direction, interpolation and start counter with ref. mark.)
See "Parameter P6 = Set INTERPOLATION" on page 88

5.4.4 PEAK HOLD




Note

The maximum value memory of the PHA/TV display (PEAK HOLD marks) only functions in the PWM MODE with active EXPERT MODE and after manual activation by PEAK H. START!
The PEAK HOLD function does not work together with automatic scaling of the TV/PHA display (see "Display of on-to-off ratio and phase shift" on page 59)!
The maximum value memory shows the positive and the negative maximum values of the PHA/TV error by means of marks.
The maximum value memory is deleted by changing the MODE. With automatic change-over of the measuring range the maximum value memory of the PHA/TV display is inactive.



Note

The machine axis must traverse continuously!
The measuring range between START and STOP is checked and the PEAK HOLD marks of the TV-/PHA display are frozen.
The START/STOP key must be pressed while the axes are moving, as otherwise the MIN/MAX memory will be deleted!

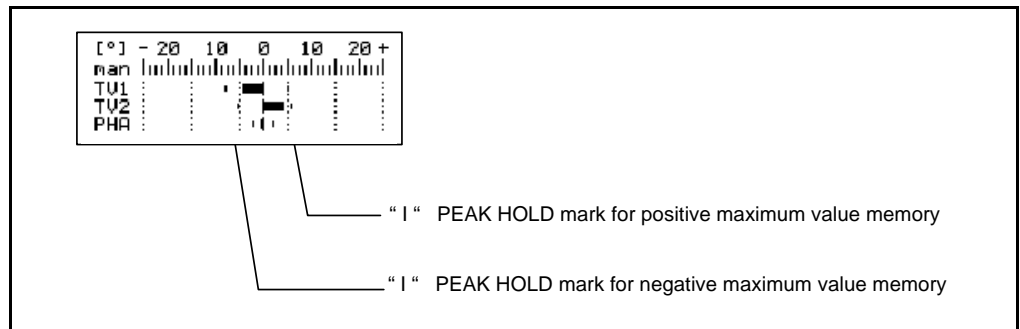


Starting and stopping the maximum value memory by hand

The keys for manual operation are part of the MODE soft-key row:

<table border="1"> <tr> <td>MODE</td> <td>BNC</td> <td>[°]</td> <td>OPT.</td> <td>INFO</td> </tr> <tr> <td>■</td> <td>□</td> <td>□</td> <td>□</td> <td>□</td> </tr> </table>		MODE	BNC	[°]	OPT.	INFO	■	□	□	□	□						
MODE	BNC	[°]	OPT.	INFO													
■	□	□	□	□													
<table border="1"> <tr> <td>COUNTR</td> <td>PULS</td> <td>U/I</td> <td>AMPL.</td> <td>→</td> </tr> <tr> <td>FREQUC</td> <td>NUMBER</td> <td>MEASUR</td> <td>MEASUR</td> <td></td> </tr> <tr> <td>□</td> <td>□</td> <td>□</td> <td>□</td> <td>■</td> </tr> </table>		COUNTR	PULS	U/I	AMPL.	→	FREQUC	NUMBER	MEASUR	MEASUR		□	□	□	□	■	
COUNTR	PULS	U/I	AMPL.	→													
FREQUC	NUMBER	MEASUR	MEASUR														
□	□	□	□	■													
<table border="1"> <tr> <td></td> <td>PWT</td> <td>PEAK H.</td> <td>→</td> </tr> <tr> <td></td> <td>MODE</td> <td>START</td> <td></td> </tr> <tr> <td>□</td> <td>□</td> <td>■</td> <td>□</td> </tr> </table>			PWT	PEAK H.	→		MODE	START		□	□	■	□	■ Start manual control of PEAK HOLD display			
	PWT	PEAK H.	→														
	MODE	START															
□	□	■	□														
<table border="1"> <tr> <td></td> <td>PWT</td> <td>PEAK H.</td> <td>→</td> </tr> <tr> <td></td> <td>MODE</td> <td>STOP</td> <td></td> </tr> <tr> <td>□</td> <td>□</td> <td>■</td> <td>□</td> </tr> </table>			PWT	PEAK H.	→		MODE	STOP		□	□	■	□	■ Stop manual control of PEAK HOLD display			
	PWT	PEAK H.	→														
	MODE	STOP															
□	□	■	□														
PEAK H. START	This soft key serves to start the PEAK HOLD display manually. An already existing PEAK HOLD display is deleted.																
PEAK H. STOP	After the START key was pressed, the STOP key is displayed. Pressing the STOP soft key freezes the PEAK HOLD marks in the display and the bars of the PHA/TV display disappear. The extremes can now be read.																
PEAK H. STOP	When the STOP soft key is pressed, it is displayed inversely which represents the "frozen" status. Pressing the inversely displayed STOP soft key terminates the PEAK HOLD function.																

Example of a PEAK HOLD application:

On a linear encoder, a **defined measuring range** in which a defect is assumed is to be checked with PEAK HOLD.

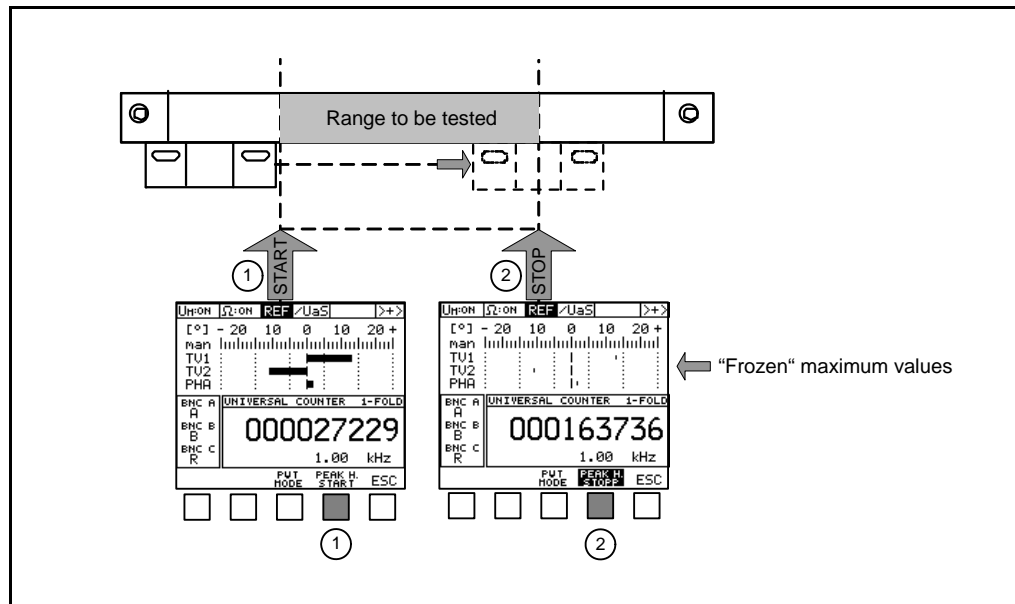

5.4.5 Description of PARAMETER programming

PWM functions can be altered via PARAMETER programming.



Note

The parameter range is only accessible when the EXPERT MODE is active.

Entering the PARAMETER MODE (example):

```

U:ON | Ω:ON | REF | UaS | >+>
[°] - 20 10 0 10 20 +
man |-----|
TU1 * | | | | |
TU2 * | | | | |
PHA * | | | | |
-----
BNC A | UNIVERSAL COUNTER 1-FOLD
  A   | 000000000
BNC B |
  B   |
BNC C |
  C   | <<<< Hz
-----
MODE  BNC  [°]  OPT.  INFO

```

UNIVERSAL COUNTER start screen

```

TERMIN U-MSYS      EXPRT
ON OFF ON OFF     MODE  ESC

```

■ Press OPT.

■ Press EXPRT MODE

```

U-MSYS U-MSYS  PRE-  PARA-
<<<< >>>>  SET   METER  ESC

```

■ Press PARAMETER

```

PARAMETER - Programming
P1=DIALOGUE      : ENGLISH
P2=U-MSYS        : FROM PWM
P3=U-MSYS-LIMIT  : ON [6 VOLT]
P4=EXPERT MODE   : NOT SAVE
COUNTER-PARAMETER
P5=EVALUATION    : NOT ACTIVE
P6=INTERPOLATION : 20-FOLD
P7=COUNT-MODE   : 0-1-2-
P8=COUNT-DIRECTN : FORWARD
P9=COUNTER-MODE  : UNIVERSALCOU.
-----
↓  ↑  CHAN-  FACTORY
SE  SE  DEFAULT ESC

```

Current parameter setting

↓	Select parameter with up/down buttons.
↑	
CHAN-GE	The inversely displayed parameter can be changed by soft key.
FACTORY DEFAULT	Resets the PWM to factory default. (P1 = DIALOG remains unchanged)
ESC	Terminate PARAMETER programming.



Note

Changes to parameters come into effect immediately and are non-volatile, i.e. when the PWM is switched on, it will start with the new settings.

Exception:

Parameter P3=U-MSYS-LIMIT is always reset to "ON [6 volts]"!

5.4.6 Parameter settings



Note

The parameter description is valid for the interface boards:
1 Vpp, 11 µApp, TTL and HTL

The multi-functional absolute/1 Vpp interface board differs in parameter view and operation (see "1 Vpp absolute interface board" on page 219).

Parameter P1 = Dialog language

<pre>PARAMETER - Programming P1=DIALOGUE : ENGLISH P2=U-MSYS : FROM PWM P3=U-MSYS-LIMIT : ON C6 VOLTJ P4=EXPERT MODE : NOT SAVE COUNTER-PARAMETER P5=EVALUATION : 1-FOLD P6=INTERPOLATION : NOT ACTIVE P7=COUNT-MODE : 0-1-2-.. P8=COUNT-DIRECTN : FORWARD P9=COUNTER-MODE : UNIVERSALCOU. ↓ ↑ CHAN- FACTORY GE DEFAULT ESC</pre>	P1 = DIALOG: - GERMAN (factory setting) - ENGLISH - FRENCH
--	--

Parameter P2 = Selection of encoder operating voltage

In P2 = U-MSYS two settings are available:

1. FROM PWM
2. EXTERNAL EXTERNAL

1. 1. Parameter P2 setting FROM PWM selected

<pre>PARAMETER - Programming P1=DIALOGUE : ENGLISH P2=U-MSYS : FROM PWM P3=U-MSYS-LIMIT : ON C6 VOLTJ P4=EXPERT MODE : NOT SAVE COUNTER-PARAMETER P5=EVALUATION : 1-FOLD P6=INTERPOLATION : NOT ACTIVE P7=COUNT-MODE : 0-1-2-.. P8=COUNT-DIRECTN : FORWARD P9=COUNTER-MODE : UNIVERSALCOU. ↓ ↑ CHAN- FACTORY GE DEFAULT ESC</pre>
--



Note


With the parameter setting "P2 = from encoder" the encoder is powered by the PWM 9. If no subsequent electronics is connected the basic setting of the encoder power supply by the PWM 9 is 5 V (except when operating with HTL interface board; in this event the voltage is 12 V.)

If a subsequent electronics is connected to the PWM 9, the PWM measures the voltage of the subsequent electronics and then powers the encoder **with the same voltage**

Example: If the subsequent electronics provides 4.8 V, the PWM 9 also sets the power supply to 4.8 V.

The current limit of the encoder voltage is set to 500 mA.

By means of floating power supply reliable operation of subsequent electronics with 11 µApp and 1 Vpp encoder interfaces is ensured.

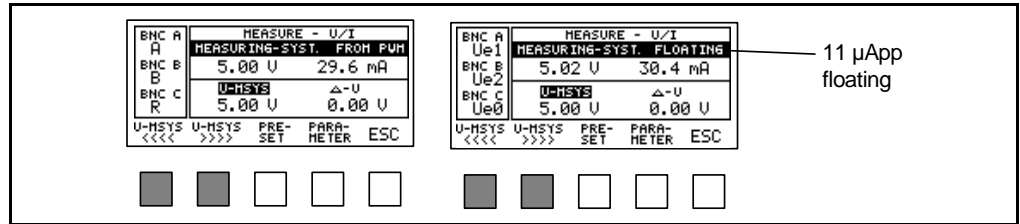

The voltage level of the encoder supply can be altered for diagnosis.
The basic setting is 5 V (12 V for HTL interface board).

Why is potential separation of PWM and subsequent electronics (11 µApp interface) required?

Due to different reference potentials of the 11 µApp encoder signals and the interface boards (0 V), the signals **may** be shifted. The signal shifts can cause counting errors in the subsequent electronics, and – in the most unfavorable case – generate an error in the measuring circuit. Potential separation prevents signal shift, and the machine axis operates correctly, even when the PWM is switched on.



DANGER

If you intend to disable potential separation, first check whether the machine axes are stable, i.e. will not move uncontrolled!

2. Parameter P2 EXTERNAL selected



Note

P2 "EXTERNAL". is only effective, if the encoder is powered by a subsequent electronics (TNC, ND, VRZ, ...)

Otherwise an error message is displayed:



The PWM itself is always powered by the PWM power supply unit!

P2: EXTERNAL offers two settings:

1. ADJUST ON
2. ADJUST OFF

PARAMETER - Programming

F1=DIALOGUE : ENGLISH

U-MSYS : EXTERNAL

POWER SUPPLY (U-MSYS) EXTERNAL = FROM SUBSEQUENT ELECTRONIC

CHOOSE EXTERNAL SUPPLY:

ADJUST ON:
PWMs COPIES U-MSYS FROM SUBSEQ. ELECTR. U-MSYS CAN BE ADJUSTED

ADJUST OFF:
U-MSYS IS SWITCHED FROM THE SUBSEQUENT ELECTRONIC (WITHOUT CHANGE) TO THE MEASURING SYSTEM

>>> GO ON U-MSYS ESC <<<<

ADJUST
ON OFF

The PWM copies the voltage provided by the subsequent electronics.
Advantage: The voltage may be altered for diagnosis.
Example: The subsequent electronics provides 4.7 V, the PWM outputs 4.7 V for the encoder via voltage controller.
This voltage can be increased or reduced.

BNC A	MEASURE - U/I	
A	MEASURING-SYST. EXTERNAL	
BNC B	4.88 U	29.1 mA
B		
BNC C	U-MSYS	Δ-U
R	4.88 U	0.00 U

ADJUST
ON OFF

The encoder power supply of the subsequent electronics is looped through the PWM without changes (1:1) and is displayed.

Display of selected encoder voltage

BNC A UNIVERSAL COUNTER 1-FOLD

A

BNC B 00000000

B

BNC C <<<< Hz

R

MODE BNC [°] OPT. INFO

- Open the INFO screen.

↓

BNC A SOFTWARE : 508334-07

A INTERFACE : 1VSS


BNC B EXPERT-MODE : ACTIVE

B HEALTH_F03 : 104

BNC C U-MSYS : FROM PWM

R NOT FLOATING

Information on encoder power supply.
In the example: Encoder powered from PWM.

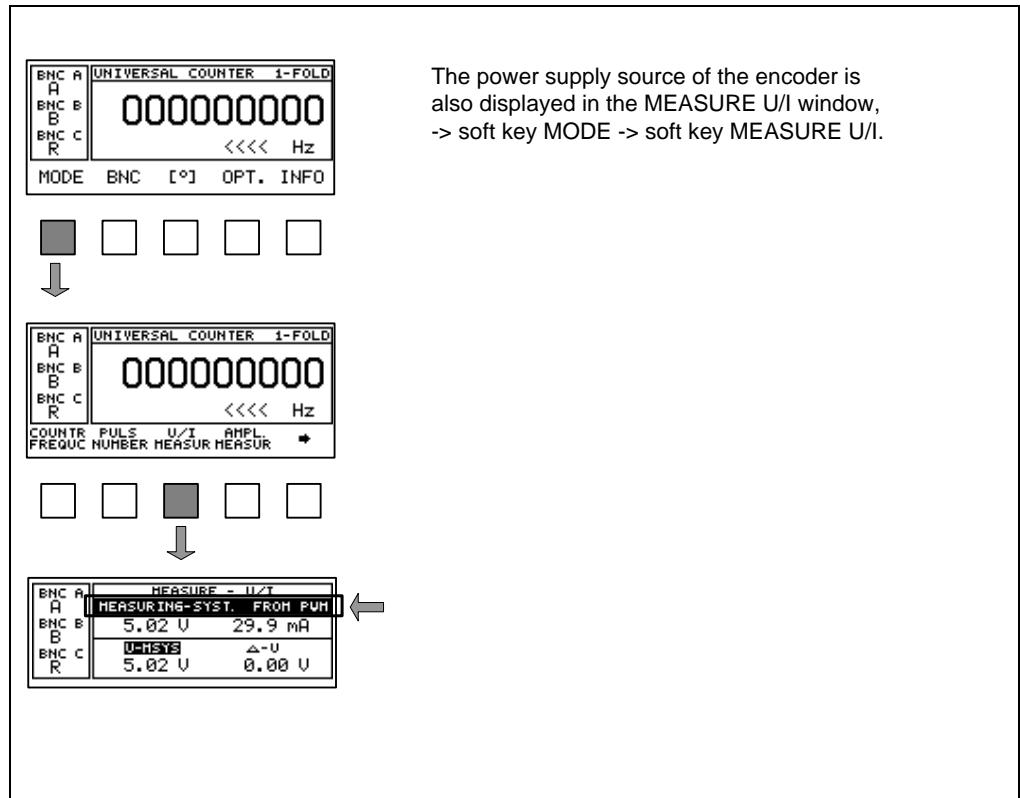

The power supply source of the encoder is also displayed in the MEASURE U/I window, -> soft key MODE -> soft key MEASURE U/I.



Note

With the ADJUST ON setting, the power drawn from the subsequent electronics is about 50 % higher than with ADJUST OFF (due to efficiency factors of switching controllers in the PWM).
 Note that the voltage drop on the supply line from subsequent electronics to PWM is higher as well, due to the increased current intensity!

Information on measuring without potential separation (refers to 11 µApp interface)



Attention

Subsequent electronics with 11 µApp encoder interfaces may no longer work properly owing to signal displacements (potential differences).



DANGER

Always check whether the machine axes traverse steadily, i.e. do not move uncontrolled.



Note

The power drawn from the subsequent electronics to power the encoder is only slightly higher than the power requirement of the encoder. About 10 mA are used for the voltage monitoring of the subsequent electronics.

Parameter P3 = Limits of encoder power supply



Note

The parameter P3 U-MSYS-LIMIT defines the maximum limit of the encoder supply voltage. Factory setting: LIMIT 6 volts.

Standard encoders are operated with a voltage of 5 V \pm 5 %!

The screenshot shows the 'PARAMETER - Programming' screen with the following settings:

```

PARAMETER - Programming
P1=IALOGUE      : ENGLISH
P2=U-MSYS      : EXTERNAL
P3=U-MSYS-LIMIT : ON [6 VOLT]
P4=EXPERT MODE : NOT SAVE
COUNTER-PARAMETER
P5=EVALUATION  : 1-FOLD
P6=INTERPOLATION : NOT ACTIVE
P7=COUNT-MODE : 0-1-2-..
P8=COUNT-DIRECTN : FORWARD
P9=COUNTER-MODE : UNIVERSALCOU.
    
```

Below the screen, a row of five buttons is shown, with the third button (representing P3) highlighted. An arrow points down to a second screen showing:

```

P3=U-MSYS-LIMIT : OFF [9 VOLT]
    
```

LIMIT changed to 9 volts!

Below this, another screen shows the 'MEASURE - U/I' screen with the following data:

BNC	U-MSYS	Δ -U
A	5.00 U	29.6 mA
B	U-MSYS	
C	5.00 U	0.00 U
R		

In the EXPERT MODE you can set the encoder voltage, if parameter P2 is set to FROM PWM or EXTERNAL and ADJUST ON!



DANGER

By switching LIMIT 6 V off it is possible to adjust the encoder voltage to 9 V (\pm 1 V).

Overvoltage may destroy the encoder!



Note

When you switch off the PWM, the parameter P3 is always reset to factory setting (LIMIT 6 V)! **The parameter P3 is not active with HTL interface boards!**

Parameter P4 = Save EXPERT MODE setting to non-volatile memory

Two settings are possible:

Setting 1 (factory setting):


P4 = EXPERT MODE: NOT SAVE

If the EXPERT MODE was active, it is deactivated when the PWM power supply is interrupted.

Setting 2:

P4 = EXPERT MODE: SAVE

The EXPERT MODE remains active after an interruption of the PWM power supply (permanently stored).

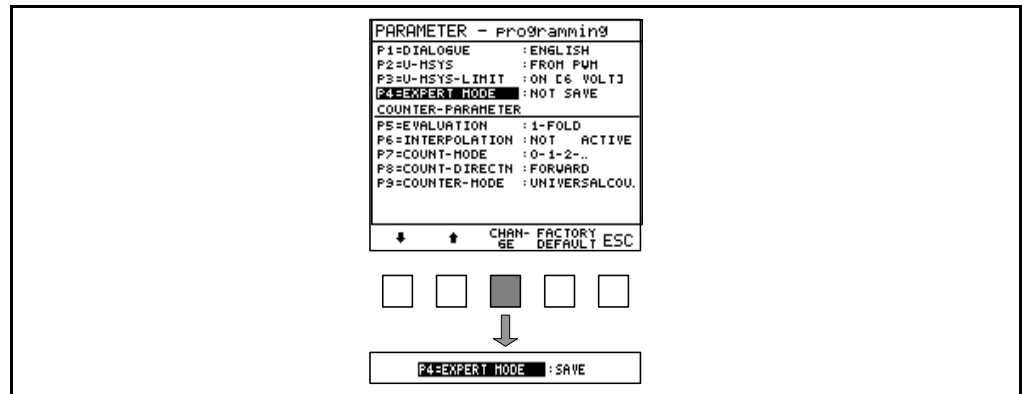

Parameter P5 = Edge evaluation




Note

Edge evaluation is only possible for encoders with square-wave output signals (TTL/HTL).

In parameter P5 three different settings can be made for the UNIVERSAL COUNTER.

- P5 = EVALUATION: 1-FOLD
- 2-FOLD
- 4-FOLD

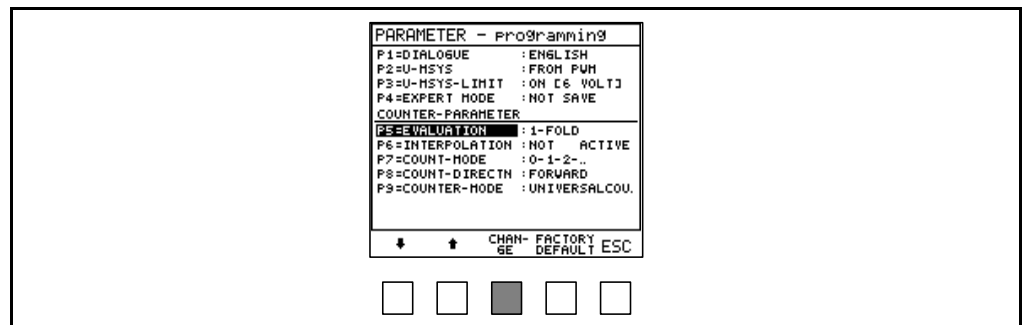


The edge evaluation determines how many edges per signal period of the incremental signals 1 and 2 are counted by the UNIVERSAL COUNTER.



Note

The PWM MODE DETERMINE PULSE NUMBER always uses 1-fold evaluation. If you select an interpolation, evaluation is "NOT ACTIVE".

Explanation of edge evaluation:

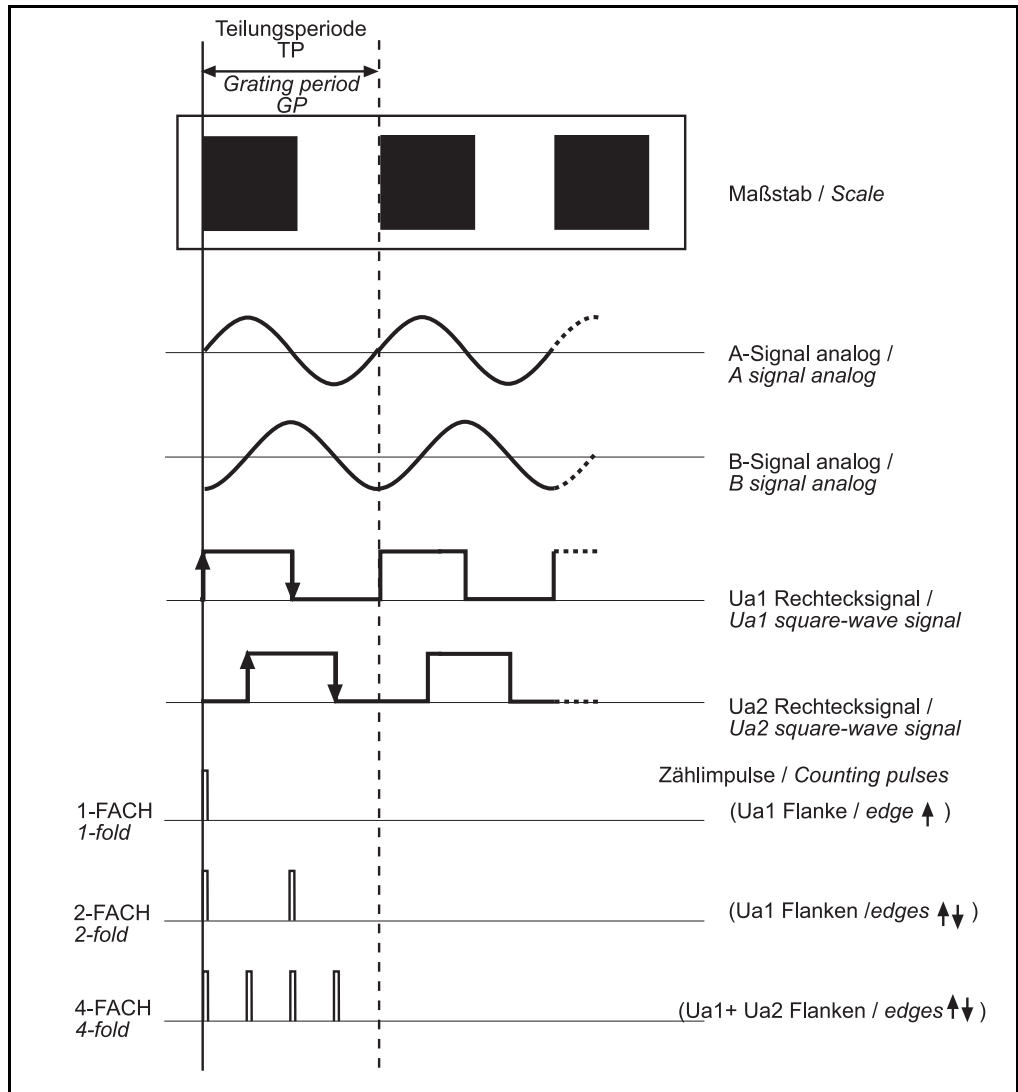

Parameter P6 = Set INTERPOLATION

P6 = INTERPOLATION: 1-FOLD ... 1024-fold can be selected.

↓	Select numerals 0 ... 9
↑	Select decimal place
SET INTERP.	Save interpolation (in the example: 20-fold)



Note

An interpolation can only be set for encoders with analog output signals (11 µApp, 1 Vpp).

Example:

Encoder signal period (SP) = 20 µm

The resolution of the UNIVERSAL COUNTER (= counting step of the last digit) is to be 1 µm.

$$\text{Interpolation setting} = \frac{\text{Signal period of encoder}}{\text{Counting step}} = \frac{20 \mu\text{m}}{1 \mu\text{m}} = \text{Set } \underline{\underline{20-FOLD}} \text{ INTERPOLATION}$$

Parameter P7 = Counting mode




Note

The parameter P7 defines the counting step of the last digit of the universal counter. This function is used to adapt the counting mode of the PWM to that of the subsequent electronics (parallel measurement). The counting mode can only be set for TTL and HTL interfaces.


In parameter P7, three different settings can be made for the UNIVERSAL COUNTER.

P7 = Counting mode: 0 - 1 - 2 - ..
 0 - 2 - 4 - ..
 0 - 5 - 0 - ..

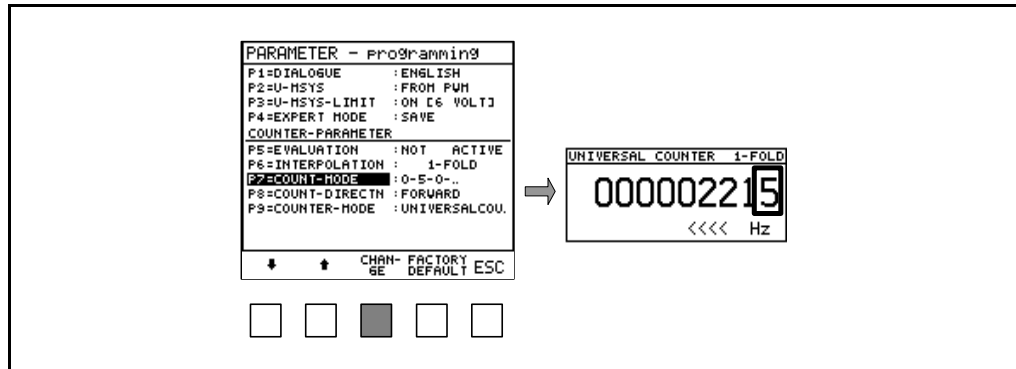

Parameter P8 = Set COUNTING DIRECTION

P8 = COUNTING DIRECTION: FORWARD
 BACKWARD

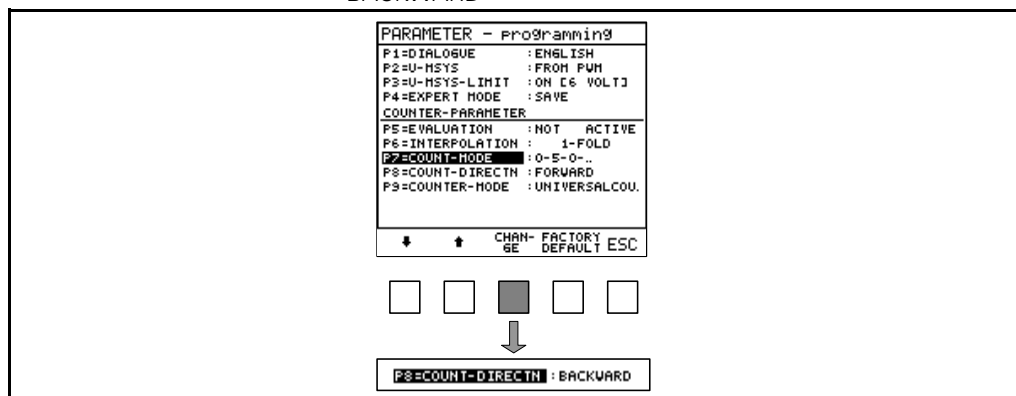

Note

The parameter P8 determines the counting direction of the UNIVERSAL COUNTER.


This function is used to adapt the counting direction of the PWM to that of the subsequent electronics (parallel measurement).

Parameter P9 = Set COUNTER MODE

P9 = COUNTER MODE: UNIVERSAL COUNTER (factory setting)
START WITH REF

The UNIVERSAL COUNTER setting is the standard counting function.

If set to START WITH REF, the UNIVERSAL COUNTER waits for a reference signal before it starts counting.

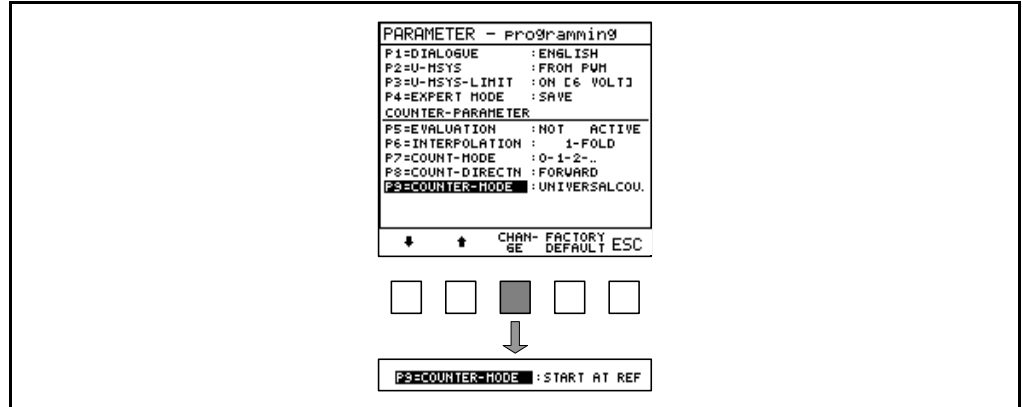

Note

A numerical value can be entered as preset for the UNIVERSAL COUNTER. In this event the preset value is the start value of the counter.

This function is used to adapt the PWM UNIVERSAL COUNTER to the subsequent electronics (parallel measurement).

5.5 Measuring with the multi-functional interface board 1 Vpp, absolute, Zn/Z1, EnDat, SSI

General



The 1 Vpp interface board serves to check the following encoder interfaces:

- Zn/Z1, 1 Vpp output signals (encoders with sine commutation)
- EnDat with 1 Vpp output signals
- SSI with 1 Vpp output signals
- Programmable SSI with 1 Vpp output signals

The interface board features 17-pin HEIDENHAIN flange sockets.

The desired encoder interface is selected in parameter P9 in the PWM EXPERT MODE or in the screen displayed during power-on.

5.5.1 Encoders with Zn/Z1 track and 1 Vpp interface

E.g. ERN 1185, ERN 1387 (with commutation signals)

With the interface card you can switch between the two output signal tracks (incremental signal AB, commutating signal CD). The encoder signals can be fed through the PWM to an oscilloscope.

The output signals A, B, R (incremental signals and reference mark), and CD (commutating signal) are checked in the same way as with a 1 Vpp interface.



Note

The PWM universal counter needs a minimum input frequency of 20 Hz to work. When checking the CD commutating signal, the input frequency of 20 Hz is only obtained as of a shaft speed of 1200 rpm (CD signal = 1 signal period per revolution).



DANGER

The maximum mechanical speed of the encoder must not be exceeded!

Caution!

Due to different wiring possibilities it is essential that you read the section "Overview of the adapter cables"

An adapter cable is available which is equipped with a PCB connector for direct connection to the encoder board. It serves to test encoders with different wirings with the PWM (see "Overview of the adapter cables" on page 103).

5.5.2 Encoders with EnDat and 1 Vpp interface

With the "SSI/EnDat" setting the incremental signals of absolute EnDat and SSI encoders can be checked in feed-trough mode.

Via the BNC sockets the incremental output signals (1 Vpp interface) and the EnDat data protocol can be fed to and evaluated with an oscilloscope.

The incremental signals are checked in the same way as with a 1 Vpp interface.



DANGER

Caution!

Due to different wiring possibilities it is essential that you read the section "Overview of the adapter cables"



Note

EnDat and SSI encoders measure absolutely and do not feature reference marks!

The PWM cannot process absolute data protocols (EnDat or SSI).

For checking the absolute data protocols, computer interface cards (EnDat and SSI interfaces), programming cables with T-coupler, test and programming software (programmable SSI interface) are available.

Please contact the HEIDENHAIN service, if you require such equipment.

If the BNC sockets receive digital and analog signals at the same time, the digital signals may crosstalk on the analog signals. The higher the band width of the connected oscilloscope, the more visible the crosstalk.

This effect only concerns the BNC outputs (no crosstalk can be observed at the OUT encoder output)!

5.5.3 Encoders with SSI and 1 Vpp interface (5 V operating voltage)



Note

Same functional range as encoders with EnDat interface:

1 Vpp output signals can be checked with the PWM; checking the absolute output signals requires an interface card or an oscilloscope (PWM BNC outputs).

5.5.4 Encoders with programmable SSI and 1 Vpp interface (10 – 30 V operating voltage)



Note

These are absolute encoders with programmable interface; on the ID plate there must be the interface designation SSI 09 or SSI 10!



Attention

Operating voltage 10 – 30 V!

This high operating voltage must be **separately activated** in a parameter!

The other functions are the same as those of encoders with EnDat interface.

See "Possible settings when programmable SSI interface is selected" on page 96.

5.6 Operating the 1 Vpp absolute interface



Note

Insert the interface board and then activate the EXPERT MODE!

5.6.1 Selecting the interface on the power-on screen

Optional display field for notes

The highlighted interface is selected. Always press ESC to confirm!

- Select the interface

When ESC was pressed the previously selected PWM or PWT operating mode is displayed.

The following interfaces can be selected:

1 Vpp	1 Vpp interface, "standard" (Encoders without CD track, with 17-pin connector)
1 Vpp AB	Encoder with sinusoidal commutating track (Zn/Z1) Incremental track AB (= Zn)
1 Vpp CD	Encoder with sinusoidal commutating track (Zn/Z1) Incremental track CD (= Z1)
SSI/ENDAT	Encoder with EnDat or SSI interface
PROG.SSI	Encoder with programmed SSI interface (SSI 09 and SSI 10 with 10 – 30 V operating voltage)



Note

Incremental encoders without CD track that are equipped with 17-pin connectors must be checked in the "1 Vpp" setting (to avoid signal disturbances).

5.6.2 Selecting the interface via parameter

Example:

Switching from active 1 Vpp AB track to CD track



Note

This function can only be performed with active EXPERT MODE.
Activation see "Activating the EXPERT MODE" on page 102

The sequence of screens and actions is as follows:

- Screen 1:** Shows the main display with 'UNIVERSAL COUNTER 1-FOLD' and a frequency of '00000000 Hz'. The 'OPT.' soft key is highlighted.
 - Press OPT.
- Screen 2:** Shows 'TERMIN U-HSYS' and 'EXPRT MODE'. The 'EXPRT MODE' soft key is highlighted.
 - Press EXPRT MODE
- Screen 3:** Shows 'U-HSYS U-HSYS PRE- PARA-' and '<<<< >>>> METER ESC'. The 'PARA-METER' soft key is highlighted.
 - Press PARA-METER
- Screen 4:** Shows 'PARAMETER - Programming' with various settings. The 'CHAN-GE' soft key is highlighted.
 - Select P10
 - Press CHAN-GE
- Screen 5:** Shows 'Please select meas.system' with '1V55' selected. The 'CD' and 'ESC' soft keys are highlighted.
 - Press CD
 - Press ESC to confirm
- Screen 6:** Shows the main display with 'UNIVERSAL COUNTER 1-FOLD' and a frequency of '00000001 Hz'. The 'INFO' soft key is highlighted.
 - CD track selected (see also: BNC window)
- Screen 7:** Shows 'SOFTWARE : E08334-XX' and 'INTERFACE : 1V55 2N/Z1 CD'. The 'INFO' soft key is highlighted.
 - Pressing the INFO soft key displays the active interface.

5.6.3 Fast changeover from AB to CD track



Note

AB and CD tracks only possible with 1 Vpp

Example:

Switching from active 1 Vpp AB track to CD track

■ Press INFO

■ Press 1 Vpp CD

CD track selected (also see: BNC window)

Pressing the INFO soft key displays the active interface.



Note

Incremental encoders without CD track that are equipped with 17-pin connectors must be checked in the "1 Vpp" setting (to avoid signal disturbances).

5.6.4 Possible settings when programmable SSI interface is selected



Attention

Encoder power supply 10 – 30 V!
Connecting an encoder with 5 V operating voltage will destroy the encoder electronics!



Note

After power interruption the encoder operating voltage is reset to 5 V.

Switching to 10 – 30 V power supply

The sequence of screens is as follows:

- PARAMETER - Programming**: Shows various system parameters. The parameter **P10=MSYS-INPUT** is highlighted and set to **PROG. SSI**. Below the screen are five buttons: three grey and two white. The second white button is labeled **CHAN-GE**.
- PARAMETER Progr. SSI 09/10**: Shows the current setting **U* CUP3 EPIN 733** set to **5V**. The same five buttons are present.
- PARAMETER Progr. SSI 09/10**: Displays a warning: **--- WARNING : ---**
U-MSYS = HTL [10-30 V] !!
>>> 60 ON WITH ESC <<<
- PARAMETER Progr. SSI 09/10**: Shows the voltage has changed to **10-30V**. Below this, other parameters are visible: **P02=U-MSYS : FROM PWM** and **P11=SENSOR UMSYS : OPEN**. The fifth button (previously grey) is now highlighted.


- Change to Parameter menu
- Press all 3 keys simultaneously
- Programmable SSI interface selected
- Press CHAN-GE
- Warning is displayed
- Press CHAN-GE
- Press ESC
- Display changes to 10 - 30 V
- Press ESC
- 12 V encoder operating voltage is now active!

Second display of interference signal with programmable SSI interface



Note

The $\overline{UaS2}$ signal is only displayed when the terminating resistor is switched on.

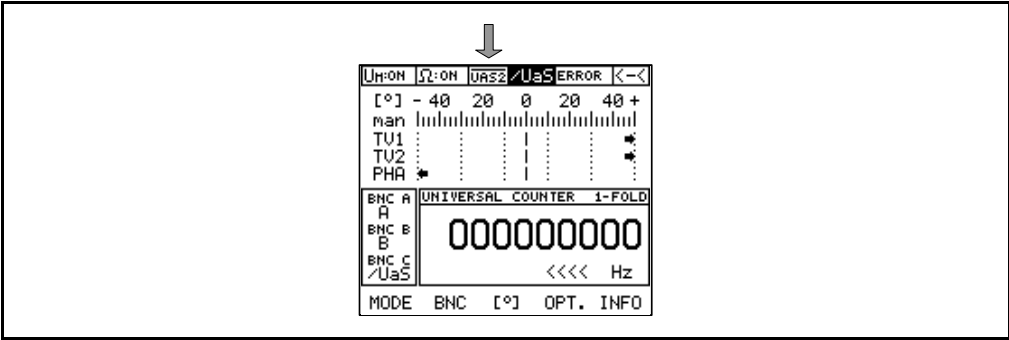

The encoder fault-detection signal $\overline{UaS2}$ is generated by the encoder and has nothing to do with the \overline{UaS} signal from the PWM!
The encoder outputs the $\overline{UaS2}$ signal on PIN 3 and transfers it to the PWM display.

6 Activating another PWM measuring mode

6.1 General explanations of the different modes



Note

When being switched off, the PWM stores its current setting.
The last setting is loaded when the unit is switched on.
The EXPERT MODE is the only exception; it can be saved permanently via parameter.

PWT MODE

“INITIAL MODE” for easy assessment of the quality and the amplitude of the output signals.
Simple diagnosis of the reference-mark signal (position and width).
Mounting aid for “exposed encoders” to optimize the parallelism of the grating and the air gap between scanning head and scale.



Note

An oscilloscope **can** be used.

PWM MODE

Inspection of analog and square-wave incremental signals by measuring TV1/2 (on-to-off ratio) and PHA (phase shift).
Detailed measurements of counting function, amplitude size and several status settings are possible in the EXPERT MODE.



Note

We recommend using an oscilloscope for signal evaluation!

EXPERT MODE

This mode provides access to the PWM status settings. Parameter settings can be changed, interpolation and preset counter values etc. set.



Note


The parameter range can only be changed in the PWM MODE!

6.2 Activating the PWT MODE



Note

Pressing the soft key (PWM or PWT MODE) twice reduces the display time of the power-up screen.

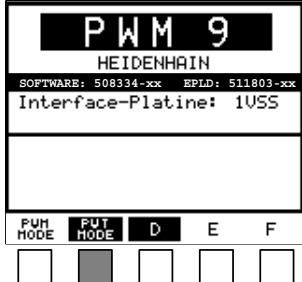

Switch on PWM.

While the power-on screen is displayed (for approx. 10 s) press soft key.

D, E or F = Language


- Select **PWT MODE**.



Note

Active functions are displayed inversely (dark).

6.3 Switching from PWT MODE to PWM MODE

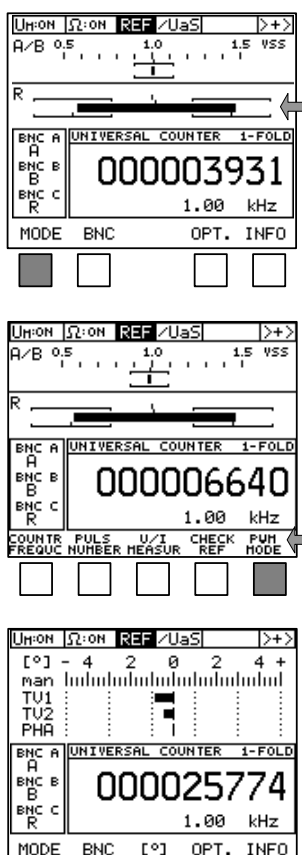

PWT MODE active

Typical display:
3 square brackets and 2 bars


- Press **MODE**

Menu bar changes its functionality!

- Select **PWM MODE**

PWM MODE active

6.4 Switching from PWM MODE to PWT MODE

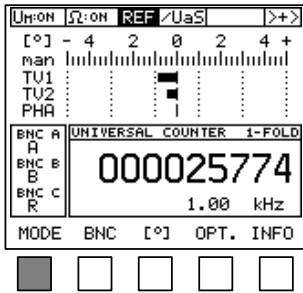


PWM MODE active

Typical display:


- Degrees [°] scaling
- Bar display of TV1/TV2 (on-to-off ratio) and PHA (phase shift)

- Press **MODE**.

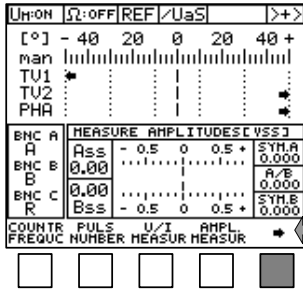


Menu bar changes its functionality!

- Press soft key to display expanded menu bar.

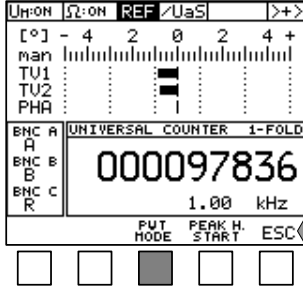


Menu bar changes its functionality!

- Press **PWT MODE**.

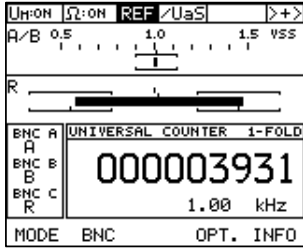

PWT MODE active

6.5 Activating the EXPERT MODE

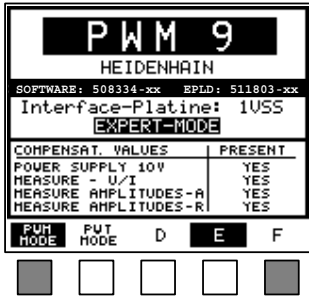

Active **EXPERT MODE**

← EXPERT MODE display


- Switch on PWM.
(An interface board must be inserted!)
- **Simultaneously press the outer two soft keys** while the power-on message is displayed (for approx. 10 seconds).



Note

When the PWM was off, the EXPERT MODE has to be reactivated.
Permanent activation is possible via parameter (see "Parameter P4 = Save EXPERT MODE setting to non-volatile memory" on page 86).

6.6 Restoring the factory default configuration

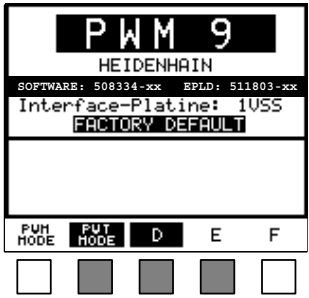

← Display of factory default setting

- Switch on PWM.
(An interface board must be inserted!)
- While the power-on message is displayed (approx. 10 secs) press the **middle 3 keys at the same time.**
- Default setting is restored.

Factory default configuration

- PWT MODE (interface board: 1 Vpp, 11 μ App, 1 Vpp absolute)
- PWM MODE (interface board: TTL, HTL)
- BNC assignment see "Possible assignments of the BNC sockets" on page 57
- UNIVERSAL COUNTER
- Standard settings of the parameters



Note

The factory default configuration can also be restored in the parameter menu (see "Description of PARAMETER programming" on page 80).

7 Overview of the adapter cables


7.1 Adapter (assignment converter) for non-HEIDENHAIN wiring




Attention

Please check the pin assignment!
 If a motor encoder is assigned (e.g. flange socket, encoder output on motor) the adapter (assignment converter) ID 349312-xx must be inserted. If the adapters are not used, the motor encoder may be destroyed!

Example:
 Adaptation of the PWM 9 interface boards with HEIDENHAIN Pos.Enc. (position encoder) wiring to a motor encoder with Siemens wirings Mot.Enc.

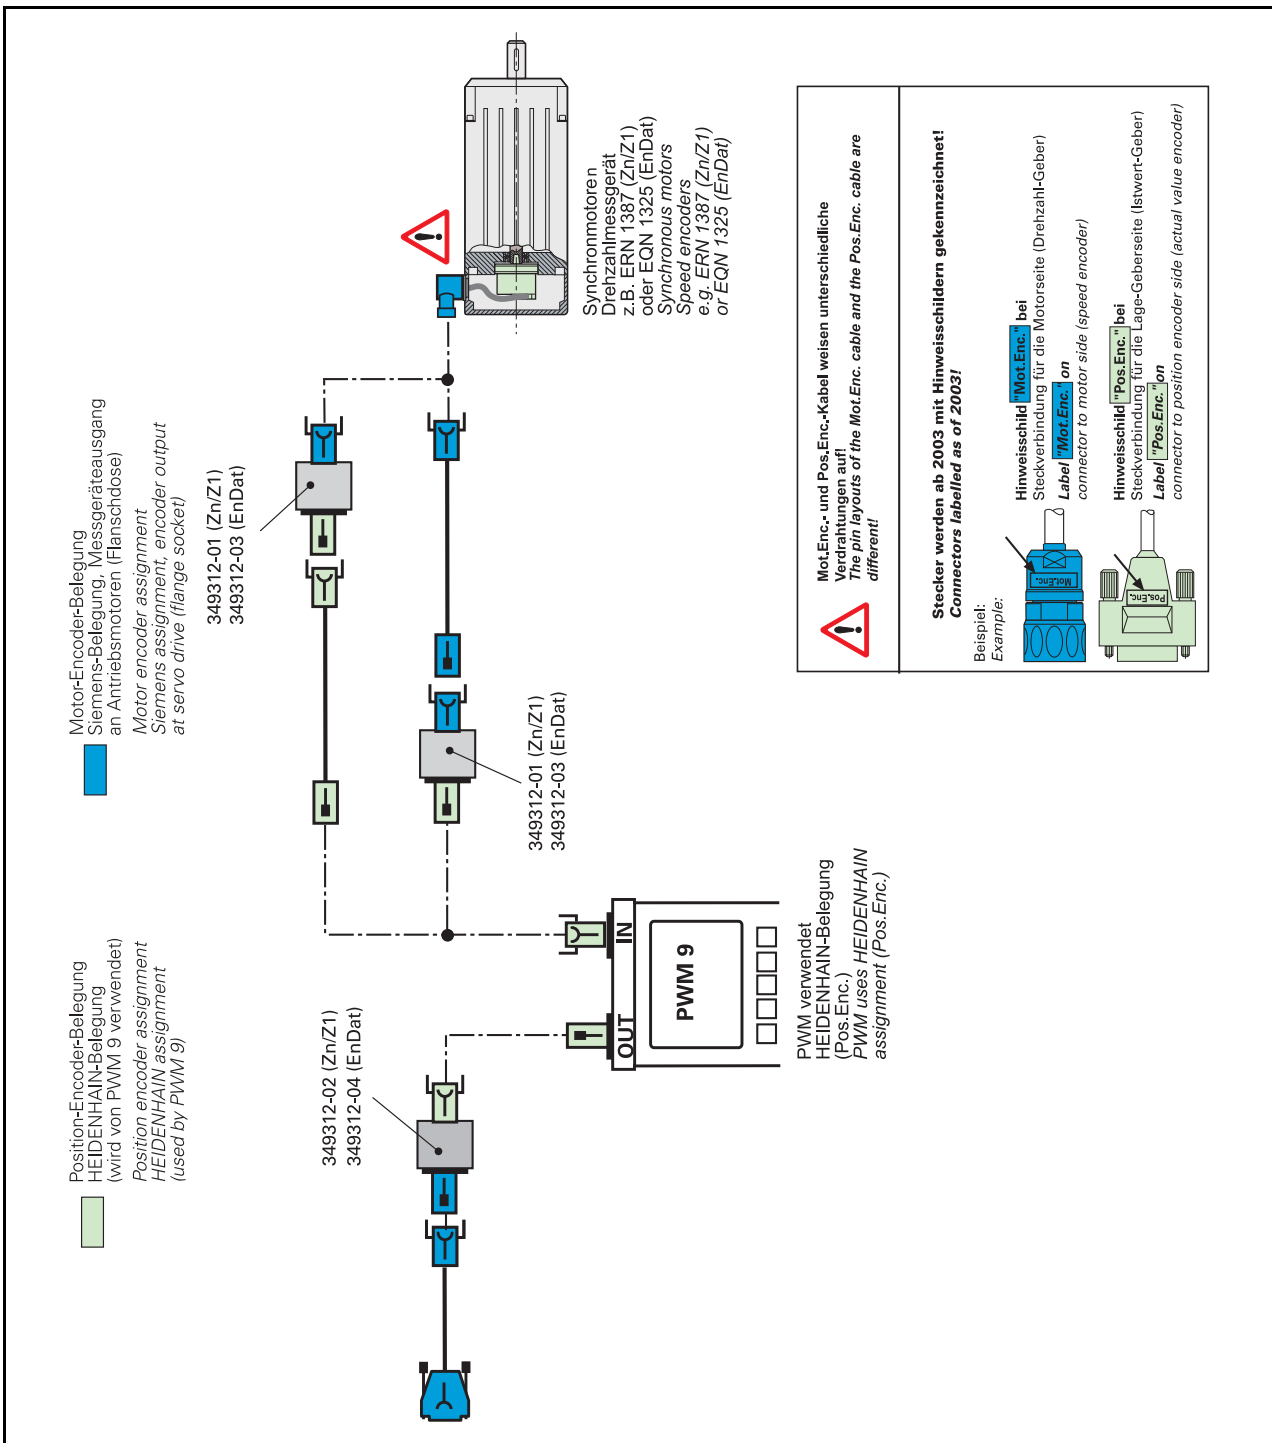

7.2 1 Vpp and TTL interface boards

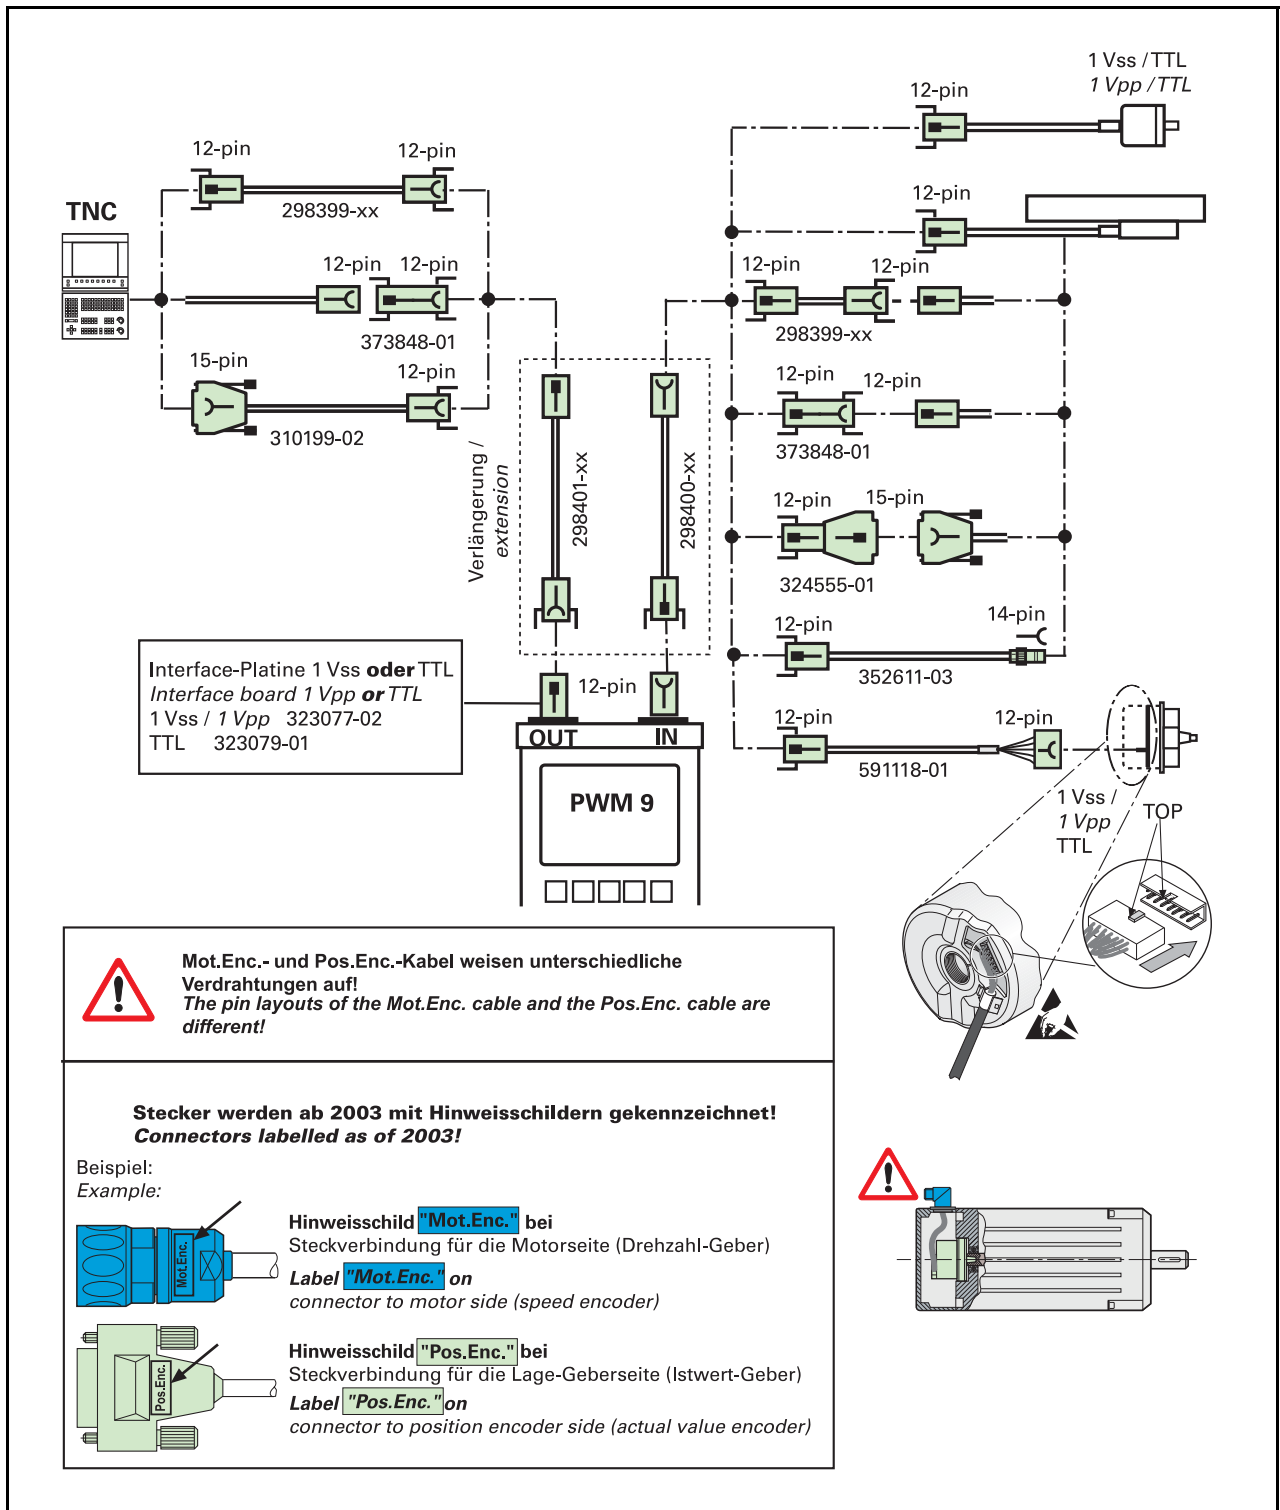

Note


The adapter cables are the same for 1 Vpp and TTL applications (identical layouts).




DANGER

Contact the motor manufacturer regarding the assignment of the motor flange socket (no HEIDENHAIN layout)!

7.3 11 µApp interface board

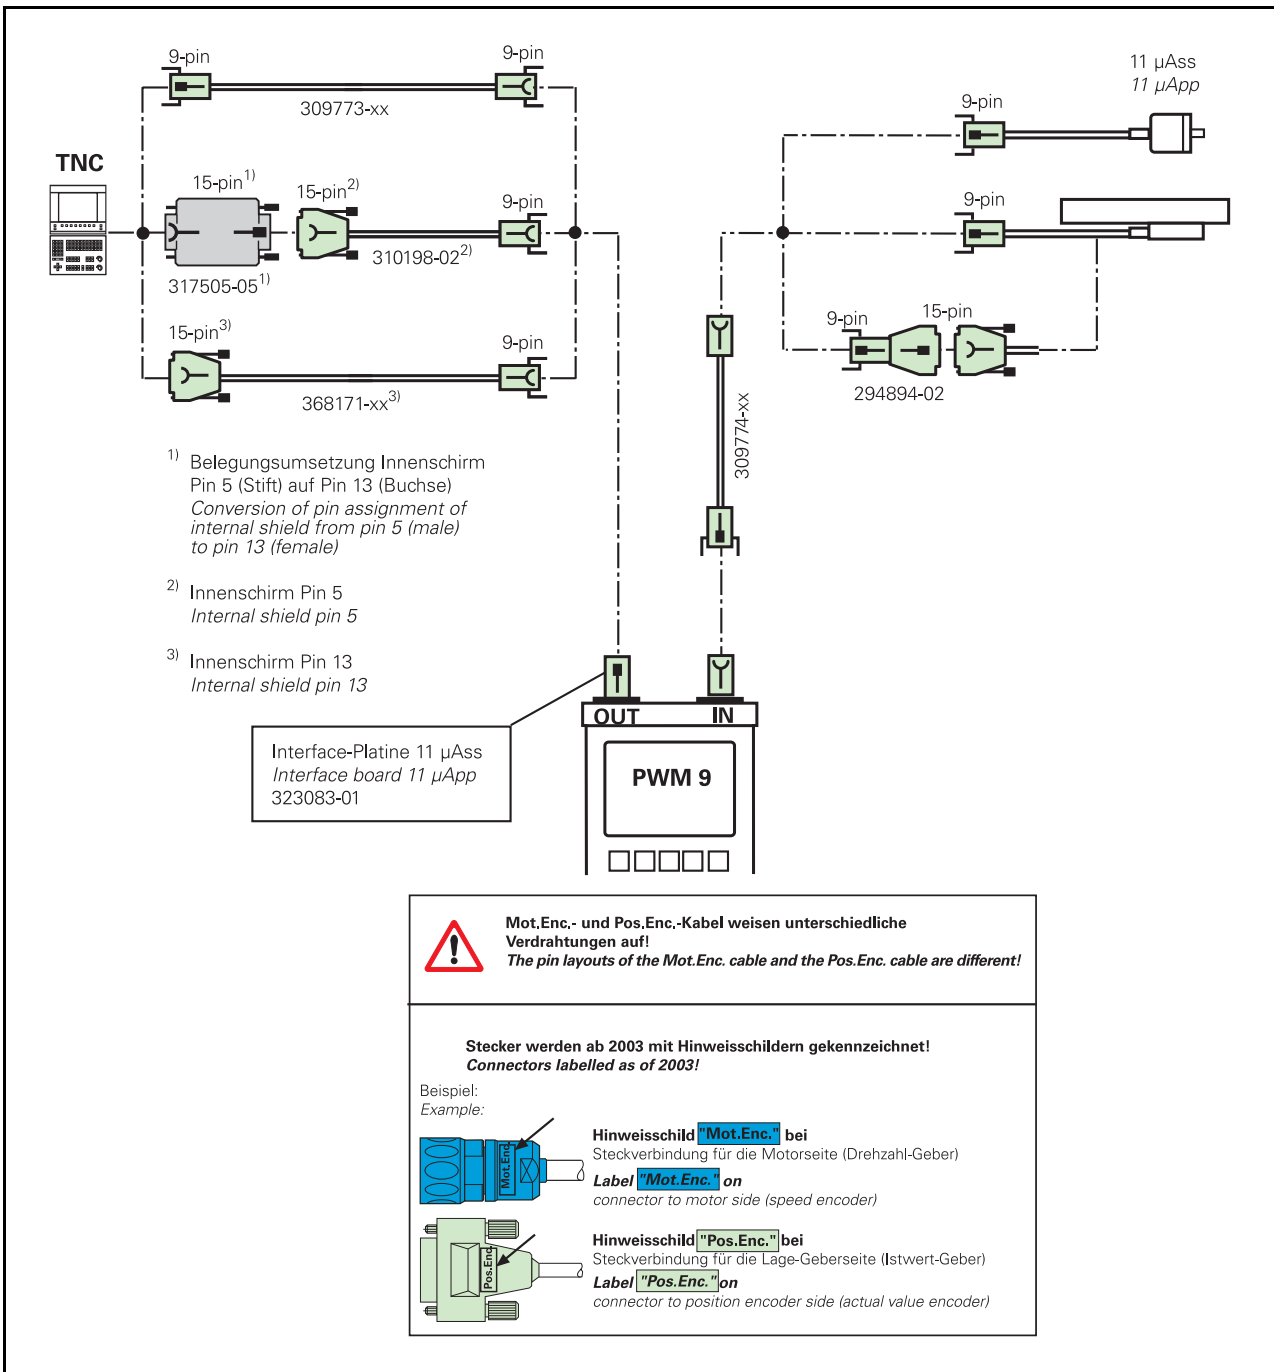

7.4 HTL interface board

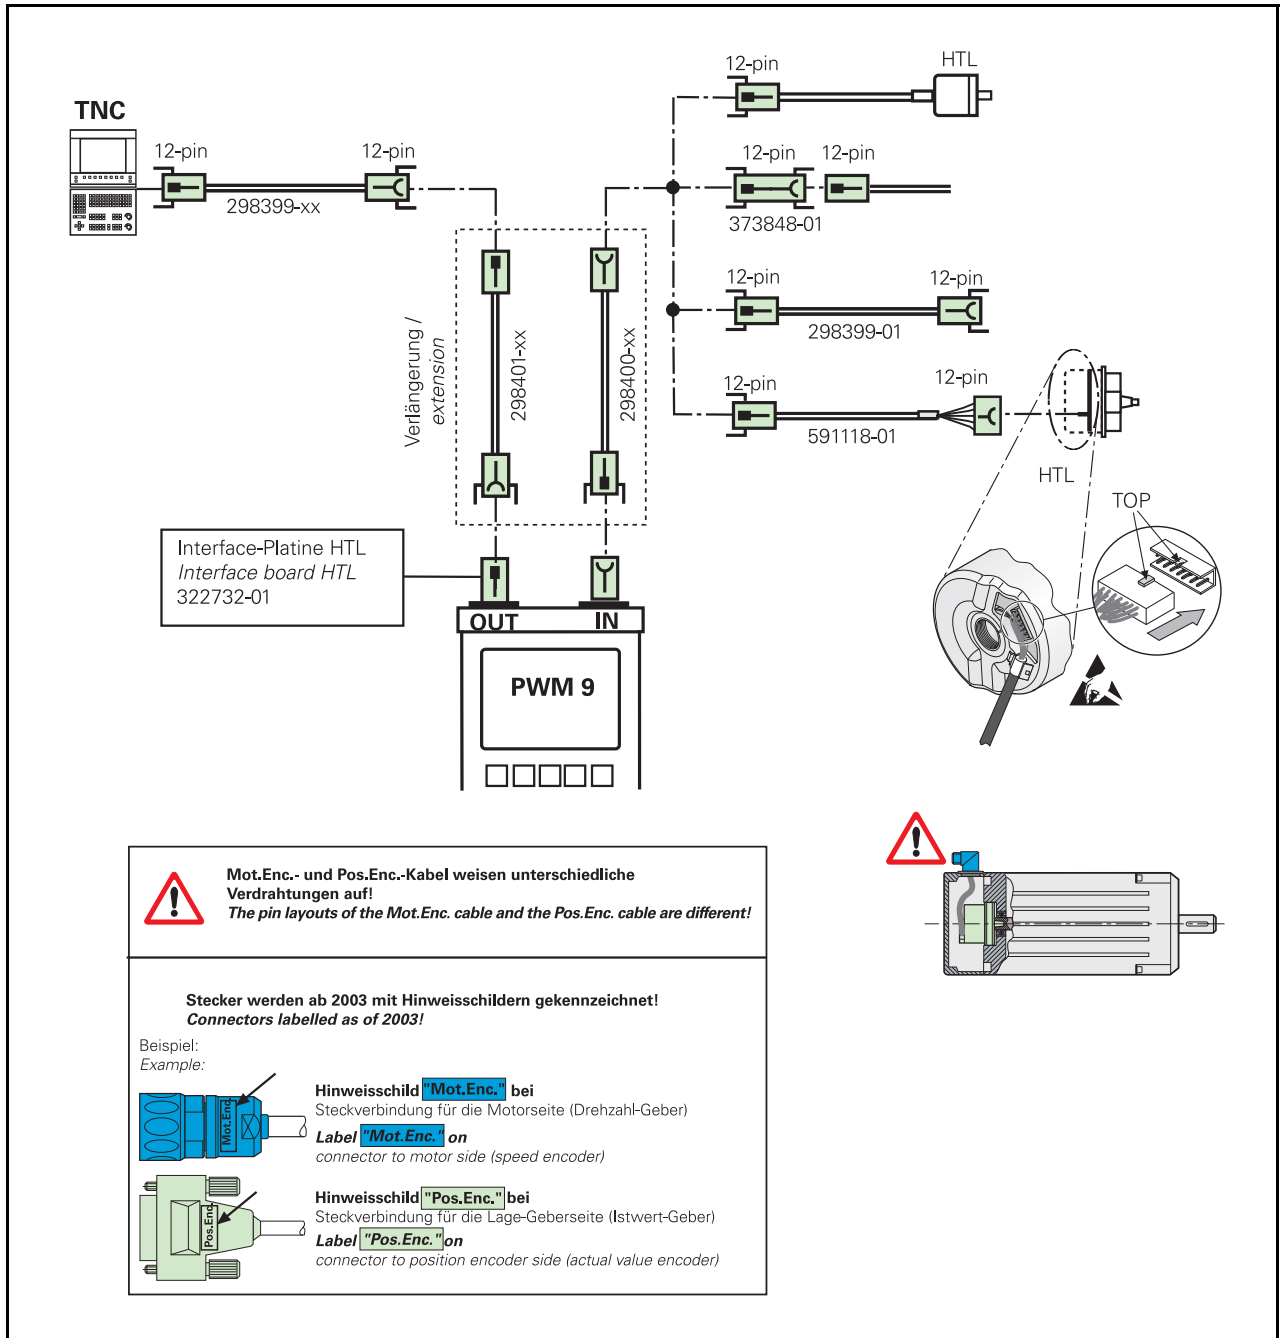

Note

The adapter cables are the same for HTL and TTL applications.



Attention


HTL operating voltage = 10 to 30 V!
TTL units ($U_B = 5\text{ V}$) are destroyed by HTL operating voltage!



DANGER

Contact the motor manufacturer regarding the assignment of the motor flange socket (no HEIDENHAIN layout)!


7.5 Interface board absolute / 1 Vpp, sinusoidal commutating signal Zn/Z1

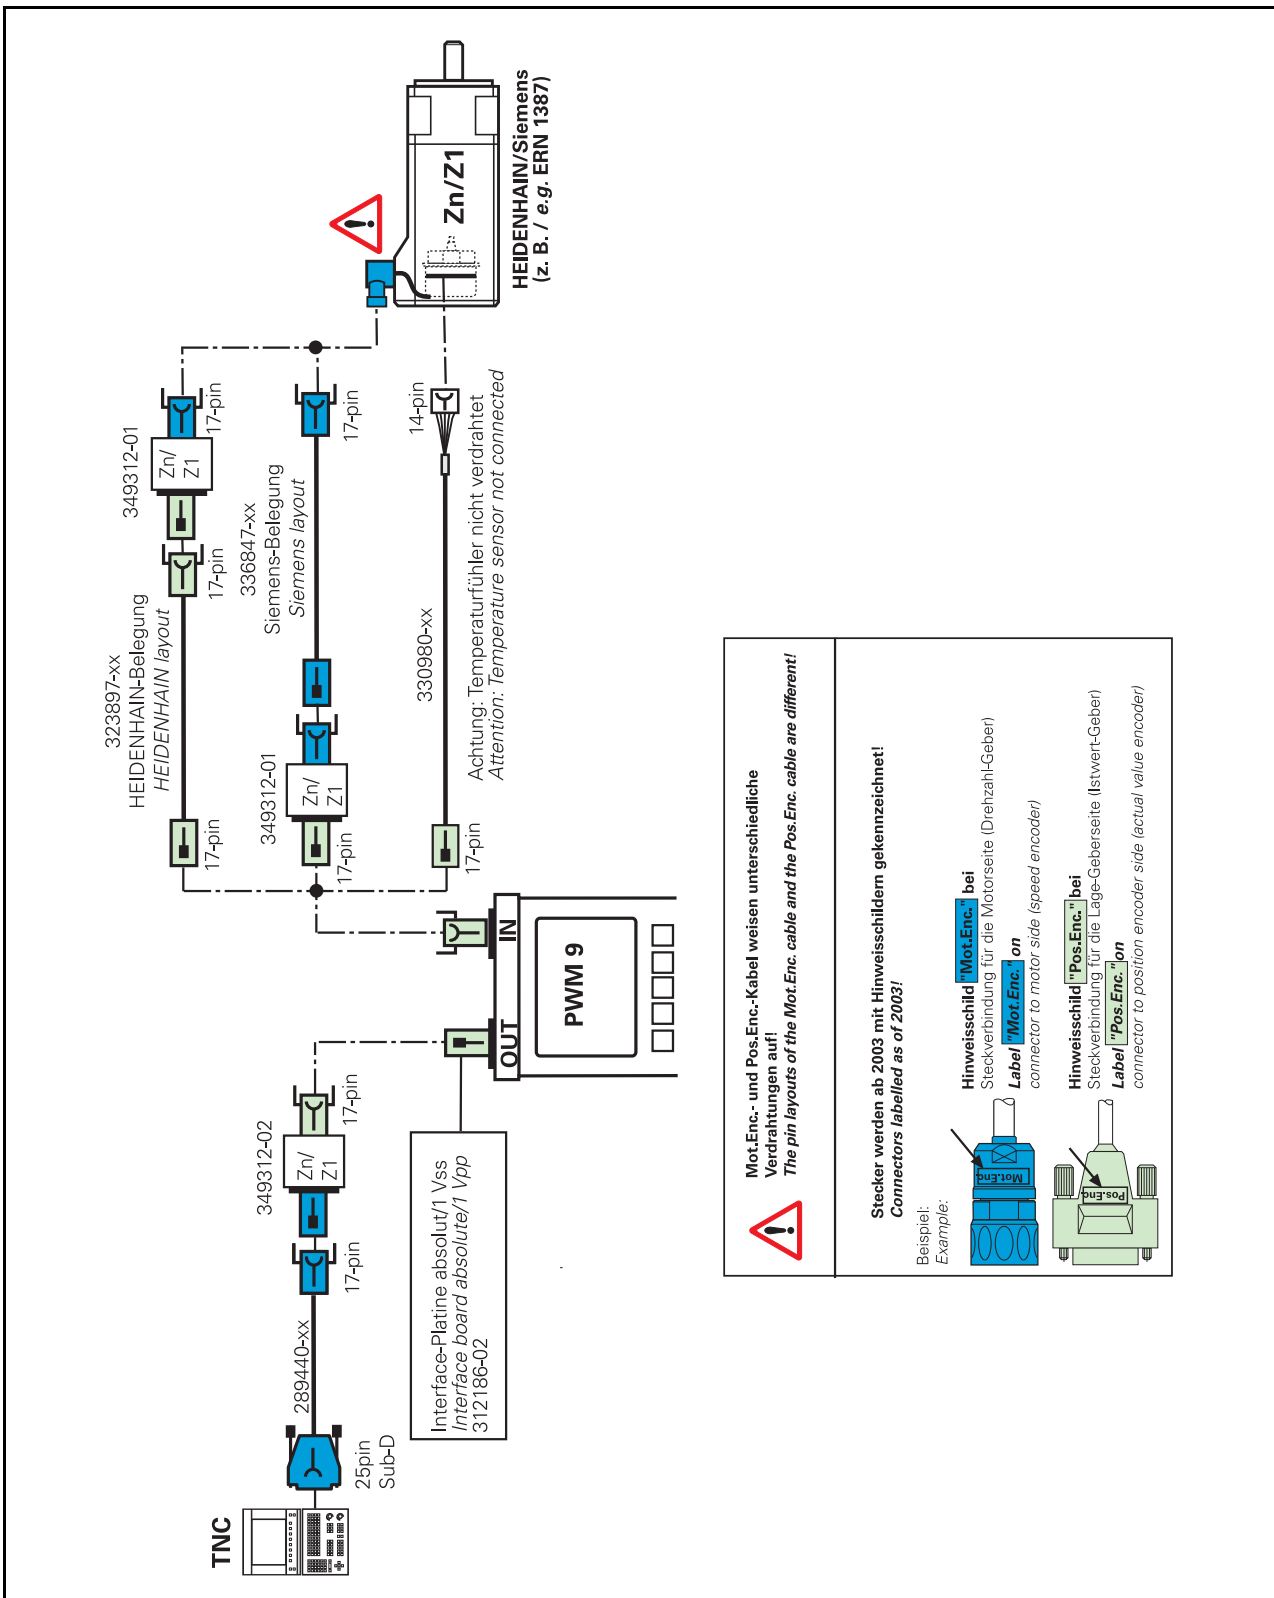


Attention

Siemens layout is used at the motor flange socket.
The Siemens layout is not compatible with the HEIDENHAIN layout!
Always use the adapter connectors ID 349312-01/02!
The PWM interface board ID 312186-02 uses the HEIDENHAIN layout!


7.6 Interface board absolute/1 Vpp, EnDat/SSI/SSI programmable encoders; measurement at encoder side

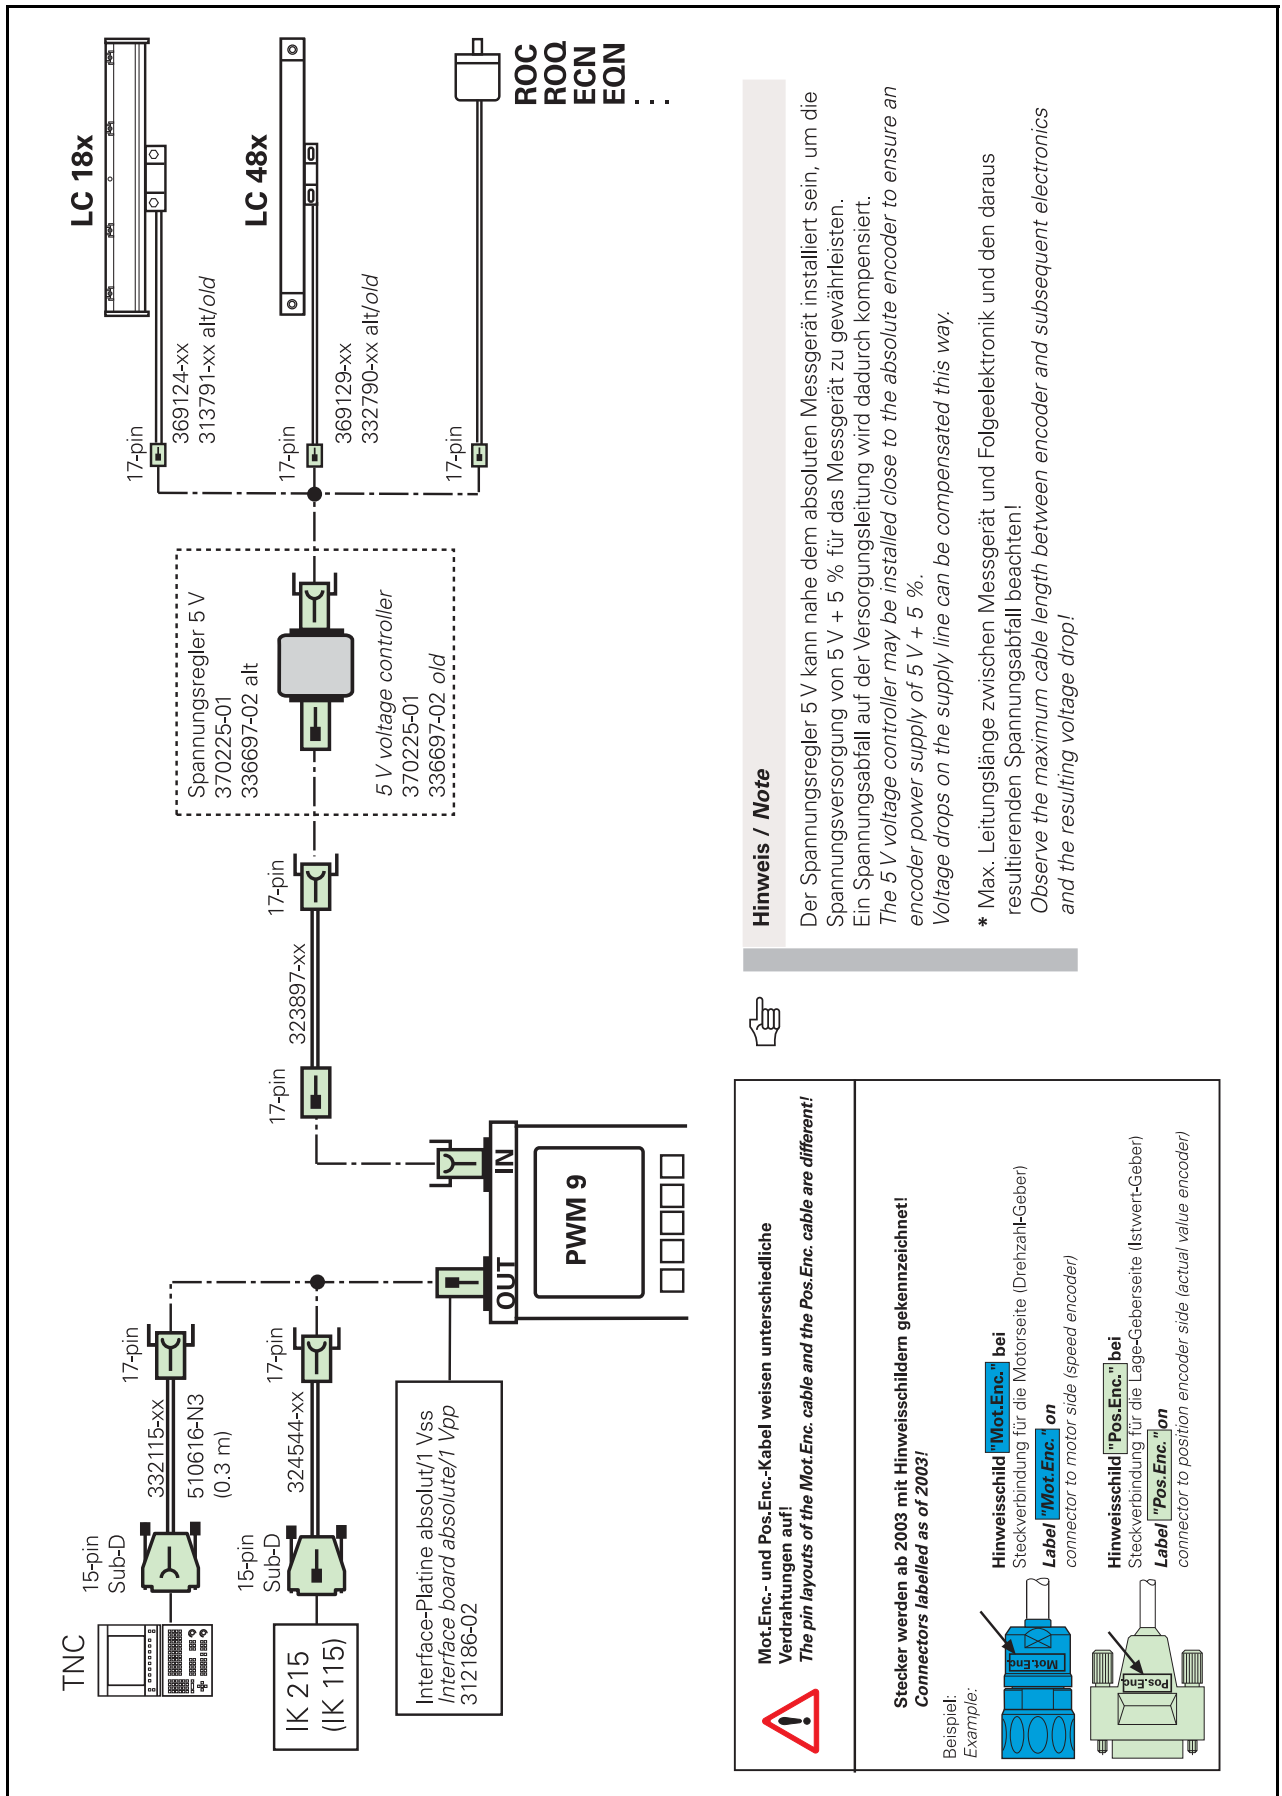

7.7 Interface board absolute/1 Vpp, EnDat encoders; measurement at control side

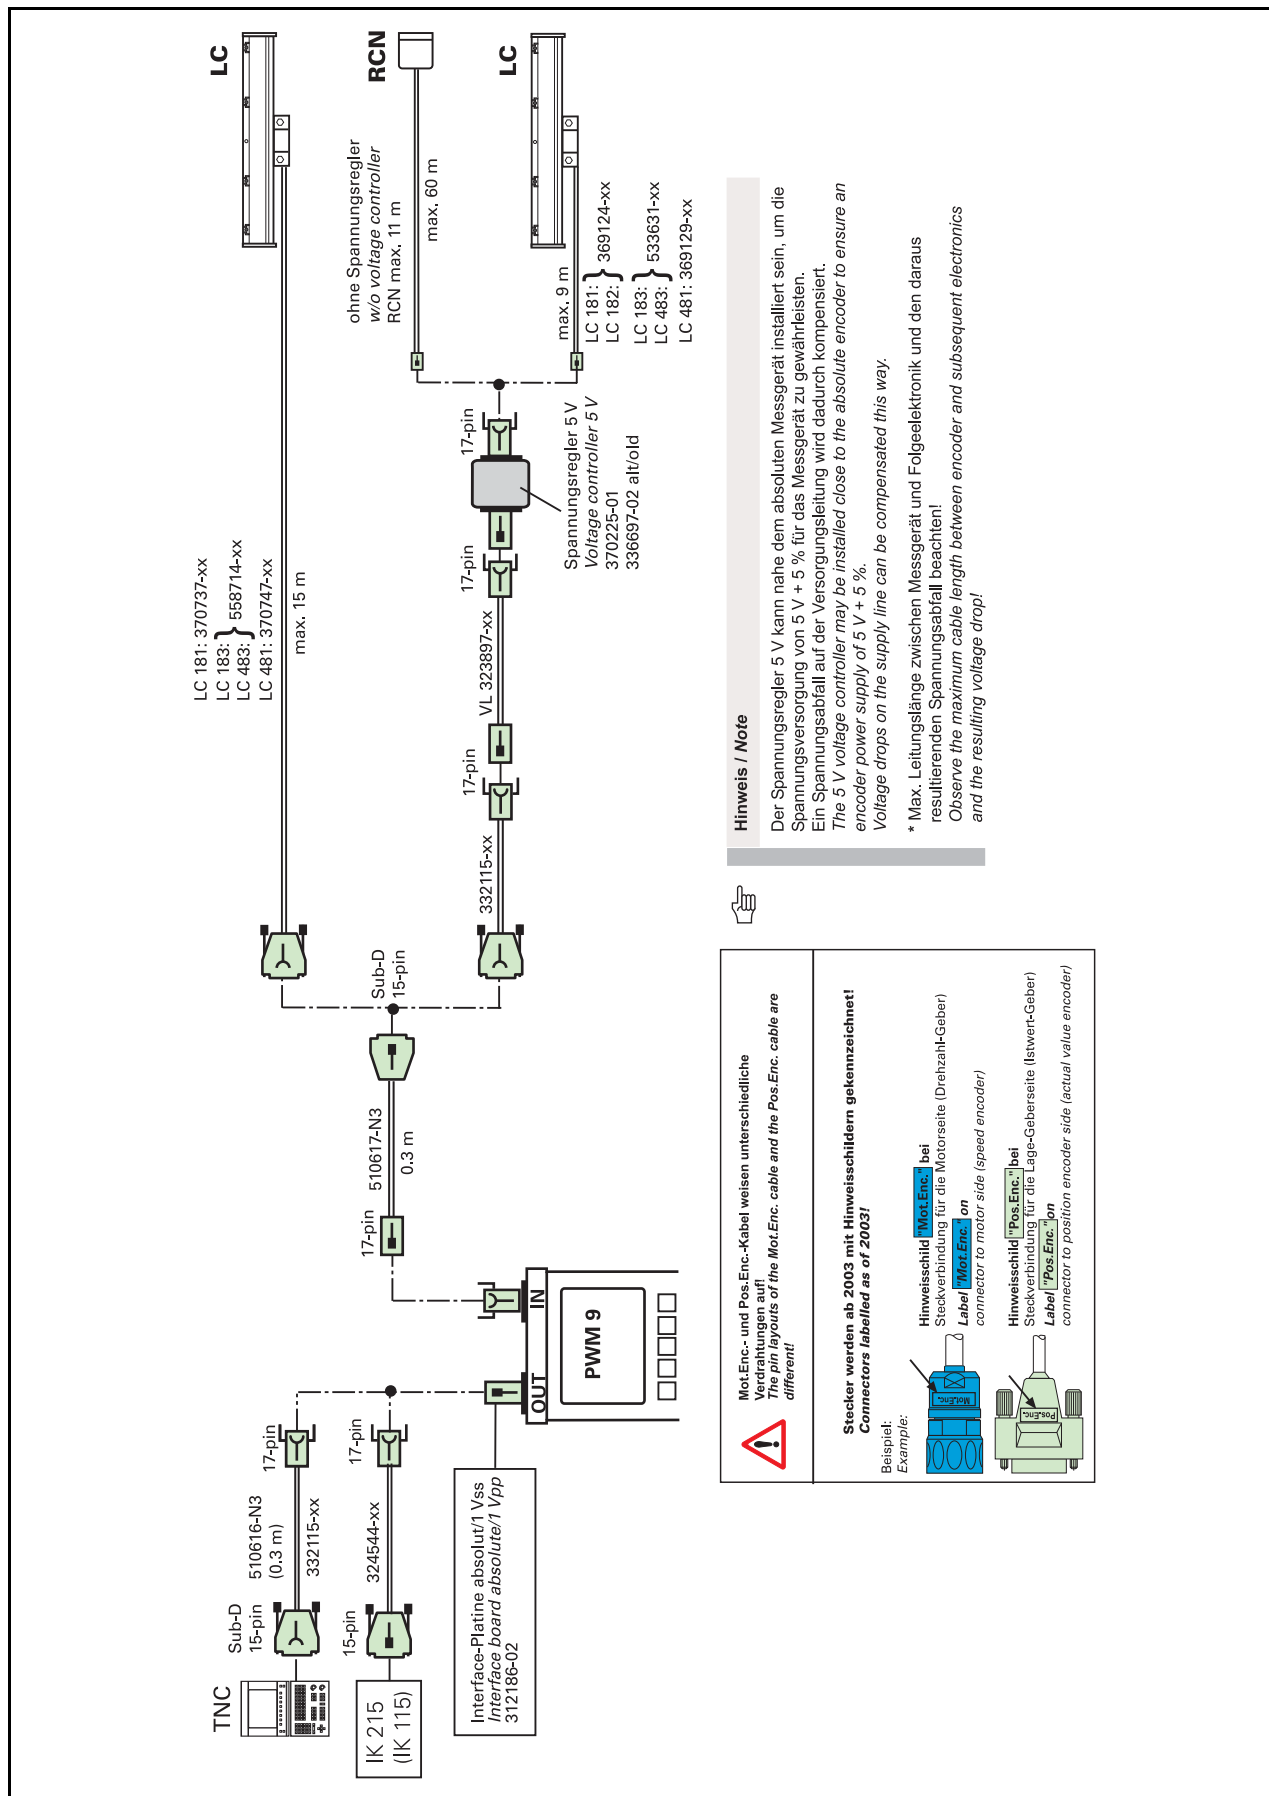


7.8 Interface board absolute/1 Vpp, motor encoders EnDat/SSI/ SSI programmable

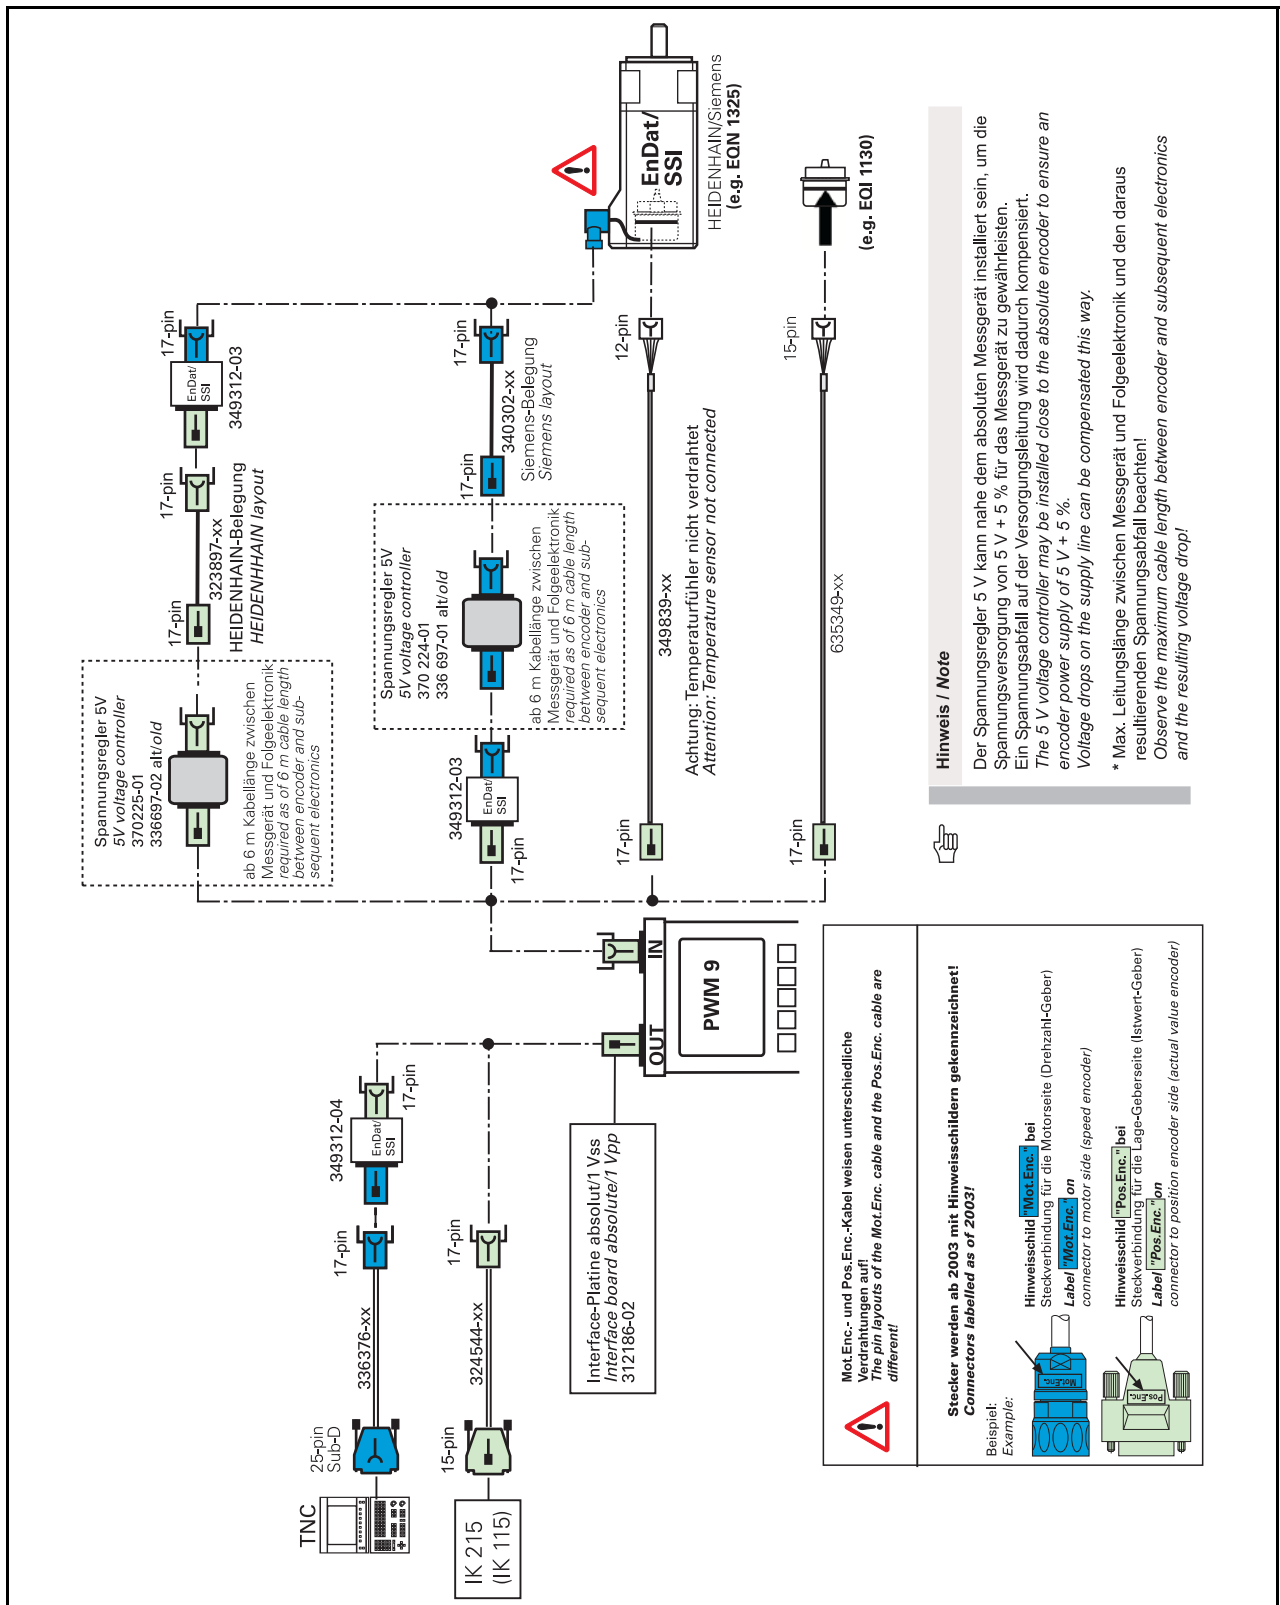


Attention

Siemens layout is used at the motor flange socket.
The Siemens layout is not compatible with the HEIDENHAIN layout!
Always use the adapter connectors ID 349312-03/04!
The PWM interface board ID 312186-02 uses the HEIDENHAIN layout!

7.9 TNC with 15-pin/25-pin D-sub connectors and 1 Vpp, TTL, 11 μApp interface boards (position encoders)

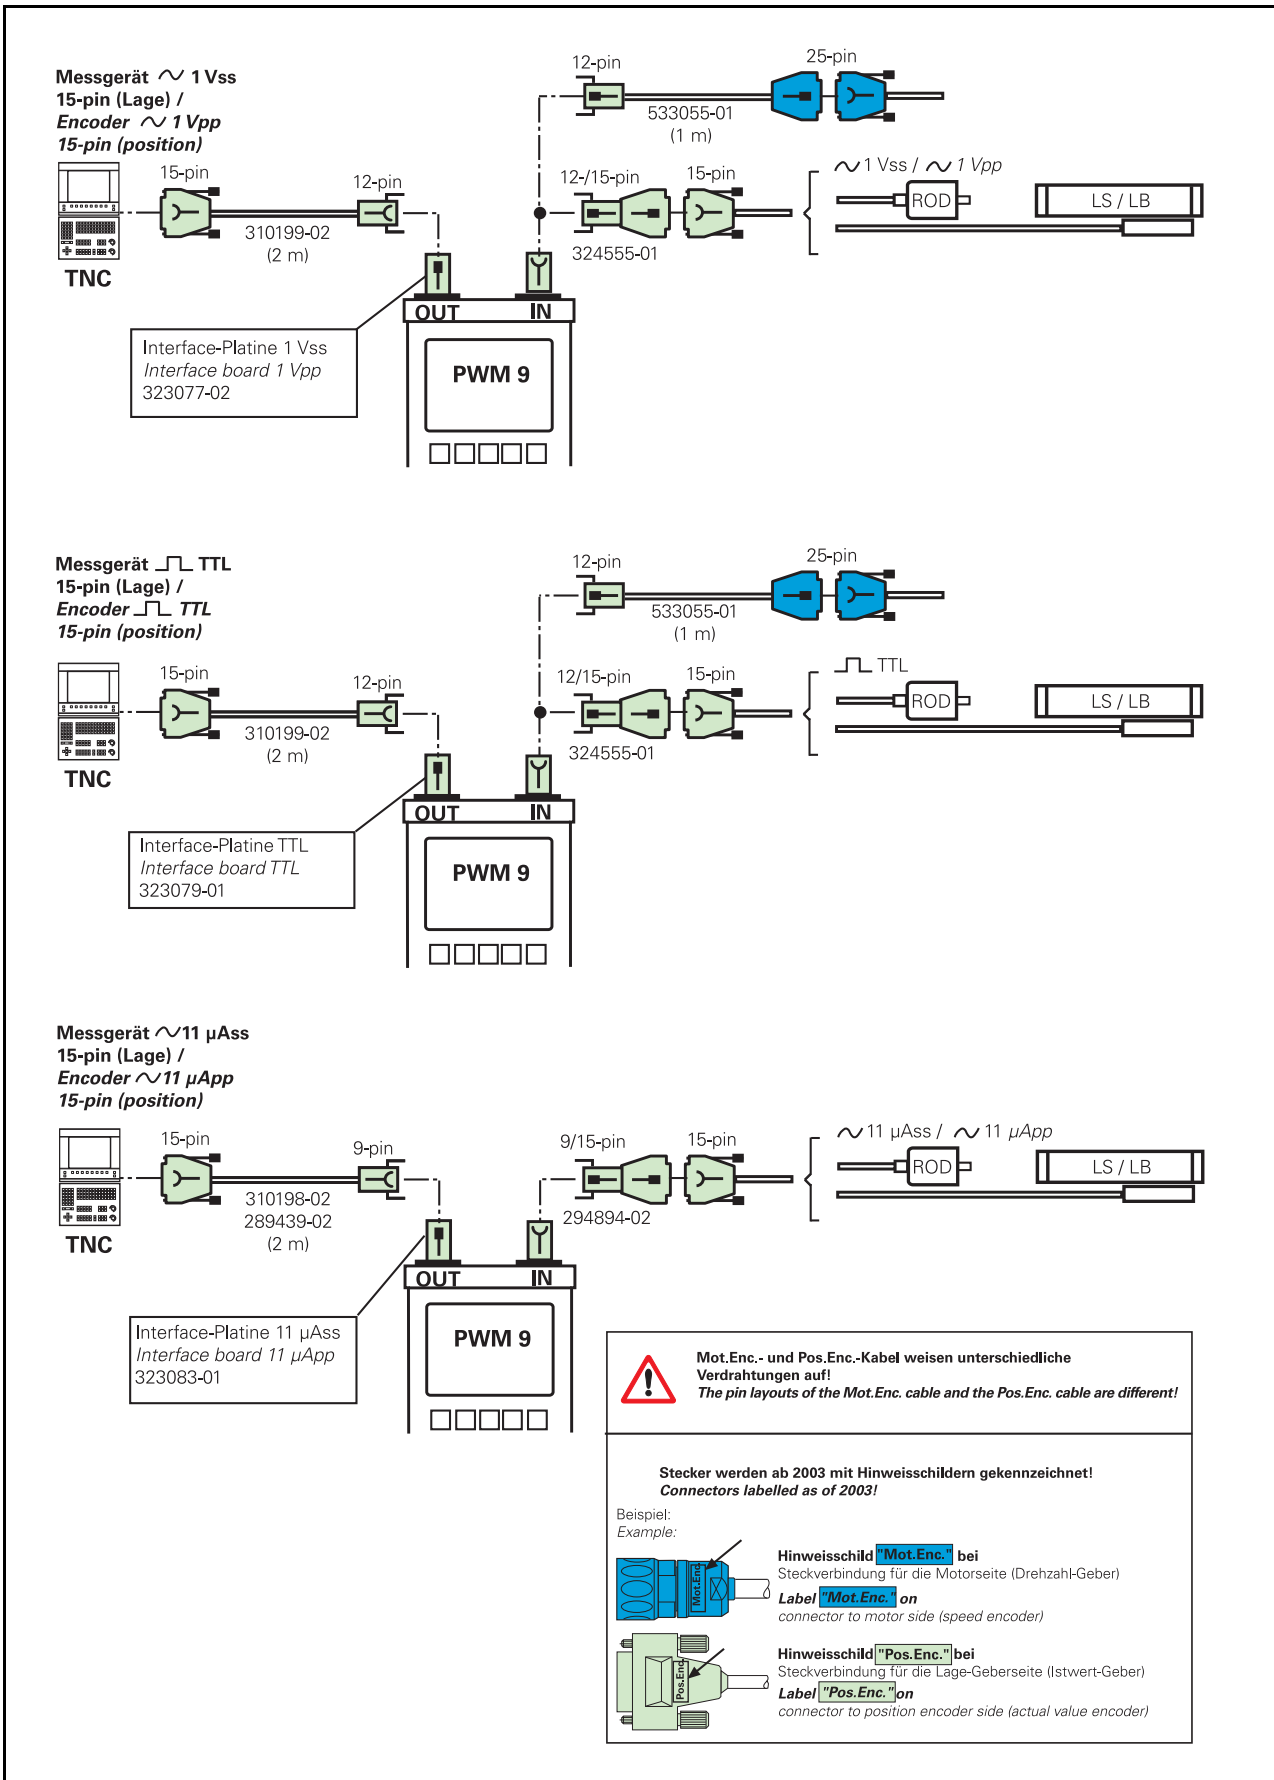

7.10 TNC with 25-pin D-sub connectors, Zn/Z1 (1 Vpp), EnDat (1 Vpp) (motor encoders)

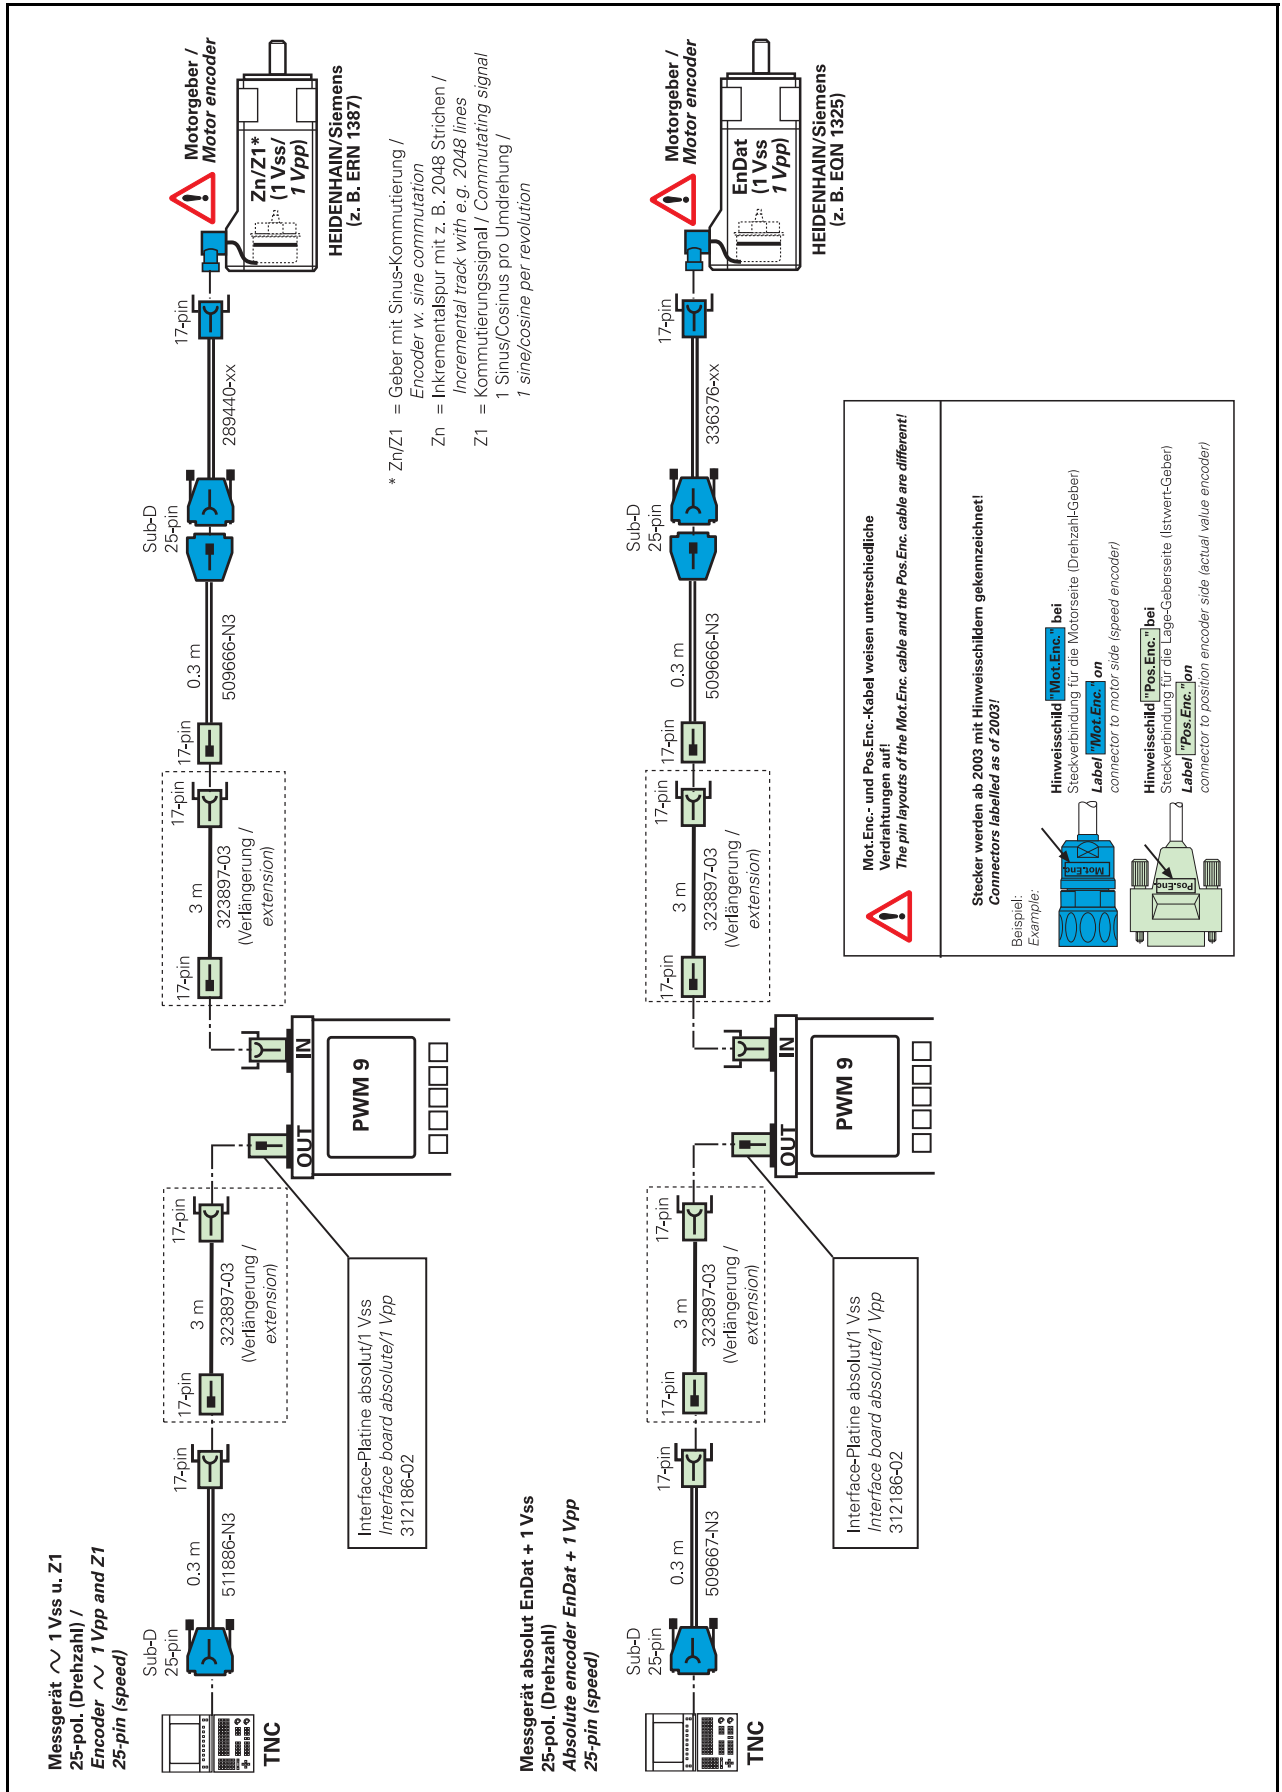



Note



Siemens layout is used at the motor flange socket.
The Siemens layout is not compatible with the HEIDENHAIN layout!
Always use the adapter cables ID 509666-xx / 509667-xx / 511886-xx!
The PWM interface board ID 312186-02 uses the HEIDENHAIN layout!

7.11 Encoders with TTL --> 11 µApp switch


Exposed measuring systems with TTL interface require a conversion of the output signals from TTL to 11 µApp to allow for precise mechanical adjustment.

The amplitude of the analog output signal and the reference mark position provide information on the mechanical position (air gap, parallelism, etc.) of the scanning head.


A differentiation is made between encoders with APE and those with D-sub connectors.

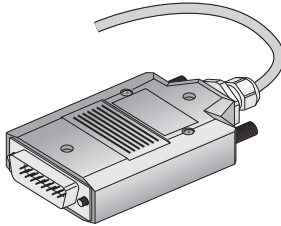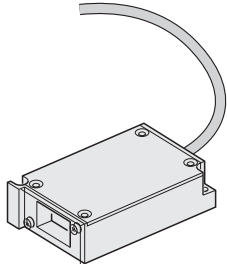Sub-D-Stecker-Elektronik / <i>D-Sub electronics</i>	APE-Elektronik / <i>APE electronics</i>
	
Messgeräte mit Sub-D-Stecker: <i>Encoders with D-Sub connector:</i>	Messgeräte mit APE: <i>Encoders with APE:</i>
LIF 17 MT 1271	LIF 12
LIP 47 MT 2571	LIF 17
LIP 57 ST 1271	LIP 37
LIDA 17 ST 1277	LIP 47
LIDA 42 ST 3078	
LIDA 47	


7.11.1 Overview of TTL/11 µApp adapter cables and feed-through mode

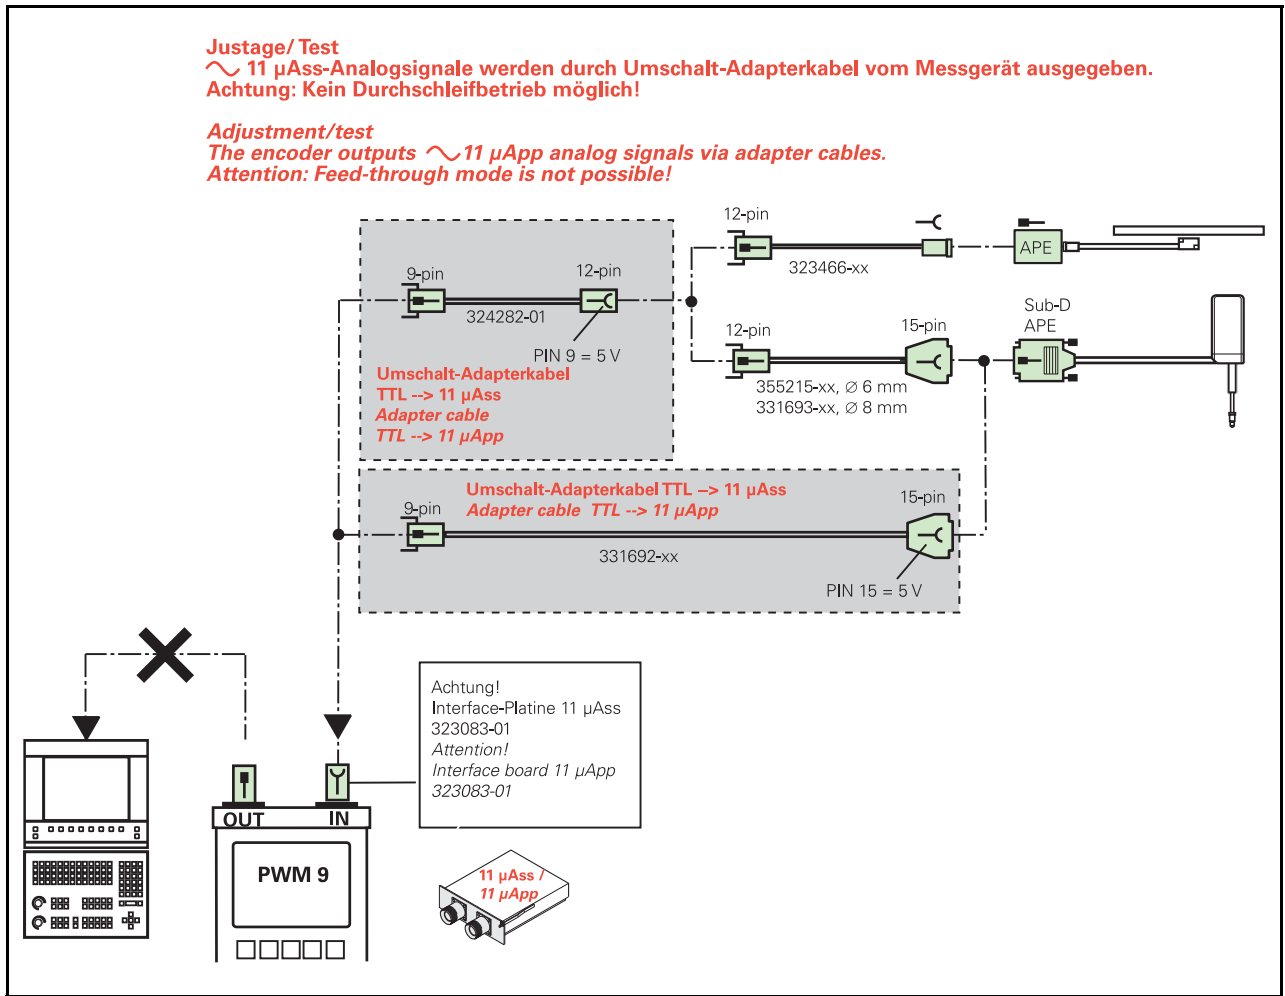


7.11.2 Measuring TTL output signals in feed-through mode

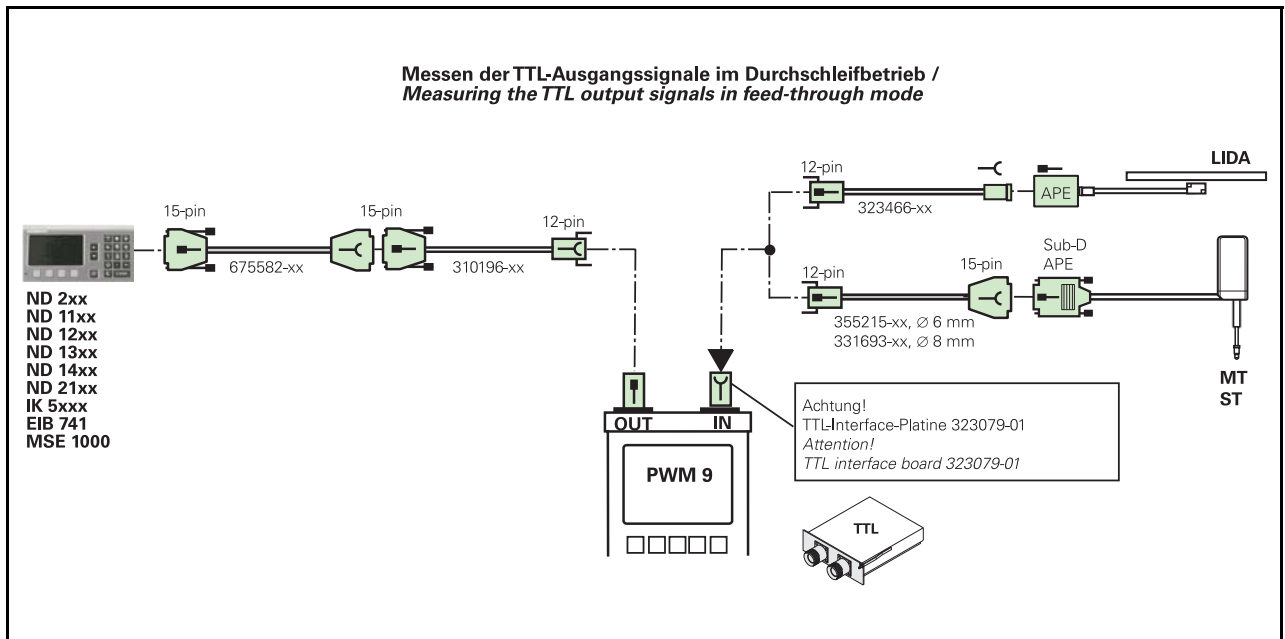

7.11.3 Measuring 1 Vpp output signals in feed-through mode

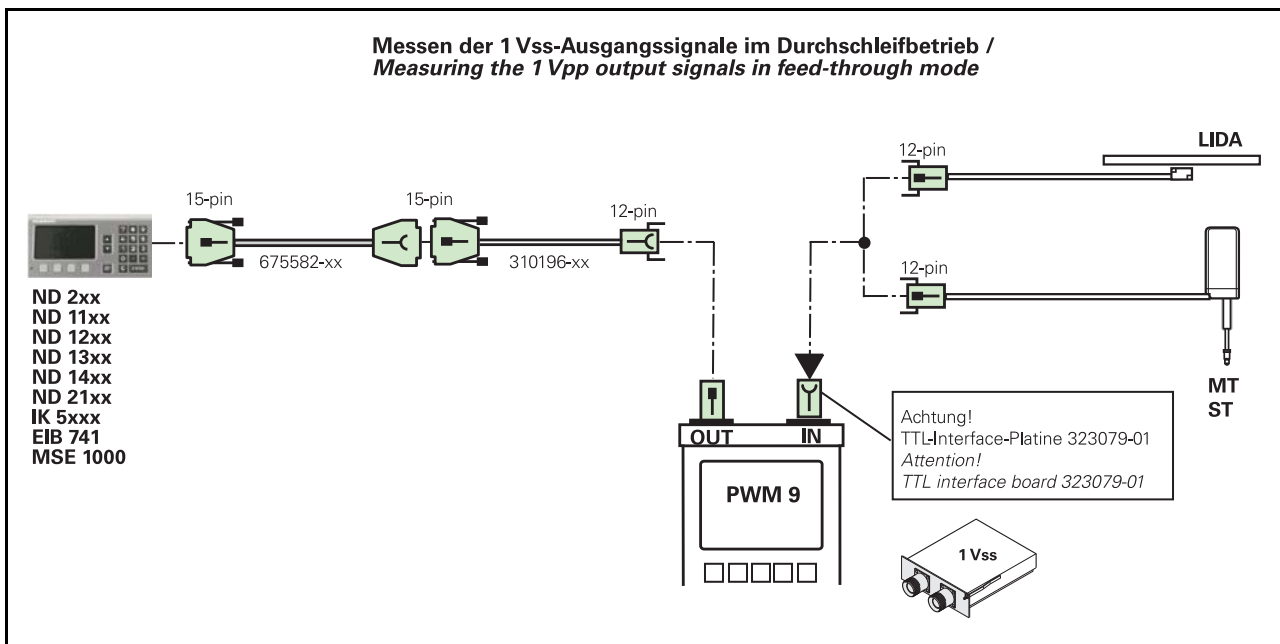


7.11.4 Overview of adapter cables: Direct drives – incremental encoders

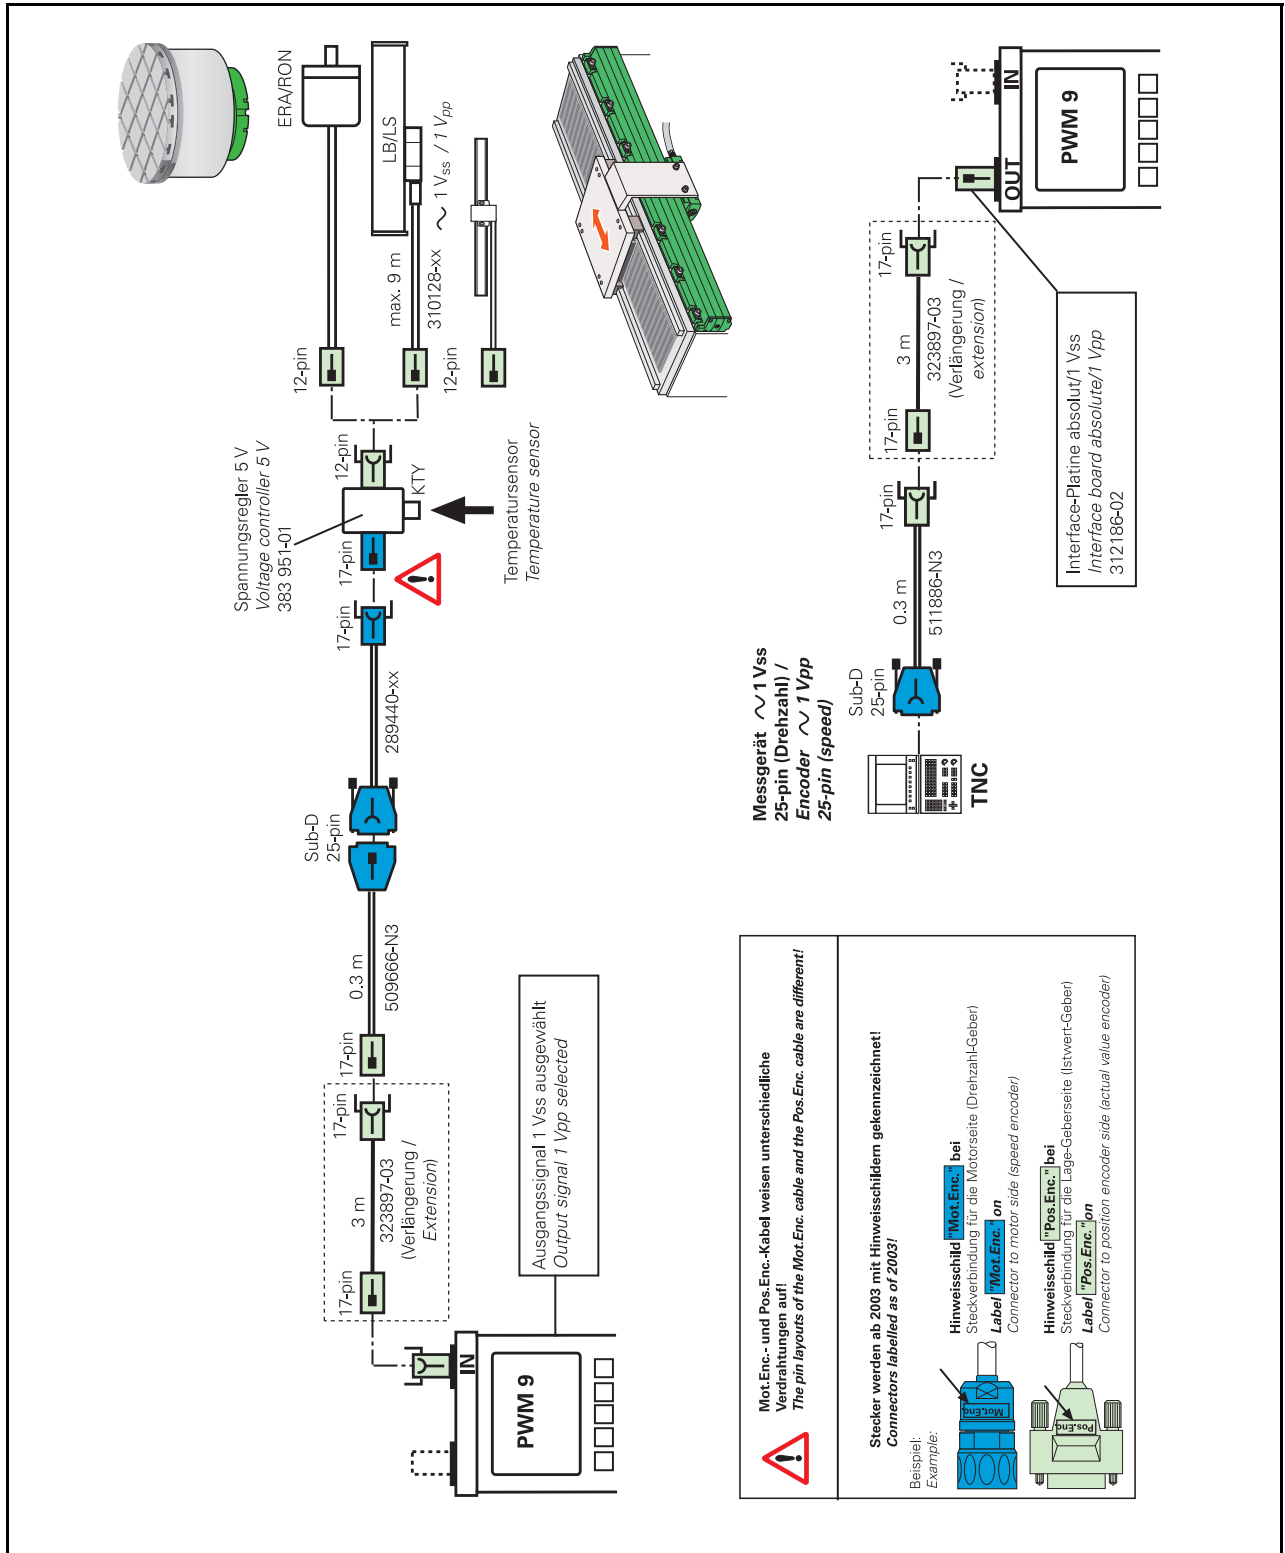

Note

Linear or angle encoders on linear motors (direct drives) provide the actual value for both the position controller and the speed controller.
In this application the position encoders are operated at the motor controller input of the NC!


7.11.5 Overview of adapter cables: Direct drives – absolute encoders

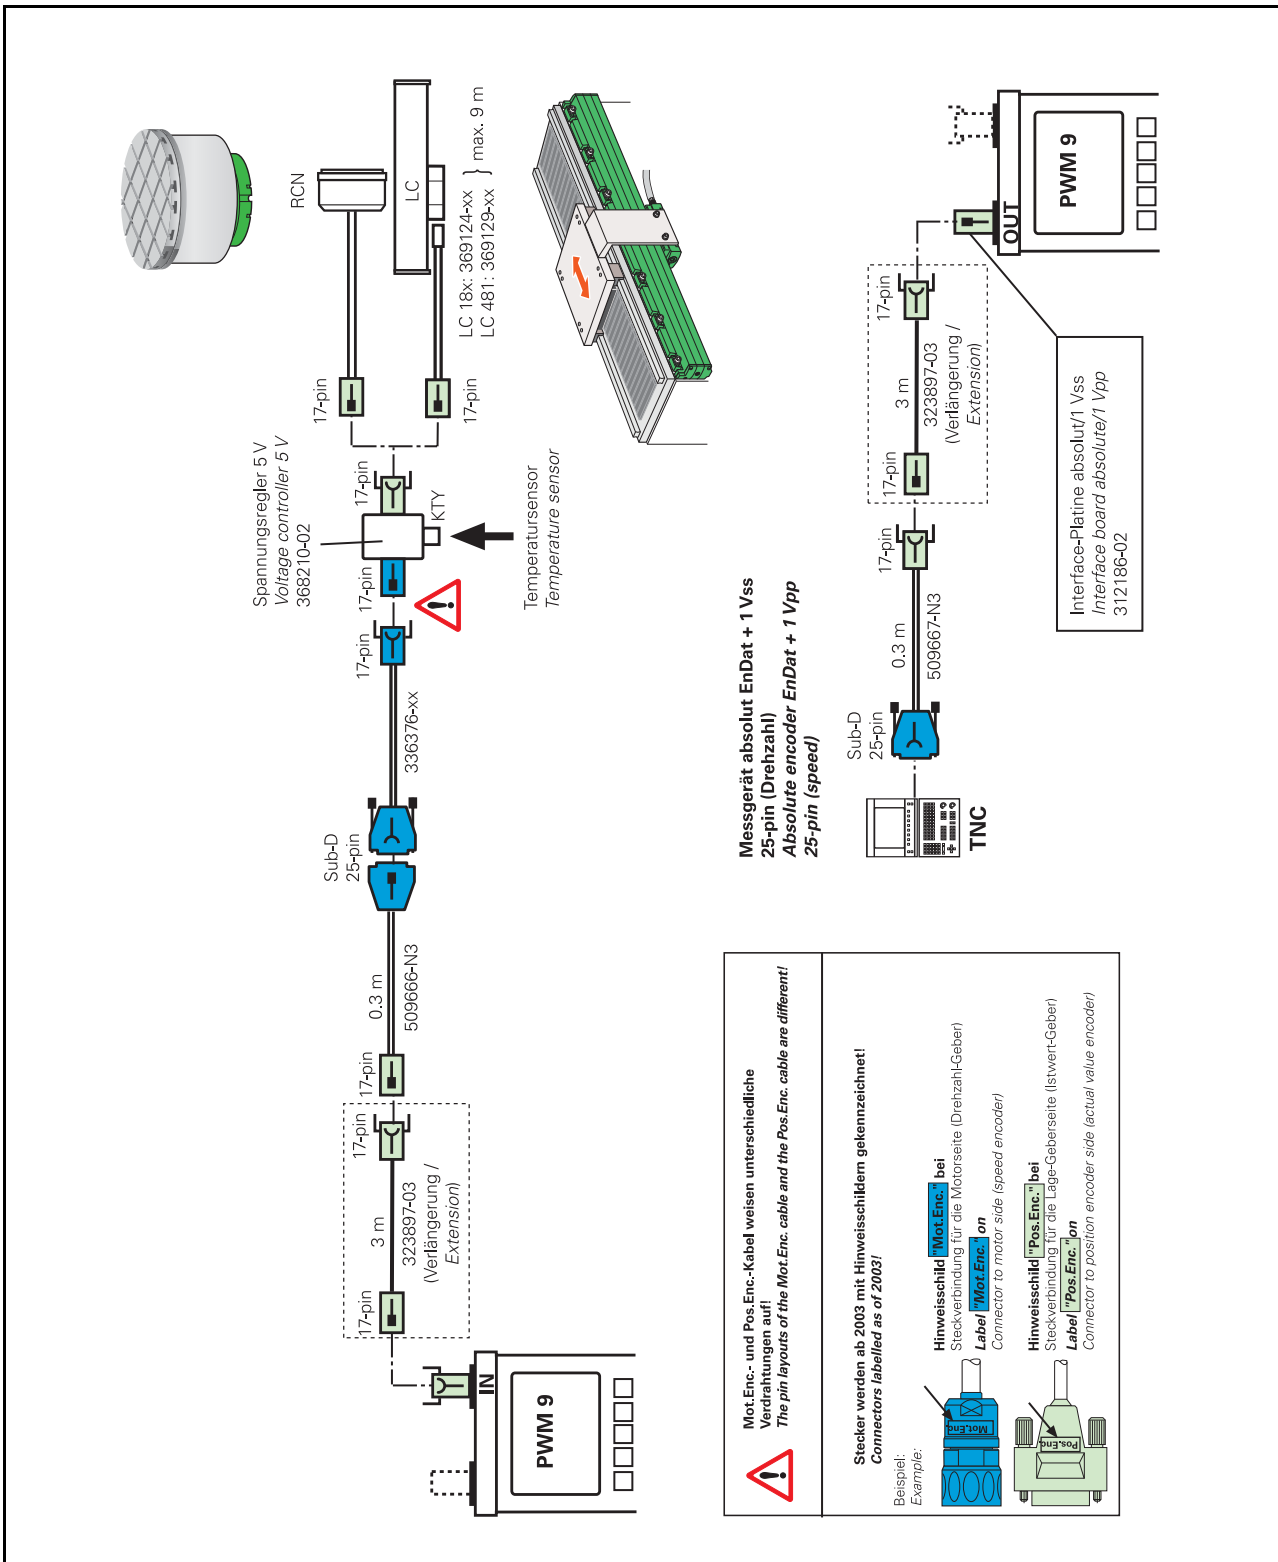


Note

Linear or angle encoders on linear motors (direct drives) provide the actual value for both the position controller and the speed controller.
In this application the position encoders are operated at the motor controller input of the NC!

7.12 FANUC TTL adapter

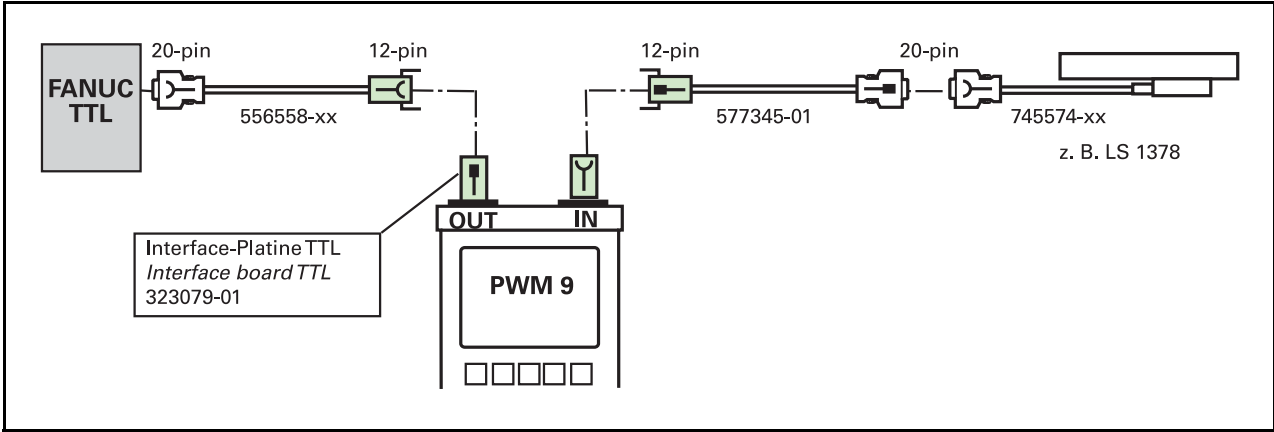

7.13 1 Vpp/DRIVE-CLiQ adapter cables

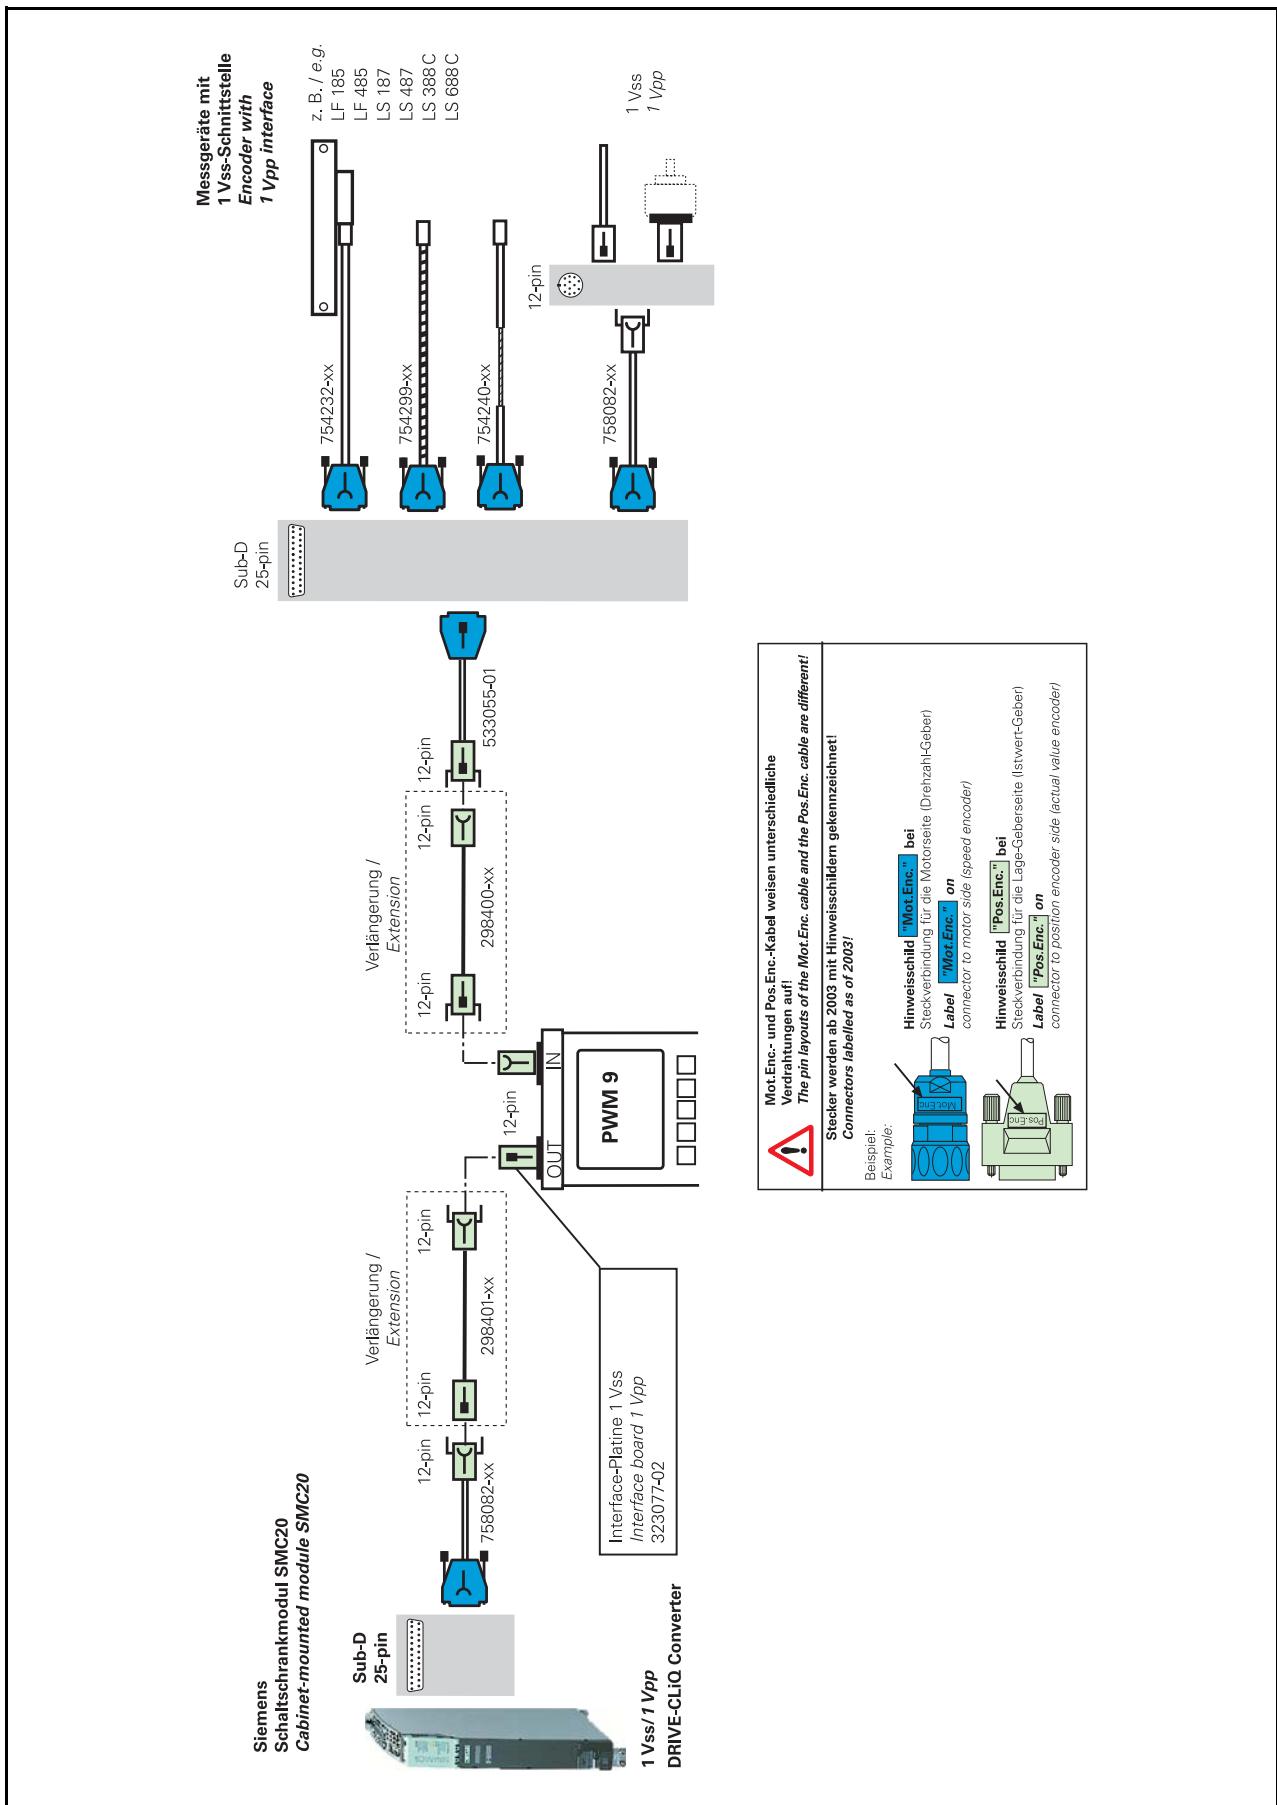

8 Interface description

8.1 General

The specifications in the brochure “**Interfaces of HEIDENHAIN encoders**” ID 1078628-xx apply.

Supplementary information, e.g. on older interfaces and encoders, is part of the description below.

8.2 Analog interfaces

8.2.1 Incremental signals 11 μ App



Note

The stated tolerances are standard values!
 The tolerances of measuring systems for high resolutions (e.g., angle encoders) and large temperature ranges (e.g., motor encoders) are tighter.
 The supply voltage of $5\text{ V} \pm 5\%$ at the encoder has to be ensured!

The sinusoidal incremental signals I_1 and I_2 are phase-shifted by 90° elec. and have a signal level of $11\ \mu\text{App}$ typ. The usable component of the reference mark signals I_0 is approx. $5.5\ \mu\text{A}$. The signal amplitudes refer to $U_p = 5\text{ V} \pm 5\%$ at the encoder. The signal amplitude changes with increasing scanning frequency (see Cutoff frequency).

The linear encoders with single reference marks have a reference mark every 50 mm of the glass scale, one or several of which can be activated by means of a selector magnet. The quiescent level of the output signal is increased by approximately $22\ \mu\text{A}$; the usable component G of the reference mark signal to be evaluated is based on this level. Signal peaks with amplitude G also appear in the quiescent level for the inactive reference marks every 50 mm.

Incremental signals Two sinusoidal current signals I_1 and I_2

Signal level M *	7 to 16 μApp typ. 11 μApp
Asymmetry $ P - N / 2M$	$0.065 \hat{=} TV \pm 15^\circ$
Signal ratio M (I_1)/M (I_2)	0.8 to 1.25
Phase angle $ \varphi_1 + \varphi_2 / 2$	$90^\circ \pm 10^\circ$ el.

* Old LS series
 LS 50x; LS 80x (e.g. LS 503, LS 803) I_{e1}, I_{e2} : 15 ... 35 μApp

Reference mark signal One or several signal peaks I_0


Usable component G*	2 to 8.5 μA
Quiescent value H	approx. 14 μA
Quiescent value hidden	approx. 25 μA
Signal-to-noise ratio E, F	min. 0.4 μA
Zero crossovers K, L	$180^\circ \pm 90^\circ$ el.

* Old LS series
 LS 50x; LS 80x (e.g. LS 503, LS 803) I_{e0} 4 ... 15 μA

Connecting cables

Shielded HEIDENHAIN cable	PUR [3(2 x 0.14 mm ²) + (2 x 1 mm ²)]
Cable length	Max. 30 m with 90 pF/m distributed capacitance


Signal diagram: Incremental signals $\sim 11 \mu\text{App}$

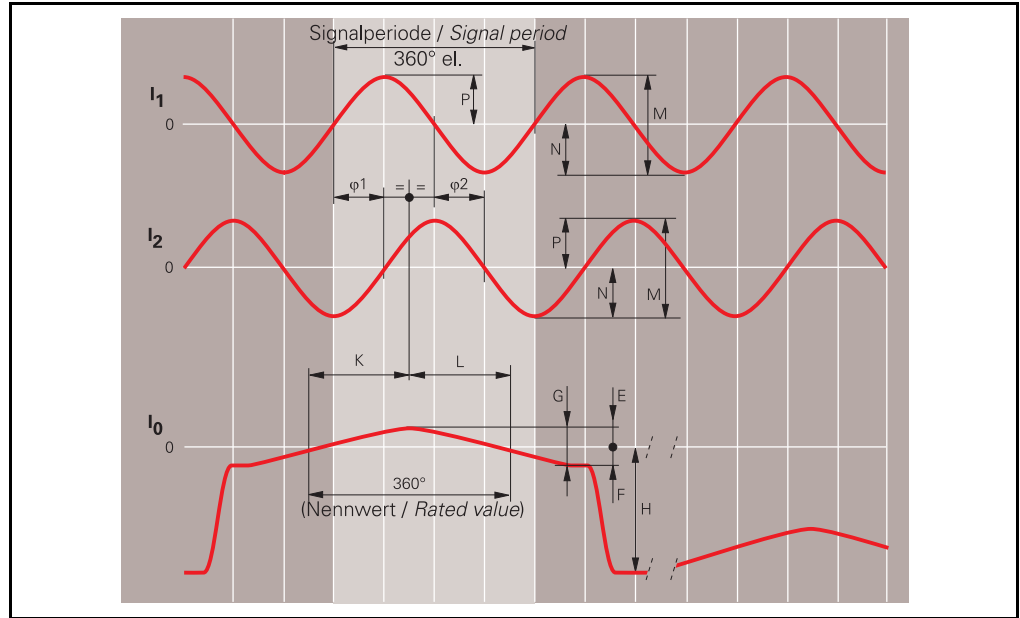

Recommended input circuit of the subsequent electronics $\sim 11 \mu\text{App}$

Dimensioning

Operational amplifier e.g. RC 4157
 R = 100 k $\Omega \pm 2\%$
 C = 27 pF
 U_B = ± 15 V
 U₁ = typ. 2.5 V

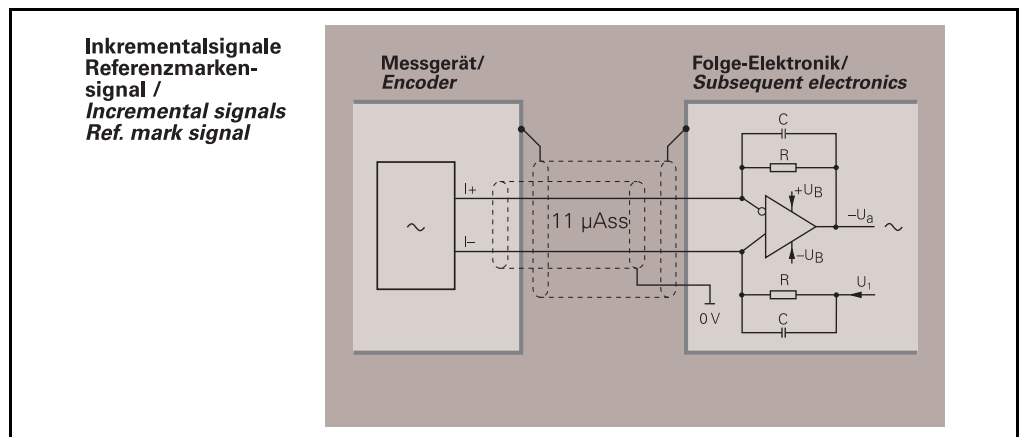

-3 dB cutoff frequency of the circuit

Approx. 60 kHz

Circuit output signals

$$|U_a| = |I_{pp}| \times 2R$$

$$U_a = \text{typ. } 2.2 \text{ Vpp}$$


Signal monitoring

A threshold of 2.5 μApp is to be provided for the monitoring of the output signals.

Cutoff frequency

The cutoff frequency indicates the scanning frequency at which a certain fraction of the original signal amplitude is maintained.

- -3 dB cutoff frequency: 70 % of the signal amplitude
- -6 dB cutoff frequency: 50 % of the signal amplitude

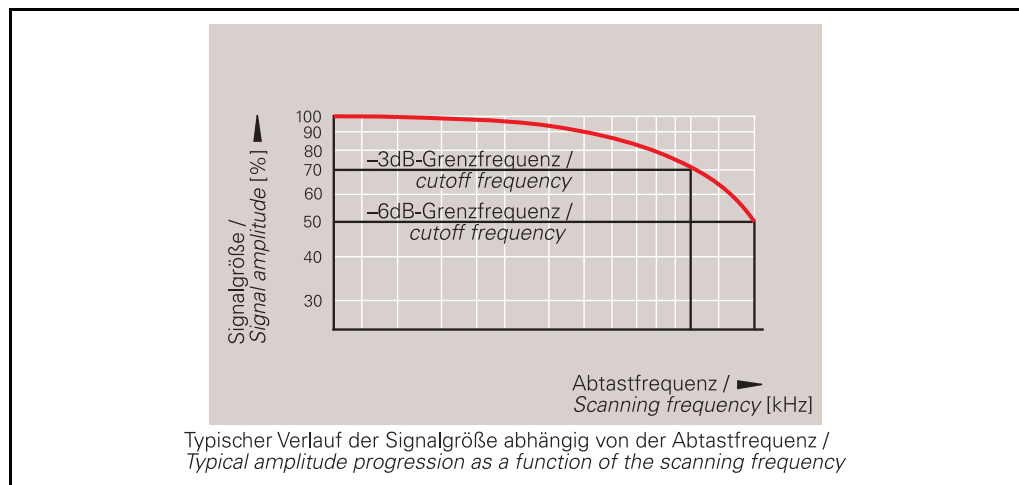

8.2.2 Incremental signals \sim 1 Vpp



Note

The stated tolerances are standard values!
The tolerances of measuring systems for high resolutions (e.g., angle encoders) and large temperature ranges (e.g., motor encoders) are tighter.
The supply voltage of $5 \text{ V} \pm 5\%$ at the encoder has to be ensured!

The **sinusoidal incremental signals A and B** are phase-shifted by 90° elec. and have a signal amplitude of 1 Vpp typ. The usable component of the **reference mark signals R** is approximately 0.5 V. The signal amplitudes refer to $U_p = 5 \text{ V} \pm 5\%$ at the encoder (see encoder specifications) and to a differential measurement at the 120Ω terminating resistor between the associated outputs. The signal amplitude changes with increasing scanning frequency.

The linear encoders with single reference marks have a reference mark every 50 mm of the glass scale, one or several of which can be activated by means of a selector magnet. The quiescent level of the output signal is increased by approximately 1.5 V; the usable component G of the reference mark signal to be evaluated is based on this level. Signal peaks with amplitude G also appear in the quiescent level for the inactive reference marks every 50 mm.

Incremental signals Two nearly sinusoidal signals A and B

Signal amplitude M	0.6 to 1.2 Vpp Typ. 1 Vpp
Recommended lower threshold sensitivity for signal monitoring	Min. 0.3 V
Recommended upper threshold sensitivity for signal monitoring	Max. 1.35 V
Asymmetry $ P - N / 2M$	$0.065 \pm TV \pm 15^\circ$
Signal ratio M_A / M	0.8 to 1.25
Phase angle $ \varphi_1 + \varphi_2 / 2$	$90^\circ \pm 10^\circ$ el.


Reference mark signal One or several signal peaks R

Usable component G	0.2 to 0.85 V
Quiescent value H	Max. 1.7 V
Signal-to-noise ratio E, F	Min. 40 mV, max. 680 mV
Zero crossovers K, L	$180^\circ \pm 90^\circ$ el.

Connecting cables

Shielded HEIDENHAIN cable	PUR $[4(2 \times 0.14 \text{ mm}^2) + (4 \times 0.5 \text{ mm}^2)]$
Cable length	Max. 150 m with 90 pF/m distributed capacitance
Propagation time	6 ns/m

Signal diagram: Incremental signals $\sim 1 \text{ Vpp}$

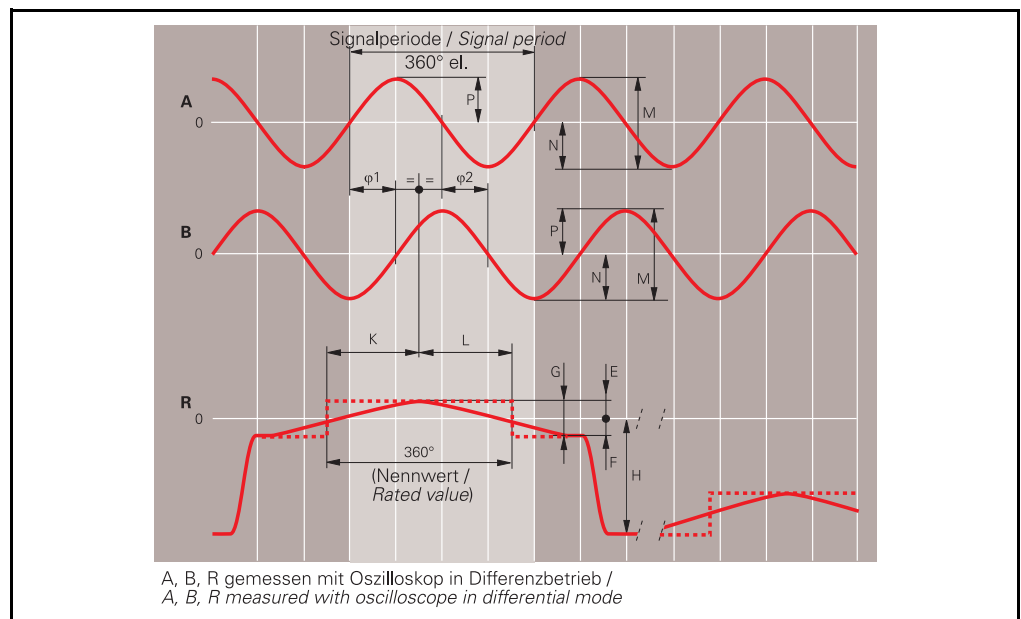

Recommended input circuit of the subsequent electronics $\sim 1 \text{ Vpp}$

Dimensioning

Operational amplifier e.g. MC 34074; RC 4157


$R_1 = 10 \text{ k}\Omega$ and $C_1 = 100 \text{ pF}$

$R_2 = 34.8 \text{ k}\Omega$ and $C_2 = 10 \text{ pF}$

$Z_0 = 120 \Omega$

$U_B = \pm 15 \text{ V}$

U_1 approx. U

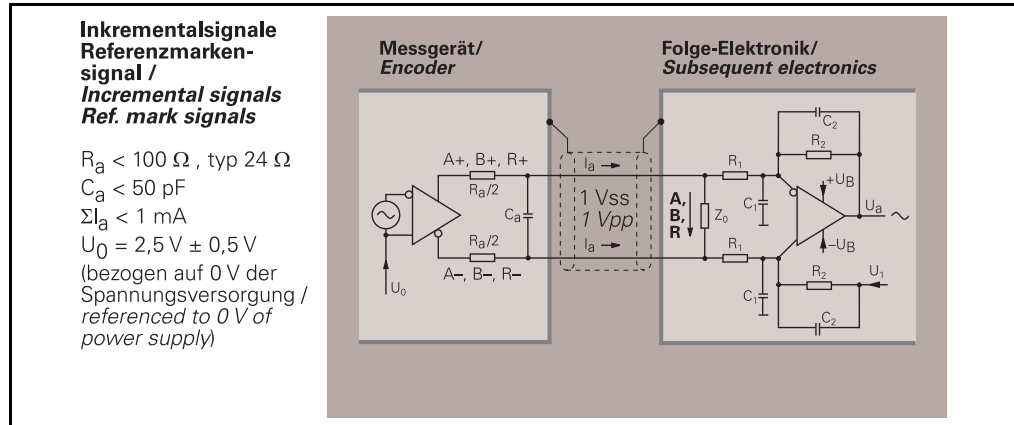

-3 dB cutoff frequency of the circuit

Approx. 450 kHz

Approx. 50 kHz with $C_1 = 1000 \text{ pF}$ and $C_2 = 82 \text{ pF}$

(Recommended for electronics that are sensitive to electro-magnetic interference)



Note

This variant does reduce the bandwidth of the circuit, but in doing so it improves its noise immunity.

Circuit output signals

$U_a = 3.48 \text{ Vpp}$ typ.

3.48-fold amplification

Signal monitoring


A threshold of 250 mVpp is to be provided for the monitoring of the output signals.

Signal amplitude

With measuring systems with sinusoidal output signals the signal amplitude depends on the supply voltage and therefore on the voltage drop ΔU as well as on the cutoff frequency.

Cutoff frequency

The -3 dB cutoff frequency specifies at which scanning frequency about 70% of the original signal amplitude are maintained.

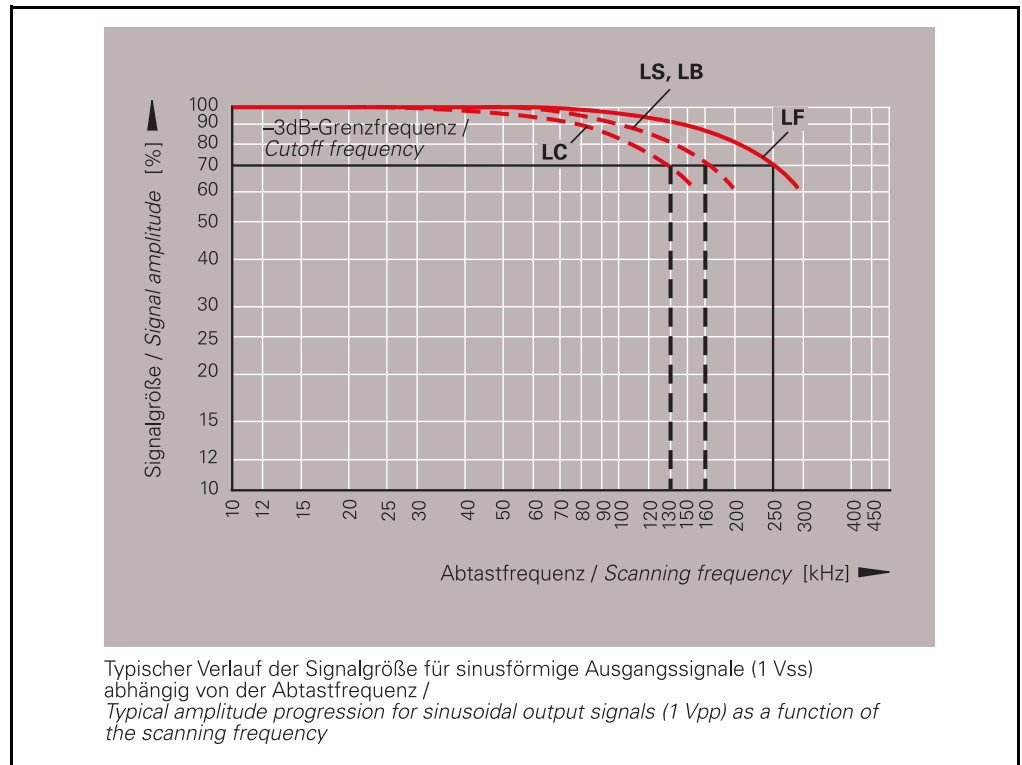

8.2.3 Incremental signals \sim 1 Vpp with commutating signals

Examples of encoders

ERN 1085, ERN 1185, ERN 1387

Commutating signals

The **commutating signals C and D** are derived from the Z1 track, and are equal to one sine or cosine period per revolution. Their typical signal amplitude is 1 Vpp (signal level: see incremental signals A and B). The recommended input circuit of the subsequent electronics is the same as for the 1 Vpp interface.

Incremental signals

Two nearly sinusoidal signals A and B

Signal amplitude M	0.75 to 1.2 Vpp Typ. 1 Vpp
Asymmetry $ P - N / 2M$	$0.05 \hat{=} TV \pm 11.5^\circ$
Signal ratio M_A / M	0.9 to 1.1
Phase angle $ \varphi_1 + \varphi_2 / 2$	$90^\circ \pm 5^\circ$ el.


Reference mark signal

One or several signal peaks R

Usable component G	0.2 to 1.1 V
Signal-to-noise ratio E, F	min. 100 mV
Zero crossovers K, L	$180^\circ \pm 90^\circ$ el.

Connecting cables

Shielded HEIDENHAIN cable	PUR $[4(2 \times 0.14 \text{ mm}^2) + (4 \times 0.5 \text{ mm}^2)]$
Cable length	Max. 150 m with 90 pF/m distributed capacitance
Propagation time	6 ns/m

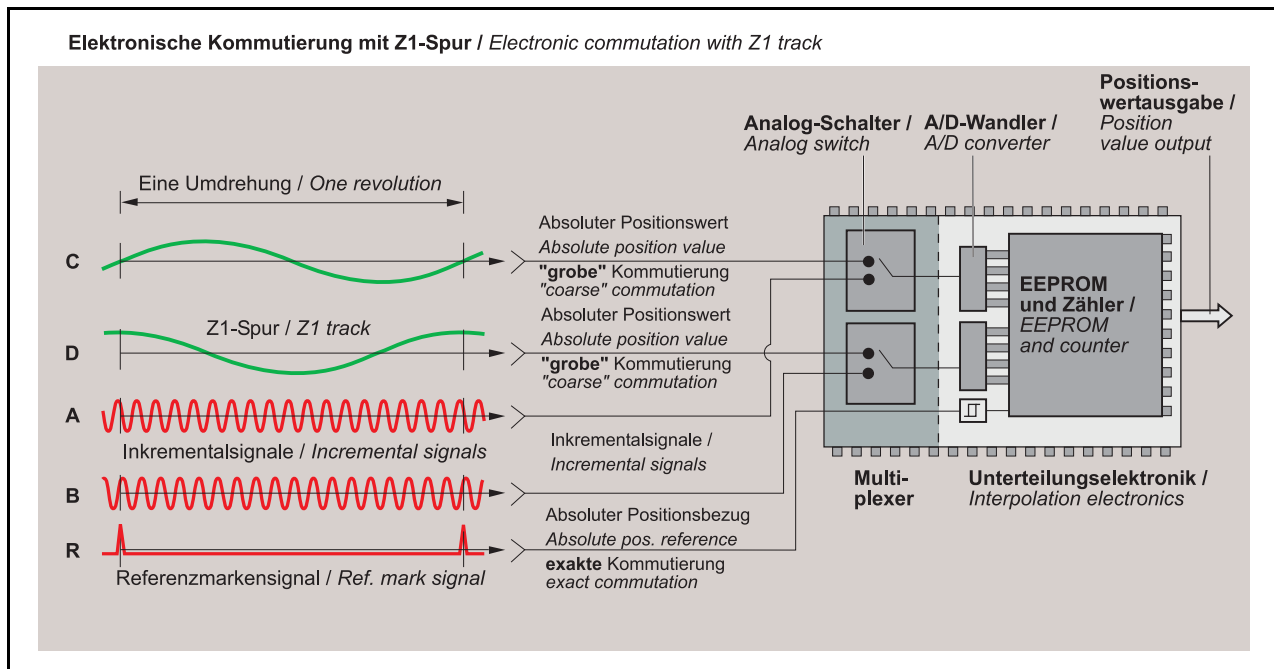

8.3 Square-wave interfaces

8.3.1 Incremental signals TTL with square-wave interface



Note

The stated tolerances are standard values!
 The tolerances of measuring systems for high resolutions (e.g., angle encoders) and large temperature ranges (e.g., motor encoders) are tighter.
 The supply voltage of $5\text{ V} \pm 5\%$ at the encoder has to be ensured!

Encoders that output TTL square-wave signals feature electronics which digitize the sinusoidal scanning signals without or with 2-fold interpolation. They provide two 90° (elec.) phase-shifted **square-wave pulses Ua1 and Ua2** and one or more **reference pulse Ua0** which is gated with the incremental signals. The **fault-detection signal $\overline{\text{UaS}}$** indicates fault conditions such as breakage of the power line or failure of the light source. It can be used for such purposes as machine shut-off during automated production. The integrated electronics also generates the **inverted signals** of all square-wave pulse trains.

The **measuring step** results from the spacing between two edges of the signals Ua1 and Ua2 subsequent to 1-fold, 2-fold or 4-fold evaluation.

The subsequent electronics must be designed to detect every edge of the square-wave pulses. The minimum **edge separation a** shown in the specifications is valid for the input circuit (1 m cable) and refers to measurement at the output of the differential line receiver. Cable-dependent differences in the propagation times additionally reduce the edge separation by 0.2 ns per meter of cable. To prevent counting errors the subsequent electronics must be designed such that it can operate with 90% of the resulting edge separation. The maximum permissible **shaft speed** or **traversing velocity** must never be exceeded.

Examples of encoders

ERN 120, ERN 420/460, ERN 1020, ROD 42x, ROD 466, ROD 1020
 LS 176, LS 476, LS 477, LS 323, LS 623, LIM 571

Incremental signals

Two TTL square-wave signals Ua1 and Ua2 and their inverted signals $\overline{\text{Ua1}}$ and $\overline{\text{Ua2}}$

Edge separation	$a \geq 0.45\ \mu\text{s}$ at 300 kHz scanning frequency
	$a \geq 0.8\ \mu\text{s}$ at 160 kHz scanning frequency
	$a \geq 1.3\ \mu\text{s}$ at 100 kHz scanning frequency

Reference mark signal

One or several square-wave pulses Ua0 and their inverted pulses $\overline{\text{Ua0}}$

Pulse width	90° elec. (other widths available on request); LS 323: ungated (= 360° elec.)
Delay time	$ t_d \leq 50\ \text{ns}$

Fault-detection signal


(LS 176, LS 47x) 1 square-wave pulse $\overline{\text{UaS}}$	Improper function: LOW (upon request: Ua1/ Ua2 at high impedance) Proper function: HIGH $t_s \geq 20\ \text{ms}$
---	---

Signal data

Differential line driver as per EIA standard RS-422	
Signal level	$U_H \geq 2.5 \text{ V}$ with $-I_H = 20 \text{ mA}$ $U \leq 0.5 \text{ V}$ with $I_L = 20 \text{ mA}$
Permissible load	$R \geq 100 \Omega$ (between associated outputs)
Max. load per output	$ I_L \leq 20 \text{ mA}$
Capacitive load	$C_{\text{load}} \leq 1000 \text{ pF}$ with respect to 0 V
Short-circuit stability	Outputs protected against short circuit to 0 V
Switching times (10 % to 90 %) with 1 m cable and recommended input circuit	Rise time $t \leq 30 \text{ ns}$ Fall time $t \leq 30 \text{ ns}$

Connecting cables


Shielded HEIDENHAIN cable	PUR [4(2 x 0.14 mm ²) + (4 x 0.5 mm ²)]
Cable length	Max. 100 m (\overline{UaS} max. 50 m) with 90 pF/m distributed capacitance
Propagation time	6 ns/m

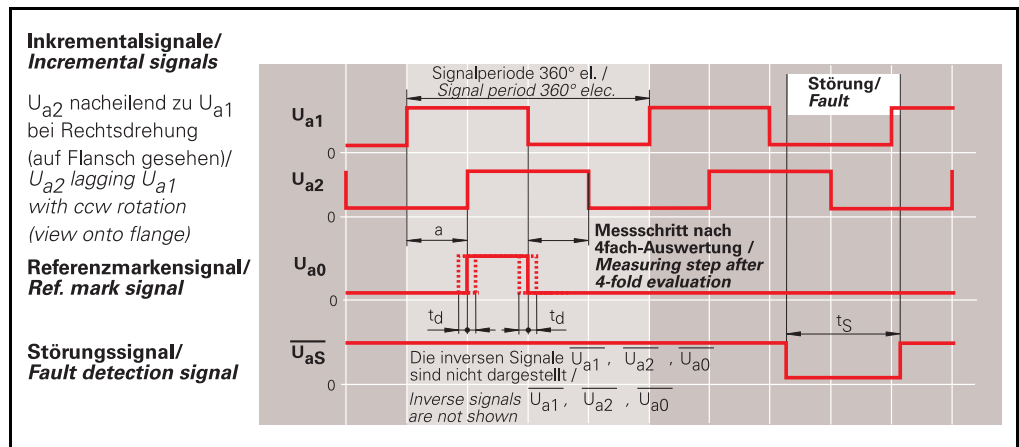

Recommended input circuit of subsequent electronics □ TTL


Dimensioning

Recommended differential line receivers	DS 26 C 32 AT AM 26 LS 32 (only if a > 0.1 μs)
	MC 3486
	SN 75 ALS 193
R ₁	4.7 kΩ
R ₂	1.8 kΩ
Z ₀	120 Ω
C ₁	220 pF

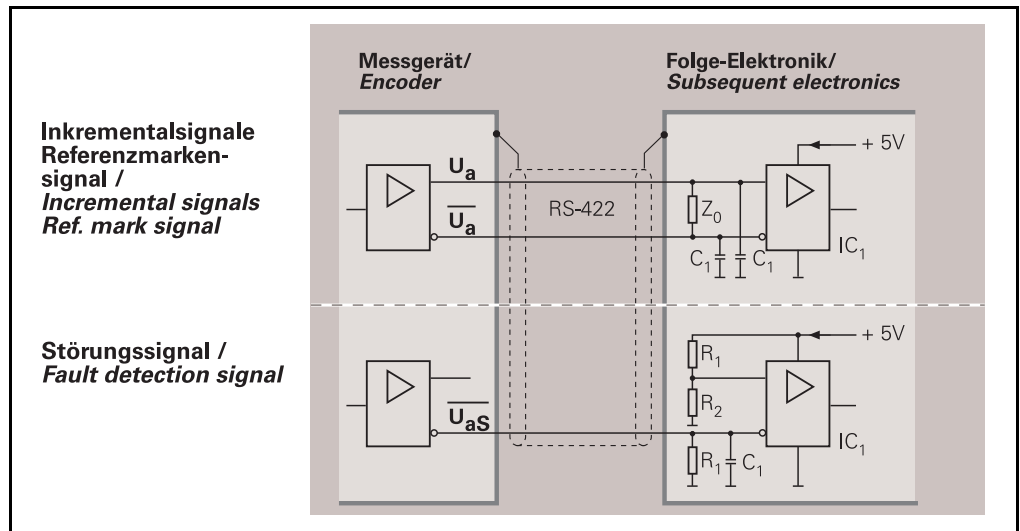

Cable lengths

The permissible **cable length** for transmission of the TTL square-wave signals to the subsequent electronics depends on the edge separation a. It is 100 m max., or 50 m for the fault detection signal. The supply voltage at the encoder (see specifications) must be ensured. The sensor lines can be used to measure the voltage at the encoder and, if required, correct it with an automatic control system (remote sense power supply).

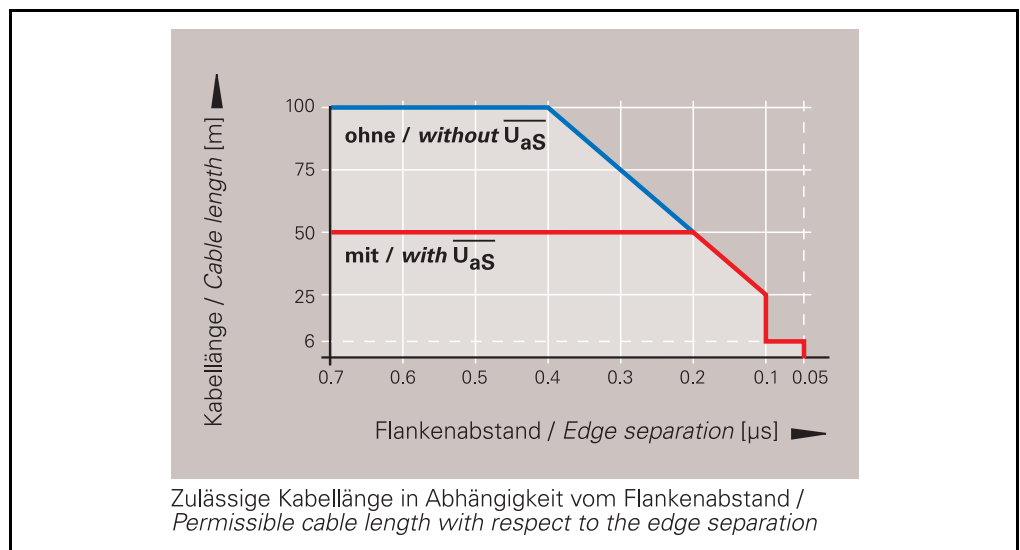

Possible specifications

e.g. Encoder	Meas. step ¹⁾ Interpolation ²⁾	Traversing speed	Edge separation a	Scanning frequency ²⁾	Ref. pulse delay time	Fault detection signal
LS 176 LS 476 LS 477	1 µm / 5-fold	120 m/min ³⁾ 120 m/min 60 m/min	≥ 0.25 µs ≥ 0.5 µs ≥ 1 µs	200 kHz 100 kHz 50 kHz	td ≤ 50 ns	yes
	0.5 µm / 10-fold	120 m/min 60 m/min 30 m/min		100 kHz 50 kHz 25 kHz		
LS 623 LS 629	0.5 µm / none	60 m/min	≥ 2.5 µs	100 kHz		
LS 323	0.5 µm / none	120 m/min	≥ 1.25 µs	100 kHz	Ref. pulse non-gated	no
LIM 571	10 µm / 256-fold	600 m/min	≥ 0.5 µs	1 kHz	td ≤ 0.1 µs	yes

- ¹⁾ After 4-fold evaluation
²⁾ Please indicate when ordering
³⁾ Mechanical limit

8.3.2 Incremental signals HTL with square-wave interface

Rotary encoders that output HTL square-wave signals feature electronics digitizing the sinusoidal scanning signals. They provide two 90° (elec.) phase-shifted **square-wave pulses Ua1 and Ua2** and one or more **reference pulse Ua0** which is gated with the incremental signals. A **fault detection signal UaS** indicates fault conditions such as an interruption of supply lines, failure of the light source, etc. The integrated electronics also generates the **inverse signals** of all square-wave pulse trains (not on ERN/ROD 1x30).

The **measuring step** results from the spacing between two edges of the signals Ua1 and Ua2 by 1-fold, 2-fold, or 4-fold evaluation.

The subsequent electronics must be designed to detect every edge of the square-wave pulses. The minimum **edge separation a** stated in the specifications refers to a measurement at the output of the given differential input circuit. To avoid counting errors, the subsequent electronics should be designed such that it can operate with 90% of the edge separation a. The maximum permissible **shaft speed** or **traversing velocity** must never be exceeded.

Examples of encoders

ERN 130, ERN 430, ERN 1030, ROD 43x, ROD 1030

Incremental signals

Two HTL square-wave signals Ua1 and Ua2 and their inverted signals $\overline{Ua1}$ and $\overline{Ua2}$ (ERN/ROD 1x30 without $\overline{Ua1}$ and $\overline{Ua2}$)

Edge separation	a \geq 0.45 µs at 300 kHz scanning frequency
	a \geq 0.8 µs at 160 kHz scanning frequency
	a \geq 1.3 µs at 100 kHz scanning frequency

Reference mark signal

One square-wave pulse U_{a0} and its inverted pulse $\overline{U_{a0}}$
(ERN/ROD 1x30 without $\overline{U_{a0}}$)

Pulse width	90° elec. (other widths available on request)
Delay time	$ t_d \leq 50$ ns with gated reference pulse

Fault-detection signal


1 square-wave pulse $\overline{U_{aS}}$	Improper function = LOW Proper function = HIGH
---	---

Signal data


Signal level with $U_p = 24$ V, without cable	$U_H \geq 21$ V with $-I_H = 20$ mA $U \leq 2.8$ V with $I_L = 20$ mA
Permissible load	$ I_L \leq 100$ mA (max. load per output, except $\overline{U_{aS}}$)
Capacitive load	$C_{load} \leq 10$ nF with respect to 0 V
Short-circuit stability	Outputs short-circuit proof for 1 minute max.to 0 V and U_p (except $\overline{U_{aS}}$)
Switching times (10 % to 90 %) with 1 m cable and recommended input circuit	Rise time $t \leq 200$ ns Fall time $t \leq 200$ ns

Connecting cables

Shielded HEIDENHAIN cable	PUR [4(2 x 0.14 mm ²) + (4 x 0.5 mm ²)]
Cable length	Max. 300 m (ERN/ROD 1x30 max. 100 m)
Propagation time	6 ns/m

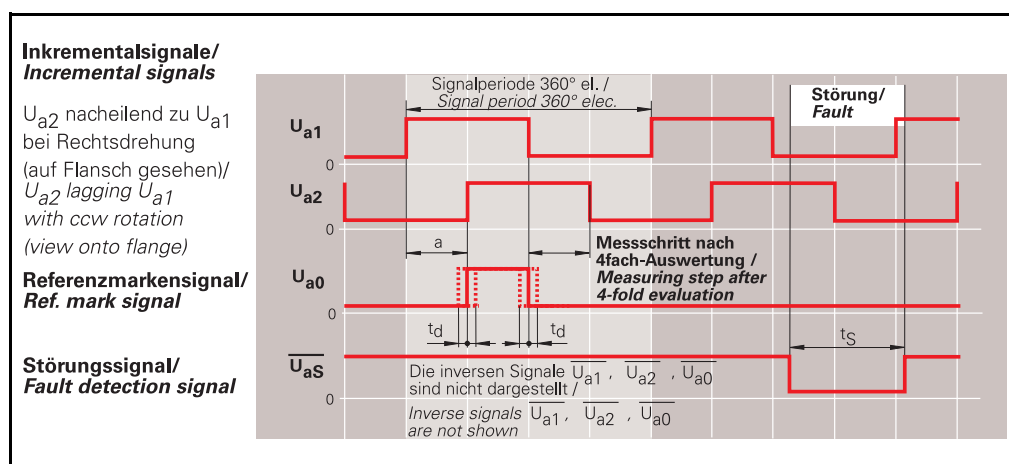


Recommended input circuit of subsequent electronics HTL

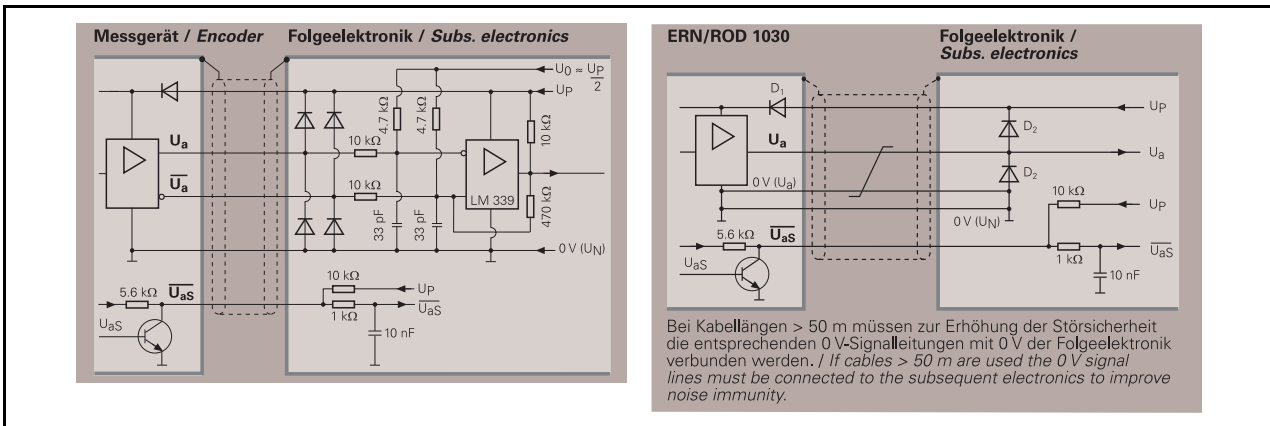

Cable lengths


For incremental rotary encoders with HTL signals the maximum permissible cable length depends on the effective supply voltage and on the operating temperature of the encoder.

The limit on cable length ensures the correct switching times and edge steepness of output signals.

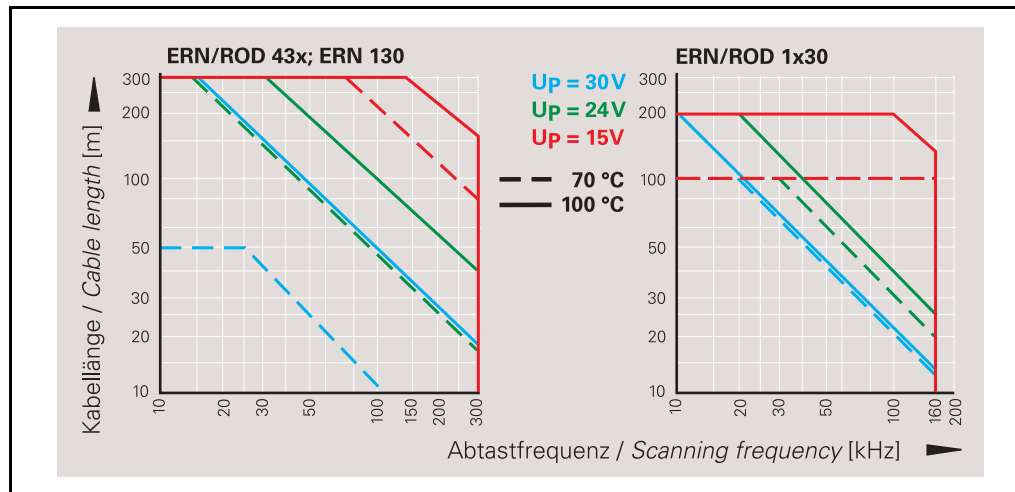

Current consumption

The current requirement of rotary encoders with HTL output signals depends on the output frequency and on the length of the cable to the subsequent electronics. The diagrams show typical curves for push-pull transmission with a 12-pin HEIDENHAIN cable. The maximum current consumption may be 50 mA higher.

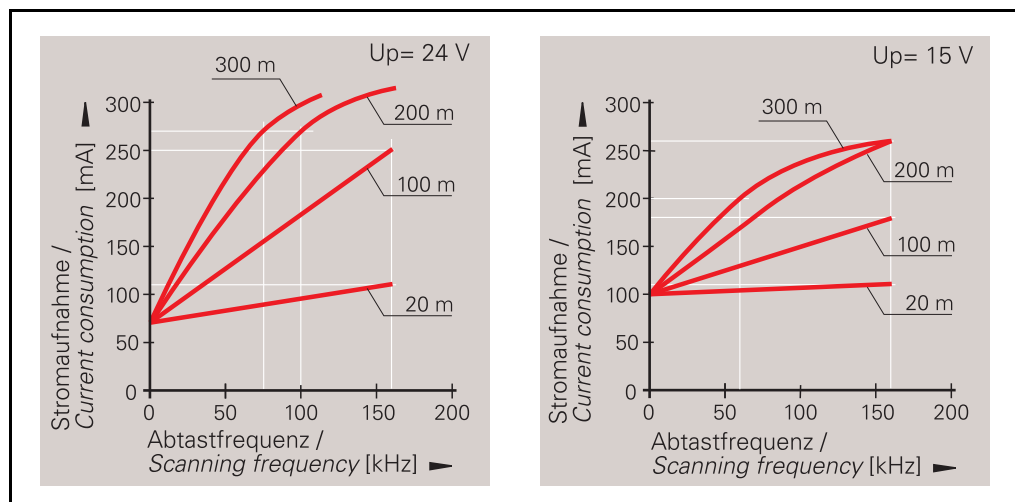

8.4 Absolute interfaces

8.4.1 Serial



Note

The PWM 9 can be used to check the incremental signals (see “Incremental signals 1 Vpp” on page 123).

Via the BNC outputs the code signals can be transmitted to an oscilloscope (only possible in feed-through mode; system clock is required).

For checking and programming the EnDat interface an IK 215/IK 115 expansion card is required.

The supply voltage of $5\text{ V} \pm 5\%$ (extended voltage range: 3.6 V to 5.25 V or 14 V) at the absolute encoder has to be ensured!

The EnDat interface (**Encoder Data**) of the absolute encoders is a **bidirectional** interface and therefore able to output **absolute position values** as well as to request and update information stored in the encoder. Thanks to **serial data transfer four signal lines** are sufficient. The type of transmission (position values or parameters) is selected by MODE commands that the subsequent electronics sends to the encoder. The data are transferred **in synchronism** with the CLOCK signal prescribed by the subsequent electronics.

EnDat 2.2 and EnDat 2.1 versions

The extended EnDat interface version 2.2 is compatible in its communication, command set (i.e. the available MODE commands) and time conditions with version 2.1, but also offers significant advantages. For example, it is possible to transfer additional information together with the position value without having to send a separate request. The interface protocol was expanded and the time conditions (clock frequency, processing time, recovery time) were optimized.

EnDat 2.1 and EnDat 2.2 are both available with or without incremental signals. The standard version of EnDat 2.2. units is without incremental signals, since these units feature a high internal resolution. To increase the resolution of EnDat 2.1 units, the incremental signals are evaluated in the subsequent electronics.

EnDat 2.2 (includes EnDat 2.1)

- Position values for incremental and absolute encoders
- Additional information on the position value
 - Diagnosis and test values
 - Absolute position values after referencing incremental encoders
 - Send and receive parameters
 - Commutation
 - Acceleration
 - Limit position signal
 - Temperature of encoder board
 - Temperature monitoring of an external temperature sensor (e.g. in motor coil)

EnDat 2.1

- Absolute position values
- Send and receive parameters
- Reset
- Test command and test values

Interface	Version	Clock frequency	Name on ID label	Power supply
EnDat 2.1	With incremental signals	$\leq 2\text{ MHz}$	EnDat 01	See specifications of the encoder
	Without incremental signals	$\leq 2\text{ MHz}$	EnDat 21	
EnDat 2.2	With incremental signals	$\leq 2\text{ MHz}$	EnDat 02	Extended range 3.6 to 5.25 V or 14 V
	Without incremental signals	$\leq 16\text{ MHz}$	EnDat 22	

Bold: Standard version

Examples of encoders

LC / ROC / ECN / ROQ / EQN/ECI/EQI ...


Interface

EnDat (serial, bidirectional)

Data transfer


Absolute position values, parameters and additional information

Data input	Differential line receiver according to EIA standard RS 485 for the signals $\overline{\text{CLOCK}}$, $\overline{\text{CLOCK}}$, DATA and $\overline{\text{DATA}}$
Data output	Differential line driver according to EIA standard RS485 for DATA and $\overline{\text{DATA}}$ signals
Signal level	Differential voltage output > 1.7 V with 120 Ω load * (EIA standard RS 485) * Terminating resistor and receiver input resistor
Code	Pure binary code
LC traversing direction	Rising code values with traverse to the right (ID plate is on the left side!)
ROC direction of rotation	Code values increase with clockwise rotation (viewed from flange side)

Incremental signals
 1 Vpp device-dependent (see "Incremental signals 1 Vpp" on page 123)
Connecting cables


Shielded HEIDENHAIN cable with incremental signals without incremental signals	PUR [(4 x 0.14 mm ²) + 2(4 x 0.14 mm ²) + (4 x 0.5 mm ²)] [(4 x 0.14 mm ²) + (4 x 0.34 mm ²)]
Cable length	Max. 150 m with 90 pF/m distributed capacitance
Propagation time	Max. 10 ns; typ. 6 ns/m

Recommended input circuit of the subsequent electronics EnDat interface

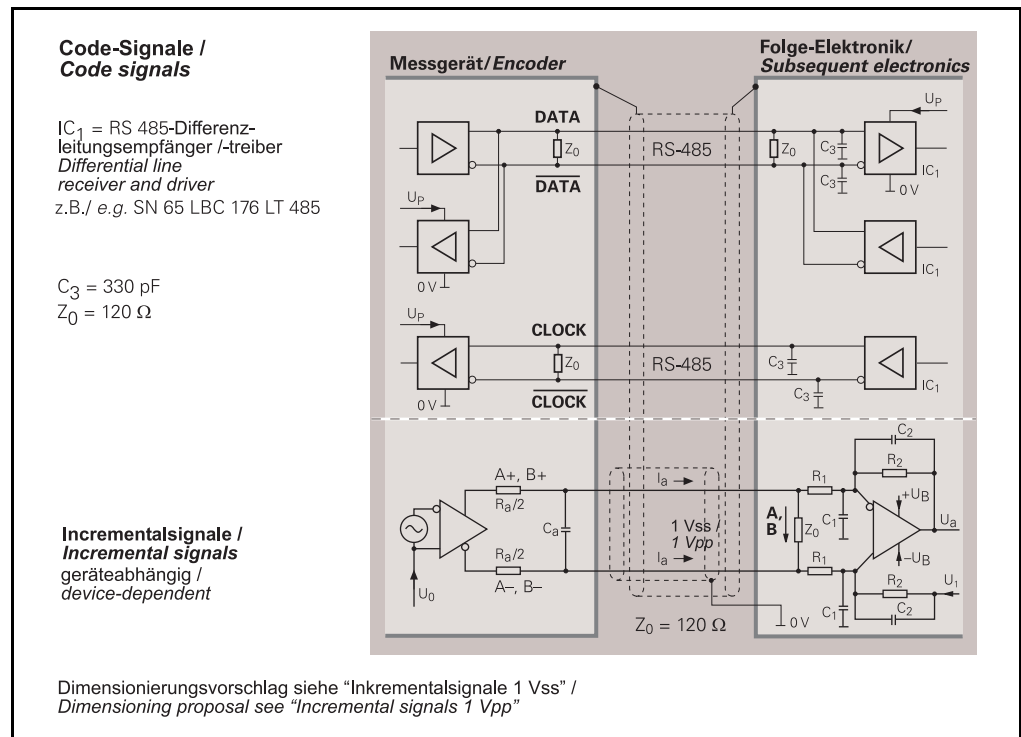

Clock frequency / cable length

Without propagation-delay compensation the **clock frequency** is variable between **100 kHz and 2 MHz** depending on the cable length. Because particularly in the case of large cable lengths and higher clock frequencies, the signal propagation time takes on magnitudes disturbing to the unambiguous assignment of data, it can be determined and compensated in a compensation run. This **propagation-delay compensation** in the subsequent electronics makes clock frequencies **up to 16 MHz** possible for cable lengths up to 100 m ($f_{CLK} \leq 8 \text{ MHz}$). The maximum clock frequency is mainly determined by the cables and connecting elements used. To ensure proper function at clock frequencies above 2 MHz, use only original ready-made HEIDENHAIN cables.

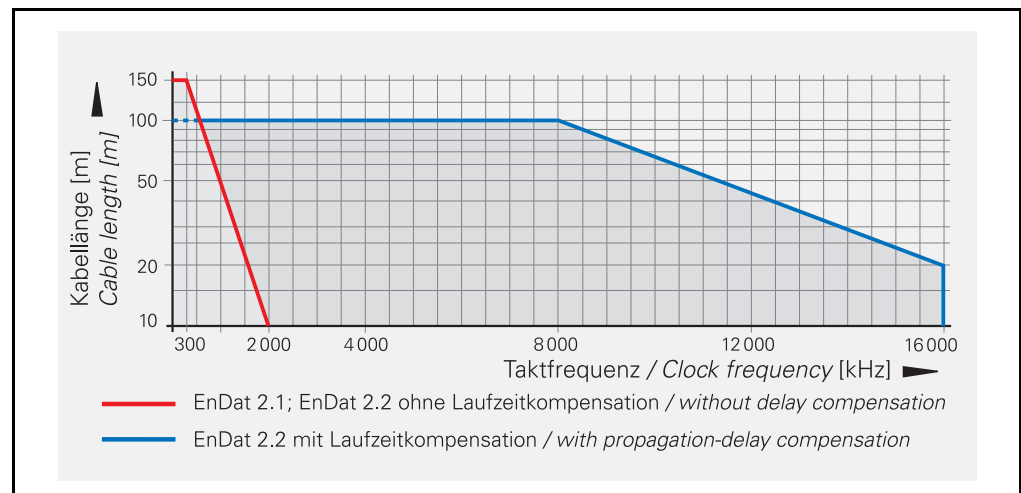

Note

For further information on EnDat refer to the Internet at www.heidenhain.de!

Benefits of the EnDat interface

- **Automatic self-configuration:** All information required by the subsequent electronics is already stored in the encoder.
- **High system security** through alarms and messages for monitoring and diagnosis
- **High transmission reliability** through cyclic redundancy checks
- **Datum shift** for faster commissioning

Other benefits of EnDat 2.2

- **Uniform interface** for all absolute and incremental encoders
- **Additional information** (limit switches, temperature, acceleration)
- **Quality improvement:** Position value calculation in the encoder permits shorter sampling intervals (25 µs).
- **Online diagnostics** through valuation numbers that indicate the encoder's current functional reserves and make it easier to plan machine use
- **Safety concept** for setting up safety-oriented control systems consisting of safe controls and safe encoders based on the standards DIN EN ISO 13 849-1 and IEC 61 508

Benefits of purely serial transmission specifically for EnDat 2.2 encoders

- Cost optimization through **simple subsequent electronics** with EnDat receiver component and **simple connection technology:** Standard connecting element (M12; 8-pin), single-shielded standard cables and less complex wiring
- **Minimized transmission times** through **high clock frequencies** up to 16 MHz. Position values are available in the subsequent electronics after approx. 10 µs.
- **Support for state-of-the-art machine designs**, e.g. direct drive technology

Versions

The extended EnDat interface version 2.2 is compatible in its communication, command set and time conditions with version 2.1, but also offers significant advantages. It makes it possible, for example, to transfer additional information with the position value without sending a separate request for it. The interface protocol was expanded and the time conditions (clock frequency, processing time, recovery time) were optimized.

Ordering designation

Indicated on the ID label and can be read out via parameter

Command set

The command set is the sum of all available MODE commands (see "Selection of transmission type"). The EnDat 2.2 command set includes the EnDat 2.1 MODE commands. When a MODE command from the EnDat 2.2 command set is sent to a subsequent electronics that supports only the EnDat 2.1 command set, the encoder or the subsequent electronics may output error messages.

Incremental signals

EnDat 2.1 and EnDat 2.2 are both available with or without incremental signals. EnDat 2.2 encoders feature a high internal resolution. It is therefore not necessary to poll the incremental signals, depending on the control technology used. To increase the resolution of EnDat 2.1 units, the incremental signals are interpolated and evaluated in the subsequent electronics.

Power supply

Encoders with ordering designations EnDat 02 and EnDat 22 have an extended power supply range.

Functions

The EnDat interface transmits absolute position values or additional physical quantities (only EnDat 2.2) in an unambiguous time sequence and serves to read from and write to the encoder's internal memory. Some functions are available only with EnDat 2.2 MODE commands.

Position values can be transmitted with or without additional information. Additional information is available via the MRS code (memory range select). Other functions such as parameter reading and writing can also be called after the memory area and address have been selected. Through simultaneous transmission with the position value, additional data can also be requested of axes in the feedback loop, and functions executed with them.

Parameter reading and writing is possible both as a separate function and in connection with the position value. Parameters can be read or written after the memory area and address are selected.

Reset functions serve to reset the encoder in the event of a malfunction. Reset is possible instead of or during position value transmission.

Servicing diagnosis makes it possible to inspect the position value even at standstill. A test command has the encoder send the required test values.

Select transmission type

Transmitted data are identified as either position values, position values with additional information, or parameters. The type of information to be transmitted is selected by MODE commands. **MODE commands** define the content of the transmitted information. Every MODE command consists of three bits. To ensure reliable transmission, every bit is transmitted redundantly (inverted or double). The EnDat 2.2 interface can also transfer parameter values in the additional data together with the position value. This makes the current position values constantly available for the control loop, even during a parameter request.

Control cycles for transfer of position values

The transmission cycle begins with the first falling **clock edge**. The encoder saves the measured values and calculates the position value. After two clock pulses (2T), to **select the type of transmission**, the subsequent electronics transmits the MODE command "Encoder transmit position value" (with/without additional information).

The subsequent electronics continues to transmit clock pulses and observe the data line to detect the start bit. The **start bit** starts data transmission from the encoder to the subsequent electronics. Time t_{cal} is the smallest time duration after which the position value can be read by the encoder. The subsequent **error bits**, error 1 and error 2 (only with EnDat 2.2 commands), are group signals for all monitored functions and serve for failure monitoring.

Beginning with the LSB, the encoder then transmits the absolute **position value** as a complete data word. Its length varies depending on which encoder is being used. The number of required clock pulses for transmission of a position value is saved in the parameters of the encoder manufacturer. The data transmission of the position value is completed with the **Cyclic Redundancy Check** (CRC).

In EnDat 2.2, this is followed by additional information 1 and 2, each also concluded with a CRC. With the end of the data word, the clock must be set to HIGH.

After 10 to 30 μs or 1.25 to 3.75 μs (with EnDat 2.2, the assignable recovery time t_m) the data line falls back to low. Then **data transmission** can restart by starting the clock.

MODE commands

MODE commands		
<ul style="list-style-type: none"> ■ Encoder send position value ■ Selection of memory area ■ Encoder receive parameters ■ Encoder send parameters ■ Encoder receive reset ¹⁾ ■ Encoder send test values ■ Encoder receive test command 	EnDat 2.1	EnDat 2.2
<ul style="list-style-type: none"> ■ Encoder send position value with additional data ■ Encoder transmit position value and receive selection of memory area ²⁾ ■ Encoder send position value and receive parameter ²⁾ ■ Encoder send position value and send parameter ²⁾ ■ Encoder send position value and receive error reset²⁾ ■ Encoder send position value and receive test command²⁾ ■ Encoder receive communication command³⁾ 		

¹⁾ Same reaction as with power interruption

²⁾ Selected additional information is also transmitted



³⁾ Reserved for encoders that do not support the safety system

For EnDat-2.1 and EnDat-2.2 mode commands, absolute encoders show different processing times for position values t_{cal} (see the brochure Linear Encoders for Numerically Controlled Machine Tools – Specifications). If the incremental signals are evaluated for axis control, then the EnDat 2.1 MODE commands should be used. Only in this manner can an active error message be transmitted synchronously with the currently requested position value. EnDat 2.1 MODE commands should not be used for pure serial position-value transfer for axis control.

		Without delay compensation	With delay compensation
Clock frequency	f_c	100 kHz to 2 MHz	100 kHz to 16 MHz
Calculation time for Position value Parameter	t_{cal} t_{ac}	See Specifications Max. 12 ms	
Recovery time	t_m	EnDat 2.1: 10 μ s – 30 μ s EnDat 2.2: 10 μ s – 30 μ s or 1.25 – 3.75 μ s ($f_c \geq 1$ MHz) (parameterizable)	
	t	Max. 500 ns	
	t_{ST}	–	2 μ s – 10 μ s
Data delay time	t_D	(0.2 + 0.01 x cable length in m) μ s	
Pulse width	t_{HI}	0.2 μ s – 10 μ s	Pulse width fluctuation HIGH to LOW max. 10 %
	t_{LO}	0.2 – 50 ms/30 μ s (for LC)	


**EnDat 2.2
transmission of
position values**

With EnDat 2.2, position values can be transmitted with or without additional information.

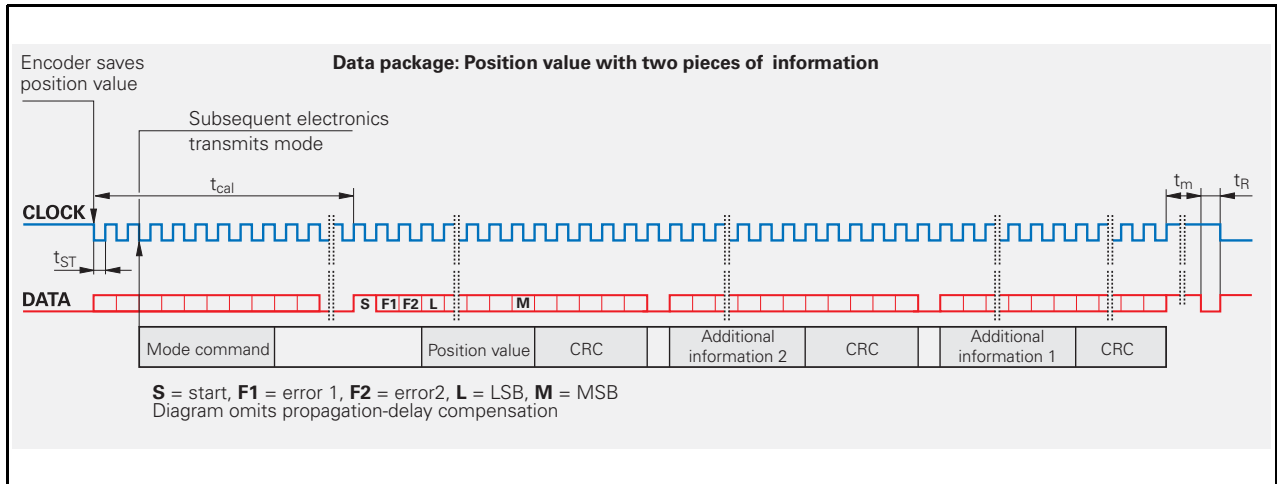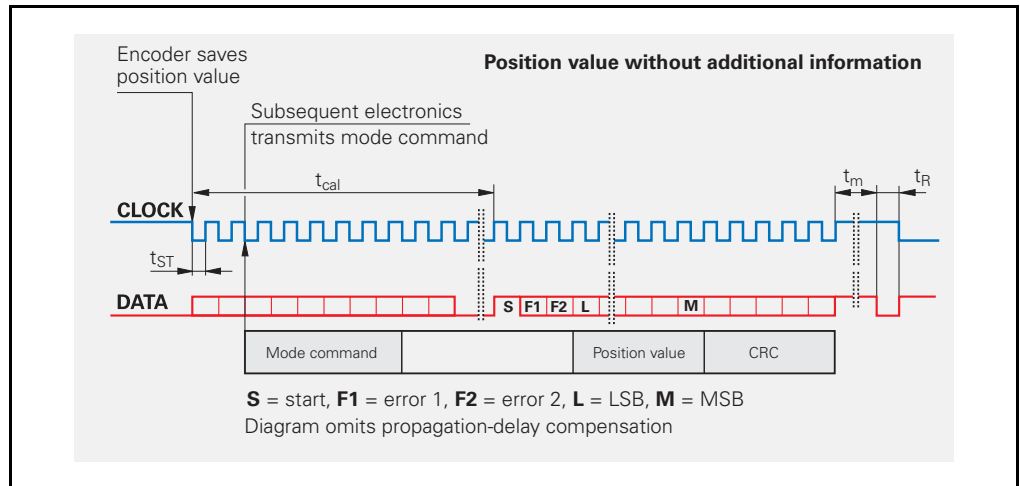

Additional information

With EnDat 2.2, position values can be transmitted with or without additional information. Each additional information is 30 bits long with LOW as first bit, and ends with a CRC check. The additional information supported by the respective encoder is saved in the encoder parameters. The content of the additional information is determined by the MRS code and is transmitted in the next sampling cycle for additional information. This information is then transmitted with every sample until a selection of a new memory area changes the content.

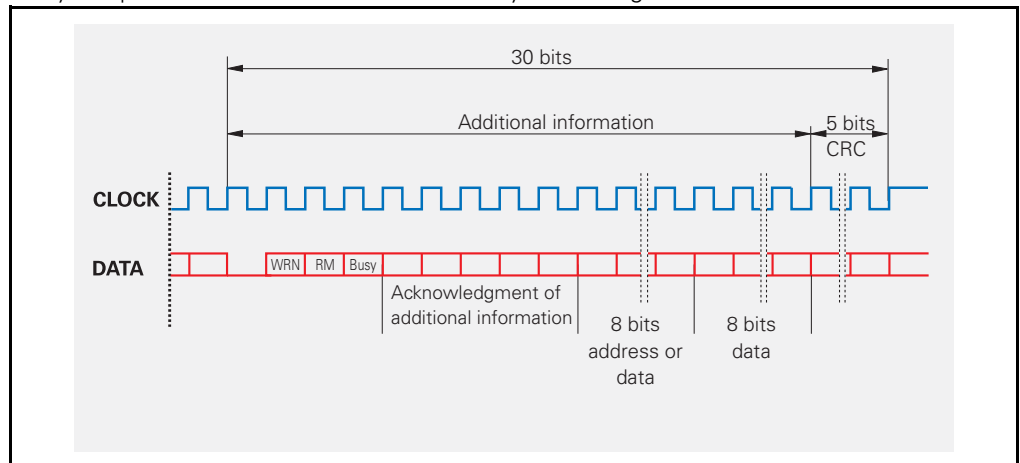


Additional information always begins with	The additional information can contain the following data	
Status data Warning – WRN Reference mark – RM Parameter request – Busy Acknowledgment of additional information	Additional information 1 Diagnosis (valuation numbers) Position value 2 Memory parameters MRS-code acknowledgment Test values Encoder temperature External temperature sensors Sensor data	Additional information 2 Commutation Acceleration Limit position signals Operating status error sources

EnDat 2.1 transmission of position values

With EnDat 2.1, the position values can either be transmitted with interrupted clock (analogous to EnDat 2.2) or with continuous clock.


Interrupted clock

The interrupted clock is intended particularly for time-clocked systems such as closed control loops. At the end of the data word the clock signal is set to HIGH level. After 10 to 30 μs (t_m), the data line falls back to LOW. Then a new data transmission can begin by starting the clock.

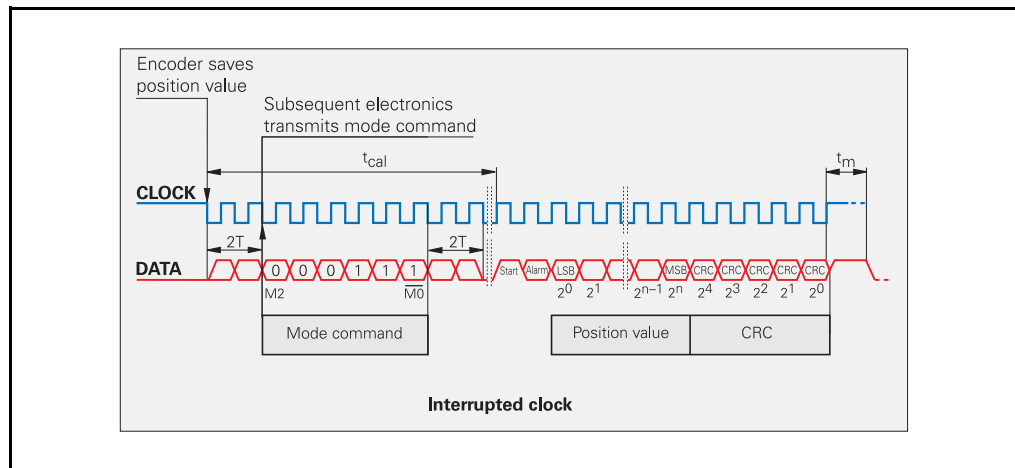

Continuous clock

For applications that require fast acquisition of the measured value, the EnDat interface can have the clock run continuously. Immediately after the last CRC bit has been sent, the DATA line is switched to HIGH for one clock cycle, and then to LOW. The new position value is saved with the very next falling edge of the clock and is output in synchronism with the clock signal immediately after the start bit and alarm bit. Because the MODE command "Encoder transmit position value" is needed only once before the first data transmission, the continuous-clock transfer mode reduces the length of the clock-pulse group by 10 periods per position value.

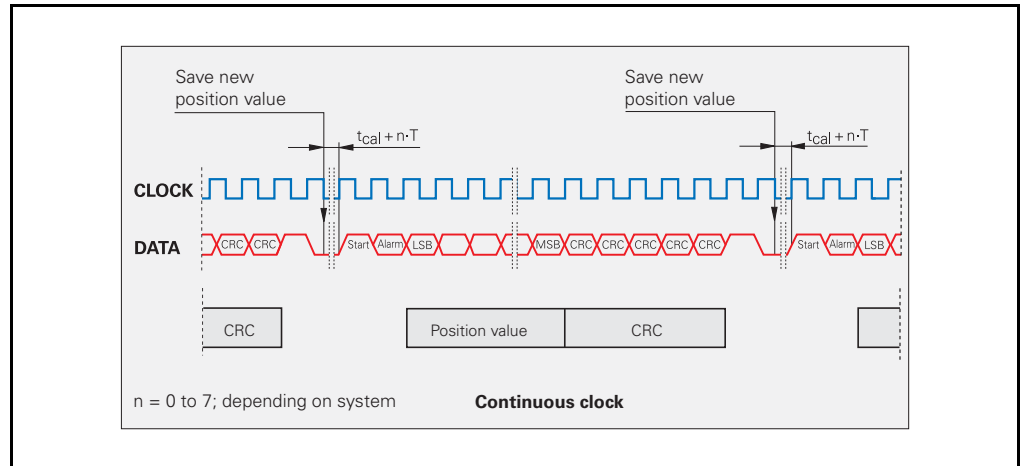


Synchronization of the serially transferred code value with the incremental signal

Absolute encoders with EnDat interface can exactly synchronize serially transmitted absolute position values with incremental values. With the first falling edge (latch signal¹⁾) of the CLOCK signal from the subsequent electronics, the scanning signals of the individual tracks in the encoder and counter²⁾ are frozen, as are the A/D converters for subdividing the sinusoidal incremental signals in the subsequent electronics.

The code value transmitted over the serial interface unambiguously identifies one incremental signal period. The position value is absolute within one sinusoidal period of the incremental signal. The subdivided incremental signal can therefore be appended in the subsequent electronics to the serially transmitted code value.

After power on and initial transmission of position values, two redundant position values are available in the subsequent electronics. Since on EnDat encoders exact synchronization of the serially transferred code value and the incremental signals is ensured irrespective of the cable length, both values can be compared in the subsequent electronics. This monitoring is possible even at high shaft speeds thanks to the EnDat interface's short transmission times of less than 50 μ s. This capability is a prerequisite for modern machine design and safety systems.

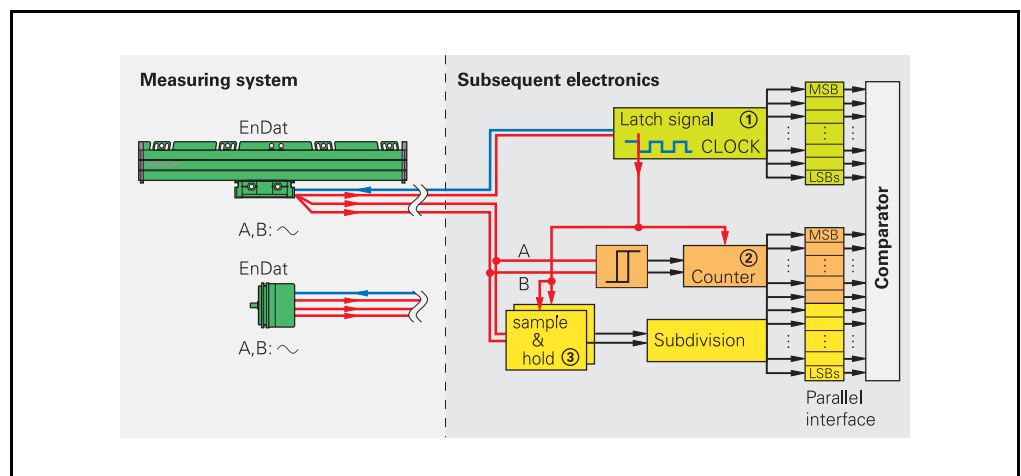

Parameters and memory areas



The encoder provides several memory areas for parameters. These can be read from by the subsequent electronics, and some can be written to by the encoder manufacturer, the OEM, or even the end user. Certain memory areas can be write-protected.

Note

The parameters, which in most cases are set by the OEM, largely define the function of the encoder and the EnDat interface. When the encoder is exchanged, it is therefore essential that its parameter settings are correct. Attempts to configure machines without including OEM data can result in malfunctions. If there is any doubt as to the correct parameter settings, the OEM should be consulted.

Parameters of the encoder manufacturer

This write-protected memory area contains all **information specific to the encoder**, such as encoder type (linear/angular, singleturn/multiturn, etc.), signal periods, position values per revolution, transmission format of position values, direction of rotation, maximum speed, accuracy dependent on shaft speeds, warnings and alarms, ID number and serial number. This information forms the basis for **automatic configuration**. A separate memory area contains the parameters typical for EnDat 2.2, such as status of additional data, temperature, acceleration, support of diagnostic and error messages.

OEM parameters


In this freely definable memory area, the OEM can store his information, e.g. the "electronic ID label" of the motor in which the encoder is integrated, indicating the motor model, maximum current rating, etc.

Operating parameters

This area is available for a **datum shift**, the configuration of diagnostics and for instructions. It can be protected against overwriting.

Operating status

This memory area provides detailed alarms or warnings for diagnostic purposes. Here it is also possible to initialize certain encoder functions, activate write protection for the OEM parameters and operating parameters memory areas, and to interrogate their status. Once activated, the **write protection** can be reversed only by HEIDENHAIN service personnel.

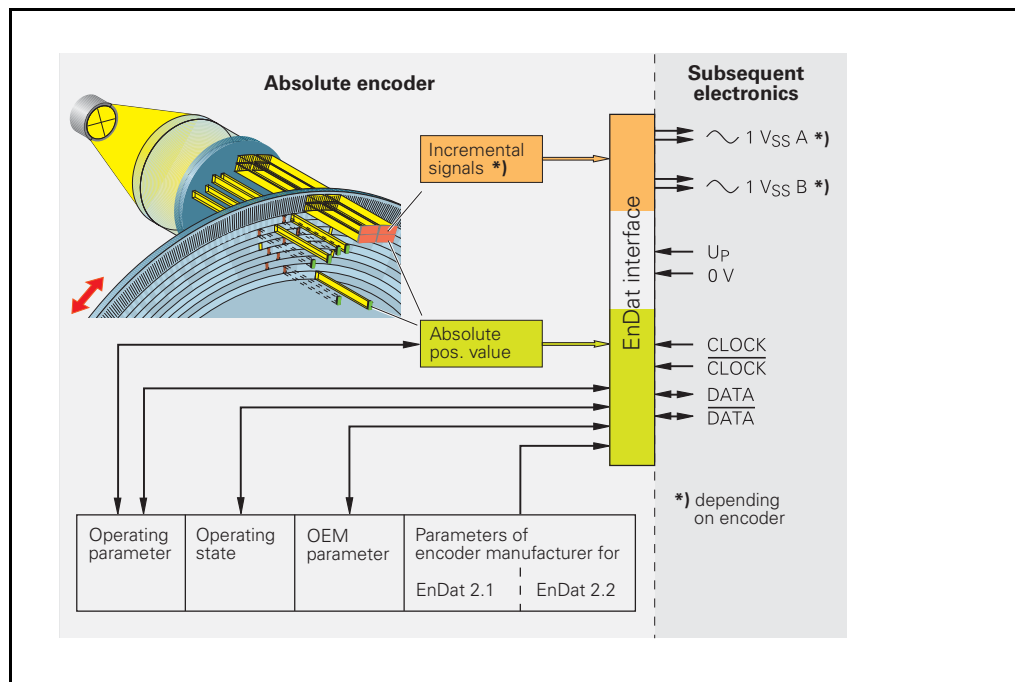

Monitoring and diagnostic functions

The EnDat interface enables comprehensive monitoring of the encoder without requiring an additional transmission line. The alarms and warnings supported by the respective encoder are saved in the "Parameters of the encoder manufacturer" memory area.

Error message

An error message becomes active if a **malfunction of the encoder** might result in incorrect position values. The exact cause of the disturbance is saved in the encoder's "operating status" memory. It is also possible to interrogate over the additional information "operating status error sources." For this purpose, the EnDat interface outputs the error bits Error 1 and Error 2 (only with EnDat 2.2 commands). These are group signals for all monitored functions and serve for failure monitoring. The two error messages are generated independently from each other.

Warning

This collective bit is transmitted in the status data of the additional information. It indicates that certain **tolerance limits of the encoder** have been reached or exceeded—such as shaft speed or the limit of light source intensity compensation through voltage regulation—without implying that the measured position values are incorrect. This function makes it possible to issue preventive warnings in order to minimize idle time.

Online diagnostics

Encoders with purely serial interfaces do not provide incremental signals for evaluation of encoder function. With EnDat 2.2 encoders, valuation numbers can therefore be read from the encoder cyclically for diagnostic purposes. The valuation numbers provide the current state of the encoder and ascertain the encoder's "functional reserves." The identical scale for all HEIDENHAIN encoders allows uniform valuation. This makes it easier to plan machine use and servicing.

Cyclic redundancy check

To ensure **reliability of data transfer**, a cyclic redundancy check (CRC) is performed through the logical processing of the individual bit values of a data word. This 5-bit long CRC concludes every transmission. The CRC is decoded in the receiver electronics and compared with the data word. This largely eliminates errors caused by disturbances during data transfer.

8.4.2 Synchronous serial SSI



Note

The PWM 9 can be used to check the incremental signals (see "Incremental signals 1 Vpp" on page 123).

Via the BNC outputs the code signals can be transmitted to an oscilloscope (only possible in feed-through mode; system clock is required).

For checking and programming the EnDat interface, an IK 215 expansion card is required. The supply voltage of $5\text{ V} \pm 5\%$ at the encoder has to be ensured!

Examples of encoders

ROC 410, ROC 412, ROC 413, ROQ 424, ROQ 425,
ECN 113, ECN 413, EQN 425

Interface

Serial SSI

The absolute position value, beginning with the Most Significant Bit (MSB first), is transferred in synchronism with a CLOCK signal transmitted by the control.

The SSI standard data word length for singleturn encoders is 13 bits, and for multiturn encoders 25 bits.

Code signals

Data input	Differential line receiver according to EIA standard RS-485 for the CLOCK and $\overline{\text{CLOCK}}$ signals
Data output	Differential line driver according to EIA standard RS-485 for the DATA and $\overline{\text{DATA}}$ signals
Signal level	Differential voltage output > 1.7 V with 120 Ω load* (EIA standard RS 485) * Terminating resistor and receiver input resistor
Code	Gray code
Direction of rotation	Code values increase with clockwise rotation (viewed from flange side)

Incremental signals \sim 1 Vpp (see "Incremental signals 1 Vpp" on page 123)


In addition to serial data transfer, the listed absolute rotary encoders output sinusoidal incremental signals with signal levels of 1 Vpp.

Connecting cables

Shielded HEIDENHAIN cable	PUR [(4 x 0.14 mm ²) + 2(4 x 0.14 mm ²) + (4 x 0.5 mm ²)]
Cable length	Max. 150 m with 90 pF/m distributed capacitance
Propagation time	6 ns/m

Recommended input circuit of the subsequent electronics SSI interface

Dimensioning IC₁ = Differential line receiver and driver, e.g. SN 65 LBC 176 LT 485
Z₀ = 120

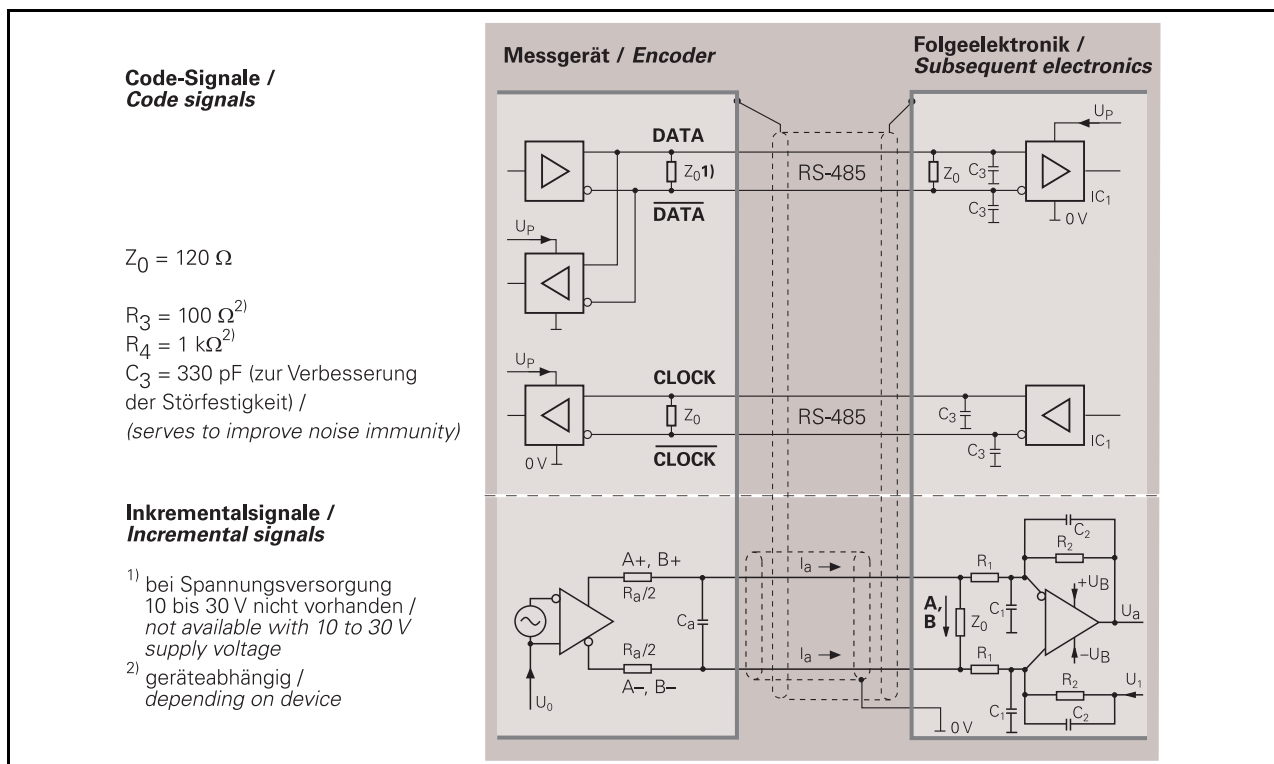

Permissible clock frequency with respect to cable lengths

Cable length	Clock pulse period	Clock frequency
50 m	1 μ s – 10 μ s	1000 kHz – 100 kHz
100 m	3.3 μ s – 10 μ s	approx. 300 kHz – 100 kHz

8.4.3 Synchronous serial SSI programmable



Note

The PWM 9 can be used to check the incremental signals (see “Incremental signals 1 Vpp” on page 123).

Via the BNC outputs the code signals can be transmitted to an oscilloscope (only possible in feed-through mode; system clock is required).

Programmable SSI rotary encoders can be examined with the IK 215, PWM 20, and PWM 21. Special programming adapters and software are required for programming.

The **absolute position value**, beginning with the most significant bit, is transferred over the data lines (DATA) in synchronism with a CLOCK signal from the control. A number of parameters and functions can be programmed with the enclosed programming software.

In addition to the absolute position values the sinusoidal **incremental signals** with 1 Vpp level are output. (Signal description: see “Synchronous serial SSI” on page 144.)

The **fault detection signal** indicates fault conditions such as an interruption in the supply lines, failure of the light source, etc.

Programmable functions and parameters

The encoders are programmed with HEIDENHAIN software on a personal computer. The software can also be used to check the parameter settings. Some functions that have no influence on the interface configuration can also be activated by hardware via the connector.

Interface

- Output format of position values in Gray code or pure binary code
- Direction of rotation for increasing position values (also configurable via the connector)
- Data format synchronous-serial right-aligned or 25-bit fir tree format (SSI)

Position values

- Singleturn resolution up to 8192 absolute positions per revolution, e.g. for adaptation to any screw pitch
- Multiturn resolution up to 4096 distinguishable revolutions, e.g. for adaptation to the ball-screw length

Scaling

- Factor for reducing the singleturn resolution
- Unit-distance integral reduction of singleturn or multiturn positions

Offset/preset

- Offset and preset values for zeroing and compensation
- Setting the preset value defined by software through the connector


For further information refer to <http://www.heidenhain.de> on the Internet.

Examples of encoders

ROQ 425 programmable

Code signals

Interfaces	Serial in the SSI (fir tree) or synchronous-serial right-aligned (programmable) data formats
Data input	Differential line receiver according to EIA standard RS 485 for the signals CLOCK, $\overline{\text{CLOCK}}$, DATA and $\overline{\text{DATA}}$
Data output	Differential line driver according to EIA standard RS-485 for the DATA and $\overline{\text{DATA}}$ signals
Signal level	Differential voltage output > 2 V (EIA standard RS-485)
Code	Gray code or binary code (programmable)
Direction of rotation	Increasing code values with clockwise or counterclockwise rotation, viewed from flange side (programmable)

Incremental signals  1 Vpp (see "Incremental signals 1 Vpp" on page 123)

Fault detection signal UaS

One square-wave pulse $\overline{\text{UaS}}$ (HTL)	Malfunction = LOW Proper function = HIGH
---	---


Programming inputs

	Direction of rotation and reset
Inactive	LOW < 0.25 x Up or input open
Active	HIGH > 0.6 x Up
Switching time	$t_{\text{min}} > 1 \text{ ms}$

Connecting cables

Shielded HEIDENHAIN cable	PUR [(4 x 0.14 mm ²) + 2(4 x 0.14 mm ²) + (4 x 0.5 mm ²)]
Cable length	Max. 150 m with 90 pF/m distributed capacitance
Propagation time	6 ns/m

Recommended input circuit of subsequent electronics

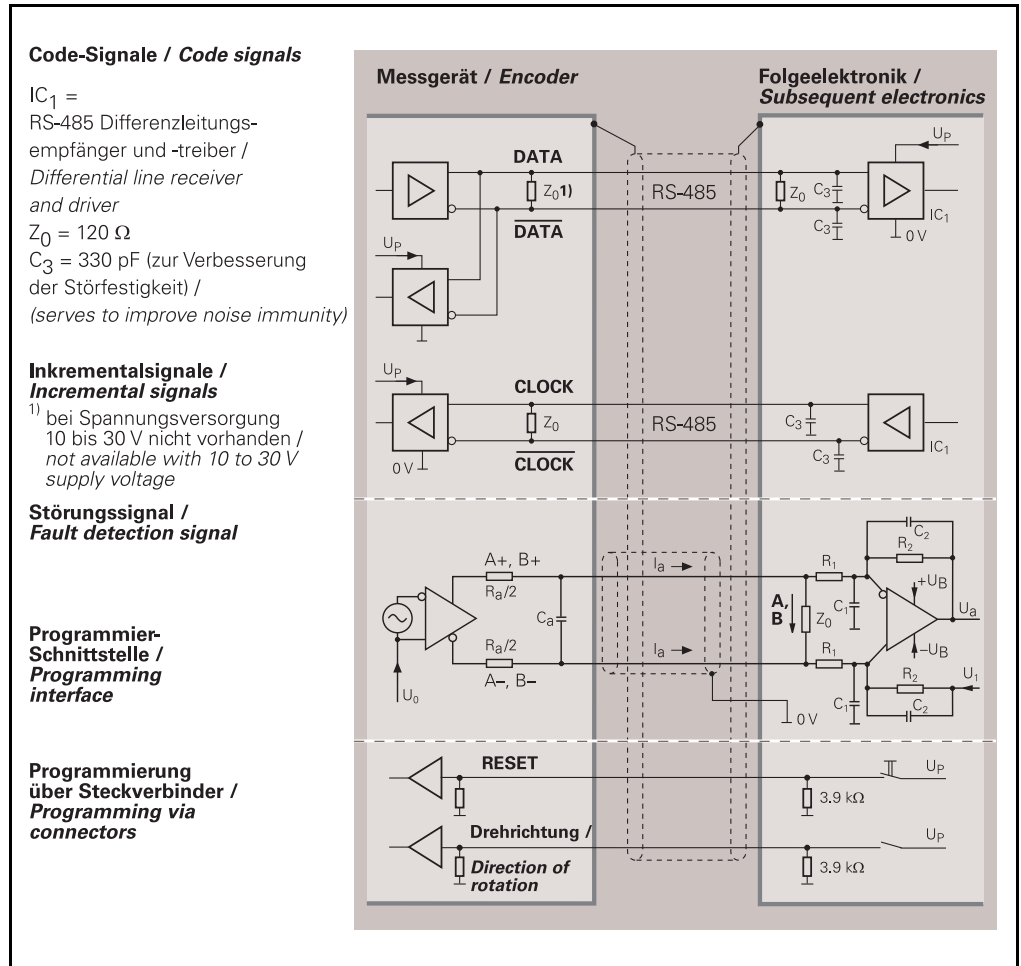


Control cycle for complete data format

In the quiescent state clock and data lines are on high level. The current position value is stored on the first falling edge of the clock. Data transfer begins with the first rising clock edge.

After transmission of a complete data word, the data line remains at low level, until the rotary encoder is ready for a new measured value latch (t_2). If another data output request (CLOCK) is received within this time, the same data will be output once again.


If data output is interrupted (CLOCK = high for $t > t_2$) a new measured value is saved with the next falling edge. With the next rising clock edge the subsequent electronics adopts the data.

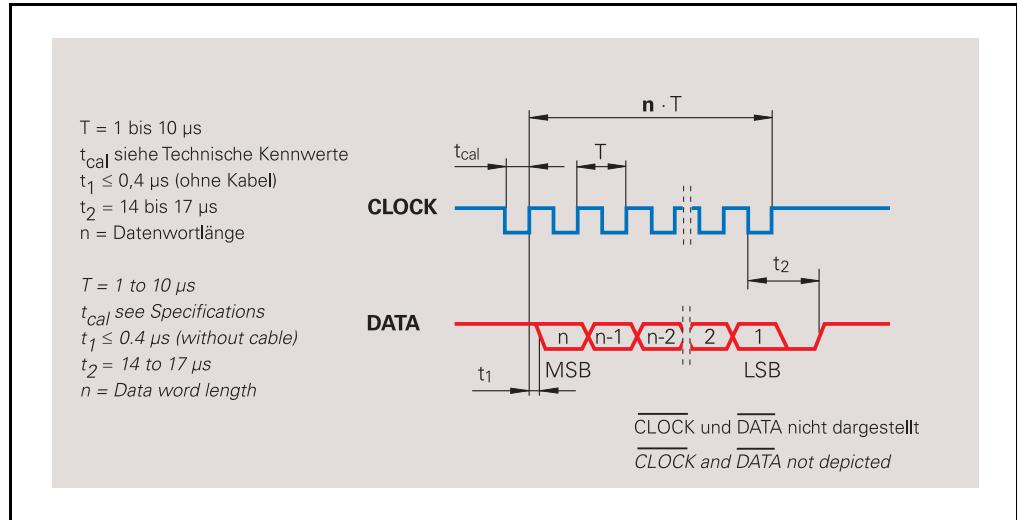

Data word length n

ROC 413 ECN 113 ECN 413	ROC 412	ROC 410	ROQ 424	ROQ 425 EQN 425
13 bits	13 bits	13 bits	25 bits	25 bits


Permissible clock frequency with respect to cable lengths

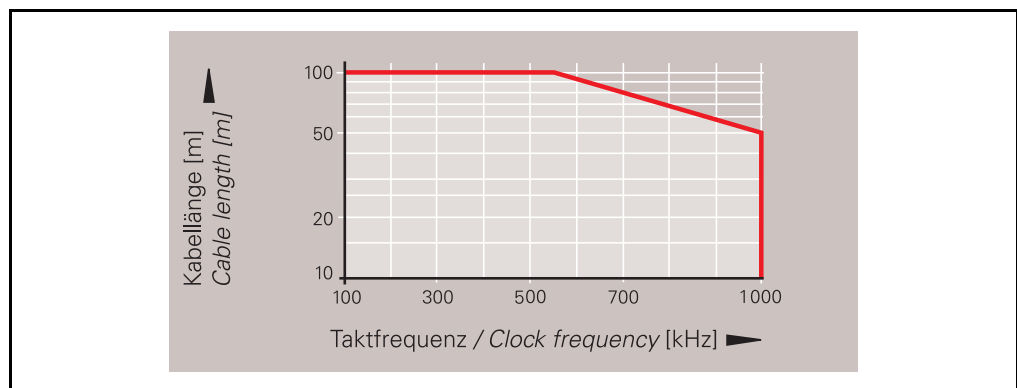


9 Pin layouts



9.1 Interface boards

11 μ App

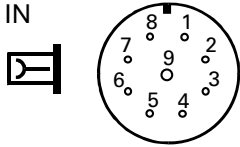9-pol. HEIDENHAIN-Flanschdose 9-pin HEIDENHAIN flange socket						IN 		
1	2	5	6	7	8	3	4	9
I1		I2		I0		5 V	0 V	0 V
+	-	+	-	+	-	UP	UN	Innenschirm Internal shield

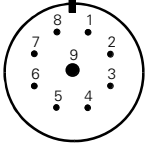9-pol. HEIDENHAIN-Flanschdose 9-pin HEIDENHAIN flange socket						OUT 		
1	2	5	6	7	8	3	4	9
I1		I2		I0		5 V	0 V	frei free
+	-	+	-	+	-	UP	UN	

1 Vpp

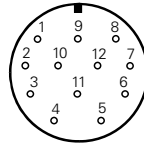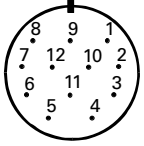12-pol. HEIDENHAIN-Flanschdose 12-pin HEIDENHAIN flange socket						IN 		OUT 			
5	6	8	1	3	4	12	10	2	11	9	7
A		B		R		5 V	0 V	5 V	0 V	frei free	frei free
+	-	+	-	+	-	Up	UN	Sensor	Sensor		

Except for the PWM 9 MODE: MEASURE U/I the sensor lines are connected to the encoder supply lines.

TTL

12-pol. HEIDENHAIN-Flanschdose 12-pin HEIDENHAIN flange socket											
1	2	3	4	5	6	7	8	9	10	11	12
$\overline{U_{a2}}$	+5 V Sensor	U_{a0}	$\overline{U_{a0}}$	U_{a1}	$\overline{U_{a1}}$	$\overline{U_{aS}}$	U_{a2}	Gehäuse Chassis	0 V U_N	0 V Sensor	+5 V U_P

Except for the PWM 9 MODE: MEASURE U/I the sensor lines are connected to the encoder supply lines.

HTL

12-pol. HEIDENHAIN-Flanschdose 12-pin HEIDENHAIN flange socket											
1	2	3	4	5	6	7	8	9	10	11	12
$\overline{U_{a2}}$	10-30 V Sensor	U_{a0}	$\overline{U_{a0}}$	U_{a1}	$\overline{U_{a1}}$	$\overline{U_{aS}}$	U_{a2}	Gehäuse Chassis	0 V U_N	0 V Sensor	10-30 V U_P

Except for the PWM 9 MODE: MEASURE U/I the sensor lines are connected to the encoder supply lines.

Absolute/1 Vpp

17-pol. HEIDENHAIN-Flanschdose 17-pin HEIDENHAIN flange socket											
---	--	--	--	--	--	--	--	--	--	--	--




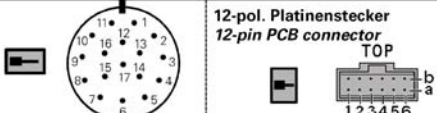



Note




The PIN layout of this interface board depends on the encoder connected and on the soft-key settings.
See "EnDat 2.1" on page 153, "SSI serial interface" on page 154, "Serial interface SSI programmable" on page 154, "Motor encoders and absolute encoders" on page 160

9.2 Power supply connector (female)

8-polige Stromversorgungs-Buchse DC-IN 8-pin power supply socket DC-IN							
1	2	3	4	5	6	7	8
10-30V				0V			

9.3 EnDat 2.1

17-pol. HEIDENHAIN-Kupplung oder -Flanschdose 17-pin HEIDENHAIN coupling or flange socket 						12-pol. Platinenstecker 12-pin PCB connector 							
	Spannungsversorgung Power supply					Inkrementalsignale Incremental signals				absolute Positionswerte Absolute position values			
	7	1	10	4	11	15	16	12	13	14	17	8	9
	1b	6a	4b	3a	/	2a	5b	4a	3b	6b	1a	2b	5a
	Up	Sensor Up 1)	0 V	Sensor 0 V 1)	Innen- schirm Inside shield	A+	A-	B+	B-	DATA+	DATA-	CLOCK	CLOCK-
	braun/grün brown/green	blau blue	weiß/grün white/green	weiß white	/	grün/schwarz green/black	gelb/schwarz yellow/black	blau/schwarz blue/black	rot/schwarz red/black	grau grey	rosa pink	violett violet	gelb yellow

	sonstige Signale other signals	
	5	6
	-	-
	T+ 2)	T- 2)
	braun 2) brown	weiß 2) white

External shield lies on housing

Up = Voltage supply






T = Temperature

Sensor: The sensor line is connected internally to the respective power supply.

Vacant pins or wires must not be used!

1) Not assigned if a power of 7 to 10 V is supplied via adapter inside the motor housing

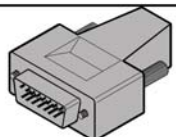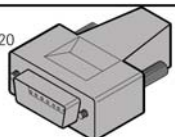2) Only for cables inside the motor housing

15-pol. Sub-D-Stecker, Stift für IK 215, PWM 20, PWM 21 15-pin D-sub connector, male for IK 215, PWM 20, PWM 21 						15-pol. Sub-D-Stecker, Buchse für HEIDENHAIN-Steuerungen und IK 220 15-pin D-sub connector, female for HEIDENHAIN controls and IK 220 							
	Spannungsversorgung Power supply					Inkrementalsignale Incremental signals				absolute Positionswerte Absolute position values			
	4	12	2	10	6	1	9	3	11	5	13	8	15
	1	9	2	11	13	3	4	6	7	5	8	14	15
	Up	Sensor Up	0 V	Sensor 0 V	Innen- schirm Internal shield	A+	A-	B+	B-	DATA+	DATA-	CLOCK+	CLOCK-
	braun/grün brown/green	blau blue	weiß/grün white/green	weiß white	/	grün/schwarz green/black	gelb/schwarz yellow/black	blau/schwarz blue/black	rot/schwarz red/black	grau grey	rosa pink	violett violet	gelb yellow

External shield lies on housing

Up = Voltage supply

Sensor: The sensor line is connected internally to the respective power supply.

Vacant pins or wires must not be used!

9.4 SSI serial interface

17-pol. HEIDENHAIN-Kupplung 17-pin HEIDENHAIN coupling													
Spannungsversorgung EN 50178 Power supply EN 50178				Inkrementalsignale Incremental signals						absolute Positionswerte Absolute position values			
7	1	10	4	11	15	16	12	13	14	17	8	9	
Up	Sensor Up	U _N 0 V	Sensor 0 V	Innen- schirm Internal shield	A+	A-	B+	B-	DATA+	DATA-	CLOCK+	CLOCK-	
braun/grün brown/green	blau blue	weiß/grün white/green	weiß white	/	grün/schwarz green/black	gelb/schwarz yellow/black	blau/schwarz blue/black	rot/schwarz red/black	grau grey	rosa pink	violett violet	gelb yellow	

External shield lies on housing

Up = Voltage supply

Sensor: The sensor line is connected internally to the respective power supply.

Vacant pins or wires must not be used!

9.5 Serial interface SSI programmable





17-pol. HEIDENHAIN-Flanschdose 17-pin HEIDENHAIN flange socket											
Spannungsversorgung Power supply EN 50178				Inkrementalsignale Incremental signals				absolute Positionswerte Absolute position values			
7	10	11	15	16	12	13	14	17	8	9	
Up 10 - 30 V	U _N 0 V	Innen- schirm Internal shield	A+	A-	B+	B-	DATA+	DATA-	CLOCK+	CLOCK-	
braun/grün brown/green	weiß/grün white/green	/	grün/schwarz green/black	gelb/schwarz yellow/black	blau/schwarz blue/black	rot/schwarz red/black	grau grey	rosa pink	violett violet	gelb yellow	
sonstige Signale											
1	4	3	2	5	6						
RxD	TxD	U _a S	Drehrichtung Rotational direction	Preset 1	Preset 2						
blau blue	weiß white	rot red	schwarz black	grün green	braun brown						



External shield lies on housing



Up = Voltage supply

9.6 Standard HEIDENHAIN cables

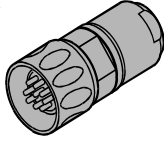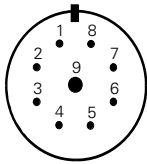
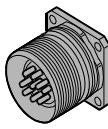
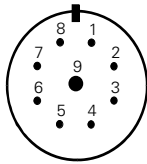


11 µApp

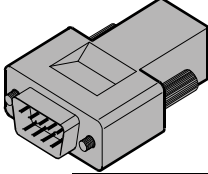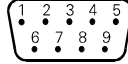9-pol. HEIDENHAIN-Stecker 9-pin HEIDENHAIN connector					 					9-pol. Flanschdose 9-pin flange socket					 				
1	2	3	4	5	6	7	8	9	Gehäuse <i>Housing</i>										
I_1	I_1	5V Up	0V U_N	I_2	I_2	I_0	I_0	Innenschirm <i>Internal shield</i>		Außenschirm <i>External shield</i>									
+	-			+	-	+	-												
grün <i>green</i>	gelb <i>yellow</i>	braun <i>brown</i>	weiß <i>white</i>	blau <i>blue</i>	rot <i>red</i>	grau <i>grey</i>	rosa <i>pink</i>	weiß/braun <i>white/brown</i>											

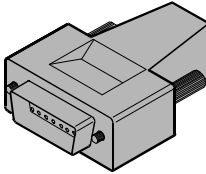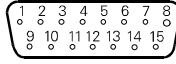9-pol. Sub-D-Stecker für HEIDENHAIN PC-Zählerkarte IK 121A 9-pin D-sub-connector for HEIDENHAIN IK 121A counter card										 									
1	2	3	4	5	6	7	8	9	Gehäuse <i>Housing</i>										
I_1	0V U_N	I_2	Innenschirm <i>Internal shield</i>		I_0	I_1	5V Up	I_2	I_0	Außenschirm <i>External shield</i>									
-		-			-	+		+	+										
gelb <i>yellow</i>	weiß <i>white</i>	rot <i>red</i>	weiß/braun <i>white/brown</i>		rosa <i>pink</i>	grün <i>green</i>	braun <i>brown</i>	blau <i>blue</i>	grau <i>grey</i>										



15-pol. Sub-D-Stecker für HEIDENHAIN-Bahnsteuerung TNC 410, TNC 426, TNC 430 15-pin D-sub-connector for HEIDENHAIN contouring control TNC 410, TNC 426, TNC 430										 									
1	2	3	4	5, 8, 9, 11, 14, 15	6	7	10	12	13	Gehäuse <i>Housing</i>									
5V Up	0V U_N	I_1	I_1		I_2	I_2	I_0	I_0	Innenschirm <i>Internal shield</i>		Außenschirm <i>External shield</i>								
		+	-		+	-	+	-											
braun <i>brown</i>	weiß <i>white</i>	grün <i>green</i>	gelb <i>yellow</i>	frei <i>free</i>	blau <i>blue</i>	rot <i>red</i>	grau <i>grey</i>	rosa <i>pink</i>	weiß/braun <i>white/brown</i>										

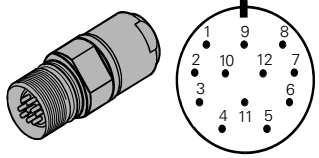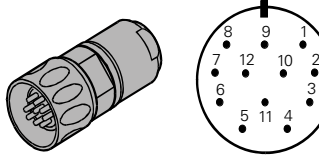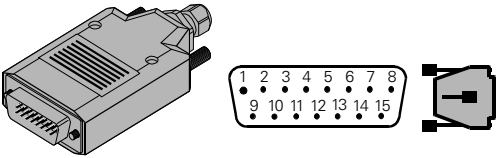TTL

12-pol. HEIDENHAIN-Kupplung 12-pin HEIDENHAIN coupling 				12-pol. HEIDENHAIN-Stecker 12-pin HEIDENHAIN connector 				15-pol. Sub-D-Stecker (Stift) an LIF 171 15pin D-sub connector (male) on LIF 171 						
	5	6	8	1	3	4	12	10	2	11	9	7	/	Gehäuse <i>Housing</i>
	1	9	3	11	14	7	4	2	12	10	/	13	15	Außen- schirm <i>External shield</i>
	Ua1	— Ua1	Ua2	— Ua2	Ua0	— Ua0	5V Up	0V UN	5V Sensor	0V Sensor	frei free	— UaS	1)	
	braun <i>brown</i>	grün <i>green</i>	grau <i>grey</i>	rosa <i>pink</i>	rot <i>red</i>	schwarz <i>black</i>	braun/ grün <i>brown/ green</i>	weiß/ grün <i>white/ green</i>	blau <i>blue</i>	weiß <i>white</i>	/	violett <i>violet</i>	gelb <i>yellow</i>	
IEC742 EN 50178														

The sensor line is internally connected to the power supply line. External shield lies on housing.
 1) TTL/11 µApp switchover


1 Vpp

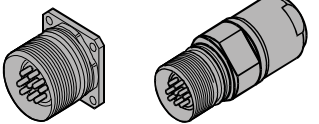

12-pol. HEIDENHAIN-Flanschdose oder -Kupplung 12-pin HEIDENHAIN-flange socket or coupling 								12-pol. HEIDENHAIN-Stecker 12-pin HEIDENHAIN-connector 					
1	2	3	4	5	6	7	8	9	10	11	12	/	Gehäuse <i>Housing</i>
B	5V Sensor	R	R	A	A	/	B	frei free	0V UN	0V Sensor	5V Up	frei free	Außen- schirm <i>External shield</i>
—		+	—	+	—		+						
rosa <i>pink</i>	blau <i>blue</i>	rot <i>red</i>	schwarz <i>black</i>	braun <i>brown</i>	grün <i>green</i>	violett <i>violet</i>	grau <i>grey</i>	/	weiß/ grün <i>white/ green</i>	weiß <i>white</i>	braun/ grün <i>brown/ green</i>	gelb <i>yellow</i>	

The sensor line is internally connected to the power supply line. External shield lies on housing.

1 Vpp

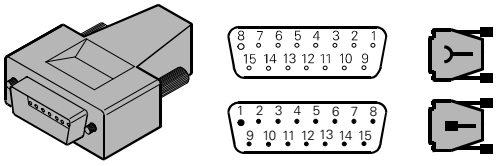
15-poliger Sub-D-Stecker (Buchse)
für HEIDENHAIN-Bahnsteuerung TNC 410, TNC 426, TNC 430
15-poliger Sub-D-Stecker (Stift)
für HEIDENHAIN-PC-Zählerkarte IK 121 V
15-pin D-sub connector (female)
for HEIDENHAIN contouring controls TNC 410, TNC 426, TNC 430
15-pin D-sub connector (male)
for HEIDENHAIN IK 121 V Counter Card for PCs



	3	4	6	7	10	12	1	2	9	11	5/8/ 13/15	14	/	Gehäuse Housing
	1	9	3	11	14	7	4	2	12	10	5/6/ 8/15	13	/	Außens- schirm External shield
	A		B		R		5V Up	0V U _N	5V Sensor	0V Sensor	frei free	frei / nicht belegen free/do not use	frei free	
	+	-	+	-	+	-								
	braun brown	grün green	grau grey	rosa pink	rot red	schwarz black	braun/ grün brown/ green	weiß/ grün white/ green	blau blue	weiß white	/	violett violet	gelb yellow	

HTL

12-pol. HEIDENHAIN-
Flanschdose oder -Kupplung
12-pin HEIDENHAIN
flange socket or coupling

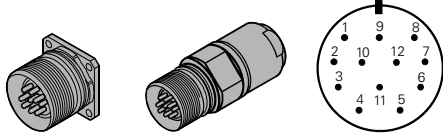


1	2	3	4	5	6	7	8	9	10	11	12	/	Gehäuse Housing
Ua2	10 - 30 V Sensor	Ua0	Ua0	Ua1	Ua1	UaS	Ua2	frei free	0V (U _N)	0V Sensor	10 - 30 V (Up)	frei free	Außens- schirm External shield
rosa pink	blau blue	rot red	schwarz black	braun brown	grün green	violett violet	grau gray	/	weiß/ grün white/ green	weiß white	braun/ grün brown/ green	gelb yellow	


The sensor line is internally connected to the power supply line. External shield lies on housing.
ROD 1030/ERN 1030 without inverted signals Ua1, Ua2 and Ua0

TTL **

12-pol. Flanschdose
(Typ Binder)
12-pin flange socket
(model: Binder)

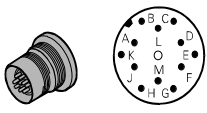

12-pol. Stecker
(gerade oder abgewinkelt)
(Typ Binder)
12-pin connector
(straight or offset)
(model: Binder)

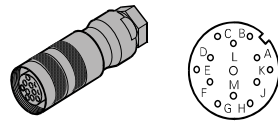
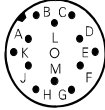
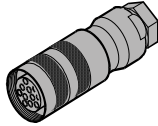



A	B	C	D	E	F	G	H	J	K	L	M	/	Gehäuse Housing
Ua2	5V * Sensor	Ua0	Ua0	Ua1	Ua1	UaS	Ua2	frei free	0V (U _N)	0V Sensor	5V (Up)	frei free	Außens- schirm External shield
rosa pink	blau blue	rot red	schwarz black	braun brown	grün green	violett violet	grau gray	/	weiß/ grün white/ green	weiß white	braun/ grün brown/ green	gelb yellow	

The sensor line is internally connected to the power supply line. External shield on lies on housing.


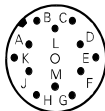
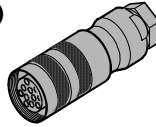

* Power supply of ERN 460: 10 – 30 V. ** Adapter cable on request.

HTL

12-pol. Flanschdose (Typ Binder) <i>12-pin flange socket</i> (model: Binder)							 		12-pol. Stecker (gerade oder abgewinkelt) (Typ Binder) <i>12-pin connector</i> (straight or offset) (model: Binder)					 	
A	B	C	D	E	F	G	H	J	K	L	M	/	Gehäuse Housing		
— Ua2	10-30 V Sensor	Ua0	— Ua0	Ua1	— Ua1	— UaS	Ua2	frei free	0V (U _N)	0V Sensor	10-30 V (Up)	frei free	Außen- schirm External shield		
rosa pink	blau blue	rot red	schwarz black	braun brown	grün green	violett violet	grau grey	/	weiß/ grün white/ green	weiß white	braun/ grün brown/ green	gelb yellow			



The sensor line is internally connected to the power supply line. External shield lies on housing.

1 Vpp

12-pol. Flanschdose (Typ Binder) <i>12-pin flange socket</i> (model: Binder)							 		12-pol. Stecker (gerade oder abgewinkelt) (Typ Binder) <i>12-pin connector</i> (straight or offset) (model: Binder)					 	
A	B	C	D	E	F	G	H	J	K	L	M	/	Gehäuse Housing		
B	5V Sensor	R	R	A	A	frei free	B	frei free	0V (U _N)	0V Sensor	5V (Up)	frei free	Außen- schirm External shield		
—		+	—	+	—		+								
rosa pink	blau blue	rot red	schwarz black	braun brown	grün green	violett violet	grau grey	/	weiß/ grün white/ green	weiß white	braun/ grün brown/ green	gelb yellow			

The sensor line is internally connected to the power supply line. External shield lies on housing.


EXE output signals TTL

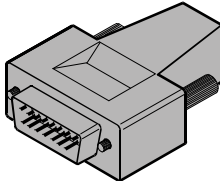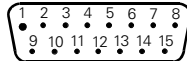EXE 604C 15-pol. Sub-D-Stecker (Farbangaben gelten für HEIDENHAIN-Kabel)													
EXE 604C 15-pin D-Sub connector (colors apply for HEIDENHAIN cable)													
1	2	3	4	5	6	7	8	9	10	11	12		
Ua1	— Ua1	Ua2	— Ua2	5V Sensor	Ua0	— Ua0	— UaS	5V Up	0V Sensor	frei free	0V U _N		
braun brown	grün green	grau grey	rosa pink	blau blue	rot red	schwarz black	violett violet	braun/ grün brown/ green	weiß white	/	weiß/ grün white/ green		

The sensor line is internally connected to the power supply line. External shield lies on housing.

EXE 605S: 12-pol. Kupplung (Souriau)
EXE 604C: 12-pol. Stecker (Souriau)
 (Farbangaben gelten für HEIDENHAIN-Kabel)



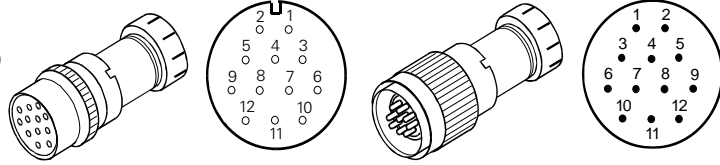


EXE 605S: 12-pin coupling (Souriau)
EXE 604C: 12-pin connector (Souriau)
 (colors apply for HEIDENHAIN cables)






1	2	3	4	5	6	7	8	9	10	11	12
Ua1	$\overline{\text{Ua1}}$	Ua2	$\overline{\text{Ua2}}$	5V Sensor	Ua0	$\overline{\text{Ua0}}$	$\overline{\text{UaS}}$	5V Up	0V Sensor	Schirm Shield	0V U _N
braun <i>brown</i>	grün <i>green</i>	grau <i>grey</i>	rosa <i>pink</i>	blau <i>blue</i>	rot <i>red</i>	schwarz <i>black</i>	violett <i>violet</i>	braun/ grün <i>brown/ green</i>	weiß <i>white</i>	/	weiß/ grün <i>white/ green</i>

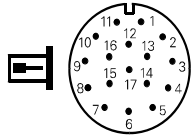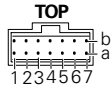



9.7 Motor encoders and absolute encoders

1 Vpp encoder with Zn/Z1 track

17-pol. HEIDENHAIN-Flanschdose 17-pin HEIDENHAIN flange socket				Platinenstecker am Messgerät: PCB connector on encoder:						
	15	16	12	13	3	2	7	10	1	4
	6b	2a	3b	5a	4b	4a	1b	5b	7a	3a
	A		B		R		5 V UP	0 V UN	5 V Sensor	0 V Sensor
	+	-	+	-	+	-				
	grün / schwarz green/ black	gelb / schwarz yellow/ black	blau / schwarz blue/ black	rot / schwarz red/ black	rot red	schwarz black	braun / grün brown/ green	weiß / grün white/ green	blau blue	weiß white

	11	14	17	9	8	5	6
	-	7b	1a	2b	6a	-	-
	Innen- Schirm Internal shield	C		D		Temperatur Temperature	
		+	-	+	-	+	-
	-	grau grey	rosa pink	gelb yellow	violett violet	grün green	braun brown


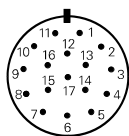



1 Vpp encoder (ERM/ERA) with 1 Vpp interface




17-pol. Flanschdose 17-pin flange socket										
	7	15	10	16	1	2	11	12	3	13
	0 V UN	0 V Sensor	+ V UP	+ V Sensor	A+	A-	B+	B-	R+	R-
	weiß / grün white/ green	weiß white	braun / grün brown/ green	blau blue	grün / schwarz green/ black	gelb / schwarz yellow/ black	blau / schwarz blue/ black	rot / schwarz red/ black	rot red	schwarz black

	8	9	4	5	6	14	17
	Temp.+	Temp.-	frei free	frei free	frei free	frei free	frei free
	braun brown	weiß white	braun brown	grün green	grau grey	rosa pink	gelb yellow

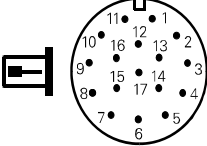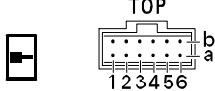




The sensor line is internally connected to the power supply line. External shield lies on housing.

1 Vpp encoder with EnDat or SSI interface

17-pol. HEIDENHAIN-Flanschdose 17-pin HEIDENHAIN flange socket				Platinenstecker am Messgerät: PCB connector on encoder:						
	15	16	12	13	14	17	8	9	7	10
	2a	5b	4a	3b	6b	1a	2b	5a	1b	4b
	A		B		DATA	$\overline{\text{DATA}}$	CLOCK	$\overline{\text{CLOCK}}$	5 V UP	0 V UN
	+	-	+	-						
	grün / schwarz <i>green/ black</i>	gelb / schwarz <i>yellow/ black</i>	blau / schwarz <i>blue/ black</i>	rot / schwarz <i>red/ black</i>	grau <i>grey</i>	rosa <i>pink</i>	violett <i>violet</i>	gelb <i>yellow</i>	braun / grün <i>brown/ green</i>	weiß / grün <i>white/ green</i>

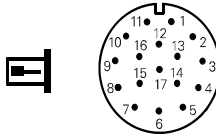

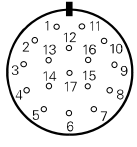
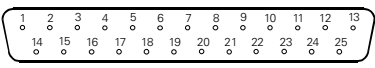
	11	1	4	3	2	5	6
	-	6a	3a	-	-	-	-
	Innen- Schirm <i>Internal shield</i>	5 V Sensor	0 V Sensor	frei <i>free</i>	frei <i>free</i>	frei <i>free</i>	frei <i>free</i>
	-	blau <i>blue</i>	weiß <i>white</i>	rot <i>red</i>	schwarz <i>black</i>	grün <i>green</i>	braun <i>brown</i>

1 Vpp encoder with programmable SSI interface (SSI 09 or SSI 10)

17-pol. HEIDENHAIN-Flanschdose 17-pin HEIDENHAIN flange socket										
	15	16	12	13	14	17	8	9	7	10
	A		B		DATA	$\overline{\text{DATA}}$	CLOCK	$\overline{\text{CLOCK}}$	10-30V Up	0 V UN
	+	-	+	-						
	grün / schwarz <i>green/ black</i>	gelb / schwarz <i>yellow/ black</i>	blau / schwarz <i>blue/ black</i>	rot / schwarz <i>red/ black</i>	grau <i>grey</i>	rosa <i>pink</i>	violett <i>violet</i>	gelb <i>yellow</i>	braun / grün <i>brown/ green</i>	weiß / grün <i>white/ green</i>
	11	1	4	3	2	5	6			
	Innen- Schirm <i>Internal shield</i>	RxD	TxD	$\overline{\text{UaS}}$ ¹⁾	Dreh- richtung <i>Rotational direction</i>	Preset1	Preset2			
	-	blau <i>blue</i>	weiß <i>white</i>	rot <i>red</i>	schwarz <i>black</i>	grün <i>green</i>	braun <i>brown</i>			

1) Encoder error signal; displayed by the PWM 9 as $\overline{\text{UaS2}}$ (see also 1 Vpp encoders with prog. SSI interface)

9.8 Adapter cable 17-pin/25-pin; PWM to subsequent electronics (Mot.Enc.1 Vpp)




Adapterkabel ID 289440-xx Adapter cable ID 289440-xx			
Mot.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17-pol. Buchse <i>17-pin female connector</i>			Sub-D-Stecker 25-pol. Buchse <i>25-pin D-sub connector (female)</i>
PIN 1	A+	grün/schwarz <i>green/black</i>	PIN 3
PIN 2	A-	gelb/schwarz <i>yellow/black</i>	PIN 4
PIN 3	R+	rot / red	PIN 17
PIN 4	D-	rosa / pink	PIN 22
PIN 5	C+	grün / green	PIN 19
PIN 6	C-	braun / brown	PIN 20
PIN 7	0V (U _N)	weiß/grün <i>white/green</i>	PIN 2
PIN 8	Temp+	gelb / yellow	PIN 13
PIN 9	Temp-	violett / violet	PIN 25
PIN 10	+V (U _P)	braun/grün <i>brown/green</i>	PIN 1
PIN 11	B+	blau/schwarz <i>blue/black</i>	PIN 6
PIN 12	B-	rot/schwarz <i>red/black</i>	PIN 7
PIN 13	R -	schwarz / black	PIN 18
PIN 14	D+	grau / gray	PIN 21
PIN 15	0 V Sensor	weiß / white	PIN 16
PIN 16	+5 V Sensor	blau / blue	PIN 14
PIN 17	Innenschirm (0 V) <i>Internal shield (0 V)</i>	Innenschirm <i>Internal shield</i>	PIN 8
-	frei / free	-	PIN 5
-	frei / free	-	PIN 9
-	frei / free	-	PIN 10
-	frei / free	-	PIN 11
-	frei / free	-	PIN 12
-	frei / free	-	PIN 15
-	frei / free	-	PIN 23
-	frei / free	-	PIN 24
Steckergehäuse <i>Connector housing</i>	Außenschirm <i>External shield</i>	Außenschirm <i>External shield</i>	Steckergehäuse <i>Connector housing</i>






Note

This adapter cable can only be used with the adapter Zn/Z1 ID 349312-01/02 at the 1 Vpp absolute interface board ID 312186-xx.


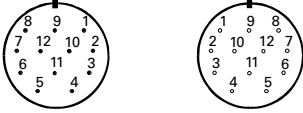
9.9 Round adapter, 9-pin/15-pin D-sub connector (Pos.Enc./Pos.Enc) (11 µApp)

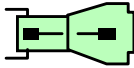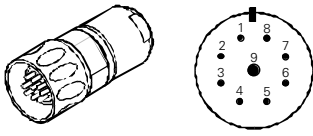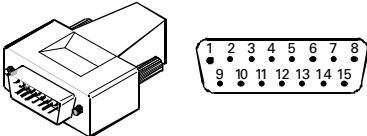Adapter ID 294894-02 Adapter ID 294894-02		
Pos.Enc. Pos.Enc. 		
	Signal	
Stecker 9-pol. 9-pin connector		Sub-D-Stecker 15-pol. 15-pin D-sub connector
PIN 1	$I_1 +$	PIN 3
PIN 2	$I_1 -$	PIN 4
PIN 3	5 V U_P	PIN 1
PIN 4	0 V U_N	PIN 2
PIN 5	$I_2 +$	PIN 6
PIN 6	$I_2 -$	PIN 7
PIN 7	$I_0 +$	PIN 10
PIN 8	$I_0 -$	PIN 12
PIN 9	Innenschirm / Internal shield	PIN 5
Gehäuse Housing	Außenschirm External shield	Gehäuse Housing
		PIN 8, 9, 11, 13, 14, 15 frei / free nicht belegt / not used


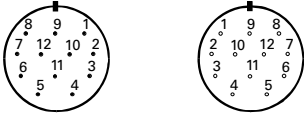
9.10 Connecting cable 1 Vpp/TTL/HTL, 12-pin/12-pin for PWM OUT

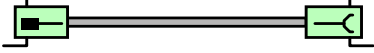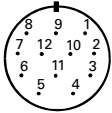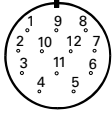Verbindungskabel ID 298399-xx Connecting cable ID 298399-xx					
					
	Signal 1 Vss Signal 1 Vpp	Signal TTL	Signal HTL	Farbe Color	
Stecker 12-pol. Stift 12-pin connector (male)					Stecker 12-pol. Buchse 12-pin female connector
PIN 1	B-	-Ua2	-Ua2	rosa / pink	PIN 1
PIN 2	+V Sensor	+ V Sensor	Sensor U _P	blau / blue	PIN 2
PIN 3	R+	+Ua0	+Ua0	rot / red	PIN 3
PIN 4	R-	-Ua0	-Ua0	schwarz / black	PIN 4
PIN 5	A+	+Ua1	+Ua1	braun / brown	PIN 5
PIN 6	A-	-Ua1	-Ua1	grün / green	PIN 6
PIN 7	- UaS	- UaS	- UaS	violett / violet	PIN 7
PIN 8	B+	+Ua2	+Ua2	grau / grey	PIN 8
PIN 9	frei / free	PWT- Testimpuls PWT test pulse	frei / free	gelb / yellow	PIN 9
PIN 10	0 V U _N	0 V U _N	0 V	weiß/grün white/green	PIN 10
PIN 11	0 V Sensor	0 V Sensor	0 V Sensor	weiß / white	PIN 11
PIN 12	+V U _P	+ V U _P	U _P	braun/grün brown/green	PIN 12
Gehäuse Housing	Außenschirm / External shield	Schirm Shield	Schirm Shield	Schirm / Shield	Gehäuse Housing




9.11 Connecting cable 1 Vpp 12-pin/12-pin for PWM IN

Verbindungskabel ID 298400-xx Connecting cable ID 298400-xx		
		
	Farbe Color	Signal 1 Vss Signal 1 Vpp
Stecker 12-pol. Stift/ Kupplung 12-pol. Buchse <i>12-pin male connector/ 12-pin female coupling</i>		
PIN 1	<i>rosa / pink</i>	B-
PIN 2	<i>blau / blue</i>	+ V Sensor
PIN 3	<i>rot / red</i>	R+
PIN 4	<i>schwarz / black</i>	R-
PIN 5	<i>braun / brown</i>	A+
PIN 6	<i>grün / green</i>	A-
PIN 7	<i>gelb / yellow</i>	frei / free
PIN 8	<i>grau / grey</i>	B+
PIN 9	<i>violett / violet</i>	frei / free
PIN 10	<i>weiß/grün white/green</i>	0 V U _N
PIN 11	<i>weiß / white</i>	0 V Sensor
PIN 12	<i>braun/grün brown/green</i>	+ V U _P
Gehäuse <i>Housing</i>		Schirm <i>Shield</i>


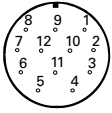
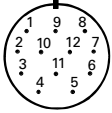
9.12 Connecting cable TTL/HTL 12-pin/12-pin for PWM IN

Verbindungskabel ID 298400-xx Connecting cable ID 298400-xx		
		
	Farbe Color	Signal TTL/HTL
Stecker 12-pol. Stift/ Kupplung 12-pol. Buchse <i>12-pin male connector/ 12-pin female coupling</i>		
PIN 1	rosa / pink	-Ua2
PIN 2	blau / blue	Sensor U _p
PIN 3	rot / red	+Ua0
PIN 4	schwarz / black	-Ua0
PIN 5	braun / brown	+Ua1
PIN 6	grün / green	-Ua1
PIN 7	violett / violet	- UaS
PIN 8	grau / grey	+Ua2
PIN 9	gelb / yellow	frei / free
PIN 10	weiß/grün white/green	0 V
PIN 11	weiß / white	Sensor 0 V
PIN 12	braun/grün brown/green	U _p
Gehäuse Housing		Schirm Shield


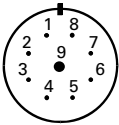

9.13 Connecting cable 1 Vpp 12-pin/12-pin for PWM OUT

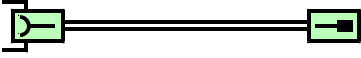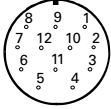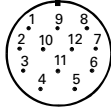Verbindungskabel ID 298401-xx Connecting cable ID 298401-xx		
		
 	Farbe Color	Signal 1 Vss Signal 1 Vpp
Stecker 12-pol. Buchse/ Kupplung 12-pol. Stift <i>12-pin female connector/ 12-pin male coupling</i>		
PIN 1	rosa / pink	B-
PIN 2	blau / blue	+ V Sensor
PIN 3	rot / red	R+
PIN 4	schwarz / black	R-
PIN 5	braun / brown	A+
PIN 6	grün / green	A-
PIN 7	gelb / yellow	frei / free
PIN 8	grau / grey	B+
PIN 9	violett / violet	frei / free
PIN 10	weiß/grün white/green	0 V U _N
PIN 11	weiß / white	0 V Sensor
PIN 12	braun/grün brown/green	+ V U _P
Gehäuse Housing		Schirm Shield


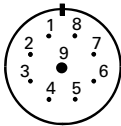
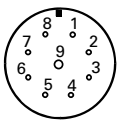
9.14 Connecting cable TTL/HTL 12-pin/12-pin for PWM OUT

Verbindungskabel ID 298401-xx Connecting cable ID 298401-xx		
		
 	Farbe Color	Signal TTL/HTL
Stecker 12-pol. Buchse/ Kupplung 12-pol. Stift <i>12-pin female connector/ 12-pin male coupling</i>		
PIN 1	rosa / <i>pink</i>	-Ua2
PIN 2	blau / <i>blue</i>	Sensor U _P
PIN 3	rot / <i>red</i>	+Ua0
PIN 4	schwarz / <i>black</i>	-Ua0
PIN 5	braun / <i>brown</i>	+Ua1
PIN 6	grün / <i>green</i>	-Ua1
PIN 7	violett / <i>violet</i>	- UaS
PIN 8	grau / <i>grey</i>	+Ua2
PIN 9	gelb / <i>yellow</i>	frei / <i>free</i>
PIN 10	weiß/grün <i>white/green</i>	0 V
PIN 11	weiß / <i>white</i>	Sensor 0 V
PIN 12	braun/grün <i>brown/green</i>	U _P
Gehäuse <i>Housing</i>		Schirm <i>Shield</i>




9.15 Connecting cable 11 µApp 9-pin/9-pin for PWM OUT

Verbindungskabel ID 309773-xx Connecting cable ID 309773-xx			
			
	Signal 11 µAss Signal 11 µApp	Farbe Color	
Stecker 9-pol. Stift <i>9-pin connector (male)</i>			Stecker 9-pol. Buchse <i>9-pin female connector</i>
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 4
PIN 3	+V U_P	braun / <i>brown</i>	PIN 3
PIN 9	Innenschirm (0 V) <i>Internal shield (0 V)</i>	weiß/braun <i>white/brown</i>	PIN 9
PIN 1	$0^\circ+$	grün / <i>green</i>	PIN 1
PIN 2	$0^\circ-$	gelb / <i>yellow</i>	PIN 2
PIN 5	$90^\circ+$	blau / <i>blue</i>	PIN 5
PIN 6	$90^\circ-$	rot / <i>red</i>	PIN 6
PIN 7	RI+	grau / <i>grey</i>	PIN 7
PIN 8	RI-	rosa / <i>pink</i>	PIN 8
Gehäuse / <i>Housing</i>	Außenschirm / <i>External shield</i>	Schirm / <i>Shield</i>	Gehäuse / <i>Housing</i>

9.16 Connecting cable 11 μ App 9-pin/9-pin for PWM IN

Verbindungskabel ID 309774-xx Connecting cable ID 309774-xx			
			
	Signal 11 μAss Signal 11 μApp	Farbe Color	
Stecker 9-pol. Stift <i>9-pin connector (male)</i>			Stecker 9-pol. Buchse <i>9-pin female connector</i>
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 4
PIN 3	+V U_P	braun / <i>brown</i>	PIN 3
PIN 9	Innenschirm (0 V) <i>Internal shield (0 V)</i>	weiß/braun <i>white/brown</i>	PIN 9
PIN 1	$0^\circ+$	grün / <i>green</i>	PIN 1
PIN 2	$0^\circ-$	gelb / <i>yellow</i>	PIN 2
PIN 5	$90^\circ+$	blau / <i>blue</i>	PIN 5
PIN 6	$90^\circ-$	rot / <i>red</i>	PIN 6
PIN 7	RI+	grau / <i>grey</i>	PIN 7
PIN 8	RI-	rosa / <i>pink</i>	PIN 8
Gehäuse / <i>Housing</i>	Außenschirm / <i>External shield</i>	Schirm / <i>Shield</i>	Gehäuse / <i>Housing</i>

9.17 Adapter cable 12-pin/15-pin; PWM to TTL D-sub subsequent electronics (Pos.Enc.)

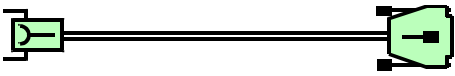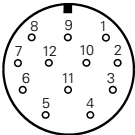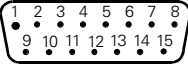Adapterkabel ID 310196-xx Adapter cable ID 310196-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 12-pol. 12-pin connector			Sub-D-Stecker 15-pol. 15-pin D-sub connector
PIN 1	-Ua2	rosa / pink	PIN 11
PIN 2	Sensor U _p	blau / blue	PIN 12
PIN 3	+Ua0	rot / red	PIN 14
PIN 4	-Ua0	schwarz / black	PIN 7
PIN 5	+Ua1	braun / brown	PIN 1
PIN 6	-Ua1	grün / green	PIN 9
PIN 7	-UaS ¹⁾	violett / violet	PIN 13
PIN 8	+Ua2	grau / grey	PIN 3
PIN 9	frei / free ²⁾	-	PIN 15
PIN 10	0 V	weiß/grün white/green	PIN 2
PIN 11	Sensor 0 V	weiß / white	PIN 10
PIN 12	U _p	braun/grün brown/green	PIN 4
-	frei / free	-	PIN 5
-	frei / free	-	PIN 6
-	frei / free	-	PIN 8
	abgeschnitten / cut off	gelb / yellow	
Gehäuse / Housing	Schirm / Shield		Gehäuse / Housing

¹⁾ LS 323: free





²⁾ "Exposed" encoders: TTL/11 µApp switchover for PWT




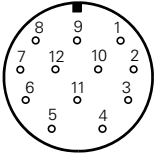
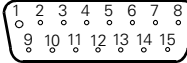
Note

Check the wiring!


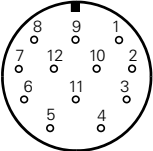
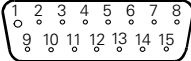
9.18 Adapter cable 15-pin D-sub (Pos.Enc.); 9-pin (Pos.Enc.) for PWM OUT (1 Vpp)

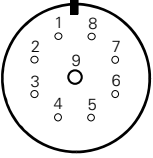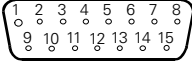Adapterkabel ID 310198-xx Adapter cable ID 310198-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 9-pol. Buchse <i>9-pin female connector</i>			Sub-D-Stecker 15-pol. Buchse <i>15-pin D-sub connector (female)</i>
PIN 1	$I_1 +$	grün / <i>green</i>	PIN 3
PIN 2	$I_1 -$	gelb / <i>yellow</i>	PIN 4
PIN 3	5 V U_P	braun / <i>brown</i>	PIN 1
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 2
PIN 5	$I_2 +$	blau / <i>blue</i>	PIN 6
PIN 6	$I_2 -$	rot / <i>red</i>	PIN 7
PIN 7	$I_0 +$	grau / <i>grey</i>	PIN 10
PIN 8	$I_0 -$	rosa / <i>pink</i>	PIN 12
PIN 9	Innenschirm / <i>Internal shield</i>	weiß/braun <i>white/brown</i>	PIN 5
Gehäuse <i>Housing</i>	Außenschirm <i>External shield</i>		Gehäuse <i>Housing</i>
			PIN 8, 9, 11, 13, 14, 15 frei / <i>free</i> nicht belegt / <i>not used</i>


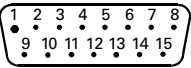
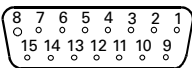
9.19 Adapter cable 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT (1 Vpp)

Adapterkabel ID 310199-xx Adapter cable ID 310199-xx			
			
	Signal 1 Vss Signal 1 Vpp	Farbe Color	
Stecker 12-pol. Buchse 12-pin female connector			Sub-D-Stecker 15-pol. Buchse 15-pin D-sub connector (female)
PIN 1	B-	rosa / pink	PIN 7
PIN 2	+V Sensor	blau / blue	PIN 9
PIN 3	R+	rot / red	PIN 10
PIN 4	R-	schwarz / black	PIN 12
PIN 5	A+	braun / brown	PIN 3
PIN 6	A-	grün / green	PIN 4
PIN 10	0 V U _N	weiß/grün white/green	PIN 2
PIN 11	0 V Sensor	weiß / white	PIN 11
PIN 12	+V U _P	braun/grün brown/green	PIN 1
PIN 8	B+	grau / grey	PIN 6
PIN 7	frei / free	gelb / yellow	PIN 5
PIN 9	frei / free	violett / violet	PIN 8
Gehäuse Housing	Außenschirm / External shield	Schirm / Shield	Gehäuse Housing
			PIN 13, 14, 15 frei / free nicht belegt / not used




9.20 Adapter cable 15-pin D-sub (Pos.Enc.); 12-pin (Pos.Enc.) for PWM OUT (TTL)

Adapterkabel ID 310199-xx Adapter cable ID 310199-xx			
			
	Signal TTL	Farbe Color	
Stecker 12-pol. Buchse 12-pin female connector			Sub-D-Stecker 15-pol. Buchse 15-pin D-sub connector (female)
PIN 1	-Ua2	rosa / pink	PIN 7
PIN 2	+V Sensor	blau / blue	PIN 9
PIN 3	+Ua0	rot / red	PIN 10
PIN 4	-Ua0	schwarz / black	PIN 12
PIN 5	+Ua1	braun / brown	PIN 3
PIN 6	-Ua1	grün / green	PIN 4
PIN 7	-UaS	violett / violet	PIN 14
PIN 10	0 V U _N	weiß/grün white/green	PIN 2
PIN 11	0 V Sensor	weiß / white	PIN 11
PIN 12	+V U _P	braun/grün brown/green	PIN 1
PIN 8	+Ua2	grau / grey	PIN 6
PIN 9	frei / free	gelb / yellow	PIN 5
Gehäuse Housing	Außenschirm / External shield	Schirm / Shield	Gehäuse Housing
			PIN 8, 13, 15 frei / free nicht belegt / not used

**9.21 Adapter connector 11 μ App 15-pin, assignment converter internal shield
PIN 5 to PIN 13**

Adapterstecker ID 317505-05 Adapter connector ID 317505-05		
		
	Signal	
Sub-D-Stecker 15-pol. Stift <i>15-pin D-sub connector (male)</i>		Sub-D-Stecker 15-pol. Buchse <i>15-pin D-sub connector (female)</i>
PIN 1	5 V U_P	PIN 1
PIN 2	0 V U_N	PIN 2
PIN 3	$I_1 +$	PIN 3
PIN 4	$I_1 -$	PIN 4
PIN 5	Innenschirm <i>Internal shield</i>	PIN 13
PIN 6	$I_2 +$	PIN 6
PIN 7	$I_2 -$	PIN 7
PIN 10	$I_0 +$	PIN 10
PIN 12	$I_0 -$	PIN 12
PIN 8, 9, 11, 13, 14, 15	frei <i>free</i>	PIN 5, 8, 9, 11, 14, 15


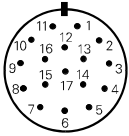
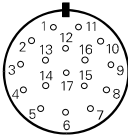
9.22 Adapter cable 12-pin/12-pin; PWM to TTL interface electronics (APE) (Pos.Enc.)

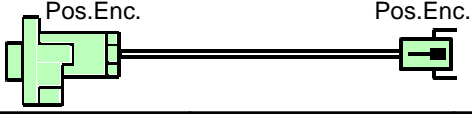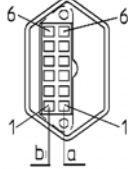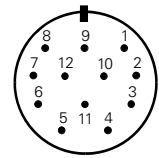Adapterkabel ID 323466-xx Adapter cable ID 323466-xx			
			
	Signal	Farbe Color	
APE-12-pol. 12-pin APE			Stecker 12-pol. 12-pin connector
PIN 5a	-Ua2	rosa / pink	PIN 1
PIN 2b	Sensor U _p	blau / blue	PIN 2
PIN 4b	+Ua0	rot / red	PIN 3
PIN 4a	-Ua0	schwarz / black	PIN 4
PIN 6b	+Ua1	braun / brown	PIN 5
PIN 6a	-Ua1	grün / green	PIN 6
PIN 3a	-UaS ¹⁾	violett / violet	PIN 7
PIN 5b	+Ua2	grau / grey	PIN 8
PIN 3b	- ²⁾	gelb / yellow	PIN 9
PIN 1a	0 V	weiß/grün white/green	PIN 10
PIN 1b	Sensor 0 V	weiß / white	PIN 11
PIN 2a	U _p	braun/grün brown/green	PIN 12
Gehäuse / Housing	frei / free		Gehäuse / Housing


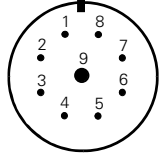
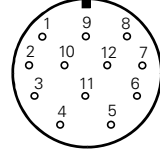
¹⁾ Not used by all JH encoders

²⁾ "Exposed" linear encoders: TTL/11 µApp switchover (adjustment/ testing)

9.23 Adapter cable 17-pin/17-pin; PWM to motor (Pos.Enc.EnDat)




Adapterkabel ID 323897-xx Adapter cable ID 323897-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Kupplung 17-pol. Stift <i>Coupling 17-pin, male</i>			Stecker 17-pol. Buchse <i>Connector 17-pin, female</i>
PIN 1	U_P – Sensor oder / or RxD	blau / <i>blue</i>	PIN 1
PIN 2	R- Drehrichtung <i>R- Rotational direction</i>	schwarz / <i>black</i>	PIN 2
PIN 3	R+ oder / or U_{aS}	rot / <i>red</i>	PIN 3
PIN 4	0V – Sensor oder / or TxD	weiß / <i>white</i>	PIN 4
PIN 5	Temp.+ Preset1	grün / <i>green</i>	PIN 5
PIN 6	Temp.-Preset2	braun / <i>brown</i>	PIN 6
PIN 7	U_P	braun/grün <i>brown/green</i>	PIN 7
PIN 8	CLOCK+	violett / <i>violet</i>	PIN 8
PIN 9	CLOCK-	gelb / <i>yellow</i>	PIN 9
PIN 10	0V	weiß/grün <i>white/green</i>	PIN 10
PIN 11	Innenschirm <i>Internal shield</i>	-	PIN 11
PIN 12	B+	blau/schwarz <i>blue/black</i>	PIN 12
PIN 13	B-	rot/schwarz <i>red/black</i>	PIN 13
PIN 14	DATA+	grau / <i>grey</i>	PIN 14
PIN 15	A+	grün/schwarz <i>green/black</i>	PIN 15
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	PIN 16
PIN 17	DATA-	rosa / <i>pink</i>	PIN 17
Steckergehäuse <i>Connector housing</i>	Außenschirm <i>External shield</i>	Außenschirm <i>External shield</i>	Steckergehäuse <i>Connector housing</i>

9.24 Adapter TTL M23 12-pin (Pos.Enc.) --> 11 µApp M23 9-pin (Pos.Enc.)




Umschalt-Adapter ID 324282-xx Adapter for 1 Vpp/11 µApp change-over ID 324282-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 9-pol. <i>9-pin connector</i>			Kupplung 12-pol. Buchse <i>12-pin coupling connector (female)</i>
PIN 1	$I_1 +$	grün / <i>green</i>	PIN 5
PIN 2	$I_1 -$	gelb / <i>yellow</i>	PIN 6
PIN 3	5 V U_P	braun / <i>brown</i>	PIN 9 ¹⁾ PIN 12
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 10
PIN 5	$I_2 +$	blau / <i>blue</i>	PIN 8
PIN 6	$I_2 -$	rot / <i>red</i>	PIN 1
PIN 7	$I_0 +$	grau / <i>grey</i>	PIN 3
PIN 8	$I_0 -$	rosa / <i>pink</i>	PIN 4
PIN 9	Innenschirm <i>Internal shield</i>	Innenschirm <i>Internal shield</i>	
Gehäuse <i>Housing</i>		Außenschirm <i>External shield</i>	Gehäuse <i>Housing</i>
			PIN 2, 7, 11 frei / <i>free</i> nicht belegt / <i>not used</i>

¹⁾ PIN 9 and PIN 12 bridged; 5 V switchover voltage at PIN 9 (TTL --> 11 µApp)

9.25 Adapter cable to IK 115 / IK 215 interface card

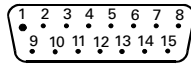
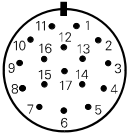
Adapterkabel ID 324544-xx Adapter cable ID 324544-xx			
			
	Signal 1 Vss/EnDat Signal 1 Vpp/EnDat	Farbe Color	
Flanschdose 17-pol. Überwurf Buchse <i>Flange socket 17-pin knurled coupling ring</i>			Sub-D-Stecker 15-pol. Stift <i>15-pin D-sub connector (male)</i>
PIN 10	0 V U_N	weiß/grün <i>white/green</i>	PIN 2
PIN 4	0 V Sensor	weiß / <i>white</i>	PIN 10
PIN 7	+V U_P	braun/grün <i>brown/green</i>	PIN 4
PIN 1	+V Sensor	blau / <i>blue</i>	PIN 12
PIN 11	Innenschirm (0 V) <i>Internal shield (0 V)</i>	Innenschirm <i>Internal shield</i>	PIN 6
PIN 15	A+	grün/schwarz <i>green/black</i>	PIN 1
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	PIN 9
PIN 12	B+	blau/schwarz <i>blue/black</i>	PIN 3
PIN 13	B-	rot/schwarz <i>red/black</i>	PIN 11
PIN 3	R+	rot / <i>red</i>	PIN 14
PIN 2	R-	schwarz / <i>black</i>	PIN 7
PIN 14	C+ DATA+	grau / <i>grey</i>	PIN 5
PIN 17	C- DATA-	rosa / <i>pink</i>	PIN 13
PIN 9	D+ CLOCK-	gelb / <i>yellow</i>	PIN 15
PIN 8	D- CLOCK+	violett / <i>violet</i>	PIN 8
PIN 5, 6 frei / <i>free</i> nicht belegt / <i>not used</i>			
Gehäuse / <i>Housing</i>	Außenschirm / <i>External shield</i>	Schirm / <i>Shield</i>	Gehäuse / <i>Housing</i>

9.26 Adapter, round 12-pin/15-pin D-sub connector(Pos.Enc./Pos.Enc) (1 Vpp/TTL)

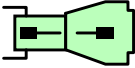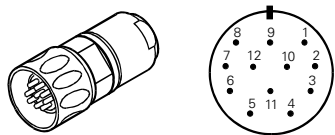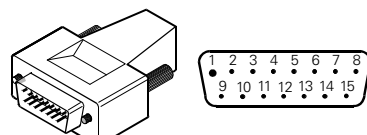Adapter ID 324555-01 Adapter ID 324555-01			
Pos.Enc. Pos.Enc. 			
	Signal 1 Vss Signal 1 Vpp	Signal TTL	
Stecker 12-pol. 12-pin connector			Sub-D-Stecker 15-pol. 15-pin D-sub connector
PIN 1	B-	-Ua2	PIN 7
PIN 2	5 V Sensor	5 V Sensor	PIN 9
PIN 3	R+	+Ua0	PIN 10
PIN 4	R-	-Ua0	PIN 12
PIN 5	A+	+Ua1	PIN 3
PIN 6	A-	-Ua1	PIN 4
PIN 7	- UaS	- UaS	PIN 14
PIN 8	B+	+Ua2	PIN 6
PIN 9	frei / free	frei / free	-
PIN 10	0 V U _N	0 V U _N	PIN 2
PIN 11	0 V Sensor	0 V Sensor	PIN 11
PIN 12	5 V U _P	5 V U _P	PIN 1
Gehäuse Housing	Schirm Shield	Schirm Shield	Gehäuse Housing
			PIN 5, 8, 13, 15 frei / free nicht belegt / not used

9.27 Adapter with 14-pin PCB connector

Application: Incremental encoders with incremental track Zn (A, B) and commutating track Z1 (C, D)

Adapterkabel ID 330980-xx / Zn/Z1 Adapter cable ID 330980-xx / Zn/Z1			
			
	Signal	Farbe Color	
Kupplung 17-pol. Stift Coupling 17-pin, male			Platinenstecker 14-pin PCB connector 14-pin
PIN 1	U _P – Sensor	blau / blue	7a
PIN 2	R-	schwarz / black	4a
PIN 3	R+	rot / red	4b
PIN 4	0V – Sensor	weiß / white	3a
PIN 5	Temp.+	grün / green	-
PIN 6	Temp. -	braun / brown	-
PIN 7	U _P	braun/grün brown/green	1b
PIN 8	D-	violett / violet	6a
PIN 9	D+	gelb / yellow	2b
PIN 10	0V	weiß/grün white/green	5b
PIN 11	Innenschirm Internal shield	-	-
PIN 12	B+	blau/schwarz blue/black	3b
PIN 13	B -	rot/schwarz red/black	5a
PIN 14	C+	grau / grey	7b
PIN 15	A+	grün/schwarz green/black	6b
PIN 16	A-	gelb/schwarz yellow/black	2a
PIN 17	C-	rosa / pink	1a






Attention

This cable is not suitable for feed-through operation at the machine, since there are no lines for temperature monitoring!


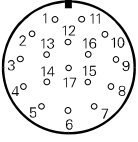
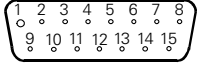
Observe the shielding!

9.28 Adapter cable TTL Sub-D 15-pin. (Pos.Enc.) --> 11 µApp M23, 9-pin (Pos.Enc.)

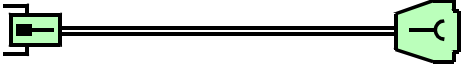
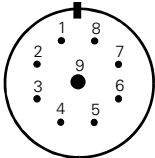
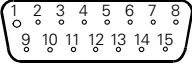
Umschalt-Adapterkabel 1 Vss/11 µAss ID 331692-xx Adapter cable for 1 Vpp/11 µApp change-over ID 331692-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 9-pol. <i>9-pin connector</i>			Sub-D-Stecker 15-pol. Buchse <i>15-pin D-sub connector (female)</i>
PIN 1	$I_1 +$	grün / <i>green</i>	PIN 1
PIN 2	$I_1 -$	gelb / <i>yellow</i>	PIN 9
PIN 3	5 V U_P	braun / <i>brown</i>	PIN 4 PIN 15 ¹⁾
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 2
PIN 5	$I_2 +$	blau / <i>blue</i>	PIN 3
PIN 6	$I_2 -$	rot / <i>red</i>	PIN 11
PIN 7	$I_0 +$	grau / <i>grey</i>	PIN 14
PIN 8	$I_0 -$	rosa / <i>pink</i>	PIN 7
PIN 9	Innenschirm / <i>Internal shield</i>	weiß/braun <i>white/brown</i>	PIN 5
Gehäuse <i>Housing</i>	Außenschirm <i>External shield</i>		Gehäuse <i>Housing</i>
			PIN 6, 8, 10, 12, 13 frei / <i>free</i> nicht belegt / <i>not used</i>

¹⁾ PIN 4 and PIN 15 bridged; 5 V switchover voltage at PIN 15 (TTL --> 11 µApp)

9.29 Adapter cable 17-pin/15-pin; PWM to subsequent electronics (Pos.Enc.EnDat)

Adapterkabel ID 332115-xx Adapter cable ID 332115 -xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 17-pol. Buchse <i>17-pin female connector</i>			Sub-D-Stecker 15-pol. Buchse <i>15-pin D-sub connector, female</i>
PIN 1	Up Sensor	blau / <i>blue</i>	PIN 9
PIN 4	0V Sensor	weiß / <i>white</i>	PIN 11
PIN 7	Up	braun/grün <i>brown/green</i>	PIN 1
PIN 8	CLOCK+	violett / <i>violet</i>	PIN 14
PIN 9	CLOCK-	gelb / <i>yellow</i>	PIN 15
PIN 10	0V (U _N)	weiß/grün <i>white/green</i>	PIN 2
PIN 11	Innenschirm <i>Internal shield</i>	Innenschirm <i>Internal shield</i>	PIN 13
PIN 12	B+	blau/schwarz <i>blue/black</i>	PIN 6
PIN 13	B-	rot/schwarz <i>red/black</i>	PIN 7
PIN 14	DATA+	grau / <i>grey</i>	PIN 5
PIN 15	A+	grün/schwarz <i>green/black</i>	PIN 3
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	PIN 4
PIN 17	DATA-	rosa / <i>pink</i>	PIN 8
PIN 2	frei / <i>free</i>	-	10
PIN 3			12
PIN 5			
PIN 6			
Steckergehäuse <i>Connector housing</i>	Außenschirm <i>External shield</i>	Außenschirm <i>External shield</i>	Steckergehäuse <i>Connector housing</i>

9.30 Adapter cable 17-pin/25-pin; PWM to subsequent electronics (Mot.Enc.EnDat)

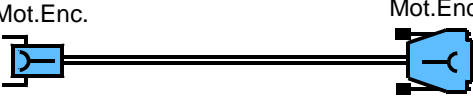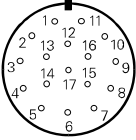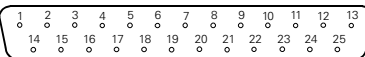
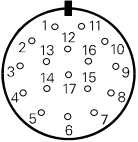
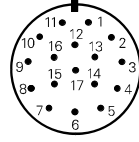
Adapterkabel ID 336376-xx Adapter cable ID 336376-xx			
Mot.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17- pol. Buchse 17-pin female connector			Sub-D-Stecker 25- pol. Buchse 25-pin D-sub connector (female)
PIN 1	A+	grün/schwarz green/black	PIN 3
PIN 2	A-	gelb/schwarz yellow/black	PIN 4
PIN 3	DATA+	rot / red	PIN 15
PIN 4	frei / free	-	-
PIN 5	CLOCK+	grün / green	PIN 10
PIN 6	frei / free	-	-
PIN 7	0V (U _N)	weiß/grün white/green	PIN 2
PIN 8	Temp+	gelb / yellow	PIN 13
PIN 9	Temp-	violett / violet	PIN 25
PIN 10	+V (U _P)	braun/grün brown/green	PIN 1
PIN 11	B+	blau/schwarz blue/black	PIN 6
PIN 12	B-	rot/schwarz red/black	PIN 7
PIN 13	DATA-	schwarz / black	PIN 23
PIN 14	CLOCK-	braun / brown	PIN 12
PIN 15	0 V Sensor	weiß / white	PIN 16
PIN 16	+ V Sensor	blau / blue	PIN 14
PIN 17	Innenschirm (0 V) Internal shield (0 V)	-	PIN 8
-	frei / free	-	PIN 5
-	frei / free	-	PIN 9
-	frei / free	-	PIN 11
-	frei / free	-	PIN 17
-	frei / free	-	PIN 18
-	frei / free	-	PIN 19
-	frei / free	-	PIN 20
-	frei / free	-	PIN 21
-	frei / free	-	PIN 22
-	frei / free	-	PIN 24
Steckergehäuse Connector housing	Außenschirm External shield	Außenschirm External shield	Steckergehäuse Connector housing



Note

This adapter cable can only be used with the EnDat/SSI adapter ID 349312-03/04 at the 1 Vpp absolute interface board ID 312186-xx.

9.31 Adapter cable 17-pin/17-pin; PWM to motor (Mot.Enc. 1 Vpp)




Adapterkabel ID 336847-xx Adapter cable ID 336847-xx			
Mot.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17- pol. Buchse 17- pin female connector			Kupplung 17- pol. Stift 17- pin male coupling
PIN 1	A+	grün/schwarz <i>green/black</i>	PIN 1
PIN 2	A-	gelb/schwarz <i>yellow/black</i>	PIN 2
PIN 3	R+	rot / red	PIN 3
PIN 4	D-	rosa / pink	PIN 4
PIN 5	C+	grün / green	PIN 5
PIN 6	C-	braun / brown	PIN 6
PIN 7	0V (U _N)	weiß/grün <i>white/green</i>	PIN 7
PIN 8	Temp +	gelb / yellow	PIN 8
PIN 9	Temp -	violett / violet	PIN 9
PIN 10	+V (U _P)	braun/grün <i>brown/green</i>	PIN 10
PIN 11	B+	blau/schwarz <i>blue/black</i>	PIN 11
PIN 12	B-	rot/schwarz <i>red/black</i>	PIN 12
PIN 13	R-	schwarz / black	PIN 13
PIN 14	D+	grau / grey	PIN 14
PIN 15	0 V Sensor	weiß / white	PIN 15
PIN 16	+V Sensor	blau / blue	PIN 16
PIN 17	Innenschirm (0 V) <i>Internal shield (0 V)</i>	-	PIN 17
Steckergehäuse <i>Connector housing</i>	Außenschirm <i>External shield</i>	Außenschirm <i>External shield</i>	Steckergehäuse <i>Connector housing</i>




Note

This adapter cable can only be used with the Zn/Z1 adapter ID 349312-01/02 at the 1 Vpp absolute interface board ID 312186-xx.


9.32 Adapter cable 17-pin/17-pin; PWM to motor (Mot.Enc.EnDat)

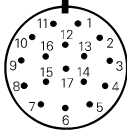Adapterkabel ID 340302-xx Adapter cable ID 340302-xx			
Mot.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17-pol. Buchse <i>17-pin female connector</i>			Kupplung 17-pol. Stift <i>17-pin male coupling</i>
PIN 1	A+	grün/schwarz <i>green/black</i>	PIN 1
PIN 2	A-	gelb/schwarz <i>yellow/black</i>	PIN 2
PIN 3	DATA+	rot / red	PIN 3
PIN 4	frei / free	-	PIN 4
PIN 5	CLOCK+	grün / green	PIN 5
PIN 6	frei / free	-	PIN 6
PIN 7	0V (U _N)	weiß/grün <i>white/green</i>	PIN 7
PIN 8	Temp+	gelb / yellow	PIN 8
PIN 9	Temp-	violett / violet	PIN 9
PIN 10	+V (U _P)	braun/grün <i>brown/green</i>	PIN 10
PIN 11	B+	blau/schwarz <i>blue/black</i>	PIN 11
PIN 12	B-	rot/schwarz <i>red/black</i>	PIN 12
PIN 13	DATA -	schwarz / black	PIN 13
PIN 14	CLOCK -	braun / brown	PIN 14
PIN 15	0 V Sensor	weiß / white	PIN 15
PIN 16	+V Sensor	blau / blue	PIN 16
PIN 17	Innenschirm (0 V) <i>Internal shield (0 V)</i>	-	PIN 17
Steckergehäuse <i>Connector housing</i>	Außenschirm <i>External shield</i>	Außenschirm <i>External shield</i>	Steckergehäuse <i>Connector housing</i>

9.33 Adapter connector Zn/Z1 ID 349312-01 transforming Mot.Enc. into Pos.Enc.

Adapterstecker ID 349312-01 Adapter connector ID 349312-01				
Zn/Z1 IN	PWM-Seite (Pos.Enc. 1Vss) PWM side (Pos.Enc. 1Vpp)	Signal	Farbe Color	Motor-Seite (Mot.Enc. 1Vss) Drive side (Mot.Enc. 1Vpp)
 <p>349312-01</p>	Flanschdose 17-pol. Stift <i>Flange socket 17-pin, male</i>			Flanschdose 17-pol. Überwurf Buchse <i>Flange socket 17-pin, knurled coupling ring</i>
	PIN 1	U _P - Sensor	blau / <i>blue</i>	PIN 16
	PIN 2	R-	schwarz / <i>black</i>	PIN 13
	PIN 3	R+	rot / <i>red</i>	PIN 3
	PIN 4	0V - Sensor	weiß / <i>white</i>	PIN 15
	PIN 5	Temp.+	grün / <i>green</i>	PIN 8
	PIN 6	Temp.-	braun / <i>brown</i>	PIN 9
	PIN 7	U _P	braun/grün <i>brown/green</i>	PIN 10
	PIN 8	D-	violett / <i>violet</i>	PIN 4
	PIN 9	D+	gelb / <i>yellow</i>	PIN 14
	PIN 10	0V	weiß/grün <i>white/green</i>	PIN 7
	PIN 11	Innenschirm <i>Internal shield</i>	-	PIN 17
	PIN 12	B+	blau/schwarz <i>blue/black</i>	PIN 11
	PIN 13	B-	rot/schwarz <i>red/black</i>	PIN 12
	PIN 14	C+	grau / <i>grey</i>	PIN 5
	PIN 15	A+	grün/schwarz <i>green/black</i>	PIN 1
	PIN 16	A-	gelb/schwarz <i>yellow/black</i>	PIN 2
PIN 17	C-	rosa / <i>pink</i>	PIN 6	


9.34 Adapter connector Zn/Z1 ID 349312-02 transforming Pos.Enc. into Mot.Enc.

Adapterstecker ID 349312-02 Adapter connector ID 349312-02				
Zn/Z1 OUT	Motor-Seite (Mot.Enc. 1Vss) <i>Drive side</i> (Mot.Enc.1Vpp)	Signal	Farbe Color	PWM-Seite (Pos.Enc. 1Vss) <i>PWM side</i> (Pos.Enc.1Vpp)
 <p>349312-02</p>	Flanschdose 17-pol. Stift <i>Flange socket 17-pin,</i> <i>male</i>			Flanschdose 17-pol. Überwurf Buchse <i>Flange socket 17-pin,</i> <i>knurled coupling ring</i>
	PIN 16	U _p – Sensor	blau / <i>blue</i>	PIN 1
	PIN 13	R-	schwarz / <i>black</i>	PIN 2
	PIN 3	R+	rot / <i>red</i>	PIN 3
	PIN 15	0V – Sensor	weiß / <i>white</i>	PIN 4
	PIN 8	Temp.+	grün / <i>green</i>	PIN 5
	PIN 9	Temp. -	braun / <i>brown</i>	PIN 6
	PIN 10	U _p	braun/grün <i>brown/green</i>	PIN 7
	PIN 4	D-	violett / <i>violet</i>	PIN 8
	PIN 14	D+	gelb / <i>yellow</i>	PIN 9
	PIN 7	0V	weiß/grün <i>white/green</i>	PIN 10
	PIN 17	Innenschirm <i>Internal shield</i>	-	PIN 11
	PIN 11	B+	blau/schwarz <i>blue/black</i>	PIN 12
	PIN 12	B-	rot/schwarz <i>red/black</i>	PIN 13
	PIN 5	C+	grau / <i>grey</i>	PIN 14
	PIN 1	A+	grün/schwarz <i>green/black</i>	PIN 15
	PIN 2	A-	gelb/Schwarz <i>yellow/black</i>	PIN 16
PIN 6	C-	rosa / <i>pink</i>	PIN 17	

9.35 Adapter connector EnDat/SSI ID 349312-03 transforming Mot.Enc. into Pos.Enc.

Adapterstecker ID 349312-03 Adapter connector ID 349312-03				
EnDat/SSI IN	PWM-Seite (Pos.Enc.EnDat) <i>PWM side</i> (Pos.Enc.EnDat)	Signal	Farbe Color	Motor-Seite (Mot.Enc.EnDat) <i>Drive side</i> (Mot.Enc.EnDat)
 <p>349312-03</p>	Flanschdose 17-pol. Stift <i>Flange socket 17-pin, male</i>			Flanschdose 17-pol. Überwurf Buchse <i>Flange socket 17-pin, knurled coupling ring</i>
	PIN 1	U _P – Sensor	blau / blue	PIN 16
	PIN 2	frei / free		
	PIN 3	frei / free		
	PIN 4	0V – Sensor	weiß / white	PIN 15
	PIN 5	Temp.+	grün / green	PIN 8
	PIN 6	Temp.-	braun / brown	PIN 9
	PIN 7	U _P	braun/grün brown/green	PIN 10
	PIN 8	CLOCK+	violett / violet	PIN 5
	PIN 9	CLOCK-	gelb / yellow	PIN 14
	PIN 10	0V	weiß/grün white/green	PIN 7
	PIN 11	Innenschirm <i>Internal shield</i>	-	PIN 17
	PIN 12	B+	blau/schwarz blue/black	PIN 11
	PIN 13	B-	rot/Schwarz red/black	PIN 12
	PIN 14	DATA+	grau / grey	PIN 3
	PIN 15	A+	grün/Schwarz green/black	PIN 1
	PIN 16	A-	gelb/schwarz yellow/black	PIN 2
PIN 17	DATA-	rosa / pink	PIN 13	

9.36 Adapter connector EnDat/SSI ID 349312-04 transforming Pos.Enc. into Mot.Enc.

Adapterstecker ID 349312-04 Adapter connector ID 349312-04				
EnDat/SSI OUT	Motor-Seite (Mot.Enc.EnDat) Drive side (Mot.Enc.EnDat)	Signal	Farbe Color	PWM-Seite (Pos.Enc.EnDat) PWM side (Pos.Enc.EnDat)
 <p>349312-04</p>	Flanschdose 17-pol. Stift <i>Flange socket 17-pin, male</i>			Flanschdose 17-pol. Überwurf Buchse <i>Flange socket 17-pin, knurled coupling ring</i>
	PIN 16	U _P – Sensor	blau / blue	PIN 1
		frei / free		
		frei / free		
	PIN 15	0V – Sensor	weiß / white	PIN 4
	PIN 8	Temp.+	grün / green	PIN 5
	PIN 9	Temp.-	braun / brown	PIN 6
	PIN 10	U _P	braun/grün brown/green	PIN 7
	PIN 5	CLOCK+	violett / violet	PIN 8
	PIN 14	CLOCK-	gelb / yellow	PIN 9
	PIN 7	0V	weiß/grün white/green	PIN 10
	PIN 17	Innenschirm <i>Internal shield</i>	-	PIN 11
	PIN 11	B+	blau/schwarz blue/black	PIN 12
	PIN 12	B-	rot/schwarz red/black	PIN 13
	PIN 3	DATA+	grau / grey	PIN 14
	PIN 1	A+	grün/schwarz green/black	PIN 15
	PIN 2	A-	gelb/Schwarz yellow/black	PIN 16
PIN 13	DATA-	rosa / pink	PIN 17	

9.37 Adapter cable for connecting the PWM to the PCB connector of the encoder

If the encoder is to be tested while the type of cable assembly is unknown, the adapter cable with HEIDENHAIN layout has to be connected directly to the PCB connector of the encoder.


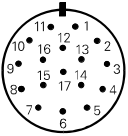
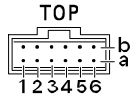


Note

The 17-pin right-angle flange socket of the drive (encoder) can have various layouts.

Adapter cable with 12-pin PCB connector

Application: Absolute encoders with EnDat or SSI interface




Adapterkabel ID 349839-xx / EnDat/SSI Adapter cable ID 349839-xx / EnDat/SSI			
			
	Signal	Farbe Color	
Kupplung 17-pol. Stift <i>Coupling 17-pin, male</i>			Platinenstecker 12-pol. <i>PCB connector 12-pin</i>
PIN 1	U _P – Sensor	blau / <i>blue</i>	6a
PIN 2	frei / <i>free</i>	schwarz / <i>black</i>	-
PIN 3	frei / <i>free</i>	rot / <i>red</i>	-
PIN 4	0V – Sensor	weiß / <i>white</i>	3a
PIN 5	Temp.+	grün / <i>green</i>	-
PIN 6	Temp.-	braun / <i>brown</i>	-
PIN 7	U _P	braun/grün <i>brown/green</i>	1b
PIN 8	CLOCK+	violett / <i>violet</i>	2b
PIN 9	CLOCK-	gelb / <i>yellow</i>	5a
PIN 10	0V	weiß/grün <i>white/green</i>	4b
PIN 11	Innenschirm <i>Internal shield</i>	-	-
PIN 12	B+	blau/schwarz <i>blue/black</i>	4a
PIN 13	B-	rot/schwarz <i>red/black</i>	3b
PIN 14	DATA+	grau / <i>grey</i>	6b
PIN 15	A+	grün/schwarz <i>green/black</i>	2a
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	5b
PIN 17	DATA-	rosa / <i>pink</i>	1a



Attention

This cable is not suitable for feed-through operation at the machine, since there are no lines for temperature monitoring! Observe the shielding!

9.38 Adapter cable 12-pin/14-pin; PWM to encoders with M12 connectors (1 Vpp/TTL)

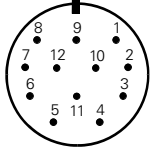Adapterkabel ID 352611-xx Adapter cable ID 352611-xx				
		Pos.Enc.		Pos.Enc.
				
	Signal TTL	Signal 1 Vss Signal 1 Vpp	Farbe Color	
Stecker M12 14-pol. 14-pin connector M12				Stecker 12-pol. 12-pin connector
PIN 8	-Ua2	B-	rosa / pink	PIN 1
PIN 14	Sensor U _p	Sensor U _p	blau / blue	PIN 2
PIN 3	+Ua0	R+	rot / red	PIN 3
PIN 4	-Ua0	R-	schwarz / black	PIN 4
PIN 5	+Ua1	A+	braun / brown	PIN 5
PIN 6	-Ua1	A-	grün / green	PIN 6
PIN 10	-UaS	-UaS ¹⁾	violett / violet	PIN 7
PIN 7	+Ua2	B+	grau / grey	PIN 8
PIN 9	-	-	gelb / yellow	PIN 9
PIN 12	0 V	0 V	weiß/grün white/green	PIN 10
PIN 13	Sensor 0 V	Sensor 0 V	weiß / white	PIN 11
PIN 11	U _p	U _p	braun/grün brown/green	PIN 12
PIN 1/2	frei / free			


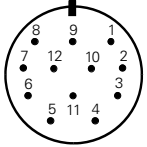
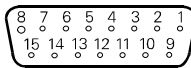
¹⁾ Not used by all JH encoders



Note

The 1 Vpp and TTL interfaces work with the same adapter cables!


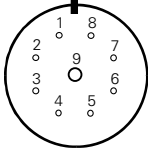
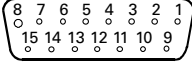
9.39 Adapter cable 12-pin/15-pin; PWM to TTL interface electronics (APE) D-sub (Pos.Enc.)

Adapterkabel ID 355215-xx / 331693-xx Adapter cable ID 355215-xx / 331693-xx			
Pos.Enc.		Pos.Enc.	
			
	Signal	Farbe Color	
Stecker 12-pol. 12-pin connector			Sub-D-Stecker 15-pol. 15-pin D-sub connector
PIN 1	-Ua2	rosa / pink	PIN 11
PIN 2	Sensor U _p	blau / blue	PIN 12
PIN 3	+Ua0	rot / red	PIN 14
PIN 4	-Ua0	schwarz / black	PIN 7
PIN 5	+Ua1	braun / brown	PIN 1
PIN 6	-Ua1	grün / green	PIN 9
PIN 7	-UaS ¹⁾	violett / violet	PIN 13
PIN 8	+Ua2	grau / grey	PIN 3
PIN 9	- ²⁾	gelb / yellow	PIN 15
PIN 10	0 V	weiß/grün white/green	PIN 2
PIN 11	Sensor 0 V	weiß / white	PIN 10
PIN 12	U _p	braun/grün brown/green	PIN 4
-	frei / free	-	PIN 5
-	frei / free	-	PIN 6
-	frei / free	-	PIN 8
Gehäuse / Housing	Schirm / Shield		Gehäuse / Housing




¹⁾ Not used by all JH encoders

²⁾ "Exposed" linear encoders: TTL/11 µApp switchover (adjustment/ testing)





9.40 Adapter cable 11 μ App 9/15-pin for PWM OUT

Adapterkabel ID 368171-xx Adapter cable ID 368171-xx			
			
	Signal 11 μAss Signal 11 μApp	Farbe Color	
Stecker 9-pol. Buchse <i>9-pin female connector</i>			Sub-D-Stecker 15-pol. Buchse <i>15-pin D-sub connector (female)</i>
PIN 4	0 V U_N	weiß / <i>white</i>	PIN 2
PIN 3	+V U_P	braun / <i>brown</i>	PIN 1
PIN 9	Innenschirm (0 V) <i>Internal shield (0 V)</i>	weiß/braun <i>white/brown</i>	PIN 13
PIN 1	$0^\circ+$	grün / <i>green</i>	PIN 3
PIN 2	$0^\circ-$	gelb / <i>yellow</i>	PIN 4
PIN 5	$90^\circ+$	blau / <i>blue</i>	PIN 6
PIN 6	$90^\circ-$	rot / <i>red</i>	PIN 7
PIN 7	RI+	grau / <i>grey</i>	PIN 10
PIN 8	RI-	rosa / <i>pink</i>	PIN 12
			PIN 5, 8, 9, 11, 14, 15 frei / <i>free</i> nicht belegt / <i>not used</i>
Gehäuse / <i>Housing</i>	Außenschirm / <i>External shield</i>	Schirm / <i>Shield</i>	Gehäuse / <i>Housing</i>

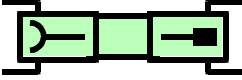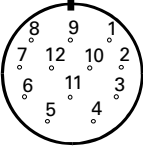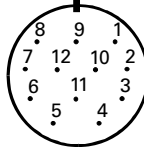


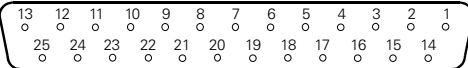
9.41 Adapter connector; coupling to connector; 12-pin; M23/M23 (1 Vpp/TTL)

Adapterkabel ID 373848-xx Adapter cable ID 373848-xx				
				
	Signal 1 Vss Signal 1 Vpp	Signal TTL	Farbe Color	
Stecker 12-pol. Buchse 12-pin female connector				Stecker 12-pol. Stift 12-pin connector (male)
PIN 1	B-	-Ua2	rosa / pink	PIN 1
PIN 2	+V Sensor	+ V Sensor	blau / blue	PIN 2
PIN 3	R+	+Ua0	rot / red	PIN 3
PIN 4	R-	-Ua0	schwarz / black	PIN 4
PIN 5	A+	+Ua1	braun / brown	PIN 5
PIN 6	A-	-Ua1	grün / green	PIN 6
PIN 7	- UaS	- UaS	violett / violet	PIN 7
PIN 8	B+	+Ua2	grau / grey	PIN 8
PIN 9	frei / free	PWT- Testimpuls PWT test pulse	gelb / yellow	PIN 9
PIN 10	0 V U _N	0 V U _N	weiß/grün white/green	PIN 10
PIN 11	0 V Sensor	0 V Sensor	weiß / white	PIN 11
PIN 12	+V U _P	+ V U _P	braun/grün brown/green	PIN 12
Gehäuse Housing	Außenschirm / External shield	Schirm Shield	Schirm / Shield	Gehäuse Housing



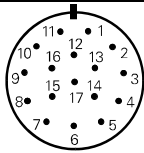
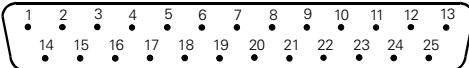
9.42 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector (Pos.Enc./Mot.Enc. 1 Vpp/Zn/Z1 and 1 Vpp/Zn/Z1)

Adapterkabel ID 509666-xx Adapter cable ID 509666-xx			
Pos.Enc.		Mot.Enc.	
			
	Signal EnDat und 1 Vss Zn/Z1 Signal EnDat and 1 Vpp Zn/Z1	Farbe Color	
Stecker 17-pol. Stift 17-pin connector (male)			Sub-D-Stecker 25-pol. Stift 25-pin D-sub connector (male)
PIN 1	5 V Sensor (U _P)	blau / blue	PIN 14
PIN 2	R- / -- (EnDat)	schwarz / black	PIN 18
PIN 3	R+ / -- (EnDat)	rot / red	PIN 17
PIN 4	0 V Sensor (U _N)	weiß / white	PIN 16
PIN 5	Temp+	grün / green	PIN 13
PIN 6	Temp-	braun / brown	PIN 25
PIN 7	U _P	braun/grün brown/green	PIN 1
PIN 8	D- / CLOCK+ (EnDat)	violett / violet	PIN 22 / 10 (Brücke) PIN 22 / 10 (bridge)
PIN 9	D+ / CLOCK- (EnDat)	gelb / yellow	PIN 21 / 12 (Brücke) PIN 21 / 12 (bridge)
PIN 10	0 V	weiß/grün white/green	PIN 2
PIN 11	Innenschirm Internal shield		PIN 8
PIN 12	B+	blau/schwarz blue/black	PIN 6
PIN 13	B-	rot/schwarz red/black	PIN 7
PIN 14	C+ / DATA+ (EnDat)	grau / grey	PIN 19 / 15 (Brücke) PIN 19 / 15 (bridge)
PIN 15	A+	grün/schwarz green/black	PIN 3
PIN 16	A-	gelb/schwarz yellow/black	PIN 4
PIN 17	C- / DATA- (EnDat)	rosa / pink	PIN 20 / 23 (Brücke) PIN 20 / 23 (bridge)
Steckergehäuse Connector housing	Außenschirm External shield		Steckergehäuse Connector housing

9.43 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector (Pos.Enc./Mot.Enc. 1 Vpp/EnDat)

Adapterkabel ID 509667-xx Adapter cable ID 509667-xx			
Pos.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17-pol. 17-pin connector			Sub-D-Stecker 25-pol. 25-pin D-sub connector
PIN 1	5 V Sensor (U _P)	blau / blue	PIN 14
PIN 2	-	schwarz / black	
PIN 3	-	rot / red	
PIN 4	0 V Sensor (U _N)	weiß / white	PIN 16
PIN 5	Temp+	gelb / yellow	PIN 13
PIN 6	Temp-	violett / violet	PIN 25
PIN 7	U _P	braun/grün brown/green	PIN 1
PIN 8	CLOCK+	grün / green	PIN 10
PIN 9	CLOCK-	braun / brown	PIN 12
PIN 10	0 V	weiß/grün white/green	PIN 2
PIN 11	Innenschirm Internal shield		PIN 8
PIN 12	B+	blau/schwarz blue/black	PIN 6
PIN 13	B-	rot/schwarz red/black	PIN 7
PIN 14	DATA+	rot / red	PIN 15
PIN 15	A+	grün/schwarz green/black	PIN 3
PIN 16	A-	gelb/schwarz yellow/black	PIN 4
PIN 17	DATA-	schwarz / black	PIN 23
Steckergehäuse Connector housing	Außenschirm External shield		Steckergehäuse Connector housing
	frei / free		PIN 17
	frei / free		PIN 18
	frei / free		PIN 19
	frei / free		PIN 20
	frei / free		PIN 21
	frei / free		PIN 22

9.44 Adapter cable 17-pin/15-pin; TNC with 15-pin D-sub connector (Pos.Enc. 1 Vpp/EnDat)

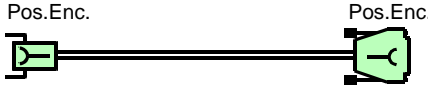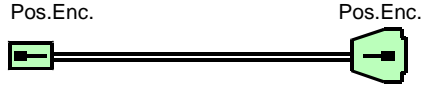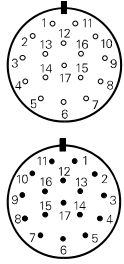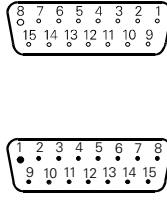

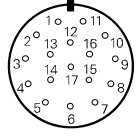
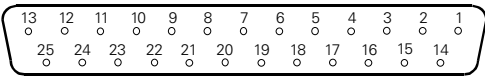
Adapterkabel ID 510616-xx Adapter cable ID 510616-xx			Adapterkabel ID 510617-xx Adapter cable ID 510617-xx	
				
	Signal 1 Vss Signal 1 Vpp	Signal EnDat Signal EnDat	Farbe Color	
Stecker 17-pol. 17-pin connector				Sub-D-Stecker 15-pol. 15-pin D-sub connector
PIN 1	Sensor+	Sensor+	blau / blue	PIN 9
PIN 2	R-	nicht verwendet not used	schwarz / black	PIN 12
PIN 3	R+	nicht verwendet not used	rot / red	PIN 10
PIN 4	Sensor-	Sensor-	weiß / white	PIN 11
PIN 5	Temp+	nicht verwendet not used	Leitung vom externen Temperaturfühler wires from external temperature sensor	
PIN 6	Temp-	nicht verwendet not used	Leitung vom externen Temperaturfühler wires from external temperature sensor	
PIN 7	+5 V (U _P)	+5 V	braun/grün brown/green	PIN 1
PIN 8	nicht verwendet not used	CLOCK+	violett / violet	PIN 14
PIN 9	nicht verwendet not used	CLOCK-	gelb / yellow	PIN 15
PIN 10	0 V (U _N)	0 V	weiß/grün white/green	PIN 2
PIN 11	Innenschirm (0 V) Internal shield (0 V)	Innenschirm (0 V) Internal shield (0 V)		PIN 13
PIN 12	B+	B+	blau/schwarz blue/black	PIN 6
PIN 13	B-	B-	rot/schwarz red/black	PIN 7
PIN 14	-	DATA+	grau / grey	PIN 5
PIN 15	A+	A+	grün/schwarz green/black	PIN 3
PIN 16	A-	A-	gelb/schwarz yellow/black	PIN 4
PIN 17	-	DATA-	rosa / pink	PIN 8
Steckergehäuse Connector housing	Außenschirm External shield	Außenschirm External shield		Steckergehäuse Connector housing




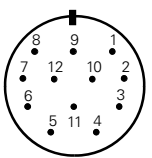
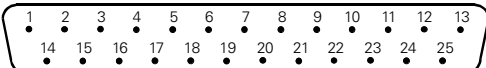
Note

This adapter cable is for use with encoders with 15-pin D-sub EnDat and 15-pin D-sub 1 Vpp connectors. For the EnDat setting the 1 Vpp absolute interface card must be set to **SSI/EnDat**. For the 1 Vpp setting set the 1 Vpp absolute interface card to **1 Vpp**.



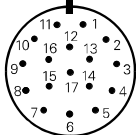
**9.45 Adapter cable 17-pin/25-pin; TNC with 25-pin D-sub connector
(Pos.Enc./Mot.Enc. 1 Vpp/ZnZ1)**

Adapterkabel ID 511886-xx Adapter cable ID 511886-xx			
Pos.Enc.		Mot.Enc.	
			
	Signal	Farbe Color	
Stecker 17-pol. 17-pin connector			Sub-D-Stecker 25-pol. 25-pin D-sub connector
PIN 1	5 V Sensor (U _P)	blau / <i>blue</i>	PIN 14
PIN 2	R-	schwarz / <i>black</i>	PIN 18
PIN 3	R+	rot / <i>red</i>	PIN 17
PIN 4	0 V Sensor (U _N)	weiß / <i>white</i>	PIN 16
PIN 5	Temp+	gelb / <i>yellow</i>	PIN 13
PIN 6	Temp-	violett / <i>violet</i>	PIN 25
PIN 7	U _P	braun/grün <i>brown/green</i>	PIN 1
PIN 8	D-	rosa / <i>pink</i>	PIN 22
PIN 9	D+	grau / <i>grey</i>	PIN 21
PIN 10	0 V	weiß/grün <i>white/green</i>	PIN 2
PIN 11	Innenschirm <i>Internal shield</i>		PIN 8
PIN 12	B+	blau/schwarz <i>blue/black</i>	PIN 6
PIN 13	B-	rot/schwarz <i>red/black</i>	PIN 7
PIN 14	C+	grün / <i>green</i>	PIN 19
PIN 15	A+	grün/schwarz <i>green/black</i>	PIN 3
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	PIN 4
PIN 17	C-	braun / <i>brown</i>	PIN 20
Steckergehäuse Connector housing	Außenschirm <i>External shield</i>		Steckergehäuse Connector housing
	frei / <i>free</i>		PIN 9
	frei / <i>free</i>		PIN 10
	frei / <i>free</i>		PIN 11
	frei / <i>free</i>		PIN 12


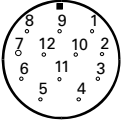
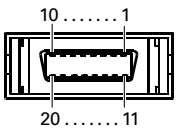
9.46 Adapter cable 25-pin D-sub (Mot.Enc.); 12-pin (Pos.Enc.) for PWM IN

Adapterkabel ID 533055 - 01 Adapter cable ID533055 -01				
		Pos.Enc.	Mot.Enc.	
				
	Signal 1 Vss Signal 1 Vpp	Signal TTL	Farbe Color	
Stecker 12 - pol. 12-pin connector				Sub-D-Stecker25-pol. 25-pin D-sub connector
PIN 1	B-	-Ua2	rosa / pink	PIN 7
PIN 2	5 V Sensor	SensorUp	blau / blue	PIN14
PIN 3	R+	+Ua0	rot / red	PIN17
PIN 4	R-	-Ua0	schwarz / black	PIN18
PIN 5	A+	+Ua1	braun / brown	PIN 3
PIN 6	A-	-Ua1	grün / green	PIN 4
PIN 7	frei / free	frei / free		-
PIN 8	B+	+Ua2	grau / grey	PIN 6
PIN 9	frei / free	frei / free		-
PIN 10	0 V UN	0 V	weiß/grün white/green	PIN 2
PIN 11	0 V Sensor	Sensor 0 V	weiß / white	PIN16
PIN 12	5 V Up	Up	braun/grün brown/green	PIN 1
Gehäuse Housing	Schirm Shield	Schirm Shield		Gehäuse Housing
				PIN 5, 8, 9, 10, 11, 12, 13, 15, 19-25 frei / free nicht belegt /not used




9.47 Adapter cable 17-pin/14-pin; PWM to encoders with M12 connectors (EnDat)

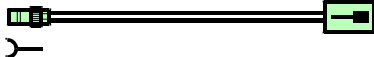Adapterkabel ID 533631-xx Adapter cable ID 533631-xx			
Pos.Enc.		Pos.Enc.	
			
	EnDat	Farbe Color	
Stecker M12 14-pol. 14-pin connector M12			Stecker 17-pol. 17-pin connector
PIN 14	+V Sensor	blau / <i>blue</i>	PIN 1
-	frei / <i>free</i>	-	PIN 2
-	frei / <i>free</i>	-	PIN 3
PIN 13	0 V Sensor	weiß / <i>white</i>	PIN 4
-	frei / <i>free</i>	-	PIN 5
-	frei / <i>free</i>	-	PIN 6
PIN 11	+V (U _P)	braun/grün <i>brown/green</i>	PIN 7
PIN 10	CLOCK+	violett / <i>violet</i>	PIN 8
PIN 9	CLOCK-	gelb / <i>yellow</i>	PIN 9
PIN 12	0 V (U _N)	weiß/grün <i>white/green</i>	PIN 10
-	frei / <i>free</i>	-	PIN 11
PIN 7	B+	blau/schwarz <i>blue/black</i>	PIN 12
PIN 8	B-	rot/schwarz <i>red/black</i>	PIN 13
PIN 2	DATA+	grau / <i>grey</i>	PIN 14
PIN 5	A+	grün/schwarz / <i>green/black</i>	PIN 15
PIN 6	A-	gelb/schwarz <i>yellow/black</i>	PIN 16
PIN 1	DATA-	rosa / <i>pink</i>	PIN 17


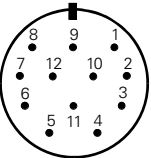
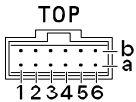
9.48 Adapter cable FANUC TTL 20-pin / HEIDENHAIN TTL 12-pin

Adapterkabel ID 556558-xx Adapter cable ID 556558-xx			
			
	Signal TTL	Farbe Color	
Stecker 12-pol. Buchse <i>12-pin female connector</i>			Stecker 20-pol. Buchse <i>20-pin female connector</i>
PIN 1	-Ua2	rosa / <i>pink</i>	PIN 4
PIN 2	+ V Sensor	blau / <i>blue</i>	PIN 18, 20
PIN 3	+Ua0	rot / <i>red</i>	PIN 5
PIN 4	-Ua0	schwarz / <i>black</i>	PIN 6
PIN 5	+Ua1	braun / <i>brown</i>	PIN 1
PIN 6	-Ua1	grün / <i>green</i>	PIN 2
PIN 7	- UaS	Violet / <i>violet</i>	-
PIN 8	+Ua2	grau / <i>grey</i>	PIN 3
PIN 9	frei / <i>free</i>	gelb / <i>yellow</i>	7
PIN 10	0 V U _N	grau / <i>grey</i>	PIN 12
PIN 11	0 V Sensor	weiß / <i>white</i>	PIN 14
PIN 12	+ V U _P	braun/grün <i>brown/green</i>	PIN 9
Gehäuse <i>Housing</i>	Schirm <i>Shield</i>		PIN 16
			PIN 10 frei / <i>free</i>

9.49 Adapter cable FANUC TTL 20-pin / HEIDENHAIN TTL 12-pin

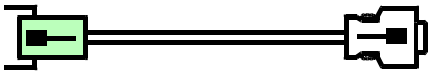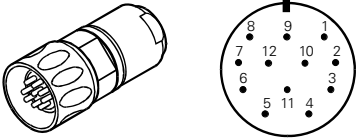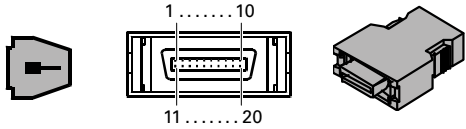Adapterkabel ID 577345-01 Adapter cable ID 577345-01		
		
	Signal TTL	
Stecker 12-pol. 12-pin connector		FANUC TTL 20-pol. 20-pin FANUC TTL
PIN 1	-Ua2	PIN 4
PIN 2	5 V Sensor	PIN 18, 20
PIN 3	+Ua0	PIN 5
PIN 4	-Ua0	PIN 6
PIN 5	+Ua1	PIN 1
PIN 6	-Ua1	PIN 2
PIN 7	- UaS	-
PIN 8	+Ua2	PIN 3
PIN 9	frei / free	-
PIN 10	0 V U _N	PIN 12
PIN 11	0 V Sensor	PIN 14
PIN 12	5 V U _P	PIN 9
Gehäuse Housing	Schirm Shield	PIN 16
		PIN 7, 8, 10, 11, 13, 15, 17, 19 frei / free nicht belegt / not used

9.50 Adapter cable 12-pin/12-pin; PWM to PCB connector (1 Vpp, TTL, HTL) (Pos.Enc.)

Adapterkabel ID 591118- xx Adapter cable ID 591118- xx				
Pos.Enc.		Pos.Enc.		
				
	SignalH TL	Signal 1 Vss Signal 1 Vpp	Farbe Color	
Stecker 12-pol. 12- pin connector				Stecker 12-pol. 12- pin connector
PIN 1	-Ua2	B-	rosa / pink	PIN5a
PIN 2	SensorU _P	+ V Sensor	blau / blue	PIN2b
PIN 3	+Ua0	R+	rot / red	PIN4b
PIN 4	-Ua0	R-	schwarz / black	PIN4a
PIN 5	+Ua1	A+	braun / brown	PIN6b
PIN 6	-Ua1	A-	grün / green	PIN6a
PIN 7	-UaS	-UaS	violett / violet	PIN3a
PIN 8	+Ua2	B+	grau / grey	PIN5b
PIN 9	-	-	-	PIN3b
PIN10	U _N	0 V (U _N)	weiß/grün white/green	PIN1a
PIN11	SensorU _N	0 V Sensor	weiß / white	PIN1b
PIN12	U _P	+ V (U _P)	braun/grün brown/green	PIN2a







Note

Application example:
Encoder without commutation signals with 1 Vpp, TTL, HTL interface
Encoders e.g.: ERN 138x, ERN 133x, ERN 132x.

9.51 Adapter cable with 15-pin PCB connector

Application: Absolute encoders with EnDat interface

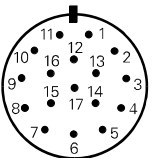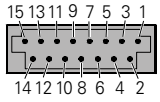Adapterkabel ID 635349-xx Adapter cable ID 635349-xx			
			
	Signal	Farbe Color	
Kupplung 17-pol. Stift <i>Coupling 17-pin, male</i>			Platinenstecker 15-pol. <i>PCB connector 15-pin</i>
PIN 1	U _P – Sensor	blau / <i>blue</i>	11
PIN 2	frei / <i>free</i>	schwarz / <i>black</i>	-
PIN 3	frei / <i>free</i>	rot / <i>red</i>	-
PIN 4	0V – Sensor	weiß / <i>white</i>	12
PIN 5	Temp.+	grün / <i>green</i>	5
PIN 6	Temp.-	braun / <i>brown</i>	6
PIN 7	U _P	braun/grün <i>brown/green</i>	13
PIN 8	CLOCK+	violett / <i>violet</i>	9
PIN 9	CLOCK-	gelb / <i>yellow</i>	10
PIN 10	0V	weiß/grün <i>white/green</i>	14
PIN 11	Innenschirm <i>Internal shield</i>	-	-
PIN 12	B+	blau/schwarz <i>blue/black</i>	3
PIN 13	B-	rot/schwarz <i>red/black</i>	4
PIN 14	DATA+	grau / <i>grey</i>	7
PIN 15	A+	grün/schwarz <i>green/black</i>	1
PIN 16	A-	gelb/schwarz <i>yellow/black</i>	2
PIN 17	DATA-	rosa / <i>pink</i>	8






Attention

This cable is not suitable for feed-through operation at the machine, since there are no lines for temperature monitoring!


Observe the shielding!

9.52 Adapter cable DRIVE-CLiQ 1 Vpp 12/25-pin for PWM OUT

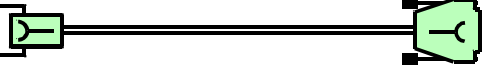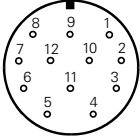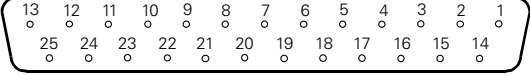Adapterkabel ID 758082-01 Adapter cable ID 758082-01			
			
	Signal 1 Vss Signal 1 Vpp	Farbe Color	
Stecker 12-pol. Buchse 12-pin female connector			Sub-D-Stecker 25-pol. Buchse 25-pin D-sub connector (female)
PIN 1	B-	rosa / pink	PIN 7
PIN 2	+ V Sensor	blau / blue	PIN 14
PIN 3	R+	rot / red	PIN 17
PIN 4	R-	schwarz / black	PIN 18
PIN 5	A+	braun / brown	PIN 3
PIN 6	A-	grün / green	PIN 4
PIN 7	frei / free	gelb / yellow	-
PIN 8	B+	grau / grey	PIN 6
PIN 9	frei / free	violett / violet	-
PIN 10	0 V U_N	weiß/grün white/green	PIN 2
PIN 11	0 V Sensor	weiß / white	PIN 16
PIN 12	+ V U_P	braun/grün brown/green	PIN 1
Gehäuse Housing	Schirm Shield		Gehäuse Housing
			PIN 5, 8-12, 13, 15, 19-25 frei / free nicht belegt / not used

10 FST 2 leak tester

10.1 Description

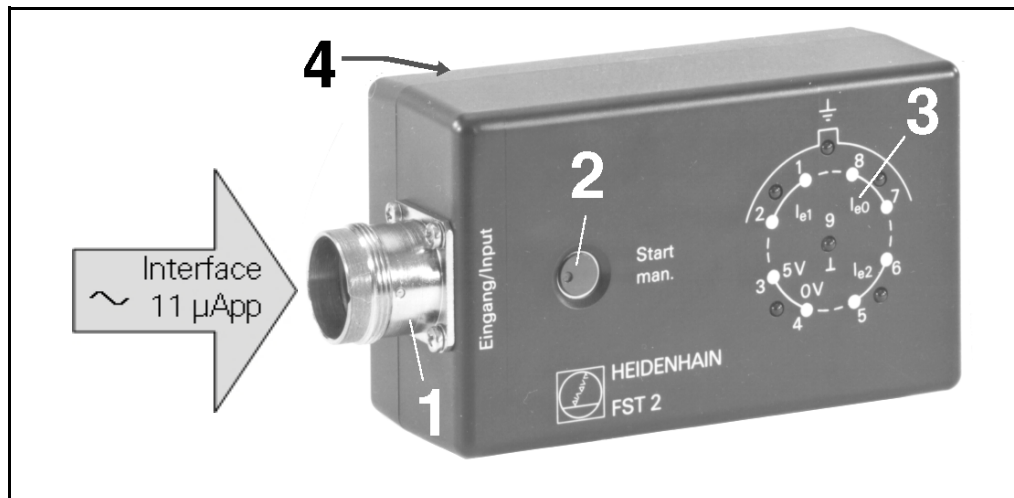

The leak tester serves to check NC linear and rotary encoders with 11 μApp interface and 9-pin output connector for leak currents (up to 3 $\text{M}\Omega$) in the cables or on the photocell board (e.g. humidity from coolant causing "short circuits" in the connector housing or on boards in the $\text{k}\Omega$ or $\text{M}\Omega$ range.)

The FST 2 automatically switches on when a test item (e.g. a linear encoder) is connected. The lamp (LED) current of the encoder is used for this purpose.

For units without lamp (e.g. for connecting cables, or if the light unit is defective) the automatic test procedure is not activated. In this case the "Start man." button must be pressed.



Note

On encoders with integrated amplifier only leak currents between the internal shield (\perp) and the external shield (\perp) can be measured.

Due to the internal resistance ($< 3 \text{ M}\Omega$) of the amplifier the four remaining LEDs always indicate leak current when a test item is connected.

10.2 Explanation of the control elements

1 Female input connector 9-pin

For connecting encoders with sinusoidal output signals and extension cables with 9-pin connector

2 Manual start button

When testing items with LED or encoders with defective lamp the manual start button has to be pressed to activate the FST 2. The FST 2 is active as long as the button is pressed.

The manual start button also serves to check the battery.

The battery voltage is OK, if the LEDs light up like running light as long as the key is pressed.

3 LED display

Leak circuits are indicated by the LEDs being permanently lit.

The running light signalizes that there is no leak current in the test item.

The imprint on the FST 2 housing gives information on the where a leak current was detected.

4 Quick reference guide




Brief operating instructions are printed onto the back side of the FST 2.

A sticker with instructions in English language is supplied with the device.


10.3 Application example

Measurement of a rotary encoder having the following leak currents:


- Leak current between \perp and $\underline{\perp}$
- Leak current between $le1$ and $0\text{ V} / 5\text{ V}$

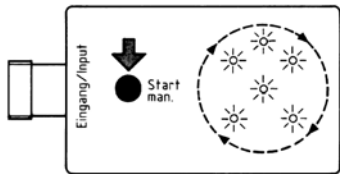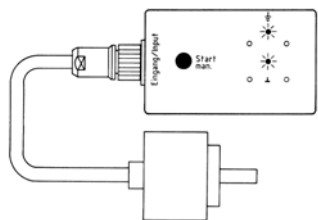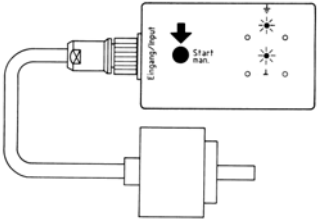Instruction	Display	Error cause
Battery test: Press Start man. button		LED running light = battery functions properly LEDs dark = battery is defective
Connect encoder; test starts automatically		Leak current is displayed between \perp and $\underline{\perp}$. (Leak current 1)
Test does not start (LEDs dark) Press Start man. button to start the test.		Encoder light unit defective or connection to light unit interrupted Leak current is displayed between \perp and $\underline{\perp}$. (Leak current 1)

Eliminate leak current from the rotary encoder!

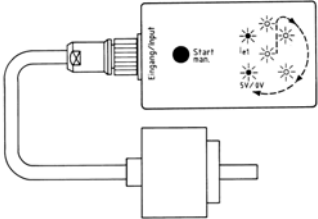Connect encoder; test starts automatically		The running light stops at LED $0\text{ V} / 5\text{ V}$. A leak current between $0\text{ V} / 5\text{ V}$ and $le1$ is displayed by permanently lit LEDs $0\text{ V} / 5\text{ V}$ and $le1$ (leak current 2).
---	---	--

Eliminate leak current 2 from the rotary encoder!

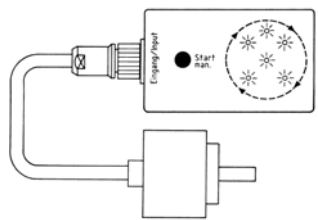Connect encoder; test starts automatically		Each of the 6 LEDs lights up for a moment (running light) as long as the rotary encoder is connected or the Start man. button is pressed. Rotary encoder without leak current!
---	---	--



Note

After repair the measurement must be repeated until a running light forms from all LEDs. Then the test item does not have any leak currents!

10.4 Specifications

Sensitivity	Leak currents $\leq 3 \text{ M}$
Sequence of measurements	<ol style="list-style-type: none">1. \perp2. \perp3. I_{e0}4. I_{e2}5. $0 \text{ V}/5 \text{ V}$6. I_{e1}
Measurement cycle	1 s
Power supply unit	9 V battery Exchange the battery every two years; use leak-proof branded batteries (e.g. ALKALINE).
Battery voltage	$> 5.5 \text{ V}$ Below 5.5 V the device is inactive!
Current consumption	10 mA (operation) $\leq 0.1 \mu\text{A}_{pp}$ (closed-circuit current)
Cable lengths	Depend on capacitance

11 ROD 486 rotary encoder

11.1 Description




With the ROD 486 you can check counting function and interpolation settings of ND, VRZ, IBV, EXE, etc. with 1 Vpp interface.

The ROD 486 can be used to preset oscilloscope triggering for checking the reference mark with the PWM.



Note

With the adapter 1 Vpp/11 μApp (interface converter) ID 364914-02 and the 12-pin connecting cable ID 298399-01, subsequent electronics with 11 μApp interface can be inspected.

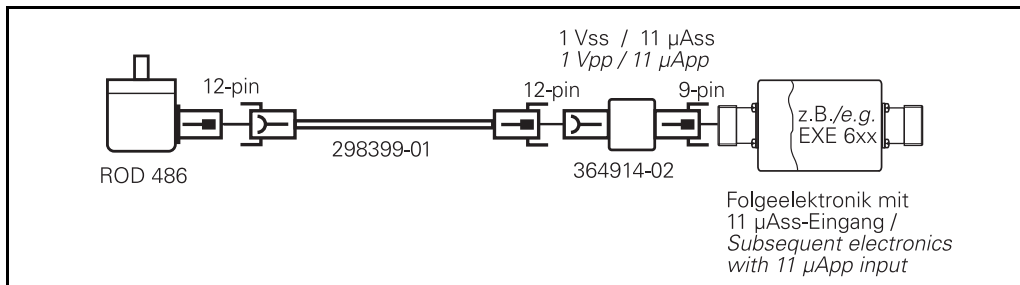

11.2 Specifications

Power supply

Power supply	5 V ± 10 % max. 120 mA
--------------	------------------------

Output signals

Incremental signals A, B	0.8 – 1.2 Vpp
Reference signal Ie0	0.2 – 0.85 V (usable component)

Line count

1000 lines/rev.
1 reference mark signal/revolution

Electrical connection

Radial flange socket
(The connecting cable ID 298399-01 can be used as extension cable.)

12 Specifications

12.1 PWM 9 basic unit

Power supply at the DC-IN socket

Supply voltage range	10 – 30 V
Current consumption of PWM 9 with interface board 1 Vpp ID 323077-02 without encoder	Approx. 250 mA with 24 V Approx. 470 mA with 12 V Switch-on current approx. 1 A
Power consumption with PWM power supply unit ID 313797-01	Approx. 15 W

Power supply of PWM via the OUT flange socket of the interface board

Supply voltage range	3 – 10 V (11 μ App, 1 Vpp, TTL) 10 – 30 V (check HTL!)
Current consumption of PWM 9 in PWM MODE with interface board 1 Vpp ID 323077-02 without encoder and without display lighting with display lighting with bright display lighting (Rv = 5 Ω instead of 10 Ω)	Approx. 1.3 A (approx. 6.5 W) w. 5 V Approx. 1.6 A (approx. 8 W) with 5 V Approx. 1.8 A (approx. 9 W) with 5 V

Power supply of the encoder



Note

Parameter P2: U-MSYS EXTERNAL set to floating

Encoder voltage (11 μ App, 1 Vpp, TTL)	3 – 9 V, can be set by hand Default setting 5 V \pm 0.1 V
Encoder voltage (HTL) without voltage prescribed by subsequent electronics	10 – 19 V selectable with 24 V PWM power supply unit 10 – 25 V selectable with 30 V at DC-IN Default setting 12 V \pm 0.2 V
Encoder voltage (HTL) with voltage of subsequent electronics	10 – 25 V selectable with 30 V power supply



Note

When the PWM 9 is switched on, it adapts the PWM encoder voltage to the voltage of the subsequent electronics.

Example: Subsequent electronics (OUT) 4.8 V, encoder voltage (IN) 4.8 V

Current limiting

Encoder current limit	Max. 500 mA
Encoder current limit with active terminating resistor	Max. 700 mA

Frequency display

Measuring range of frequency counter	20 Hz – 2 MHz
--------------------------------------	---------------

Frequency range of UNIVERSAL COUNTER

Maximum input frequency	Approx. 2 kHz
-------------------------	---------------

Frequency range of DETERMINE PULSE NUMBER

Maximum input frequency (Observe the maximum input frequency of the interface board)	1 MHz
---	-------

PHA, TV1, TV2 bar display

Measuring ranges in degrees [°]	5, 10, 25, 50, autom. measuring range; default setting $\pm 50^\circ$
Frequency range	10 Hz – 50 kHz

PWT bar display of ref. mark width and position

Frequency range	15 Hz – 100 kHz
Max. number of ref. mark measurements	15 <u>Reference signals</u> s
Ref. signal processing time	70 ms



Note

If 15 Reference signals
s is exceeded, the evaluation process ignores these reference mark signals. If the reference mark spacing is less than 70 ms, the error message FREQU> is displayed. (Example: Distance-coded reference marks)

Accuracy of PHA/TV display

Interface board	Frequency	TV	PHA
TTL, HTL	10 Hz – 10 kHz	$\pm 0.5^\circ$	$\pm 0.5^\circ$
	10 kHz – 500 kHz	$\pm 2^\circ$	$\pm 2^\circ$
	500 kHz – 1 MHz	$\pm 3^\circ$	$\pm 3^\circ$
11 μ App, 1 Vpp	10 Hz – 10 kHz	$\pm 1^\circ$	$\pm 3^\circ$
	10 kHz – 500 kHz	$\pm 3^\circ$	$\pm 5^\circ$
	500 kHz – 1 MHz	$\pm 5^\circ$	$\pm 5^\circ$



Note

The specified tolerances are valid within the calibration cycle.
(See "Calibration" on page 10.)

Temperature range

Operating temperature	0 °C to +40 °C
Storage temperature	20 °C to +60 °C

Display contrast

The contrast of the LCD can be adjusted. The trimmer is located next to the "C" BNC socket.



Note

An adjustment tool or a watchmaker's screwdriver is required for trimming!

12.2 11 μ App interface board

Signal amplification (le1, le2, le0)

$$300 \frac{\text{mV}}{\mu\text{A}}$$

Input amplifier

Maximum signal current	le0, le1, le2: 66 μ App
------------------------	-----------------------------

Maximum input frequency

3 dB	Approx. 300 kHz
------	-----------------



Note

The maximum input frequency only specifies the limit frequency of the PWM 9 current-to-voltage converter (signal source: frequency generator). In real operation with measuring systems the frequency response highly depends on the photocells, on the capacitance of the photocells and on the cable length.

Measure current/voltage

Current range	0 – 500 mA
Voltage range	0 – 10 V
Tolerance	$\pm 3 \%$

Measure signal amplitudes

PWT MODE range	0 μ App – 16.9 μ App
PWM MODE range	2 μ App – 33.3 μ App (corresponds to 0.6 – 10 Vpp)
Measuring frequency Min. measuring frequency Max. measuring frequency –3 dB	10 Hz 100 kHz
Tolerance with software adjustment	$\pm 3 \%$ for measuring frequencies up to 20 kHz $\pm 10 \%$ for measuring frequencies up to 50 kHz



Note

The specified tolerances are valid within the calibration cycle.
(See "Calibration" on page 10.)

Display of $\overline{U_aS}$ interference signal

le1 and le2	< 4 μApp
Response time of the interface board	t1 approx. 5 μs
Response time of PWM display	t2 > 1.2 μs
Minimum duration of interference to display $\overline{U_aS}$	t > 6.2 μs (= t1 + t2)
Interference display in PWT MODE "SIGNALS TOO LARGE"	16.1 μApp

Encoder output

Output signal	Like input signal (with 0 V reference potential)
---------------	---

12.3 1 Vpp interface board

Encoder input (IN)

Signal voltage	Max. 5 Vpp
----------------	------------

Maximum input frequency

Max. frequency for the encoder input on the interface board (-3 dB)	Approx. 500 kHz
Max. frequency for the analog signals on the BNC sockets (-3 dB)	Approx. 1 MHz



Note

Higher input frequencies (up to 1 MHz) are possible; in this case the accuracy of the PHA/TV display cannot be guaranteed any more!
The maximum input frequency only specifies the voltage input of PWM 9 (signal source: frequency generator). In real operation with measuring systems the frequency response highly depends on the encoder model and on the cable length.

Measure current/voltage

Current range	0 – 500 mA
Voltage range	0 – 10 V
Tolerance	$\pm 3 \%$



Note

The specified tolerances are valid within the calibration cycle.
(See "Calibration" on page 10.)

Measure signal amplitudes

Measuring range	0.2 Vpp – 1.6 Vpp
Measuring frequency Min. measuring frequency Max. measuring frequency –3 dB	10 Hz 100 kHz
Tolerance with software adjustment	± 3 % for measuring frequencies up to 20 kHz ± 10 % for measuring frequencies up to 50 kHz

Terminating resistor

121 Ω

Display of \overline{UaS} interference signal

Incremental signals A and B	< 0.3 Vpp
Response time of the interface board	t1 approx. 5 μs
Response time of PWM display	t2 > 1.2 μs
Minimum duration of interference to display \overline{UaS}	t > 6.2 μs (= t1 + t2)

Encoder output

Output signal	Like input signal
---------------	-------------------



Note

The specified tolerances are valid within the calibration cycle.
(See “Calibration” on page 10.)

12.4 1 Vpp absolute interface board

Encoder input (IN)

Signal voltage	Max. 5 Vpp
----------------	------------

Max. input frequency

Input frequency for 1 Vpp signals (–3 dB)	Approx. 500 kHz
Max. frequency for the analog signals on the BNC sockets	Approx. 1 MHz (3 dB)



Note

Higher input frequencies (up to 1 MHz) are possible; in this case the accuracy of the PHA/TV display can not be guaranteed any more!

The maximum input frequency only specifies the voltage input of PWM 9 (signal source: frequency generator). In real operation with measuring systems the frequency response highly depends on the encoder model and on the cable length.

Encoder output (OUT)

Output signal	Like input signal
---------------	-------------------

Assignment of the BNC sockets

1 Vpp encoder, AB track

Signals on BNC socket A	A, B, A+B, R
Signals on BNC socket B	B, A, A+B, R
Signals on BNC socket C	R, \overline{UaS} , Up

1 Vpp encoder, CD track

Signals on BNC socket A	C, D, C+D, R
Signals on BNC socket B	D, C, C+D, R
Signals on BNC socket C	R, \overline{UaS} , Up

1 Vpp encoder with EnDat or SSI interface

Signals on BNC socket A	A, CLK+, DAT+, DAT
Signals on BNC socket B	B, CLK-, DAT+, DAT
Signals on BNC socket C	\overline{UaS} , Up, CLK-, CLK+

Measure current/voltage

Current range	0 – 500 mA
Voltage range	0 – 30 V
Tolerance	± 5 %

Measure signal amplitudes

Measuring range	0.2 V _{pp} – 1.6 V _{pp}
Measuring frequency Min. measuring frequency Max. measuring frequency –3 dB	10 Hz 100 kHz
Tolerance with software adjustment	± 3 % for measuring frequencies up to 20 kHz ± 10 % for measuring frequencies up to 50 kHz

Display of \overline{UaS} interference signal

Incremental signals A and B	< 0.3 V _{pp}
Response time of the interface board	t ₁ approx. 5 μs
Response time of PWM display	t ₂ > 1.2 μs
Minimum duration of interference to display /UaS	t > 6.2 μs (= t ₁ + t ₂)

Terminating resistor

Incremental signals A / B	121 Ω
Incremental signals C / D	1 kΩ



Note

The specified tolerances are valid within the calibration cycle.
(See "Calibration" on page 10.)

12.5 TTL interface board

Maximum input voltage

Maximum input voltage	± 7 V
-----------------------	-----------

Maximum input frequency

Maximum input frequency	Approx. 2 MHz
-------------------------	---------------



Note

The maximum input frequency only specifies the limit frequency of the PWM square-wave input (signal source: frequency generator).

Measure current/voltage

Current range	0 – 500 mA
Voltage range	0 – 10 V
Tolerance	± 3 %



Note

The specified tolerances are valid within the calibration cycle.
(See "Calibration" on page 10.)

Measure signal amplitudes

High-level measuring range	2.5 – 7.5 V
Low-level measuring range	0 – 2.5 V
Resolution	50 mV
Measuring frequency	10 Hz – 200 kHz
Tolerance	± 50 mV

Terminating resistor

From encoder signal to U-MSYS	215 Ω
From encoder signal to GND	90.9 Ω



Note

Special feature of TTL interface board

Owing to the input circuit, the PHA/TV display is fully operative even in the event of a cable breakage (e.g. Ua1). The missing signals are generated internally and entirely output at the encoder output. A cable breakage can be detected in the mode MEASURE SIGNAL AMPLITUDE or by checking the encoder signals at the BNC sockets.

12.6 HTL interface board

Maximum input voltage

Maximum input voltage	0 – 30 V
-----------------------	----------

Maximum input frequency

Maximum input frequency	Approx. 2 MHz
-------------------------	---------------



Note

The maximum input frequency only specifies the limit frequency of the PWM square-wave input (signal source: frequency generator).

Measure current/voltage

Current range	0 – 500 mA
Voltage range	0 – 30 V
Tolerance	± 5 %



Note

The specified tolerances are valid within the calibration cycle.
(See “Calibration” on page 10.)

Measure signal amplitudes

High-level measuring range	7.5 – 22.5 V
Low-level measuring range	0 – 7.5 V
Resolution	100 mV
Measuring frequency	10 Hz – 200 kHz
Tolerance	± 100 mV

Terminating resistor

From encoder signal to U-MSYS	1200 Ω
From encoder signal to GND	1200 Ω



Note

Special feature of HTL interface board

If the inverted encoder signals are missing at the encoder inputs, these signals are generated internally and output to the encoder output.

12.7 PWM power supply unit

Input voltage	100 – 240 V AC, 50 – 60 Hz
Output voltage	24 Vdc, 1.0 A
Protection class	1
Max. ambient temperature	40 °C

Required EMC standards

EN 61000-6-2

Immunity for industrial environments

In detail:

EN 61000-4-2	ES level 3
EN 61000-4-3	Radiation level 3
EN 61000-4-4	Burst level 3
EN 61000-4-5	Surge level 3
EN 61000-4-6	Radio frequency induction level 3

EN 55011 Class B

Noise suppression

13 Contacts

Your HEIDENHAIN helpline

The qualified, multilingual specialists of the **HEIDENHAIN helpline** in Traunreut support you in solving your problems.

Especially if you need **technical support** the HEIDENHAIN helpline team can provide detailed advice and information on measuring systems, controls, and NC and PLC programming.

The HEIDENHAIN technical helpline

Encoders/machine calibration
+49 8669 31-3104
E-mail: service.ms-support@heidenhain.de

NC programming
+49 (8669) 31-3103
E-mail: service.nc-pgm@heidenhain.de

NC support
+49 (8669) 31-3101
E-mail: service.nc-support@heidenhain.de

PLC programming TNC
+49 (8669) 31-3102
E-mail: service-plc@heidenhain.de

APP programming
+49 (8669) 31-3106
E-mail: service.app@heidenhain.de

The HEIDENHAIN helpline for repairs, spare parts, exchange units, complaints and service contracts

Team Germany
+49 (8669) 31-3121

Team "Foreign Countries"
+49 (8669) 31-3123

Complaint management, service contracts and calibration services
+49 (8669) 31-3135

E-mail: service.order@heidenhain.de

Technical training

+49 (8669) 31-3049, 31-1695
Fax: +49 (8669) 31-1999
E-mail: mtt@heidenhain.de

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 32-5061

E-mail: info@heidenhain.de

www.heidenhain.de

Vollständige und weitere Adressen siehe www.heidenhain.de
For complete and further addresses see www.heidenhain.de

DE	HEIDENHAIN Vertrieb Deutschland 83301 Traunreut, Deutschland ☎ 08669 31-3132 FAX 08669 32-3132 E-Mail: hd@heidenhain.de	ES	FARRESA ELECTRONICA S.A. 08028 Barcelona, Spain www.farresa.es	PH	MACHINEBANKS' CORPORATION Quezon City, Philippines 1113 E-mail: info@machinebanks.com
	HEIDENHAIN Technisches Büro Nord 12681 Berlin, Deutschland ☎ 030 54705-240	FI	HEIDENHAIN Scandinavia AB 01740 Vantaa, Finland www.heidenhain.fi	PL	APS 02-384 Warszawa, Poland www.heidenhain.pl
	HEIDENHAIN Technisches Büro Mitte 07751 Jena, Deutschland ☎ 03641 4728-250	FR	HEIDENHAIN FRANCE sarl 92310 Sèvres, France www.heidenhain.fr	PT	FARRESA ELECTRÓNICA, LDA. 4470 - 177 Maia, Portugal www.farresa.pt
	HEIDENHAIN Technisches Büro West 44379 Dortmund, Deutschland ☎ 0231 618083-0	GB	HEIDENHAIN (G.B.) Limited Burgess Hill RH15 9RD, United Kingdom www.heidenhain.co.uk	RO	HEIDENHAIN Reprezentantă Romania Braşov, 500407, Romania www.heidenhain.ro
	HEIDENHAIN Technisches Büro Südwest 70771 Leinfelden-Echterdingen, Deutschland ☎ 0711 993395-0	GR	MB Milionis Vassilis 17341 Athens, Greece www.heidenhain.gr	RS	Serbia → BG
	HEIDENHAIN Technisches Büro Südost 83301 Traunreut, Deutschland ☎ 08669 31-1345	HK	HEIDENHAIN LTD Kowloon, Hong Kong E-mail: sales@heidenhain.com.hk	RU	OOO HEIDENHAIN 115172 Moscow, Russia www.heidenhain.ru
		HR	Croatia → SL	SE	HEIDENHAIN Scandinavia AB 12739 Skärholmen, Sweden www.heidenhain.se
AR	NAKASE SRL. B1653AOX Villa Ballester, Argentina www.heidenhain.com.ar	HU	HEIDENHAIN Kereskedelmi Képviselet 1239 Budapest, Hungary www.heidenhain.hu	SG	HEIDENHAIN PACIFIC PTE LTD Singapore 408593 www.heidenhain.com.sg
AT	HEIDENHAIN Techn. Büro Österreich 83301 Traunreut, Germany www.heidenhain.de	ID	PT Servitama Era Toolsindo Jakarta 13930, Indonesia E-mail: ptset@group.gts.co.id	SK	KOPRETINA TN s.r.o. 91101 Trenčín, Slovakia www.kopretina.sk
AU	FCR MOTION TECHNOLOGY PTY LTD Laverton North Victoria 3026, Australia E-mail: sales@fcrmotion.com	IL	NEUMO VARGUS MARKETING LTD. Holon, 58859, Israel E-mail: neumo@neumo-vargus.co.il	SL	NAVO d.o.o. 2000 Maribor, Slovenia www.heidenhain.si
BE	HEIDENHAIN NV/SA 1760 Roosdaal, Belgium www.heidenhain.be	IN	HEIDENHAIN Optics & Electronics India Private Limited Chetpet, Chennai 600 031, India www.heidenhain.in	TH	HEIDENHAIN (THAILAND) LTD Bangkok 10250, Thailand www.heidenhain.co.th
BG	ESD Bulgaria Ltd. Sofia 1172, Bulgaria www.esd.bg	IT	HEIDENHAIN ITALIANA S.r.l. 20128 Milano, Italy www.heidenhain.it	TR	T&M Mühendislik San. ve Tic. LTD. ŞTİ. 34775 Y. Dudullu – Umraniye-Istanbul, Turkey www.heidenhain.com.tr
BR	HEIDENHAIN Brasil Ltda. 04763-070 – São Paulo – SP, Brazil www.heidenhain.com.br	JP	HEIDENHAIN K.K. Tokyo 102-0083, Japan www.heidenhain.co.jp	TW	HEIDENHAIN Co., Ltd. Taichung 40768, Taiwan R.O.C. www.heidenhain.com.tw
BY	GERTNER Service GmbH 220026 Minsk, Belarus www.heidenhain.by	KR	HEIDENHAIN Korea LTD. Gasan-Dong, Seoul, Korea 153-782 www.heidenhain.co.kr	UA	Gertner Service GmbH Büro Kiev 02094 Kiev, Ukraine www.heidenhain.ua
CA	HEIDENHAIN CORPORATION Mississauga, Ontario L5T2N2, Canada www.heidenhain.com	MX	HEIDENHAIN CORPORATION MEXICO 20290 Aguascalientes, AGS., Mexico E-mail: info@heidenhain.com	US	HEIDENHAIN CORPORATION Schaumburg, IL 60173-5337, USA www.heidenhain.com
CH	HEIDENHAIN (SCHWEIZ) AG 8603 Schwerzenbach, Switzerland www.heidenhain.ch	MY	ISOSERVE SDN. BHD. 43200 Balakong, Selangor E-mail: sales@isoserve.com.my	VE	Maquinaria Diekmann S.A. Caracas, 1040-A, Venezuela E-mail: purchase@diekmann.com.ve
CN	DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd. Beijing 101312, China www.heidenhain.com.cn	NL	HEIDENHAIN NEDERLAND B.V. 6716 BM Ede, Netherlands www.heidenhain.nl	VN	AMS Co. Ltd HCM City, Vietnam E-mail: davidgoh@amsvn.com
CZ	HEIDENHAIN s.r.o. 102 00 Praha 10, Czech Republic www.heidenhain.cz	NO	HEIDENHAIN Scandinavia AB 7300 Orkanger, Norway www.heidenhain.no	ZA	MAFEMA SALES SERVICES C.C. Midrand 1685, South Africa www.heidenhain.co.za
DK	TPTEKNIK A/S 2670 Greve, Denmark www.tp-gruppen.dk	NZ	Llama ENGINEERING Ltd 5012 Wellington, New Zealand E-mail: info@llamaengineering.co.nz		

