

Safety Information

IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.





When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.




This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

Grounding the Pump

To be fully groundable, the pumps must be ATEX Compliant. Refer to the nomenclature page for ordering information.

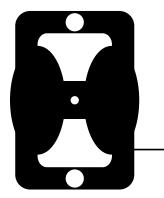

Optional 8 foot long (244 centimeters) Ground Strap is available for easy ground connection.

To reduce the risk of static electrical sparking, this pump must be grounded. Check the local electrical code for detailed grounding instruction and the type of equipment required.

Refer to nomenclature page for ordering information.



WARNING



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded.



WWW.VERSAMATIC.COM

Table of Contents

SECTION 1: PUMP SPECIFICATIONS......1

- Nomenclature
- Performance
- Materials
- Dimensional Drawings

SECTION 2: INSTALLATION & OPERATION.....6

- Principle of Pump Operation
- Typical Installation Guide
- Troubleshooting

SECTION 3: EXPLODED VIEW......9

- Composite Drawings
- Parts List
- Materials Code

SECTION 4: WARRANTY & CERTIFICATES13


- Warranty
- CE Declaration of Conformity Machinery
- ATEX Declaration of Conformity





Explanation of Pump Nomenclature

Your Serial #: (fill in from pump nameplate)

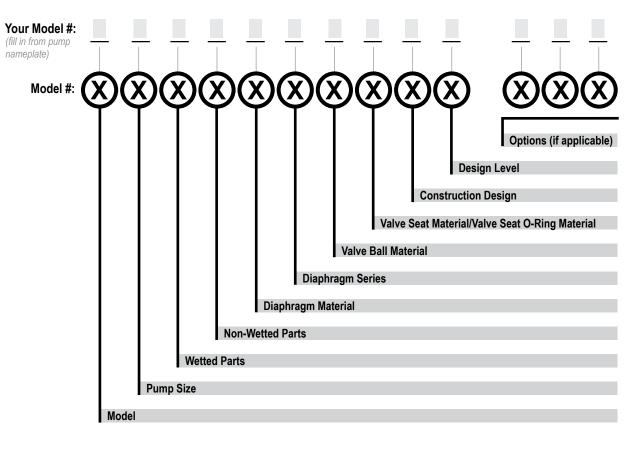

Model	Pump Size	Wetted Parts	Non-Wetted Parts	Diaphragm Material
E Elima-Matic	6 1/4"	A Aluminum	A Aluminum	1 Neoprene
U Ultra-Matic	8 3/8"	C Cast Iron	Stainless Steel	2 Nitrile (Nitrile)
V V-Series	5 1/2"	S Stainless Steel	P Polypropylene	3 FKM (Fluorocarbon)
RE AirVantage	7 3/4"	H Alloy C	G Groundable Acetal	4 EPDŇ
Ū	1 1"	P Polypropylene	Z PTFE-coated Aluminum	5 PTFE
	4 1-1/4" or 1-1/2"	K Kynar	J Nickel-plated Aluminum	6 Santoprene XL
	2 2"	G Groundable Acetal	C Cast Iron	7 Hytrel
	3 3"	B Aluminum (screen mount)	Q Epoxy-Coated Aluminum	9 Geolast
		х <i>г</i>		Y FDA Santoprene
Diaphragm Series	Valve Ball Material Valve	Seat/Valve Seat O-Ring Material	Construction Design	Miscellaneous Options
R Rugged	1 Neoprene	1 Neoprene	9 Bolted	B BSP Tapered Thread
D Dome	2 Nitrile	2 Nitrile	0 Clamped	CP Center Port
X Thermo-Matic	3 (EKM) Eluorocarbon	3 (FKM) Eluorocarbon	·	ATEX ATEX Compliant

red Thread ort ATEX ATEX Compliant FP Food Processing SP Sanitary Pump HP High Pressure **OE** Original Elima-Matic F Flap Valve HD Horizontal Discharge 3A 3-A Certified UL UL Listed **OB** Oil Bottle



1: PUMP SPECS

X I hermo-Matic T Tef-Matic (2-piece) B Versa-Tuff (1-piece) F FUSION (one-piece integrated plate)

(FKM) Fluorocarbon (FKM) Fluorocarbon 4 EPDM 4 EPDM Design Level 5 PTFE 5 PTFE Α С 6 Santoprene XL 6 Santoprene XL 7 Hytrel 7 Hytrel 8 Polyurethane 8 Polyurethane 9 Geolast 9 Geolast A Acetal A Aluminum w/ PTFE O-Rings S Stainless Steel S Stainless Steel w/ PTFE O-Rings Y FDA Santoprene C Carbon Steel w/ PTFE O-Rings H Alloy C w/ PTFE O-Rings T PTFE Encapsulated Silicone O-Rings

Y FDA Santoprene

*More than one option may be specified for a particular pump model.



Materials

Material Profile:		rating ratures:	Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
CAUTION! Operating temperature limitations are as follows: Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with	Max. 190°F 88°C	Min. -20°F -29°C	PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
good chemical resistance except for strong acids and oxidizing agents. EPDM: Shows very good water and chemical resistance. Has	280°F 138°C	-40°F	Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance. 275°H 135°C UHMW PE: A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance. 180°F 82°C Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils. 150°F 66°C		-40°F -40°C
poor resistance to oils and solvents, but is fair in ketones and alcohols. FKM: (Fluorocarbon) Shows good resistance to a wide range	350°F	-40°C			-35°F -37°C
of oils and sovents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM.	177°C	-40°C			32°F 0°C
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C	Prec Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures. 104°C Maximum and Minimum Temperatures are the limits for which these materials can be or Temperatures coupled with pressure affect the longevity of diaphragm pump componen Maximum life should not be expected at the extreme limits of the temperature ranges. Metals:		-35°F -37°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic	200°F 93°C	-10°F -23°C			
hydrocarbons. Nitrile: General purpose, oil-resistant. Shows good solvent, oil,	190°F	-10°F			nents.
water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated	88°C	-23°C			,
hydrocarbons and nitro hydrocarbons. Nylon: 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C	Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and Stainless Steel: Equal to or exceeding ASTM specification A743 (resistant iron chromium, iron chromium nickel and nickel based all general applications. Commonly referred to as 316 Stainless Stee	CF-8M for co oy castings	orrosion for

For specific applications, always consult the Chemical Resistance Chart.

1: PUMP SPECS

AFTERMARKET PARTS

RIGHT PART, RIGHT NOW

Pumper Parts is your single source for parts that fit Air-Operated Double Diaphragm (AODD) pumps

- Wilden®
- ARO®
- Yamada®

Designed to perform equal to or greater than original equipment manufacture.



Phone: (419) 526-7296 info@pumperparts.com www.pumperparts.com

Pumper Parts and its products are not affilialed with any of the original equipment manufacturers referenced herein. All original equipment manufacturers' names, colors, pictures, descriptions and part numbers are used for identification purposes only. Pumper Parts[®] is a registered trade name of IDEX Corporation. All other trademarks, registered trademarks and product names are the property of their respective owners. Yamada[®] is a registered trademark of Yamada Corporation. ARO[®] is a registered trade name of Ingersoll-Rand Company. Wilden[®] is a registered trade name of Wilden Pump and Engineering Company, a Dover Resources Company.




Performance

E2 - 2" Bolted Aluminum Pump – Metallic Center ELASTOMERIC AND TPE FITTED - RUGGED

Flow	Rate
------	------


Adjustable to 0-163 gpm (617 lpm)
Port Size
Suction
Discharge
Air Inlet
Air Exhaust
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
Max Noise Level
Shipping Weights
Aluminum

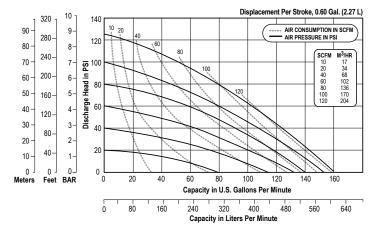

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

E2 - 2" Bolted Aluminum Pump – Metallic Center ELASTOMERIC AND TPE FITTED - DOMED


Flow Rate Adjustable to 0-154 gpm (583 lpm) Port Size
Suction
Discharge 2" NPTF
Air Inlet
Air Exhaust 1" NPT
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
Max Noise Level
Aluminum

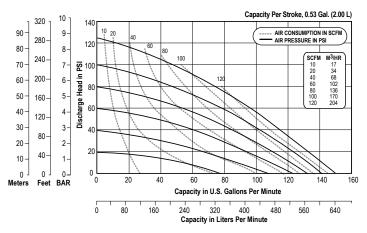

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

E2 - 2" Bolted Aluminum Pump – Metallic Center PTFE FITTED

Flow Rate Adjustable to 0-143 gpm (541 lpm) Port Size
Suction
Air Inlet
Dry
Max Solid Size (Diameter)
Max Noise Level

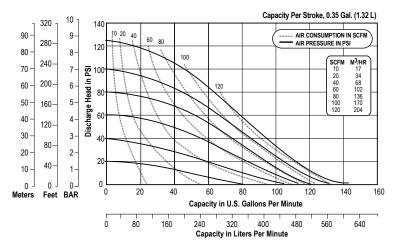


NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.




Dimensional Drawings

E2 Aluminum Bolted Dimensionally Interchangeable with Versa-Matic Clamped Pumps

Dimensions in inches (mm dimensions in brackets) The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

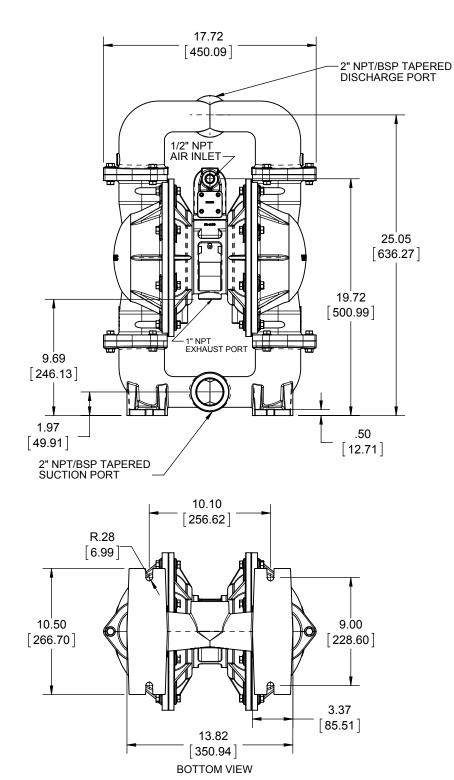

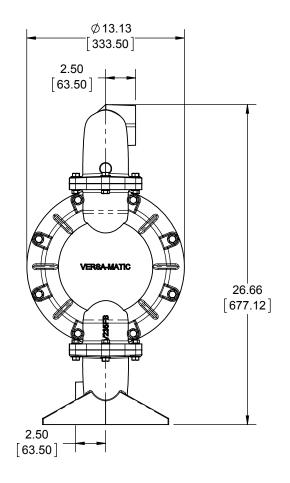

1: PUMP SPECS




Dimensional Drawings


E2 Aluminum Bolted


Dimensionally Interchangeable with Wilden Clamped Pumps

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

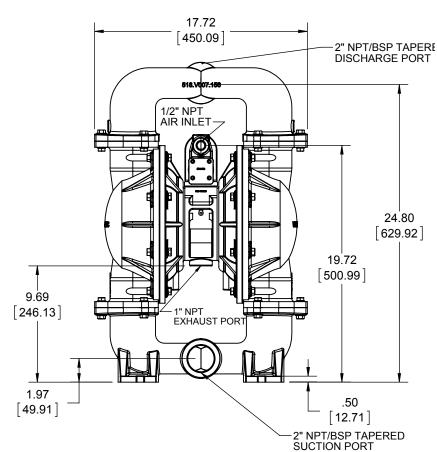


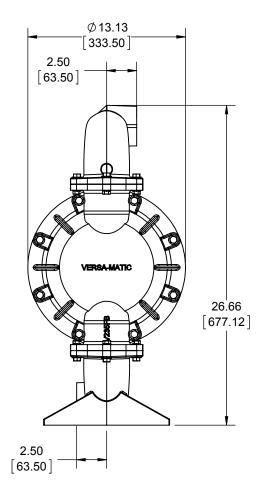

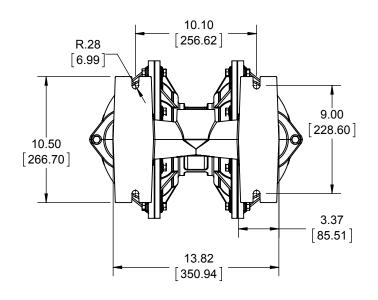



Principle of Pump Operation

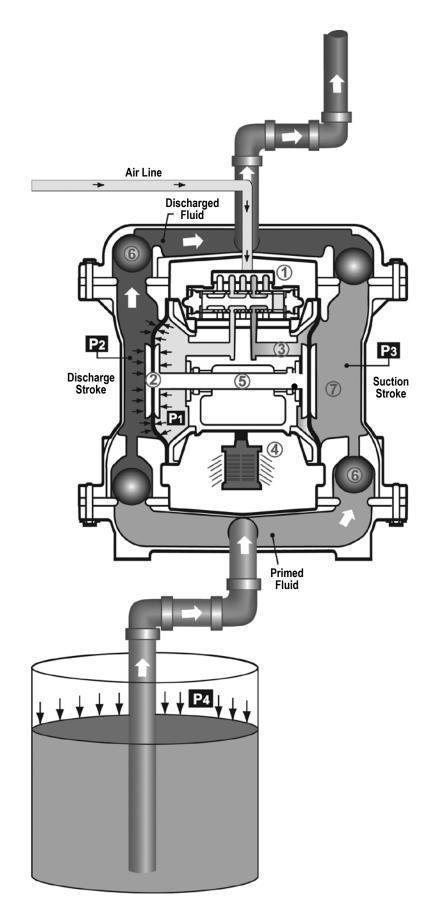


VERSA-MATIC[®] e2mdlCsmATEXAB-rev0514 Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.

The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure (P1) exceeds liquid chamber pressure (P2), the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure (P3) increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure (P4) to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber \bigcirc .


Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

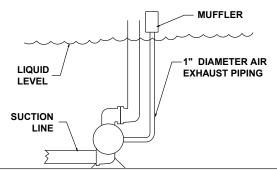

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.

SUBMERGED ILLUSTRATION

Recommended Installation Guide

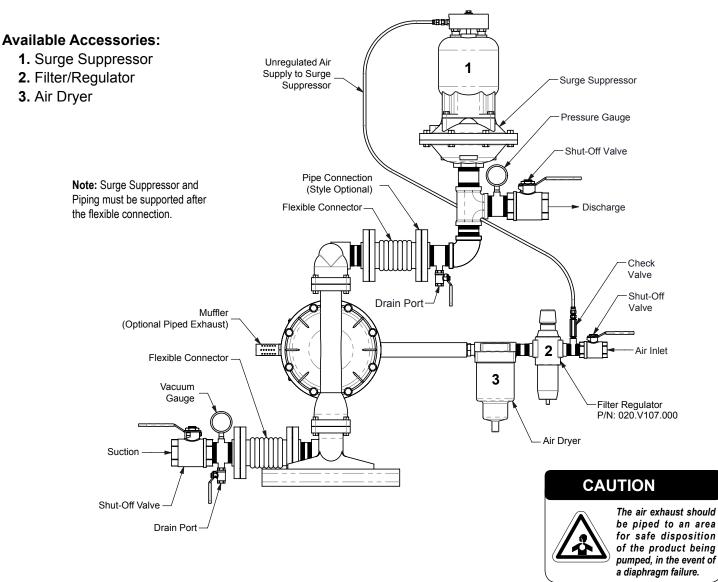

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.




Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):	
Pump Cycles Once	Deadhead (system pressure meets or exceeds air	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow.	
	supply pressure).	(Does not apply to high pressure 2:1 units).	
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.	
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.	
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.	
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).	
•	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.	
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.	
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).	
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.	
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.	
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.	
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).	
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.	
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.	
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.	
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.	
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.	
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.	
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.	
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.	
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.	
Sluggish/Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.	
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow	
The offsatisfactory	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).	
	Cavitation on suction side.	Check suction (move pump closer to product).	
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.	
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.	
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.	
	Undersized suction line.	Meet or exceed pump connections.	
	Restrictive or undersized air line.	Install a larger air line and connection.	
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.	
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.	
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.	
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.	
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.	
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.	
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.	
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.	
Premature Diaphragm	Cavitation.	Enlarge pipe diameter on suction side of pump.	
Failure	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.	
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.	
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.	
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.	
, ,	Undersized suction line.	Meet or exceed pump connections.	
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.	
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.	
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.	
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.	
	offect valve and/of seat is worth of fleeds adjusting.	inopolit chock various and boats for moar and proper botting. Replace in housedary.	

For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388



Composite Repair Parts Drawing - Elastomeric and TPE Fitted

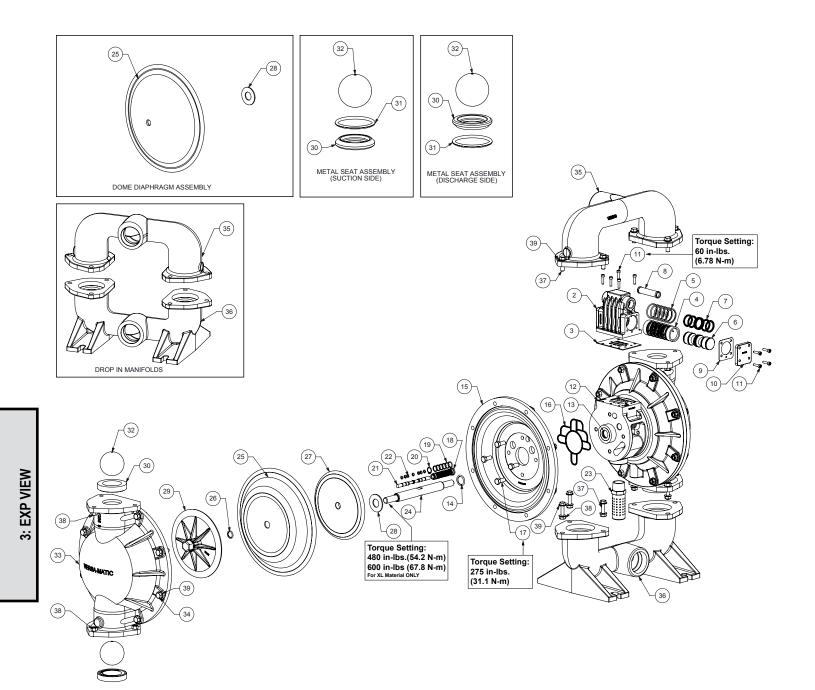



9 • Model E2 Aluminum Bolted

Composite Repair Parts List - Elastomeric and TPE Fitted


	-	-				
Item #	Qty.	Description	Air Valve Assembly	Dorth	lumber	
1 1 1		Valve Body Assembly (includes items 2-11)			02.156	
2		Valve Body Assembly (includes items 2-11) Valve Body			001.156	
3		Valve Body Gasket		P24	-202	
4	1	Valve Sleeve			006.148	
5	6	O-ring			06.360	
6	1	Valve Spool Assembly (Includes items 7)			001.000	
7	6	Glyde Ring Assembly		<u>P34</u>	-204F	
8		Air Valve Screen			-210	
<u>9</u> 10	2	End Cap Gasket End Cap			- <u>205</u> -300	
10	13	Mounting Screws (8 included on item 1)			001	
	1 15		enter Section Assemb		001	
Item #	Qty.	Description		Part N	lumber	
12	1	Center Block Assembly (Includes item 13 & 14)			DC ASY	
13	2	Bearing sleeve			-403	
14	2	Main Shaft O-Ring			-403	
15	2	Air Chamber		<u>196.V</u>	004.156	
16	2	Air Chamber Gasket			-109	
17	8	Bolt Bilat Clasus Assembly (include item 10)			-110	
<u>18</u> 19	6	Pilot Sleeve Assembly (include item 19) O-ring			002.000 01.358	
20	1	Retaining Ring			37.080	
21		Pilot Spool Assembly (Includes item 22)			02.000	
22	8	O-ring		560.0	23.358	
23	1	Muffler			33.000	
		Diaph	ragm Assembly / Elast	tomers		
Item #	Qty.	Description			lumber	
	Quy.	•	Versa-F	Rugged	Versa-	Dome
24		Main Shaft		P24	-103	-
25 26	2	Diaphragm (See Below Material Chart)		24xx 21D	V22	<u>5xx</u> /A
20	2	O-ring Inner Diaphragm Plate		21D 21B	V22	
28	2	Bumper Washer	V 22		-501	00
29	2	Outer Diaphragm Plate	VB	221	VB2	226
30	4	Valve Seat (See Below Material Chart)			10xx	
31	4	Valve Seat O-Ring (See Below Material Chart)		(See I	Note 2)	
32	4	Valve Ball (See Below Material Chart)		V24	41xx	
14 11			Wet End Assembly			
Item #	Qty.	Description			lumber	
<u>33</u> 34	2 16	Water Chamber Water Chamber Bolt			35FB 20.330	
- 54	10	Discharge Manifold			36FB	
		Discharge Manifold (BSP Option)		V236	BBSP	
25		Discharge Drop in Manifold			006.156	
35	1	Discharge Drop in Manifold (BSP)		518.V0	06.156 E	
		WD Discharge Drop in Manifold			06.156 W	
		WD Discharge Drop in Manifold (BSP)			6.156 WE	
		Suction Manifold			37FB	
36	1	Suction Manifold (BSP Option)			FBBSP	
		Suction Drop in Manifold			07.156	
37	12	Suction Drop in Manifold (BSP) Manifold Bolt			<u>07.156 E</u> 51D	
38	28	Nut			54C	
39	28	Washer			040 02GA	
		Elasto	omer Material Specific	ations		
Mate	orial	Versa-Rugged Diaphragm P/N	Versa-Dome	"Ball P/N"	Seat P/N	Seat O-Ring
			Diaphragm P/N			•
Neop		V224N	V225N	V241N	V240N	N/A
	rile	V224BN	V225BN	V241BN	V240BN	N/A
FK		V224VT	V225VT	V241VT	V240VT	N/A
EPI PTI		V224ND N/A	V225ND N/A	V241ND V241TF	V240ND V240TF	N/A V240T
Santo		V224TPEXL	V225TPEXL	V241TPEXL	V240TPEXL	N/A
Hyt		V224TPEFG	V225TPEFG	V241TPEFG	V240TPEFG	N/A
Geo		V224G	N/A	V241G	V240G	N/A
		N/A			V240A	
Alumi		IN/A	N/A	N/A	(See Note 1 Below)	N/A
-						

Notes:

1.) The metallic seat material is to match the water chamber material. In addition to this seat, (4) o-rings are needed. (Ref Note 2) 2.) These (4) o-rings are only used with metallic fitted seats.



Composite Repair Parts Drawing - PTFE Fitted

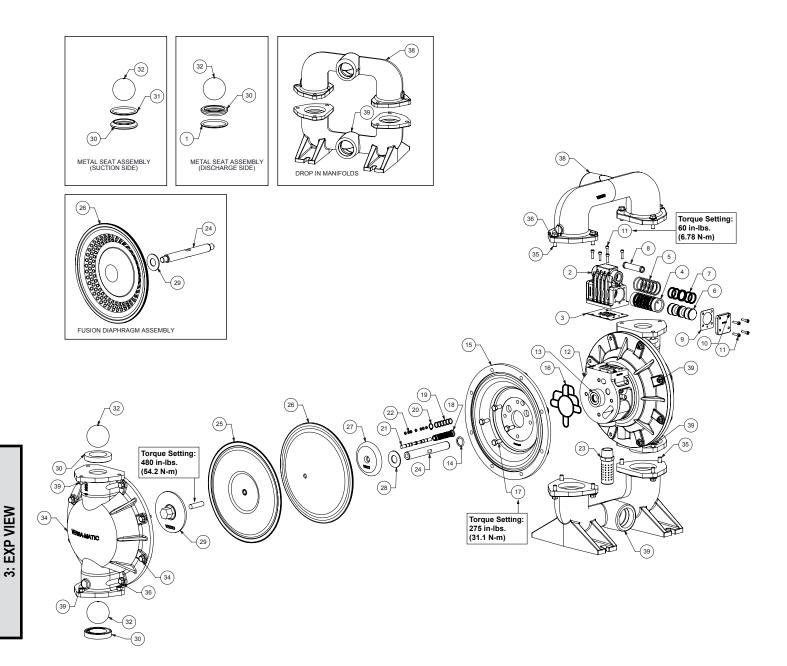



Composite Repair Parts List - PTFE Fitted

14 11	0		Air Valve Assembly	
Item #	Qty.	Description	Part Nu	
1	1	Valve Body (includes items 2-11)	031.V0	
2	1	Valve Body	095.00	U1.156
3	1	Valve Body Gasket	P24-202	
4	1	Valve Sleeve	755.V006.148	
5	6	O-ring	560.206.360	
6	1	Valve Spool Assembly (Includes items 7)	775.V001.000 P34-204F	
/	6	Glyde Ring Assembly	P34-2	204F
8	1	Air Valve Screen	P24-	210
9	2	End Cap Gasket	P24-	205
10	2	End Cap	P34-	
11	13	Mounting Screws (8 included on item 1)	S10	01
			enter Section Assembly	
Item #	Qty.	Description	Part Nu	
12	1	Center Block Assembly (Includes item 13 & 14)	P24-400	
13	2	Bearing Sleeve	P31-	
14	2	Main Shaft O-Ring	P24-	
15	2	Air Chamber	196.V00	
16	2	Air Chamber Gasket	360.V0	U1.465
17	8	Bolt	P24-	110
18	1	Pilot Sleeve Assembly (include item 19)	755.V0	
19	6	<u>O-ring</u>	<u>560.10</u>	
20	1	Retaining Ring	675.03	
21	1	Pilot Spool Assembly (Includes item 22)	775.V0	02.000
22	8	O-ring	560.02	3.358
23	1	Muffler	530.03	3.000
		Diaphr	agm Assembly / Elastomers	
Item #	Qty.	Description	Part Nu	
04	4	·	PTFE Two Piece P24-102	Fusion
24		Main Shaft	P24-102	P24-103F
	2	Chaft Chud		NI/A
25	2	Shaft Stud	V221F	N/A
26	2	Diaphragm	V221F V224TF-FB	V224F
26 27	2	Diaphragm Back Up Diaphragm	V221F V224TF-FB V224TFB	V224F N/A
26 27 28	2 2 2 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate	V221F V224TF-FB V224TFB V221TI	V224F N/A N/A
26 27 28 29	2 2 2 2 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer	V221F V224TF-FB V224TFB V221TI P24-	V224F N/A N/A 501
26 27 28 29 30	2 2 2 2 2 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate	V221F V224TF-FB V224TFB V221TI P24- V221TO	V224F N/A N/A 501 N/A
26 27 28 29 30 31	2 2 2 2 2 2 4	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below)	V221F V224TF-FB V224TFB V221TI P24- V221TO V221TO V24	V224F N/A N/A 501 N/A 0xx
26 27 28 29 30 31 32	2 2 2 2 2 4 4	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring	V221F V224TF-FB V224TFB V221TI P24- V221TO V221TO V24 V240T (Se	V224F N/A N/A 501 0xx Pe Note 1)
26 27 28 29 30 31	2 2 2 2 2 2 4	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below)	V221F V224TF-FB V224TFB V221TI P24- V221TO V221TO V24 V24T (Se V24	V224F N/A N/A 501 0xx Pe Note 1)
26 27 28 29 30 31 32 33	2 2 2 2 4 4 4	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball	V221F V224TF-FB V224TFB V224TFB V221TI P24- V221TO V24 V221TO V24 V240T (Se V24' Wet End Assembly	V224F N/A 501 0xx e Note 1) 1TF
26 27 28 29 30 31 32 33 Item #	2 2 2 2 4 4 4 4 Qty.	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description	V221F V224TF-FB V224TFB V224TFB V221TI P24- V221TO V24 V221TO V24 V240T (Se V24' Wet End Assembly Part No	V224F N/A N/A 501 0xx 0xx ve Note 1) 1TF umber
26 27 28 29 30 31 32 33 Item # 34	2 2 2 2 4 4 4 2 Qty. 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber	V221F V224TF-FB V224TFB V224TFB V221TI P24- V221TO V24 V240T (Se V240T (Se V24 Wet End Assembly Part Nu V235	V224F N/A N/A 501 0xx 0xx 0xx 0xx 0xx 0xx 0xx 0xx 0xx 0
26 27 28 29 30 31 32 33 Item #	2 2 2 2 4 4 4 4 Qty.	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V240 V240T (Se V240T (Se)V240T (Se V240T (Se)V240T	V224F N/A N/A 501 0xx ee Note 1) 1TF umber 5FB 0.330
26 27 28 29 30 31 32 33 Item # 34	2 2 2 2 4 4 4 2 Qty. 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Discharge Manifold	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V240T (Se V240T (Se V24 Wet End Assembly Part No V23 170.02 V236	V224F N/A N/A 501 0xx ie Note 1) 1TF Jimber 5FB 0.330 5FB
26 27 28 29 30 31 32 33 1tem # 34 35	2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Water Chamber Discharge Manifold Discharge Manifold (BSP Option)	V221F V224TF-FB V224TFB V221TI P24- V221TO V221TO V24 V240T (Se V24 Wet End Assembly Part Nu V233 170.02 V236 V236 V236 V236 V236	V224F N/A N/A 501 N/A 0xx e Note 1) 1TF Jimber 5FB 0.330 5FB 0.330 5FB BBSP
26 27 28 29 30 31 32 33 Item # 34	2 2 2 2 4 4 4 2 Qty. 2	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Discharge Manifold Discharge Manifold Discharge Manifold Discharge Manifold	V221F V224TF-FB V224TFB V221TI P24- V221TO V24 V24T (Se V244 Wet End Assembly V233 170.02 V236 170.02 V236 518.V00	V224F N/A N/A 501 N/A 0xx e Note 1) 1TF Jimber 5FB 0.330 5FB BBSP 06.156
26 27 28 29 30 31 32 33 1tem # 34 35	2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold (BSP)	V221F V224TF-FB V224TFB V221TI P24- V221TO V24T V240T (Se V247 Wet End Assembly V233 170.02 V236 170.02 V236F V236F S18.V00	V224F N/A N/A 501 N/A 0xx e Note 1) 1TF umber 5FB 0.330 5FB BBSP 06.156 6.156 6.156 E
26 27 28 29 30 31 32 33 1tem # 34 35	2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Unner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold	V221F V224TF-FB V224TFB V221TI P24- V221TO V24T V240T (Se V247 Wet End Assembly V248 V247 Wet End Assembly V238 170.02 V238 V238 V238 V238 V238 V238 V238 V23	V224F N/A N/A 501 N/A 0xx e Note 1) 1TF JITF JITF JITF JITF JITF JITF JITF JI
26 27 28 29 30 31 32 33 1tem # 34 35	2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Outer Diaphragm Plate Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V221TO V24 V240T (Se V247 Wet End Assembly V236 170.02 V236 170.02 V236 S18.V00 518.V00	V224F N/A N/A 501 N/A 501 N/A 0xx ve Note 1) 1TF umber 5FB 0.330 5FB 0.330 3FB BBSP 06.156 6.156 6.156 5.1
26 27 28 29 30 31 32 33 Item # 34 35 36	2 2 2 2 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V221TO V24 V240T (Se V24 V240T (Se V24 V240T (Se V24 V23 V23 V23 170.02 V23 170.02 V23 518.V00 518.V00 518.V00 518.V00	V224F N/A N/A 501 N/A 501 0xx e Note 1) 1TF umber 5FB 0.330 5FB 0.330 5FB 0.330 5FB 0.6.156 6.156 6.156 6.156 6.156 6.156 6.156 5.156 W 6.156 E
26 27 28 29 30 31 32 33 1tem # 34 35	2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold (BSP)	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V240T (Se V240T (Se V240T V240T (Se V240T V240T (Se V240T (Se V236F S18.V00 S1	V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx Pe Note 1) 1TF Imber 55FB 0.330 55FB 0.330 55FB 0.330 55FB 0.56 6.156 E 5.156 W 6.156 E 5.156 W 6.156 E 77B BBSP
26 27 28 29 30 31 32 33 Item # 34 35 36	2 2 2 2 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold (BSP) WD Discharge Drop in Manifold (BSP) Suction Manifold (BSP) Suction Manifold Suction Manifold Suction Manifold	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V240T (Se V240T (Se V240T (Se V240T (Se V240T (Se V235 170.02 V235 170.02 V236 518.V00 518.V	V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx De Note 1) 1TF Imber 5FB 0.330 5FB 0.330 5FB 0.330 5FB 0.330 5FB 0.330 5FB 0.56 6.156 E 5.156 W 6.156 E 7FB BBSP 07.156
26 27 28 29 30 31 32 33 item # 34 35 36 36	2 2 2 2 4 4 4 4 4 2 16	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold (BSP) WD Discharge Drop in Manifold (BSP) Suction Manifold (BSP) Suction Manifold Suction Drop in Manifold	V221F V224TF-FB V224TFB V224TFB V221TI V221TO V24 V240T (Se V240T (Se V240T (Se V240T (Se V240T (Se V240T (Se V235 170.02 V235 170.02 V236 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00	V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx Discrete SFB 0.330 SFB BBSP 06.156 6.156 5.156 W 6.156 E 5.156 W 6.156 E 7.156 E 7.156 E
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 38	2 2 2 2 4 4 4 4 2 16 1 1 1	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Uater Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold Suction Drop in Manifold Suctin Drop in Manifold Suction Drop in Manifold Suction	V221F V224TF-FB V224TFB V221T0 P24- V221T0 V221T0 V24TFB V221T0 V24 Wet End Assembly Part Nu V236 170.02 18.V00 518.V00 V237F 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00 518.V00	V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx 0 05FB 0.330 0 05FB 0.156 0.15
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 37 38 39	2 2 2 2 4 4 4 4 4 4 1 1 1 1 2 2 8	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold (BSP) WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Drop in Manifold Manifold Bolt Nut	V221F V224TF-FB V224TFB V221T0 P24- V221TO V221TO V24TE V221TO V24 Wet End Assembly Part No V236 170.02 V236 170.02 V236 170.02 V236 170.02 V236 170.02 V236 V237 V236 518.V00	V224F N/A N/A 501 0xx is Note 1) ITF Jmber JFB 0.330 SFB BSSP 06.156 6.156 E 5.156 W 6.156 E 77.156 77.156 E 1D 4C
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 38	2 2 2 2 4 4 4 4 2 16 1 1 1	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Drop in Manifold Suction Drop in Manifold (BSP) Manifold Bolt Nut Washer	V221F V224TF-FB V224TFB V221TI P24- V221TO V24T V240T (Se V247 Wet End Assembly V247 Wet End Assembly V233 170.02 V233 170.02 V235 170.02 V235 170.02 V235 170.02 V235 170.02 V235 170.02 V235 V235 V235 V235 V235 V235 V235 V23	V224F N/A N/A 501 0xx is Note 1) ITF Jmber JFB 0.330 SFB BSSP 06.156 6.156 E 5.156 W 6.156 E 77.156 77.156 E 1D 4C
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 37 38 39	2 2 2 2 4 4 4 4 4 4 1 1 1 1 2 2 8	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Mut Washer	V221F V224TF-FB V224TFB V221T0 P24- V221T0 V221T0 V24TFB V221T0 V24 V24TFB V221T0 V24 V240T (Se V247 Wet End Assembly Part Na V233 170.02 V236 170.02 V236 170.02 V237 V238 170.02 V236 V237 V236 V305 V302 V237 V237 </td <td>V224F N/A 501 interministry i</td>	V224F N/A 501 interministry i
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 37 38 39	2 2 2 2 4 4 4 4 4 4 1 1 1 1 2 2 8	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Manifold Bolt Nut Washer	V221F V224TF-FB V224TFB V221TI P24- V221TO V221TO V24TFB V221TO V24T V221TO V24T V233 V236F 518.V00 518.V00 V237F 518.V00 <td< td=""><td>V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx Pre Note 1) 1TF umber 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.56 6.156 6.156 6.156 6.156 6.156 5.156 0.316 0.156 5.156 0.316 0.156 5.156 0.3156 0.156 5.156 0.320 0.320</td></td<>	V224F N/A N/A 501 N/A 501 N/A 551 N/A 0xx Pre Note 1) 1TF umber 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.330 57B 0.56 6.156 6.156 6.156 6.156 6.156 5.156 0.316 0.156 5.156 0.316 0.156 5.156 0.3156 0.156 5.156 0.320 0.320
26 27 28 29 30 31 32 33 Item # 34 35 36 36 37 37 38 39	2 2 2 2 4 4 4 4 4 4 1 1 1 1 2 2 8	Diaphragm Back Up Diaphragm Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Mut Washer	V221F V224TF-FB V224TFB V221T0 P24- V221T0 V221T0 V24TFB V221T0 V24 V24TFB V221T0 V24 V240T (Se V247 Wet End Assembly Part Na V233 170.02 V236 170.02 V236 170.02 V237 V238 170.02 V236 V237 V236 V305 V302 V237 V237 </td <td>V224F N/A 501 ITF Imber 5FB 0.330 5FB 06.156 6.156 6.156 6.156 6.156 5.156 7FB BBSP 07.156 7.156 7.156 10 4C 2CA P/N lote 2 Below)</td>	V224F N/A 501 ITF Imber 5FB 0.330 5FB 06.156 6.156 6.156 6.156 6.156 5.156 7FB BBSP 07.156 7.156 7.156 10 4C 2CA P/N lote 2 Below)

Notes:

1.) These (4) o-rings are only used with metallic fitted seats.

2.) This metallic seat requires (4) V240T O-Rings.



Written Warranty

5 - YEAR Limited Product Warranty

Quality System ISO9001 Certified • Environmental Management Systems ISO14001 Certified

Versa-Matic warrants to the original end-use purchaser that no product sold by Versa-Matic that bears a Versa-Matic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versa-Matic's factory.

~ See complete warranty at http://www.versamatic.com/pdfs/VM%20Product%20Warranty.pdf ~

DECLARATION OF CONFORMITY

DECLARATION DE CONFORMITE • DECLARACION DE CONFORMIDAD • ERKLÄRUNG BEZÜGLICH EINHALTUNG DER VORSCHRIFTEN DICHIARAZIONE DI CONFORMITÀ • CONFORMITEITSVERKLARING • DEKLARATION OM ÖVERENSSTÄMMELSE EF-OVERENSSTEMMELSESERKLÆRING • VAATIMUSTENMUKAISUUSVAKUUTUS • SAMSVARSERKLÄRING DECLARACAO DE CONFORMIDADE

MANUFACTURED BY:

FABRIQUE PAR: FABRICADA POR: HERGESTELLT VON: FABBRICATO DA: VERVAARDIGD DOOR: TILLVERKAD AV: FABRIKANT: VALMISTAJA: PRODUSENT: FABRICANTE VERSA-MATIC® Warren Rupp, Inc. A Unit of IDEX Corporation 800 North Main Street P.O. Box 1568 Mansfield, OH 44901-1568 USA

Tel: 419-526-7296 Fax: 419-526-7289



PUMP MODEL SERIES: E SERIES, V SERIES, VT SERIES, VSMA3, SPA15, RE SERIES AND U2 SERIES

This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes: Este producto cumple con las siguientes Directrices de la Comunidad Europea: Dieses produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft: Questo prodotto è conforme alle seguenti direttive CEE: Dir produkt voldoet aan de volgende EG-richtlijnen: Denna produkt överensstämmer med följande EU direktiv:

Versa-Matic, Inc., erklærer herved som fabrikant, at ovennævnte produkt er i overensstemmelse med bestemmelserne i Direkktive:

Tämä tuote täyttää seuraavien EC Direktiivien vaatimukstet:

Dette produkt oppfyller kravene til følgende EC Direktiver:

Este produto está de acordo com as seguintes Directivas comunitárias:

This product has used the following harmonized standards to verify conformance:

Ce materiel est fabriqué selon les normes harmonisées suivantes, afin d' en garantir la conformité:

Este producto cumple con las siquientes directrices de la comunidad europa:

Dieses produkt ist nach folgenden harmonisierten standards gefertigtworden, die übereinstimmung wird bestätigt:

Questo prodotto ha utilizzato i seguenti standards per verificare la conformita':

De volgende geharmoniseerde normen werden gehanteerd om de conformiteit van dit produkt te garanderen:

För denna produkt har följande harmoniserande standarder använts för att bekräfta överensstämmelse:

Harmoniserede standarder, der er benyttet:

Tässä tuotteessa on sovellettu seuraavia yhdenmukaistettuja standardeja:

Dette produkt er produsert i overenstemmelse med fløgende harmoniserte standarder:

Este produto utilizou os seguintes padrões harmonizados para varificar conformidade:

AUTHORIZED/APPROVED BY:

Approuve par: Aprobado por: Genehmigt von: approvato da: Goedgekeurd door: Underskrift: Valtuutettuna: Bemyndiget av: Autorizado Por:

04/19/2012 REV 07



Dave Roseberry Engineering Manager

DATE: August 10, 2011 FECHA: DATUM:

DATA:

DATO:

PÄIVÄYS:

VMQR 044FM

2006/42/EC

EN809:1998+

A1:2009

on Machinery, according to Annex VIII

EC DECLARATION OF CONFORMITY

in accordance with ANNEX VIII of Directive 94/9/EC - Equipment for use in Potentially Explosive Atmospheres

Date of Issue:	10 May 2014
Technical File No.:	203104000-1410/MER
Quality System Registration No:	ISO 9001-2000
Directive:	94/9/EC 23 March 1994 Annex VIII
Conforming Apparatus:	Air-Operated Metal Double Diaphragm Pumps for Use In Potentially Explosive Atmospheres
Hazardous Location Applied:	 II 3/2GD c T5* T5 fluids up to 95° C * When pumping non-conductive fluids the internal surfaces that contact the fluid are restricted to Ex II 3GD c T5. The external surfaces of the pump are still Ex II 2GD c T5.
	2. I M2 c fluids up to 95° C
	Pumps marked with equipment Category II 3/2 G (internal 3 G / external 2 G), 2D, when used with non-conductive fluids. The pumps are Category II 2 G when used for conductive fluids.
Manufacture:	Warren Rupp, Inc., A Unit of IDEX Corporation 800 North Main Street, P.O. Box 1568 Mansfield, OH 44901-1568 USA.
On File With:	DEKRA Certification B.V. (0344) Meander 1051 6825 MJ Arnhem The Netherlands
Harmonized Standards Applied:	EN 13463-1:2009 Non-Electrical Equipment Potentially Explosive Atmospheres-Part 1 Basic Methods and Requirements EN 13463-5:2011 Non-Electrical Equipment for Potentially Explosive Atmospheres-Part 5 Protection by Constructional Safety
Equipments:	 Elima-Matic Series metal pumps for II 3/2GD c T5 Elima-Matic Series Cast Iron or Stainless Steel pumps with Stainless Steel air center sections for I M2 c

We hereby certify that the equipment described above conforms with the protection requirements of Council Directive 94/9/EC of 23 March 1994 Annex VIII on the approximation of the laws of the Member States Concerning Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres

David Reseberry

Dave Roseberry Engineering Manager



29 May 2014

DATE/OF REVISION/TITLE:

