




AGC Model AR51-H

Operation and Maintenance Manual

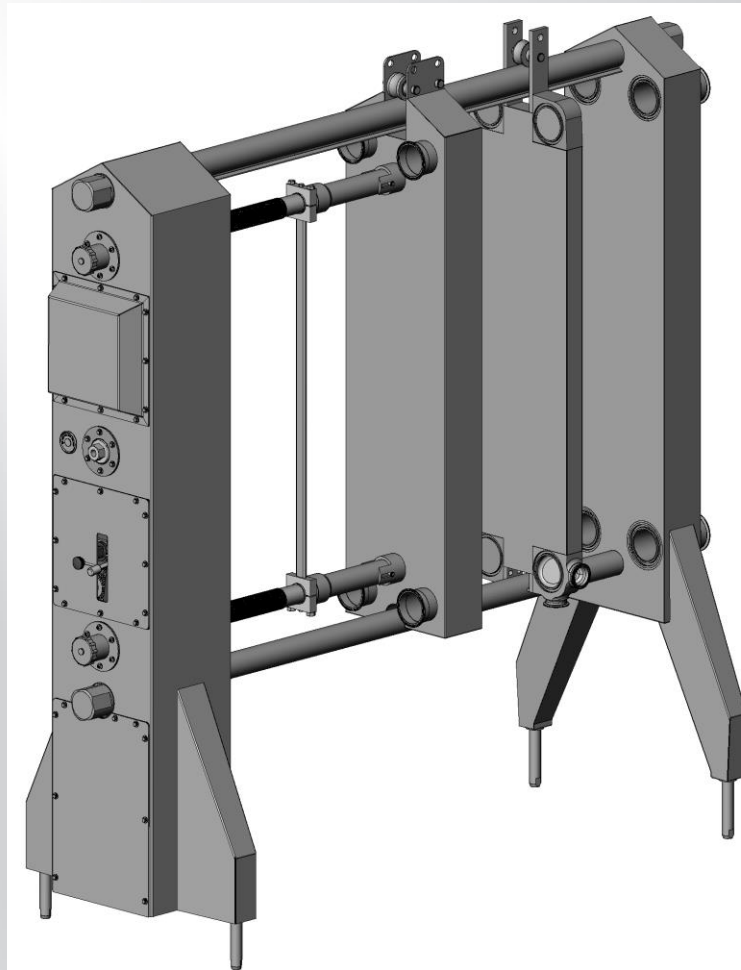

Eastern (Main) +1 703-257-1660 • Western +1 503-774-7342 • Central Sales +1 847-301-6890

Table of Contents

Scope:	1
Receiving and Inspection:	1
Frame Placement:	2
Normal Operation:	2
Closing the Frame:	3
Opening the Frame:	5
Frame Assembly Instructions:	5
Electrical Connections:	8
Hydraulic Power Unit:	10
Upgrading a Manual Frame:	10
Operator Maintenance:	12
Parts List:	14
AR51-H End Support Covers	15
AR51-H Internal Components	16
AR51-H Spindle Drive Nut Assembly	17
AR51-H Reservoir Tank Assembly	18
AR51-H Motor Assembly	19
AR51-H Reaction Bar Assembly	20
AR51-H Hose Kit	21
AR51-H Spindle Shaft	22
AR51-H Bearings	23
Pro5 Flow Gaskets	24
Pro5 End Gaskets	25
Pro5 Standard Terminal Components	26
Pro5 Wide Terminal Components	27

Western

3109 NE 230th Avenue
Fairview, OR 97024
+1.503.774.7342
+1.800.715.8820
FAX +1.503.774.2550

Central

8400 Lakeview Parkway
Suite 700
Pleasant Prairie, WI 53158
+1.847.301.6890
+1.888.489.8820

Eastern

10129 Piper Lane
Bristow, VA 20136
+1.703.257.1660
+1.800.825.8820
FAX +1.703.330.7940

www.agcheattransfer.com

Scope:

This manual is intended to be a supplement to the **AGC Heat Transfer** Proflow Operation Manual. The information provided here is for the normal operation and installation of the AGC Model AR51-H Plate Heat Exchanger. Please read and follow all safety instructions contained in this manual. Failure to follow all safety recommendations could result in serious injury to the operator or cause damage to the press. If you need additional information or spare parts for this or any other equipment built by AGC please contact your local AGC distributor.

Receiving and Inspection:

Each AGC frame is assembled and fully tested at the factory prior to shipping. After testing, the unit is prepared for shipping. When the press leaves the factory it is in perfect condition. Upon arrival, carefully inspect the frame for any damage that may have occurred during shipping. If the frame was damaged during shipping report this to AGC immediately. In most cases the frame is shipped assembled with the plates in a separate crate. Because each frame can weigh over 7,000 pounds, only qualified and licensed forklift truck drivers should lift and position the frame. If your frame was shipped disassembled refer to the assembly instructions section of this manual for assembly procedures. Figure 1 shows the major frame components. Depending on the application, your frame may or may not be equipped with one or more terminals.

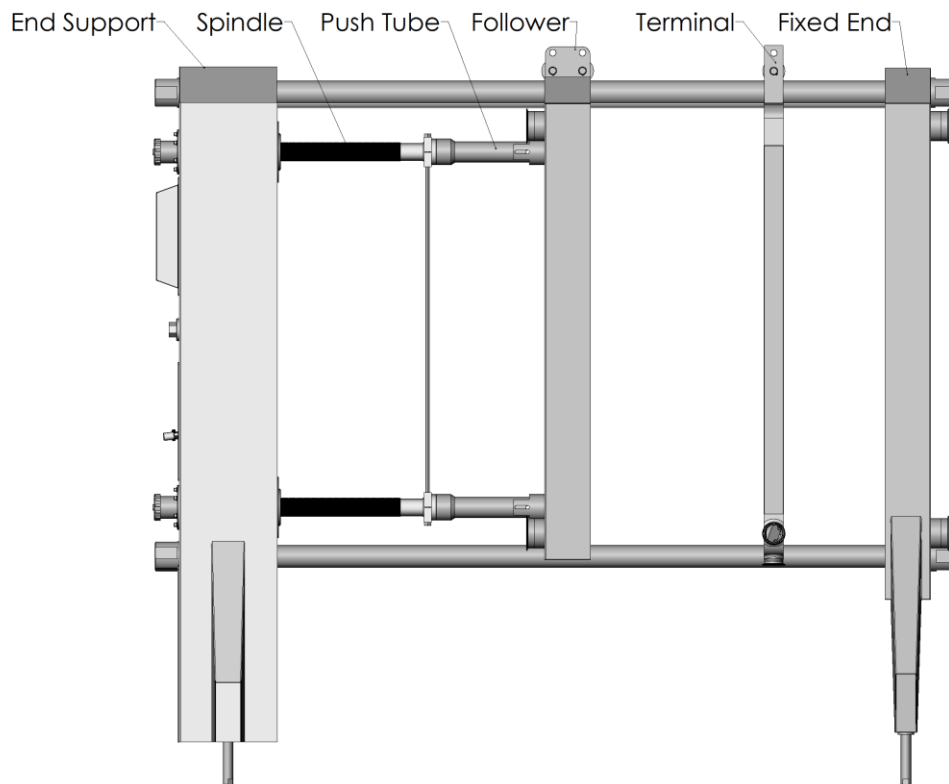


Figure 1
Major Frame Components

Locate the drawing package that was shipped with your frame. This drawing package contains important information specific to your frame. If your frame was delivered without a drawing package, contact AGC or your local AGC distributor for a replacement package prior to installing the frame.

Frame Placement:

The AR51-H frame should be located on a firm flat surface capable of supporting the press and all of its contents when full. Ensure that adequate space is left around the frame for maintenance and plate installation/removal. The drawing package will show the clearance required for the spindle shafts to be fully retracted. This is the minimum required dimension for the end support.

Each frame is equipped with adjustable ball feet to compensate for minor floor variations. To adjust the ball foot height, turn the base of the foot clockwise to raise and counter clockwise to lower. **CAUTION:** Never exceed the maximum port height dimension shown on the streaming diagram. If this dimension is exceeded, the leg could disengage from the socket and the frame could tip.

When moving the frame, the top rail can provide a good lifting point. However, when using the top rail as a lifting point, exercise caution to prevent damaging the plate hanger. Do not attempt to lift a frame using the port nozzles as a lifting point. Lifting a frame by the port nozzles could crack the nozzles causing leaks. Moving a frame that is fully populated with plates is not recommended.

Normal Operation:

The AGC Model AR51-H (Hydraulic) end support is designed to provide easy opening and closing of the Model AR51 Plate Heat Exchanger. As with all plate heat exchangers, the unit must be cooled below 90° F and relieved of all internal pressure before opening. **Failure to follow this safety warning could result in serious injury to the operator or damage to the plates and/or plate gaskets.**

The hydraulic end support uses an electric motor to power the hydraulic pump. The hydraulic system is used only when opening or closing the frame and should not be operated when the press is processing product, during the cleaning cycle (CIP), or any time fluids are being circulated through the plate pack.

Opening or closing the press is done by using the open/close valve, which is accessible through a splashguard located on the back of the end support (see figure 2). This is a three-position (open/neutral/close) valve equipped with detents that will hold the valve either open or closed for a majority of the closing or opening process. It has been set at the factory to close the press to the “dead-hard” condition when the valve is held in the closed position. When the plates are new it is permissible to operate the unit at or below the start dimension but never below the minimum. After years of service and depending on the amount of operating pressure, valve movement or starting and stopping of pumps, the plates contact points may begin to show normal wear. If this condition exists you may find the hydraulic system will tighten the unit below the originally installed dimension or even below the minimum dimension (not normally) to obtain a “dead-hard”

condition. Refer to the operator maintenance section for instructions on adjusting the hydraulic system pressure.

In the event of a power failure, the press can be opened or closed manually by turning the hex on the sprocket drive shaft. Rotate clockwise to open, and counter clockwise to close. Note: Because of the gear reduction used in the closing mechanism, manually opening or closing the frame isn't practical and should only be considered as an option in extreme circumstances.

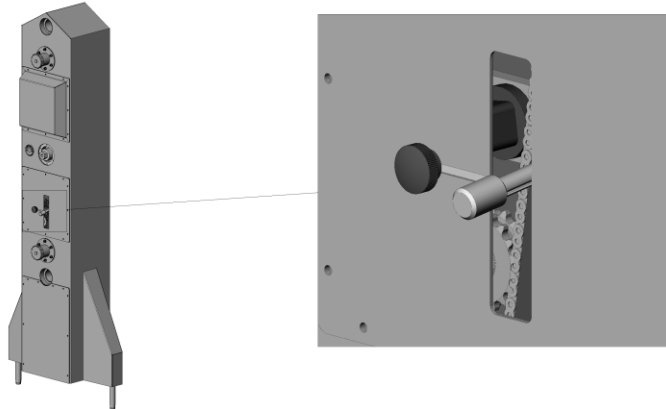


Figure 2
Open/Close Lever

Closing the Frame:

After all the plates and any terminals are installed into the press it can be closed. Refer to the streaming diagram that was provided with the heat exchanger to determine the proper plate configuration and piping requirements. The AR51-H will provide enough closing power to compress the plate pack to the factory recommended minimum or “dead-hard” dimension. The press is equipped with a pressure gauge that provides information on how much pressure is being developed in the system as the plate pack compresses. This pressure is associated with the amount of resistance the plates are providing to the spindle screws. The streaming diagram will have a start dimension and a minimum dimension. Figure 3 shows where this information is listed on the drawing. Note: The dimensions for each frame will be listed on the streaming diagram shipped with that frame.

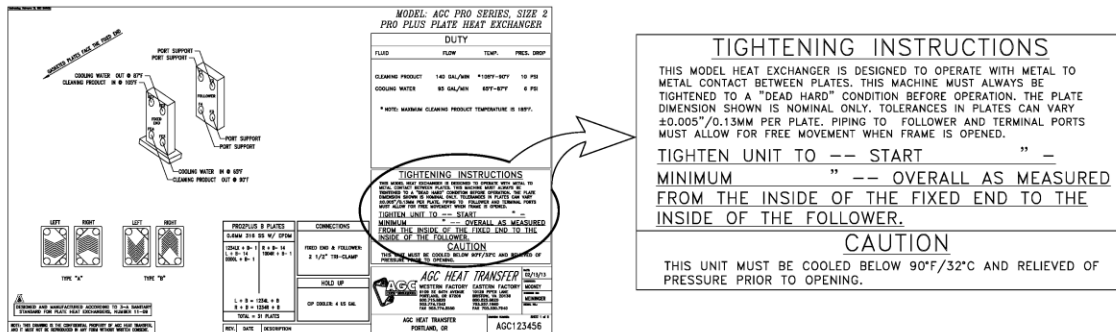


Figure 3
Streaming Diagram Sample

To close the frame, apply power to the hydraulic power unit. Before closing the press the operator should make sure all pipes and lines are clear and the plates are in the correct arrangement per the drawing. Move the open/close lever to the upper locked position. This lock or detent will hold the valve in position until the frame is approximately one to two inches from the start dimension. If this is the first time closing a new press or the first closure after installing new plates the compressed dimension should be observed and compared to that shown on the drawing. Hold the handle in the closed position until the unit stalls. After the unit stalls you will be at the “dead-hard” dimension, which is between the start and minimum dimension for a new unit. You are now ready for operation. It should also be noted that as the plates compress, it is normal for the plate pack to make crackling noises. This is caused by the plates sliding along the support rail and is not a cause for alarm. After the hydraulic unit has stopped closing (stalled) disconnect power to the unit and make a note of the actual “dead-hard” dimension as shown in figure 4. If this dimension is below the minimum and the number of plates installed is consistent with the drawing, you should consider purchasing a new plate pack or obtain a professional opinion from one of our factory engineers as to the actual condition of the plates.

Installation of new gaskets and/or plates is recommended if external leakage is observed when operating at the minimum dimension.

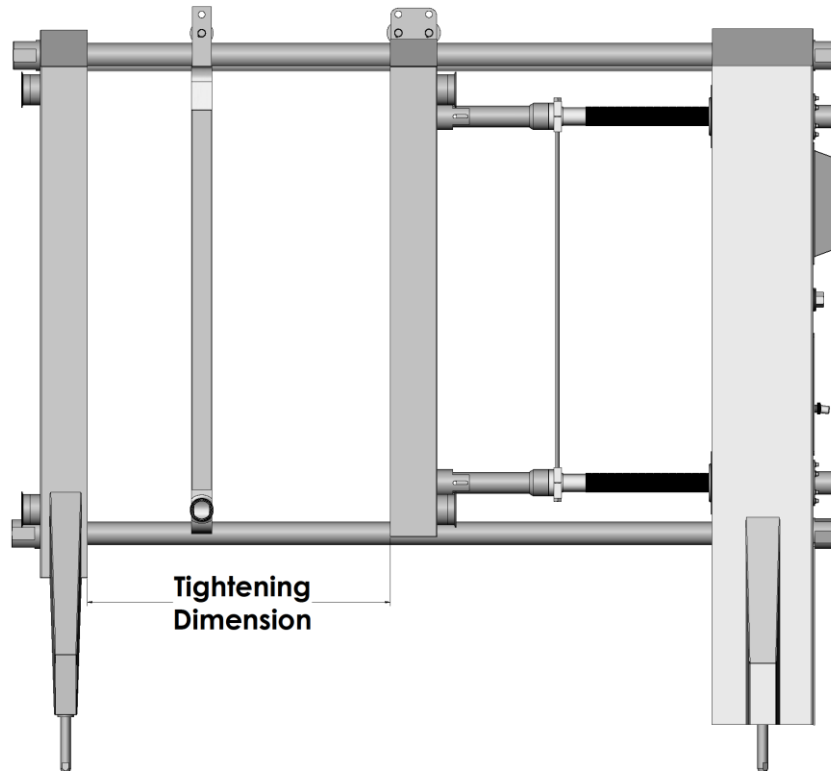


Figure 4
Tightening Dimension

The heat exchanger should be pressure tested to check for leaks. If the pressure check passes, the frame is ready to be put into service.

Opening the Frame:

To open the frame, apply power to the hydraulic power unit. Move the open/close lever down to the open position. The handle is equipped with detents that will hold the lever in the open position after the unit is opened slightly. The spindle shafts will start to retract and the follower will move back toward the end support. The follower will only move back as the plate pack expands to its uncompressed state. As the spindles retract the pushtubes may disengage from the spindles. This could allow the pushtube to rotate about the supporting pin causing the pushtube to swing down (see figure 5). Caution should be exercised when opening the frame to prevent injury by the pushtube.

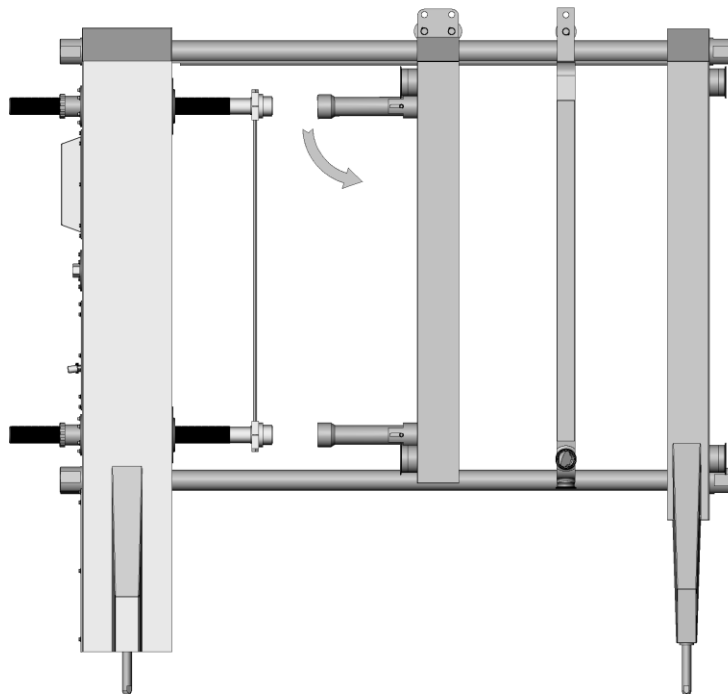


Figure 5
Pushtube Swing

When retracting the spindles, it is recommended to back the spindles out only to the point that the plates can be removed. Once the spindles have been adequately retracted the handle should be moved to the center (neutral) position.

Frame Assembly Instructions:

Assembling an AR51 frame requires careful attention to detail and should only be attempted by qualified equipment installers or maintenance technicians. The components are large and could cause serious injury or death if mishandled. The procedure described here is the method used at the factory to assemble the press. Your particular site requirements and limitations may require deviation from this description. If you have questions about erecting an AR51 frame, or any procedure described in this section, please contact AGC or your local AGC distributor.

Upon delivery, uncrate all components and inspect for damage. Check the drawing package and packing slip to ensure all components are present. To complete this assembly you will need two sets of jack stands (2 stands 19" tall and 2 stands 25³/₄" tall), a forklift truck, a wrench with a 3" capacity, a lifting sling rated for 4000 lbs cinch, and a spirit level (or other level measuring device).

To assemble the press:

1. Place the fixed end assembly on the two 19" jack stands (see figure 6-1). The jack stands should be located near the ends of assembly as shown.
2. Position the two 25³/₄" jack stands as shown in figure 6-2. Depending on the size frame you are installing the actual distance from the fixed end will vary. These stands will support the rails and should be located so they are opposite from the rail holes in the fixed end.
3. Slide the top and bottom rails into the fixed end (see figure 6-3). Note: The top rail has a long and a short end. The short end will go through the fixed end while the long end is intended to go through the end support.
4. Slide the end support onto the rails (see figure 6-4). Note: The bottom rail can slide through the fixed end assembly. This allows the installation team to align the end support onto the top rail first. After the top rail is installed the bottom rail can be guided through the end support.
5. Apply a liberal coat of food grade anti-seize to the threads on the rails, and then install the 3" acorn nuts on each rail end. Tighten only finger tight at this point.
6. Using a forklift truck carefully stand the frame assembly upright, lifting it by the upper rail.

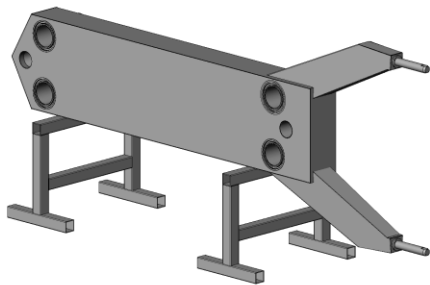


Figure 6-1
Fixed End on 19" Tall Stands

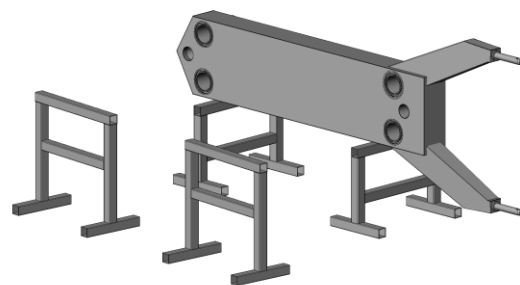


Figure 6-2
25³/₄" Tall Stand Location

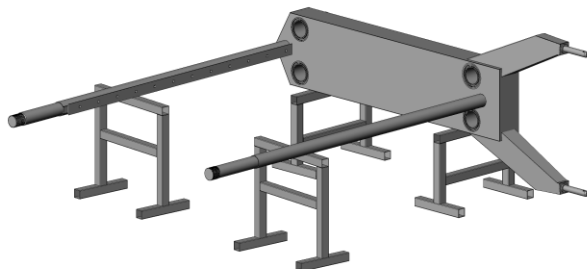


Figure 6-3
Press with Rails

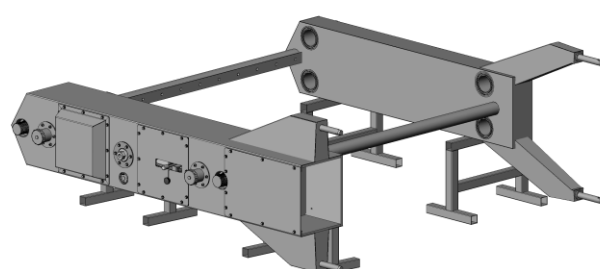


Figure 6-4
Press with End Support

7. After the press is upright and in the desired location it must be leveled so the plates and terminals will hang correctly. Make sure the fixed end is plumb. This can be accomplished by putting a spirit level across the ports (see figure 6-5). Adjust the ball feet as necessary. Caution: Do not exceed maximum port center height as shown in the drawing package.

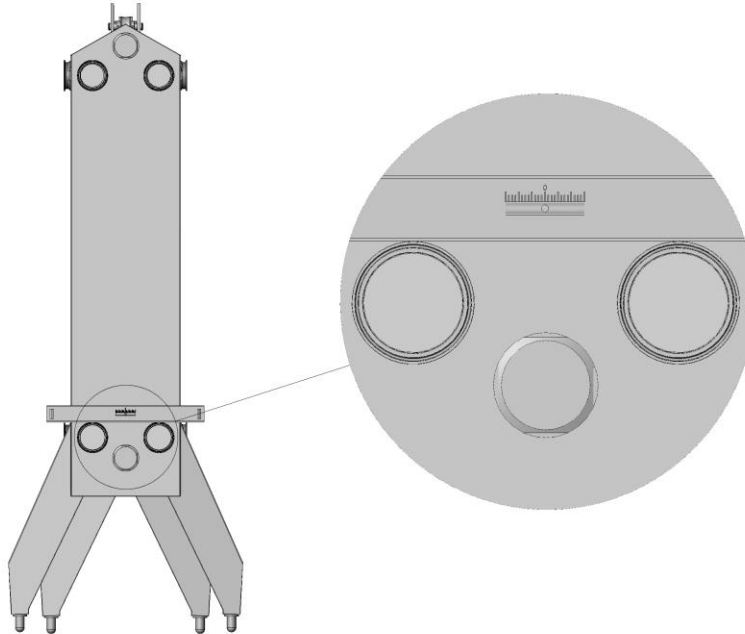


Figure 6-5
Leveling the Fixed End

8. After leveling the fixed end, adjust the upper rail. The plate hanger on the upper rail must also be level in order for the plates to hang correctly. Check the hanger using the spirit level (see figure 6-6).

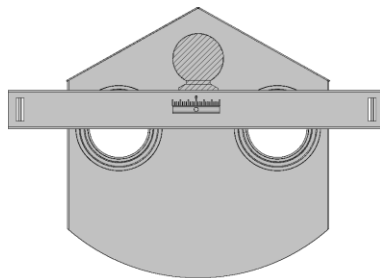


Figure 6-6
Leveling the Upper Rail

9. Once the upper rail is level, the acorn nuts on the upper rail can be tightened. After the nuts are tight, re-check the rail for level.
10. Tighten the bottom rail acorn nuts just until the fixed end and the end support are parallel. Over-tightening the bottom rail will damage the rail cladding and possibly the frame.
11. To install the follower it is necessary to remove the rollers. These are removed by removing the one circlip from each pin, and then the set collars (see figure 6-7).
12. The follower is installed using a lifting sling. The follower is wrapped with the strap in a cinch configuration and tilted into position using a forklift truck. After the follower is over

the bottom rail, replace the rollers. Center the roller on the Follower and lock in place with the set collars.

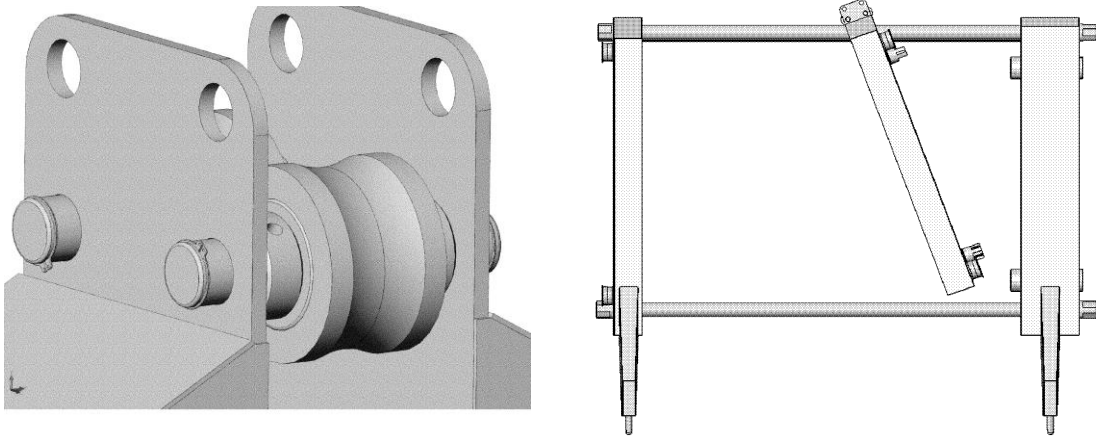


Figure 6-7
Follower Installation

13. Install any terminals using the same procedure as described for the follower.
14. Adjust the spindle shafts so they are spaced an equal distance from the end support (see figure 6-8). Dimensions 'A' and 'B' must be equal. To adjust this dimension, loosen the two hex head screws and the clamping screw on the reaction bar end. Then rotate the spindle to establish matching dimensions A & B.

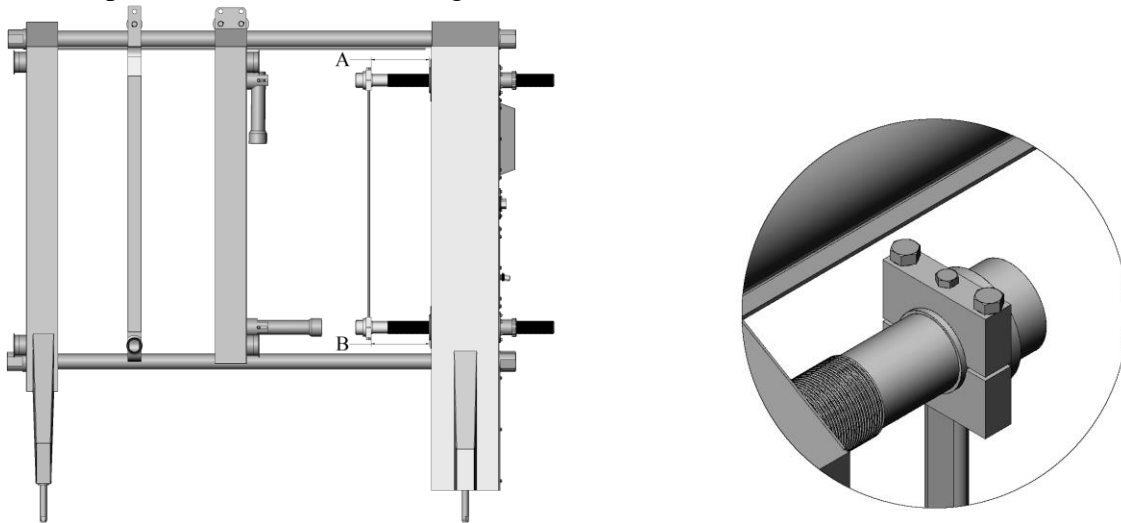


Figure 6-8
Reaction Bar Adjustment

15. Retighten the reaction bar end by first tightening the hex head screws then the center clamping screw.

Electrical Connections:

Only a qualified electrician following all applicable local regulations should make the electrical connections to the motor. Because each installation is different, no holes are predrilled

at the factory for electrical connections. The frame is designed with adequate spacing for a conduit to run from either the top or the bottom. The top cover is 14-gauge sheet metal and will support a conduit connector if power is routed through the top of the frame. The electrical motor is a 230/460V 3 phase 5 horsepower NEMA 184T frame unit. The hydraulic power unit is self-contained and can be removed for maintenance or during initial installation to allow easier access to the electrical connections as shown in figure 7. To remove the reservoir assembly, remove the two fasteners located at the back of the tank. The assembly will slide out as shown in the figure. After connecting the motor, return the reservoir to its original location and secure it.

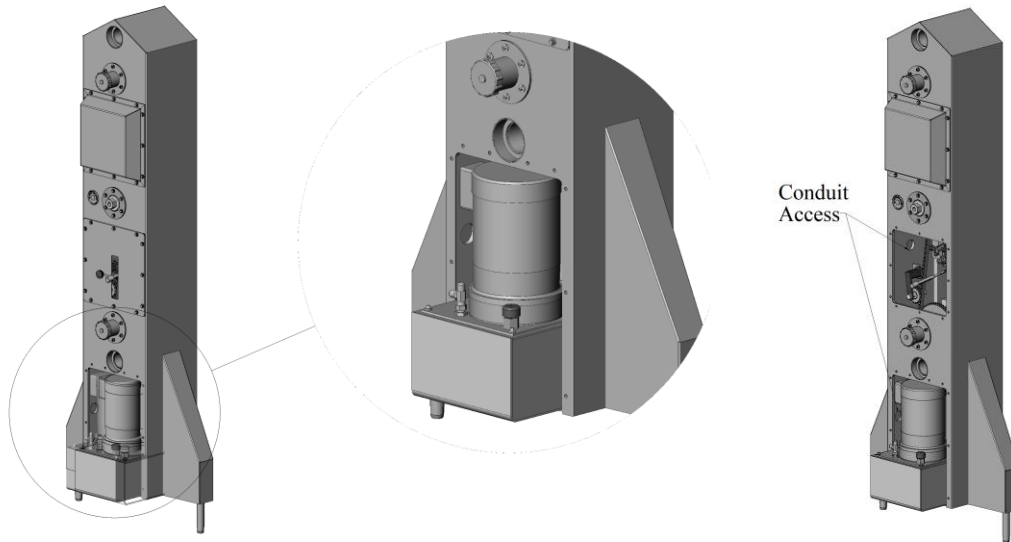


Figure 7
Reservoir Assembly

The electrical motor is connected to a gear pump submerged in the reservoir. The gear pump is set at the factory to run in a clockwise rotation. Check to ensure the reservoir is full prior to testing the motor rotation. Never run the gear pump dry. Figure 8 shows the wiring diagram for the electric motor.

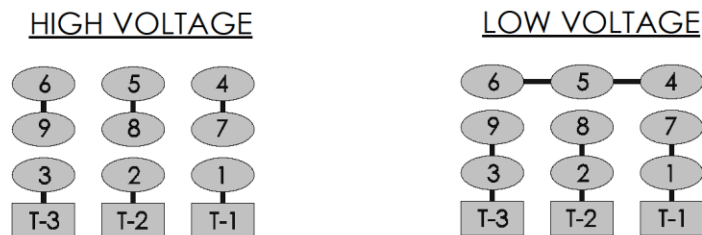


Figure 8
Wiring Diagram

If the rotation of the motor is incorrect, the pump will not produce pressure and the system will not operate. To reverse the rotation of the motor, swap T-2 and T-3 at the motor.

To make installation of the electrical connection easier, the end support has cutouts through the heavy steel sub-structure. This will allow the electrician to drill just through the stainless steel cladding for an electrical conduit connection.

Hydraulic Power Unit:

After the electric motor is connected, the hydraulic power unit and associated components can be tested/verified. The AR51-H hydraulic power unit is capable of producing a maximum of 3500 psi. This maximum pressure is regulated down using a pressure-regulating valve. This valve is pre-set at the factory to match the system requirements for closing a new plate pack. As the plates and gaskets age it may be necessary to adjust the hydraulic system pressure. To adjust the pressure follow the procedure described in the Operator Maintenance section of this manual.

Typically the press is shipped from the factory with a full reservoir. However, if the press is shipped disassembled, the oil will be shipped in a separate container. Prior to testing the motor, ensure the hydraulic reservoir is full. The tank capacity is four gallons and should be run full. To check the oil, remove the breather cap. The cap is fitted with a dipstick. The oil level should be visible on the stick near the full indicator line.

The AR51-H is equipped with a pressure gauge visible to the operator during normal operation. This gauge shows the pressure being developed by the hydraulic system. If after applying power to the electric motor, no hydraulic pressure is developed the most probable cause is incorrect motor rotation. To change the rotation of the motor, refer to the Electrical Connections portion of this manual.

Upgrading a Manual Frame:

If you are upgrading a manual frame by installing the AGC Model AR51-H end support it will be necessary to remove the manual end support. The procedure described here is a basic overview of the steps necessary to complete this task. It is assumed that the persons performing this work are qualified in the safe handling of heavy machine components. Great caution must be exercised when removing the component parts of the AR51. The follower is the heaviest component, weighing in excess of 2500 pounds, and could cause serious injury if mishandled.

Prior to opening the frame all pressure should be relieved and the frame must be cooled to a safe opening temperature. After the frame is cooled below 90° F the plates, terminals if any, and follower must be removed. To remove the terminals and follower, the frame should be stood upright on flat stable ground. The terminals are held in place by one stainless steel support pin.

Removing the Terminal:

1. Support the weight of the terminal with rigging suitable to support 500 lbs. At the factory a cinch-type sling and a forklift truck are used. The cinch strap is placed approximately in the center of the terminal and then a forklift is used to lift the terminal slightly. The roller pin is then removed. The port nozzles are not suitable lifting points. Attempting to lift the terminal by the nozzles could damage the nozzles.
 - a. To remove the roller pin first remove the circlip and set collars.
 - b. Slide the pin out of the roller.
 - c. Tilt the terminal bottom until the terminal clears the bottom rail.
 - d. Lower the terminal until the hanger clears the top rail.
2. Repeat step one above for all other terminals.
3. The procedure for removing the follower is similar to removing the terminals. The exception is that the follower is substantially heavier than the terminals, and requires two rollers. As with the terminals, the port nozzles are not suitable lifting points. Attempting

to lift the follower by the nozzles could damage the nozzles causing internal leaks in the follower.

4. Using rigging capable of supporting 3200 lbs, support the weight of the follower. As with the terminals, a cinch strap is used to support the follower.
 - a. Lift the follower enough to remove the support pins. Once the support pins and rollers are removed, tilt the bottom of the follower enough to slide it over the bottom rail.
 - b. Remove the follower from the frame.

The next step is to remove the manual end support. This is accomplished by laying the frame on its side supported by blocks as shown in figure 9. One set of blocks should be 18½” tall. The other should be 24¾” tall. The shorter blocks will support the fixed end. The larger blocks should be placed under each rail.

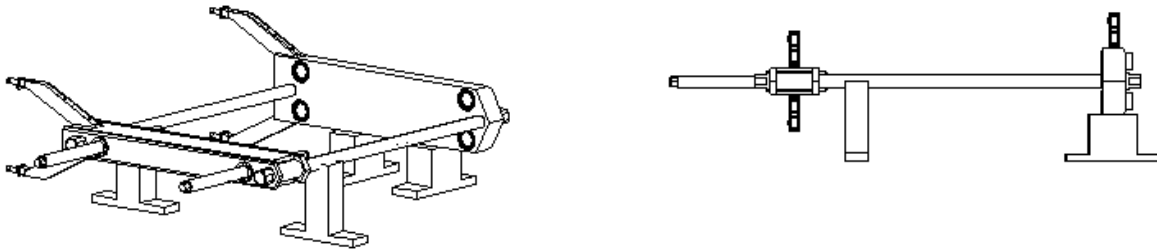


Figure 9
Frame Supported by Blocks

Once the frame is supported on the ground, the end support can be removed by removing the two large acorn nuts holding the rails. Using a forklift carefully slide the end support off the rails. Depending on the condition of the frame it may be necessary to press the rails out of the frame. AGC has an extraction tool that can be used on particularly stubborn rails. Contact your AGC distributor if this tool is required.

The AR51-H end support can now be installed by carefully sliding the end support onto the rails. After the end support is on the rails the acorn nuts can be replaced. The top rail is tightened down hard, however the **bottom rail is tightened only enough to ensure the frame members are parallel**. Over-tightening the bottom rail will damage the rail cladding and prevent the frame from operating properly.

Operator Maintenance:

The unit is designed to operate reliably with little operator maintenance. However, when servicing the frame observe all lockout/tagout regulations prescribed by your company. In addition, you should **NEVER OPEN THE PRESS WHEN IT IS PRESSURIZED OR WHEN IT IS HOT**. The press must be cooled below 90° F prior to opening.

A good preventative maintenance schedule will minimize or eliminate major mechanical problems. Operating the press regularly will help to keep the mechanical components in good working order. The press has three (4) lube points (figure 10) that should be lubed monthly.

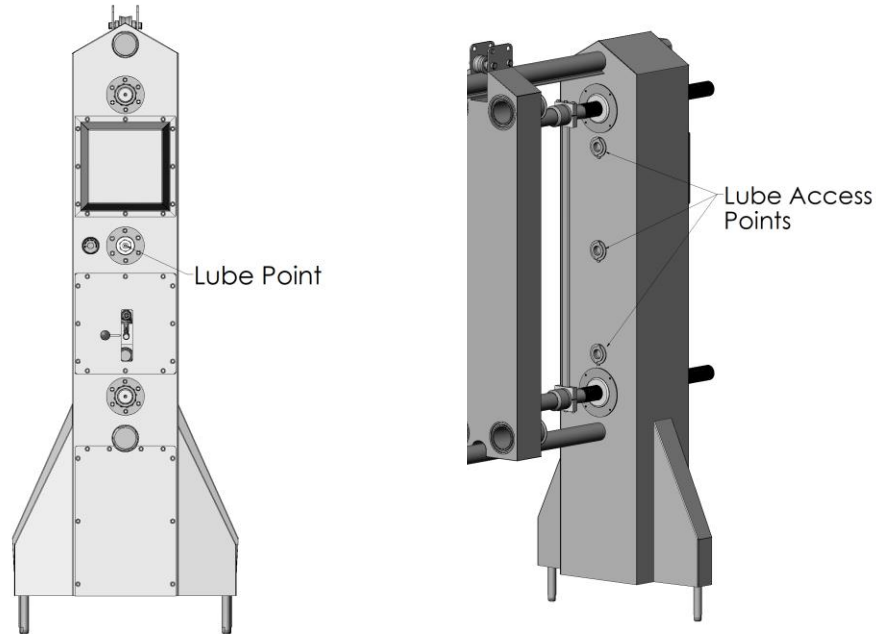


Figure 10
Lube Points

Press Monthly Lube/Inspection:

1. Lockout/Tagout the voltage supply to the press.
2. Remove the upper motor cover by removing the 12 bolts holding the cover.
3. Remove the sliding door cover by removing the 12 bolts holding the cover.
4. Inspect the door gasket for tears or cracks. Replace as required. Both covers use the same gasket (AGC part number 11110281).
5. Inspect drive chains for excessive wear or defects. Lubricate chain with food grade chain lubricant.
6. Inspect hydraulic hoses for signs of leakage or swelling. Replace hoses as necessary. (Contact AGC for appropriate part number.)
7. Locate grease fittings as shown in figure 10. Using food grade grease, lube the three points liberally.
8. Replace the covers removed in steps 2 and 3 above.
9. Inspect the spindle shafts for signs of wear.
10. Apply food grade grease to the exposed threads of the spindle shaft.
11. Remove lockout/tagout device and return press to service.

Because the spindle screws only receive lubrication when they are being moved, the press should be opened/operated once a month. If the procedures in your plant don't allow for opening the press monthly, at a minimum the spindle shafts should be moved out and back to distribute grease.

Spindle Preventative Maintenance:

1. Read all instructions in this procedure before beginning maintenance.
2. Relieve press of all internal product/media pressure.
3. Ensure press is cooled below 90° F.
4. Measure and record compressed dimension of the plate pack (see figure 4).
5. Apply power to the hydraulic power unit.
6. Open splashguard on back of end support and slide the control valve handle out.
7. Move the control valve handle down while measuring the compressed dimension of the plate pack. You will be opening the press approximately ½”.
8. Move the control handle to the upper position to return the plate pack to the compressed dimension measured in step 4 above. Do not exceed the minimum dimension listed on your drawing.
9. Return handle to neutral position and close splashguard door.
10. Remove power from the hydraulic power unit and return press to normal operation.

Hydraulic System:

The hydraulic system is self contained and should require little operator maintenance. The oil should be checked regularly and changed after approximately 4000 hours of use. When changing the oil, use only good quality foam inhibited hydraulic oil (Grade 46). Use of lesser grade oils could lead to mechanical malfunctions within the hydraulic power system.

The unit is set at the factory to close the press to a “dead-hard” condition. As the plates, gaskets, and system components age, it may become necessary to adjust the hydraulic system pressure to achieve complete press closure or the “dead-hard” condition. The open/close valve is equipped with an adjusting screw (figure 11).

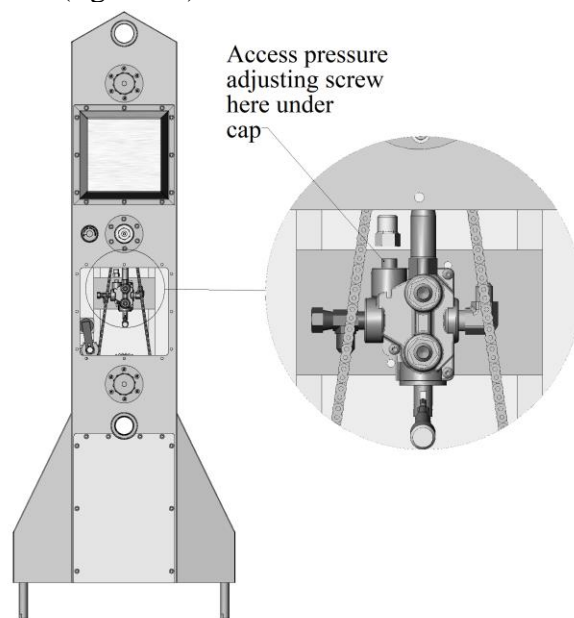


Figure 11
System Pressure Adjustment

To access the adjusting screw, remove the cap as shown in figure 11. Note: This cap is fitted with an o-ring seal, and hydraulic fluid will seep around the adjusting screw during the adjustment. Turning the screw clockwise increases the system pressure. As a point of reference, a ¼ turn on the adjusting screw will increase system pressure by as much as 250 psi. Adjust the system pressure in small increments. A new AR51-H with new Pro5 stainless steel plates requires approximately 2200 psi to close to the “dead-hard” condition. When adjusting the system pressure, monitor the compressed dimension and note the pressure indicated on the pressure gauge. The minimum dimension shown on the streaming diagram will not normally be exceeded. After the pressure is set to the required level, replace the adjusting screw cap and operate the hydraulic system inspecting for system leaks. If no leaks are detected, replace the cover panel and return the press to normal operation.

Parts List:

Replacement parts for the Model AR51-H can be ordered from AGC or your local AGC distributor. Most parts are in stock and can be shipped within 24 hours from time of order. Some components have had engineering revisions, so when ordering spare parts be sure to have your unit specific information available.

Contact information is provided below or visit our website for more information:

Western

3109 NE 230th Avenue
Fairview, OR 97024
+1.503.774.7342
+1.800.715.8820
FAX +1.503.774.2550


Central

8400 Lakeview Parkway
Suite 700
Pleasant Prairie, WI 53158
+1.847.301.6890
+1.888.489.8820

Eastern


10129 Piper Lane
Bristow, VA 20136
+1.703.257.1660
+1.800.825.8820
FAX +1.703.330.7940

www.AGCHeatTransfer.com

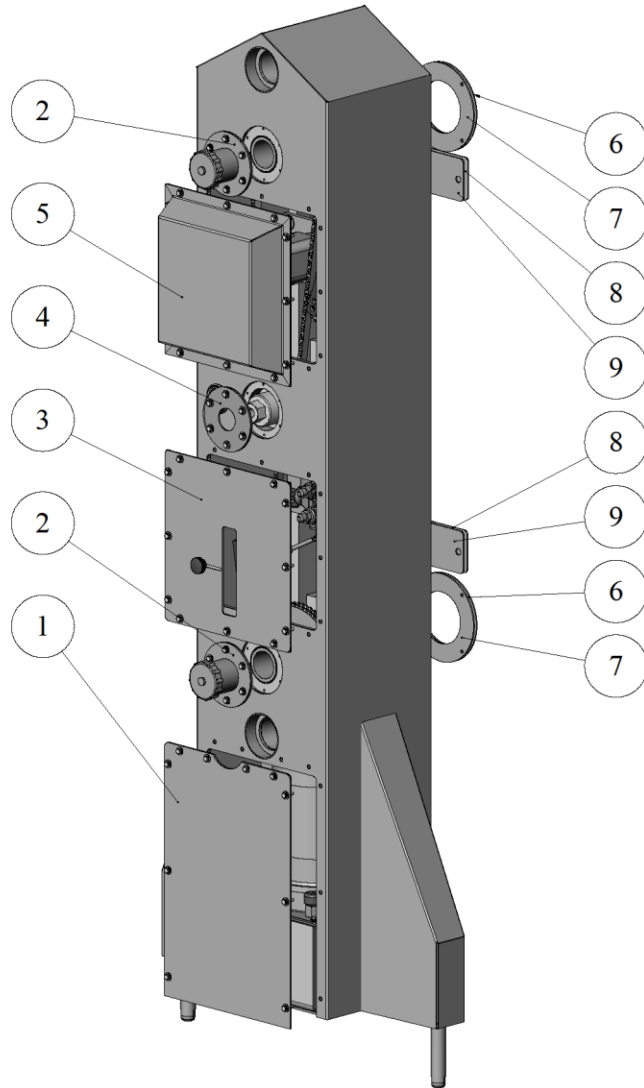


Item	Name	Part Number	Quantity
1	Bottom Cover with Gasket and fasteners	11110316	1
2	Spindle Cover with Gasket, Cap and fasteners	11110341	2
3	Sliding Door Cover with Gasket and fastener	11110260	1
4	Sprocket Drive Shaft Cover with Gasket and fasteners	11018775	1
5	Raised Motor Cover with Gasket and fasteners	11110313	1
6	Spindle Trim Ring	11110246	2
7	Spindle Trim Ring Gasket	11110247	2
8	AR51-H Lube Cover	11110237	2
9	AR51-H Lube Cover Gasket	11110238	2

AR51-H End Support Covers

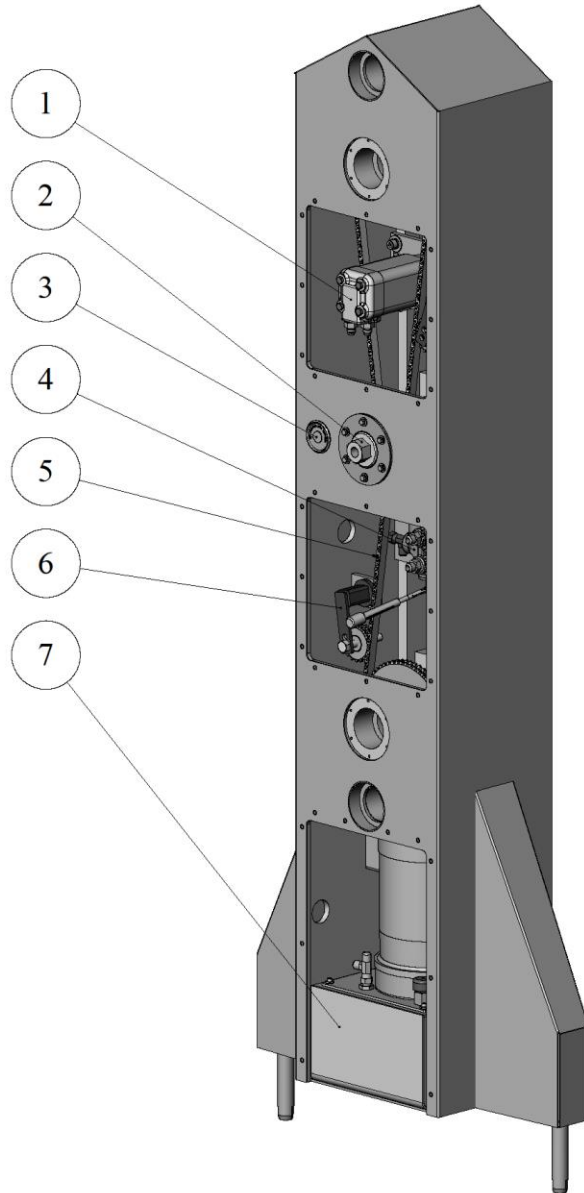


Item	Name	Part Number	Quantity
1	Hydraulic Motor with Mount	11110320	1
2	High Speed Sprocket Drive Shaft	11001502	1
3	Pressure Gage 0-3000 psi	9692245	1
4	Double Detent Valve	LS755T4JRHHA	1
5	Double Roller Chain	104995	170
6	Lovejoy Tensioner	88835	2
7	Hydraulic Reservoir with 2 Stage Pump	11110310	1

AR51-H Internal Components

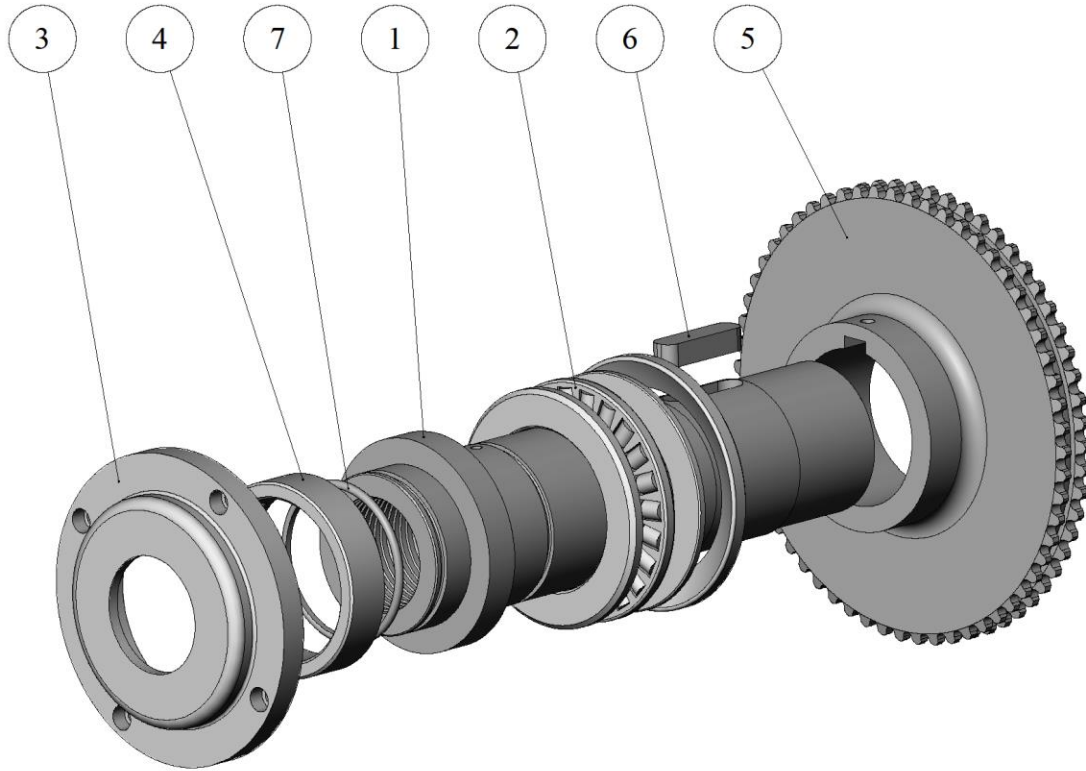


Item	Name	Part Number	Quantity
1	Spindle Drive Nut	11110250	1
2	Spindle Bearing Assembly	11110317	1
3	Spindle Retainer	11021350	1
4	Sprocket Bushing	11110251	1
5	60 Tooth Sprocket	11110277	1
6	Sprocket Key	11110314	1
7	O Ring	30000080	1

**AR51-H Spindle Drive Nut Assembly
(AGC P/N 11110249)**

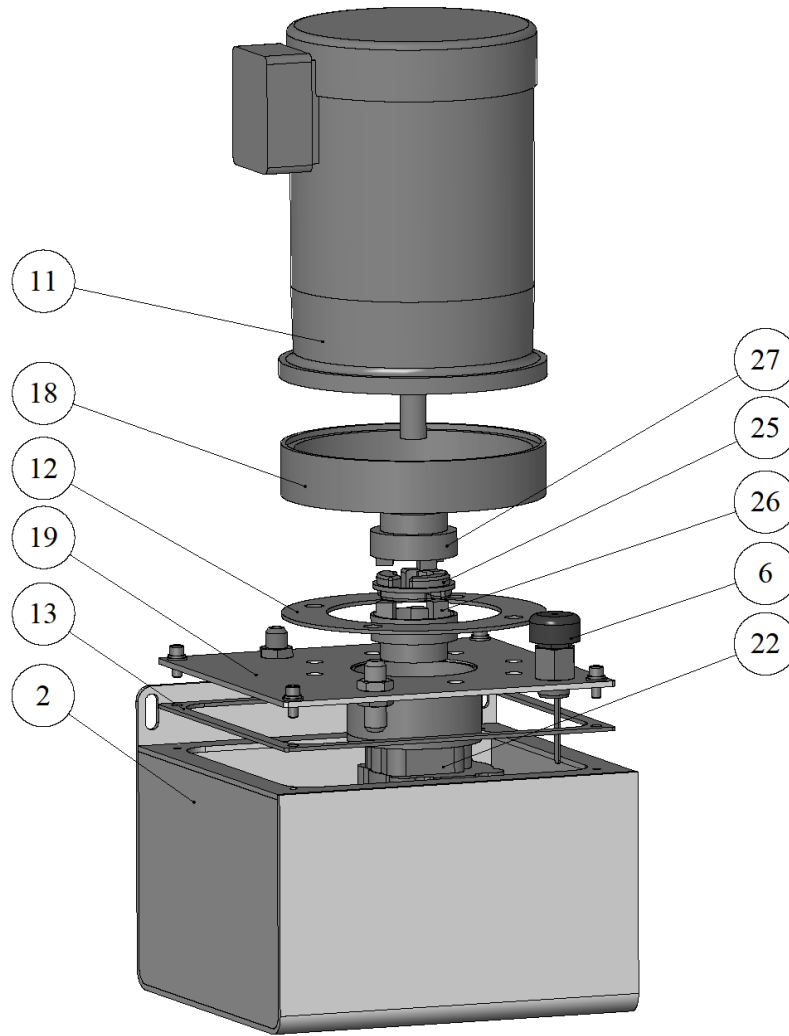


Item	Name	Part Number	Quantity
2	Reservoir Main Tank	11110321	1
6	Dip Stick	11110487	1
11	5 HP NEMA 184T Motor	178945	1
12	Motor to Tank Gasket	11018440	1
13	Tank Top Cover Gasket	11018441	1
18	Motor Spacer	11023100	1
19	Tank Cover with Integrated Pump Mount	11001132	1
22	2 Stage Gear Pump	30210010	1
25	Coupling Insert	M270	1
26	Coupling Half (pump)	M2002006	1
27	Coupling Half (motor)	M20010408	1

**AR51-H Reservoir Tank Assembly
(AGC P/N 11110310)**

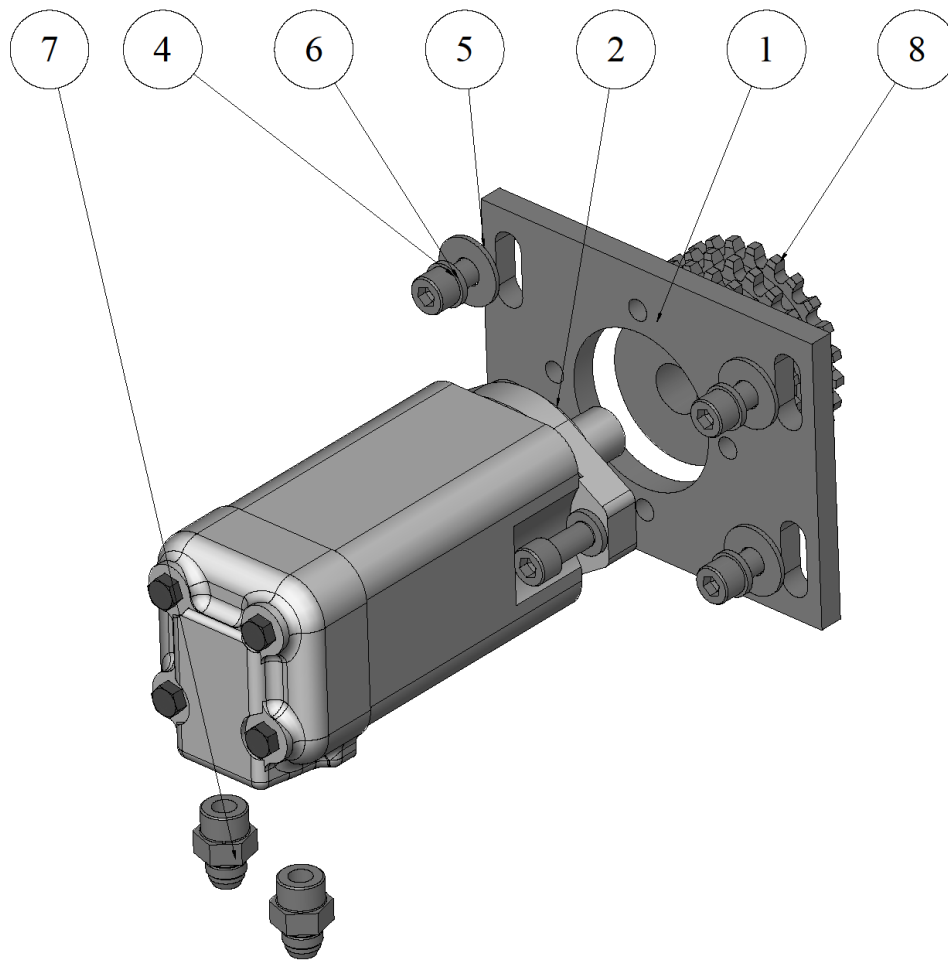


Item	Name	Part Number	Quantity
1	Motor Mount	11110268	1
2	Hydraulic Motor	104-1007-006	1
4	Socket Head Cap Screw 1/2-13 x 1-1/2	D4012C0112E	6
5	Flat Washer 1/2" SS	DF012	4
6	Lock Washer 1/2" SS	DL012	6
7	O Ring AQ O Ring x JIC	202702-10-65	2
8	24 Tooth Sprocket	6076901	1

**AR51-H Motor Assembly
(AGC P/N 11110320)**

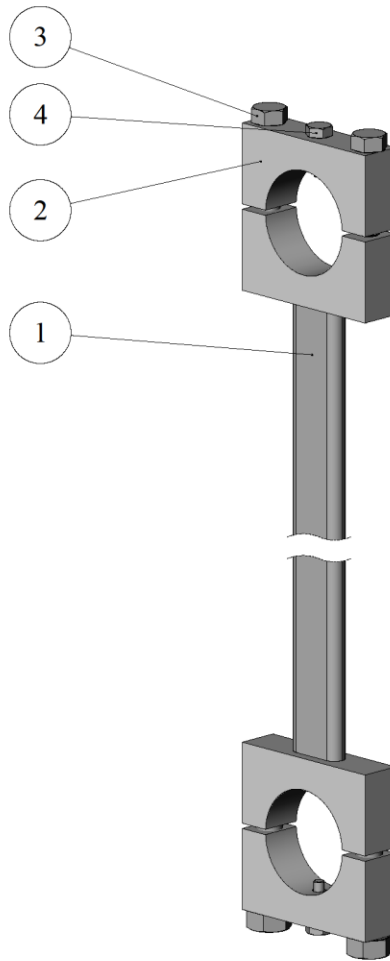


Item	Name	Part Number	Quantity
1	Reaction Bar Weldment	11110276	1
2	Reaction Bar End Cap	11021707	2
3	Hex Head Cap Screw 3/8-16 x 3	11110764	4
4	Dog Point Screw	11021708	2

AR51-H Reaction Bar Assembly
(AGC P/N 11110327)

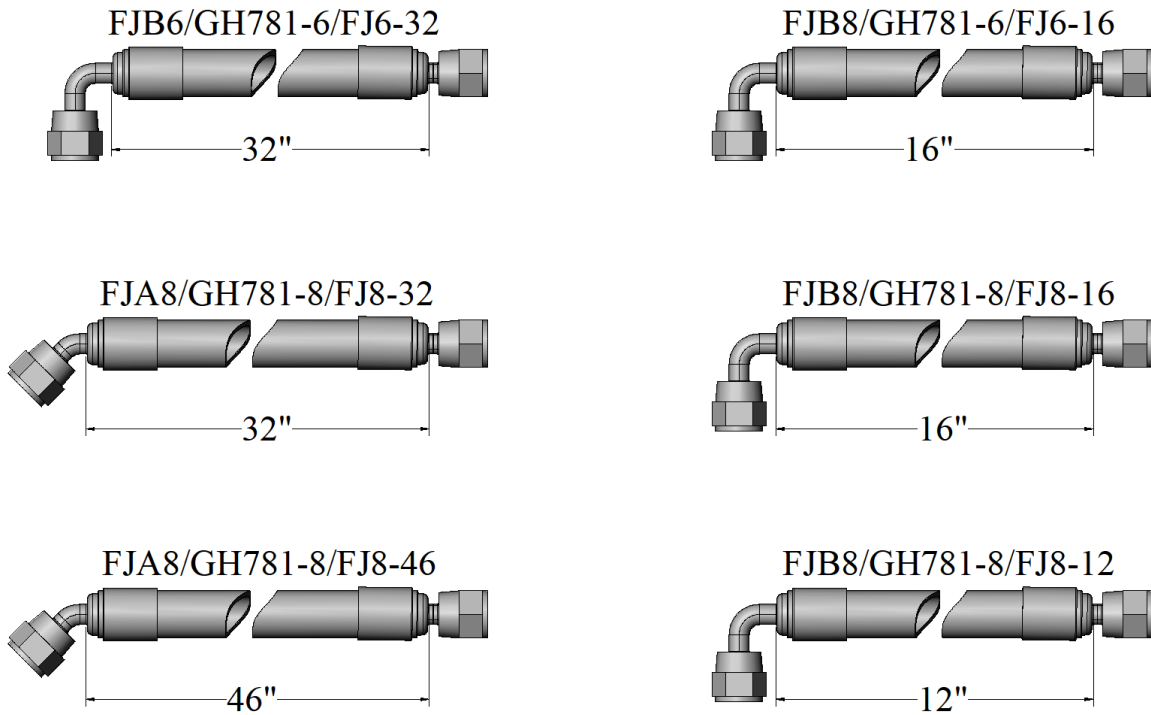


Part Number	Where Used	Quantity
FJB6/GH781-6/FJ6-32	Hydraulic Motor to Valve	2
FJA8/GH781-8/FJ8-32	Pressure Regulator to Valve	1
FJA8/GH781-8/FJ8-46	Oil Filter to Tank Return	1
FJB8/GH781-6/FJ6-16	Pressure Gage to Valve	1
OBSOLETE	Pressure Regulator to Tank Return	0
FJB8/GH781-8/FJ8-12	Pump to Pressure Regulator (inside tank)	1
FJB8/GH781-8/FJ8-12	Valve to Oil Filter	1

**AR51-H Hose Kit
(AGC P/N 11002010)**

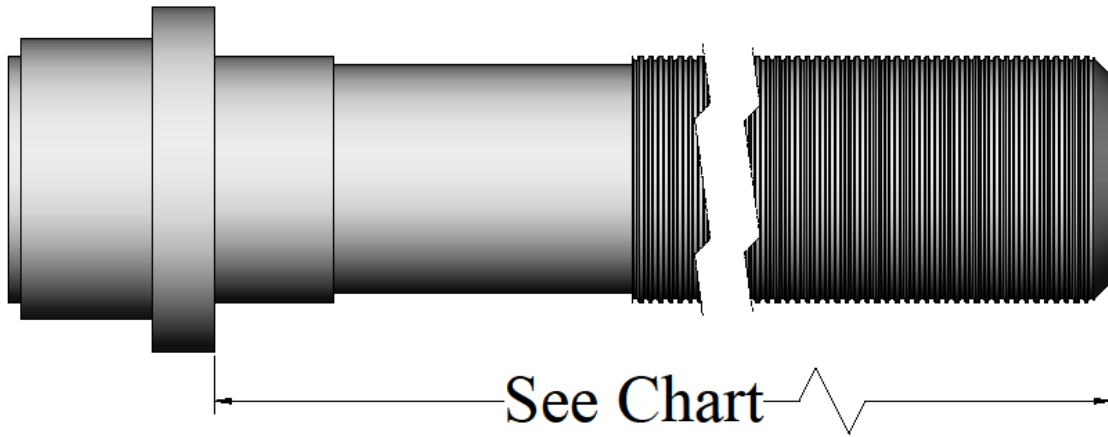

Name	Part Number	Length
36" Spindle Shaft	11018785	36-5/8"
48" Spindle Shaft	11018786	48-5/8"
60" Spindle Shaft	11018787	60-5/8"

AR51-H Spindle Shaft

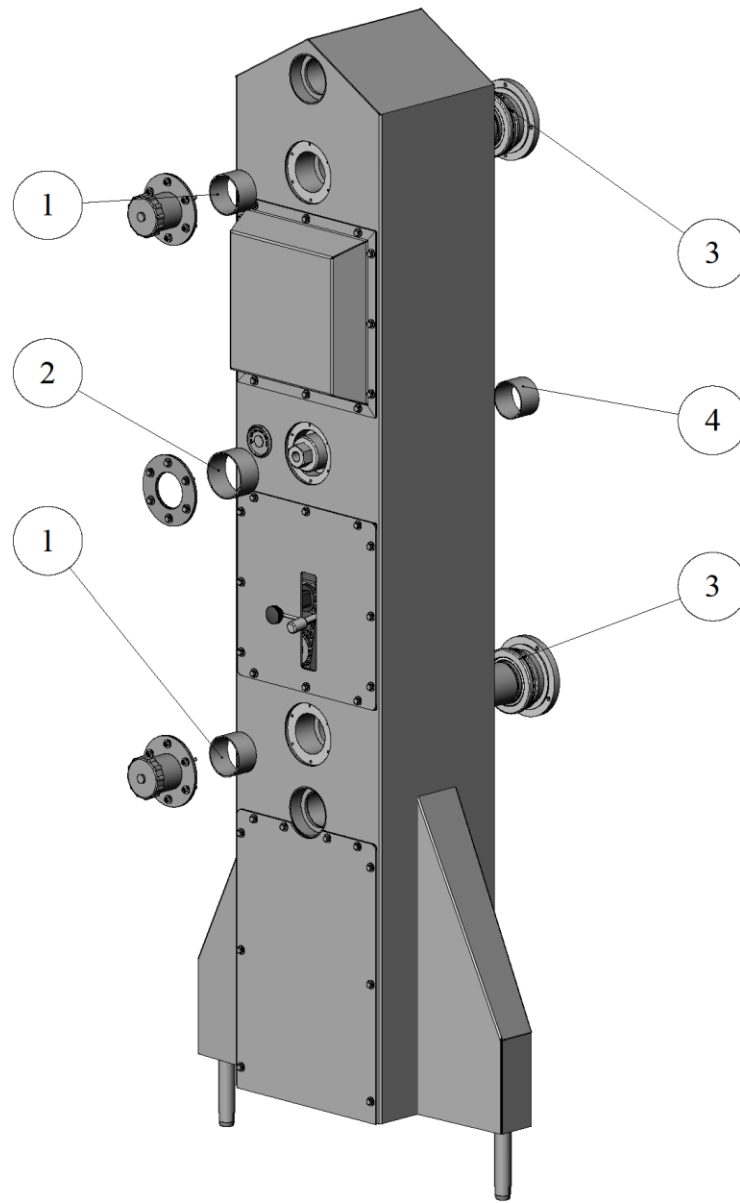

Item	Name	Part Number	Quantity
1	Spindle Drive Nut Bearing	105379	2
2	Sprocket Drive Shaft Front Bearing	105380	1
3	Spindle Roller Thrust Bearing Set	11110317	2
4	Sprocket Drive Shaft Rear Bearing	105376	1

AR51-H Bearings

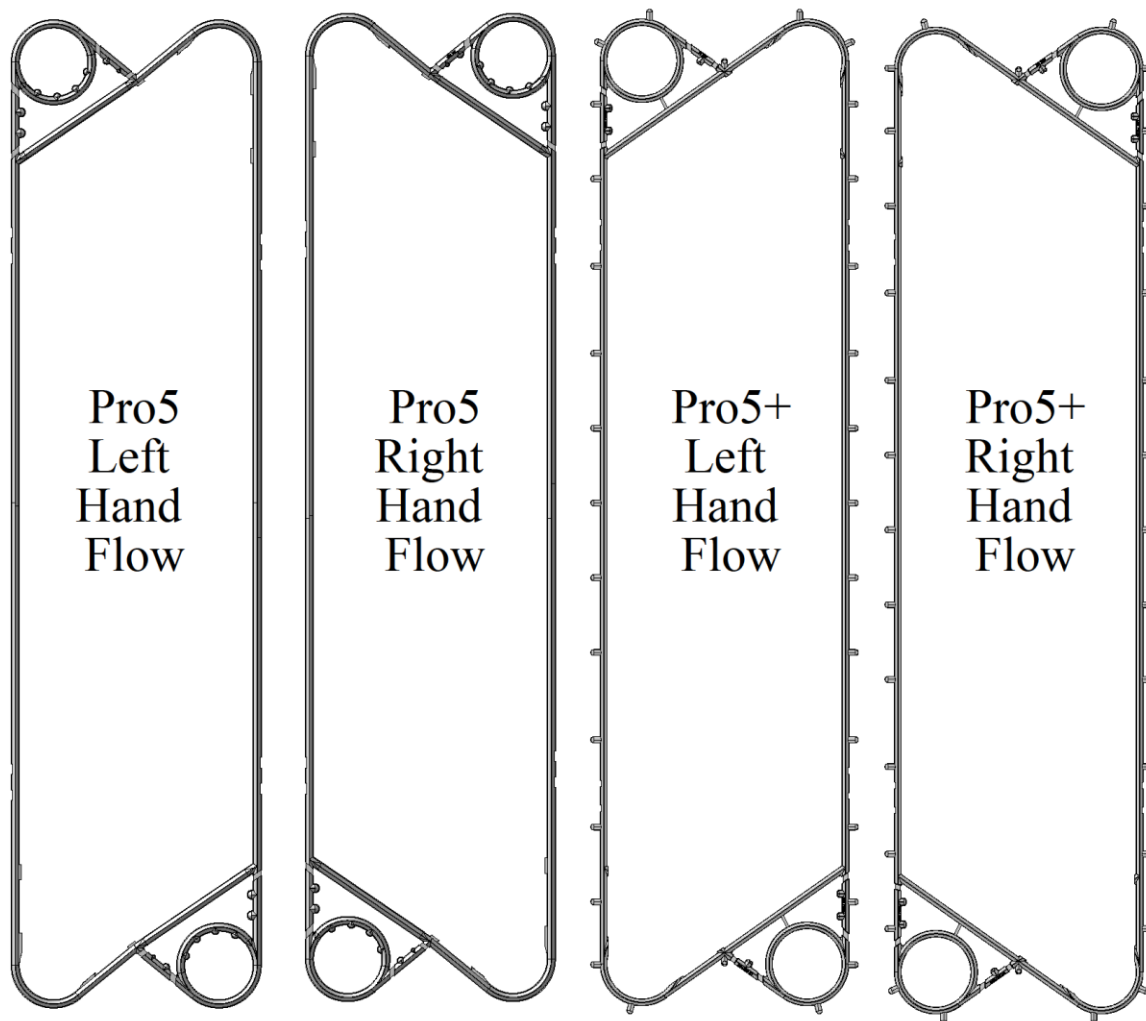


Plate Type	Part Number for NBR Gasket	Part Number for EPDM Gasket
Pro5 Right Hand	AGPRO501N	AGPRO501E
Pro5 Left Hand	AGPRO502N	AGPRO502E
Pro5+ Right Hand	AGPRO5P01N	AGPRO5P01E
Pro5+ Left Hand	AGPRO5P02N	AGPRO5P02E
Pro5 Port Gasket	AGPRO504N	AGPRO504E

Pro5 Flow Gaskets


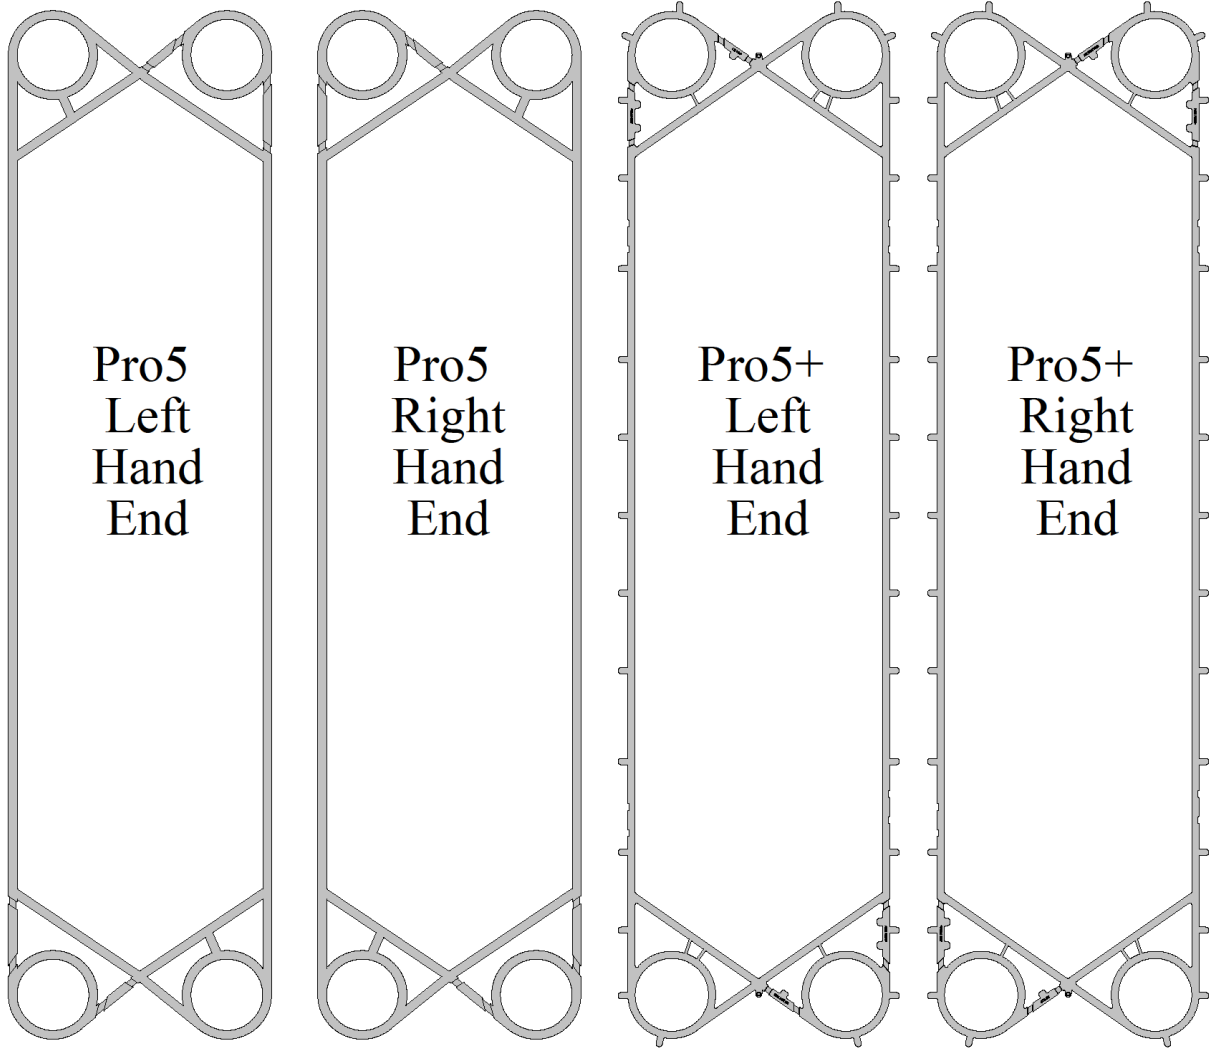


Plate Type	Part Number for NBR Gasket	Part Number for EPDM Gasket
Pro5 Right Hand End	AGPRO505N	AGPRO505E
Pro5 Left Hand End	AGPRO503N	AGPRO503E
Pro5+ Right Hand End	AGPRO5P04N	AGPRO5P04E
Pro5+ Left Hand End	AGPRO5P03N	AGPRO5P03E
Pro5 Port Gasket	AGPRO504N	AGPRO504E


Pro5 End Gaskets

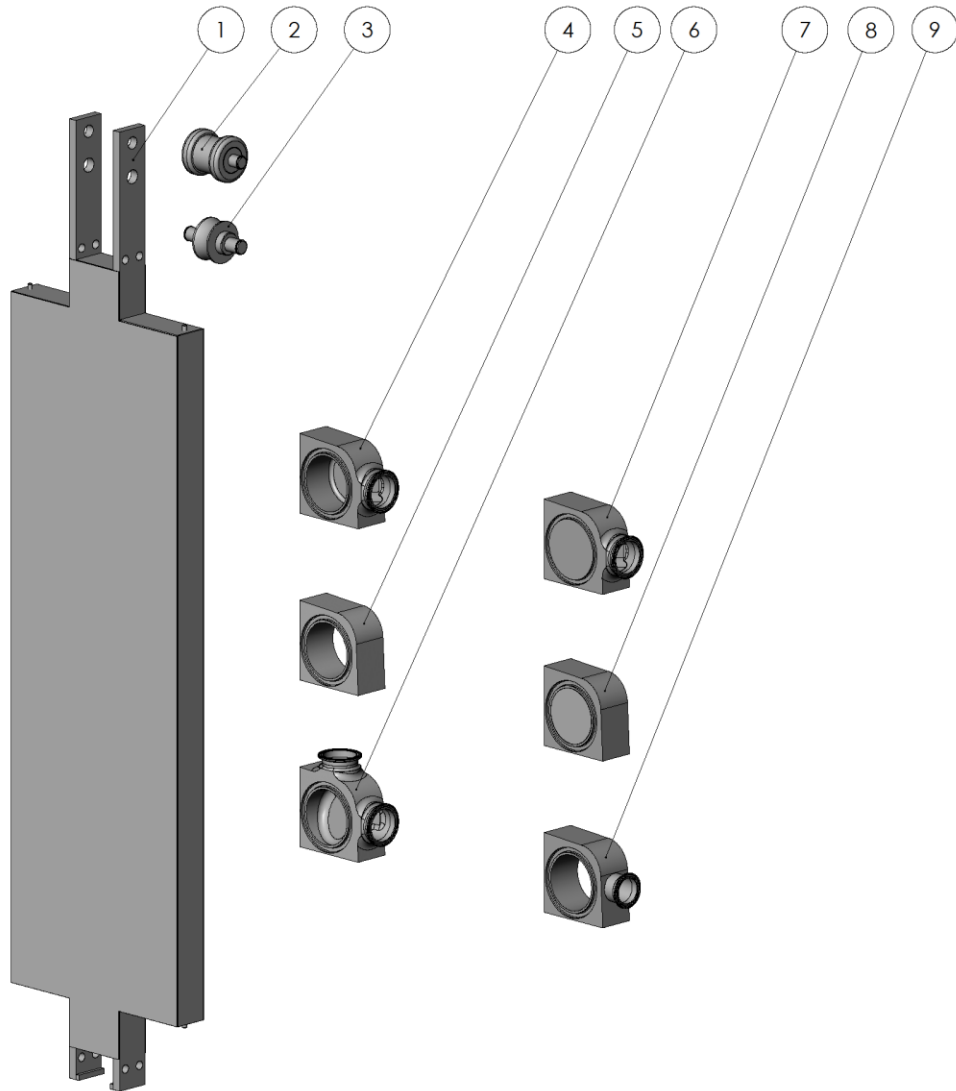

Item	Part Number	Description
1	11008450	Pro5 Standard Terminal Assembly without Bosses
2	11008553	Pro5 High Capacity Roller
3	11008551	AR51 Terminal Roller
4	11018561	Standard Pro5 Single Port Boss 'X' configuration
5	5997	Standard Pro5 Thru Port Boss
6	11008515	Standard Pro5 Double Port Boss
7	11008562	Standard Pro5 Single Port Boss 'V' configuration
8	11008563	Standard Pro5 Blank Port Boss
9	11008520	Standard Pro5 Thru Port Boss with 2" connection

Terminal measures 2-5/8" thick.

Pro5 Standard Terminal Components

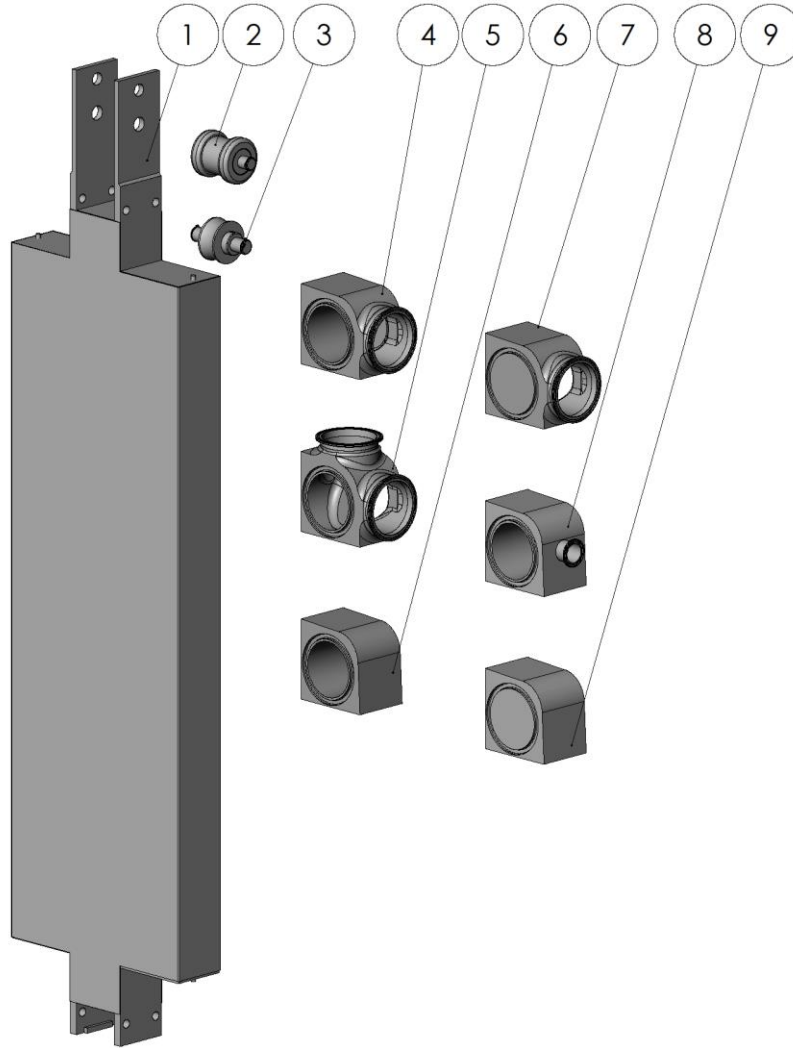

Item	Part Number	Description
1	11008460	Pro5 Wide Terminal Assembly without Bosses
2	11008013	Pro5 High Capacity Roller Assembly
3	11008551	AR51 Terminal Roller
4	11008565	Wide Pro5 Single Port Boss 'X' configuration
5	11008522	Wide Pro5 Double Port Boss
6	11008513	Wide Pro5 Thru Port Boss
7	11008566	Wide Pro5 Single Port Boss 'V' configuration
8	11008556	Wide Pro5 Thru Port Boss with 2" connection
9	11008498	Wide Pro5 Blank Port Boss

Terminal measures 4-1/16" thick.

Pro5 Wide Terminal Components

AGC NEW UNITS

Proflow™ Sanitary Frames

- Manufactured by AGC in USA
- Over 40 frame models to choose from
- Built to 3A standards



Heavy Duty — AR51-M
Expandable Version



HYDRAULIC END OPTION
easy open and close — proven design



Tie Bar Frames

PRO31
Hydraulic Frame

AGC REPLACEMENT PLATES

Latest technology at competitive prices




Up to
26%
Pressure drop
reduction

Energy
& Space
Savings
Version

Plate Pack Upgrades —
Upgrade your existing APV Plate Pack.
Plate in stock ready for shipment!



AGC Snap-in Gasket

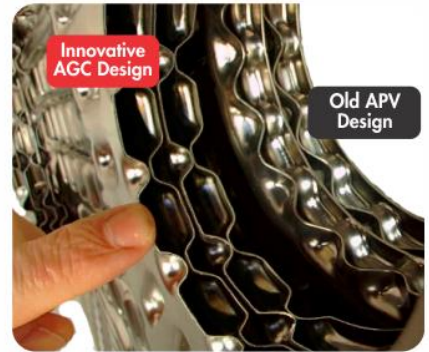

Innovative
AGC Design

Old APV
Design

Reduced Restriction Inlet —
just one of many improvements

sanitary
proflow
SERIES



AGC GASKETS & SERVICE

Regasketing services for every
make and model — **OEM quality**



PlateCheck


Meets
3A accepted
practices for
testing

Gaskets for all Makes & Models

Field Leak Check Service

- The only all-inclusive Field Leak Check Service
- Most units can be checked in 2 to 4 hours
- Our method checks ALL the plates in the unit as well as gaskets, frame condition and CIP response as recommended by 3A accepted practices for testing HTST & HHST systems

Field Leak Check is fast and easy

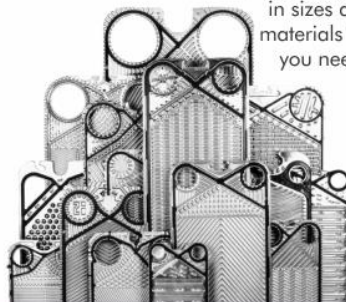

A wide variety
of gaskets/plates
in sizes and
materials that
you need



Gaskets and spares
IN STOCK!






sanitary™
proflow
S E R I E S



"Building the best, servicing the rest"™

AGC Heat Transfer, Inc. is the leading supplier of sanitary plate heat exchangers in North America, manufacturing plate heat exchangers specifically designed for sanitary applications. AGC offers complete heat exchangers services including new frames as well as upgrade plate packs, gaskets and spares that fit other brands. Frames available are tie-bolt, twin spindle and hydraulic (automatic) closure. AGC offers Platecheck™ Field Leak Testing of plate heat exchangers that meets the 3-A sanitary standard.

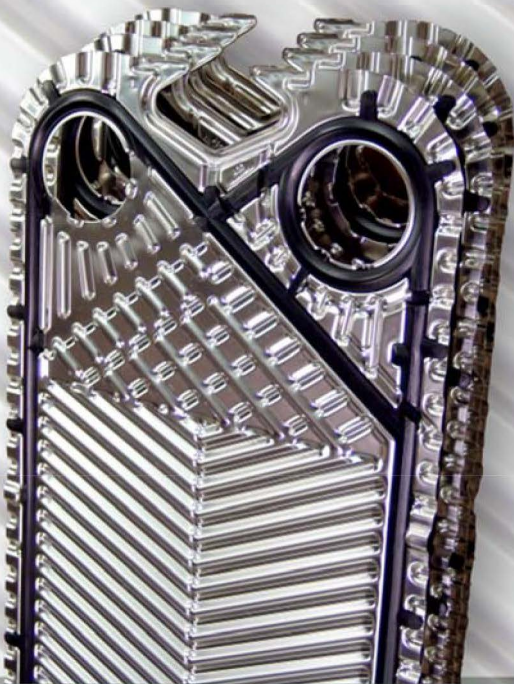

Western

3109 NE 230th Avenue
Fairview, OR 97024
+1.503.774.7342
+1.800.715.8820
FAX +1.503.774.2550

Central

8400 Lakeview Parkway
Suite 700
Pleasant Prairie, WI 53158
+1.847.301.6890
+1.888.489.8820

Eastern

10129 Piper Lane
Bristow, VA 20136
+1.703.257.1660
+1.800.825.8820
FAX +1.703.330.7940