


ATARI[®] 800[™]

ATARI[®] MACRO ASSEMBLER

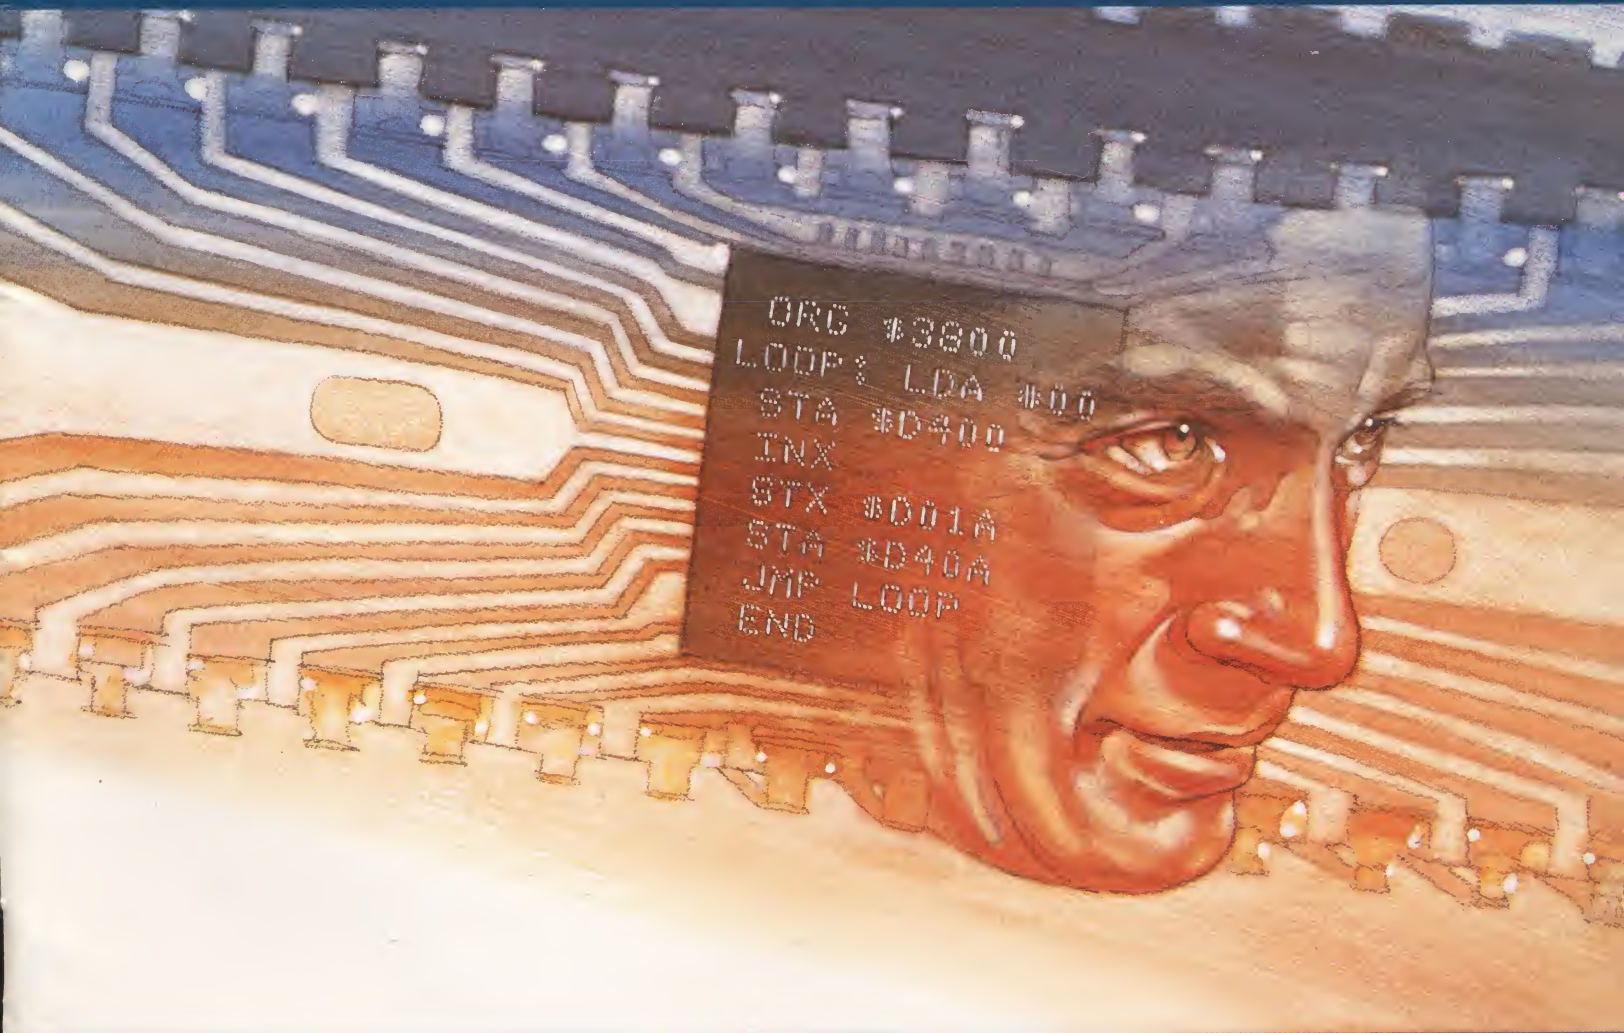

A Warner Communications Company 

Use with ATARI 800[™]
PERSONAL COMPUTER SYSTEM

ATARI® MACRO ASSEMBLER



 A Warner Communications Company

Every effort has been made to ensure that this manual accurately documents this product of the ATARI Home Computer Division. However, because of the ongoing improvement and update of the computer software and hardware, ATARI, INC. cannot guarantee the accuracy of printed material after the date of publication and cannot accept responsibility for errors or omissions.

Reproduction is forbidden without the specific written permission of ATARI, INC., Sunnyvale, CA 94086. No right to reproduce this document, nor the subject matter thereof, is granted unless by written agreement with, or written permission from the Corporation.

CONTENTS

1	INTRODUCTION	1
	Features of This Package	1
	Macros	1
	Conditional Assembly and Code Duplication	1
	Systext Files	1
	Program Listing Control	1
	Cross-Reference Tables	1
	Standard ATARI Computer and 6502 Mnemonics	2
	Contents of This Software Package	2
	Procedures	2
	Program Loading Instructions	2
	Creating a Source Program	2
	Assembling a Source Program	3
	Purpose of This Manual	3
	References	3
2	ASSEMBLER EXECUTION	5
	Command Line Syntax	5
	Command Line Options	5
	Command Line Examples	6
	User Interface	7
3	FILE USAGE	9
	Source Input Files	9
	System Text Files	9
	Object Output File	9
	Listing File	9
	Source Listing Format	10
	Sample Listing	10
	Symbol Map Format	14
4	LANGUAGE STRUCTURE	15
	Statements	15
	Label Field	15
	Operation Field	15
	Variable Field	15

Statement Termination	16
Comments	16
Definitions	16
Symbols and Names	16
Numbers	17
Character Strings	17
Expressions	18
Operands	18
<hr/>	
5 MACRO FACILITY	21
<hr/>	
Macro Definition	21
Macro Call	21
Code Duplication	22
Nesting	22
<hr/>	
6 PSEUDO-OPERATIONS	23
<hr/>	
ASSERT	23
DB	24
DC	24
DS	24
DW	25
ECHO ... ENDM	25
EJECT	26
END	26
EQU or =	27
ERR	27
IF ... ENDIF, IF ... ELSE ... ENDIF	27
INCLUDE	28
LINK	29
LIST	31
LOC	32
MACRO ... ENDM	33
ORG	35
PROC ... EPROC	35
REAL6	36
SET	36
SPACE	36
SUBTTL	37
TITLE	37
USE	38
VFD	38

7	PSEUDO-OP QUICK REFERENCE	41
8	INSTRUCTION MNEMONICS	43
9	USING THE ATARI MACRO ASSEMBLER WITH THE ATARI ASSEMBLER EDITOR SOURCE FILES	49
10	ERROR CODES	51

INTRODUCTION

FEATURES OF THIS PACKAGE

The **ATARI® Macro Assembler** is a software development tool for writing 6502 assembly language programs for the **ATARI 800™ Home Computer**. The features of this assembler include macros, conditional assembly, code duplication, access to library definitions, program-listing control, and cross-reference tables. It offers fast compilation and uses standard 6502 mnemonics.

MACROS

The macro feature allows you to define code words to represent multiple instructions. It makes it easy for you to use a sequence of code many times in a program.

CONDITIONAL ASSEMBLY AND CODE DUPLICATION

Conditional assembly allows the generation of source code based on certain conditions. Combined with macros this offers a powerful and versatile way of coding assembly language programs. An ECHO pseudo-operation enables you to repeat sections of code (similar to the macro feature, but it does not allow parameter passing).

SYSTEXT FILES

Often you will want to create and store symbols and macro definitions on a library file. Once created, the symbols can be referenced by any of your source programs. Such a library file can ease your program development effort.

PROGRAM LISTING CONTROL

The LIST pseudo-op lets you tailor and annotate programs to fit your exact needs. The pseudo-op makes documentation easier by allowing listing control and page headings.

CROSS-REFERENCE TABLES

The Macro Assembler also includes an optional cross-reference table so that you can reference labels and variables in the source program quickly.

STANDARD ATARI COMPUTER AND 6502 MNEMONICS

A file containing the ATARI Home Computer Hardware Register addresses and OS Shadow Register addresses is included on your Macro Assembler diskette. You may reference standard ATARI Computer mnemonics in your programs using this file. See Systext reference in "Command Line Options" in Section 2.

Standard MOS Technology 6502 microprocessor coding format is used in this assembler. The formation of expressions also follows the standard conventions.

CONTENTS OF THIS SOFTWARE PACKAGE

The Macro Assembler includes:

- A diskette containing both the Macro Assembler and Program-Text Editor™ software
- A reference card giving pseudo-ops, error codes, and Program-Text Editor commands and messages
- This reference manual for the ATARI Macro Assembler
- An operators manual for the ATARI Program-Text Editor

PROCEDURES

PROGRAM LOADING INSTRUCTIONS

1. Connect the ATARI 800 Home Computer to a television set and to a wall outlet as instructed in the operators manual.
2. Connect the **ATARI 810™ Disk Drive** to the computer console and to a wall outlet as instructed in the *ATARI 810 Disk Drive Operators Manual*. Verify that the disk drive is set to DRIVE CODE 1 as instructed in the operators manual.
3. Open the cartridge door on the top of the computer console. Remove all cartridges from the top front cartridge slots. Close the cartridge door.
4. Turn on your television set.
5. Turn the disk drive POWER (PWR) switch to ON. Two red lights (the BUSY light and the PWR ON light) will come on.
6. When the BUSY light goes out, open the disk drive door by pressing the door handle release lever.
7. Insert the diskette containing the Macro Assembler and Program-Text Editor programs into disk drive 1.
8. Switch the POWER (PWR) switch on the computer console to ON.

The DOS II Menu will now appear on your screen.

CREATING A SOURCE PROGRAM

To use the editor, refer to the *ATARI Program-Text Editor Manual*.

After you create your source program, exit the Program-Text Editor using the commands that will return you to DOS:

1. Press **OPTION**.
2. Type **EXIT** and press **START**. (This returns you to DOS.)

Then, to assemble your source program:

1. Type the letter **L** and press **RETURN**.
2. Type **AMAC** and press **RETURN**.

ASSEMBLING A SOURCE PROGRAM

1. Refer to "Command Line Syntax" (in Section 2) for the command line syntax and command line options. Press **RETURN** after the command line.
2. After the assembly, press the **RETURN** key to return to DOS. Your DOS directory will now show that you have created an object file with an extension, OBJ.

PURPOSE OF THIS MANUAL

This manual is intended to show you how to use the Macro Assembler. If you plan to use the Program-Text Editor for creating your source program, it is suggested that you read the *ATARI Program-Text Editor Manual*, then practice creating files.

A knowledge of assembly language and ATARI DOS II is also necessary. The texts listed below will assist in your study of assembly language. If you wish to become familiar with the special features of the ATARI Home Computer, a copy of the *ATARI Technical Users Notes* will be needed.

REFERENCES

We recommend the following books:

MOS Programming Manual by MOS Microcomputers
SY6500/MCS6500 Microcomputer Family Programming Manual by SYNERTEK
6502 Assembly Language Programming by Lance Leventhal
6502 Software Design by Leo Scanlon
6502 Software Gourmet Guide and Cookbook by Robert Findley

ATARI publications:

ATARI DOS II Reference Manual
ATARI Technical Users Notes

ASSEMBLER EXECUTION

COMMAND LINE SYNTAX

The Macro Assembler is accessed by the ATARI DOS II Menu option L. When DOS asks for a filename to load, type:

AMAC 

Once AMAC is loaded into memory, it will ask you to "Enter source filename and options." The source filename must always be specified. Any options you wish to use should follow the filename, separated by either a comma or space. The command line is terminated by a carriage return. The command line cannot be edited using the cursor control keys.

The general form of the command line is: <filespec> opt1,...optn. Where <filespec> is the source file to be assembled and is of the form <device>:<filename>.<extension>. The above command line could have been typed with any mixture of upper- or lowercase characters. The assembler will convert all command line characters to uppercase before interpretation.

COMMAND LINE OPTIONS

The 'opt1,...optn' are optional parameters (in any order) chosen from this list:

H=Dn: (Default is H=Dn: where n is the same disk drive as the source file)	Generate object output file to the specified disk drive where n may be 1, 2, 3, or 4. If no filename is specified, the object file will be named with the input source filename and the extension, OBJ.
H = <filespec>	Write object code to <filespec>.
H=0	Do not generate any object code.
L=P:	List output to printer.
L=Dn:	List output to specified disk drive (n= 1, 2, 3, or 4). List filename has the input source filename and the extension PRN.
L=S:	Output listing to the screen.
L=0 (Default)	Do not produce listing for this assembly.
O=n	Preset the value of the run address of the object program. Specifying "O=n" on the command line is exactly like the statement "END n" found at the end of an assembly program.
O=0 (Default)	Set the value of the run address to zero.

PS = n (Default is PS = 63)	Set page size to <n> source lines per page. Page size must be less than 127. When page size is less than 10, no title or subtitle lines nor page ejects are printed in the list file, and a full cross-reference is disallowed.
PS = 0	Do not print title and subtitle lines and page ejects to list file for this assembly.
S = <filespec>	Specify systext file. The S option may be repeated. The user may specify as many systexts as desired, so long as combined number of systexts and link files does not exceed the file limit of 40.
S	Use the default systext D:SYSTEXT.AST.
S = 0 (Default)	Specify no systext for this assembly.
R = F	Generate full reference map. List all global symbols and their references on the file specified by the L parameter.
R = S	Generate short reference map. List all global symbols and their values only on the file specified by the L parameter.
R = 0 (Default)	Do not generate reference map.
SL = n (Default is SL = 80 for P: and SL = 38 for S:)	Set the line length. Maximum length of the line output to the list file will be <n> characters; the rest of the line is discarded if <n> is greater than the device line length.

All numeric argument values (for O = n, PS = n, and SL = n) may be specified according to the general syntax for numbers. In particular, an explicit radix (decimal, binary, octal, or hexadecimal) can be used. Refer to Section 4, "Numbers," for radix specification.

All lowercase letters on the command line are converted to uppercase before interpretation.

COMMAND LINE EXAMPLES

D:TESTIT.ASM

will read input file D1:TESTIT.ASM (D: implies D1:), no listing will be produced, and the ATARI binary format object file will be D1:TESTIT.OBJ.

D:TESTIT.ASM H = 0 R = F L = S:

will assemble D1:TESTIT.ASM, suppress object file generation, and send a listing with full reference map to the screen.

D2:TESTIT.ASM H = D: L = D2: R = F O = \$200

The assembler will assemble the file D2:TESTIT.ASM generating the object file D1:TESTIT.OBJ, and will produce a listing and full reference map in D2:TESTIT.PRN. In addition, it will also set the run address to \$200.

D2:TESTIT.ASM S S=D2:MSYS.AST L=P: R=F H=D: O=\$1700

The assembler will process the two systext files D1:SYSTEXT.AST and D2:MSYS.AST, assemble the file D2:TESTIT.ASM, produce the object file D1:TESTIT.OBJ with a run address of \$1700, and print a listing with full reference map on the printer.

USER INTERFACE

The assembler execution may be prematurely terminated by pressing the **BREAK** key. When output listing is directed to the screen, its execution can be temporarily halted by simultaneously pressing the **CTRL** key and the **1** key. Pressing those two keys again will restart execution.

If a disk-write error happens (usually disk or directory full), the offending file (object or list file) is erased, an error message is issued to the screen, and further attempts to write to the file are suppressed. Assembly then continues normally.

Assembly time errors are printed to the screen as well as to the list file.

FILE USAGE

SOURCE INPUT FILES

You can specify source input files by using the:

- First command line argument
- Systext file argument (S parameter)
- LINK pseudo-instruction
- INCLUDE pseudo-instruction

All input files must be in Program-Text Editor format. They consist of a line or lines of ATASCII characters terminated by ATASCII End-of-Lines <EOL>.

SYSTEM TEXT FILES

A system text file (systext) is an assembly language file of symbols and macro definitions. The programmer can predefine symbols here for many different programs. Some examples are:

- ATASCII control characters (BS, TAB, ESC, EOL,...)
- Addresses (entry points into CIO, SIO, and channel locations)
- Macros

If an assembly error is encountered while scanning a systext file, the assembler aborts with an error message.

OBJECT OUTPUT FILE

The object output file generated by the assembler has a default file extension of OBJ and is in ATARI binary format. Refer to the *ATARI DOS II Reference Manual* for detail specifications of binary format.

LISTING FILE

The output listing of the source program generated by the assembler has a default extension of PRN.

The Macro Assembler has a flexible set of listing control pseudo-ops which allows the user to generate only the desired program content.

Page heading (unless suppressed via PS=0) contains the assembler version and page number as well as optional user-specified title information (see TITLE and SUBTTL pseudo-ops).

The LIST pseudo-op (or L command line argument) controls which source lines are listed. Each code line listed begins with 20 columns of information generated by the assembler.

Column 1 of the listing output is reserved exclusively for errors; a listing free of assembly errors will not have any printing in column 1. An error count is reported at the end of the assembly. (See Section 10, "Error Codes.")

SOURCE LISTING FORMAT

	1	2	
	123456789	.123456789	
E addr#	hhhhhhhhh		Line that generates code.
R addr	= vvvv		EQU, SET, IF, etc.
R -			Line that is skipped.
O addr	= vvvv #		Location and origin counters are unequal.
R addr			
	+ hhhhhhhhhh		Macro-generated line.
addr	hhhh \addr		Destination address of PC relative jumps.

Column	Description
1	Error flag or blank. See Section 10 for the meaning of error flags.
2	Blank.
3-6	Address location of this instruction (value of the location counter).
6	— sign means line not assembled due to IF...ELSE. Line only listed if LIST F in effect.
7	# sign means the location and origin counters are unequal.
8	+ sign means assembler-generated line. Line listed if LIST M in effect.
9-18	hhhhhhhhh is the resultant code. Up to five bytes are listed. If LIST G or D is in effect, multiple lines will be listed with up to five bytes on each.
11-14	vvvv = value of expression.
19-20	Always blank.
21-80	Source statement.

SAMPLE LISTING

=009B	I/O EQUATES
=0030	EOL = \$9B
=0340	IOCB3 = \$30
=0340	ICHID = \$0340
=0341	ICDNO = ICHID+1
=0342	ICCOM = ICDNO+1
=0343	ICSTA = ICCOM+1
=0344	ICBAL = ICSTA+1
=0345	ICBAH = ICBAL+1
=0346	ICPTL = ICBAH+1
=0347	ICPTH = ICPTL+1
=0348	ICBLH = ICPTH+1
=0349	ICBLH = ICBLH+1
=034A	ICAX1 = ICBLH+1
=034B	ICAX2 = ICAX1+1

```

=0003      OPEN =    $03
=0005      GETREC =  $05
=0009      PUTREC =  $09
=000C      CLOSE =  $0C
=0004      OREAD =  $04
=0008      OWRITE = $08
=0088      EOF =    $88
=E456      CIOV =   $E456
=0040      IOCB4 =  $40
;
;FIRST INIT THE IOCB FOR OPEN
;
0000#      = 5000      ;                ORG $5000

;DATA REGION
5000      44323A5445  ;NAME1    DB        'D2:TEST1',EOL
           =0050      BUF1SZ    =        80
           =5009      BUF1      =        *
5009      = 5059      ;                ORG        * + BUF1SZ
5059      50323A9B   NAME2    DB        'P2:',EOL
505D      A230       START    LDX        #IOCB3
505F      A900       ;                LDA        #LOW NAME1
5061      9D4403     ;                STA        ICBAL,X
5064      A950       ;                LDA        #HIGH NAME1
5066      9D4503     ;                STA        ICBAH,X
5069      A900       ;                LDA        #0
506B      9D4B03     ;                STA        ICAX2,X
;
; "OPEN" THE DISK
;
506E      A903       ;                LDA        #OPEN
5070      9D4203     ;                STA        ICCOM,X
5073      2056E4     ;                JSR        CIOV
5076      BC4303     ;                LDY        ICSTA,X
5079      1003 ^507E ;                BPL        L1
507B      4CA250     ;                JMP        ERR2
;
;CHANNEL 4 IS PRINTER
;
507E      A240       ;                L1          LDX        #IOCB4
5080      A959       ;                LDA        #LOW NAME2
5082      9D4403     ;                STA        ICBAL,X
5085      A950       ;                LDA        #HIGH NAME2
5087      9D4503     ;                STA        ICBAH,X
508A      A908       ;                LDA        #OWRITE
508C      9D4A03     ;                STA        ICAX1,X
508F      A900       ;                LDA        #O
5091      9D4B03     ;                STA        ICAX2,X
;
; "OPEN" THE PRINTER
;
5094      A903       ;                LDA        #OPEN
5096      9D4203     ;                STA        ICCOM,X
5099      2056E4     ;                JSR        CIOV
509C      BC4303     ;                LDY        ICSTA,X
509F      1004 ^50A5 ;                BPL        TP10

```



```

;
;ERROR — JUST BRK
;
50A1      00      ERR1      BRK
50A2      00      ERR2      BRK
50A3      00      ERR3      BRK
50A4      00      ERR4      BRK
;
;SETUP TO READ A RECORD
;
50A5      A230    TP10      LDX      #IOCB3
50A7      A905                LDA      #GETREC
50A9      9D4203           STA      ICCOM,X
50AC      A909                LDA      #LOW BUF1
50AE      9D4403           STA      ICBAL,X
50B1      A950                LDA      #HIGH BUF1
50B3      9D4503           STA      ICBAH,X
;
;READ RECORDS
;
50B6      A950      LOOP      LDA      #LOW BUF1SZ
50B8      9D4803                STA      ICBL,L,X
50BB      A900                LDA      #HIGH BUF1SZ
50BD      9D4903           STA      ICBLH,X
50C0      2056E4           JSR      CIOV
50C6      1004 ^50CC        BPL      PRNTR
;
;NEG STATUS ON READ — EOF
;
50C8      C088      TP20      CPY      #EOF
50CA      D0D7 ^50A3        BNE      ERR3
;
;PRINT A RECORD
;
50CC      BD4803           PRNTR    LDA      ICBL,L,X
50CF      A240                LDX      #IOCB4
50D1      9D4803           STA      ICBL,L,X
50D4      A230                LDX      #IOCB3
50D6      BD4903           STA      ICBLH,X
50D9      A240                LDX      #IOCB4
50DB      9D4903           STA      ICBLH,X
50DE      A909                LDA      #PUTREC
50E0      9D4203           STA      ICCOM,X
50E3      A909                LDA      #LOW BUF1
50E5      9D4403           STA      ICBAL,X
50E8      A950                LDA      #HIGH BUF1
50EA      9D4503           STA      ICBAH,X
50ED      2056E4           JSR      CIOV
50F0      BC4303           LDY      ICSTA,X
50F3      1003 ^50F8        BPL      L3
50F5      4CA450           JMP      ERR4
50F8      A230      L3      LDX      #IOCB3
50FA      BC4303           LDY      ICSTA,X
50FD      C088                CPY      #EOF
50FF      F003 ^5104        BEQ      L2
5101      4CA550           JMP      TP10

```

5104	A90C	L2	LDA	#CLOSE
5106	9D4203		STA	ICCOM,X
5109	2056E4		JSR	CIOV
510C	A90C		LDA	#CLOSE
510E	A230		LDX	#IOCB3
5110	9D4203		STA	ICCOM,X
5113	2056E4		JSR	CIOV
5116	00		BRK	
5117			END	

No ERRORS, 39 labels, \$A3E6h free.

BUF1	5009	1#36	2/28	2/30	2/60	3/ 2		
BUF1SZ	0050	1#35	1/37	2/35	2/37			
CIOV	E456	1#25	1/51	2/12	2/39	3/ 4	3/18	3/23
CLOSE	000C	1#21	3/16	3/20				
EOF	0088	1#24	2/45	3/12				
EOL	009B	1#3	1/34	1/38				
nERR1	50A1	2#18						
ERR2	50A2	1/54	2#19					
ERR3	50A3	2#20	2/46					
ERR4	50A4	2#21	3/ 8					
GETREC	0005	1#19	2/26					
ICAX1	034A	1#15	1/16	2/ 4				
ICAX2	034B	1#16	1/45	2/ 6				
ICBAH	0345	1#10	1/11	1/43	2/ 2	2/31	3/ 3	
ICBAL	0344	1# 9	1/10	1/41	1/60	2/29	2/61	
ICBLH	0349	1#14	1/15	2/38	2/54	2/56		
ICBLL	0348	1#13	1/14	2/36	2/50	2/52		
ICCOM	0342	1# 7	1/ 8	1/50	2/11	2/27	2/59	3/17
		3/22						
ICDNO	0341	1# 6	1/ 7					
ICHID	0340	1# 5	1/ 6					
ICPTH	0347	1#12	1/13					
ICPTL	0346	1#11	1/12					
ICSTA	0343	1# 8	1/ 9	1/52	2/13	2/40	3/ 6	3/11
IOCB3	0030	1# 4	1/39	2/25	2/53	3/10	3/21	
IOCB4	0040	1#26	1/58	2/51	2/55			
L1	507E	1/53	1#58					
L2	5104	3/13	3#16					
L3	50F8	3/ 7	3#10					
nLOOP	50B6	2#35						
NAME1	5000	1#34	1/40					
NAME2	5059	1#38	1/59	1/61				
OPEN	0003	1#18	1/49	2/10				
nOREAD	0004	1#22						
OWRIT	0008	1#23	2/ 3					
PRNTR	50CC	2/41	2#50					
PUTREC	0009	1#20	2/58					
nSTART	505D	1#39						
TP10	50A5	2/14	2#25	3/14				
nTP20	50C8	2#45						

SYMBOL MAP FORMAT

When R=S is selected, the short symbol map is printed at the end of the program listing. For each symbol name in the program, the following is printed:

sa symbol hhhh, where:

<s> is blank or "s" for a name introduced in a systext file.

<a> is either blank or

U= undefined, or

D= doubly defined, or

n = not referenced.

<symbol> is the name of the symbol.

<hhhh> is the symbol value in hexadecimal, or "mac" if the name is a macro.

Four symbols are printed on each line, using the default line length.

When R=F is selected, the full cross-reference map follows the source listing. On each line, in addition to the R=S information above, cross-reference information is listed. Each reference has the form:

ppp/ll

where <ppp> equals page number and <ll> equals line number. For a definition reference, the / is replaced by #.

Names beginning with a : (local symbols) and a ? (usually macro invented) are not included in either type of symbol map output.

Symbols defined in a systext file appear in the cross-reference only if they are used during the assembly; they are flagged with an s.

LANGUAGE STRUCTURE

A Macro Assembler source program consists of a sequence of statements, comments, and definitions. Statements are the fundamental units of assembly. Comments do not affect assembler operation or object output. Definitions may be conditionally assembled, saved for later assembly, or repeated.

All characters in a statement are converted to uppercase except those in the comment field.

STATEMENTS

A statement is divided into three fields: a label field, an operation field, and a variable field.

LABEL FIELD

The label field begins with the first character of the statement and is terminated by a blank or an end of statement. If a colon (:) is the last character of the label field, it is discarded. For example:

```
SYMBX:   ADC    MEM,X    ;comment
```

SYMBX is the defined label.

OPERATION FIELD

The operation field begins with the first nonblank character after the label field and terminates with the next blank character. Machine op codes, pseudo-ops, and macro calls all occur in the operation field. If this field is empty, the variable field must be empty also. For example:

```
SYMBX:   ADC    MEM,X    ;comment
```

ADC is the machine op code.

VARIABLE FIELD

The variable field begins with the first character after the operation field and is terminated by an end of statement. Variables, expressions, and other arguments used by the operation field appear in this field. For example:

```
SYMBX:   ADC    MEM,X    ;comment
```

MEM,X is the variable.

STATEMENT TERMINATION

A statement is terminated by:

Beginning of comment (;), or
End-of-Line, or
Logical end of statement mark (!).

```
SYMBX:  ADC    MEM,X    ;comment
SYMBY:  ADC    MEM,X
SYMBZ:  ASL    ! ASL    ! ASL    ! ASL    ; 4 statements
```

In the last example (SYMBZ), one source line contains four statements. Three of them are terminated with an !, the last by a ;. Identical object code would be generated if the ! were replaced by End-of-Line <EOL>. When an ! and a ; occur inside quotation marks, they do not function as separators.

COMMENTS

A comment begins with a ; following the variable field of a statement. A comment affects neither the assembler operation nor the object code generated.

Comments that begin in column 1 are full-line comments; they begin with a ; or an *. (Please note that an * signifies a comment only when found in column 1 — column 1 of input is listed at column 21 on an output listing.) A comment is terminated by EOL.

```
LABEL:  LDA    129        ;This is a "comment."
;This is a full-line comment.
*This is another full-line comment.
FROG:   STA    MEM,X     This is not a legal comment.
                               ;(above comment needs a ;)
```

DEFINITIONS

Definitions begin with specific types of statements (MACRO, ECHO, IF). The end of a definition is dependent on what started the definition, for example, ENDM is used to terminate MACRO and ECHO definitions, while ENDIF terminates an IF range.

SYMBOLS AND NAMES

A symbol is a sequence of characters that identifies a value or a macro. The first character cannot be a digit. Symbols may be any length, but they must be unique in the first six characters. The following characters may be used in a symbol name:

A-Z The uppercase letters of the alphabet
a-z The lowercase letters of the alphabet (converted to uppercase by the assembler)
: May only be first character indicating a local symbol
? If first character, then the symbol is excluded from the reference map
@ Additional alpha extension. Cannot be first character of an identifier, since it is also a prefix for octal numbers.
0-9 Digits

The underline character (___) may occur in a name as written but is discarded. Lowercase letters are mapped into the corresponding uppercase. When a colon occurs as the first character in a name, it denotes a name local to the current PROC (see PROC pseudo-op in Section 6). A colon at the end of a name in the label field is interpreted as a terminator but in any other position, it is ignored.

Examples:

```

ERROR__5:                                ;the assembler ignores __, label is
                                           ERROR5
                                           JMP      RESTART ;the assembler uses first 6
                                           ;characters: 'RESTAR'
TEST      LDA      COUNT
           BNE     Error5 ;'Error5' converted to ERROR5
:LOCAL:   DEC
                                           ;;local: is a local symbol

```

NUMBERS

A number can be in any one of three forms, depending on the prefix.

Prefix	Base
%	2 Binary
@	8 Octal
\$	16 Hexadecimal

The lack of a prefix implies decimal.

Digits greater than the radix are not allowed. The underline character (___) is ignored.

The Macro Assembler provides constant conversion formatting for 6-byte real numbers as specified in the current ATARI BASIC. Real numbers are not valid expression arguments in variable fields. (See "REAL6," pseudo-op in Section 6).

Examples:

```

BINVAL      EQU      %10 001 010
OCTVAL      EQU      @212
HEXVAL      EQU      $8A

```

CHARACTER STRINGS

The assembler accepts ATASCII characters \$20-\$7E as valid characters. A character string consists of any sequence of characters surrounded by single quotation marks ('n . . . n'). Within a string, a single quotation mark character is represented by two successive single quotation marks.

Character strings can be used in the TITLE and SUBTTL statements, as a DB or DC subfield, or as operands of relational operators.

The LSTR operator returns the length of a character string (see "Expressions" in this section).

Examples:

```
TITLE      'Sample Expressions'
DB         'This is a STRING.', $9B
DB         'Control characters are illegal in a long string'
DB         $9B
           ;Nonprintable characters may be represented
           ;by using their hexadecimal values, ' ,
           ;such as $9B for EOL',
DW         $2766, 'bp', 'BP' ;2-byte values
LDA        #43             ;a decimal number
ADC        #'C'           ;an ATASCII character
CMP        #'"'           ;an ATASCII character
```

EXPRESSIONS

An expression consists of operands combined with operators to produce a value. Operators of equal precedence are evaluated left to right. Brackets can be used to override the order of evaluation, since 6502 instructions use parentheses for indirect addressing. Expressions are evaluated using 16-bit two's complement (unsigned) arithmetic. Overflow is ignored.

Real numbers are not valid arguments in expressions.

Examples:

```
DB         'Here are some fancy expressions:'
DB         43 + 22 shl 3 mod 6
DB         'Q' + REF1 xor [99 and REF2]
AND        low ['ZZ' - ['A' xor 'a' + ['A' xor 'a'] shl 8]]
DW         rev [*O - *L]
```

OPERANDS

An operand is either a symbol, an expression enclosed in brackets, a number, a character string, or one of the following special elements:

```
*          = current location counter
*L         = same as *
*O         = current value of origin counter
*P         = current position counter number of defined byte
```

See LOC and ORG pseudo-ops for further discussion of *L and *O. Refer to the VFD pseudo-op for details on *P.

The comparison operators return a value of zero for false and \$FFFF for true. Numeric tests treat values as unsigned, so that [-1 < 0] will produce the answer false. Character string tests use the ATASCII collating sequence.

Operators

+		Sum or positive sign
-		Difference or negative sign
*		Multiply
/		Divide
NOT		Bit-by-bit complement
AND		Logical product, conjunction
&		Logical product, conjunction (same as AND)
OR		Logical sum, disjunction, inclusive OR
XOR		Logical difference, inequivalence, exclusive OR
=	EQ	Equality
<>	NE	Inequality
<	LT	Less than
<=	LE	Less than or equal to
>	GT	Greater than
>=	GE	Greater than or equal to
SHL		Shift left n bits
SHR		Shift right n bits
HIGH		Unary, high value to 8-bit field = $x / 256$
LOW		Unary, low value to 8-bit field = $x \text{ MOD } 256$
MOD		Modulus function
REV		Unary Reverse = $((\text{LOW } x) \text{ left and right SHL } 8) + (\text{HIGH } x)$
DEF		Test symbol previously defined
LSTR		Return the length of a character string

Precedence Levels

Highest	Brackets											
	HIGH	LOW	DEF	REV	LSTR							
	*	/	MOD	SHL	SHR							
	+	-	unary									
	+	-	binary									
	=	<>	<	<=	>	>=	NE	EQ	LT	LE	GT	GE
	NOT											
	& AND											
Lowest	OR XOR											

MACRO FACILITY

A macro is a sequence of source statements that are saved and then assembled through a macro call. A macro call consists of a reference to a macro name in the operation field of a statement. It often includes actual parameters to be substituted for formal parameters in the macro code sequence, so that code generated can vary with each assembly of the definition.

Use of a macro requires two steps: definition of the macro and reference to the macro.

MACRO DEFINITION

A macro definition consists of three parts: heading, body, and terminator.

Heading A macro definition starts with the name of the macro and the substitute parameter names in the variable field.

Body The body begins with the first statement after the heading that is not a comment line. The body consists of a series of instructions. All instructions other than END, including other macro definitions and calls, are legal within the body. However, a definition within a definition is not defined until the outer definition is called. Therefore, an inner definition cannot be called directly. Substitute parameters can occur anywhere in the body. They are prefixed by a percent sign (%):

%1 = first parameter

%2 = second

...

%9 = ninth parameter

%K = 4 hex digits, representing the serial number
of this macro call

%L = the label field of the macro call

%M = the name of the macro

%% = replaced by a single percent

Terminator A macro definition is terminated by an ENDM pseudo-instruction. The assembler counts the nesting level of MACRO/ECHO and ENDM pairs occurring in a macro body, so that the definition is terminated only by the corresponding ENDM.

Note: The ENDM pseudo-op must be preceded by a tab (►) character. Press **ESC** **CLR SET TAB** to get the tab character.

MACRO CALL

A previously defined macro is called when its name occurs in the operation field of a statement. If actual parameters appear in the call, they are substituted for the corresponding formal parameter in the macro body without evaluation. Only after the entire body has been expanded does assembly resume. Thus the statements generated by the macro may themselves contain further macro calls or definitions, with the nesting limited only by available memory.

Note: When writing recursive macros, take care in the coding of the termination condition(s). A macro that repeatedly calls itself will cause the assembler to terminate (eventually) with the message "Memory Overflow."

CODE DUPLICATION

The ECHO pseudo-instruction is used to repeat a code sequence. It is written similarly to a macro definition but with the following differences: heading is ECHO, not MACRO; no parameters are involved; the variable field of the ECHO statement specifies how many times the body is to be repeated. ENDM is also used to terminate an ECHO sequence (see ECHO pseudo-op).

NESTING

ECHO, MACRO, and IF blocks may be nested in completely arbitrary fashion, subject only to the constraint that it be properly nested; i.e., each block must be contained within the surrounding block.

PSEUDO-OPERATIONS

The Macro Assembler provides a comprehensive set of pseudo-operations (pseudo-ops) that permits you to control the assembly process.

For ease of comprehension, the following notations are used in this manual:

iglab	means the label field is ignored by the pseudo-op
<exp>	means that an expression is required
[exp]	means that an expression may appear, at your option
{exp}	means that the item inside the braces { } may appear zero or more times

ASSERT

CHECK ASSEMBLY CONDITION

iglab ASSERT <exp>

where: iglab = ignored label field
 exp = any legal expression: Nonzero implies true
 Zero implies false

ASSERT allows you to check for and flag illogical assembly conditions such as incorrect parameter values, programs that are too large, and undefined symbols.

The expression is evaluated and a P error will be generated if the expression is false; i.e., if the expression evaluates to zero.

The expression is not examined in Pass 1 of the assembler, so ASSERT can correctly check any condition. Forward references in the expression are evaluated correctly.

Examples:

To check that the location counter in a given piece of code is within bounds, in this case below \$2000, add the following line at the end of the assembly:

```
ASSERT * < $2000;test for limit exceeded
```

If the location counter reaches \$2000, a P error will generate.

If you are writing a utility subroutine and wish to check that a required symbolic definition has been supplied by the user of the subroutine, you might code:

ASSERT DEF [SYMB1]

If the required symbol SYMB1 is not defined by the user within the assembly, a P error will be generated. Note that the check for symbol definition is postponed until after Pass 1, allowing you to define SYMB1 anywhere in the source code.

DB

DEFINE BYTE

LABEL: DB <exp> ..., <exp>

where: <exp> = any legal expression, value, or string

DB allows you to directly specify the content of individual bytes of memory.

A string will generate as many bytes as it has characters; the first character will be the first byte generated. Characters in the string generate their 7-bit ATASCII codes without parity.

DB is used to intersperse code with text strings and for data tables.

The label field is significant; it will address the first byte generated.

Examples:

```
PNCHRS: DB ',./;@@<>?+!\'#$%&\'()_*= + (tm):-[]@',0
         DB $80
         DB LAB,LAB2,3,$46,$0AF,'xX',17 + QVAL*4,'coffee'
```

DC

DEFINE CHARACTER

LABEL: DC <exp> ..., <exp>

where: <exp> is any legal expression, value, or string

DC operates like DB, but the high-order bit (parity bit) of the last byte of each expression is set.

DC is used just like DB. The only difference is the parity bit of the last byte of each term.

Examples:

```
TBLHDR DC 'This is a table of offsets'
ADRLST DC 128, $36, $15, @21, 159
```

DS

DEFINE SPACE

LABEL: DS <exp16>

where: <exp16> = any legal expression, value, or string

DS allows you to reserve large blocks of memory. The expression <exp16> will be evaluated as an unsigned 16-bit value, and that value will be used to increment the assembler's internal origin and location counters.

Memory allocated is **not** initialized, and will contain unknown values at program execution time. The label field is significant; it will address the first memory byte allocated.

DS reserves space for use at execution time; it can be used to “skip over” an existing piece of ROM or provide for uninitialized data storage.

Example:

```
STORG:   DS    256 ;allocate 256 bytes
```

DW

DEFINE WORD

```
LABEL:   DW    <exp16> ..., <exp16>
          <exp16> = any expression or value or 1 to 2
                   character string
```

where: <exp16> = any expression, value, or string

DW defines the contents of blocks of memory. Values and expressions in the operand field are computed as unsigned 16-bit values and placed in memory as a machine word; the assembler places the Least Significant Byte (LSB) first, followed by the Most Significant Byte (MSB).

The label field is significant; it will address the first byte generated.

DW is intended to build tables of 16-bit values.

Examples:

```
          ;          Table of Addresses
DW  PWRON    ;Power on
DW  MSTRST   ;Master reset
DW  SYSCAL   ;System calibrate
DW  RECAL    ;Recalibration
DW  PWRDN    ;Power down
DW  BUTTON   ;Button press
DW  EMERG    ;Emergency shutdown
DW  ACTN1,ACTN2,ACTN3 ;Action numbers 1,2,3
DW  0        ;End of table
```

ECHO...ENDM

ECHO BLOCK

```
LABEL:   ECHO    <exp>
          ...
          ENDM
```

where: <exp> = numeric expression

ECHO . . . ENDM is a simple code-duplication facility. Code between an ECHO and its ENDM will be assembled as many times as specified by the <exp>.

The label field is significant; it addresses the value of *O when the ECHO pseudo-op is encountered.

An ECHO . . . ENDM construct may not exceed 255 repetitions; 0 (zero) repetitions means the ECHO . . . ENDM code is skipped. ECHO . . . ENDM is convenient for repetitious coding problems. An ECHO . . . ENDM sequence is much easier to create and maintain than, say, 127 repetitions of a 6-line procedure.

Note: The ENDM pseudo-op must be preceded by a tab (►) character.

Example:

```
    ; The following example will create a table
    ; of 20 entries of 4 bytes each and
    ; initialize each entry to a value of
    ; $10 37 00 00.
    ;
TABLE:  ECHO    20                ;20 times
        DB     $10, $37, $00, $00
        ENDM                ;End table
```

EJECT

EJECT PAGE

```
iglab  EJECT
iglab  = ignored label field
```

EJECT forces a page eject in the assembly listing if the listing is currently turned on.

EJECT can be used anywhere in an assembly source program.

The TITLE pseudo-op sets the internal title string and forces an EJECT.

Example:

```
EJECT
```

END

END PROGRAM

```
LABEL:  END [exp]
```

END tells the assembler where to stop assembly and begin the cross-reference map. The optional address field expression specifies the run address for an object program.

END must be the last statement of the last link file of an assembly.

The label field is significant, and addresses the value of the internal *O counter when the END is processed.

Example:

```
FREEESP:  END    ;end of program
```

EQU or =

EQUATE VALUE TO SYMBOL

```
LABEL: EQU <exp16>
LABEL: = <exp16>
```

where: <exp16> = 16-bit expression or value or
1 to 2 character string

EQU defines the symbol on the left as the value of the 16-bit expression in the operand field.

EQU creates symbols (labels) for use with other assembler instructions. Unlike SET, EQU defines a fixed value to a symbol that cannot be changed during the assembly.

The operand <exp16> must be an absolute value at the time of evaluation; any symbols used in the expression must have been previously defined.

Examples:

```
TSTCHR EQU '$'
TS2CHR EQU '@'
ZAP EQU $900
ZONK: = ZAP * 2
```

ERR

FORCE ERROR FLAG

ERR allows you to force an assembly error. The address field is ignored. When the assembler detects an impossible or undesirable condition at assembly time, ERR allows this to be flagged.

Examples:

```
IF * > 4000h
ERR ;Program too long
ENDIF
```

IF...ENDIF,
IF...ELSE...ENDIF

```
iglab IF <exp>
      <code for special situation>
iglab ENDIF
```

```
iglab IF <exp>
      <assembly code>
iglab ELSE
      <assembly code>
iglab ENDIF
```

where: <exp> = expression: nonzero => true
zero => false

IF ... ENDIF and IF ... ELSE ... ENDIF control textual input to the assembler. At assembly time, <exp> is evaluated and the result determines where the assembler will resume assembling the input file.

Whenever a single program should be configured as two (or more) distinct versions, IF ... ENDIF and IF ... ELSE ... ENDIF can test assembly-time values and assemble only the appropriate source lines.

Expression <exp> values for an IF must be numeric; strings greater than two characters are not allowed.

IF ... ENDIF and IF ... ELSE ... ENDIF constructs are “nestable”; depth of nesting is limited only by memory space available at assembly time.

Any “label” in the label field is ignored; a descriptive name can be placed here to help associate an IF with its ELSE (if used) and ENDIF.

Examples:

```
                IF      1          ;1 is nonzero, therefore true
                JSR    OUTM
                JMP    BOOT      ;these two lines will be assembled
                ENDIF
LABEL:         IF      DEF X      ;Condition
                JSR    PATH1      ;LABEL is ignored, but
LABEL:         JMP    ELSE      ;assists readability.
                JMP    PATH2
                ENDIF
```

INCLUDE

INCLUDE ANOTHER SOURCE FILE

LABEL: INCLUDE <filespec>

where: <filespec> = <Dn:filename.ext>, n can be 1, 2, 3, or 4

INCLUDE specifies another file to be included in the assembly as if the contents of the referenced file appeared in place of the INCLUDE statement itself. The included file may contain other INCLUDE statements. The listing of code in INCLUDE files is controlled by the I option of the LIST pseudo-op. (See INCLUDE example.)

INCLUDE allows you to divide large programs into manageable pieces for ease of editing, common use of libraries, file manipulations, and so forth.

Example:

The command line

```
D:INCLDEX.ASM
```

combined with the following, file setup:

```
<INCLDEX.ASM contents>
                TITLE          'INCLUDE example'
                ORG            $100
                INCLUDE        D:L1
                INCLUDE        D:L2
                INCLUDE        D2:L3.ACD
;*** End INCLDEX.ASM
```

```

<D:L1 contents>
        LDA          L1VAL
;*** End L1. ASM

<D:L2 contents>
        LDA          L2VAL
;*** End L2.ASM

<D2:L3.ACD contents>
L1VAL   DB          '*'
L2VAL   DB          0
        END          ;Stop assembly here.
;*** End L3.ACD

```

This would input to the assembler the following sequence of code:

```

        TITLE        'INCLUDE example'
        ORG          $100
        LDA          L1VAL
;*** End L1.ASM
        LDA          L2VAL
;*** End L2.ASM
L1VAL   DB          '*'
L2VAL   DB          0
        END          ;Stop assembly here.
;*** End L3.ACD
;*** End INCLDEX.ASM

```

LINK

LINK TO ANOTHER SOURCE FILE

```
iglab LINK <filespec>
```

where: <filespec> = <Dn:filename.ext>, n can be 1, 2, 3, or 4

The LINK pseudo-op is similar to the INCLUDE facility, except that link files are not assembled until the assembler reaches the end of the current input file. Whenever a LINK pseudo-op is found, it is stored away for processing along with any other LINK statements encountered when the current file is finished processing.

Each source file that contains links to other files will be completely processed, and its links will then be processed in order of occurrence. Any link that contains sublinks will be processed in an identical manner; link files may nest arbitrarily deep, as long as the total number of files does not exceed 40.

If A, Q, S, T, U, and X are assembly-code files, and if A links to Q, S, and X, and S links to T, and T links to U, then the order of assembly will be:

A, Q, S, T, U, X.

If the <filespec> extension is missing, it defaults to the extension used in the current input file; i.e., the file that contains the LINK pseudo-op.

Examples:

```
Link D2:PART1 ;Assemble file 'D2:PART1'
;using the same extension as
;the primary file
LINK D:UTIL.ACD
BLORP: LINK D2:PART2.ASM ;'BLORP' is ignored
```

LINK allows you to divide large programs into manageable pieces for ease of editing, common use of libraries, file manipulations, and so forth. The LINK facility supports linking across diskettes, so the entire source program does not have to be contained on the same diskette.

Example:

The command line

```
AMAC D:LINKEG.ASM
```

combined with the following link file setup:

```
<LINKEG.ASM contents>
TITLE 'LINK example'
ORG $100
LINK D:L1
LINK D:L2
LINK D2:L3.ACD
;*** Endx LINKEG.asm

<D:L1 contents>
LDA L1VAL
;*** Endx L1.asm

<D:L2 contents>
LDA L2VAL
;*** Endx L2.asm

<D2:L3.ACD contents>
L1VAL DB '*'
L2VAL DB 0
END ;Stop assembly here.
;*** Endx L3.acd
```

would input to the assembler the following sequence of code:

```
TITLE 'LINK example'
ORG $100
;*** Endx LINKEG.asm
LDA L1VAL
;*** Endx L1.asm
LDA L2VAL
;*** Endx L2.asm
L1VAL DB '*'
L2VAL DB 0
END ;Stop assembly here.
;*** Endx L3.acd
```

LIST

OUTPUT LISTING CONTROL

```
iglab LIST *  
iglab LIST <opt>...,<opt>
```

where: <opt> = optional minus sign followed by one of the following.

- C** List listing controls: EJECT, PAGE, SPACE, SUBTTL, and TITLE lines. (Default OFF.)
- D** List **detailed** code: i.e., list every byte generated by DB, DW, VFD, multi-line statements, and so forth.
- F** List code skipped by IF...ENDIF or IF...ELSE...ENDIF. (Default ON.)
- G** List **all** generated code: i.e., list every byte placed in the output object file, regardless of origin. Overrides -L. (Default OFF.)
- I** List code in INCLUDE files. (Default OFF.)
- L** Master LIST control. When -L option is in effect, nothing is listed except lines with errors, or when -L is overridden by the G option. (Default ON.)
- M** List all lines generated by macro references. (Default ON.)
- R** Accumulate cross-references. (Default ON.)
- S** List code referenced in a systext file. (Default OFF.)

LIST controls the listing produced during an assembly. However when an L=0 command line option is selected, LIST pseudo-op has no effect. The variable-field argument to LIST must be an *, or a set of options.

The LIST pseudo-op operates on a stack: each element of the stack is a set of option flags. The flag on top of the stack controls the content of the listing produced. Each call to the LIST pseudo-op will push, or pop, a flag on or from the stack.

“LIST *” means pop the list-option stack.

“LIST M” means make a copy of the current flag, setting the M-flag to ON, and push the new flag setting onto the stack.

LIST has obvious applications for detailed listing of newly written code, detailed listing of untested macro expansions, and suppressing the listing of library code.

Example:

A common code library may contain a set of routines all having the following IF block at the beginning:

```
IF      ILIST = 0    ;if common code list turned off  
LIST   -L, -R      ;no listing, no references  
ENDIF
```

Assume that the global symbol ILIST equals zero. A new flag setting is pushed onto the LIST option stack; the options (-L, -R) specify no listing is to be printed, and no cross-reference accumulation is to be done.

Each common code routine also has this IF...ENDIF at its end:

```
IF      ILIST = 0    ;if common code listing was off
LIST    *            ;go back to original list options
ENDIF
```

Now that the common code routine has been assembled, the LIST option stack will be popped. This returns the LIST option stack to its condition before the library was assembled.

LOC

SET LOCATION COUNTER

```
LABEL:   LOC      <exp16>
```

where: <exp16> = 16-bit expression or value

LOC sets the location counter. The expression is evaluated as an unsigned 16-bit value and assigned to the Macro Assembler's internal location counter (*L).

Code generated while the internal LOC counter (*L or *) does not equal the internal ORG counter (*O) will be flagged with # in column 7 of the listing.

The label field is significant; the label defined there will be set to the value of *L **before** *L is changed to <exp16>.

LOC assists you in generating self-overlaying programs. Code generated that way can be positioned anywhere in memory (using ORG), and the code will assemble as if it was located at the address expressed in the LOC statement. Of course, the code must be moved at run time to the address specified in its LOC statement before it can be executed.

Code assembled in one place for execution elsewhere can be especially handy for ROM-resident software, when pieces of code are copied from ROM to RAM before execution.

LOC is also useful for enhancing the readability of data tables for code conversion. The following example is a table of external BCD codes. The location counter is set to the ATASCII value of the first character in the table. In that way, the location field of the assembly listing contains an ATASCII value and the generated code field contains its associated external BCD value.

Examples:

```
                                ;Example of using LOC to enhance readability of
                                ;listings. The location counter will be set to
                                ;the ATASCII value that corresponds to the first
                                ;entry of a table of external BCD values.
                                ;
0000    = 5000                    ORG    $5000
5000    = 0041#                  LOC    'A'
```

```

0041# 61          EBCTBL: DB   $61   ;The LOC field of the listing
0042# 62          DB   $62   ;contains the ATASCII value
0043# 63          DB   $63   ;which corresponds to the
0044# 64          DB   $64   ;external BCD value in the
0045# 65          DB   $65   ;generated code field.
...
END

```

No ERRORS, 1 labels, \$2403 free.

```

nEBCTBL 0041          1# 8
                        ;Example of code to be assembled at $2000
                        ;to be
                        ;transferred to a ROM at $0F000
                        = 0500  COUNT      EQU    $0500  ;RAM working
                        ;storage
0000  = 2000          ORG   $2000
2000  = F000#        LOC   $0F000
F000# A907           LDA   #07
F002# 8D0005        STA   COUNT
F005# 4C0AF0        JMP   L1
F008# EA            NOP
F009# EA            NOP
F00A# CE0005        L1    DEC   COUNT
F00D# EA            NOP
F00E#               END

```

No ERRORS, 2 labels, \$23F7 free.

```

COUNT 0500        1# 4  1/ 8  1/12
L1      F00A        1/ 9  1#12

```

MACRO...ENDM

MACRO DEFINITION

```

MACNAM:  MACRO      parm1, ..., parmn
          <body>
          ENDM      ;end of MACNAM definition

```

where: <body> = any desired text which may include:

- %1..%9 = parameters number 1 ... 9
- %K = hexadecimal number of this macro call
- %L = label field of macro call
- %M = name of the macro

MACRO . . . ENDM is the macro definition construct.

The symbols in the variable field represent substitutable parameters. The symbol names are for documentation purposes only and may **not** appear in the body of the macro.

Parameters within the macro are represented by %x, where x is replaced with a decimal digit (1-9). %K within the body will be replaced with the serial number of the macro call as four hexadecimal digits. %L within the body will be replaced with the label field of the macro call. %M within the body will be replaced with the macro call.

The label field is significant; it denotes the name of the macro during an assembly.

Note: The ENDM pseudo-op must be preceded by a tab (►) character.

Macros may generate lines which turn out to be macro calls. Thus, a macro may directly or indirectly call itself. Care must be taken so that such a “recursive macro” does not call itself indefinitely.

Macros can be used to generate many copies of a procedure with different internal constants, or in conjunction with VFD to assemble fancy machine op codes (see VFD pseudo-op). There are many other potential uses for macros; these examples are only intended to demonstrate some of these uses.

Example:

One way to find the number of bits needed to contain a value is to compute the logarithm base 2 of the value. To do that at assembly time, we can use recursive macro calls to achieve a looping effect. Note that the condition tested on VAL ensures that the series of nested calls must eventually terminate.

```

;          COMPUTE SYM=Log 2
LOG2:     MACRO SYM,VAL
          IF      [%2] > 1
          LOG2    %1,[%2]/2
%1:       SET     %1+1
          ELSE
%1:       SET     0
          ENDIF
          ENDM
```

Example:

```

;macro to take the high nibble from a memory location
;and the low nibble from the accumulator, storing the
;result in the accumulator
```

```

NPACK:   MACRO    ADDR
          EOR     %1
          AND     #0F
          EOR     %1
          ENDM
```

Example:

It is sometimes necessary to be able to create a symbol name that is different for each call of a macro. The %K implicit parameter feature provides the means to do this. In the following macro, a unique jump-target label is created on each call. Note that all the labels begin with the ? character so that they will not clutter up the symbol table map.

```

;          Set accumulator= 0 if sign bit is set.
PARVAL:  MACRO
          BMI     ?%k
          LDA     #0
?%K:
          ENDM
```

ORG

ORIGIN COUNTER

LABEL: ORG <exp16>

where: <exp16> = any absolute, previously defined 16-bit value or expression

ORG sets the address of the first byte of a piece of code (or data) to a physical location in memory.

The label field is significant; it will address the value of *L, **before** <exp16> is evaluated.

The ORG command can be used in a program as often as desired. ORG cannot change the current USE block. (See USE pseudo-op.) ORG changes the block-relative value of the origin and location counters of the current USE block.

ORG is almost always used at the beginning of an assembly to define the starting position in memory of the resultant code. If not explicitly set by ORG (or the O= command-line parameter), the default value of the origin and location counters is zero.

Example:

```
PROG:        ORG        $100        ;Assemble at location $0100
SOCK:        ORG        *O         ;assign *O to *O and *L
```

PROC...EPROC

DEFINE LOCAL SYMBOL RANGE

LABEL: PROC .
 <body>
 EPROC

PROC tells the assembler that the following code is a procedure that may contain local symbols. A local symbol is a symbol that begins with a colon (:). It does not appear in the cross-reference map and cannot be referenced outside of the PROC range.

The label field is significant; it addresses the value of the *O counter when the PROC statement is processed.

PROC should be the first instruction of any procedure that contains local symbols.

A PROC is terminated by EPROC or the next PROC.

When assembling large programs where symbol table space is at a premium, local symbols can be used whenever appropriate to reduce memory requirements.

Example:

```
INIT:        PROC                     ;procedure
          LDA        #0             ;let A=0
          LDY        #0             ;Y indexes through memory
:Loop:       STA       (BEGMEM),Y    ;;Loop: is local symbol
          INY        ;won't appear in cross-reference
          BNE        :LOOP         ;Write 256 locations
```

REAL6

DEFINE REAL NUMBER VALUE

LABEL: REAL6 <fpnum>

where: <fpnum> is a floating point number

REAL6 provides constant conversion into 6-byte real numbers as supported by the ATARI operating system.

The label is significant because it denotes the starting location of 6 bytes of the converted number.

Example:

```
PI:          REAL6      3.14159
```

SET

DEFINE VALUE FOR SYMBOL

LABEL: SET <exp>

where: <exp> = numeric expression

The SET pseudo-op defines a symbol to a value representing the 16-bit expression of the operand field. SET works just like EQU, except that LABELs defined with SET may be redefined.

The expression in the variable field must be an absolute value at the time of evaluation. Any symbols used must have been previously defined.

Example:

```
TSTVAL      SET      027h
              ...
              DB          TSTVAL
              ...
TSTVAL      SET      099h
              ...
TSTVAL      SET      063h
```

SPACE

OUTPUT BLANK LINES TO LISTING

```
iglab SPACE <exp1>
iglab SPACE <exp1>,<exp2>
```

where: <exp1>,<exp2> = unsigned, numeric expressions

SPACE places blank lines in a listing. If SPACE has one argument, it will output that many blank lines only if doing so will not exceed the length of the current page. If <exp1> lines will not fit on the current page, SPACE will force an EJECT.

If SPACE has two arguments, they are both evaluated and <exp1> blank lines will be placed in the (currently on) listing **only if** the current page will have <exp2> lines left afterwards. If the current page does not have that sufficient room, SPACE will force an EJECT.

SPACE is useful when inserted just before a small procedure if X is the length of the procedure (X lines),

```
SPACE    4,X
<procedure>
```

will output 4 lines to the listing if the procedure will still fit on the current page. If the spacing and the procedure will not fit on the current page, SPACE will force an EJECT.

SUBTTL

DEFINE SECOND LINE OF OUTPUT LISTING

```
iglab  SUBTTL <string>
```

where: <string> = any string up to 32 characters

SUBTTL allows you to specify secondary title information. SUBTTL without a <string> argument is ignored. To erase the current subtitle, use an empty string.

Example:

```
TITLE      'Section 8 — Pseudo-Ops'
SUBTTL     'SUBTTL syntax and description'
SUBTTL     '' ; erase current subtitle
```

TITLE

DEFINE FIRST LINE OF OUTPUT LISTING

```
iglab  TITLE <string>
```

where: <string> = any string up to 32 characters

TITLE allows you to set/reset the assembler's internal page-heading string. TITLE with a string argument will place that string in the page header (see "Sample Listing," Section 3). If the string contains zero characters, the page header is reset to empty. TITLE without a string argument does not alter the current page header.

The first call to TITLE * will **not** eject a listing page; successive calls will always force an EJECT after any arguments are processed.

TITLE is commonly placed at the beginning of each file used in an assembly. Each linked file will begin assembly on a fresh page, topped with an appropriate header to describe its general contents.

Example:

```
TITLE      'XONC.asm — Interface Subroutines.'
```

USE

DEFINE BLOCK AREA

iglab USE name

USE establishes a new "USE block" or resumes use of a previously established block. The block in use is the block into which code is subsequently assembled. A program may contain up to 60 different USE blocks. The assembler is responsible for computing the length and actual origin of each block. Origins are assigned to each block in the order they are first encountered.

Associated with each USE block are registers to maintain the last values of the origin and position counters (*O and *P). See ORG and VFD for a description of those counters. Initially, the values of these counters default to zero for each USE block. The value of the location counter (*L) is not saved, but set equal to the value of the origin counter. If a LOC had been in effect previously, resetting of the location counter to produce the desired results is the responsibility of the programmer.

USE allows the programmer to specify consecutive pieces of code in discontinuous source segments. It is more convenient than using ORG.

Example:

```
BTABL:    USE      BTABL      ;(at beginning of program)
          USE      *          ;define base of jump vector
          ;(return to normal org)
          ...
NXLAB:    LDX      Something
          USE      BTABL
          DW      NXLAB      ;add address to jump vector
          USE      *
          STX     Addr      ;more
          ...
          USE      BTABL      ;(at end of program)
          DW      0          ;mark end of vector
          USE      *
          END
```

VFD

VARIABLE FIELD DEFINITION

LABEL: VFD <Fexp>\<exp>, ..., <Fexp>\<exp>

where: 1 <= <Fexp> <= 16
<exp> = any numeric expression

VFD defines variable fields. Each <Fexp> denotes a field width. Each <exp> denotes an expression to be placed into that field; <exp> values that exceed their associate <Fexp> field width values are truncated to match the <Fexp> value.

Negative values are evaluated with unsigned twos-complement arithmetic. For example, -32768 is 32768 and -1 will be represented by 65535. The resultant values are truncated to match the <Fexp> field width.

VFD manipulates the position counter (*P) to keep track of the bits remaining in a byte at the end of a VFD pseudo-op. If the next pseudo-op encountered is another VFD, the next field generated will begin with the unused bits left in the current byte. If the next code-generating pseudo-op is not VFD, the assembler will pad out the unused byte field with zeros.

VFD allows you to specify arbitrarily complex data fields without regard to byte or word boundaries.

Example:

```
MVINST:    VFD 2\01,3\DDD,3\SSS
```

VFD can be used this way inside MACRO-ENDM constructs to assemble code for unusual processors, special peripheral chips, and so forth.

Example:

```
SPEC:      VFD 7\@43,9\I'&&'
           VFD 13\$429
```

SPEC is a label point to a 29-bit field definition. The first 7 bits contain the value 43 octal. The next 9 bits contain the truncated string &&. The next 13 bits contain the value 429 hexadecimal. The *P counter currently points into the fourth byte after SPEC, with 3 bits left in the current byte.

PSEUDO-OP QUICK REFERENCE

iglab	ASSERT	<exp>	;Check assembly condition
LABEL:	DB	<exp>,<exp>	;Define bytes
LABEL:	DB	'ABCDE','f',\$0D	;Define long strings
LABEL:	DC	'ABCDE'	;DB with 80h added onto the last byte
LABEL:	DS	<exp>	;Define space
LABEL:	DW	<exp>,<exp>	;Define words
LABEL:	DW	'Xu',1234,'y'	;Define 1- or 2-character strings
LABEL:	ECHO	<exp>	;Duplicate code <exp> times
iglab	EJECT		;Page eject
iglab	ELSE		;Part of conditional assembly
LABEL:	END	[exp]	;End of assembly
iglab	ENDIF		;Terminate range of IF
iglab	ENDM		;Terminate MACRO or ECHO
iglab	EPROC		;Terminates local symbol range
LABEL:	EQU	<exp>	;Define LABEL equals <exp>
iglab	ERR		;Force error flag
iglab	IF	<exp>	;Begin conditional assembly
LABEL:	INCLUDE	<filespec>	;Include another source file
iglab	LINK	<filespec>	;Include another source file at the end of this source file
iglab	LIST	<opt>	;<opt> = list control option
iglab	LIST	*	;Pop list control stack
LABEL:	LOC	<exp>	;Set location counter
NAME:	MACRO	<parms>	;Begin macro definition
LABEL:	ORG	<exp>	;Set origin counter
LABEL:	PROC		;Begin local symbol range
LABEL:	REAL6	<exp>	;6-byte real constant conversion
LABEL:	SET	<exp>	;Reset LABEL to <exp>
iglab	SPACE	<exp1>,<exp2>	;Space <exp1> lines if <exp2> lines left on this page
iglab	SUBTTL	'text'	;Set listing subtitle
iglab	TITLE	'text'	;Set listing title
iglab	USE	<name>	;Use block declaration
LABEL:	VFD	<exp><exp>,...	;Variable field definition
LABEL:	=	<exp>	;Synonym for EQU

<exp> = required expression

[exp] = optional expression

'text' = strings

<filespec> = <device>:<filename>.<extension>

iglab = ignored label

INSTRUCTION MNEMONICS

The instruction mnemonics provided by the Macro Assembler are identical to the standard mnemonics defined by MOS Technology, with these exceptions:

- Quotation marks denoting character strings must be properly paired. (Some 6502 assemblers allow an unterminated quote for a 1-character string.)
- In this assembler, the symbols `<` and `>` are binary operators (less than and greater than). Some 6502 assemblers define these symbols as unary operators (high and low). See Section 4 for operator definitions.

Examples:

<u>AMAC</u>		<u>MOS</u>	
CMP	#'?'	CMP	#'?
LDX	#high EXP	LDX	#>EXP
LDY	#low EXP	LDY	#<EXP

Notation

dd	8-bit signed displacement: -128 ≤ dd ≤ +127
mmmm	16-bit address expression
nn	8-bit constant: 0 ≤ nn ≤ 255
rel	16-bit address within: *-126 ≤ rel ≤ * + 129
zz	Page 0 location: 0 ≤ zz ≤ 255

HEX	OPCODE	ADDRESS	REMARKS
DATA MOVEMENT			
		Register to register transfer.	
AA	TAX		;Transfer A to X
A8	TAY		;Transfer A to Y
BA	TSX		;Transfer S to X
8A	TXA		;Transfer X to A
9A	TXS		;Transfer X to S
98	TYA		;Transfer Y to A
		Load constant into register.	
A9	LDA	#nn	
A2	LDX	#nn	
A0	LDY	#nn	

		Load register from memory.
A5	LDA	zz
B5	LDA	zz,X
A1	LDA	(zz,X)
B1	LDA	(zz),Y
AD	LDA	mmmm
BD	LDA	mmmm,X
B9	LDA	mmmm,Y
A6	LDX	zz
B6	LDX	zz,Y
AE	LDX	mmmm
BE	LDX	mmmm,Y
A4	LDY	zz
B4	LDY	zz,X
AC	LDY	mmmm
BC	LDY	mmmm,X

		Store register into memory.
85	STA	zz
95	STA	zz,X
81	STA	(zz,X)
91	STA	(zz),Y
8D	STA	mmmm
9D	STA	mmmm,X
99	STA	mmmm,Y
86	STX	zz
96	STX	zz,Y
8E	STX	mmmm
84	STY	zz
94	STY	zz,X
8C	STY	mmmm

		Stack load/stores.
48	PHA	;Push accumulator
08	PHP	;Push processor status
68	PLA	;Pop accumulator
28	PLP	;Pop processor status

DYADIC ARITHMETIC

		Add operand and carry.
69	ADC	#nn
65	ADC	zz
75	ADC	zz,X
61	ADC	(zz,X)
71	ADC	(zz),Y
6D	ADC	mmmm
7D	ADC	mmmm,X
79	ADC	mmmm,Y

Subtract operand and borrow.

E9	SBC	#nn
E5	SBC	zz
F5	SBC	zz,X
E1	SBC	(zz,X)
F1	SBC	(zz),Y
ED	SBC	mmmm
FD	SBC	mmmm,X
F9	SBC	mmmm,Y

Compare 8-bit operand with accumulator.
Set flags as if subtracting, but do not alter accumulator.

C9	CMP	#nn
C5	CMP	zz
D5	CMP	zz,X
C1	CMP	(zz,X)
D1	CMP	(zz),Y
CD	CMP	mmmm
DD	CMP	mmmm,X
D9	CMP	mmmm,Y

Compare 8-bit operand with index register.

E0	CPX	#nn
E4	CPX	zz
EC	CPX	mmmm
C0	CPY	#nn
C4	CPY	zz
CC	CPY	mmmm

MONADIC ARITHMETIC

Decrement by 1.

C6	DEC	zz
D6	DEC	zz,X
CE	DEC	mmmm
DE	DEC	mmmm,X
CA	DEX	
88	DEY	

Increment by 1.

E6	INC	zz
F6	INC	zz,X
EE	INC	mmmm
FE	INC	mmmm,X
E8	INX	
C8	INY	

Arithmetic control.

18	CLC	;Clear carry flag
D8	CLD	;Clear decimal mode
B8	CLV	;Set overflow flag
38	SEC	;Set carry flag
F8	SED	;Set decimal mode

DYADIC LOGICAL/BOOLEAN OPERATIONS

8-bit logical product, conjunction.

29	AND	#nn
25	AND	zz
35	AND	zz,X
21	AND	(zz,X)
31	AND	(zz),Y
2D	AND	mmmm
3D	AND	mmmm,X
39	AND	mmmm,Y

Logical sum, disjunction, inclusive OR.

09	ORA	#nn
05	ORA	zz
15	ORA	zz,X
01	ORA	(zz,X)
11	ORA	(zz),Y
0D	ORA	mmmm
1D	ORA	mmmm,X
19	ORA	mmmm,Y

Logical difference, inequivalence, exclusive OR.

49	EOR	#nn
45	EOR	zz
55	EOR	zz,X
41	EOR	(zz,X)
51	EOR	(zz),Y
4D	EOR	mmmm
5D	EOR	mmmm,X
59	EOR	mmmm,Y

Logical compare.

Set flags as follows:

Z=1 if A AND mem = 0

Z=0 if A AND mem = 1

S = bit 7 of mem

V = bit 6 of mem

(mem = mmmm or zz).

24	BIT	zz
2C	BIT	mmmm

ROTATE AND SHIFT

Arithmetic shift left.

0A	ASL	A
06	ASL	zz
16	ASL	zz,X
0E	ASL	mmmm
1E	ASL	mmmm,X

		Logical shift right.	
4A	LSR	A	
46	LSR	zz	
56	LSR	zz,X	
4E	LSR	mmmm	
5E	LSR	mmmm,X	
		Rotate left.	
2A	ROL	A	
26	ROL	zz	
36	ROL	zz,X	
2E	ROL	mmmm	
3E	ROL	mmmm,X	
		Rotate right.	
6A	ROR	A	
66	ROR	zz	
76	ROR	zz,X	
6E	ROR	mmmm	
7E	ROR	mmmm,X	
		JUMPS	
90	BCC		;If carry clear
B0	BCS		;If carry set
F0	BEQ		;If equal (=0)
30	BMI		;If minus
D0	BNE		;If not equal (<>0)
10	BPL		;If plus
50	BVC		;If overflow clear
70	BVS		;If overflow set
4C	JMP	mmmm	
6C	JMP	(mmmm)	
		CALL SUBROUTINE	
00	BRK		;Software interrupt
20	JSR	mmmm	;Jump subroutine
		RETURN FROM SUBROUTINE	
40	RTI		;Return from interrupt
60	RTS		;Return from subroutine
		MISCELLANEOUS CPU CONTROL	
58	CLI		;Clear interrupt mask (EI)
EA	NOP		
78	SEI		;Set interrupt mask (DI)

USING THE ATARI MACRO ASSEMBLER WITH THE ATARI ASSEMBLER EDITOR SOURCE FILES

If you have a source program that has been developed using the ATARI Assembler Editor cartridge, and you want to use the Macro Assembler to assemble it, you will have to be aware of the following differences:

- The Macro Assembler does not accept line numbers.
- The = for EQU must be embedded between at least two blanks.
- Comments must be preceded by a semicolon.
- The following pseudo-ops are recognized by the Macro Assembler:
 - .BYTE is equivalent to DB
 - .END is equivalent to END
 - .PAGE is equivalent to TITLE
 - .SKIP is equivalent to SPACE
 - .WORD is equivalent to DW
- The following are **not** recognized by the Macro Assembler:
 - BYTE
 - WORD
- The Macro Assembler does not recognize * = for setting the origin counter; use ORG instead.
- All strings must be bracketed by quotation marks (") for the Macro Assembler to interpret them properly.

ERROR CODES

Errors are flagged by a single-letter code in column one of the output listing. Lines containing errors are always written to the screen, regardless of the output selection.

- A** = Address error. Instruction specified does not support the addressing mode specified.
- D** = Duplicate label error. The last one defined is used.
- E** = Expression error. An expression on the source line in the address field is unrecognizable.
- F** = Bad nesting of control statements. Bad nesting of IF . . . ELSE . . . ENDIF statements. When this occurs on the END line, it means an IF was not terminated.
- I** = Instruction field not recognized. Three NOP bytes are generated.
- L** = Label field not recognized. Three NOP bytes are generated.
- M** = MACRO statement error. Improper macro definition.
- N** = Error in number: digit exceeds radix; value exceeds 16 bits, and so forth.
- O** = Stack table overflow occurred in evaluating expression; user should simplify expression. Too many LINK files. Too many PROCs. Too many USE blocks.
- P** = Programmer-forced error. See ASSERT and ERR pseudo-ops.
- R** = Expression in variable field not computable.
- S** = Syntax error in statement. Too many or too few address subfields.
- U** = Reference to an undefined symbol.
- V** = Expression overflow: resultant value is truncated.
- W** = Not within VFD field width ($1 \leq \text{width} \leq 16$).
- Y** = Misplaced instruction: extraneous ENDM. When this occurs on the END line, it means a MACRO or ECHO was not terminated. Make sure that ENDM is preceded by a tab (►) character.

LIMITED 90-DAY WARRANTY ON ATARI® HOME COMPUTER PRODUCTS

ATARI, INC ("ATARI") warrants to the original consumer purchaser that this ATARI Home Computer Product (not including computer programs) shall be free from any defects in material or workmanship for a period of 90 days from the date of purchase. If any such defect is discovered within the warranty period, ATARI's sole obligation will be to repair or replace, at its election, the Computer Product free of charge on receipt of the unit (charges prepaid, if mailed or shipped) with proof of date of purchase satisfactory to ATARI at any authorized ATARI Computer Service Center. For the location of an authorized ATARI Computer Service Center nearest you,

call toll-free: In California (800) 672-1430
 Continental U.S. (800) 538-8737

or write to: Atari, Inc.
 Customer Service/Field Support
 1340 Bordeaux Drive
 Sunnyvale, CA 94086

YOU MUST RETURN DEFECTIVE COMPUTER PRODUCTS TO AN AUTHORIZED ATARI COMPUTER SERVICE CENTER FOR IN-WARRANTY REPAIR.

This warranty shall not apply if the Computer Product: (i) has been misused or shows signs of excessive wear, (ii) has been damaged by being used with any products not supplied by ATARI, or (iii) has been damaged by being serviced or modified by anyone other than an authorized ATARI Computer Service Center.

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO NINETY DAYS FROM THE DATE OF PURCHASE. CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM A BREACH OF ANY APPLICABLE EXPRESS OR IMPLIED WARRANTIES ARE HEREBY EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

DISCLAIMER OR WARRANTY ON ATARI COMPUTER PROGRAMS

All ATARI computer programs are distributed on an "as is" basis without warranty of any kind. The entire risk as to the quality and performance of such programs is with the purchaser. Should the programs prove defective following their purchase, the purchaser and not the manufacturer, distributor, or retailer assumes the entire cost of all necessary servicing or repair.

ATARI shall have no liability or responsibility to a purchaser, customer, or any other person or entity with respect to any liability, loss, or damage caused directly or indirectly by computer programs sold by ATARI. This disclaimer includes but is not limited to any interruption of service, loss of business or anticipatory profits, or consequential damages resulting from the use or operation of such computer programs.

REPAIR SERVICE

If your ATARI Home Computer Product requires repair other than under warranty, please contact your local authorized ATARI Computer Service Center for repair information.

IMPORTANT: If you ship your ATARI Home Computer Product, package it securely and ship it, charges prepaid and insured, by parcel post or United Parcel Service.



PRINTED IN U.S.A.

A Warner Communications Company 

CO60028 REV. 1