

# ComfortVu™ BACnet

## Thermostat Plus Model TBPL-24-HM (24 Vac)

### Installation and Operation Guide





Verify that you have the most current version of this document from [www.hvacpartners.com](http://www.hvacpartners.com) or [www.accounts.lvusystems.com](http://www.accounts.lvusystems.com) or your local Carrier office.

Important changes are listed in **Document revision history** at the end of this document.

CARRIER CORPORATION ©2020. All rights reserved throughout the world. i-Vu is a registered trademark of Carrier Corporation. All other trademarks are the property of their respective owners.



# Contents

<b>Overview</b> .....	<b>1</b>
<b>Specifications</b> .....	<b>2</b>
<b>TBPL-24-H Dimensions</b> .....	<b>4</b>
<b>Technician Settings Index</b> .....	<b>5</b>
<b>Operating Instructions</b> .....	<b>7</b>
Quick Guide .....	7
Turning the thermostat ON and OFF .....	8
Selecting temperature scale.....	8
Adjusting the Setpoint temperature .....	8
Selecting system mode .....	9
Selecting fan speed (for 2 and 3 fan speeds configuration) .....	9
Turning Auto fan ON or OFF (fan on demand).....	10
Locking the thermostat buttons.....	10
Economy mode .....	11
Freeze Protection.....	11
Economizer .....	12
<b>Weekly program</b> .....	<b>13</b>
<b>MAC Address and BACnet Device Instance Number</b> .....	<b>19</b>
<b>Installation</b> .....	<b>21</b>
General.....	21
Wiring terminals and DIP switches.....	23
AC configurations.....	24
FC configurations for 2-pipe systems .....	25
FC configurations for 4-pipe systems / Floor heating.....	26
Wiring and DIP switch configurations 1 to 4 - AC systems.....	27
Wiring and DIP switch configurations 5 to 8 - AC systems.....	28
Wiring and DIP switch configurations 9 to 12 - AC systems .....	29
Wiring and DIP switch configurations 13 to 16 - AC systems.....	30
Wiring and DIP switch configurations 17 to 20 - AC systems.....	31
Wiring and DIP switch configuration 21 - AC systems .....	32
Wiring and DIP switch configurations 22 to 25 - FC systems - 2-pipe .....	33
Wiring and DIP switch configurations 26 to 29 - FC systems - 2-pipe .....	34
Wiring and DIP switch configurations 30 to 33 - FC systems - 4-pipe .....	35
Wiring and DIP switch configurations 34 to 37 - FC systems - 4-pipe .....	36
Wiring and DIP switch configurations 38 to 40 - FC systems - 4-pipe .....	37
Wiring and DIP switch configurations 41 to 43 - FC systems - 4-pipe .....	38
<b>Technician Settings</b> .....	<b>39</b>
Technician Settings P1 to P3.....	39
Technician Settings P4 to P7.....	40
Technician Settings P8 to P10 .....	41
Technician Settings P11 to P15.....	42
Technician Settings P16 to P25.....	43
Technician Settings P26 to P30.....	44
Technician Settings P31 to P34.....	45
Technician Settings P35 to P42.....	46
Technician Settings P43 to P44.....	47
Technician Settings P45 to P46.....	48
Technician Settings P47 to P48.....	49
Technician Settings P49 to P51.....	50
Technician Settings P52 to P57 .....	51

Technician Settings P60 to P64.....	52
Technician Settings P65 to P70.....	53
Technician Settings P71 to P75.....	54
Technician Settings P76 to P79.....	55
Technician Settings P83 to P88.....	56
Technician Settings P89 to P100.....	57
Technician Settings P101 to P109.....	58
Technician Settings P111 to P119.....	59
Technician Settings P122 to P188.....	60
Technician Settings P189 to P195.....	61
Technician Settings P196 to P200.....	62
<b>Alarms and indications .....</b>	<b>63</b>
<b>Document revision history .....</b>	<b>64</b>

## Overview

The Carrier Corporation ComfortVu™ BACnet Thermostat Model TBPL-24-HM can be used:

- As a stand-alone thermostat that can control equipment using built-in logic
- As part of an MS/TP network of BACnet Thermostats that can be managed from a BMS front-end system
- As part of a BACnet MS/TP network connected to the Carrier Corporation BACnet router in a i-Vu® system. The router's control programs provide trending and alarming of the BACnet Thermostat's data.

The TBPL-24-HM thermostat has a glass framed enclosure with a backlit touch screen. It has on-board temperature, humidity, and motion sensing, and its on-board inputs and outputs are used to control equipment and optional external sensing devices. Inputs and outputs are configured using DIP switches and jumpers. The TBPL-24-HM thermostat requires 24 Vac power.

## Specifications

Sensing element:	Range	Accuracy
Temperature	41° F to 95° F (5° C to 35° C)	±1.0° F (0.5° C)
Humidity	10% to 90 %	±3.0% typical
Motion Sensing:		
Sensor Type	PIR, quad, omnidirectional	
Distance	16.4 feet (5m)	
Detection range	(HxV) 90° x 30°	
Movement speed	2.62 to 3.94 ft/s (0.8 to 1.2 m/s)	
Detection object	15.75 x 9.84 in. (400 x 250 mm)	
Power	24 Vac, ±10%, 50-60Hz, 4VA	
	<b>NOTE</b> Devices connected to outputs, such as a fan, will increase VA requirements.	
Communication	BACnet MS/TP with baud rates up to 76.8 kbps, detected and set automatically by the BACnet Thermostat. Max 127 devices.	
Inputs	T1, 0 – Normally open or normally closed dry contact, or 0-10 Vdc analog input, or 50 kOhm thermistor @ 25° C A, B - Communication +/- (RS485) IN1, 0 - Normally open or Normally closed dry contact, or 0-10 Vdc analog input, or 50 kOhm thermistor @ 25° C C, R - Power: 24 Vac	
Outputs	11, 12, 13 – Digital outputs, 3A 14, 15, 16 – Digital outputs 0.3A AO1 and AO2 – 0-10 Vdc, 5 mA max., not isolated	
Environmental operating range	50° to 122° F (10° to 50° C), 10 to 90% relative humidity, non-condensing	
Mounting	Wall mount on a 4" x 2-1.2 x 2" electrical J-box using provided 6/32 x 1/2" mounting screws	
Weight	9.7 oz (0.28 kg)	

---

Compliance


United States of America:

FCC CFR47, Chapter 1, Subchapter A, Part 15, Class B

Canada:

Industry Canada Compliant, ICES-003, Class B

Europe:

 Mark, Low Voltage Directive: 2014/35/EU RoHS Compliant:  
2011/65/EU

Australia and New Zealand:

 C-Tick Mark, AS/NZS 61000-6-3


Title 24 compliant if connected to a BMS with custom programming for economizer fault detection.

CA Prop 65 Warning: This product can expose you to chemicals including Styrene and 1,3


- Propane sultone, which are known to the State of California to cause cancer. For more information, go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

---


# TBPL-24-H Dimensions

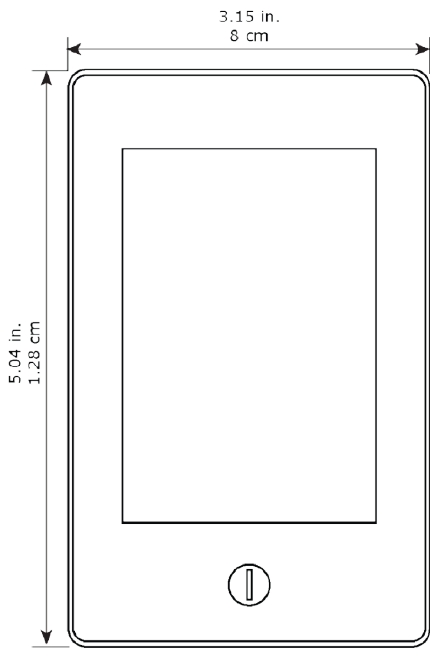


**FRONT VIEW**

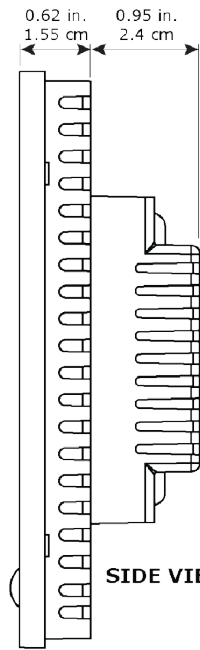


**SIDE VIEW**

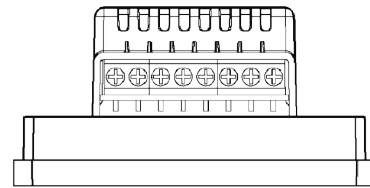

**TOP VIEW**

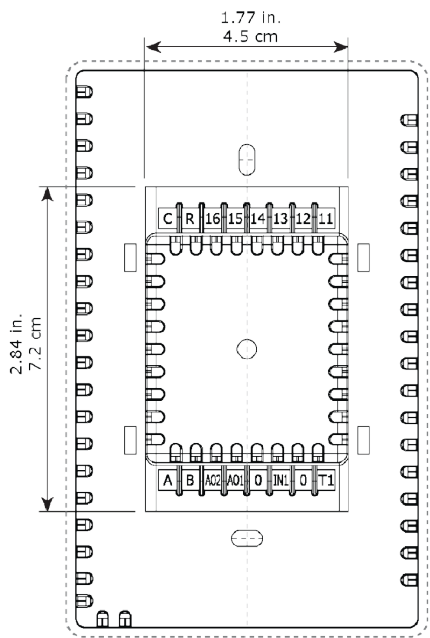

**REAR VIEW**

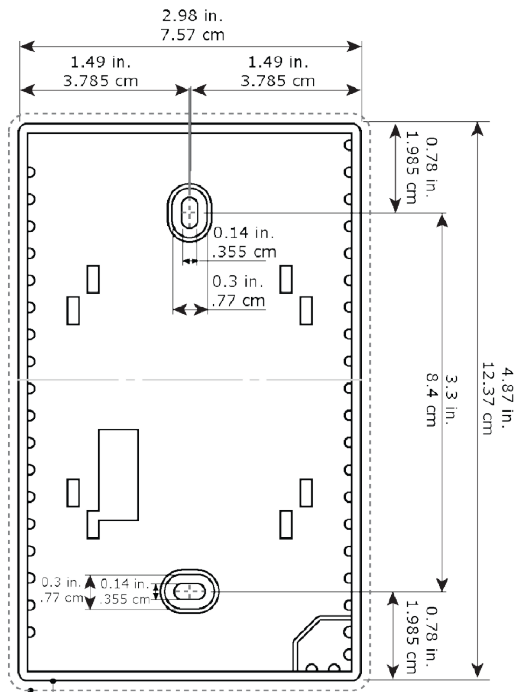

**BACKPLATE FRONT VIEW**




## Technician Settings Index

P01 – Offset for temperature readings calibration	P43 – Soft start in heat – cut-in temperature	P44 – Soft start in heat – cut-out temperature
P02 – Setpoint limit for cooling	P45 – Cool differential band	
P03 – Setpoint limit for heating	P46 – Cool differential band offset	
P04 – Lock the [Fan] button	P47 – Heat differential band	
P05 – Lock the [Mode] button	P48 – Heat differential band offset	
P06 – Lock the [On/Off] button	P49 – Shift between Cool and Heat in Auto mode	
P07 – Lock the [+] and [-] buttons (Set buttons)	P50 – Shift between Cooling stages	
P08 – Functionality of T1 terminals	P51 – Shift between Heating stages	
P09 – Functionality of IN1,0 terminals	P52 – Cool valve proportional band	
P10 – Window contact (terminals IN1,0) polarity	P53 – Cool proportional low limit	
P11 – Window contact delay time	P54 – Cool proportional high limit	
P12 – Door switch (terminals T1,0) polarity	P55 – Heat valve proportional band	
P13 – Door switch delay time	P56 – Heat proportional low limit	
P14 – Enable/Disable Auto change over mode	P57 – Heat proportional high limit	
P15 – Motion sensor logic (PIR)	P60 – Proportional ON percent	
P16 – Enable/Disable Motion sensor	P61 – Proportional OFF percent	
P17 – PIR (Motion sensor) delay time	P63 – Time on-delay between cooling stages	
P18 – Door switch or key tag configuration	P64 – Time off-delay between cooling stages	
P19 – PIR (Motion sensor) polarity	P65 – Fan VFS proportional band in cooling	
P25 – Economy setpoint for cooling	P66 – Fan VFS proportional band in heating	
P26 – Economy setpoint for heating	P67 – Fan VFS Low speed percent in cooling	
P27 – On-delay time on-delay between heating stages	P68 – Fan VFS Medium speed percent in cooling	
P28 – Off-delay time between heating stages	P69 – Fan VFS High speed percent in cooling	
P30 – Beeper ON or OFF	P70 – Fan VFS Low speed percent in heating	
P31 – Fan ON delay in cooling	P71 – Fan VFS Medium speed percent in heating	
P32 – Fan OFF delay in cooling	P72 – Fan VFS High speed percent in heating	
P33 – Fan ON delay in heating	P74 – VFS Medium speed differential	
P34 – Fan OFF delay in heating	P75 – VFS High speed differential	
P35 – Enable/Disable Freeze protection	P76 – Fan VFS Low limit in cooling	
P36 – Freeze protection cut-in setpoint	P77 – Fan VFS High limit in cooling	
P37 – Freeze protection cut-out setpoint	P78 – Fan VFS Low limit in heating	
P40 – View filter counter (hours) – Read only	P79 – Fan VFS High limit in heating	
P41 – Reset filter time	P83 – View T2 temperature sensor readings	
P42 – Adjust filter alarm delay counter (hours)		


P84 – View T3 temperature sensor readings	P116 – Cool PID Ki
P85 – De-ice in cool – cut-in temperature	P117 – Heat PID Ki
P86 – De-ice in cool – cut-out temperature	P118 – Cool PID Kd
P87 – De-ice in heat time	P119 – Heat PID Kd
P88 – De-ice in heat break time	P122 – Cool Proportional output threshold time
P89 – De-ice in heat – cut-in temperature	P123 – Heat Proportional output threshold time
P90 – De-ice in heat – cut-out temperature	P160 – Minimum compressor ON time
P91 – Compressor delay	P161 – Minimum compressor OFF time
P98 – Display setpoint only (hide room temperature)	P170 – Economizer low limit temperature
P99 – One or Two setpoints	P187 – Display or hide humidity reading
P100 – Enable screen dimming	P188 – Room temperature limit for disabling dehumidification in unoccupied mode
P101 – Screen dimming delay	P189 – Dehumidification cycle in unoccupied mode
P102 – Dimming brightness	P190 – Dehumidification break time in unocc. mode
P105 – Screen brightness when ON	P192 – Temperature setpoint for reheat in unoccupied mode
P107 – Weekly program configuration	P194 – Humidity differential band
P108 – Weekly program - events per day	P195 – Humidity sensor reading offset
P109 – Weekly program event configuration	P196 – Dead zone between humidification and dehumidification
P111 - Motion sensor sensitivity (PIR)	P197 – Humidity setpoint
P114 – Cool PID Kp	P198 – Not in use
P115 – Heat PID Kp	P200 – Restore defaults

# Operating Instructions

## Quick Guide

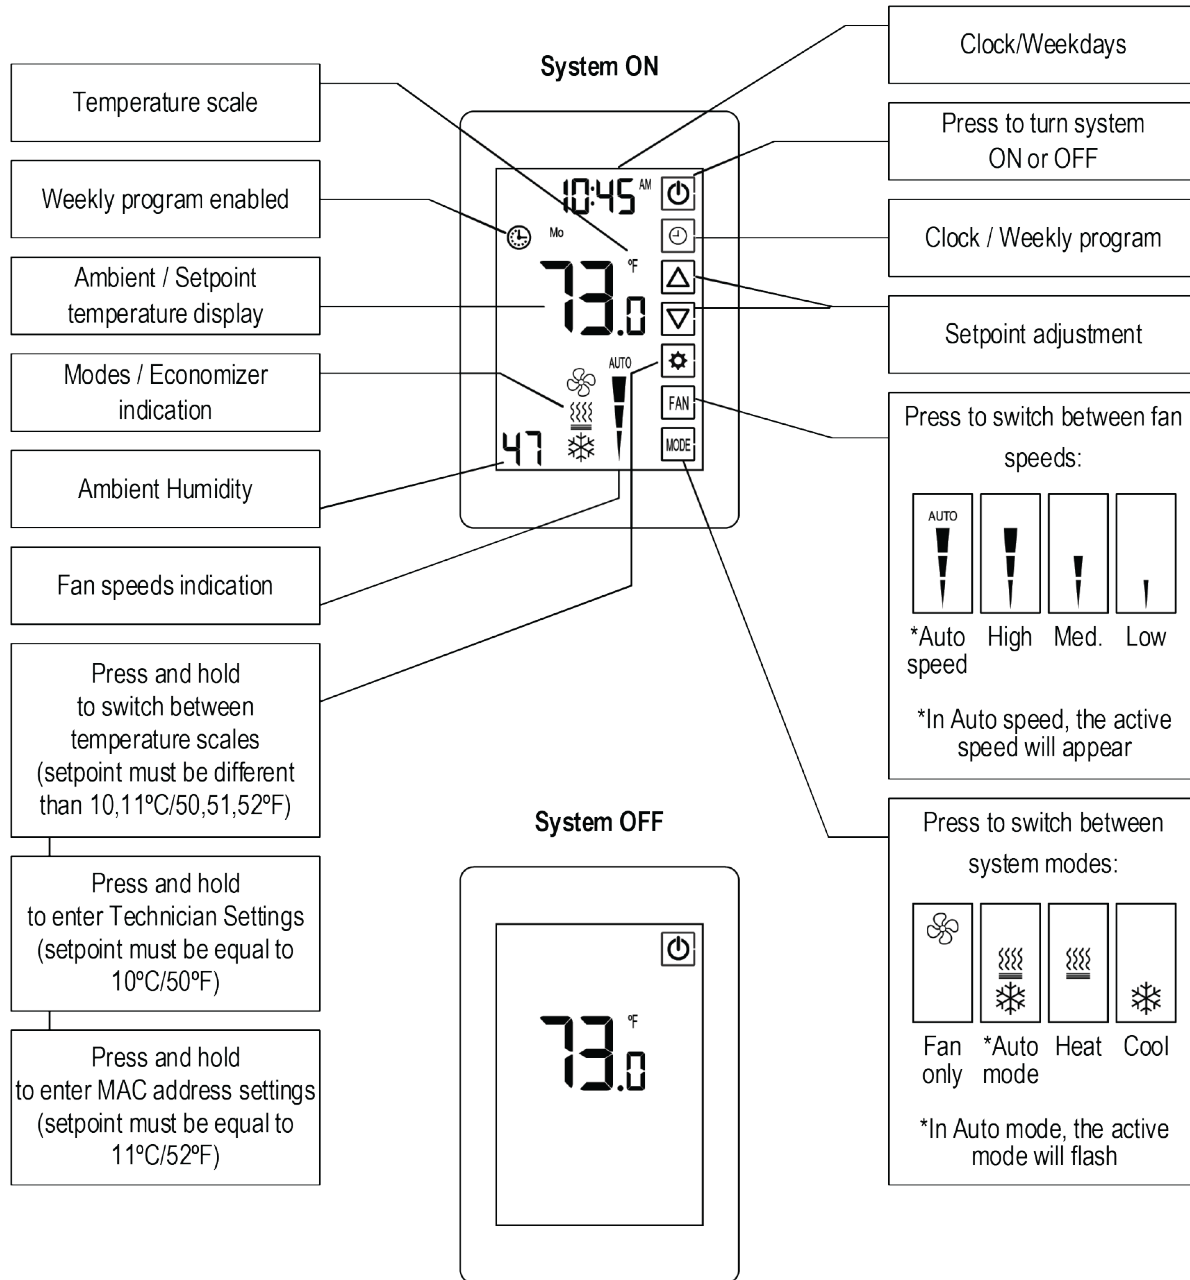

## Turning the thermostat ON and OFF

- Press the  button to turn the unit ON. System mode and fan speed symbols will appear on display.
- Press again to turn the unit OFF. The symbols will disappear.




Unit OFF




Unit ON

---


## Selecting temperature scale

Press and hold the  button to switch between temperature scales.

The set-point must be different than 10, 11°C / 50, 51, 52°F.



Celsius





Fahrenheit


---

## Adjusting the Setpoint temperature

**Note:** The setpoint must be different than 10, 11°C/50, 52°F.

### In One setpoint configuration:

- 1 Press the  or  buttons once to view the setpoint temperature.
- 2 Press again to adjust the setpoint.




Setpoint

### In Two setpoints configuration:

- 1 Press the ▲ or ▼ buttons once. “CL” and the setpoint temperature for cooling will appear on display.
- 2 Use the ▲ or ▼ buttons to adjust the setpoint for cooling.
- 3 Press the [Mode] button or wait 3 seconds. “Ht” and the setpoint temperature for heating will appear on display.
- 4 Use the ▲ or ▼ buttons to adjust the setpoint for heating.



Setpoint for cooling



Setpoint for heating

### Notes:

- The setpoint for cooling must be higher than the setpoint for heating.
- For humidity setpoint, see Technician Settings P197.

## Selecting system mode

Press the [Mode] button to switch between system modes.

### Notes:

- During demand for cooling or heating, the active mode will flash.
- In Auto mode, the active mode icon (Cool or Heat) will flash.
- Auto mode is not available in 2-Pipe system configuration.



Cool mode



Heat mode



Auto mode



Fan only

## Selecting fan speed (for 2 and 3 fan speeds configuration)

Press the [Fan] button to switch between fan speeds.

### Notes:

- In Auto speed, the active fan speed will appear on display.
- Medium speed available in 3 speeds configuration.



Low speed



Medium speed



High speed



Auto speed

## Turning Auto fan ON or OFF (fan on demand)

### In 1-speed configuration:

Press the [Fan] button to turn Auto fan ON or OFF.

### In 2- and 3-speed configurations:

Press and hold the [Fan] button for 7 seconds to turn Auto fan ON or OFF.

- When ON, the fan will run on demand for cooling or heating.
- When OFF, the fan will run continuously.

Note: Auto fan cannot be selected in Fan only mode.


---



**Auto fan  
ON**

## Locking the thermostat buttons

- Press and hold the [Mode] button for 7 seconds to lock or unlock the thermostat buttons.
- When locked, the lock (🔒) icon will appear on display with any attempt to press the buttons.
- Enable or disable the option to lock different buttons using Technician Settings P4-P7.




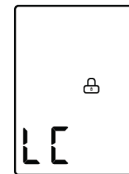


**Lock  
indications**

---

## Economy mode

Activate Economy mode by triggering a window contact - remote on/off switch, window contact - remote economy switch, door switch, key-tag, External motion sensor (PIR - passive infrared sensor) or through communication - binary value "UnoccupiedByNetwork".

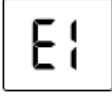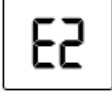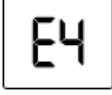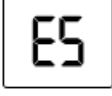
	<ul style="list-style-type: none"> <li>• <b>Economy by Window contact – Remote On/Off switch</b> - Turning unit off</li> <li>• <b>Economy by Window contact – Remote economy switch</b> - Using economy set points</li> </ul> <p>Refer to technician parameters P25 and P26 for economy set points</p>
	<p><b>Economy by External motion sensor (PIR)</b> or through <b>Communication</b> (binary value "UnoccupiedByNetwork")</p> <p>Refer to technician parameter P15 "Occupancy sensor logic (PIR)"</p>
	<p><b>Economy triggered by Door switch</b></p> <p>Refer to technician parameter P18 "Door switch or key tag configuration"</p>
	<p><b>Economy by Key-tag</b></p> <p>Refer to technician parameter P18 "Door switch or key tag configuration"</p>

## Freeze Protection

The Freeze protection feature will not allow the room temperature to drop below predefined cut-in temperature. Depending on which configuration the system is operating under (W/WO Heat pump), this feature will force the system to operate in heat mode and activate the fan.

This feature will take effect when the thermostat is either ON or OFF. When the room temperature rises above the predefined cut-out temperature, the thermostat will return to its previous state.

When freeze protection is activated, the display alternates between "AL" and room temperature.

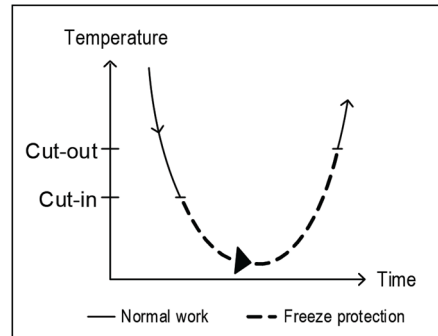

# Economizer

Economizer is used to reduce the energy consumed by the cooling systems, by using low external air temperatures to assist in the chilling process. When outdoor temperatures are lower relative to indoor (room) temperatures, the system utilizes the cool outdoor air as a free cooling source.

The outdoor temperature (Teconomizer) triggering the activation of the economizer, can be measured by the temperature sensor connected to T1,0 terminals (technician parameter P08="05") or by setting a temperature value manually through communication - AV#129 "TEconomizerEffective".

When getting the temperature through communication, terminals T1,0 can be used for any other functionality like External sensor/Soft start in heat sensor/De-icing in cool/Door switch/Key tag.


Whenever there is demand for cooling and the outdoor temperature conditions allow the operation of the economizer, it will operate together with the regular cooling system and will not replace it.

Economizer will start when, and run as long as, both of the following conditions are satisfied:

- 1 Teconomizer temperature < Room temperature - (Cool differential band / 2)
- 2 Room Temperature > Setpoint temperature


Economizer will stop when the following condition is satisfied:

- 1 Room Temperature < Setpoint temperature - (Cool differential band / 2)

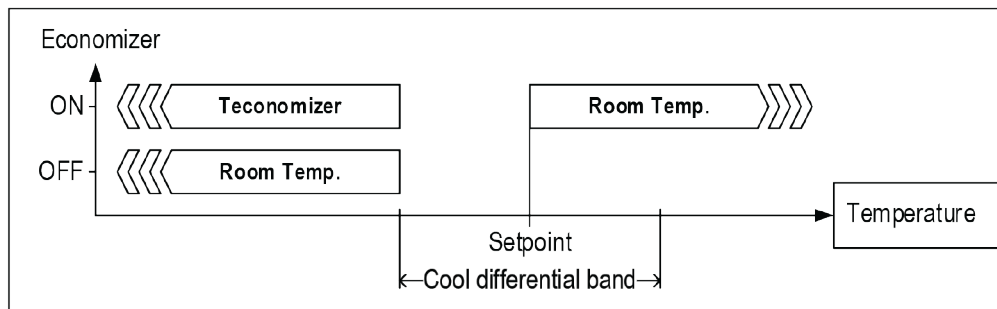

### Indication for the Economizer operation:

When Economizer is active, the Cool symbol will appear on display and the Fan symbol will flash.



**Economizer Active**



## Weekly program

### General

Prior to programming, make sure that Technician Settings P107, P108, and P109 are configured correctly.

### Program types

The thermostat can be configured to run four different types of weekly programs (set by Technician Setting P107):

- 7-day program with same parameters for all days.
- 7-day program with different parameters for each day of the week.
- One schedule for the weekdays (Monday to Friday), one schedule for Saturday and another one for Sunday.
- One schedule for the weekdays (Monday to Friday) and another one for Saturday and Sunday.

### Daily events

Each daily program can use 2 or 4 schedule events per day (set by Technician Setting P108).



There are two options for settings the schedule events (set by Technician Setting P109):



- **“EU Type”** - Start time and Stop time.
- **“US Type”** - Start time, setpoint temperatures, system mode and fan speed.

### IMPORTANT


- Parameter P107 must not be equal to “0” in order to enable weekly program capabilities.
- Changing P107 to “0” will disable all program capabilities and reset programmed information.

### Enabling/Temporarily Disabling/Overriding the program

- **Activate the program**
  - When the program is activated, a clock icon appears on the display. 
  - If a clock icon does not appear, ensure that the set-point temperature is not 10/11°C or 50/52°F, press and hold the  button to activate the program.

- **Temporarily disable the program** - without losing programmed information – for example, when out of the office or leaving for vacation:
  - Make sure that the set-point temperature is not 10/11°C or 50/52°F.
  - Press and hold the  button to temporarily disable the program.
  - Press and hold the  button again to reactivate to the program.
  
- **Override the program** - the occupant can temporarily change the set point temperature to be different than the set point temperature specified by the program. Changes remain in effect until the next program event begins.

## Program Display

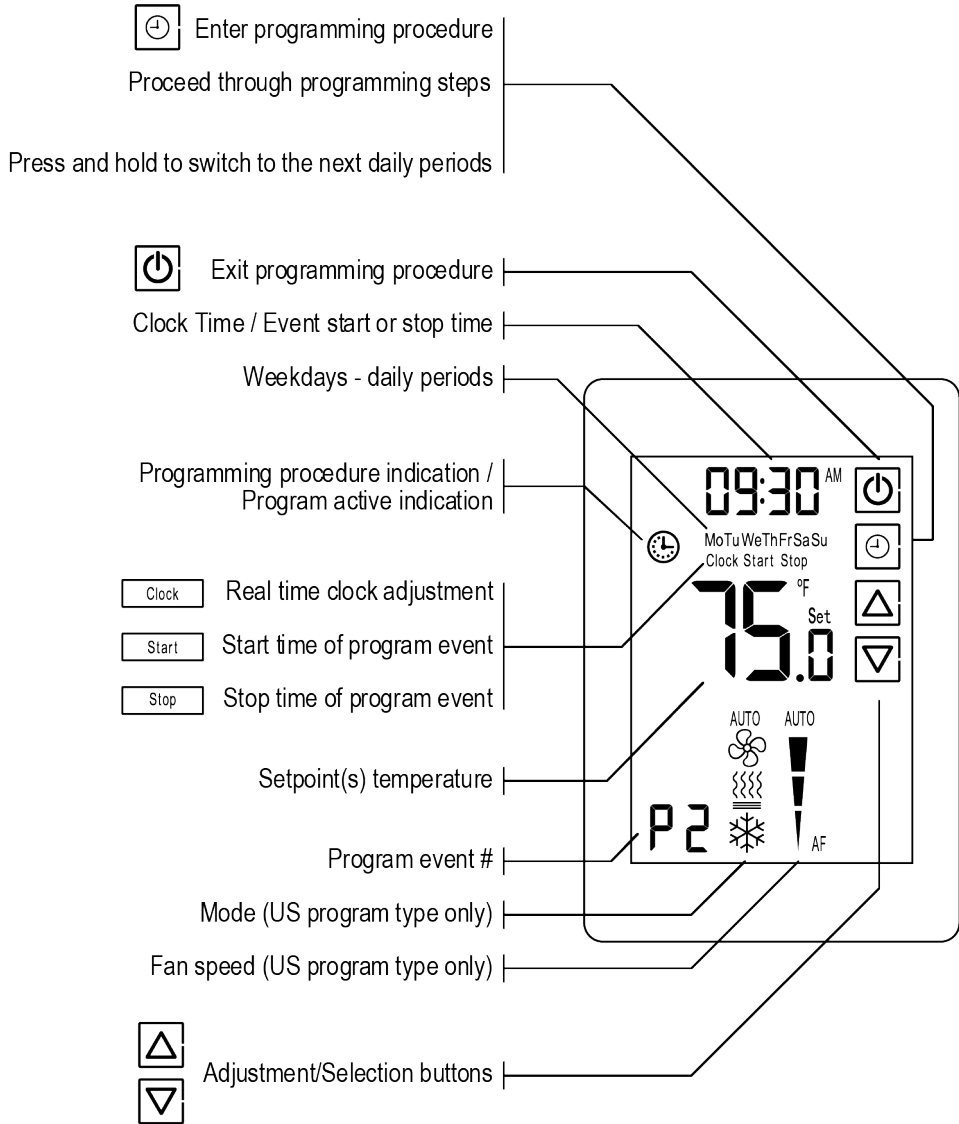


## Programming procedure

- The detailed programming procedure is described in the next sections. Make sure to follow the right programming procedure, suitable for the program type and features selected by Technician Settings.
- Press the button to enter and proceed through the steps of the real time clock and programming procedure.
- Use the or buttons to select or change value of a flashing icon.
- It is recommended to select programming values prior to the actual programming.

## Exit the programming procedure

At any time during the programming procedure, press the  button to exit and return to normal display. Any changed values will be saved.


## Adjusting the time and day of the week

1. Press and hold the  button. The word “Clock” will appear on display, and the HOURS will flash.

### Hours


2. Use the ▲ or ▼ buttons to adjust the hours.

### Minutes



3. Press the  button again. The MINUTES will flash.

4. Use the ▲ or ▼ buttons to adjust the hours.

### Days

5. Press the  button again. The DAYS will flash.


6. Use the ▲ or ▼ buttons to select the day.

7. If Technician Setting P107 is not set to “00” (program is enabled), press the  button to enter programming procedure. Otherwise, press the  button to return to normal display.




## Adjusting “EU type” daily programs

### Start time

1. Press the  button. The programmed weekday(s), “P1” indicating the first program event of the day and the word “Start” will appear on display. The HOURS will flash.



2. Use the ▲ or ▼ buttons to adjust the start time hours of the first event.


3. Press the  button again. The MINUTES will flash.

4. Use the ▲ or ▼ buttons to adjust the start time minutes of the first event.



### Stop time

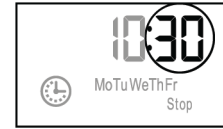

5. Press the  button again. The word “Stop” will appear on display, and the HOURS will flash.
6. Use the ▲ or ▼ buttons to adjust the stop time hours of the first event.
7. Press the  button again. The MINUTES will flash.
8. Use the ▲ or ▼ buttons to adjust the stop time minutes of the first event.




- Follow the steps above for the other schedule events of the same daily period (P2 for two events per day, or P2, P3, and P4 for four events per day).
- Follow the steps above for all daily periods.


### Adjusting “US type” daily programs


#### Start time

1. Press the  button. The programmed weekday(s), “P1” indicating the first program event of the day and the word “Start” will appear on display. The HOURS will flash.
2. Use the ▲ or ▼ buttons to adjust the start time hours of the first event.
3. Press the  button again. The MINUTES will flash.
4. Use the ▲ or ▼ buttons to adjust the start time minutes of the first event.

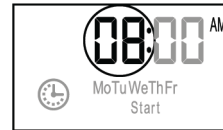


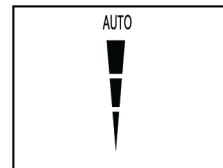
#### System mode

5. Press the  button again. The selected system mode for the current programmed event will appear on display.
6. Use the ▲ or ▼ buttons to select the mode (default Auto mode).

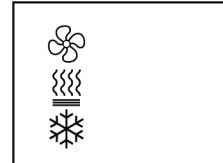


#### Fan speed


7. Press the  button again. The selected fan speed for the current programmed event will appear on display.
8. Use the ▲ or ▼ buttons to select the fan speed (default Auto speed).



## Setpoint

9. Press the  button again. The setpoint will flash.

Note: If the thermostat is configured to have two setpoints, first adjust the setpoint for cooling and then the setpoint for heating.

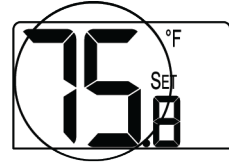



10. Use the ▲ or ▼ buttons to adjust the setpoint of the first event.

- **Follow the steps above for the other schedule events of the same daily period (P2 for two events per day, or P2, P3 and P4 for four events per day).**
- **Follow the steps above for all daily periods.**

## MAC Address and BACnet Device Instance Number

### MAC Address

To set the communication MAC Address:

- 1 Adjust the setpoint temperature to 11°C/52°F. The  button will appear on display.
- 2 To enter MAC Address settings, press and hold the  button for 5 seconds.
- 3 Use the ▲ or ▼ buttons to change the MAC Address.
- 4 Switch power supply off and on again for the MAC address changes to take effect.

Note: Set to “0” for no communication.

Caution: Do not use the same MAC address for two devices on the same communication line!

### BACnet Device Instance Number

By default, the BACnet Device Instance Number is generated automatically by the thermostat (Vendor ID + MAC address). For example, Carrier Corporation vendor ID is 16, and if the MAC address is 075, the BACnet Device Instance Number is 16075.


Note: If you change the MAC address, you must cycle the thermostat’s power to reset the BACnet Device Instance Number.

You can override the automatically-generated BACnet Device Instance Number using the WebCTRL application, an Analog Network Output microblock in a control program, or some other BACnet utility. Write the new BACnet Device Instance Number to the present\_value property of Analog Value 42 (BACnetDeviceInstanceNumber).

Examples:

**In the I-Vu® application**

- 1 Use the BACnet Discovery feature to discover the BACnet Thermostat and its BACnet objects.
- 2 In the navigation tree, select the Analog Value called BacnetDeviceInstanceNumber.
- 3 Change the Present Value field (shown below) to the desired BACnet Device Instance Number.

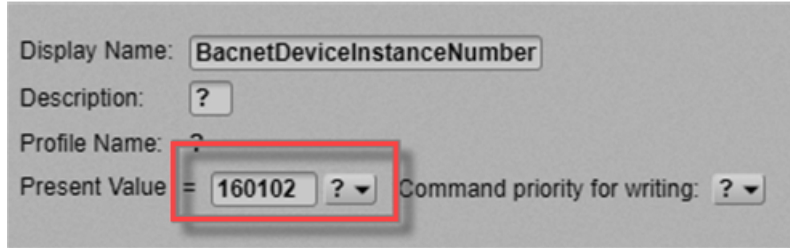

- 4 Click Accept.

**In an Analog Network Output microblock**

To change the BACnet Device Instance Number from 16075 to 16113, the microblock's address would be:

bacnet://16075/AV:42/present\_value, or  
bacnet://16075/BACnetDeviceInstanceNumber

Subsequent reads/writes of this value will need to be done with the new device instance:

bacnet://16113/AV:42/present\_value, or  
bacnet://16113/BACnetDeviceInstanceNumber



## Installation

Mount the BACnet Thermostat on an interior wall in the room to be controlled. Locate it where the occupant can easily read the LCD display and use the controls. If the built-in temperature sensor is being used to measure room temperature, place the thermostat where the temperature is representative of the general room conditions. Avoid cold or warm air drafts, radiant heat, and direct sunlight.



**WARNING:** Risk of electric shock and property damage. Disconnect power supply before making electrical connections. The installation is to be performed by a qualified electrician.



**WARNING:** The integrated circuits in the controller are sensitive to static currents. Take suitable precautions.



## General






### Installation procedure

Prerequisite: Disconnect power to the main board before installing the unit.

- 1 Separate the front display from the back plastic cover by inserting a small flat screwdriver into each of the three slots and rotating it gently. See picture below.
- 2 Remove the front display and keep it in a safe place.
- 3 Connect wires as shown on the wiring diagram. All terminals accept 1x0.5mm<sup>2</sup>/24 AWG.
- 4 Set DIP switch positions as explained in this manual.
- 5 Place the thermostat in the electrical box and tighten the 2 screws.  
Europe - Gewiss Box - GW 24 203 or similar  
US - Carlon - B114R or similar
- 6 Reattach the front display to the back cover by pushing it towards the wall.

### PIR detection area

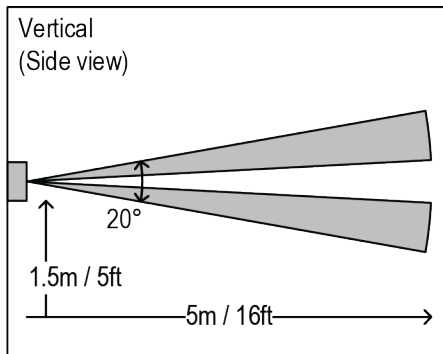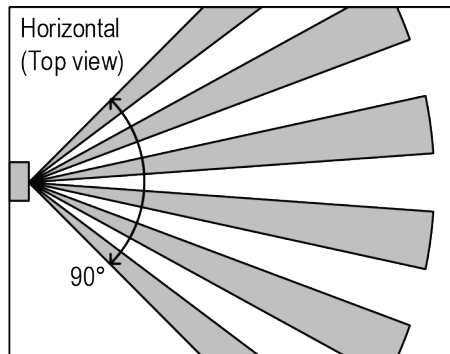


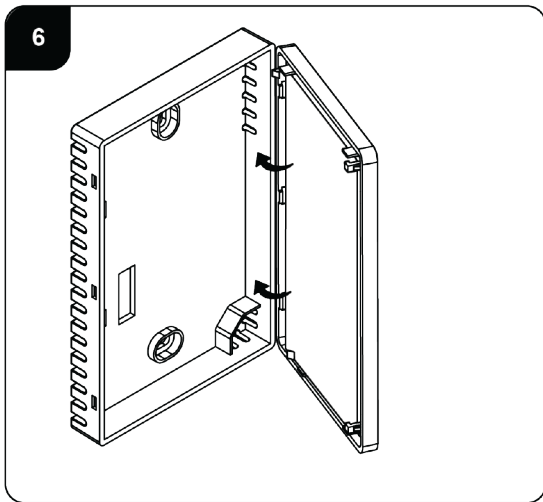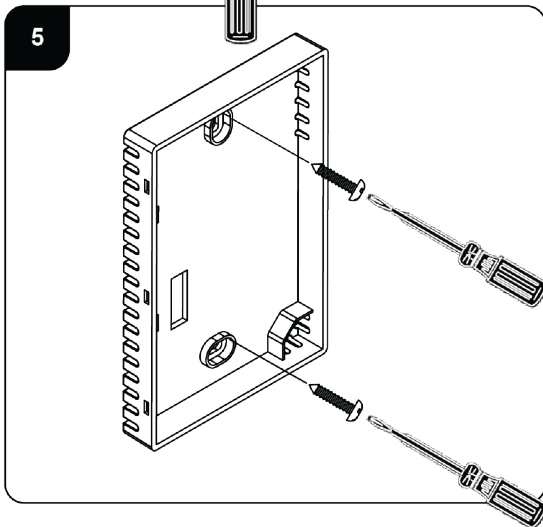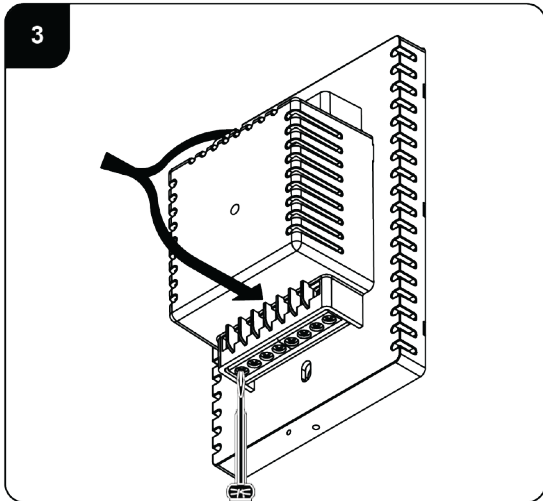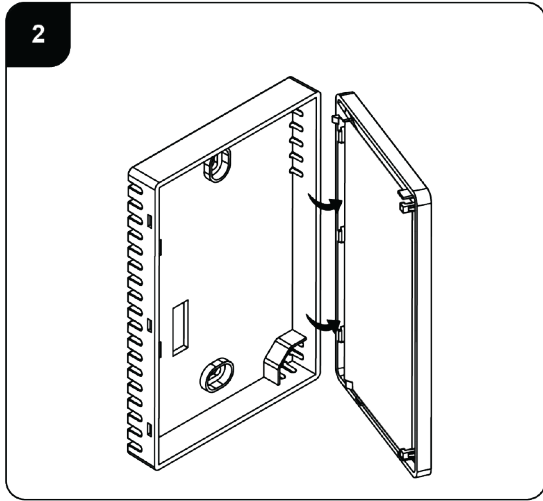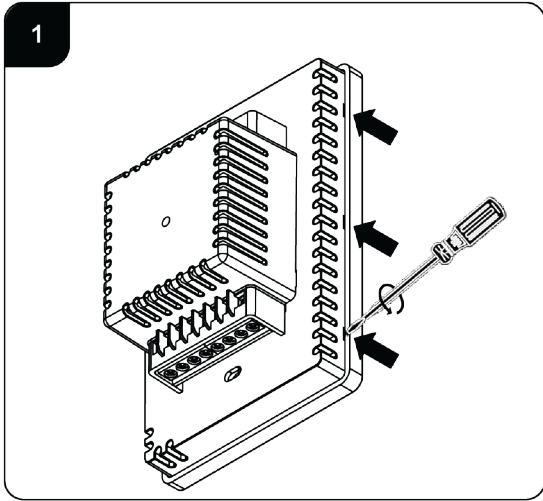

# Wiring terminals and DIP switches

For outputs 11-16, see  
*Wiring and DIP  
switch/jumper settings*  
(page 27)

Power supply: 24 Vac  
**CAUTION** Do not connect  
line voltage to a  
thermostat that does not  
show the following  
symbol:

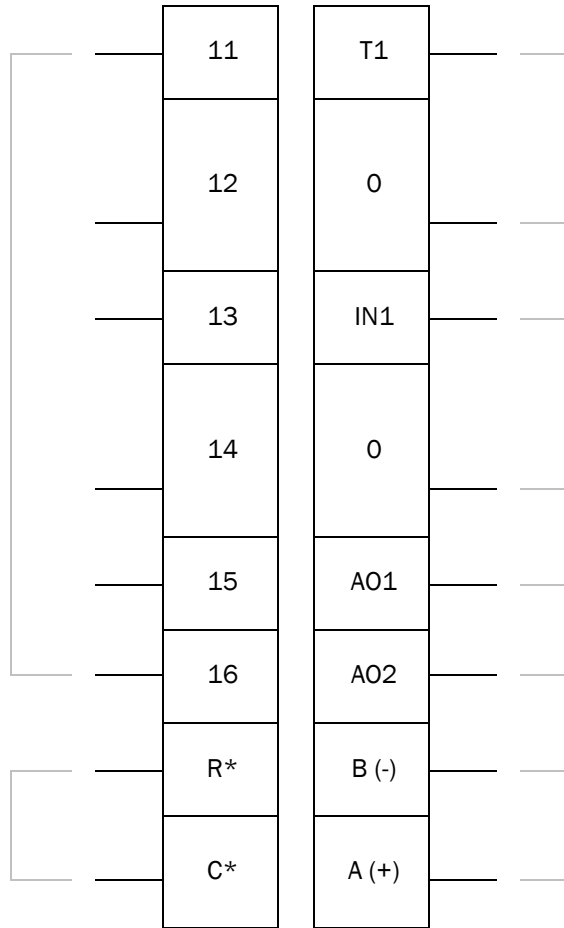


For T1,0 inputs:  
Dry contact, 10 Vdc input, or  
50 kOhm thermistor  
See *Technician Setting P8*.  
(page 28)

For IN1,0 inputs:  
Dry contact, 10 Vdc input, or  
50 kOhm thermistor  
See *Technician Setting P9*  
(page 29).

See *options* (page 27).

MS/TP Communication  
(RS485)  
BACnet

Terminals

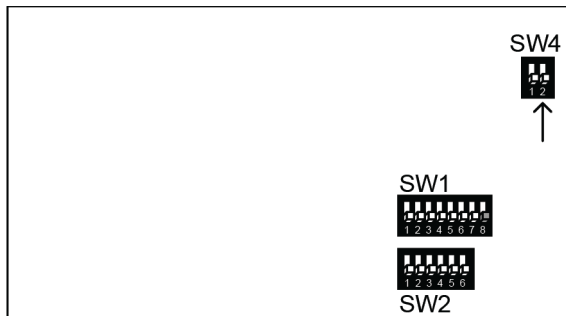

### DIP Switch SW4.1 - End of line resistor (120Ω)

First and last units in communication line must be configured with 120Ω End of line resistor.

OFF = Not End of line ON = End of line



# AC configurations

Find the configuration you want in the tables below, then find that configuration number (1 through 21) in *Wiring and DIP switch/jumper settings* (page 27).

## AC Configurations without humidification/dehumidification

Outputs	Configuration	1	2	3	4	5	6	7	8	9	10
Heat elements (max.)		3	2		1	2	1		2	2	1
Compressors (max.)		2	2	2	1	1	1	2	1	2	2
Heat pump			•	•	•		•	•			•
Fan VFS							•	•	•		
Fan speeds		1	1	2 or 3	2 or 3	2 or 3				1	1
Economizer				○	○	○	○	○	○	•	•

## AC Configurations with humidification/dehumidification

Outputs	Configuration	11	12	13	14	15	16	17	18	19	20	21
Heat elements (max.)		3	2	2	1	2	1		1		1	2
Compressors (max.)		2	2	1	1	2	2	2	1	2	1	1
Heat pump			•		•		•	•	•	•	•	
Fan VFS										•	•	•
Fan speeds		1	1	2 or 3	2 or 3	1	1	2 or 3	2 or 3			
Economizer				○	○	•	•	○	○	○	○	○
Humidifier		•	•	•	•	•	•	•	•	•	•	•
Dehumidifier or		•	•	•	•	•	•	•				
Reheat (Dehumidify)		•	•	•	•	•	•		•	•	•	•

• Yes   ○ Option

## FC configurations for 2-pipe systems

Find the configuration you want in the tables below, then find that configuration number (22 through 29) on the *Wiring and DIP switch/jumper settings* (page 33).

### FC Configurations for 2-Pipe systems without humidification/dehumidification

Outputs	Configuration	22			23			24			25		
Cool/Heat valve		•						•					
Cool/Heat valve PID					•						•		
Heat element (2nd stage)		○			○			○			○		
Fan VFS								•			•		
Fan speeds		1	2	3	1	2	3						
Economizer		○	○		○	○		○			○		

### FC Configurations for 2-Pipe systems with humidification/dehumidification

Outputs	Configuration	26			27			28			29		
Cool/Heat valve		•			•			•					
Cool/Heat valve PID											•		
Heat element (2nd stage)		○			○			○			○		
Fan VFS								•					
Fan speeds		1	2	3	1	2	3				1	2	3
Economizer		○	○		○	○		○			○	○	
Humidifier		•			•			•			•		
Dehumidify	Dehumidifier or	•											
	Reheat	•			•			•			•		

• Yes    ○ Option

# FC configurations for 4-pipe systems / Floor heating

Find the configuration you want in the tables below, then find that configuration number (30 through 44) in *Wiring and DIP switch/jumper settings* (page 35).

## FC Configurations for 4-Pipe systems without humidification/dehumidification









Outputs	Configuration	30	31	32	33	34	35	36	37	38	39
Cool valve		•	•				•	•	•		
Heat valve		•	•	•	•	•			•		•
Cool valve PID				•	•	•				•	•
Heat valve PID							•	•		•	
Heat element (2nd stage)		○		○		○	○	○	○	○	
Fan VFS						•		•	•		•
Fan speeds		1 2 3	1 2 3	1 2 3	1 2 3		1 2 3			1 2 3	
Economizer		○ ○	○ ○	○ ○	○ ○	○	○ ○	○	○	○ ○	○
Floor heating			•		•						•

## FC Configurations for 4-Pipe systems with humidification/dehumidification

Outputs	Configuration	40	41	42	43
Cool valve		•	•		•
Heat valve		•	•	•	
Cool valve PID				•	
Heat valve PID					•
Heat element (2nd stage)		○	○	○	○
Fan VFS			•		
Fan speeds		1 2 3		1 2 3	1 2 3
Economizer		○ ○	○	○ ○	○ ○
Humidifier		•	•	•	•
Dehumidify	Dehumidifier or	•			
	Reheat	•	•	•	•

• Yes    ○ Option
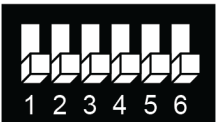
## Wiring and DIP switch configurations 1 to 4 – AC systems

Outputs	Config. 1: HC32 1 Speed fan	Config. 2: HP42 1 Speed fan	Config. 3: HP22 2/3 Speeds fan <sup>(1)</sup>	Config. 4: HP21 2/3 Speeds fan <sup>(1)</sup>
<b>11</b>	Heat element 3 (3rd stage heat)	Heat element 2 (4th stage heat)	Fan high	Fan high
<b>12</b>	Heat element 2 (2nd stage heat)	Heat element 1 (3rd stage heat)	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )
<b>13</b>	Fan (1 speed)	Fan (1 speed)	Fan low	Fan low
<b>14</b>	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>	Heat element (2nd stage heat)
<b>15</b>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1st stage heat)	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>
<b>A01</b>	X	X	X	X
<b>A02</b>	X	X	X	X
<b>SW1</b>				
<b>SW2</b>				

<sup>(1)</sup> SW1.1, SW1.2 – Fan speeds: 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
3 speeds (Low, Med., and High): SW1.1 = OFF, SW1.2 = OFF

<sup>(2)</sup> SW1.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)

<sup>(3)</sup> SW1.5 – Compressor delay: ON = Disable, OFF = Enable

<sup>(4)</sup> SW2.3 – Dehumidification: ON = Use dehumidifier  
OFF = Use reheat for dehumidification

<sup>(5)</sup> SW2.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.





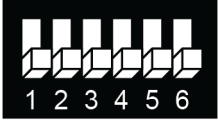
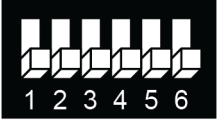
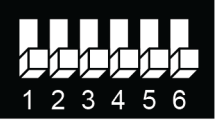
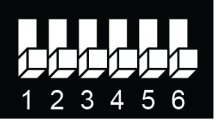
See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch configurations 5 to 8 – AC systems

Outputs	Config. 5: HC21 - 2/3 Speeds fan <sup>(1)</sup>	Config. 6: HP21 - Fan VFS	Config. 7: HP22 - Fan VFS	Config. 8: HC21 - Fan VFS
<b>11</b>	Fan high	X	X	X
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Economizer <sup>(5)</sup> (option – SW2.6 ON)
<b>13</b>	Fan low	X	X	X
<b>14</b>	Heat element 2 (2nd stage heat)	Heat element (2nd stage heat)	Compressor 2 <sup>(3)</sup>	Heat element 2 (2nd stage heat)
<b>15</b>	Compressor <sup>(3)</sup>	Compressor <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1st stage heat)	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>	Heat element 1 <sup>(2)</sup> (1st stage heat)
<b>A01</b>	X	X	X	X
<b>A02</b>	X	Fan VFS	Fan VFS	Fan VFS

<b>SW1</b>				
<b>SW2</b>				

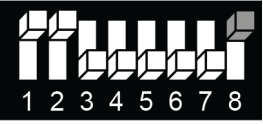- (1) SW1.1, SW1.2 – Fan speeds: 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
3 speeds (Low, Med., and High): SW1.1 = OFF, SW1.2 = OFF
- (2) SW1.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)
- (3) SW1.5 – Compressor delay: ON = Disable, OFF = Enable
- (4) SW2.3 – Dehumidification: ON = Use dehumidifier  
OFF = Use reheat for dehumidification
- (5) SW2.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.


Fan VFS: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max



## Wiring and DIP switch configurations 9 to 12 – AC systems

Outputs	Config. 9: HC22 1 Speed fan, Economizer	Config. 10: HP32 1 Speed fan, Economizer	Config. 11: HC32 1 Speed fan, Humidifier, Dehum/Reheat for Dehumidification	Config. 12: HP42 1 Speed fan, Humidifier, Dehum/Reheat for Dehumidification
<b>11</b>	Heat element 2 (2nd stage heat)	Heat element (3rd stage heat)	Heat element 3 (3rd stage heat)	Heat element 2 (4th stage heat)
<b>12</b>	Economizer	Economizer	Heat element 2 (2nd stage heat)	Heat element 1 (3rd stage heat)
<b>13</b>	Fan (1 speed)	Fan (1 speed)	Fan (1 speed)	Fan (1 speed)
<b>14</b>	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>
<b>15</b>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>
<b>16</b>	Heat element <sup>(2)</sup> (1st stage heat)	Heat pump <sup>(2)</sup>	Heat element 1 (1st stage heat)	Heat pump <sup>(2)</sup>
<b>A01</b>	X	X	Humidifier	Humidifier
<b>A02</b>	X	X	Dehumidifier <sup>(4)</sup> (option - See SW2.3)	Dehumidifier <sup>(4)</sup> (option - See SW2.3)

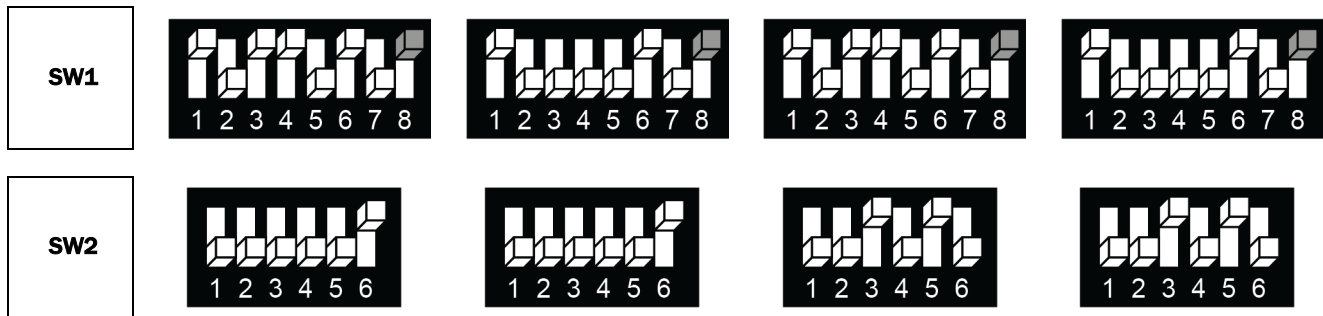

- (1) SW1.1, SW1.2 – Fan speeds: 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
3 speeds (Low, Med., and High): SW1.1 = OFF, SW1.2 = OFF
- (2) SW1.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)
- (3) SW1.5 – Compressor delay: ON = Disable, OFF = Enable
- (4) SW2.3 – Dehumidification: ON = Use dehumidifier  
OFF = Use reheat for dehumidification
- (5) SW2.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.








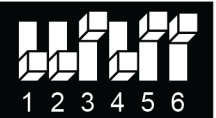
See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Humidifier, Dehumidifier: 0-10VDC. 0.5mA Not isolated

Control - Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24VAC, 0.5A max.

## Wiring and DIP switch configurations 13 to 16 – AC systems

Outputs	Config. 13: HC21 2/3 Speeds fan <sup>(1)</sup> Humidifier, Dehum/ Reheat for Dehumidification	Config. 14: HP21 2/3 Speeds fan <sup>(1)</sup> , Humidifier, Dehum/ Reheat for Dehumidification	Config. 15: HC22 1 Speed fan, Economizer, Humidifier, Dehum/ Reheat for Dehumidification	Config. 16: HP32 1 Speed fan, Economizer, Humidifier, Dehum/ Reheat for Dehumidification
<b>11</b>	Fan high	Fan high	Heat element 2 (2nd stage heat)	Heat element (3rd stage heat)
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Economizer	Economizer
<b>13</b>	Fan low	Fan low	Fan (1 speed)	Fan (1 speed)
<b>14</b>	Heat element 2 (2nd stage heat)	Heat element (2nd stage heat)	Compressor 2 <sup>(3)</sup>	Compressor 2 <sup>(3)</sup>
<b>15</b>	Compressor <sup>(3)</sup>	Compressor <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1st stage heat)	Heat pump <sup>(2)</sup>	Heat element 1 <sup>(2)</sup> (1st stage heat)	Heat pump <sup>(2)</sup>
<b>A01</b>	Humidifier	Humidifier	Humidifier	Humidifier
<b>A02</b>	Dehumidifier <sup>(4)</sup> (option - See SW2.3)	Dehumidifier <sup>(4)</sup> (option - See SW2.3)	Dehumidifier <sup>(4)</sup> (option - See SW2.3)	Dehumidifier <sup>(4)</sup> (option - See SW2.3)
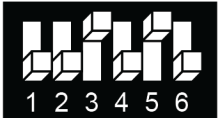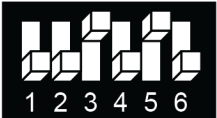
<b>SW1</b>				
<b>SW2</b>				

(1) SW1.1, SW1.2 – Fan speeds:

2 speeds (Low and High):  
3 speeds (Low, Med., and High):

SW1.1 = OFF, SW1.2 = ON  
SW1.1 = OFF, SW1.2 = OFF

(2) SW1.4 – HP (Heat pump):  
HC (not heat pump):

ON = Heat pump active in cool, OFF = Heat pump active in heat  
ON = Electrical heater, OFF = Oil/Gas heater (no fan)

(3) SW1.5 – Compressor delay:

ON = Disable, OFF = Enable

(4) SW2.3 – Dehumidification:

ON = Use dehumidifier  
OFF = Use reheat for dehumidification

(5) SW2.6 – Terminal 12 operation:

ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.


See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Fan VFS, Humidifier, Dehumidifier: 0-10VDC. 0.5mA Not isolated

Control - Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24VAC, 0.5A max.

## Wiring and DIP switch configurations 17 to 20 – AC systems

Outputs	Config. 17: HP22 2/3 Speed fan <sup>(1)</sup> , Humidifier, Dehumidifier	Config. 18: HP21 2/3 Speed fan <sup>(1)</sup> , Humidifier, Reheat for Dehumidification	Config. 19: HP22 Fan VFS, Humidifier	Config. 20: HP21 Fan VFS, Humidifier, Reheat for Dehumidification
<b>11</b>	Fan high	Fan high	X	X
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Economizer <sup>(5)</sup> (option – SW2.6 ON)
<b>13</b>	Fan low	Fan low	X	X
<b>14</b>	Compressor 2 <sup>(3)</sup>	Heat element (2nd stage heat)	Compressor 2 <sup>(3)</sup>	Heat element (2nd stage heat)
<b>15</b>	Compressor 1 <sup>(3)</sup>	Compressor <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor <sup>(3)</sup>
<b>16</b>	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>
<b>A01</b>	Humidifier	Humidifier	Humidifier	Humidifier
<b>A02</b>	Dehumidifier	X	Fan VFS	Fan VFS

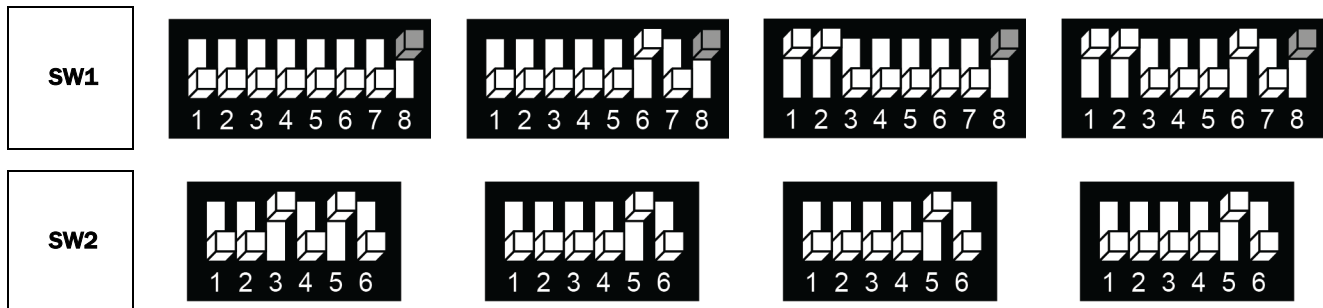

- (1) SW1.1, SW1.2 – Fan speeds: 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
3 speeds (Low, Med., and High): SW1.1 = OFF, SW1.2 = OFF
- (2) SW1.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)
- (3) SW1.5 – Compressor delay: ON = Disable, OFF = Enable
- (4) SW2.3 – Dehumidification: ON = Use dehumidifier  
OFF = Use reheat for dehumidification
- (5) SW2.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Humidifier, Dehumidifier: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch configuration 21 – AC systems

Outputs	Config. 21: HC21 Fan VFS, Humidifier, Reheat for Dehumidification
<b>11</b>	X
<b>12</b>	Economizer <sup>(5)</sup> (option – SW2.6 ON)
<b>13</b>	X
<b>14</b>	Heat element 2 (2nd stage heat)
<b>15</b>	Compressor <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1st stage heat)
<b>A01</b>	Humidifier
<b>A02</b>	Fan VFS

**SW1**



**SW2**



- (1) SW1.1, SW1.2 – Fan speeds: 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
3 speeds (Low, Med., and High): SW1.1 = OFF, SW1.2 = OFF
- (2) SW1.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)
- (3) SW1.5 – Compressor delay: ON = Disable, OFF = Enable
- (4) SW2.3 – Dehumidification: ON = Use dehumidifier  
OFF = Use reheat for dehumidification
- (5) SW2.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.


See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Fan VFS, Humidifier: 0-10VDC, 0.5mA Not isolated

Control - Heat elements, Heat pump, Compressors, Economizer: 24VAC, 0.5A max.

# Wiring and DIP switch configurations 22 to 25 – FC systems - 2-pipe

Outputs	Config. 22: 2-Pipe, 1/2/3 Speeds fan	Config. 23: 2-Pipe, 1/2/3 Speeds fan Cool/Heat PID	Config. 24: 2-Pipe, Fan VFS	Config. 25: 2-Pipe, Fan VFS, Cool/Heat PID
<b>11</b>	Fan high	Fan high	X	X
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Economizer <sup>(5)</sup> (option – SW2.6 ON)
<b>13</b>	Fan low	Fan low	X	X
<b>14</b>	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)
<b>15</b>	Cool/Heat valve <sup>(3)</sup> (1st stage heat)	X	Cool/Heat valve <sup>(3)</sup> (1st stage heat)	X
<b>16</b>	X	X	X	X
<b>AO1</b>	X	Cool/Heat valve PID <sup>(3)</sup> (1st stage heat)	X	Cool/Heat valve PID <sup>(3)</sup> (1st stage heat)
<b>AO2</b>	X	X	Fan VFS	Fan VFS

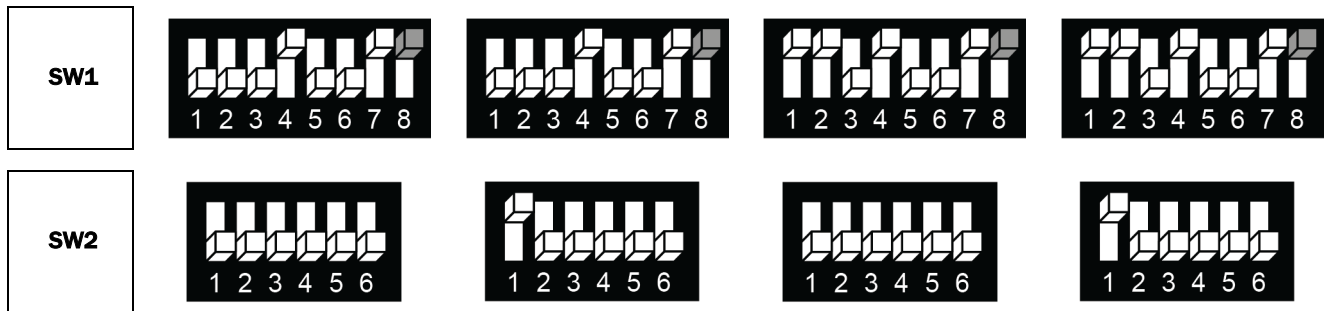


- (1)SW1.1, SW1.2 – Fan speeds:
  - 1 speed (Low): SW1.1 = ON, SW1.2 = OFF
  - 2 speeds(Low and High): SW1.1 = OFF, SW1.2 = ON
  - 3 speeds(Low, Medium, and High): SW1.1 = OFF, SW1.2 = OFF
- (2)SW1.4 – 2nd heating stage: ON = Enable, OFF = Disable
- (3)SW1.5 – Chilled beam option: ON = Enable chilled beam (fan will not run with 1st stage cooling)
- (4)SW2.3 – Dehumidification:
  - ON = Use dehumidifier
  - OFF = Use reheat for dehumidification
- (5)SW2.6 – Terminal 12 operation:
  - ON = Economizer
  - OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)
  - Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Fan VFS, PID valves: 0-10VDC. 0.5mA Not isolated  
 Control - Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24VAC, 0.5A max.

## Wiring and DIP switch configurations 26 to 29 – FC systems - 2-pipe

Outputs	<b>Config. 26:</b> 2-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Cool/Heat valve, Humidifier, Dehum/Reheat for Dehumidification	<b>Config. 27:</b> 2-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Cool/Heat valve, Humidifier, Reheat for Dehumidification	<b>Config. 28:</b> 2-Pipe, Fan VFS, Humidifier Reheat for Dehumidification	<b>Config. 29:</b> 2-Pipe, 1/2/3 speeds fan <sup>(1)</sup> , Cool/Heat PID, Humidifier, Reheat for Dehumidification
<b>11</b>	Fan high	Fan high	X	Fan high
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Fan medium (or Economizer <sup>(5)</sup> )
<b>13</b>	Fan low	Fan low	X	Fan low
<b>14</b>	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)
<b>15</b>	Cool/Heat valve <sup>(3)</sup> (1st stage heat)	Cool/Heat valve <sup>(3)</sup> (1st stage heat)	Cool/Heat valve <sup>(3)</sup> (1st stage heat)	X
<b>16</b>	X	X	X	X
<b>A01</b>	Humidifier	Humidifier	Humidifier	Cool/Heat valve PID <sup>(3)</sup> (1st stage heat)
<b>A02</b>	Dehumidifier <sup>(4)</sup> (option - See SW2.3)	X	Fan VFS	Humidifier

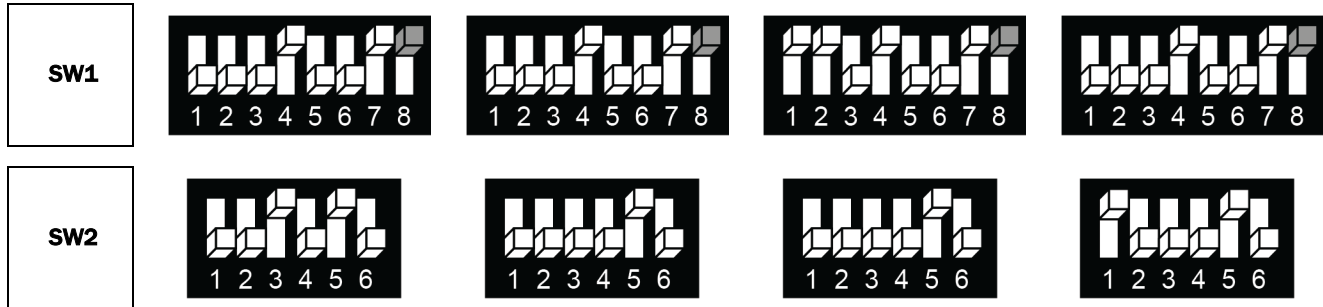


- <sup>(1)</sup>SW1.1, SW1.2 – Fan speeds:      1 speed (Low):      SW1.1 = ON, SW1.2 = OFF  
 2 speeds(Low and High):      SW1.1 = OFF, SW1.2 = ON  
 3 speeds(Low, Medium, and High):      SW1.1 = OFF, SW1.2 = OFF
- <sup>(2)</sup>SW1.4 – 2nd heating stage:      ON = Enable, OFF = Disable
- <sup>(3)</sup>SW1.5 – Chilled beam option:      ON = Enable chilled beam (fan will not run with 1st stage cooling)
- <sup>(4)</sup>SW2.3 – Dehumidification:      ON = Use dehumidifier  
 OFF = Use reheat for dehumidification
- <sup>(5)</sup>SW2.6 – Terminal 12 operation:      ON = Economizer  
 OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
 Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Fan VFS, PID valves, Hum., Dehum.: 0-10VDC. 0.5mA Not isolated  
 Control - Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24VAC, 0.5A max.

## Wiring and DIP switch configurations 30 to 33 – FC systems - 4-pipe

Outputs	Config. 30: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup>	Config. 31: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Floor heating	Config. 32: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Cool valve PID	Config. 33: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Cool valve PID, Floor heating
<b>11</b>	Fan high	Fan high	Fan high	Fan high
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )
<b>13</b>	Fan low	Fan low	Fan low	Fan low
<b>14</b>	Heat element <sup>(2)</sup> (2nd stage heat)	Floor heating (1st stage heat – no fan)	Heat element <sup>(2)</sup> (2nd stage heat)	Floor heating (1st stage heat – no fan)
<b>15</b>	Cool valve <sup>(3)</sup>	Cool valve <sup>(3)</sup>	X	X
<b>16</b>	Heat valve (1st stage heat)	Heat valve (2nd stage heat)	Heat valve (1st stage heat)	Heat valve (2nd stage heat)
<b>A01</b>	X	X	Cool valve PID <sup>(3)</sup>	Cool valve PID <sup>(3)</sup>
<b>A02</b>	X	X	X	X

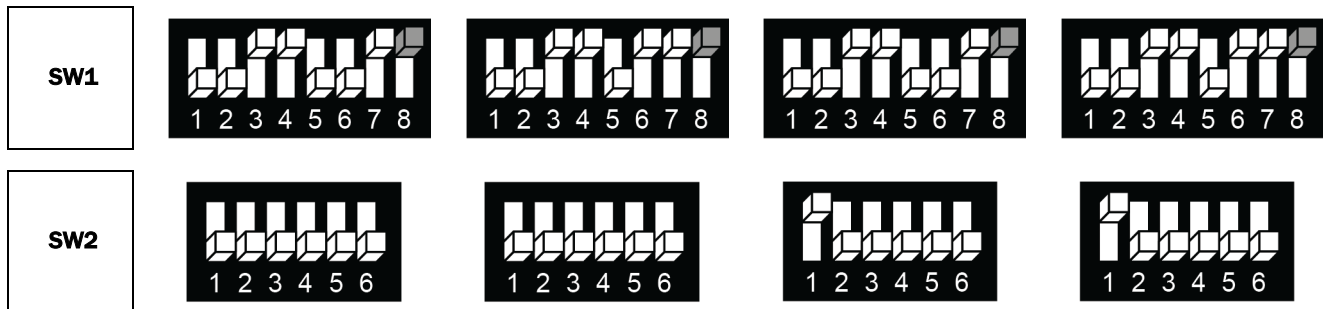









- |  |   |   |
|--|---|---|
| <p><sup>(1)</sup>SW1.1, SW1.2 – Fan speeds:</p> <p><sup>(2)</sup>SW1.4 – 2nd heating stage:</p> <p><sup>(3)</sup>SW1.5 – Chilled beam option:</p> <p><sup>(4)</sup>SW2.3 – Dehumidification:</p> <p><sup>(5)</sup>SW2.6 – Terminal 12 operation:</p> | <p>1 speed (Low):</p> <p>2 speeds(Low and High):</p> <p>3 speeds(Low, Medium, and High):</p> <p>ON = Enable, OFF = Disable</p> <p>ON = Enable chilled beam (fan will not run with 1st stage cooling)</p> <p>ON = Use dehumidifier</p> <p>OFF = Use reheat for dehumidification</p> <p>ON = Economizer</p> <p>OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)</p> <p>Important: Economizer will not work in 3 fan speeds configuration.</p> | <p>SW1.1 = ON, SW1.2 = OFF</p> <p>SW1.1 = OFF, SW1.2 = ON</p> <p>SW1.1 = OFF, SW1.2 = OFF</p> |
|--|---|---|

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

Fan VFS, PID valves, Hum., Dehum.: 0-10VDC. 0.5mA Not isolated  
Control - Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24VAC, 0.5A max.

## Wiring and DIP switch configurations 34 to 37 – FC systems - 4-pipe

Outputs	Config: 34: 4-Pipe, Fan VFS, Cool valve PID	Config: 35: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Heat valve PID	Config: 36: 4-Pipe, Fan VFS, Heat valve PID	Config: 37: 4-Pipe, Fan VFS
<b>11</b>	X	Fan high	X	X
<b>12</b>	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Economizer <sup>(5)</sup> (option – SW2.6 ON)
<b>13</b>	X	Fan low	X	X
<b>14</b>	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)
<b>15</b>	X	Cool valve <sup>(3)</sup>	Cool valve <sup>(3)</sup>	Cool valve <sup>(3)</sup>
<b>16</b>	Heat valve (1st stage heat)	X	X	Heat valve (1st stage heat)
<b>A01</b>	Cool valve PID <sup>(3)</sup>	Heat valve PID (1st stage heat)	Heat valve PID (1st stage heat)	X
<b>A02</b>	Fan VFS	X	Fan VFS	Fan VFS
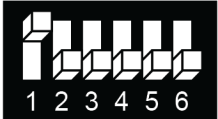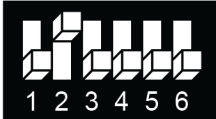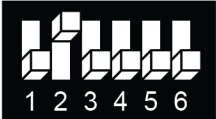
<b>SW1</b>				
<b>SW2</b>				

<sup>(1)</sup>SW1.1, SW1.2 – Fan speeds:

1 speed (Low):  
2 speeds (Low and High):  
3 speeds (Low, Medium, and High):

SW1.1 = ON, SW1.2 = OFF  
SW1.1 = OFF, SW1.2 = ON  
SW1.1 = OFF, SW1.2 = OFF

<sup>(2)</sup>SW1.4 – 2nd heating stage:

ON = Enable, OFF = Disable

<sup>(3)</sup>SW1.5 – Chilled beam option:

ON = Enable chilled beam (fan will not run with 1st stage cooling)

<sup>(4)</sup>SW2.3 – Dehumidification:

ON = Use dehumidifier  
OFF = Use reheat for dehumidification

<sup>(5)</sup>SW2.6 – Terminal 12 operation:

ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.


Fan VFS, PID valves: 0-10VDC. 0.5mA Not isolated

Control - Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24VAC, 0.5A max.



## Wiring and DIP switch configurations 38 to 40 – FC systems - 4-pipe

Outputs	Config. 38: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Heat valve PID, Cool valve PID	Config. 39: 4-Pipe, VFS Fan, Cool valve PID, Floor heating	Config. 40: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Humidifier, Dehum/Reheat for Dehumidification
<b>11</b>	Fan high	X	Fan high
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Fan medium (or Economizer <sup>(5)</sup> )
<b>13</b>	Fan low	X	Fan low
<b>14</b>	Heat element <sup>(2)</sup> (2nd stage heat)	Floor heating (1st stage heat – no fan)	Heat element <sup>(2)</sup> (2nd stage heat)
<b>15</b>	X	X	Cool valve <sup>(3)</sup>
<b>16</b>	X	Heat valve (2nd stage heat)	Heat valve (1st stage heat)
<b>A01</b>	Cool valve PID <sup>(3)</sup>	Cool valve PID <sup>(3)</sup>	Humidifier
<b>A02</b>	Heat valve PID (1st stage heat)	Fan VFS	Dehumidifier <sup>(4)</sup> (option - See SW2.3)

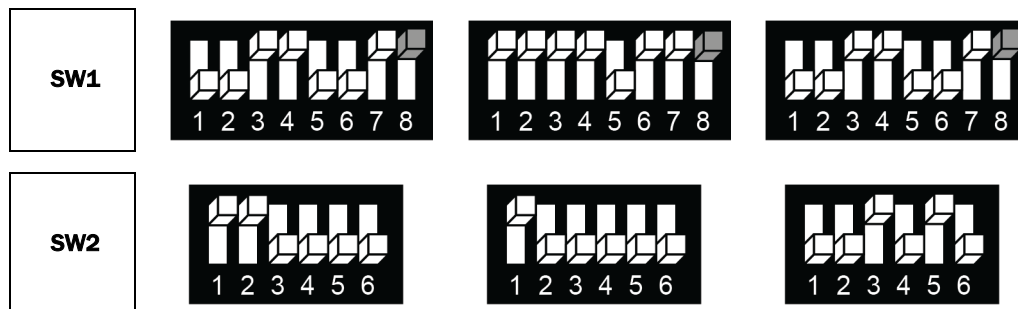

<sup>(1)</sup>SW1.1, SW1.2 – Fan speeds: 1 speed (Low): SW1.1 = ON, SW1.2 = OFF  
 2 speeds (Low and High): SW1.1 = OFF, SW1.2 = ON  
 3 speeds (Low, Medium, and High): SW1.1 = OFF, SW1.2 = OFF

<sup>(2)</sup>SW1.4 – 2nd heating stage: ON = Enable, OFF = Disable

<sup>(3)</sup>SW1.5 – Chilled beam option: ON = Enable chilled beam (fan will not run with 1st stage cooling)

<sup>(4)</sup>SW2.3 – Dehumidification: ON = Use dehumidifier  
 OFF = Use reheat for dehumidification

<sup>(5)</sup>SW2.6 – Terminal 12 operation: ON = Economizer  
 OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
 Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.

PID valves, Humidifier, Dehumidifier: 0-10VDC, 0.5mA Not isolated  
 Control - Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24VAC, 0.5A max.

# Wiring and DIP switch configurations 41 to 43 – FC systems - 4-pipe

Outputs	Config. 41: 4-Pipe, Fan VFS, Humidifier, Reheat for Dehumidification	Config. 42: 4-Pipe, 1/2/3 Speeds fan(1), Cool valve PID Humidifier, Reheat for Dehumidification	Config. 43: 4-Pipe, 1/2/3 Speeds fan(1), Heat valve PID Humidifier, Reheat for Dehumidification
11	X	Fan high	Fan high
12	Economizer <sup>(5)</sup> (option – SW2.6 ON)	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )
13	X	Fan low	Fan low
14	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)	Heat element <sup>(2)</sup> (2nd stage heat)
15	Cool valve <sup>(3)</sup>	X	Cool valve <sup>(3)</sup>
16	Heat valve (1st stage heat)	Heat valve (1st stage heat)	X
A01	Humidifier	Cool valve PID <sup>(3)</sup>	Heat valve PID (1st stage heat)
A02	Fan VFS	Humidifier	Humidifier
SW1			
SW2			

- (1)SW1.1, SW1.2 – Fan speeds: 1 speed (Low): SW1.1 = ON, SW1.2 = OFF  
 2 speeds(Low and High): SW1.1 = OFF, SW1.2 = ON  
 3 speeds(Low, Medium, and High): SW1.1 = OFF, SW1.2 = OFF
- (2)SW1.4 – 2nd heating stage: ON = Enable, OFF = Disable
- (3)SW1.5 – Chilled beam option: ON = Enable chilled beam (fan will not run with 1st stage cooling)
- (4)SW2.3 – Dehumidification: ON = Use dehumidifier  
 OFF = Use reheat for dehumidification
- (5)SW2.6 – Terminal 12 operation: ON = Economizer  
 OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
 Important: Economizer will not work in 3 fan speeds configuration.

See drawing in *Wiring terminals and DIP switches* (page 23) for DIP switch locations.


Fan on/off: 110-230 Vac, 2.5A max.

Humidifier, PID valves: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Cool/Heat valves, Economizer: 110\*230 Vac, 0.3A max

## Technician Settings

### Enter Technician Settings mode:

- 1 Adjust the setpoint temperature to 10°C or 50°F.
- 2 Press and hold the  button for 10 seconds to enter Technician Settings mode. "P01" will appear on display.

### View objects and make adjustments:

- Use the [Mode] button to step forward between different settings.
- Use the [Fan] button to step backward between different settings.
- Press the [On/Off] button to exit Technician Settings and return to normal display.
- If no button is pressed for 60 seconds, the thermostat will automatically exit Technician Settings and return to normal display.
- Use the ▲ or ▼ button to make adjustments when required.


## Technician Settings P1 to P3

### Offset for temperature readings calibration

Range: -6...+6 °C / -9...+9 °F.

Default: 0 °C / 0 °F.

Note: The offset will influence both internal or external sensors.

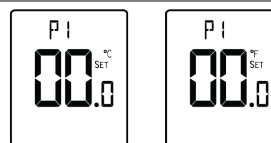


Offset for temperature calibration  
(°C) (°F)

### P2 – Setpoint limit for cooling

Range: 5...35 °C / 41...95 °F.

Default: 10 °C / 50 °F.

Note: The thermostat will stop cooling regardless of the user's setpoint

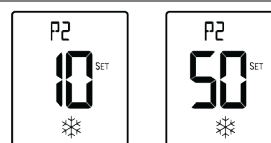


Setpoint limit for cooling  
(°C) (°F)

### P3 – Setpoint limit for heating

Range: 5...35 °C / 41...95 °F.

Default: 30 °C / 86 °F.

Note: The thermostat will stop heating regardless of the user's setpoint

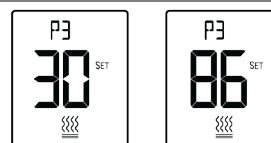

Setpoint limit for heating  
(°C) (°F)


## Technician Settings P4 to P7

### P4 – Enable/Disable the option to lock the [Fan] button


“01” [Fan] button can be locked

“00” [Fan] button cannot be locked

Note: When enabled, press and hold the [Mode] buttons for 7 seconds to unlock or relock the buttons.



[Fan]  
Can  
be locked

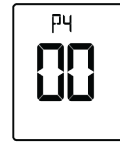


[Fan]  
Cannot  
be locked

### P5 – Enable/Disable the option to lock the [Mode] button


“01” [Mode] button can be locked

“00” [Mode] button cannot be locked

Note: When enabled, press and hold the [Mode] for 7 seconds to unlock or relock the buttons.



[Mode]  
Can  
be locked

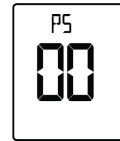


[Mode]  
Cannot  
be locked

### P6 – Enable/Disable the option to lock the [On/Off] button


“01” [On/Off] button can be locked

“00” [On/Off] button cannot be locked

Note: When enabled, press and hold the [Mode] for 7 seconds to unlock or relock the buttons.



[On/Off]  
Can  
be locked

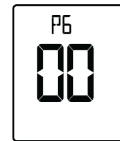


[On/Off]  
Cannot  
be locked

### P7 – Enable/Disable the option to lock the ▲ or ▼ button (SET)

“01” ▲ or ▼ button can be locked

“00” ▲ or ▼ button cannot be locked

Note: When enabled, press and hold the [Mode] for 7 seconds to unlock or relock the buttons.

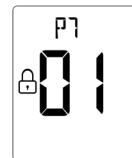

▲ or ▼  
Can  
be locked



▲ or ▼  
Cannot  
be locked

### P4-P7 Note:

When the option to lock one or more buttons is enabled, these buttons will be automatically locked when leaving technician settings and returning to normal display. In normal display, press and hold the [Mode] button for 7 seconds to unlock/relock these buttons.




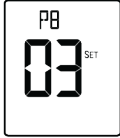


# Technician Settings P8 to P10

## P8 – Functionality of T1 terminals

- “00” - T1 terminals are not in use
- “01” - External sensor
- “02” - T3 Soft start in heat sensor (FC) \* or De-icing in cool (AC) \*\*
- “03” - Door switch
- “04” - Key tag
- “05” - T Economizer  
(DIP switch SW2.6 must be ON)

\* In heating mode, the fan will not start before there is hot water in the coil.  
 Note: To view T3 on the BACnet Thermostat, see Technician Settings P84.

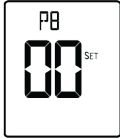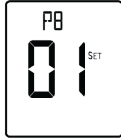\*\* Allow de-icing operation of indoor coil in cooling.

 T1 terminals Not in use	 T1 sensor (External sensor)	 T3 Soft start in heat sensor (FC) or De-icing in cool sensor (AC)
 Door switch	 Key tag	 T Economizer

## P09 – Functionality of IN1,0 terminals

- “00” - IN1,0 terminals are not in use
- “01” - T2 (Change over sensor) (FC) \*or De-icing in heat (AC)
- “02” - T3 (Soft start in heat sensor) (FC) \*\* or De-icing in cool (AC)
- “03” - Window contact - Remote On/Off switch
- “04” - Window contact - Remote Economy switch
- “05” - External Passive Infrared detector







\* In 2-Pipe system, T2 will sense the water temperature in the pipe in order to select/allow effective system mode.

Note: To view T2 on the BACnet Thermostat, see Technician Settings P83.

\*\* Where T1 terminals are used for external sensor, the IN1,0 terminals can be used for T3 sensor.



Note: To view T3 on the BACnet Thermostat, see Technician Settings P84.

\*\*\* External PIR – only if internal PIR is disabled (see Technician Settings P186).

 “IN1,0” terminals Not in use	 *T2 change over sensor (FC) / De-icing in heat (AC)	 **T3 Soft start in heat sensor (FC) or De-icing in cool sensor (AC)
 Window contact Remote On/Off	 Window contact Remote Economy	 ***External PIR sensor

## P10 – Window contact (terminals IN1,0) polarity

- “01” - Normally open
- “00” - Normally closed

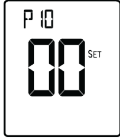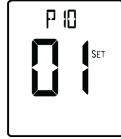
 Win. contact Normally close	 Win. contact Normally open
---	--

# Technician Settings P11 to P15

## P11 – Window contact delay time

Range: 0...999 seconds.

Default: 600 seconds.

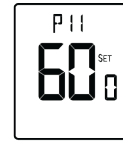


Window contact delay time (sec.)

## P12 – Door switch (terminals T1,0) polarity

“01” - Normally open

“00” - Normally closed

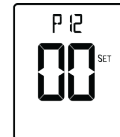

Door switch Normally closed




Door switch Normally open

## P13 – Door switch delay time

Range: 0...999 seconds.

Default: 180 seconds.

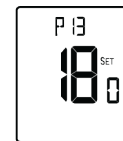


Door switch delay time (sec.)


## P14 – Enable/Disable Auto change over mode

“00” - Disable Auto change over mode

“01” - Enable Auto change over mode

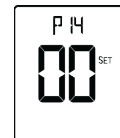

Disable Auto mode

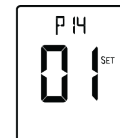

Enable Auto mode


## P15 – Motion sensor logic (PIR)

“00” - Thermostat turns off when unoccupied and back on when re-occupied.


“01” - Thermostat turns off when unoccupied and remains off when re-occupied.

“02” - Thermostat uses economy setpoints when occupied.


“03” - Unoccupancy – Dehumidification logic (only available with dehumidification configuration – see DIP switch settings)

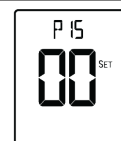

Unocc. – Off Re-occ. - On

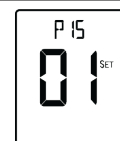

Unocc. – Off Re-occ. - Off

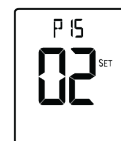

Economy setpoints




Dehumidification logic

## Technician Settings P16 to P25


### P16 – Enable/Disable Motion sensor

- “00” - Disable
- “01” - Enable

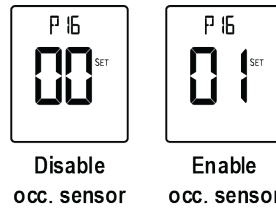

### P17 – PIR (Motion sensor) delay time before switching to unoccupied mode (ON delay)


- Range: 0...900 minutes
- Default: 20 minutes

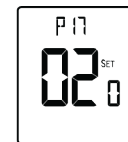

PIR ON delay (minutes)


### P18 – Door switch or key tag configuration

- “00” - Switch On/Off by door switch or key tag
- “01” - Changing the setpoint temperature
- “02” - Switching fan speed to Low

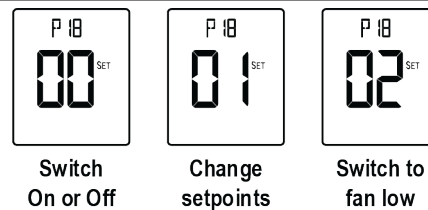

### P19 – PIR (Motion sensor) polarity


- “00” - Normally open
- “01” - Normally closed

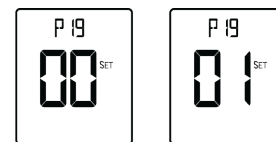

PIR Normally open PIR Normally closed

### P25 – Economy setpoint for cooling

- Range: 5...35 °C / 41...95 °F
- Default: 30 °C / 86 °F

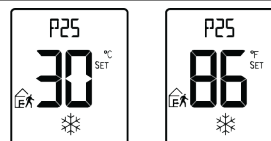


EC setpoint in cooling (°C) (°F)

## Technician Settings P26 to P30

### P26 – Economy setpoint for heating

Range: 5...35°C / 41...95°F

Default: 10°C / 50°F

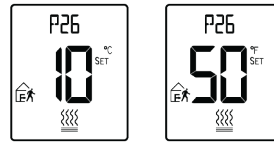


EC setpoint in heating  
(°C)                      (°F)

### P27 – On-delay time on-delay between heating stages

Range: 0...600 seconds

Default: 5 seconds

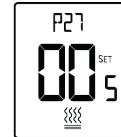


On delay  
heating stages

### P28 – Off-delay time between heating stages

Range: 0...600 seconds

Default: 1 second

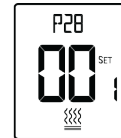


Off delay  
heating stages

### P30 – Beeper ON or OFF

“01” - Beeper ON

“00” - Beeper OFF

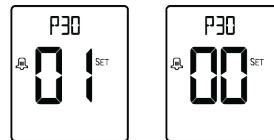

Beeper  
ON

Beeper  
OFF





# Technician Settings P31 to P34

## P31 – P34

Fan on/off delay


**with fan on demand (auto fan) active.**

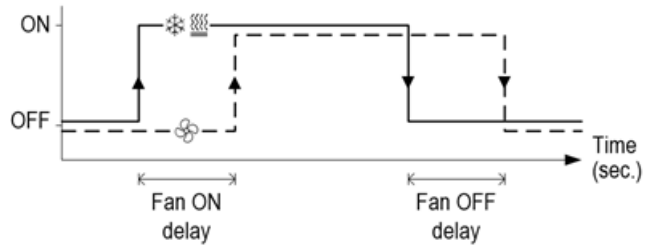

### P31 – Fan ON delay in cooling (FC only)

Range: 0...120 seconds

Default: 0 seconds (no delay)

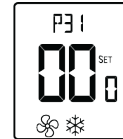


Fan ON delay in cooling (seconds)

### P32 – Fan OFF delay in cooling

Range: 0...120 seconds

Default: 0 seconds (no delay)

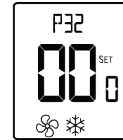


Fan OFF delay in cooling (seconds)

### P33 – Fan ON delay in heating (FC only)

Range: 0...120 seconds

Default: 0 seconds (no delay)

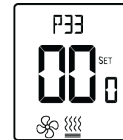


Fan ON delay in heating (seconds)

### P34 – Fan OFF delay in heating

Range: 0...120 seconds

Default: 30 seconds

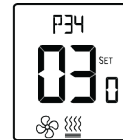

Fan OFF delay in heating (seconds)


## Technician Settings P35 to P42

### P35 – Enable/Disable Freeze protection

“00” - Disable Freeze protection

“01” - Enable Freeze protection

Note: If enabled, freeze protection will start when the thermostat is either ON or OFF and regardless of the current system mode.

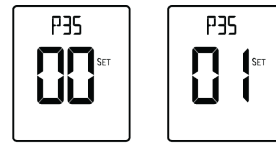

Disable freeze protection


Enable freeze protection

### P36 – Freeze protection cut-in setpoint

Range: 8...15°C / 46...59°F

Default: 8°C / 46°F

The room ambient temperature which will trigger Heating ON.

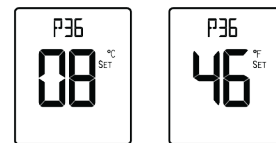


Freeze protection cut-in setpoint (°C) (°F)

### P37 – Freeze protection cut-out setpoint

Range: 10...17°C / 50...63°F

Default: 10°C / 50°F

The room ambient temperature which will switch the Heating back OFF.

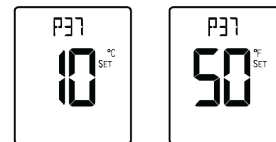


Freeze protection cut-out setpoint (°C) (°F)

### P40 – View filter counter (hours) – Read only

Range: 0...999 hours

The filter counter is related to Fan running time.




View filter Counter (hours)

### P41 – Reset filter time

Press the ▲ button to reset the filter counter.

The display will change from “00” to “01” and back to “00”.

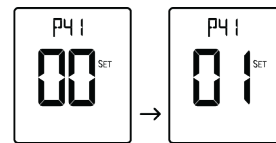


Reset filter counter

### P42 – Adjust filter alarm delay time counter (hours)

Range: 0...999 hours

Default: 0 hours (0 = Disable)





Adjust filter alarm delay time (hours)

# Technician Settings P43 to P44

## P43 – P44

Soft start in heat

**with fan on demand (auto fan) active.**

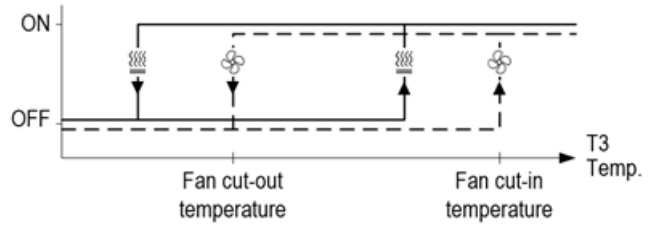



## P43 – Soft start in heat – cut-in temperature (FC only)

The fan will not start before the temperature on T3 sensor reaches the cut-in temperature.

See Technician Settings P08/P09.

Range: 14...37°C / 57...99°F

Default: 36°C / 97°F

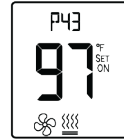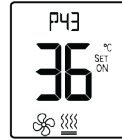

Soft start heat cut-in temperature  
(°C) (°F)



## P44 – Soft start in heat – cut-out temperature (FC only)

The fan will stop if the temperature on T3 sensor drops below the cut-out temperature.

See Technician Settings P08/P09.

Range: 12...35°C / 54...95°F

Default: 32°C / 90°F

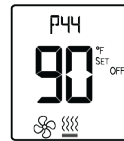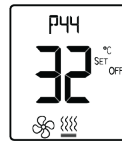



Soft start heat cut-out temperature  
(°C) (°F)

# Technician Settings P45 to P46

## P45 – P46

Cool differential band / offset



(with cool differential band offset = 0)

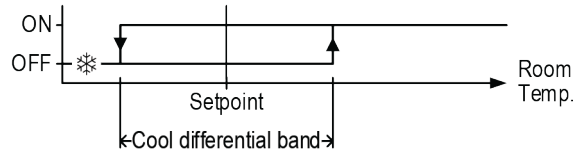

## P45 – P46

Cool differential band / offset


(with cool differential band offset ≠ 0)

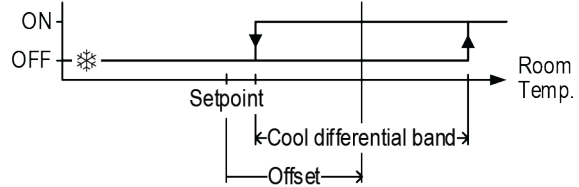

## P45 – Cool differential band

Range: 0.5...5°C / 1...10°F


Default: 1°C / 2°F

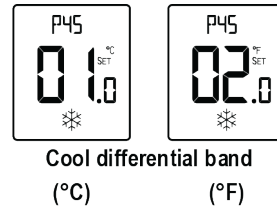

## P46 – Cool differential band offset

Range: -5...+5°C / -9...+9°F

Default: 0°C / 0°F


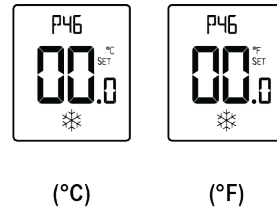


# Technician Settings P47 to P48

## P47-48

Heat differential band / offset



(with heat differential band offset = 0)

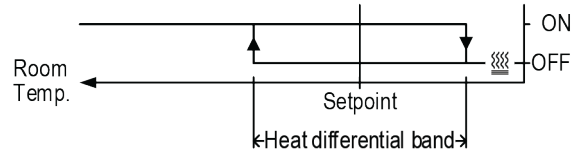

## P47-48

Heat differential band / offset


(with heat differential band offset ≠ 0)

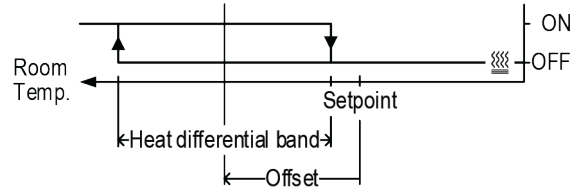

## P47 – Heat differential band

Range: 0.5...5 °C / 1...10 °F

Default: 1 °C / 2 °F

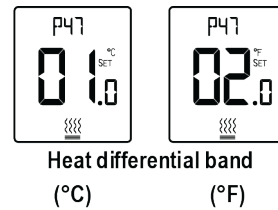


Heat differential band  
(°C) (°F)

## P48 – Heat differential band offset

Range: -5...+5 °C / -9...+9 °F

Default: 0 °C / 0 °F


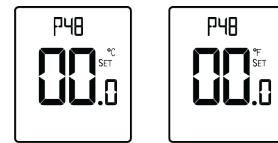


Heat differential band offset  
(°C) (°F)

# Technician Settings P49 to P51



## P49

Shift between Cool and Heat  
in Auto change over mode  
**(from cooling to heating)**

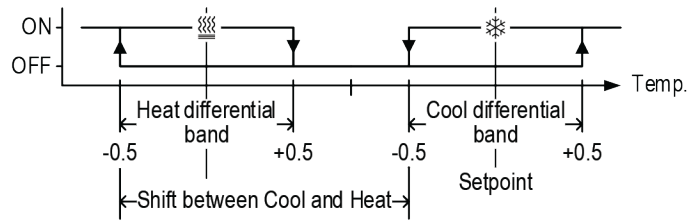

## P49


Shift between Cool and Heat  
in Auto change over mode  
**(from heating to cooling)**

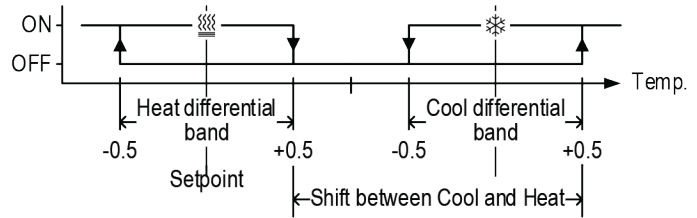

### P49 – Shift between Cool and Heat in Auto change over mode

Range: 0...10°C / 0...20°F

Default: 2°C / 4°F

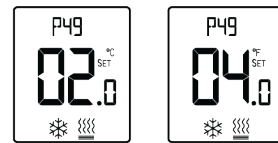


Shift between Cool & Heat in Auto mode  
(°C) (°F)

### P50 – Shift between Cooling stages (AC only)

Range: 0...10°C / 0...20°F

Default: 2°C / 4°F

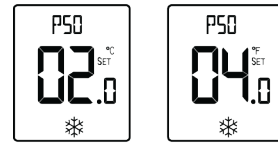


Shift between cooling stages  
(°C) (°F)

### P51 – Shift between Heating stages

Range: 0...49°C / 0...98°F

Default: 2°C / 4°F

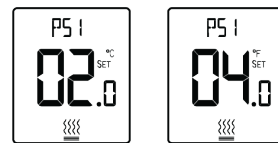

Shift between heating stages  
(°C) (°F)


# Technician Settings P52 to P57

**P52 – Cool valve proportional band (FC only)**

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V Valve opening from fully closed to fully open.

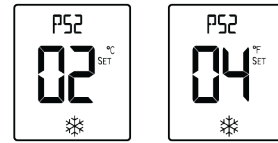

Cool valve proportional band  
(°C) (°F)

**P53 – Cool proportional low limit (FC only)**

Range: 0...100%

Default: 0%

Minimum valve opening.



Cool prop.  
low limit (%)

**P54 – Cool proportional high limit (FC only)**

Range: 0...100%

Default: 100%

Maximum valve opening.




Cool prop.  
high limit (%)

**P55 – Heat valve proportional band (FC only)**

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V Valve opening from fully closed to fully open.

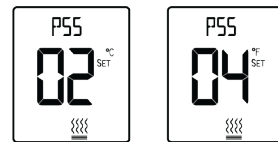


Cool valve proportional band  
(°C) (°F)

**P56 – Heat proportional low limit (FC only)**

Range: 0...100%

Default: 0%

Minimum valve opening.

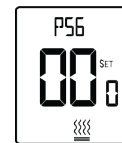


Heat prop.  
low limit (%)

**P57 – Heat proportional high limit (FC only)**

Range: 0...100%

Default: 100%

Maximum valve opening.

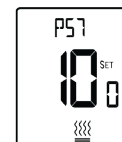

Heat prop.  
high limit (%)


# Technician Settings P60 to P64

## P60

Fan turns ON when the Cool or Heat valve reaches the “Proportional ON percent”

## P61

Fan turns OFF when the Cool or Heat valve drops below the “Proportional OFF percent”

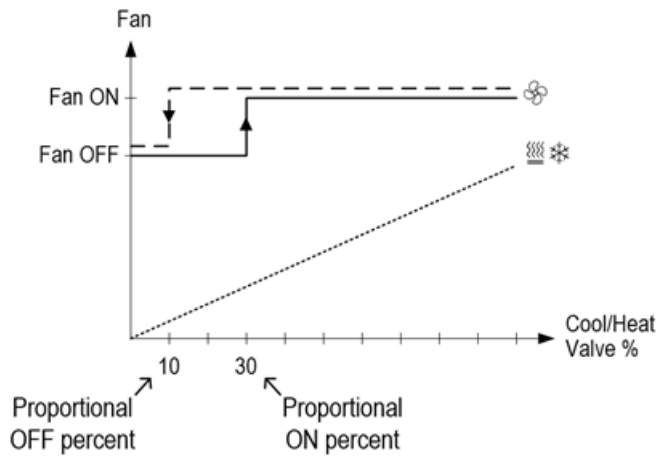

### P60 – Proportional ON percent (FC only)

Range: 0...30%

Default: 30%



Proportional ON percent (%)

### P61 – Proportional OFF percent (FC only)

Range: 0...100%

Default: 100%



Proportional OFF percent (%)

### P63 – Time on-delay between cooling stages (AC only)

Range: 0...600 seconds

Default: 5 seconds



On Delay cooling stages

### P64 – Time off-delay between cooling stages (AC only)

Range: 0...600 seconds

Default: 1 seconds



Off Delay cooling stages




## Technician Settings P65 to P70

### P65 – Fan VFS proportional band in cooling

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V fan speed from off closed to fully running.

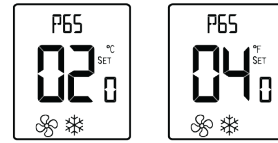


VFS Proportional band in cooling  
(°C) (°F)

### P66 – Fan VFS proportional band in heating

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V fan speed from off closed to fully running.

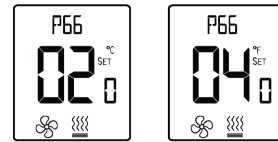


VFS Proportional band in heating  
(°C) (°F)

### P67 – Fan VFS Low speed percent in cooling

Range: 0...30%

Default: 20%

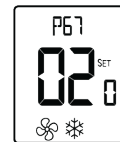


VFS Low %  
in cooling

### P68 – Fan VFS Medium speed percent in cooling

Range: 30...60%

Default: 50%

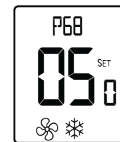


VFS Med %  
in cooling

### P69 – Fan VFS High speed percent in cooling

Range: 60...100%

Default: 90%

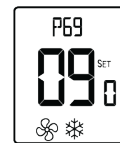


VFS High %  
in cooling

### P70 – Fan VFS Low speed percent in heating

Range: 0...30%

Default: 30%

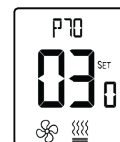


VFS Low %  
in heating

# Technician Settings P71 to P75

## P71 – Fan VFS Medium speed percent in heating

Range: 30...60%

Default: 50%




VFS Med %  
in heating

## P72 – Fan VFS High speed percent in heating

Range: 60...100%

Default: 80%




VFS High %  
in heating

## P74

VFS Medium speed differential (display from medium to low)

## P75


VFS High speed differential (display from high to medium)

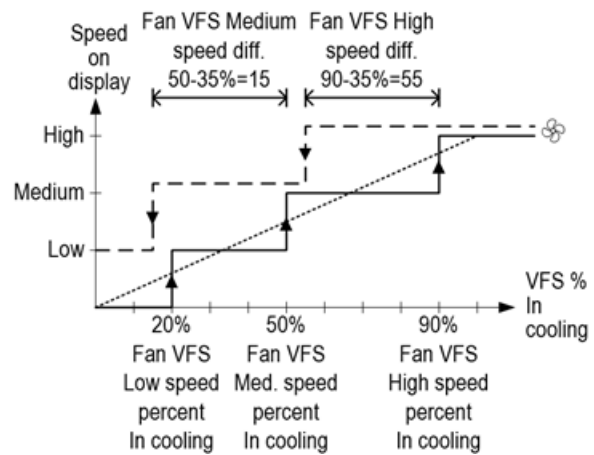

## P74 – VFS Medium speed differential

Range: 10...50%

Default: 35




VFS Med speed  
differential

## P75 – VFS High speed differential

Range: 10...50%

Default: 35



VFS High speed  
differential


## Technician Settings P76 to P79

---

### P76 – Fan VFS Low limit in cooling

Range: 0...100%

Default: 0%

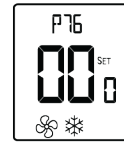


VFS low limit  
in cooling

---

### P77 – Fan VFS High limit in cooling

Range: 0...100%

Default: 100%

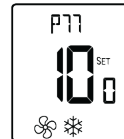


VFS high limit  
in cooling

---

### P78 – Fan VFS Low limit in heating

Range: 0...100%

Default: 0%

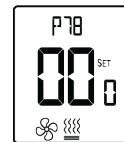


VFS low limit  
in heating

---

### P79 – Fan VFS High limit in heating

Range: 0...100%

Default: 100%

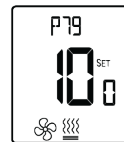

VFS high limit  
in heating

---

## Technician Settings P83 to P88

### P83 – View T2 temperature sensor readings

Note: If T2 is not connected, 0.0 will appear on display



T2 Sensor  
Not connected



T2 Sensor  
readings (°C)

### P84 – View T3 temperature sensor readings

Note: If T3 is not connected, 0.0 will appear on display



T3 Sensor  
Not connected



T3 Sensor  
readings (°C/°F)

### P85 – De-ice in cool – cut-in temperature (AC only)

Range: -9.5...+8°C / 15...46°F

Default: 0°C / 32°F

The indoor unit coil temperature in which de-icing will start.



De-ice in cool cut-in temperature  
(°C)



(°F)

### P86 – De-ice in cool – cut-out temperature (AC only)

Range: 2...20°C / 36...68°F

Default: 8°C / 46°F

The indoor unit coil temperature in which de-icing will stop.



De-ice in cool cut-out temperature  
(°C)




(°F)

### P87 – De-ice in heat time (AC only)

Range: 2...7 Minutes

Default: 5 Minutes

The length of de-icing procedure.

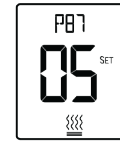


De-ice in heat  
time

### P88 – De-ice in heat break time (AC only)

Range: 10... 30 Minutes

Default: 25 Minutes

The time interval between de-icing cycles.

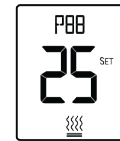

De-ice in heat  
break time


## Technician Settings P89 to P100

### P89 – De-ice in heat – cut-in temperature (AC only)

Range: -9.5...+8°C / 15...46°F

Default: 0°C / 32°F

The outdoor unit coil temperature in which de-icing will start.

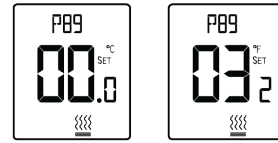


De-ice in heat cut-in temperature  
(°C) (°F)

### P90 – De-ice in heat – cut-out temperature (AC only)

Range: 2...20°C / 35...68°F

Default: 16°C / 61°F

The outdoor unit coil temperature in which de-icing will stop.

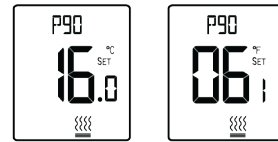

De-ice in heat cut-out temperature  
(°C) (°F)

### P91 – Compressor delay (AC only)

Range: 0...360 Seconds

Default: 240 Seconds

DIP Switch SW1.5 must be in “OFF” position – compressor delay enabled!




Compressor  
delay


### P98 – Display setpoint only (hide room temperature)

“00” - Display both setpoint and room temperatures

“01” - Display only the setpoint temperature

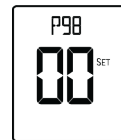

Show room  
temperature

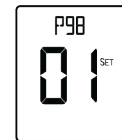


Hide room  
temperature


### P99 – One or Two setpoints (for cool and for heat)

“00” - One setpoint for cooling and heating

“01” - Two setpoints, one for cool and one for heat



One  
setpoint

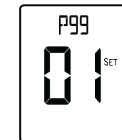


Two  
setpoints


### P100 – Enable screen dimming

“00” - Disable dimming

“01” - Enable dimming




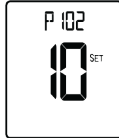



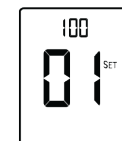
Disable screen  
dimming



Enable screen  
dimming

# Technician Settings P101 to P109

---
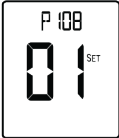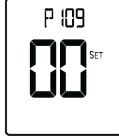
<p><b>P101 – Screen dimming delay</b></p> <p>Range: 0...99 minutes</p> <p>Default: 5 minutes</p>	 <p>Screen dimming delay</p>
<p><b>P102 – Dimming brightness</b></p> <p>Range: 0, 1, 5, 10, 20, 30...90%</p> <p>Default: 10%</p>	 <p>Dimming brightness (%)</p>
<p><b>P105 – Screen brightness when ON</b></p> <p>Range: 50...100%</p> <p>Default: 100%</p>	 <p>Screen brightness when ON (%)</p>
<p><b>P107 – Weekly program configuration</b></p> <p>“00” - Disable weekly program (program parameters will be lost)</p> <p>“01” - 7 days with the same program</p> <p>“02” - One program for Monday to Friday and another program for Saturday and Sunday</p> <p>“03” - One program for Monday to Friday, one for Saturday, and another for Sunday</p> <p>“04” - 7 days with the different program for each day</p>	 <p>Weekly program configuration</p>
<p><b>P108 – Weekly program - events per day</b></p> <p>“00” - Two different events per day</p> <p>“01” - Four different events per day</p>	 <p>Weekly program events per day</p>
<p><b>P109 – Weekly program event configuration</b></p> <p>“00” - US Program: Event start time, Mode, Fan speed, Setpoints (one or two)</p> <p>“01” - Eu program: Event start time, Stop time</p>	 <p>Weekly program event configuration</p>

---


# Technician Settings P111 to P119

---

## P111 – Motion sensor sensitivity (PIR)

Range: 1...5 (1 – Less sensitive, 5 – More sensitive)

Default: 4



Motion sensor  
sensitivity

---

## P114 – Cool PID Kp (FC only)

Range: 0...100%

Default: 100%




Cool PID  
Kp

---

## P115 – Heat PID Kp (FC only)

Range: 0...100%

Default: 100%



Heat PID  
Kp

---

## P116 – Cool PID Ki (FC only)

Range: 0...100%

Default: 0%




Cool PID  
Ki

---

## P117 – Heat PID Ki (FC only)

Range: 0...100%

Default: 0%




Heat PID  
Ki

---

## P118 – Cool PID Kd (FC only)

Range: 0...100%

Default: 1%




Cool PID  
Kd

---

## P119 – Heat PID Kd (FC only)

Range: 0...100%

Default: 1%



Heat PID  
Kd

---

# Technician Settings P122 to P188

**P122 – Cool Proportional output threshold time (seconds) (FC only)**

Range: 0...100 seconds

Default: 60 seconds




Cool proportional threshold time

**P123 – Heat Proportional output threshold time (seconds) (FC Only)**

Range: 0...100 seconds

Default: 60 seconds



Heat proportional threshold time

**P160 – Minimum compressor ON time (AC only)**

Range: 0...20 minutes

Default: 2 minutes




Minimum compressor ON time

**P161 – Minimum compressor OFF time (AC only)**

Range: 0...20 minutes

Default: 13 minutes




Minimum compressor OFF time

**P170 – Economizer low limit temperature**

Range: 9...27°C / 48...80°F

Default: 17°C / 63°F

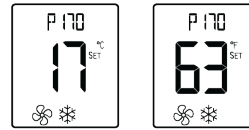


Economizer low limit temperature  
(°C) (°F)

**P187 – Display or hide humidity reading**

“00” - Do not display humidity reading

“01” - Display humidity reading




Display or hide humidity readings

**P188 – Room temperature limit for disabling dehumidification in unoccupied mode**

Range: 10...30°C / 50...85°F

Default: 18°C / 64°F

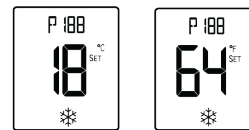

Temp. for disabling dehum. In unocc mode  
(°C) (°F)



## Technician Settings P189 to P195

---

### P189 – Dehumidification cycle in unoccupied mode

Range: 0...600 minutes

Default: 20 minutes



Dehumidification  
cycle in unocc. mode

---

### P190 – Dehumidification break time in unoccupied mode

Range: 0...900 minutes

Default: 40 minutes




Dehumidification  
break in unocc. mode

---

### P192 – Temperature setpoint for reheat in unoccupied mode

Range: 10...30°C / 50...86°F

Default: 15°C / 59°F

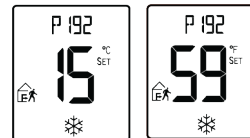


Setpoint for reheat  
in unocc. mode  
(°C) (°F)

---

### P194 – Humidity differential band

Range: 0...10 %RH

Default: 5%RH

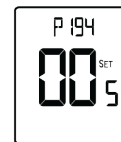

Humidity differential  
band

---

### P195 – Humidity sensor reading offset

Range: -9...+9 %RH

Default: 0 %RH



Humidity  
offset


## Technician Settings P196 to P200

---

### P196 – Dead zone between humidification and dehumidification

Range: 0...100 %RH

Default: 0 %RH

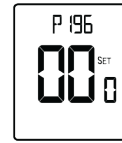


Dead zone  
Hum./Dehum.

---

### P197 – Humidity setpoint

Range: 20...100 %RH


Default: 45 %RH

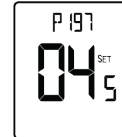

Humidity  
setpoint

---

### P198 – Not in use

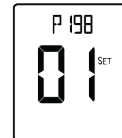

Communication  
protocol indication


---

### P200 – Restore defaults

Press the ▲ button. The display changes from “00” to “01”.

Press the [On/Off] button to restore default settings.

The thermostat turns Off.

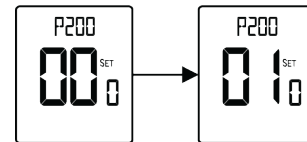

Restore defaults

---

Press the [On/Off] button or wait 60 seconds to return to normal display.

## Alarms and indications

**F1** T1 Internal sensor or T1 External sensor fault

**dC** De-icer in cool indication

**dH** De-icer in heat indication

**OH** Overheat in heat

**OC** Overheat in cool

**t2** Teconomizer sensor fault

**E1** Economy by:


- Window contact - Remote on/off switch
- Window contact - Remote economy switch

**E2** Economy by:

- External PIR
- Communication

**E4** Economy by door switch

**E5** Economy by key-tag

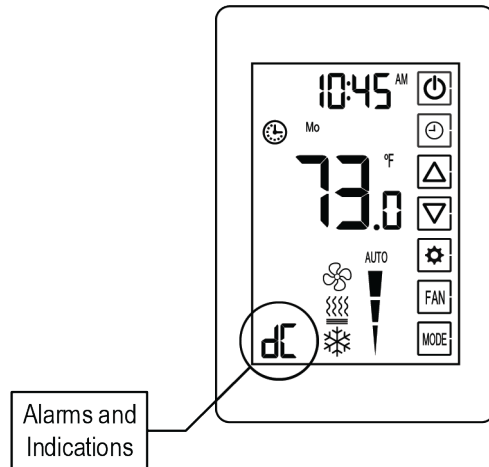

## Document revision history

Important changes to this document are listed below. Minor changes such as typographical or formatting errors are not listed.

<b>Date</b>	<b>Topic</b>	<b>Change Description</b>
4/7/20	Installation	Updated installation height
	Alarms and indicators	Updated Teconomizer sensor fault image
2/25/20	Cover	Updated graphic
	MAC address and BACnet Device instance number - In an Analog Network Output microblock	Added subsequent values
02/17/20	Operating instructions	Updated multiple settings
	Weekly program	Full revision
	AC configurations - AC Configurations with humidification/dehumidification - Configuration 12	Changed from 1 to 2
	Wiring and DIP switch configurations - AC systems	Updated multiple settings
	Wiring and DIP switch configurations - FC systems	Updated multiple settings
	Technician Settings	Updated multiple settings
	Alarms and indications	Added E1, E2, E4, and E5
5/22/19	Technician Settings: P03	Reversed numbers in the Setpoint Limit fro Heating graphic
	Technician Settings: P102	Changed Screen brightness when ON to P105
4/24/19	TBPL-24-H Dimensions	Changed dimension 1.18cm to 11.81cm

2/19/19	Specifications	Added CE and C-Tick icons to Compliance specification
	BACnet Device Instance Number	Changed 24075 in first paragraph to 16075.
		Changed image to show i-Vu interface with Present Value of 160102
	Technician Settings, P122 and P123	Changed from percent to time (seconds).





CARRIER CORPORATION ©2020 · Catalog No. 11-808-727-01 · 4/7/2020