



turn to the experts

ComfortVu™

BACnet Thermostat Standard

Model TB-24 (24 Vac model)

Installation and Operation Guide



## Table of Contents

<b>Overview .....</b>	<b>4</b>
<b>Specifications .....</b>	<b>5-6</b>
<b>TB-24 Dimensions .....</b>	<b>7</b>
<b>Operating instructions .....</b>	<b>8</b>
Quick guide .....	8
Turning the thermostat ON and OFF .....	9
Selecting temperature scale .....	9
Adjusting the Setpoint temperature (for 1 setpoint and 2 setpoints configurations) .....	9
Selecting system mode .....	10
Selecting Fan speeds (for 2 and 3 fan speeds configuration) .....	10
Turning Auto fan ON or OFF (fan on demand) .....	10
Locking the thermostat buttons .....	10
Economy mode .....	11
Freeze Protection .....	11
Economizer .....	12
<b>Weekly program .....</b>	<b>13-17</b>
<b>MAC Address and BACnet Device Instance Number .....</b>	<b>18</b>
<b>Installation .....</b>	<b>19</b>
General .....	19
Wiring terminals .....	20
DIP switch and jumper configurations .....	21
AC configurations .....	22
FC configurations for 2-pipe systems .....	23
FC configurations for 4-pipe systems / Floor heating .....	24
Wiring and DIP switch configurations .....	25-31
<b>Technician Settings .....</b>	<b>32-38</b>
P01 – Offset for temperature readings calibration	P19 – PIR (Motion sensor) polarity
P02 – Setpoint limit for cooling	P25 – Economy setpoint for cooling
P03 – Setpoint limit for heating	P26 – Economy setpoint for heating
P04 – Lock the [Fan] button	P27 – On-delay time on-delay between
P05 – Lock the [Mode] button	heating stages
P06 – Lock the [On/Off] button	P28 – Off-delay time between heating stages
P07 – Lock the [+] and [-] buttons (Set buttons)	P29 – LCD Backlight ON or OFF
P08 – Functionality of T1 terminals	P30 – Beeper ON or OFF
P09 – Functionality of IN1,0 terminals	P31 – Fan ON delay in cooling
P10 – Window contact (terminals IN1,0) polarity	P32 – Fan OFF delay in cooling
P11 – Window contact delay time	P33 – Fan ON delay in heating
P12 – Door switch (terminals T1,0) polarity	P34 – Fan OFF delay in heating
P13 – Door switch delay time	P35 – Enable/Disable Freeze protection
P14 – Enable/Disable Auto change over mode	P36 – Freeze protection cut-in setpoint
P15 – Motion sensor logic (PIR)	P37 – Freeze protection cut-out setpoint
P16 – Enable/Disable Motion sensor	P40 – View filter counter (hours) – Read only
P17 – PIR (Motion sensor) delay time	P41 – Reset filter time
P18 – Door switch or key tag configuration	P42 – Adjust filter alarm delay counter (hours)

## Table of Contents

---

<b>Technician Settings .....</b>	<b>39-52</b>
P43 – Soft start in heat – cut-in temperature	
P44 – Soft start in heat – cut-out temperature	
P45 – Cool differential band	
P46 – Cool differential band offset	
P47 – Heat differential band	
P48 – Heat differential band offset	
P49 – Shift between Cool and Heat in Auto mode	
P50 – Shift between Cooling stages	
P51 – Shift between Heating stages	
P52 – Cool valve proportional band	
P53 – Cool proportional low limit	
P54 – Cool proportional high limit	
P55 – Heat valve proportional band	
P56 – Heat proportional low limit	
P57 – Heat proportional high limit	
P60 – Proportional ON percent	
P61 – Proportional OFF percent	
P63 – Time on-delay between cooling stages	
P64 – Time off-delay between cooling stages	
P65 – Fan VFS proportional band in cooling	
P66 – Fan VFS proportional band in heating	
P67 – Fan VFS Low speed percent in cooling	
P68 – Fan VFS Medium speed percent in cooling	
P69 – Fan VFS High speed percent in cooling	
P70 – Fan VFS Low speed percent in heating	
P71 – Fan VFS Medium speed percent in heating	
P72 – Fan VFS High speed percent in heating	
P74 – VFS Medium speed differential	
P75 – VFS High speed differential	
P76 – Fan VFS Low limit in cooling	
P77 – Fan VFS High limit in cooling	
P78 – Fan VFS Low limit in heating	
P79 – Fan VFS High limit in heating	
P83 – View T2 temperature sensor readings	
P84 – View T3 temperature sensor readings	
P85 – De-ice in cool – cut-in temperature	
P86 – De-ice in cool – cut-out temperature	
P87 – De-ice in heat time	
P88 – De-ice in heat break time	
P89 – De-ice in heat – cut-in temperature	
P90 – De-ice in heat – cut-out temperature	
P91 – Compressor delay	
P98 – Display setpoint only (hide room temperature)	
P99 – One or Two setpoints	
P101 – Screen dimming delay	
P107 – Weekly program configuration	
P108 – Weekly program - events per day	
P109 – Weekly program event configuration	
P114 – Cool PID Kp	
P115 – Heat PID Kp	
P116 – Cool PID Ki	
P117 – Heat PID Ki	
P118 – Cool PID Kd	
P119 – Heat PID Kd	
P122 – Cool Proportional output threshold in cooling	
P123 – Heat Proportional output threshold in cooling	
P160 – Minimum compressor ON time	
P161 – Minimum compressor OFF time	
P170 – Economizer low limit temperature	
P198 – Not in use	
P200 – Restore defaults	
 <b>Alarms and indications .....</b>	 <b>53</b>
 <b>Document revision history .....</b>	 <b>54</b>

## Overview

---

The ComfortVu™ BACnet Thermostat Standard Model TB-24 can be used:

- As a stand-alone thermostat that can control equipment using built-in logic
- As part of an MS/TP network of BACnet Thermostats that can be managed from a BMS front-end system
- As part of a BACnet MS/TP network connected to an Carrier BACnet router in an i-Vu® system. The router's control programs provide trending and alarming of the BACnet Thermostat's data.

The TB-24 thermostat has a white plastic enclosure with an LCD display and buttons for user control. It has on-board temperature sensing, and its on-board inputs and outputs are used to control equipment and optional external sensing devices. Inputs and outputs are configured using DIP switches and jumpers. The TB-24 thermostat requires 24 Vac power.

See also:

*ComfortVu™ BACnet Thermostat Points List and Technician Settings*

## Specifications

---

Sensing Element Temperature	Range 41° F to 95° F (5° C to 35° C)	Accuracy ±1.0° F (0.5° C)
Power	24 Vac, ±10%, 50-60Hz, 4VA <b>NOTE</b> Devices connected to outputs, such as a fan, will increase VA requirements.	
Communication	BACnet MS/TP with baud rates up to 76.8 kbps, detected and set automatically by the BACnet Thermostat. Max 127 devices.	
Inputs	T1, 0 – Normally open or normally closed dry contract, or 0-10 Vdc analog input, or 50 kOhm thermistor @ 25°C A, B - Communication +/- (RS485) IN1, 0 - Normally open or Normally closed dry contract, or 0-10 Vdc analog input, or 50 kOhm thermistor @ 25°C C, R - Power: 24 Vac	
Outputs	11, 12, 13 – Digital outputs, 3A max. 14 – Digital outputs 0.3A max 15 and 16 – Depends on application. Digital output 0.3A max., or Analog output 0-10 Vdc, 5 mA max., not isolated	
Environmental Operating Range	50° to 122°F (10° to 50°C), 10 to 90% relative humidity, non-condensing	
Mounting	<ul style="list-style-type: none"><li>• If using an electrical box, mount the included wallplate to a standard 4" x 2" electrical box using the two larger mounting screws, then mount the thermostat to the wallplate using the three smaller mounting screws.</li><li>• If not using an electrical box, flush-mount thermostat to wall (no wallplate needed).</li></ul>	

## Specifications (cont.)

---

---


Weight	4.8 oz (0.14 kg)
--------	------------------


---

### Compliance

United States of America:  
FCC CFR47, Chapter 1, Subchapter A, Part 15, Class B

Canada:  
Industry Canada Compliant, ICES-003, Class B

Europe:  
 Mark, Low Voltage Directive: 2014/35/EU RoHS Compliant: 2011/65/EU






Australia and New Zealand:  
 C-Tick Mark, AS/NZS 61000-6-3

Title 24 compliant if connected to a BMS with custom programming for economizer fault detection.

CA Prop 65 Warning: This product can expose you to chemicals including Styrene and 1,3 - Propane sultone, which are known to the State of California to cause cancer. For more information, go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


---

# **TB-24 Dimensions**

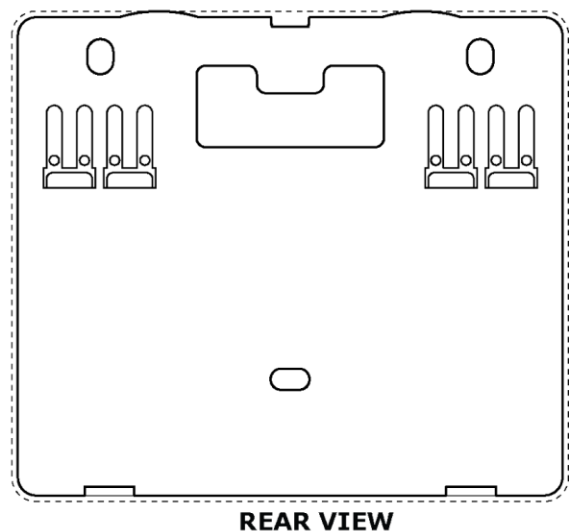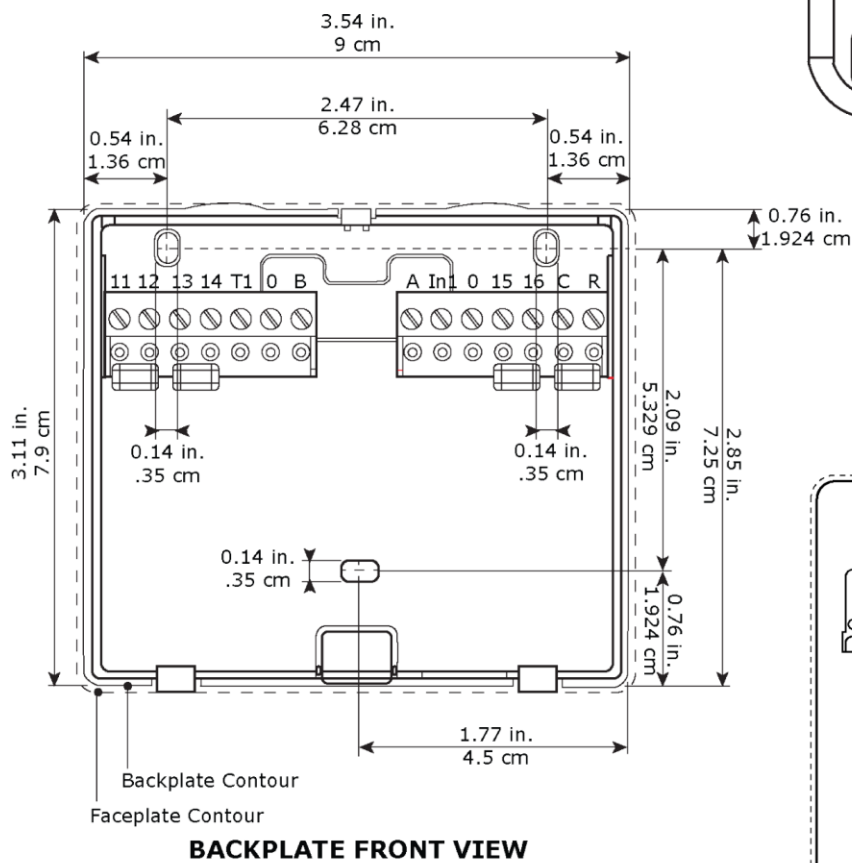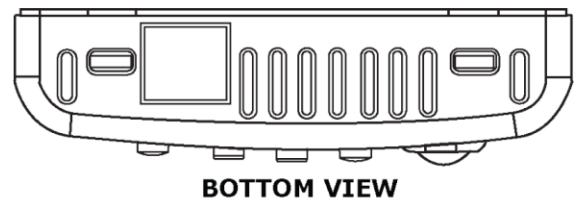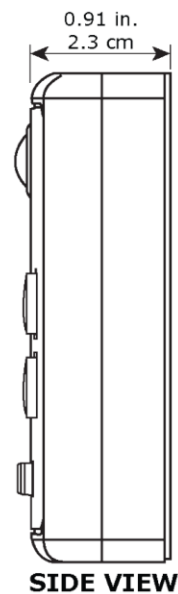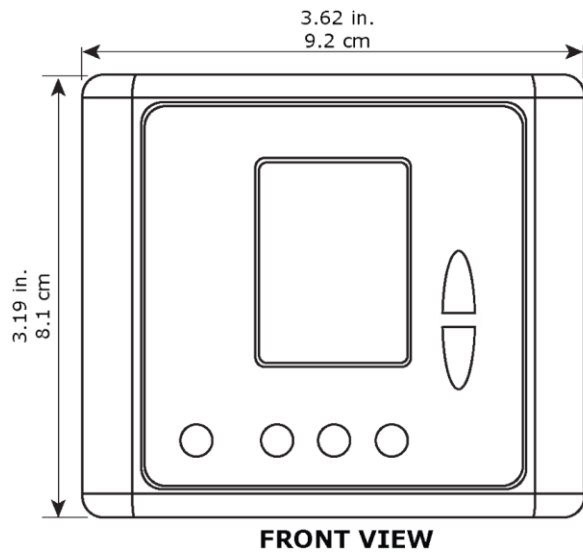

# Operating instructions

## Quick guide

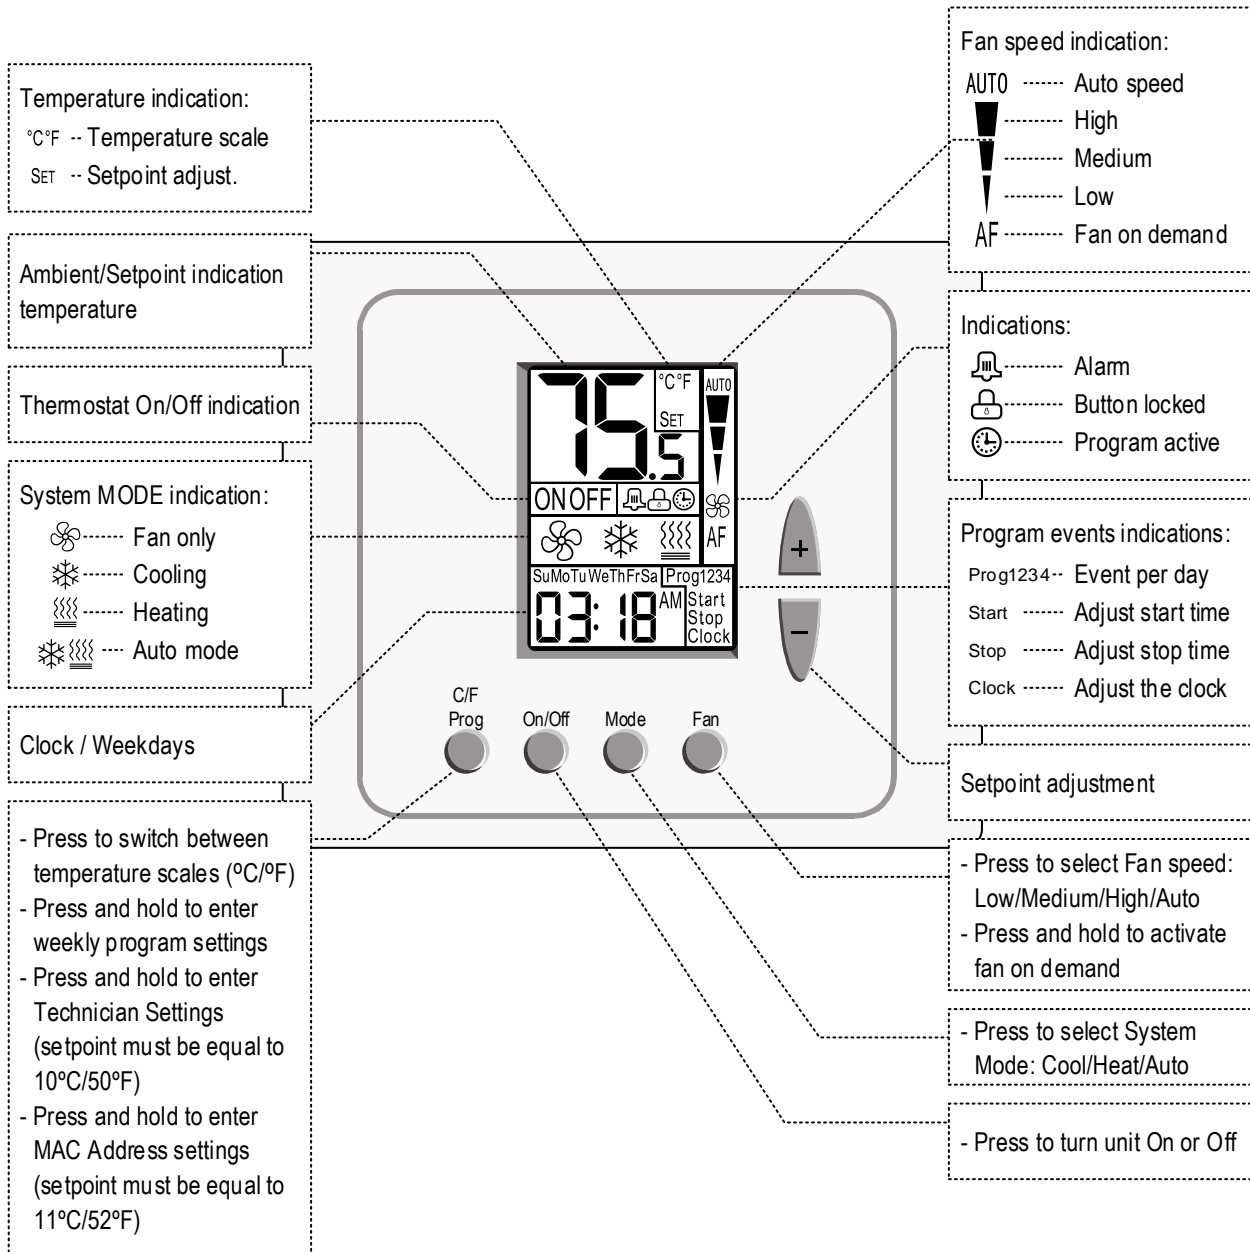




## Operating instructions (cont.)

---

### Turning the thermostat ON and OFF


Press the [On/Off] button to turn the thermostat ON or OFF.

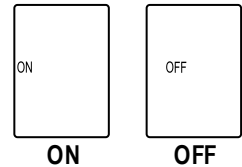

---

### Selecting temperature scale

Press the [C/F] button to switch between temperature scales.

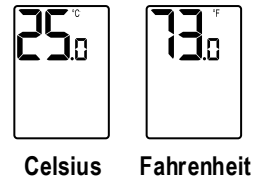

---

### Adjusting the Setpoint temperature


#### In One setpoint configuration:

1. Press the [+] or [-] buttons once to view the setpoint temperature.
2. Press again to adjust the setpoint.



#### In Two setpoints configuration:

1. Press the [+] or [-] buttons once – “❄️” and the setpoint temperature for cooling will appear on display.
2. Use the [+] or [-] button to adjust the setpoint for cooling.
3. Press the [Mode] button or wait 3 seconds – “🔥” and the setpoint temperature for heating will appear on display.
4. Use the [+] or [-] button to adjust the setpoint for heating.

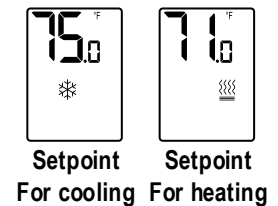

Note: The setpoint for cooling must be higher than the setpoint for heating.

## Operating instructions (cont.)


---

### Selecting system mode

Press the [Mode] button to switch between system modes.

Notes:

- During demand for cooling or heating, the active mode will flash.
- In Auto mode, the active mode icon (Cool or Heat) will appear on display.
- Auto mode is not available in 2-Pipe system configuration.

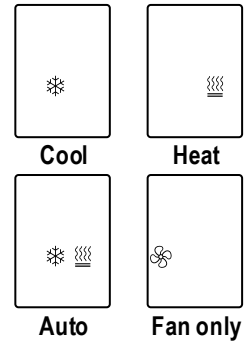


### Selecting Fan speeds (for 2 and 3 fan speeds configuration)

Press the [Fan] button to switch between fan speeds.

Notes:

- In Auto speed, the active fan speed icon will appear on display.
- Medium speed available in 3 speeds configuration.

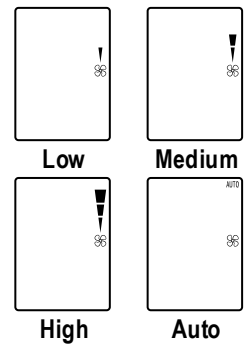

### Turning Auto fan ON or OFF (fan on demand)

#### In 1-speed configuration:


Press the [Fan] button to turn Auto fan ON or OFF.

#### In 2- and 3-speed configurations:

Press and hold the [Fan] button for 7 seconds to turn Auto fan ON or OFF.


- When ON, the fan will run on demand for cooling or heating.
- When OFF, the fan will run continuously.

Note: Auto fan cannot be selected in Fan only mode.

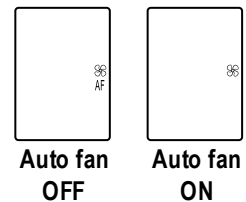

### Locking the thermostat buttons

- Press and hold both [-] and [Fan] buttons for 7 seconds to lock or unlock the thermostat buttons.
- When locked, the lock icon will appear on the display with any attempt to press the buttons.
- Enable or disable the option to lock different buttons using Technician Settings P4-P7.

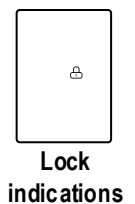

## Operating instructions (cont.)

### Economy mode

- Activate Economy mode by triggering a window contact, door switch, key-tag, remote economy switch, external PIR sensor (passive infrared sensor), or through communication – binary value “UnoccupiedByNetwork”.
- When Economy mode is active, the thermostat will use special economy setpoints for cooling and heating set by technician.  
*See objects “EconomySetpointinHeat” and “EconomySetpointinCool” in the Technician Settings section of this manual.*

E1

Economy by window contact

E2

Economy by external PIR, by the remote economy switch, or through communication

E4

Economy by door switch

E5


Economy by Key-tag

### Freeze Protection

The Freeze protection feature will not allow the room temperature to drop below predefined cut-in temperature. Depending on which configuration the system is operating under (W/WO Heat pump), this feature will force the system to operate in heat mode and activate the fan.

This feature will take effect when the thermostat is either ON or OFF. When the room temperature rises above the predefined cut-out temperature, the thermostat will return to its previous state.

When freeze protection is activated, the display alternates between “AL” and room temperature.

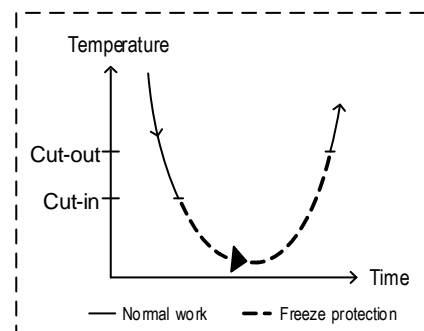

## Operating instructions (cont.)

### Economizer

Economizer is used to reduce the energy consumed by the cooling systems, by using low external air temperatures to assist in the chilling process. When outdoor temperatures are lower relative to indoor (room) temperatures, the system utilizes the cool outdoor air as a free cooling source.

The outdoor temperature (Teconomizer) triggering the activation of the economizer, can be measured by the temperature sensor connected to T1,0 terminals (technician parameter P08="05") or by setting a temperature value manually through communication - AV#129 "TEconomizerEffective".

When getting the temperature through communication, terminals T1,0 can be used for any other functionality like External sensor/Soft start in heat sensor/Deicing in cool/Door switch/Key tag.


Whenever there is demand for cooling and the outdoor temperature conditions allow the operation of the economizer, it will operate together with the regular cooling system and will not replace it.

Economizer will start when both of the following conditions are satisfied:

1.  $Teconomizer\ temperature < Room\ temperature - \frac{Cool\ differential\ band}{2}$
2.  $Room\ Temperature > Setpoint\ temperature$


Economizer will stop when the following condition is satisfied:

1.  $Room\ Temperature < Setpoint\ temperature - \frac{Cool\ differential\ band}{2}$

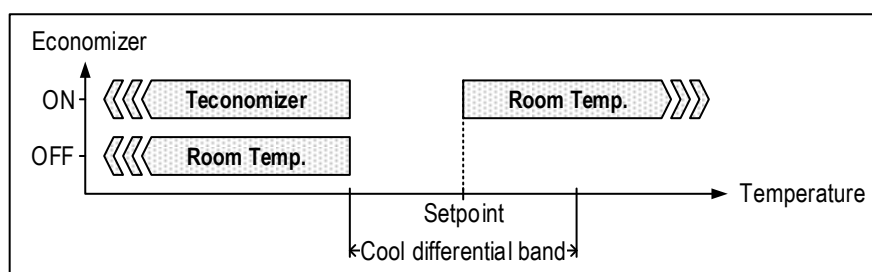

#### Indication for the Economizer operation:

When Economizer is active, the "Cool" symbol will appear (or flash when active) on display and the "Fan" symbol will flash.

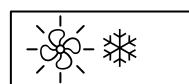

**Economizer  
active**

## Weekly program

---

### General

Prior to programming, make sure that Technician Settings P107, P108, and P109 are configured correctly.

### *Program types*

The thermostat can be configured to run four different types of weekly programs (set by Technician Setting P107):

- 7-day program with same settings for all days.
- 7- day program with different settings for each day of the week.
- One schedule for the weekdays (Monday to Friday), one for Saturday, and another for Sunday.
- One schedule for the weekdays (Monday to Friday) and another for Saturday and Sunday.

### *Daily events*

Each daily program can use 2 or 4 schedule events per day (set by Technician Setting P108).

There are two options for setting the schedule events (set by Technician Setting P109):

- **“EU Type”** - Start time and Stop time
- **“US Type”** - Start time, setpoint temperatures, system mode, and fan speed

### *Enabling/Disabling/Overriding the program*

Select “00” in Technician Setting P107 to disable programming capabilities.

The occupant can temporarily change the setpoint temperature to be different than the setpoint temperature specified by the program. Changes will be effective until the next program event begins.

## Weekly program (cont.)

### Programming procedure

- The detailed programming procedure is described in the next sections. Be sure to follow the right programming procedure, suitable for the program type and features selected by Technician Settings.
- Press the [C/F - Prog] button to enter and proceed through the steps of the real time clock and programming procedure.
- Use the [+] and [-] buttons to select or change value of a flashing icon.
- We recommend that you select programming values prior to the actual programming.


### Exit the programming procedure

At anytime during the programming procedure, press the [On/Off] button to exit and return to normal display - any changed values will be saved.

### Adjusting the time and day of the week

The BACnet Thermostat will respond to a BACnet time sync, but you can manually set it using the following instructions.

1. Press and hold the [C/F - Prog] button. The word "Clock" will appear on display, and the HOURS will flash. ....

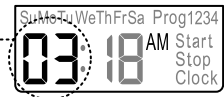

#### Hours

2. Use the [+] and [-] buttons to adjust the hours.


#### Minutes

3. Press the [C/F - Prog] button again. The MINUTES will flash. ....
4. Use the [+] and [-] buttons to adjust the hours.



#### Days

5. Press the [C/F - Prog] button again. The DAYS will flash. ....
6. Use the [+] and [-] buttons to select the day.
7. If Technician Setting P107 is not set to "00" (program is enabled), press the [C/F - Prog] button to enter programming procedure. Be sure to follow the right programming procedure, suitable for the program type and features selected by Technician Settings.

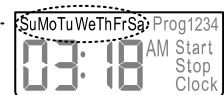

Section C – "EU Type"

Section D – "US Type"

Otherwise, press the [C/F - Prog] button to return to normal display.

## Weekly program (cont.)


### Adjusting "EU type" daily programs – Start time / Stop time

#### Start time


1. Press the [C/F – Prog] button. The programmed weekday(s), "Prog 1" indicating the first program event of the day and the word **"Start"** will appear on display.

The **HOURS** will flash. ....


Note: If this is the first time a program is being set, the symbols "--" will flash.

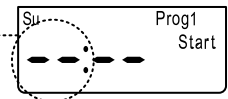

2. Use the [+] and [-] buttons to adjust the start time hours of the first event. ....

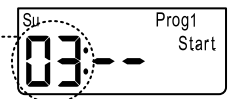

3. Press the [C/F – Prog] button again. The **MINUTES** will flash. ....

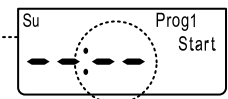

4. Use the [+] and [-] buttons to adjust the start time minutes of the first event. ....




#### Stop time


5. Press the [C/F – Prog] button again. The word **"Stop"** will appear on display, and the **HOURS** will flash. ....




6. Use the [+] and [-] buttons to adjust the stop time hours of the first event. ....

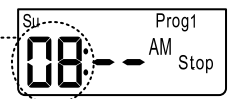

7. Press the [C/F – Prog] button again. The **MINUTES** will flash. ....

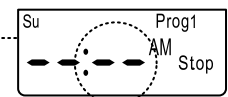

8. Use the [+] and [-] buttons to adjust the stop time minutes of the first event. ....

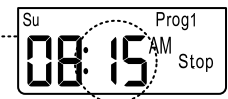

- Follow the steps above for the other schedule events of the same day (Prog 2 for two events per day, or Prog 2, 3, and 4 for four events per day).
- Follow the steps above for all the other days.


## Weekly program (cont.)

### Adjusting “US type” daily programs – Start time / Stop time / Mode / Fan speed / Setpoints

#### Start time


1. Press the [C/F – Prog] button. The programmed weekday(s), “Prog 1” indicating the first program event of the day and the word **“Start”** will appear on display.

The **HOURS** will flash. ....

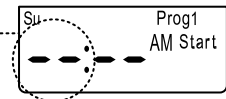


Note: If this is the first time a program is being set, the symbols “--” will flash.

2. Use the [+] and [-] buttons to adjust the start time hours of the first event. ....

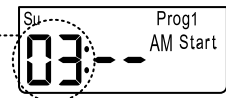

3. Press the [C/F – Prog] button again. The **MINUTES** will flash. ....

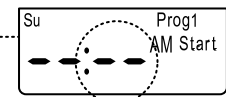

4. Use the [+] and [-] buttons to adjust the start time minutes of the first event. ....



#### System mode


5. Press the [C/F – Prog] button again. The system **MODES** will flash. ....



6. Use the [+] and [-] buttons to select the system mode of the first event. ....



7. Press the [C/F – Prog] button again. The **FAN SPEEDS** will flash. ....

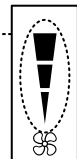

8. Use the [+] and [-] buttons to select the fan speed of the first event. ....



- Follow the steps above for setpoint temperatures.
- Follow the steps above for the other schedule events of the same daily events (Prog 2 for two events per day, or Prog 2, 3 and 4 for four events per day).
- Follow the steps above for all daily periods.



## Weekly program (cont.)


---

### Setpoint

1. Press the [C/F – Prog] button again. The setpoint will flash.

Note: If the thermostat is configured to have two setpoints, first adjusts the setpoint for cooling and then the setpoint for heating.

2. Use the [+] and [-] buttons to select the system mode of the first event.
- Follow the steps above for the other schedule events of the same day (Prog 2 for two events per day, or Prog 2, 3 and 4 for four events per day).
  - Follow the steps above for all the other days.

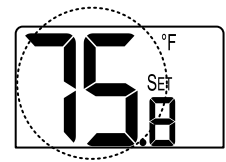


## MAC Address and BACnet Device Instance Number

### MAC Address

To set the communication MAC Address:

1. Adjust the setpoint temperature to 11°C or 52°F.
2. Press and hold the [C/F] button for 10 seconds to enter MAC Address configuration mode.
3. Use the [+] or [-] buttons to define the MAC Address (range 1...127).
4. When finished, press the [On/Off] button and readjust the setpoint.
5. Switch power supply off and on again for the MAC address changes to take effect.

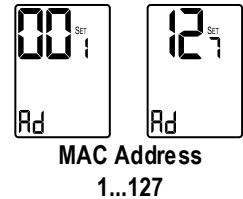

Caution: Do not use the same MAC address for two devices on the same communication line!

### BACnet Device Instance Number

By default, the BACnet Device Instance Number is generated automatically by the thermostat (Vendor ID + MAC address). For example, Carrier's vendor ID is 16, and if the MAC address is 075, the BACnet Device Instance Number is 16075.

Note: If you change the MAC address, you must cycle the thermostat's power to reset the BACnet Device Instance Number.

You can override the automatically-generated BACnet Device Instance Number using the i-Vu application, an Analog Network Output microblock in a control program, or some other BACnet utility. Write the new BACnet Device Instance Number to the present\_value property of Analog Value 42 (BACnetDeviceInstanceNumber).

Examples:

#### In the i-Vu application

1. Use the BACnet Discovery feature to discover the BACnet Thermostat and its BACnet objects.
2. In the navigation tree, select the Analog Value called BacnetDeviceInstanceNumber.
3. Change the Present Value field (shown below) to the desired BACnet Device Instance Number.
4. Click Accept.



#### In an Analog Network Output microblock

To change the BACnet Device Instance Number to 24113, the microblock's address would be:

bacnet://16075/AV:42/present\_value, or

bacnet://16075/BACnetDeviceInstanceNumber


## Installation

Mount the BACnet Thermostat on an interior wall in the room to be controlled approximately 1.5 meters (5 feet) from the floor. Locate it where the occupant can easily read the LCD display and use the controls. If the built-in temperature sensor is being used to measure room temperature, place the thermostat where the temperature is representative of the general room conditions. Avoid cold or warm air drafts, radiant heat, and direct sunlight.


### Installation procedure

Prerequisite: Disconnect power to the main board before installing the unit.


- A. Separate the front panel from the back panel by pressing the tab located in the top of the unit and pulling the back panel off of the two bottom tabs.
- B. Do one of the following:
  - If using an electrical box, mount the included wallplate to a standard 4" x 2" electrical box using the two larger mounting screws, then mount the thermostat to the wallplate using the three smaller mounting screws. Insert the screw cap into the wallplate's bottom screw hole.
  - If not using an electrical box, flush-mount the thermostat to the wall (no wallplate needed).
- C. Make electrical connections as shown in the picture below and the wiring diagram on page 20.  
Set DIP switch positions as explained in this manual.
- D. Reattach the cover by placing it on the back panel's two bottom tabs and then pushing the cover until the top tab clicks into its slot on the cover.

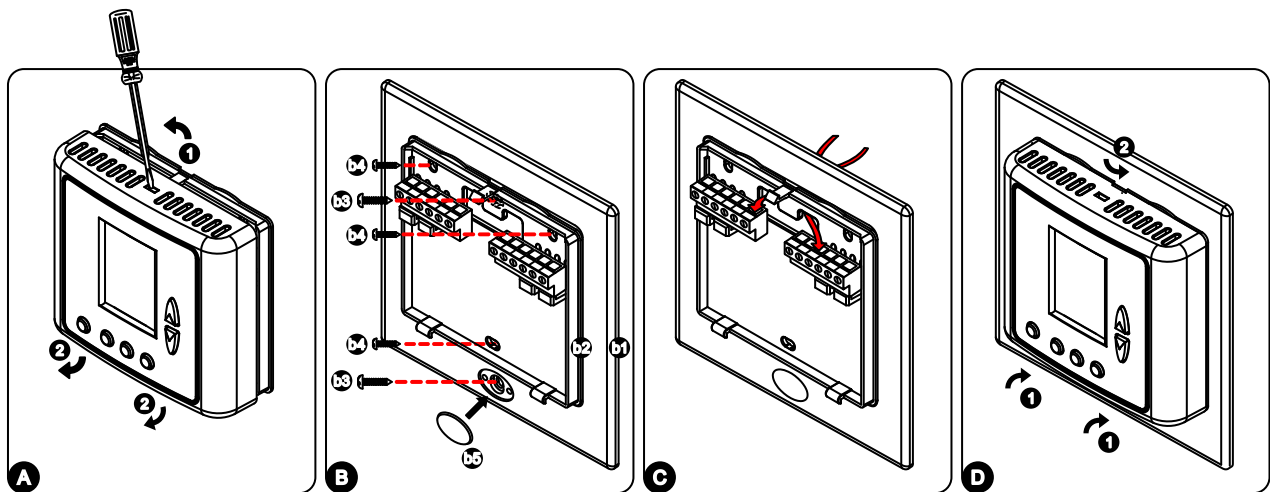

## Wiring terminals

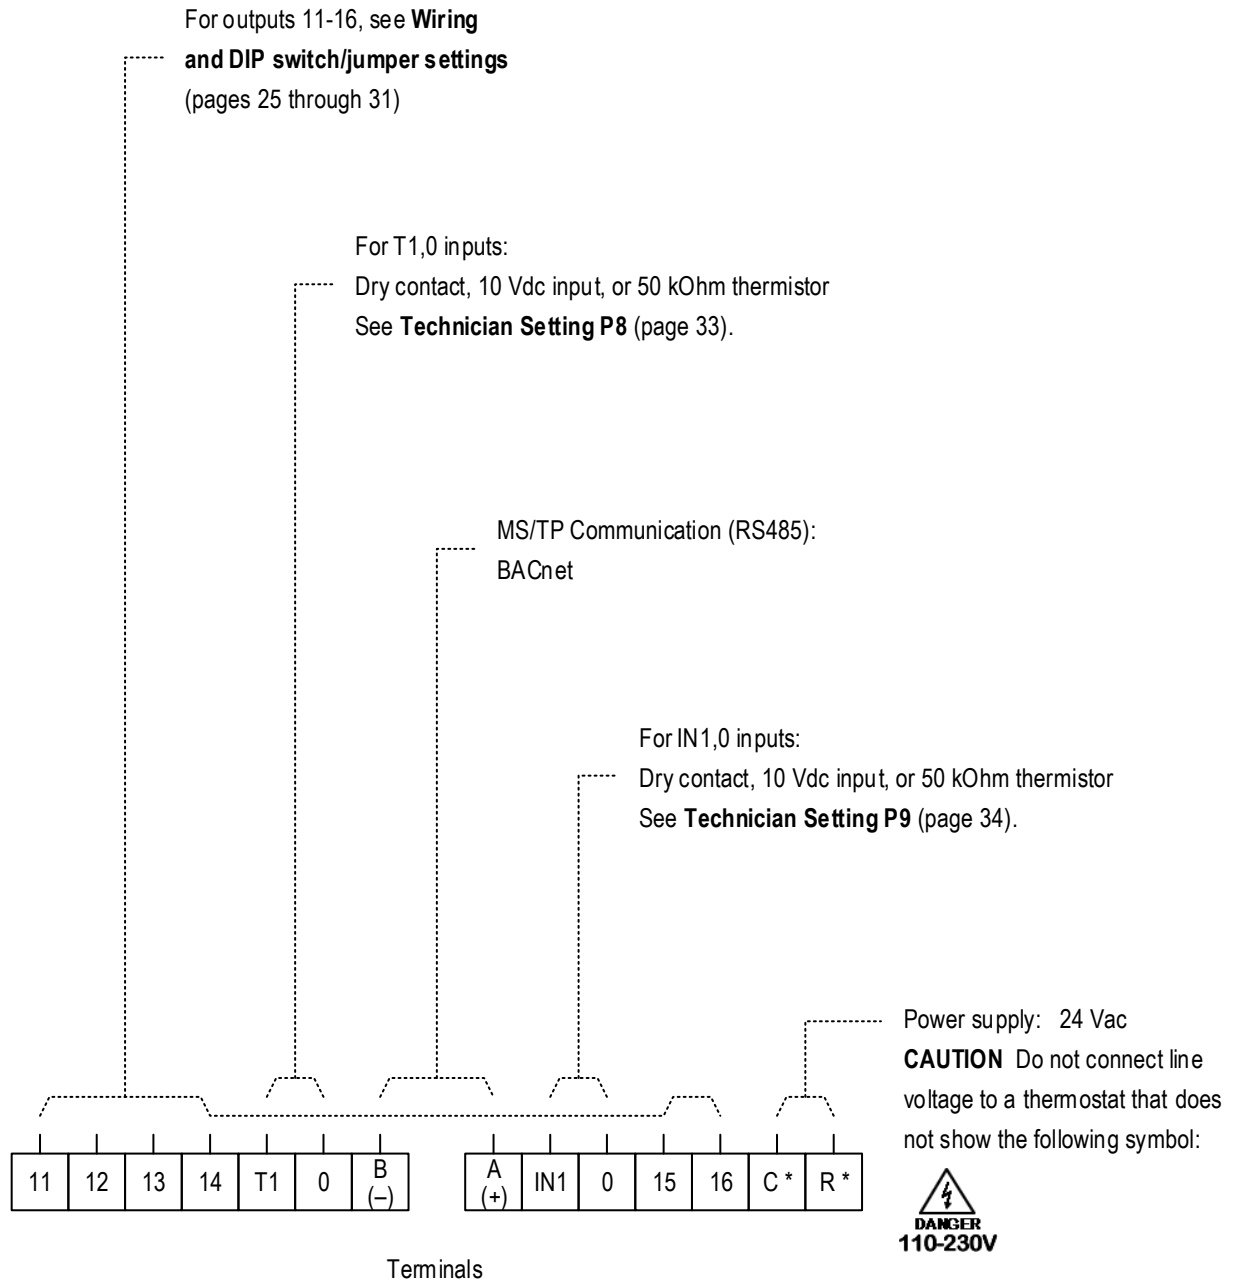

## DIP switch and jumper configurations

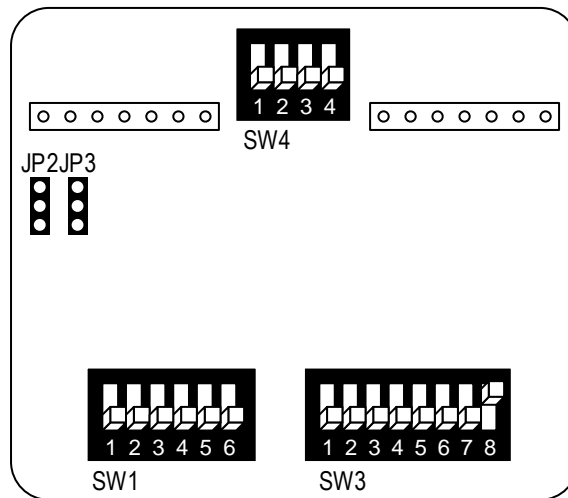

### SW4.1 – Without valves control in FC config.

Enable = OFF (Open)

Disable = ON (Closed)

### SW4.2 – Not used

Always ON

### SW4.3 – Not used

Always OFF

### SW4.4 - End of line resistor (120Ω)

OFF = Not end of line

ON = End of line




### JP2, JP3 – Outputs 15,16 – Analog or Digital

JP2 – Output 16

Position 1 - Analog output

Position 3 - Digital output

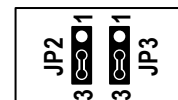

JP3 – Output 15

Position 1 - Analog output

Position 3 - Digital output

### SW1.1 through SW1.6, and SW3.1 through SW3.8

See **Wiring and DIP switch/jumper settings** (pages 25 through 31).

## AC configurations

---

Find the configuration you want in the tables below, then find that configuration number (1 through 9) on the **Wiring and DIP switch/ jumper settings** pages starting on page 25.

### AC Configurations

Outputs	Configuration:	1	2	3	4	5	6	7	8	9
Heat elements		3	2		1	2		1	2	1
Compressors		2	2	2	1	1	1	1	2	2
Heat pump			●	●	●		●			●
Fan VFS							●	●		
Fan speeds		1	1	2 3	2 3	2 3			1	1
Economizer				○	○	○	○	○	○	○

● Yes ○ Option

## FC configurations for 2-pipe systems

---

Find the configuration you want in the tables below, then find that configuration number (20 through 23) on **Wiring and DIP switch/ jumper settings** pages starting on page 28.

### FC Configurations for 2-Pipe systems

Outputs	Configuration:				10	11	12	13
Cl/Ht valve / Cl/Ht valve PID					●	PID	●	PID
Heat element (2 <sup>nd</sup> stage)					●	●	●	●
Fan VFS							●	●
Fan speeds					1 2 3	1 2 3		
Economizer					○ ○	○ ○	○	○

● Yes   ○ Option

## FC configurations for 4-pipe systems / Floor heating

Find the configuration you want in the tables below, then find that configuration number (31 through 39) on the **Wiring and DIP switch/jumper settings** pages starting on page 29.

### FC Configurations for 4-Pipe systems


Outputs	Configuration:									14	15	16	17	18	19	20	21	22
Cool valve / Cool valve PID										●	●	PID	PID	●	●	●	PID	PID
Heat valve / Heat valve PID										●	●	●	●	●	PID	PID	●	PID
Heat element (2 <sup>nd</sup> stage)										●		●			●			●
Fan VFS														●		●	●	
Fan speeds										1	2	3	1	2	3	1	2	3
Economizer										○	○	○	○	○		○	○	○
Floor heating											●		●					

● Yes ○ Option



## Wiring and DIP switch/jumper configurations – AC systems

	Config. 1: HC32 1 Speed fan	Config. 2: HP42 1 Speed fan	Config. 3: HP22 2/3 Speeds fan	Config. 4: HP21 2/3 Speeds fan
<b>Outputs</b>				
<b>11</b>	Heat element 3 (3 <sup>rd</sup> stage heat)	Heat element 2 (4 <sup>th</sup> stage heat)	Fan high	Fan high
<b>12</b>	Heat element 2 (2 <sup>nd</sup> stage heat)	Heat element 1 (3 <sup>rd</sup> stage heat)	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )
<b>13</b>	Fan (1 speed)	Fan (1 speed)	Fan low	Fan low
<b>14</b>	Compressor 2	Compressor 2	Compressor 2	Heat element <sup>(2)</sup>
<b>15</b>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>	Compressor <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1 <sup>st</sup> stage heat)	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>	Heat pump <sup>(2)</sup>

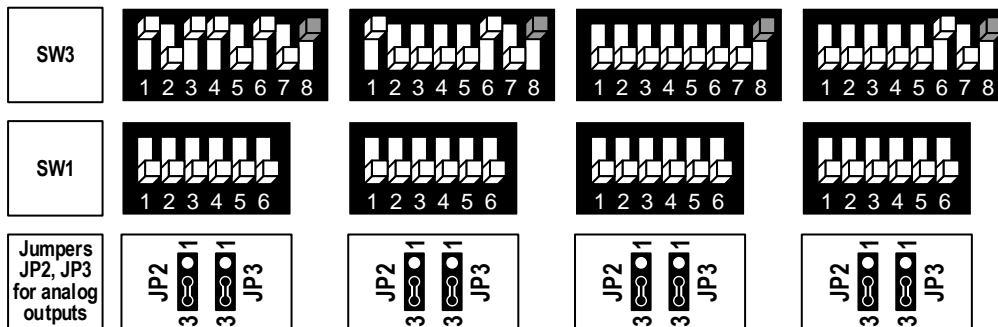


- |                                    |  |                          |
|------------------------------------|--|--------------------------|
| (1) SW3.1, SW3.2 – Fan speeds:     | 2 speeds (Low and High):   | SW3.1 = OFF, SW3.2 = ON  |
|                                    | 3 speeds (Low, Med., and High):                                    | SW3.1 = OFF, SW3.2 = OFF |
| (2) SW3.4 – HP (Heat pump):        | ON = Heat pump active in cool, OFF = Heat pump active in heat      |                          |
| HC (not heat pump):                | ON = Electrical heater, OFF = Oil/Gas heater (no fan)              |                          |
| (3) SW3.5 – Compressor delay:      | ON = Disable, OFF = Enable   |                          |
| (5) SW1.6 – Terminal 12 operation: | ON = Economizer  |                          |
|                                    | OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds)       |                          |
|                                    | Important: Economizer will not work in 3 fan speeds configuration. |                          |

See drawing on page 21 for DIP switch and jumper locations.

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – AC systems

	<b>Config. 5: HC21 2/3 Speeds fan</b>	<b>Config. 6: HP11 Fan VFS</b>	<b>Config. 7: HC11 Fan VFS</b>
<b>Outputs</b>			
<b>11</b>	Fan high	X	X
<b>12</b>	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW1.6 ON)	Economizer <sup>(5)</sup> (option – SW1.6 ON)
<b>13</b>	Fan low	X	X
<b>14</b>	Heat element 2 (2 <sup>nd</sup> stage heat)	Heat pump <sup>(2)</sup>	Heat element <sup>(2)</sup>
<b>15</b>	Compressor <sup>(3)</sup>	Compressor <sup>(3)</sup>	Compressor <sup>(3)</sup>
<b>16</b>	Heat element 1 <sup>(2)</sup> (1 <sup>st</sup> stage heat)	Fan VFS	Fan VFS

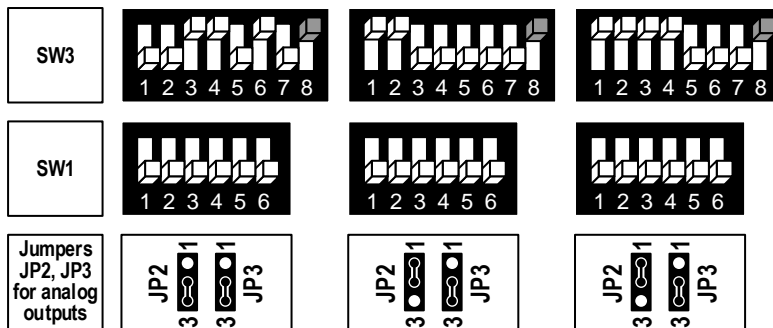







- |                                    |  |                          |
|------------------------------------|--|--------------------------|
| (1) SW3.1, SW3.2 – Fan speeds:     | 2 speeds (Low and High):   | SW3.1 = OFF, SW3.2 = ON  |
|                                    | 3 speeds (Low, Med., and High):                                    | SW3.1 = OFF, SW3.2 = OFF |
| (2) SW3.4 – HP (Heat pump):        | ON = Heat pump active in cool, OFF = Heat pump active in heat      |                          |
| HC (not heat pump):                | ON = Electrical heater, OFF = Oil/Gas heater (no fan)              |                          |
| (3) SW3.5 – Compressor delay:      | ON = Disable, OFF = Enable   |                          |
| (5) SW1.6 – Terminal 12 operation: | ON = Economizer  |                          |
|                                    | OFF = Fan Medium (3 speeds) / Terminal not in use (2 speeds)       |                          |
|                                    | Important: Economizer will not work in 3 fan speeds configuration. |                          |

See drawing on page 21 for DIP switch and jumper locations.

Fan VFS: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – AC systems

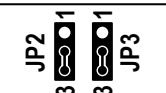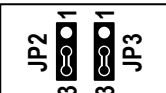Outputs	Config. 8: HC22 1 Speed fan, Economizer	Config. 9: HP32 1 Speed fan, Economizer
11	Heat element 2 (2 <sup>nd</sup> stage heat)	Heat element (3 <sup>rd</sup> stage heat)
12	Economizer <sup>(5)</sup> (option – SW1.6 ON)	Economizer <sup>(5)</sup> (option – SW1.6 ON)
13	Fan (1 speed)	Fan (1 speed)
14	Compressor 2	Compressor 2
15	Compressor 1 <sup>(3)</sup>	Compressor 1 <sup>(3)</sup>
16	Heat element 1 <sup>(2)</sup> (1 <sup>st</sup> stage heat)	Heat pump <sup>(2)</sup>
SW3		
SW1		
Jumpers JP2, JP3 for analog outputs		


- <sup>(2)</sup> SW3.4 – HP (Heat pump): ON = Heat pump active in cool, OFF = Heat pump active in heat  
HC (not heat pump): ON = Electrical heater, OFF = Oil/Gas heater (no fan)
- <sup>(3)</sup> SW3.5 – Compressor delay: ON = Disable, OFF = Enable
- <sup>(5)</sup> SW1.6 – Terminal 12 operation: ON = Economizer  
OFF = Terminal not in use

See drawing on page 21 for DIP switch and jumper locations.

Control – Fan on/off, Heat elements, Heat pump, Compressors, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – FC systems – 2-pipe

Outputs	Config. 10: 2-Pipe, 1/2/3 Speeds fan <sup>(1)</sup>	Config. 11: 2-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> Cool/Heat PID	Config. 12: 2-Pipe, Fan VFS	Config. 13: 2-Pipe, Fan VFS, Cool/Heat PID
11	Fan high	Fan high	X	X
12	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW1.6 ON)	Economizer <sup>(5)</sup> (option – SW1.6 ON)
13	Fan low	Fan low	X	X
14	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)
15	Cool/Heat valve <sup>(3)</sup>	Cool/Heat valve PID <sup>(3)</sup>	Cool/Heat valve <sup>(3)</sup>	Cool/Heat valve PID <sup>(3)</sup>
16	X	X	Fan VFS	Fan VFS

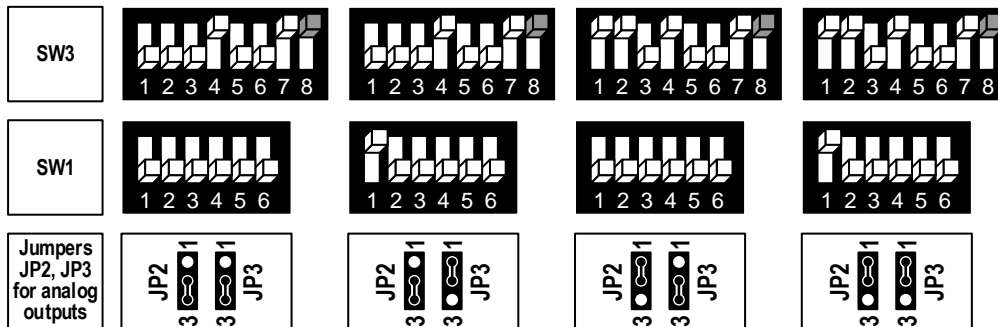

- (1) SW3.1, SW3.2 – Fan speeds:
- 1 speed (Low): SW3.1 = ON, SW1.2 = OFF
  - 2 speeds (Low and High): SW3.1 = OFF, SW1.2 = ON
  - 3 speeds (Low, Medium, and High): SW3.1 = OFF, SW1.2 = OFF
- (2) SW3.4 – 2<sup>nd</sup> heating stage:  
ON = Enable, OFF = Disable
- (3) SW3.5 – Chilled beam option:  
ON = Enable chilled beam (fan will not run with cooling)
- (5) SW1.6 – Terminal 12 operation:  
ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.


See drawing on page 21 for DIP switch and jumper locations.

Fan VFS, PID valves: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – FC systems – 4-pipe w/wo Floor heating

Outputs	Config. 14: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup>	Config. 15: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Floor heating	Config. 16: 4-Pipe, 1/2/3 Speeds fan , Cool valve PID	Config. 17: 4-Pipe,1/2/3 Speeds fan <sup>(1)</sup> , Cool valve PID, Floor heating
11	Fan high	Fan high	Fan high	Fan high
12	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )	Fan medium (or Economizer <sup>(5)</sup> )
13	Fan low	Fan low	Fan low	Fan low
14	Heat element (2 <sup>nd</sup> stage heat)	Floor heating (1 <sup>st</sup> stage heat – no fan)	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)	Floor heating (1 <sup>st</sup> stage heat – no fan)
15	Cool valve <sup>(3)</sup>	Cool valve <sup>(3)</sup>	Cool valve PID <sup>(3)</sup>	Cool valve PID <sup>(3)</sup>
16	Heat valve (1 <sup>st</sup> stage heat)	Heat valve (2 <sup>nd</sup> stage heat)	Heat valve (1 <sup>st</sup> stage heat)	Heat valve (2 <sup>nd</sup> stage heat)

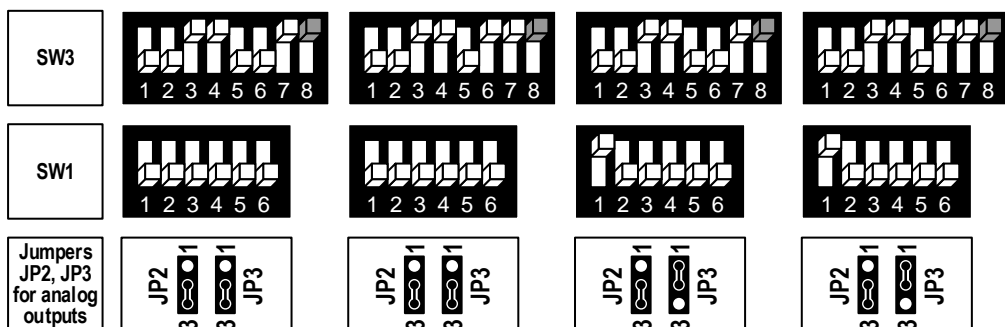

- (1) SW3.1, SW3.2 – Fan speeds:
- 1 speed (Low): SW3.1 = ON, SW3.2 = OFF
  - 2 speeds (Low and High): SW3.1 = OFF, SW3.2 = ON
  - 3 speeds (Low, Medium, and High): SW3.1 = OFF, SW3.2 = OFF
- (2) SW3.4 – 2<sup>nd</sup> heating stage: ON = Enable, OFF = Disable
- (3) SW3.5 – Chilled beam option: ON = Enable chilled beam (fan will not run with cooling)
- (5) SW1.6 – Terminal 12 operation: ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds)  
Important: Economizer will not work in 3 fan speeds configuration.

See drawing on page 21 for DIP switch and jumper locations.

Fan VFS, PID valves: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – FC systems – 4-pipe

Outputs	Config. 18: 4-Pipe, Fan VFS	Config. 19: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Heat valve PID	Config. 20: 4-Pipe, Fan VFS, Heat valve PID	Config. 21: 4-Pipe, Fan VFS, Cool valve PID
11	X	Fan high	X	X
12	Economizer <sup>(5)</sup> (option – SW1.6 ON)	Fan medium (or Economizer <sup>(5)</sup> )	Economizer <sup>(5)</sup> (option – SW1.6 ON)	Economizer <sup>(5)</sup> (option – SW1.6 ON)
13	X	Fan low	X	X
14	Heat valve	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)	Cool valve <sup>(3)</sup>	Heat valve
15	Cool valve <sup>(3)</sup>	Cool valve <sup>(3)</sup>	Heat valve PID	Cool valve PID <sup>(3)</sup>
16	Fan VFS	Heat valve PID (1 <sup>st</sup> stage heat)	Fan VFS	Fan VFS

SW3				
SW1				
Jumpers JP2, JP3 for analog outputs				

- (1) SW3.1, SW3.2 – Fan speeds:
- |                                   |                          |
|-----------------------------------|--------------------------|
| 1 speed (Low):                    | SW3.1 = ON, SW3.2 = OFF  |
| 2 speeds (Low and High):          | SW3.1 = OFF, SW3.2 = ON  |
| 3 speeds (Low, Medium, and High): | SW3.1 = OFF, SW3.2 = OFF |
- (2) SW3.4 – 2<sup>nd</sup> heating stage:  
ON = Enable, OFF = Disable
- (3) SW3.5 – Chilled beam option:  
ON = Enable chilled beam (fan will not run with cooling)
- (5) SW1.6 – Terminal 12 operation:  
ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds/VFS)  
Important: Economizer will not work in 3 fan speeds configuration.


See drawing on page 21 for DIP switch and jumper locations.

Fan VFS, PID valves: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Cool/Heat valves, Economizer: 24 Vac, 0.5A max

## Wiring and DIP switch/jumper configurations – FC systems – 4-pipe

Outputs	Config. 22: 4-Pipe, 1/2/3 Speeds fan <sup>(1)</sup> , Heat valve PID, Cool valve PID
11	Fan high
12	Fan medium (or Economizer <sup>(5)</sup> )
13	Fan low
14	Heat element <sup>(2)</sup> (2 <sup>nd</sup> stage heat)
15	Cool valve PID <sup>(3)</sup>
16	Heat valve PID (1 <sup>st</sup> stage heat)

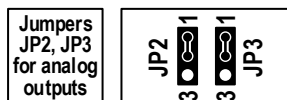

- (1) SW3.1, SW3.2 – Fan speeds:
- |                                  |                          |
|----------------------------------|--------------------------|
| 1 speed (Low):                   | SW3.1 = ON, SW3.2 = OFF  |
| 2 speeds(Low and High):          | SW3.1 = OFF, SW3.2 = ON  |
| 3 speeds(Low, Medium, and High): | SW3.1 = OFF, SW3.2 = OFF |
- (2) SW3.4 – 2<sup>nd</sup> heating stage:  
ON = Enable, OFF = Disable
- (3) SW3.5 – Chilled beam option:  
ON = Enable chilled beam (fan will not run with cooling)
- (5) SW1.6 – Terminal 12 operation:  
ON = Economizer  
OFF = Fan Medium (3 speeds) / Terminal not in use (1/2 speeds)  
Important: Economizer will not work in 3 fan speeds configuration.

See drawing on page 21 for DIP switch and jumper locations.

PID valves: 0-10 Vdc, 0.5 mA Not isolated

Control – Fan on/off, Heat elements, Cool/Heat valves: 24 Vac, 0.5A max

## Technician Settings

### Enter Technician Settings mode:

1. Adjust the setpoint temperature to 10°C or 50°F.
2. Press and hold the [C/F] button for 10 seconds to enter Technician Settings mode. "P01" will appear on display.

### View objects and make adjustments:

- Use the [Mode] button to step forward between different settings.
- Use the [Fan] button to step backward between different settings.
- Press the [On/Off] button to exit Technician Settings and return to normal display.
- If no button is pressed for 60 seconds, the thermostat will automatically exit Technician Settings and return to normal display.
- Use the [+] and [-] buttons to make adjustments when required.

---

#### P01 – Offset for temperature readings calibration

Range: -6...+6°C / -9...+9°F.

Default: 0°C / 0°F.

Note: The offset will influence both internal or external sensors.



Offset for temperature calibration  
(°C) (°F)


---

#### P02 – Setpoint limit for cooling

Range: 5...35°C / 41...95°F.

Default: 10°C / 50°F.

Note: The thermostat will stop cooling regardless of the user's setpoint

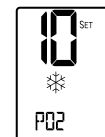

Setpoint limit for cooling  
(°C) (°F)


---

#### P03 – Setpoint limit for heating

Range: 5...35°C / 41...95°F.

Default: 30°C / 86°F.

Note: The thermostat will stop heating regardless of the user's setpoint

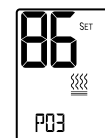

Setpoint limit for heating  
(°C) (°F)

---

#### P04 – Enable/Disable the option to lock the [Fan] button

"LF" + "🔒" [Fan] button can be locked

"LF" only [Fan] button cannot be locked

Note: When enabled, press and hold both [-] and [Fan] buttons for 7 seconds to actually lock the buttons.




[Fan]  
Can  
be locked

[Fan]  
Cannot  
be locked




## Technician Settings (cont.)

### P05 – Enable/Disable the option to lock the [Mode] button

- “L1” + “” [Mode] button can be locked  
 “L1” only [Mode] button cannot be locked

Note: When enabled, press and hold both [-] and [Fan] buttons for 7 seconds to actually lock the buttons.

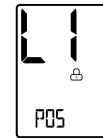


[Mode]  
Can  
be locked



[Mode]  
Cannot  
be locked

### P06 – Enable/Disable the option to lock the [On/Off] button

- “LO” + “” [On/Off] button can be locked  
 “LO” only [On/Off] button cannot be locked

Note: When enabled, press and hold both [-] and [Fan] buttons for 7 seconds to actually lock the buttons.




[On/Off]  
Can  
be locked




[On/Off]  
Cannot  
be locked

### P07 – Enable/Disable the option to lock the [+] and [-] buttons (SET)

- “LS” + “” [+] and [-] buttons can be locked  
 “LS” only [+] and [-] buttons cannot be locked

Note: When enabled, press and hold both [-] and [Fan] buttons for 7 seconds to actually lock the buttons.

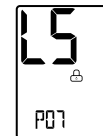

[+] and [-]  
Can  
be locked



[+] and [-]  
Cannot  
be locked


### P08 – Functionality of T1 terminals

- “00” - T1 terminals are not in use  
 “01” - External sensor  
 “02” - T3 Soft start in heat sensor (FC) \*  
           or De-icing in cool (AC) \*\*  
 “03” - Door switch  
 “04” - Key tag  
 “05” - T Economizer  
           (DIP switch SW1.6 must be ON)


\* In heating mode, the fan will not start before there is hot water in the coil.

Note: To view T3 on the BACnet Thermostat, see Technician Settings P84.

\*\* Allow de-icing operation of indoor coil in cooling.

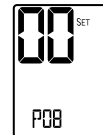


T1 terminals  
Not in use

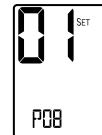


T1 sensor  
(External  
sensor)




T3 Soft start in  
heat sensor (FC)  
or De-icing in  
cool sensor (AC)

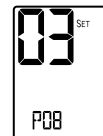

Door switch

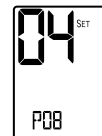

Key tag

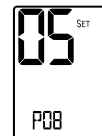

T Economizer

## Technician Settings (cont.)

### P09 – Functionality of IN1,0 terminals


- "00" - IN1,0 terminals are not in use
- "01" - T2 (Change over sensor) \*
- "02" - T3 (Soft start in heat sensor) \*\*
- "03" - Remote On/Off switch
- "04" - Remote Economy switch
- "05" - External Passive Infrared detector \*\*\*

\* In 2-Pipe system, T2 will sense the water temperature in the pipe in order to select/allow effective system mode.


Note: To view T2 on the BACnet Thermostat, see Technician Settings P83.

\*\* Where T1 terminals are used for external sensor, the IN1,0 terminals can be used for T3 sensor.

Note: To view T3 on the BACnet Thermostat, see Technician Settings P84.

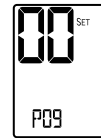


"IN1,0"  
terminals  
Not in use

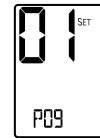


\*T2 change over  
sensor (FC) /  
De-icing in cool  
(AC)




\*\*T3 Soft start in  
heat sensor (FC)  
or De-icing in  
cool sensor (AC)

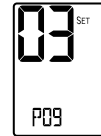

Window contact  
Remote  
On/Off

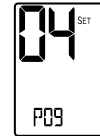

Window contact  
Remote  
Economy

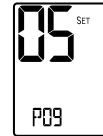


External  
PIR sensor

### P10 – Window contact (terminals IN1,0) polarity

- "01" - Normally open
- "00" - Normally close



Win. contact  
Normally close

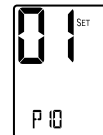

Win. contact  
Normally open

### P11 – Window contact delay time

Range: 0...999 seconds.


Default: 60 seconds.




Window contact  
delay time (sec.)

### P12 – Door switch (terminals T1,0) polarity

- "01" - Normally open
- "00" - Normally closed

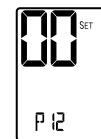

Door switch  
Normally closed

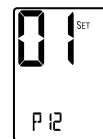


Door switch  
Normally open

### P13 – Door switch delay time

Range: 0...999 seconds.

Default: 180 seconds.

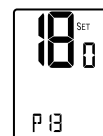


Door switch  
delay time (sec.)

## Technician Settings (cont.)


### P14 – Enable/Disable Auto change over mode

“00” - Disable Auto change over mode

“01” - Enable Auto change over mode

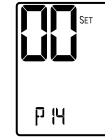

Disable  
Auto mode

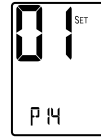


Enable  
Auto mode

### P15 – Motion sensor logic (PIR)


“00” - Thermostat turns off when unoccupied  
and back on when re-occupied.

“01” - Thermostat turns off when unoccupied  
and remains off when re-occupied.

“02” - Thermostat uses economy setpoints.

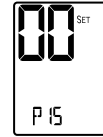

Unocc. – Off  
Re-occ. – On

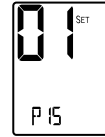

Unocc. – Off  
Re-occ. – Off




Economy  
setpoints


### P16 – Enable/Disable Motion sensor

“00” - Disable

“01” - Enable

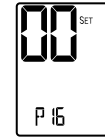

Disable  
occ. sensor

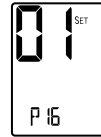

Enable  
occ. sensor

### P17 – PIR (Motion sensor) delay time

before switching to unoccupied mode (ON delay)

Range: 0...250 minutes.

Default: 20 minutes.




PIR ON delay  
(sec.)

### P18 – Door switch or key tag configuration


“00” - Switch On or Off by door switch or key tag

“01” - Changing the setpoint temperature


“02” - Switching fan speed to Low

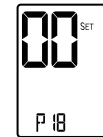

Switch  
On or Off

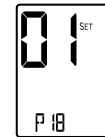

Change  
setpoints

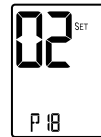


Switch to  
fan low

## Technician Settings (cont.)


### P19 – PIR (Motion sensor) polarity

“00” - Normally open

“01” - Normally closed

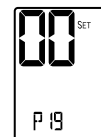

PIR  
Normally open

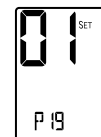

PIR  
Normally closed

### P25 – Economy setpoint for cooling

Range: 5...35°C / 41...95°F.

Default: 30°C / 86°F.



EC setpoint in cooling  
(°C)




(°F)

### P26 – Economy setpoint for heating

Range: 5...35°C / 41...95°F.

Default: 10°C / 50°F.

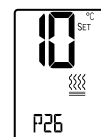

EC setpoint in heating  
(°C)



(°F)

### P27 – On-delay time between heating stages

Range: 0...600 seconds

Default: 5 seconds




On delay  
heating stages

### P28 – Off-delay time between heating stages

Range: 0...600 seconds

Default: 1 second

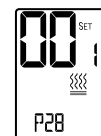


Off delay  
heating stages


### P29 – LCD Backlight ON or OFF

“00” - LCD Backlight ON

“01” - LCD Backlight OFF

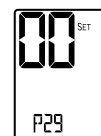

Backlight  
ON

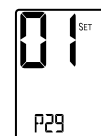


Backlight  
OFF

## Technician Settings (cont.)


### P30 – Beeper ON or OFF

“01” - Beeper ON

“00” - Beeper OFF

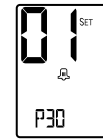



Beeper  
ON

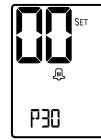

Beeper  
OFF

### P31 – P34

Fan on/off delay  
with fan on demand  
(auto fan) active.

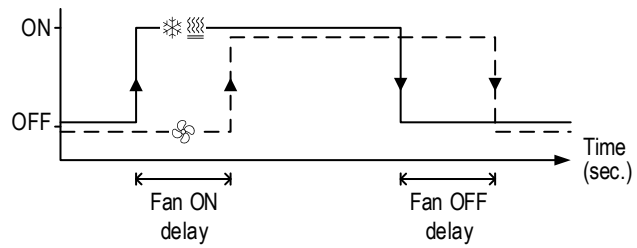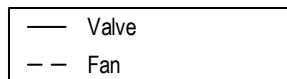

### P31 – Fan ON delay in cooling (FC Only!)

Range: 0...120 seconds

Default: 0 seconds (no delay)



Fan ON delay  
in cooling  
(seconds)

### P32 – Fan OFF delay in cooling

Range: 0...120 seconds

Default: 0 seconds (no delay)




Fan OFF delay  
in cooling  
(seconds)

### P33 – Fan ON delay in heating (FC Only!)

Range: 0...120 seconds

Default: 0 seconds (no delay)

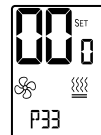


Fan ON delay  
in heating  
(seconds)

### P34 – Fan OFF delay in heating

Range: 0...120 seconds

Default: 30 seconds

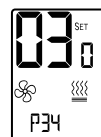

Fan OFF delay  
in heating  
(seconds)


## Technician Settings (cont.)

### P35 – Enable/Disable Freeze protection


“00” - Disable Freeze protection

“01” - Enable Freeze protection

Note: If enabled, freeze protection will start when the thermostat is either ON or OFF and regardless of the current system mode.

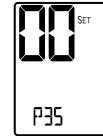

Disable freeze protection

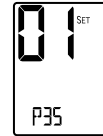


Enable freeze protection

### P36 – Freeze protection cut-in setpoint


Range: 8...15°C / 46...59°F

Default: 8°C / 46°F

The room ambient temperature which will trigger Heating ON.

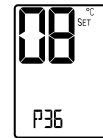

Freeze protection cut-in setpoint  
(°C)

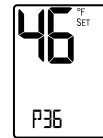


(°F)

### P37 – Freeze protection cut-out setpoint

Range: 10...17°C / 50...63°F

Default: 10°C / 50°F

The room ambient temperature which will switch the Heating back OFF.

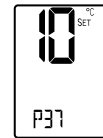

Freeze protection cut-out setpoint  
(°C)



(°F)

### P40 – View filter counter (hours) – Read only

Range: 0...999 hours

The filter counter is related to Fan running time.





View filter Counter (hours)

### P41 – Reset filter time

Press the [+] button to reset the filter counter.

The display will change from “00” to “01” and back to “00”.

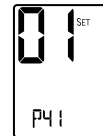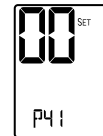


Reset filter counter

### P42 – Adjust filter alarm delay time counter (hours)

Range: 0...999 hours

Default: 0 hours (0 = Disable)

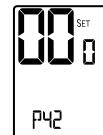


Adjust filter alarm delay time (hours)

## Technician Settings (cont.)

### P43 – P44

Soft start in heat  
with fan on demand  
(auto fan) active.

— Heat valve  
- - Fan

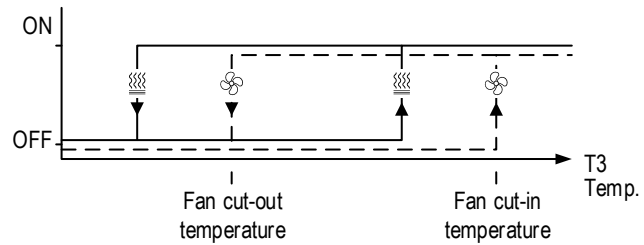

### P43 – Soft start in heat – cut-in temperature (FC Only!)

The fan will not start before the temperature on T3 sensor reaches the cut-in temperature.

See Technician Settings P08/P09.

Range: 14...37°C / 57...99°F

Default: 36°C / 97°F



Soft start heat cut-in temperature  
(°C) (°F)


### P44 – Soft start in heat – cut-out temperature (FC Only!)

The fan will stop if the temperature on T3 sensor drops below the cut-out temperature.

See Technician Settings P08/P09.

Range: 12...35°C / 54...95°F

Default: 32°C / 90°F

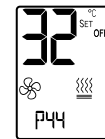


Soft start heat cut-out temperature  
(°C) (°F)

## Technician Settings (cont.)

### P45 – P46

Cool differential band / offset  
(with cool differential band offset = 0)


— Compressor / Valve

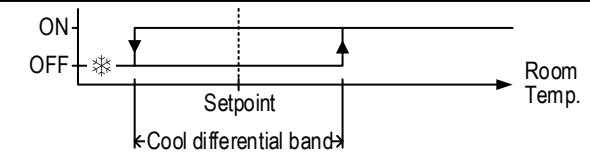

### P45 – P46

Cool differential band / offset  
(with cool differential band offset ≠ 0)

— Compressor / Valve

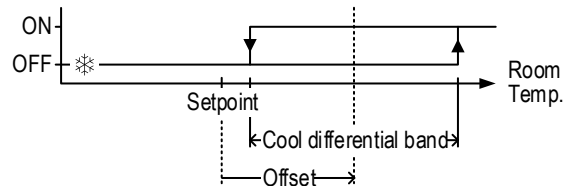

### P45 – Cool differential band

Range: 0.5...5°C / 1...10°F

Default: 1°C / 2°F



Cool differential band  
(°C) (°F)

### P46 – Cool differential band offset

Range: -5...+5°C / -9...+9°F

Default: 0°C / 0°F



Cool differential band offset  
(°C) (°F)



# Technician Settings (cont.)

## P47-48


Heat differential band / offset  
(with heat differential band offset = 0)

— Compressor / Valve

## P47-48

Heat differential band / offset  
(with heat differential band offset ≠ 0)


— Compressor / Valve

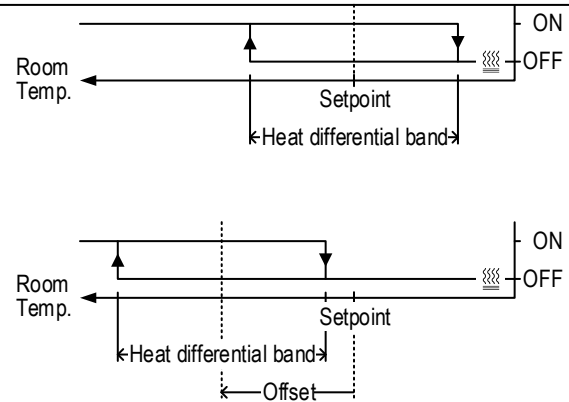

## P47 – Heat differential band

Range: 0.5...5°C / 1...10°F

Default: 1°C / 2°F

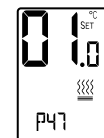

Heat differential band  
(°C) (°F)

## P48 – Heat differential band offset

Range: -5...+5°C / -9...+9°F

Default: 0°C / 0°F




Heat differential band offset  
(°C) (°F)

## Technician Settings (cont.)

### P49

Shift between Cool and Heat  
in Auto change over mode  
(from cooling to heating)


— Compressor / Valve

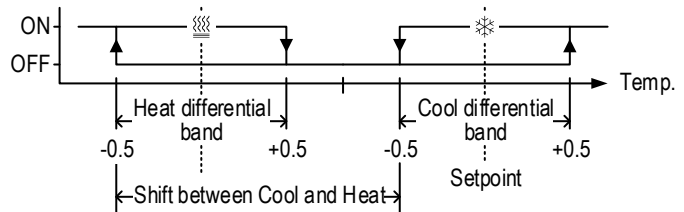

### P49

Shift between Cool and Heat  
in Auto change over mode  
(from heating to cooling)

— Compressor / Valve

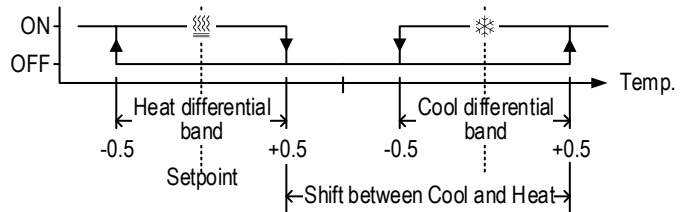

### P49 – Shift between Cool and Heat in Auto change over mode

Range: 0...10°C / 0...20°F

Default: 2°C / 4°F



Shift between Cool & Heat in Auto mode  
(°C) (°F)

### P50 – Shift between Cooling stages (AC only!)

Range: 0...10°C / 0...20°F

Default: 2°C / 4°F




Shift between cooling stages  
(°C) (°F)

### P51 – Shift between Heating stages

Range: 0...10°C / 0...20°F

Default: 2°C / 4°F

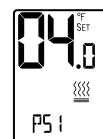

Shift between heating stages  
(°C) (°F)

## Technician Settings (cont.)

### P52 – Cool valve proportional band (FC Only!)

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V Valve opening from fully closed to fully open.



Cool valve proportional band  
(°C) (°F)

### P53 – Cool proportional low limit (FC Only!)

Range: 0...100%

Default: 0%

Minimum valve opening.



Cool prop.  
low limit (%)

### P54 – Cool proportional high limit (FC Only!)

Range: 0...100%

Default: 100%

Maximum valve opening.



Cool prop.  
high limit (%)

### P55 – Heat valve proportional band (FC Only!)

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V Valve opening from fully closed to fully open.




Cool valve proportional band  
(°C) (°F)

### P56 – Heat proportional low limit (FC Only!)

Range: 0...100%

Default: 0%

Minimum valve opening.

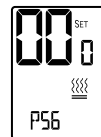


Heat prop.  
low limit (%)

### P57 – Heat proportional high limit (FC Only!)

Range: 0...100%

Default: 100%

Maximum valve opening.

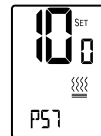

Heat prop.  
high limit (%)


## Technician Settings (cont.)

### P60

Fan turns ON when the Cool or Heat valve reaches the "Proportional ON percent"

### P61

Fan turns OFF when the Cool or Heat valve drops below the "Proportional OFF percent"

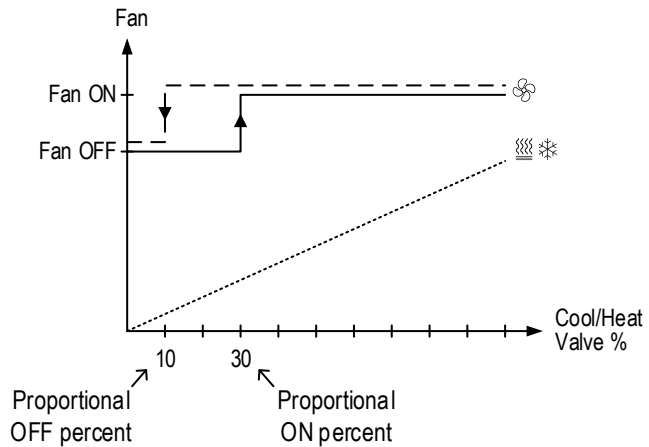

### P60 – Proportional ON percent (FC Only!)

Range: 0...30%

Default: 30%




Cool minimum  
ON percent (%)

### P61 – Proportional OFF percent (FC Only!)

Range: 0...100%

Default: 100%

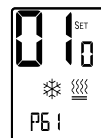

Heat minimum  
ON percent (%)

### P63 – Time on-delay between cooling stages (AC only!)

Range: 0...600 seconds

Default: 5 seconds



On Delay  
cooling stages

### P64 – Time off-delay between cooling stages (AC only!)

Range: 0...600 seconds

Default: 1 seconds



Off Delay  
cooling stages

## Technician Settings (cont.)

### P65 – Fan VFS proportional band in cooling

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V fan speed from off closed to fully running.




VFS Proportional band in cooling  
(°C) (°F)

### P66 – Fan VFS proportional band in heating

Range: 2...10°C / 4...20°F

Default: 2°C / 4°F

0-10V fan speed from off closed to fully running.

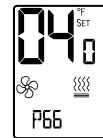

VFS Proportional band in heating  
(°C) (°F)

### P67 – Fan VFS Low speed percent in cooling

Range: 0...30%

Default: 20%



VFS Low %  
in cooling

### P68 – Fan VFS Medium speed percent in cooling

Range: 30...60%

Default: 50%



VFS Med %  
in cooling

### P69 – Fan VFS High speed percent in cooling

Range: 60...100%

Default: 90%




VFS High %  
in cooling

### P70 – Fan VFS Low speed percent in heating

Range: 0...30%

Default: 30%

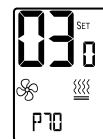

VFS Low %  
in heating

## Technician Settings (cont.)

### P71 – Fan VFS Medium speed percent in heating

Range: 30...60%

Default: 50%




VFS Med %  
in heating

### P72 – Fan VFS High speed percent in heating

Range: 60...100%

Default: 80%

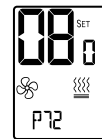


VFS High %  
in heating

### P74

VFS Medium speed differential  
(display from medium to low)

### P75

VFS High speed differential  
(display from high to medium)

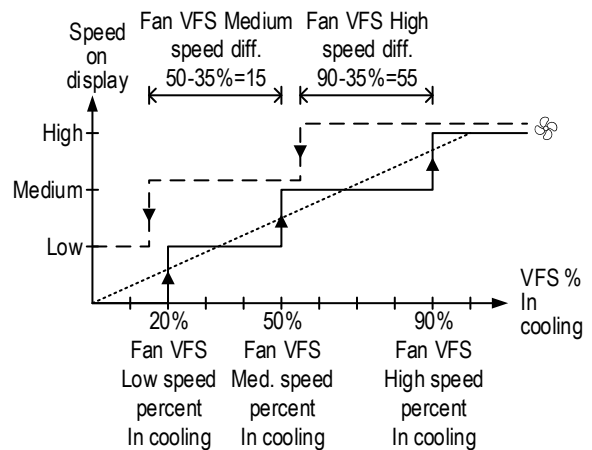

### P74 – VFS Medium speed differential

Range: 10...50%

Default: 35



VFS Med speed  
differential

### P75 – VFS High speed differential

Range: 10...50%

Default: 35



VFS High speed  
differential

## Technician Settings (cont.)

---

### P76 – Fan VFS Low limit in cooling

Range: 0...100%

Default: 0%




VFS low limit  
in cooling

---

### P77 – Fan VFS High limit in cooling

Range: 0...100%

Default: 100%

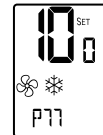


VFS high limit  
in cooling

---

### P78 – Fan VFS Low limit in heating

Range: 0...100%

Default: 0%

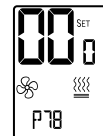


VFS low limit  
in heating

---

### P79 – Fan VFS High limit in heating

Range: 0...100%

Default: 100%

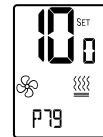

VFS high limit  
in heating

---

## Technician Settings (cont.)

### P83 – View T2 temperature sensor readings

Note: If T2 is not connected, 0.0 will appear on display.



T2 Sensor  
Not connected



T2 Sensor  
readings (°C)

### P84 – View T3 temperature sensor readings

Note: If T3 is not connected, 0.0 will appear on display.



T3 Sensor  
Not connected



T3 Sensor  
readings (°C/°F)

### P85 – De-ice in cool – cut-in temperature (AC only!)

Range: -9.5...+8°C / 15...46°F

Default: 0°C / 32°F

The indoor unit coil temperature in which de-icing will start.



De-ice in cool cut-in temperature  
(°C)



(°F)

### P86 – De-ice in cool – cut-out temperature (AC only!)

Range: 2...20°C / 36...68°F

Default: 8°C / 46°F

The indoor unit coil temperature in which de-icing will stop.



De-ice in cool cut-out temperature  
(°C)




(°F)

### P87 – De-ice in heat time (AC only!)

Range: 120...420 Seconds

Default: 300 Seconds

The length of de-icing procedure.

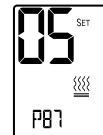


De-ice in heat  
time

### P88 – De-ice in heat break time (AC only!)

Range: 600...1800 Seconds

Default: 1500 Seconds

The time interval between de-icing cycles.

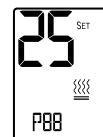

De-ice in heat  
break time



## Technician Settings (cont.)

### P89 – De-ice in heat – cut-in temperature (AC only!)

Range: -9.5...+8°C / 15...46°F

Default: 0°C / 32°F

The outdoor unit coil temperature in which de-icing will start.





De-ice in heat cut-in temperature  
(°C) (°F)

### P90 – De-ice in heat – cut-out temperature (AC only!)

Range: 2...20°C / 35...68°F

Default: 16°C / 61°F

The outdoor unit coil temperature in which de-icing will stop.

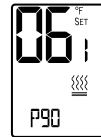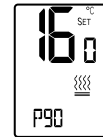

De-ice in heat cut-out temperature  
(°C) (°F)

### P91 – Compressor delay (AC only!)

Range: 0...360 Seconds

Default: 240 Seconds

DIP Switch SW3.5 must be in "OFF" position – compressor delay enabled!





Compressor  
delay

### P98 – Display setpoint only (hide room temperature)

"00" - Display both setpoint and room temperatures

"01" - Display only the setpoint temperature

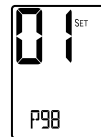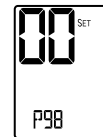



Show room  
temperature

Hide room  
temperature

### P99 – One or Two setpoints (for cool and for heat)

"00" - One setpoint for cooling and heating

"01" - two setpoints – one for cool and one for heat

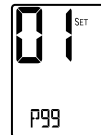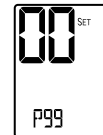

One  
setpoint

Two  
setpoints

## Technician Settings (cont.)

---

### P101 – Screen dimming delay

Range: 0...99 minutes

Default: 5 minutes



Screen dimming  
delay

---

### P107 – Weekly program configuration


“00” - Disable weekly program

“01” - 7 days with the same program

“02” - One program for Monday to Friday and another program for Saturday and Sunday

“03” - One program for Monday to Friday, one for Saturday, and another for Sunday

“04” - 7 days with a different program for each day

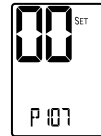


Weekly program  
configuration

---

### P108 – Weekly program - events per day

“00” - Two different events per day

“01” - Four different events per day

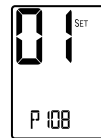

Weekly program  
events per day

---


### P109 – Weekly program event configuration

“00” - US Program

Event start time, Mode, Fan speed, Setpoints (one or two)

“01” - Eu program

Event start time, Stop time

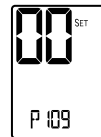

Weekly program  
event configuration

---

## Technician Settings (cont.)

---

### P114 – Cool PID Kp (FC Only!)

Range: 0...100%

Default: 100%



Cool PID  
Kp

---

### P115 – Heat PID Kp (FC Only!)

Range: 0...100%

Default: 100%



Heat PID  
Kp

---

### P116 – Cool PID Ki (FC Only!)

Range: 0...100%

Default: 0%




Cool PID  
Ki

---

### P117 – Heat PID Ki (FC Only!)

Range: 0...100%

Default: 0%

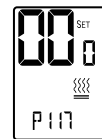

Heat PID  
Ki

---

### P118 – Cool PID Kd (FC Only!)

Range: 0...100%

Default: 1%




Cool PID  
Kd

---

### P119 – Heat PID Kd (FC Only!)

Range: 0...100%

Default: 1%

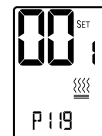

Heat PID  
Kd

---

## Technician Settings (cont.)

### P122 – Cool Proportional output threshold time (seconds) (FC Only!)

Range: 0...100 seconds

Default: 60 seconds




Cool proportional  
cooling threshold

### P123 – Heat Proportional output threshold time (seconds) (FC Only!)

Range: 0...100 seconds

Default: 60 seconds

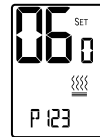

Heat proportional  
cooling threshold

### P160 – Minimum compressor ON time

Range: 0...20 minutes

Default: 2 minutes




Min. compressor  
ON time

### P161 – Minimum compressor OFF time

Range: 0...20 minutes

Default: 13 minutes


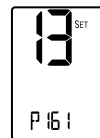


Min. Compressor  
OFF time

### P170 – Economizer low limit temperature


Range: 9...27°C / 48...80°F

Default: 17°C / 63°F

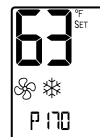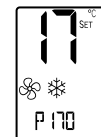

Economizer low limit temperature  
(°C) (°F)


### P198 – Not in use

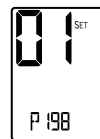

Communication  
protocol indication

### P200 – Restore defaults

- Press the [+] button. The display will change from "00" to "01".
- Press the [On/Off] button to restore default settings.
- The thermostat will turn Off.

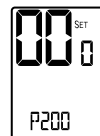


Dead zone  
Hum./Dehum.

Press the [On/Off] button or wait 60 seconds to return to normal display.

## Alarms and Indications

---

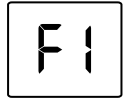

T1 Internal sensor or T1 External sensor fault



De-icer in cool indication



De-icer in heat indication



Overheat in heat



Overheat in cool



Teconomizer sensor fault

## Document revision history

---

Important changes to this document are listed below. Minor changes such as typographical or formatting errors are not listed.

Date	Topic	Change description
2/21/19	FC configurations for 2-pipe systems	Changed configuration numbers from 20 through 23 to 10 through 13.
2/21/19	FC configurations for 4-pipe systems	Changed configuration numbers from 31 through 39 to 14 through 22.
2/19/19	Specifications	Changed Mounting specification description. Added CE and C-Tick icons to Compliance specification.
2/19/19	BACnet Device Instance Number	Changed 24075 in first paragraph to 16075. Changed both instances of WebCTRL to i-Vu. Changed image to show i-Vu interface with Present Value of 160102.
2/19/19	Installation	Changed step B and illustrations.
2/19/19	Technician Settings > P122 and P123	Changed from percent to time (seconds).