



# Configuring Flexible NetFlow

---

- [Finding Feature Information, page 1](#)
- [Prerequisites for Flexible NetFlow, page 1](#)
- [Restrictions for Flexible NetFlow, page 2](#)
- [Information About Flexible Netflow, page 3](#)
- [How to Configure Flexible NetFlow, page 14](#)
- [Monitoring Flexible NetFlow, page 26](#)
- [Configuration Examples for Flexible NetFlow, page 27](#)
- [Additional References, page 28](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

## Prerequisites for Flexible NetFlow

- You are familiar with the Flexible NetFlow key fields as they are defined in the following commands in the *Cisco IOS Flexible NetFlow Command Reference* :
  - **match flow**
  - **match interface**
  - **match {ipv4 | ipv6}**
  - **match routing**

- **match transport**
- You are familiar with the Flexible NetFlow nonkey fields as they are defined in the following commands in the *Cisco IOS Flexible NetFlow Command Reference* :
  - **collect counter**
  - **collect flow**
  - **collect interface**
  - **collect{ipv4 | ipv6}**
  - **collect routing**
  - **collect timestamp sys-uptime**
  - **collect transport**
- The networking device must be running a Cisco release that supports Flexible NetFlow.

#### IPv4 Traffic

- The networking device must be configured for IPv4 routing.
- One of the following must be enabled on your router and on any interfaces on which you want to enable Flexible NetFlow: Cisco Express Forwarding or distributed Cisco Express Forwarding.

#### IPv6 Traffic

- The networking device must be configured for IPv6 routing.
- One of the following must be enabled on your router and on any interfaces on which you want to enable Flexible NetFlow: Cisco Express Forwarding IPv6 or distributed Cisco Express Forwarding.

## Restrictions for Flexible NetFlow

The following are restrictions for Flexible NetFlow:

- This feature is not supported on switches running the NPE or the LAN base image.
- Not all of the Flexible NetFlow commands in the command reference are available on the switch. Unsupported commands are either not visible or generate an error message if entered.
- Predefined flow records are not supported.
- InterSwitch Link (ISL) is not supported.
- Policy-based NetFlow is not supported.
- Cisco TrustSec monitoring is not supported.
- Flexible NetFlow version 5 export format is not supported, only NetFlow version 9 export format is supported.
- Microflow policing feature shares the NetFlow hardware resource with FNF.

- Although other modules that can be installed (switch the has 1-Gigabit and 10-Gigabit uplink interfaces), NetFlow is supported only on the network services module. Only one flow monitor per interface and per direction is supported by the network services module.
- The switch supports up to 16 flow monitors.
- 

## Information About Flexible Netflow

### Flexible NetFlow Overview

Flexible NetFlow uses flows to provide statistics for accounting, network monitoring, and network planning.

A flow is a unidirectional stream of packets that arrives on a source interface and has the same values for the keys. A key is an identified value for a field within the packet. You create a flow using a flow record to define the unique keys for your flow.

The switch supports the Flexible NetFlow feature that enables enhanced network anomalies and security detection. Flexible NetFlow allows you to define an optimal flow record for a particular application by selecting the keys from a large collection of predefined fields.

All key values must match for the packet to count in a given flow. A flow might gather other fields of interest, depending on the export record version that you configure. Flows are stored in the Flexible NetFlow cache.

You can export the data that Flexible NetFlow gathers for your flow by using an exporter and export this data to a remote system such as a Flexible NetFlow collector. The Flexible NetFlow collector can use an IPv4 address.

You define the size of the data that you want to collect for a flow using a monitor. The monitor combines the flow record and exporter with the Flexible NetFlow cache information.

### Benefits of Flexible NetFlow

Flexible NetFlow allows the flow to be user defined. The benefits of Flexible NetFlow include:


- High-capacity flow recognition, including scalability and aggregation of flow information.
- Enhanced flow infrastructure for security monitoring and dDoS detection and identification.
- New information from packets to adapt flow information to a particular service or operation in the network. The flow information available will be customizable by Flexible NetFlow users.
- Extensive use of Cisco's flexible and extensible NetFlow Version 9.
- A comprehensive IP accounting feature that can be used to replace many accounting features, such as IP accounting, Border Gateway Protocol (BGP) Policy Accounting, and persistent caches.
- Support for ingress and egress NetFlow accounting.
- Support for full flow accounting and sampled NetFlow accounting.

Flexible NetFlow allows you to understand network behavior with more efficiency, with specific flow information tailored for various services used in the network. The following are some example applications for a Flexible NetFlow feature:

- Flexible NetFlow enhances Cisco NetFlow as a security monitoring tool. For instance, new flow keys can be defined for packet length or MAC address, allowing users to search for a specific type of attack in the network.
- Flexible NetFlow allows you to quickly identify how much application traffic is being sent between hosts by specifically tracking TCP or UDP applications by the class of service (CoS) in the packets.
- The accounting of traffic entering a Multiprotocol Label Switching (MPLS) or IP core network and its destination for each next hop per class of service. This capability allows the building of an edge-to-edge traffic matrix.

The figure below is an example of how Flexible NetFlow might be deployed in a network.

**Figure 1: Typical Deployment for Flexible NetFlow**

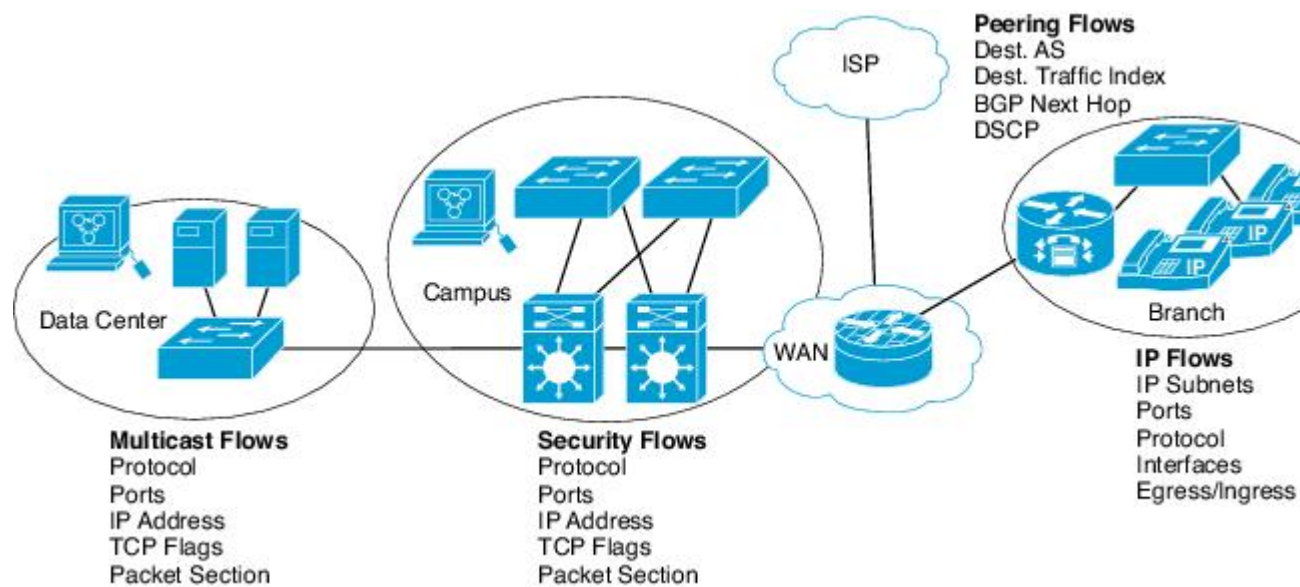

## Flexible NetFlow Components

Flexible NetFlow consists of components that can be used together in several variations to perform traffic analysis and data export. The user-defined flow records and the component structure of Flexible NetFlow facilitates the creation of various configurations for traffic analysis and data export on a networking device with a minimum number of configuration commands. Each flow monitor can have a unique combination of flow record, flow exporter, and cache type. If you change a parameter such as the destination IP address for a flow exporter, it is automatically changed for all the flow monitors that use the flow exporter. The same flow monitor can be used in conjunction with different flow samplers to sample the same type of network traffic at different rates on different interfaces. The following sections provide more information on Flexible NetFlow components:

### Flow Records

In Flexible NetFlow a combination of key and nonkey fields is called a record. Flexible NetFlow records are assigned to Flexible NetFlow flow monitors to define the cache that is used for storing flow data.

A flow record defines the keys that Flexible NetFlow uses to identify packets in the flow, as well as other nonkey fields of interest that Flexible NetFlow gathers for the flow. You can define a flow record with any combination of keys and fields of interest. The switch supports a rich set of keys. A flow record also defines the types of counters gathered per flow. You can configure 64-bit packet or byte counters. The switch enables the following match fields as the defaults when you create a flow record:

- match datalink—Layer 2 attributes
- match ipv4—IPv4 attributes
- match ipv6—IPv6 attributes
- match transport—Transport layer fields
- match wireless—Wireless fields

### Related Topics

[Creating a Flow Record](#)

[Example: Configuring a Flow, on page 27](#)

## User-Defined Records

Flexible NetFlow enables you to define your own records for a Flexible NetFlow flow monitor cache by specifying the key and nonkey fields to customize the data collection to your specific requirements. When you define your own records for a Flexible NetFlow flow monitor cache, they are referred to as *user-defined records*. The values in nonkey fields are added to flows to provide additional information about the traffic in the flows. A change in the value of a nonkey field does not create a new flow. In most cases the values for nonkey fields are taken from only the first packet in the flow. Flexible NetFlow enables you to capture counter values such as the number of bytes and packets in a flow as nonkey fields.

Flexible NetFlow adds a new Version 9 export format field type for the header and packet section types. Flexible NetFlow will communicate to the NetFlow collector the configured section sizes in the corresponding Version 9 export template fields. The payload sections will have a corresponding length field that can be used to collect the actual size of the collected section.

## Flow Exporters

Flow exporters export the data in the flow monitor cache to a remote system, such as a server running NetFlow collector, for analysis and storage. Flow exporters are created as separate entities in the configuration. Flow exporters are assigned to flow monitors to provide data export capability for the flow monitors. You can create several flow exporters and assign them to one or more flow monitors to provide several export destinations. You can create one flow exporter and apply it to several flow monitors.


### NetFlow Data Export Format Version 9

The basic output of NetFlow is a flow record. Several different formats for flow records have evolved as NetFlow has matured. The most recent evolution of the NetFlow export format is known as Version 9. The distinguishing feature of the NetFlow Version 9 export format is that it is template-based. Templates provide an extensible design to the record format, a feature that should allow future enhancements to NetFlow services without requiring concurrent changes to the basic flow-record format. Using templates provides several key benefits:

- Third-party business partners who produce applications that provide collector or display services for NetFlow do not have to recompile their applications each time a new NetFlow feature is added. Instead, they should be able to use an external data file that documents the known template formats.
- New features can be added to NetFlow quickly without breaking current implementations.
- NetFlow is “future-proofed” against new or developing protocols because the Version 9 format can be adapted to provide support for them.

The Version 9 export format consists of a packet header followed by one or more template flow or data flow sets. A template flow set provides a description of the fields that will be present in future data flow sets. These data flow sets may occur later within the same export packet or in subsequent export packets. Template flow and data flow sets can be intermingled within a single export packet, as illustrated in the figure below.


**Figure 2: Version 9 Export Packet**



NetFlow Version 9 will periodically export the template data so the NetFlow collector will understand what data is to be sent and also export the data flow set for the template. The key advantage to Flexible NetFlow is that the user configures a flow record, which is effectively converted to a Version 9 template and then

forwarded to the collector. The figure below is a detailed example of the NetFlow Version 9 export format, including the header, template flow, and data flow sets.

**Figure 3: Detailed Example of the NetFlow Version 9 Export Format**

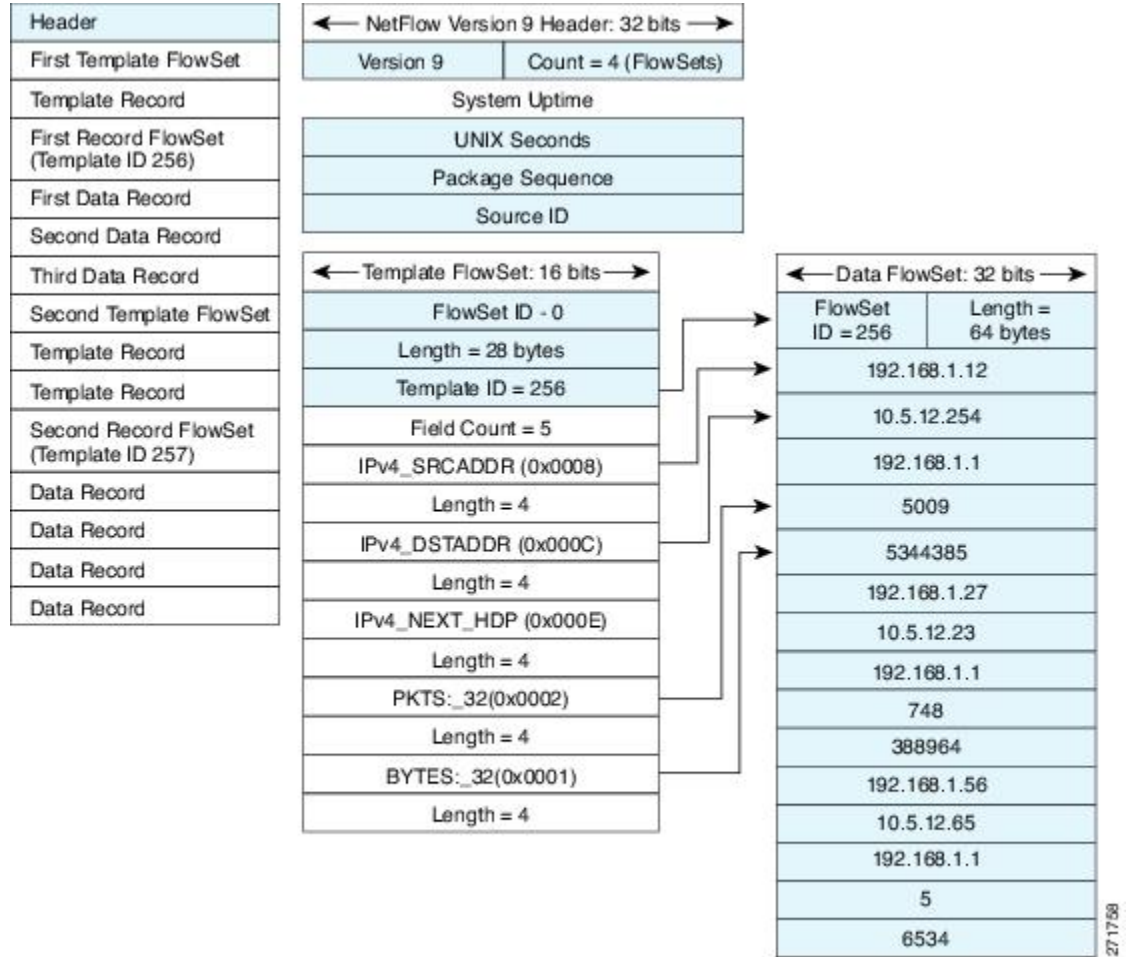

For more information on the Version 9 export format, refer to the white paper titled [Cisco IOS NetFlow Version 9 Flow-Record Format](http://www.cisco.com/en/US/tech/tk648/tk362/technologies_white_paper09186a00800a3db9.shtml), available at this URL: [http://www.cisco.com/en/US/tech/tk648/tk362/technologies\\_white\\_paper09186a00800a3db9.shtml](http://www.cisco.com/en/US/tech/tk648/tk362/technologies_white_paper09186a00800a3db9.shtml).

## Flow Monitors


Flow monitors are the Flexible NetFlow component that is applied to interfaces to perform network traffic monitoring.

Flow monitors consist of a user-defined record, an optional flow exporter, and a cache that is automatically created at the time the flow monitor is applied to the first interface.

Flow data is collected from the network traffic and added to the flow monitor cache during the monitoring process based on the key and nonkey fields in the flow record.

Flexible NetFlow can be used to perform different types of analysis on the same traffic. In the figure below, packet 1 is analyzed using a record designed for standard traffic analysis on the input interface and a record designed for security analysis on the output interface.

**Figure 4: Example of Using Two Flow Monitors to Analyze the Same Traffic**

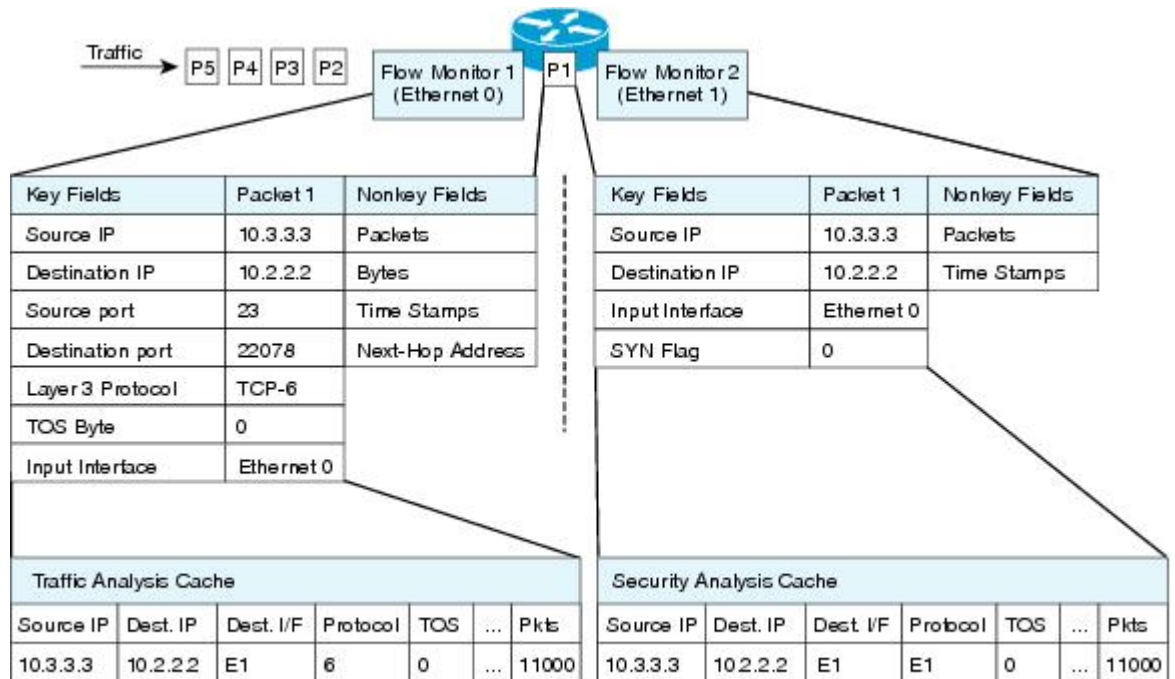


EN1755



The figure below shows a more complex example of how you can apply different types of flow monitors with custom records.

**Figure 5: Complex Example of Using Multiple Types of Flow Monitors with Custom Records**

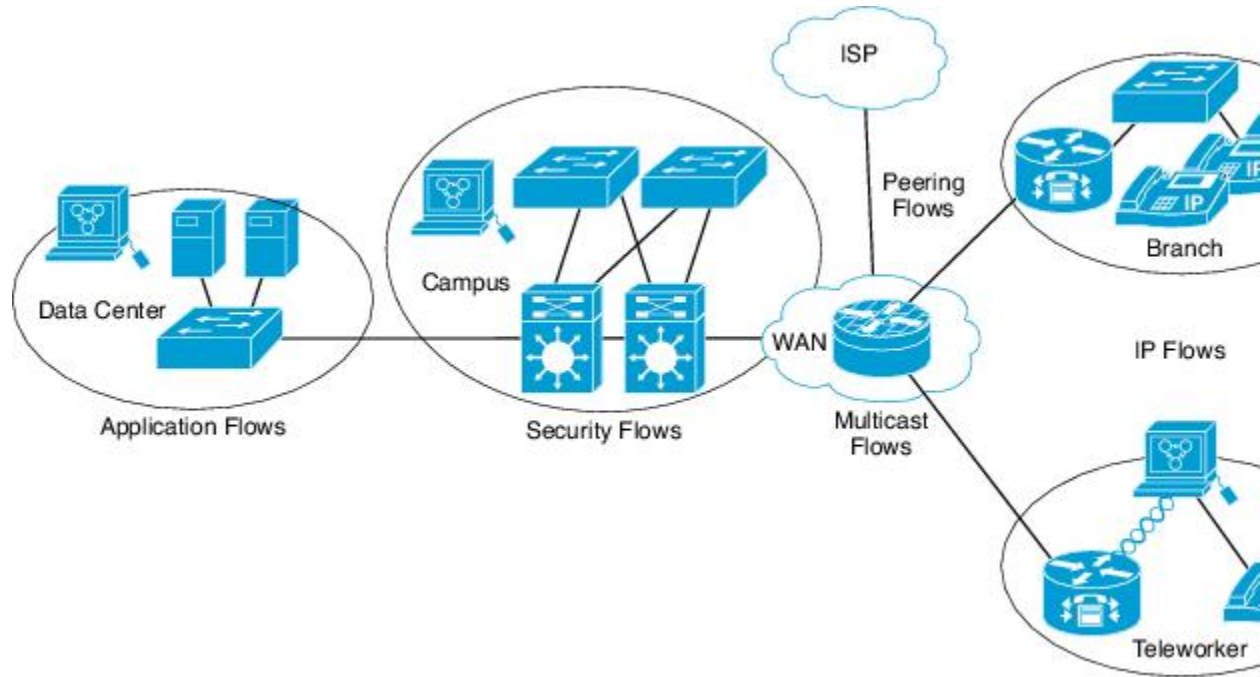

### Normal

The default cache type is "normal". In this mode, the entries in the cache are aged out according to the timeout active and timeout inactive settings. When a cache entry is aged out, it is removed from the cache and exported via any exporters configured.

## Flow Samplers

Flow samplers are created as separate components in a router's configuration. Flow samplers are used to reduce the load on the device that is running Flexible NetFlow by limiting the number of packets that are selected for analysis.

Flow sampling exchanges monitoring accuracy for router performance. When you apply a sampler to a flow monitor, the overhead load on the router of running the flow monitor is reduced because the number of packets that the flow monitor must analyze is reduced. The reduction in the number of packets that are analyzed by the flow monitor causes a corresponding reduction in the accuracy of the information stored in the flow monitor's cache.

Samplers are combined with flow monitors when they are applied to an interface with the **ip flow monitor** command.

## Supported Flexible NetFlow Fields

The following tables provide a consolidated list of supported fields in Flexible NetFlow (FNF) for various traffic types and traffic direction.


**Note**

If the packet has a VLAN field, then that length is not accounted for.

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
<b>Key or Collect Fields</b>							
Interface input	Yes	—	Yes	—	Yes	—	<p>If you apply a flow monitor in the input direction:</p> <ul style="list-style-type: none"> <li>• Use the <b>match</b> keyword and use the input interface as a key field.</li> <li>• Use the <b>collect</b> keyword and use the output interface as a collect field. This field will be present in the exported records but with a value of 0.</li> </ul>
Interface output	—	Yes	—	Yes	—	Yes	<p>If you apply a flow monitor in the output direction:</p> <ul style="list-style-type: none"> <li>• Use the <b>match</b> keyword and use the output interface as a key field.</li> <li>• Use the <b>collect</b> keyword and use the input interface as a collect field. This field will be present in the exported records but with a value of 0.</li> </ul>

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
<b>Key Fields</b>							

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
Flow direction	Yes	Yes	Yes	Yes	Yes	Yes	
Ethertype	Yes	Yes	—	—	—	—	
VLAN input	Yes	—	Yes	—	Yes	—	Supported only for a switch port.
VLAN output	—	Yes	—	Yes	—	Yes	Supported only for a switch port.
dot1q VLAN input	Yes	—	Yes	—	Yes	—	Supported only for a switch port.
dot1q VLAN output	—	Yes	—	Yes	—	Yes	Supported only for a switch port.
dot1q priority	Yes	Yes	Yes	Yes	Yes	Yes	Supported only for a switch port.
MAC source address input	Yes	Yes	Yes	Yes	Yes	Yes	
MAC source address output	—	—	—	—	—	—	
MAC destination address input	Yes	—	Yes	—	Yes	—	
MAC destination address output	—	Yes	—	Yes	—	Yes	
IPv4 version	—	—	Yes	Yes	Yes	Yes	
IPv4 TOS	—	—	Yes	Yes	Yes	Yes	

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
IPv4 protocol	—	—	Yes	Yes	Yes	Yes	Must use if any of src/dest port, ICMP code/type, IGMP type or TCP flags are used.
IPv4 TTL	—	—	Yes	Yes	Yes	Yes	
IPv4 source address	—	—	Yes	Yes	—	—	
IPv4 destination address	—	—	Yes	Yes	—	—	
ICMP IPv4 type	—	—	Yes	Yes	—	—	
ICMP IPv4 code	—	—	Yes	Yes	—	—	
IGMP type	—	—	Yes	Yes	—	—	

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
<b>Key Fields continued</b>							
IPv6 version	—	—	Yes	Yes	Yes	Yes	Same as IP version.
IPv6 protocol	—	—	Yes	Yes	Yes	Yes	Same as IP protocol. Must use if any of src/dest port, ICMP code/type, IGMP type or TCP flags are used.

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
IPv6 source address	—	—	—	—	Yes	Yes	
IPv6 destination address	—	—	—	—	Yes	Yes	
IPv6 traffic-class	—	—	Yes	Yes	Yes	Yes	Same as IP TOS.
IPv6 hop-limit	—	—	Yes	Yes	Yes	Yes	Same as IP TTL.
ICMP IPv6 type	—	—	—	—	Yes	Yes	
ICMP IPv6 code	—	—	—	—	Yes	Yes	
source-port	—	—	Yes	Yes	Yes	Yes	
dest-port	—	—	Yes	Yes	Yes	Yes	

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
<b>Collect Fields</b>							
Bytes long	Yes	Yes	Yes	Yes	Yes	Yes	Packet size = (Ethernet frame size including FCS - 18 bytes) <b>Recommend:</b> Avoid this field and use Bytes layer2 long.
Packets long	Yes	Yes	Yes	Yes	Yes	Yes	
Timestamp absolute first	Yes	Yes	Yes	Yes	Yes	Yes	

Field	Layer 2 In	Layer 2 Out	IPv4 In	IP v4 Out	IPv6 In	IPv6 Out	Notes
Timestamp absolute last	Yes	Yes	Yes	Yes	Yes	Yes	
TCP flags	Yes	Yes	Yes	Yes	Yes	Yes	Collects all flags.
Bytes layer2 long	Yes	Yes	Yes	Yes	Yes	Yes	

## Default Settings

The following table lists the Flexible NetFlow default settings for the switch.

**Table 1: Default Flexible NetFlow Settings**

Setting	Default
Flow active timeout	1800 seconds
Flow timeout inactive	15 seconds

## How to Configure Flexible NetFlow

To configure Flexible NetFlow, follow these general steps:

- 1 Create a flow record by specifying keys and non-key fields to the flow.
- 2 Create an optional flow exporter by specifying the protocol and transport destination port, destination, and other parameters.
- 3 Create a flow monitor based on the flow record and flow exporter.
- 4 Create an optional sampler.
- 5 Apply the flow monitor to a Layer 2 port, Layer 3 port, or VLAN.

## Configuring a Flow Record

Perform this task to configure a customized flow record.

Customized flow records are used to analyze traffic data for a specific purpose. A customized flow record must have at least one **match** criterion for use as the key field and typically has at least one **collect** criterion for use as a nonkey field.

There are hundreds of possible permutations of customized flow records. This task shows the steps that are used to create one of the possible permutations. Modify the steps in this task as appropriate to create a customized flow record for your requirements.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **flow record** *record-name*
4. **description** *description*
5. **match** {*ipv4* | *ipv6*} {*destination* | *source*} *address*
  - or
 

```
match datalink {destination-vlan-id | dot1q | ethertype | mac|source-vlan-id}
```
  - or
 

```
match transport {icmp | igmp | source-port |tcp|udp}
```
6. Repeat Step 5 as required to configure additional key fields for the record.
7. **collect interface** {*input* | *output*}
  - or
 

```
collect counter {bytes [ exported | long] flows [exported]|packets} [ exported | long]
```
  - or
 

```
collect timestamp sys-uptime {first | last}
```
8. Repeat the above step as required to configure additional nonkey fields for the record.
9. **end**
10. **show flow record** *record-name*
11. **show running-config flow record** *record-name*

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<p><b>flow record</b> <i>record-name</i></p> <p><b>Example:</b></p> <pre>Device(config)# flow record FLOW-RECORD-1</pre>	<p>Creates a flow record and enters Flexible NetFlow flow record configuration mode.</p> <ul style="list-style-type: none"> <li>This command also allows you to modify an existing flow record.</li> </ul>
<b>Step 4</b>	<p><b>description</b> <i>description</i></p> <p><b>Example:</b></p> <pre>Device(config-flow-record)# description Used for basic traffic analysis</pre>	(Optional) Creates a description for the flow record.
<b>Step 5</b>	<p><b>match</b> {<b>ipv4</b>   <b>ipv6</b>} {<b>destination</b>   <b>source</b>} <b>address</b></p> <ul style="list-style-type: none"> <li>or</li> <li><b>match datalink</b> {<b>destination-vlan-id</b>   <b>dot1q</b>   <b>ethertype</b>   <b>mac</b> <b>source-vlan-id</b>}</li> <li>or</li> <li><b>match transport</b> {<b>icmp</b>   <b>igmp</b>   <b>source-port</b>   <b>tcp</b> <b>udp</b>}</li> </ul> <p><b>Example:</b></p> <pre>Device(config-flow-record)# match ipv4 destination address</pre>	<p>Configures one or more source fields in the flow as counter fields, timestamp fields, or interface fields.</p> <p><b>Note</b> This example configures the IPv4 destination address as a key field for the record. For information about the other key fields available for the <b>match ipv4</b> command, and the other <b>match</b> commands that are available to configure key fields, refer to the <i>Cisco IOS Flexible NetFlow Command Reference</i> .</p>
<b>Step 6</b>	Repeat Step 5 as required to configure additional key fields for the record.	—
<b>Step 7</b>	<p><b>collect interface</b> {<b>input</b>   <b>output</b>}</p> <ul style="list-style-type: none"> <li>or</li> <li><b>collect counter</b> {<b>bytes</b> [ <b>exported</b>   <b>long</b>] <b>flows</b> [ <b>exported</b>] <b>packets</b>} [ <b>exported</b>   <b>long</b>]</li> <li>or</li> <li><b>collect timestamp sys-uptime</b> {<b>first</b>   <b>last</b>}</li> </ul> <p><b>Example:</b></p> <pre>Device(config-flow-record)# collect interface input</pre>	<p>Configures the input interface as a nonkey field for the record.</p> <p><b>Note</b> This example configures the input interface as a nonkey field for the record. For information on the other <b>collect</b> commands that are available to configure nonkey fields, refer to the <i>Cisco IOS Flexible NetFlow Command Reference</i>.</p>
<b>Step 8</b>	Repeat the above step as required to configure additional nonkey fields for the record.	—



	Command or Action	Purpose
<b>Step 9</b>	<b>end</b>  <b>Example:</b> Device(config-flow-record)# end	Exits Flexible NetFlow flow record configuration mode and returns to privileged EXEC mode.
<b>Step 10</b>	<b>show flow record</b> <i>record-name</i>  <b>Example:</b> Device# show flow record FLOW_RECORD-1	(Optional) Displays the current status of the specified flow record.
<b>Step 11</b>	<b>show running-config flow record</b> <i>record-name</i>  <b>Example:</b> Device# show running-config flow record FLOW_RECORD-1	(Optional) Displays the configuration of the specified flow record.

## Creating a Flow Exporter

You can create a flow export to define the export parameters for a flow.



**Note** Each flow exporter supports only one destination. If you want to export the data to multiple destinations, you must configure multiple flow exporters and assign them to the flow monitor.

You can export to a destination using IPv4 address.

## SUMMARY STEPS

1. **configure terminal**
2. **flow exporter** *name*
3. **description** *string*
4. **destination** {*hostname* | *ipv4-address*} [**vrf** *vrf-name*]
5. **dscp** *value*
6. **source** {*interface-id*}
7. **option** {**exporter-stats** | **interface-table** | **sampler-table**} [**timeout** *seconds*]
8. **template data timeout** *seconds*
9. **transport udp** *number*
10. **ttl** *seconds*
11. **export-protocol** {*netflow-v9*}
12. **end**
13. **show running-config flow exporter** *exporter-name*
14. **show flow exporter** [**name** *record-name*]
15. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# <b>configure terminal</b>	Enters the global configuration mode.
<b>Step 2</b>	<b>flow exporter</b> <i>name</i>  <b>Example:</b> Switch(config)# <b>flow exporter ExportTest</b>	Creates a flow exporter and enters flow exporter configuration mode.
<b>Step 3</b>	<b>description</b> <i>string</i>  <b>Example:</b> Switch(config-flow-exporter)# <b>description ExportV9</b>	(Optional) Describes this flow record as a maximum 63-character string.
<b>Step 4</b>	<b>destination</b> { <i>hostname</i>   <i>ipv4-address</i> } [ <b>vrf</b> <i>vrf-name</i> ]  <b>Example:</b> Switch(config-flow-exporter)# <b>destination 192.0.2.1</b> (IPv4 destination)	Sets the IPv4 destination address or hostname for this exporter.

	Command or Action	Purpose
<b>Step 5</b>	<p><b>dscp</b> <i>value</i></p> <p><b>Example:</b></p> <pre>Switch(config-flow-exporter)# dscp 0</pre>	(Optional) Specifies the differentiated services codepoint value. The range is from 0 to 63. The default is 0.
<b>Step 6</b>	<p><b>source</b> {<i>interface-id</i>}</p> <p><b>Example:</b></p> <pre>Switch(config-flow-exporter)# source gigabitEthernet1/0/1</pre>	(Optional) Specifies the interface to use to reach the NetFlow collector at the configured destination. The following interfaces can be configured as source:
<b>Step 7</b>	<p><b>option</b> {<b>exporter-stats</b>   <b>interface-table</b>   <b>sampler-table</b>} [<b>timeout</b> <i>seconds</i>]</p> <p><b>Example:</b></p> <pre>Switch</pre>	(Optional) Configures options data parameters for the exporter. You can configure all three options concurrently. The range for the timeout is 1 to 86400 seconds. The default is 600.
<b>Step 8</b>	<p><b>template data timeout</b> <i>seconds</i></p> <p><b>Example:</b></p> <pre>Switch</pre>	(Optional) Configures resending of templates based on a timeout. The range is 1 to 86400 seconds (86400 seconds equals 24 hours). The default is 600.
<b>Step 9</b>	<p><b>transport udp</b> <i>number</i></p> <p><b>Example:</b></p> <pre>Switch(config-flow-exporter)# transport udp 200</pre>	(Optional) Specifies the UDP port to use to reach the NetFlow collector. The range is from 0 to 65535. The range is from 1 to 65536
<b>Step 10</b>	<p><b>ttl</b> <i>seconds</i></p> <p><b>Example:</b></p> <pre>Switch(config-flow-exporter)# ttl 210</pre>	(Optional) Configures the time-to-live (TTL) value for datagrams sent by the exporter. The range is from 1 to 255 seconds. The default is 255.
<b>Step 11</b>	<p><b>export-protocol</b> {<b>netflow-v9</b>}</p> <p><b>Example:</b></p> <pre>Switch(config-flow-exporter)# export-protocol netflow-v9</pre>	Specifies the version of the NetFlow export protocol used by the exporter.
<b>Step 12</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Switch(config-flow-record)# end</pre>	Returns to privileged EXEC mode.

	Command or Action	Purpose
Step 13	<b>show running-config flow exporter</b> <i>exporter-name</i>  <b>Example:</b> Switch# <b>show running-config flow exporter</b> <b>ExportTest</b>	(Optional) Verifies the configured flow exporter.
Step 14	<b>show flow exporter</b> [name <i>record-name</i> ]  <b>Example:</b> Switch <b>show flow exporter ExportTest</b>	(Optional) Displays information about NetFlow flow exporters.
Step 15	<b>copy running-config startup-config</b>  <b>Example:</b> Switch# <b>copy running-config</b> <b>startup-config</b>	(Optional) Saves your entries in the configuration file.

### What to Do Next

Define a flow monitor based on the flow record and flow exporter.

### Related Topics

[Exporters](#)

[Example: Configuring a Flow, on page 27](#)

## Creating a Flow Monitor

Perform this required task to create a customized flow monitor.

Each flow monitor has a separate cache assigned to it. Each flow monitor requires a record to define the contents and layout of its cache entries. These record formats can be a user-defined format. An advanced user can create a customized format using the **flow record** command.

### Before You Begin

If you want to use a customized record, you must create the customized record before you can perform this task. If you want to add a flow exporter to the flow monitor for data export, you must create the exporter before you can complete this task.



#### Note

You must use the **no ip flow monitor** command to remove a flow monitor from all of the interfaces to which you have applied it before you can modify the parameters for the **record** command on the flow monitor. For information about the **ip flow monitor** command, refer to the *Cisco IOS Flexible NetFlow Command Reference*.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **flow monitor** *monitor-name*
4. **description** *description*
5. **record** {*record-name*}
6. **cache** {**timeout** {*active*} *seconds* | **type** { **normal** } }
7. Repeat Step 6 as required to finish modifying the cache parameters for this flow monitor.
8. **exporter** *exporter-name*
9. **end**
10. **show flow monitor** [[*name*] *monitor-name* [**cache** [**format** {*csv* | **record** | **table**}]] ]
11. **show running-config flow monitor** *monitor-name*
12. **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Switch> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>flow monitor</b> <i>monitor-name</i>  <b>Example:</b> Switch(config)# flow monitor FLOW-MONITOR-1	Creates a flow monitor and enters Flexible NetFlow flow monitor configuration mode.  • This command also allows you to modify an existing flow monitor.
<b>Step 4</b>	<b>description</b> <i>description</i>  <b>Example:</b> Switch(config-flow-monitor)# description Used for basic ipv4 traffic analysis	(Optional) Creates a description for the flow monitor.
<b>Step 5</b>	<b>record</b> { <i>record-name</i> }	Specifies the record for the flow monitor.
	<b>Example:</b> Switch(config-flow-monitor)# record FLOW-RECORD-1	

	Command or Action	Purpose
<b>Step 6</b>	<p><b>cache</b> {<b>timeout</b> {<b>active</b>} <i>seconds</i>   <b>type</b> { <b>normal</b> } }</p> <p><b>Example:</b></p> <pre>Device(config-flow-monitor)# cache type normal</pre>	<p>(Optional) Modifies the flow monitor cache parameters such as timeout values, number of cache entries, and the cache type.</p> <ul style="list-style-type: none"> <li>• <b>entries</b>—Configures the number of cache entries. Enter a value between 16 and 1048576.</li> <li>• <b>timeout active seconds</b>—Configure the active flow timeout. This defines the granularity of the traffic analysis. The range is from 1 to 604800 seconds. The default is 1800. Typical values are 60 or 300 seconds. See the Configuring Data Export for Cisco IOS Flexible NetFlow with Flow Exporters document for recommended values.</li> <li>• <b>type normal</b>—Configure normal flow removal from the flow cache.</li> </ul> <p><b>Note</b> Although visible in the command line help, the entries keyword and inactive and update timeouts are not supported.</p>
<b>Step 7</b>	Repeat Step 6 as required to finish modifying the cache parameters for this flow monitor.	—
<b>Step 8</b>	<p><b>exporter</b> <i>exporter-name</i></p> <p><b>Example:</b></p> <pre>Switch(config-flow-monitor)# exporter EXPORTER-1</pre>	(Optional) Specifies the name of an exporter that was created previously.
<b>Step 9</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Switch(config-flow-monitor)# end</pre>	Exits Flexible NetFlow flow monitor configuration mode and returns to privileged EXEC mode.
<b>Step 10</b>	<p><b>show flow monitor</b> [[<b>name</b>] <i>monitor-name</i> [<b>cache</b> [<b>format</b> {<b>csv</b>   <b>record</b>   <b>table</b>}]] ]</p> <p><b>Example:</b></p> <pre>Switch# show flow monitor FLOW-MONITOR-2 cache</pre>	(Optional) Displays the status for a Flexible NetFlow flow monitor.
<b>Step 11</b>	<p><b>show running-config flow monitor</b> <i>monitor-name</i></p> <p><b>Example:</b></p> <pre>Switch# show running-config flow monitor FLOW_MONITOR-1</pre>	(Optional) Displays the configuration of the specified flow monitor.

	Command or Action	Purpose
Step 12	<b>copy running-config startup-config</b>  <b>Example:</b> <pre>Switch# copy running-config startup-config</pre>	(Optional) Saves your entries in the configuration file.

## Creating a Flow Sampler

Perform this required task to configure and enable a flow sampler.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **sampler** *sampler-name*
4. **description** *description*
5. **mode** {**random**} **1 out-of** *window-size*
6. **exit**
7. **interface** *type number*
8. **{ip | ipv6} flow monitor** *monitor-name* [[**sampler**] *sampler-name*] **{input | output}**
9. **end**
10. **show sampler sampler-name**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> <pre>Device&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	<b>sampler</b> <i>sampler-name</i>	Creates a sampler and enters sampler configuration mode.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Device(config)# sampler SAMPLER-1</pre>	<ul style="list-style-type: none"> <li>This command also allows you to modify an existing sampler.</li> </ul>
<b>Step 4</b>	<p><b>description</b> <i>description</i></p> <p><b>Example:</b></p> <pre>Device(config-sampler)# description Sample at 50%</pre>	(Optional) Creates a description for the flow sampler.
<b>Step 5</b>	<p><b>mode</b> {random} 1 out-of <i>window-size</i></p> <p><b>Example:</b></p> <pre>Device(config-sampler)# mode random 1 out-of 2</pre>	<p>Specifies the sampler mode and the flow sampler window size.</p> <ul style="list-style-type: none"> <li>The range for the <i>window-size</i> argument is from 2 to 32768.</li> </ul>
<b>Step 6</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Device(config-sampler)# exit</pre>	Exits sampler configuration mode and returns to global configuration mode.
<b>Step 7</b>	<p><b>interface</b> <i>type number</i></p> <p><b>Example:</b></p> <pre>Device(config)# interface GigabitEthernet 0/0/0</pre>	Specifies an interface and enters interface configuration mode.
<b>Step 8</b>	<p>{ip   ipv6} <b>flow monitor</b> <i>monitor-name</i> [[<b>sampler</b> <i>sampler-name</i>] {input   output}]</p> <p><b>Example:</b></p> <pre>Device(config-if)# ip flow monitor FLOW-MONITOR-1 sampler SAMPLER-1 input</pre>	Assigns the flow monitor and the flow sampler that you created to the interface to enable sampling.
<b>Step 9</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Device(config-if)# end</pre>	Exits interface configuration mode and returns to privileged EXEC mode.
<b>Step 10</b>	<p><b>show sampler</b> <i>sampler-name</i></p> <p><b>Example:</b></p> <pre>Device# show sampler SAMPLER-1</pre>	Displays the status and statistics of the flow sampler that you configured and enabled.



## Applying a Flow to an Interface

You can apply a flow monitor and an optional sampler to an interface.

### SUMMARY STEPS

1. **configure terminal**
2. **interface *type***
3. **{ip flow monitor | ipv6 flow monitor} *name* [layer2-switched|multicast|sampler|unicast *name*] { input}**
4. **end**
5. **show flow interface [*interface-type number*]**
6. **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> Switch# <b>configure terminal</b>	Enters the global configuration mode.
<b>Step 2</b>	<b>interface <i>type</i></b>  <b>Example:</b> Switch(config)# <b>interface GigabitEthernet1/0/1</b>	Enters interface configuration mode and configures an interface.  Command parameters for the interface configuration include:  Flexible Net Flow is supported only on the service module 1-Gigabit or 10-Gigabit Ethernet interfaces.  You cannot attach a NetFlow monitor to a port channel interface. If both service module interfaces are part of an EtherChannel, you should attach the monitor to both physical interfaces.
<b>Step 3</b>	<b>{ip flow monitor   ipv6 flow monitor} <i>name</i> [layer2-switched multicast sampler unicast <i>name</i>] { input}</b>  <b>Example:</b> Switch(config-if)# <b>ip flow monitor MonitorTest input</b>	Associate an IPv4 or an IPv6 flow monitor, and an optional sampler to the interface for input or output packets.
<b>Step 4</b>	<b>end</b>  <b>Example:</b> Switch(config-flow-monitor)# <b>end</b>	Returns to privileged EXEC mode.
<b>Step 5</b>	<b>show flow interface [<i>interface-type number</i>]</b>	(Optional) Displays information about NetFlow on an interface.

	Command or Action	Purpose
	<b>Example:</b> Switch# <code>show flow interface</code>	
<b>Step 6</b>	<b>copy running-config startup-config</b>  <b>Example:</b> Switch# <code>copy running-config startup-config</code>	(Optional) Saves your entries in the configuration file.

## Monitoring Flexible NetFlow

The commands in the following table can be used to monitor Flexible NetFlow.

**Table 2: Flexible NetFlow Monitoring Commands**

Command	Purpose
<code>show flow exporter [broker   export-ids   name   name   statistics   templates]</code>	Displays information about NetFlow flow exporters and statistics.
<code>show flow exporter [ name exporter-name]</code>	Displays information about NetFlow flow exporters and statistics.
<code>show flow interface</code>	Displays information about NetFlow interfaces.
<code>show flow monitor [ name exporter-name]</code>	Displays information about NetFlow flow monitors and statistics.
<code>show flow monitor statistics</code>	Displays the statistics for the flow monitor
<code>show flow monitor cache format {table   record   csv}</code>	Displays the contents of the cache for the flow monitor, in the format specified.
<code>show flow record [ name record-name]</code>	Displays information about NetFlow flow records.
<code>show flow ssid</code>	Displays NetFlow monitor installation status for a WLAN.
<code>show sampler [broker   name   name]</code>	Displays information about NetFlow samplers.
<code>show wlan wlan-name</code>	Displays the WLAN configured on the device.

# Configuration Examples for Flexible NetFlow

## Example: Configuring a Flow

This example shows how to create a flow and apply it to an interface:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

Switch(config)# flow export export1
Switch(config-flow-exporter)# destination 10.0.101.254
Switch(config-flow-exporter)# transport udp 2055
Switch(config-flow-exporter)# exit
Switch(config)# flow record record1
Switch(config-flow-record)# match ipv4 source address
Switch(config-flow-record)# match ipv4 destination address
Switch(config-flow-record)# match ipv4 protocol
Switch(config-flow-record)# match transport source-port
Switch(config-flow-record)# match transport destination-port

Switch(config-flow-record)# collect counter byte long
Switch(config-flow-record)# collect counter packet long
Switch(config-flow-record)# collect timestamp absolute first
Switch(config-flow-record)# collect timestamp absolute last
Switch(config-flow-record)# exit
Switch(config)# flow monitor monitor1
Switch(config-flow-monitor)# record record1
Switch(config-flow-monitor)# exporter export1
Switch(config-flow-monitor)# exit
Switch(config)# interface tenGigabitEthernet 1/0/1
Switch(config-if)# ip flow monitor monitor1 input
Switch(config-if)# end
```

### Related Topics

- [Creating a Flow Record](#)
- [Flow Records, on page 4](#)
- [Creating a Flow Exporter, on page 17](#)
- [Exporters](#)
- [Creating a Flow Monitor](#)
- [Monitors](#)

# Additional References

## Related Documents

Related Topic	Document Title
Flexible NetFlow CLI Commands	<i>Flexible NetFlow Command Reference, Cisco IOS XE Release 3SE (Cisco WLC 5700 Series)</i>

## Error Message Decoder

Description	Link
To help you research and resolve system error messages in this release, use the Error Message Decoder tool.	<a href="https://www.cisco.com/cgi-bin/Support/Errordecoder/index.cgi">https://www.cisco.com/cgi-bin/Support/Errordecoder/index.cgi</a>

## Standards and RFCs

Standard/RFC	Title
RFC 3954	Cisco Systems NetFlow Services Export Version 9

## MIBs

MIB	MIBs Link
All supported MIBs for this release.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**Technical Assistance**

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/support">http://www.cisco.com/support</a></p>

