

```
#include <U8glib.h>
```

```
/**
```

```
* Marlin 3D Printer Firmware
```

```
* Copyright (C) 2016 MarlinFirmware [https://github.com/MarlinFirmware/Marlin]
```

```
*
```

```
* Based on Sprinter and grbl.
```

```
* Copyright (C) 2011 Camiel Gubbels / Erik van der Zalm
```

```
*
```

```
* This program is free software: you can redistribute it and/or modify
```

```
* it under the terms of the GNU General Public License as published by
```

```
* the Free Software Foundation, either version 3 of the License, or
```

```
* (at your option) any later version.
```

```
*
```

```
* This program is distributed in the hope that it will be useful,
```

```
* but WITHOUT ANY WARRANTY; without even the implied warranty of
```

```
* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
```

```
* GNU General Public License for more details.
```

```
*
```

```
* You should have received a copy of the GNU General Public License
```

```
* along with this program. If not, see <http://www.gnu.org/licenses/>.
```

```
*
```

```
*/
```

```
/**
```

```
* Configuration.h
```

```
*
```

```
* Basic settings such as:
```

```
*
```

```
* - Type of electronics
```

```
* - Type of temperature sensor
```

* - Printer geometry
* - Endstop configuration
* - LCD controller
* - Extra features
*
* Advanced settings can be found in Configuration_adv.h
*
*/

```
#ifndef CONFIGURATION_H  
#define CONFIGURATION_H  
#define CONFIGURATION_H_VERSION 010107
```

```
//=====   
//===== Getting Started =====   
//=====
```

```
/**  
* Here are some standard links for getting your machine calibrated:  
*  
* http://reprap.org/wiki/Calibration  
* http://youtu.be/wAL9d7FgInk  
* http://calculator.josefprusa.cz  
* http://reprap.org/wiki/Triffid\_Hunter%27s\_Calibration\_Guide  
* http://www.thingiverse.com/thing:5573  
* https://sites.google.com/site/repraplogphase/calibration-of-your-reprap  
* http://www.thingiverse.com/thing:298812  
*/
```

```
//=====   
//===== DELTA Printer =====   
//=====
```

```
// For a Delta printer start with one of the configuration files in the
// example_configurations/delta directory and customize for your machine.
//

//=====
//===== SCARA Printer =====
//=====

// For a SCARA printer start with the configuration files in
// example_configurations/SCARA and customize for your machine.
//

// @section info

// User-specified version info of this build to display in [Pronterface, etc] terminal window during
// startup. Implementation of an idea by Prof Braino to inform user that any changes made to this
// build by the user have been successfully uploaded into firmware.
#define STRING_CONFIG_H_AUTHOR "(none, default config)" // Who made the changes.
#define SHOW_BOOTSCREEN
#define STRING_SPLASH_LINE1 SHORT_BUILD_VERSION // will be shown during bootup in line 1
#define STRING_SPLASH_LINE2 WEBSITE_URL // will be shown during bootup in line 2

//
// *** VENDORS PLEASE READ ****
//
// Marlin now allow you to have a vendor boot image to be displayed on machine
// start. When SHOW_CUSTOM_BOOTSCREEN is defined Marlin will first show your
// custom boot image and then the default Marlin boot image is shown.
//
// We suggest for you to take advantage of this new feature and keep the Marlin
// boot image unmodified. For an example have a look at the bq Hephestos 2
// example configuration folder.
```

```
//  
//#define SHOW_CUSTOM_BOOTSCREEN  
// @section machine  
  
/**  
 * Select which serial port on the board will be used for communication with the host.  
 * This allows the connection of wireless adapters (for instance) to non-default port pins.  
 * Serial port 0 is always used by the Arduino bootloader regardless of this setting.  
 *  
 * :[0, 1, 2, 3, 4, 5, 6, 7]  
 */  
#define SERIAL_PORT 0  
  
/**  
 * This setting determines the communication speed of the printer.  
 *  
 * 250000 works in most cases, but you might try a lower speed if  
 * you commonly experience drop-outs during host printing.  
 * You may try up to 1000000 to speed up SD file transfer.  
 *  
 * :[2400, 9600, 19200, 38400, 57600, 115200, 250000, 500000, 1000000]  
 */  
#define BAUDRATE 115200  
  
// Enable the Bluetooth serial interface on AT90USB devices  
//#define BLUETOOTH  
  
// The following define selects which electronics board you have.  
// Please choose the name from boards.h that matches your setup  
#ifndef MOTHERBOARD  
#define MOTHERBOARD BOARD_RAMPS_14_EFB
```

```
#endif

// Optional custom name for your RepStrap or other custom machine
// Displayed in the LCD "Ready" message
// #define CUSTOM_MACHINE_NAME "3D Printer"

// Define this to set a unique identifier for this printer, (Used by some programs to differentiate
between machines)

// You can use an online service to generate a random UUID. (eg
http://www.uuidgenerator.net/version4)

// #define MACHINE_UUID "00000000-0000-0000-0000-000000000000"

// @section extruder

// This defines the number of extruders
// :[1, 2, 3, 4, 5]
#define EXTRUDERS 1

// Generally expected filament diameter (1.75, 2.85, 3.0, ...). Used for Volumetric, Filament Width
Sensor, etc.
#define DEFAULT_NOMINAL_FILAMENT_DIA 1.75

// For Cyclops or any "multi-extruder" that shares a single nozzle.
// #define SINGLENOZZLE

/**
 * Průša MK2 Single Nozzle Multi-Material Multiplexer, and variants.
 *
 * This device allows one stepper driver on a control board to drive
 * two to eight stepper motors, one at a time, in a manner suitable
 * for extruders.
 *
 */
```

* This option only allows the multiplexer to switch on tool-change.

* Additional options to configure custom E moves are pending.

*/

```
//#define MK2_MULTIPLEXER
```

```
#if ENABLED(MK2_MULTIPLEXER)
```

```
  // Override the default DIO selector pins here, if needed.
```

```
  // Some pins files may provide defaults for these pins.
```

```
  //#define E_MUX0_PIN 40 // Always Required
```

```
  //#define E_MUX1_PIN 42 // Needed for 3 to 8 steppers
```

```
  //#define E_MUX2_PIN 44 // Needed for 5 to 8 steppers
```

```
#endif
```

```
// A dual extruder that uses a single stepper motor
```

```
//#define SWITCHING_EXTRUDER
```

```
#if ENABLED(SWITCHING_EXTRUDER)
```

```
  #define SWITCHING_EXTRUDER_SERVO_NR 0
```

```
  #define SWITCHING_EXTRUDER_SERVO_ANGLES { 0, 90 } // Angles for E0, E1[, E2, E3]
```

```
  #if EXTRUDERS > 3
```

```
    #define SWITCHING_EXTRUDER_E23_SERVO_NR 1
```

```
  #endif
```

```
#endif
```

```
// A dual-nozzle that uses a servomotor to raise/lower one of the nozzles
```

```
//#define SWITCHING_NOZZLE
```

```
#if ENABLED(SWITCHING_NOZZLE)
```

```
  #define SWITCHING_NOZZLE_SERVO_NR 0
```

```
  #define SWITCHING_NOZZLE_SERVO_ANGLES { 0, 90 } // Angles for E0, E1
```

```
  //#define HOTEND_OFFSET_Z { 0.0, 0.0 }
```

```
#endif
```

```
/**
```

```

* Two separate X-carriages with extruders that connect to a moving part
* via a magnetic docking mechanism. Requires SOL1_PIN and SOL2_PIN.
*/

//#define PARKING_EXTRUDER

#if ENABLED(PARKING_EXTRUDER)

  #define PARKING_EXTRUDER_SOLENOIDS_INVERT      // If enabled, the solenoid is NOT
magnetized with applied voltage

  #define PARKING_EXTRUDER_SOLENOIDS_PINS_ACTIVE LOW // LOW or HIGH pin signal energizes
the coil

  #define PARKING_EXTRUDER_SOLENOIDS_DELAY 250    // Delay (ms) for magnetic field. No delay
if 0 or not defined.

  #define PARKING_EXTRUDER_PARKING_X { -78, 184 } // X positions for parking the extruders

  #define PARKING_EXTRUDER_GRAB_DISTANCE 1        // mm to move beyond the parking point to
grab the extruder

  #define PARKING_EXTRUDER_SECURITY_RAISE 5       // Z-raise before parking

  #define HOTEND_OFFSET_Z { 0.0, 1.3 }           // Z-offsets of the two hotends. The first must be 0.

#endif

/**
 * "Mixing Extruder"
 * - Adds a new code, M165, to set the current mix factors.
 * - Extends the stepping routines to move multiple steppers in proportion to the mix.
 * - Optional support for Repetier Firmware M163, M164, and virtual extruder.
 * - This implementation supports only a single extruder.
 * - Enable DIRECT_MIXING_IN_G1 for Pia Taubert's reference implementation
 */

//#define MIXING_EXTRUDER

#if ENABLED(MIXING_EXTRUDER)

  #define MIXING_STEPPERS 2    // Number of steppers in your mixing extruder

  #define MIXING_VIRTUAL_TOOLS 16 // Use the Virtual Tool method with M163 and M164

  // #define DIRECT_MIXING_IN_G1 // Allow ABCDHI mix factors in G1 movement commands

#endif

```

```

// Offset of the extruders (uncomment if using more than one and relying on firmware to position
when changing).

// The offset has to be X=0, Y=0 for the extruder 0 hotend (default extruder).

// For the other hotends it is their distance from the extruder 0 hotend.

//#define HOTEND_OFFSET_X {0.0, 20.00} // (in mm) for each extruder, offset of the hotend on the X
axis

//#define HOTEND_OFFSET_Y {0.0, 5.00} // (in mm) for each extruder, offset of the hotend on the Y
axis

// @section machine

/**
 * Select your power supply here. Use 0 if you haven't connected the PS_ON_PIN
 *
 * 0 = No Power Switch
 * 1 = ATX
 * 2 = X-Box 360 203Watts (the blue wire connected to PS_ON and the red wire to VCC)
 *
 * :{ 0:'No power switch', 1:'ATX', 2:'X-Box 360' }
 */
#define POWER_SUPPLY 0

#if POWER_SUPPLY > 0
// Enable this option to leave the PSU off at startup.

// Power to steppers and heaters will need to be turned on with M80.

//#define PS_DEFAULT_OFF
#endif

// @section temperature

//=====

```


//===== Thermal Settings =====

//=====

/**

* --NORMAL IS 4.7kohm PULLUP!-- 1kohm pullup can be used on hotend sensor, using correct resistor and table

*

* Temperature sensors available:

*

* -3 : thermocouple with MAX31855 (only for sensor 0)

* -2 : thermocouple with MAX6675 (only for sensor 0)

* -1 : thermocouple with AD595

* 0 : not used

* 1 : 100k thermistor - best choice for EPCOS 100k (4.7k pullup)

* 2 : 200k thermistor - ATC Semitec 204GT-2 (4.7k pullup)

* 3 : Mendel-parts thermistor (4.7k pullup)

* 4 : 10k thermistor !! do not use it for a hotend. It gives bad resolution at high temp. !!

* 5 : 100K thermistor - ATC Semitec 104GT-2 (Used in ParCan & J-Head) (4.7k pullup)

* 6 : 100k EPCOS - Not as accurate as table 1 (created using a fluke thermocouple) (4.7k pullup)

* 7 : 100k Honeywell thermistor 135-104LAG-J01 (4.7k pullup)

* 71 : 100k Honeywell thermistor 135-104LAF-J01 (4.7k pullup)

* 8 : 100k 0603 SMD Vishay NTCS0603E3104FXT (4.7k pullup)

* 9 : 100k GE Sensing AL03006-58.2K-97-G1 (4.7k pullup)

* 10 : 100k RS thermistor 198-961 (4.7k pullup)

* 11 : 100k beta 3950 1% thermistor (4.7k pullup)

* 12 : 100k 0603 SMD Vishay NTCS0603E3104FXT (4.7k pullup) (calibrated for Makibox hot bed)

* 13 : 100k Hisens 3950 1% up to 300°C for hotend "Simple ONE " & "Hotend "All In ONE"

* 20 : the PT100 circuit found in the Ultimainboard V2.x

* 60 : 100k Maker's Tool Works Kapton Bed Thermistor beta=3950

* 66 : 4.7M High Temperature thermistor from Dyze Design

* 70 : the 100K thermistor found in the bq Hephestos 2

- * 75 : 100k Generic Silicon Heat Pad with NTC 100K MGB18-104F39050L32 thermistor
- *
- * 1k ohm pullup tables - This is atypical, and requires changing out the 4.7k pullup for 1k.
- * (but gives greater accuracy and more stable PID)
- * 51 : 100k thermistor - EPCOS (1k pullup)
- * 52 : 200k thermistor - ATC Semitec 204GT-2 (1k pullup)
- * 55 : 100k thermistor - ATC Semitec 104GT-2 (Used in ParCan & J-Head) (1k pullup)
- *
- * 1047 : Pt1000 with 4k7 pullup
- * 1010 : Pt1000 with 1k pullup (non standard)
- * 147 : Pt100 with 4k7 pullup
- * 110 : Pt100 with 1k pullup (non standard)
- *
- * Use these for Testing or Development purposes. NEVER for production machine.
- * 998 : Dummy Table that ALWAYS reads 25°C or the temperature defined below.
- * 999 : Dummy Table that ALWAYS reads 100°C or the temperature defined below.
- *
- * :{ '0': "Not used", '1':"100k / 4.7k - EPCOS", '2':"200k / 4.7k - ATC Semitec 204GT-2", '3':"Mendel-
parts / 4.7k", '4':"10k !! do not use for a hotend. Bad resolution at high temp. !!", '5':"100K / 4.7k -
ATC Semitec 104GT-2 (Used in ParCan & J-Head)", '6':"100k / 4.7k EPCOS - Not as accurate as Table
1", '7':"100k / 4.7k Honeywell 135-104LAG-J01", '8':"100k / 4.7k 0603 SMD Vishay
NTCS0603E3104FXT", '9':"100k / 4.7k GE Sensing AL03006-58.2K-97-G1", '10':"100k / 4.7k RS 198-
961", '11':"100k / 4.7k beta 3950 1%", '12':"100k / 4.7k 0603 SMD Vishay NTCS0603E3104FXT
(calibrated for Makibox hot bed)", '13':"100k Hisens 3950 1% up to 300°C for hotend 'Simple ONE ' &
hotend 'All In ONE'", '20':"PT100 (Ultimainboard V2.x)", '51':"100k / 1k - EPCOS", '52':"200k / 1k - ATC
Semitec 204GT-2", '55':"100k / 1k - ATC Semitec 104GT-2 (Used in ParCan & J-Head)", '60':"100k
Maker's Tool Works Kapton Bed Thermistor beta=3950", '66':"Dyze Design 4.7M High Temperature
thermistor", '70':"the 100K thermistor found in the bq Hephestos 2", '71':"100k / 4.7k Honeywell
135-104LAF-J01", '147':"Pt100 / 4.7k", '1047':"Pt1000 / 4.7k", '110':"Pt100 / 1k (non-standard)",
'1010':"Pt1000 / 1k (non standard)", '-3':"Thermocouple + MAX31855 (only for sensor 0)", '-
2':"Thermocouple + MAX6675 (only for sensor 0)", '-1':"Thermocouple + AD595", '998':"Dummy 1",
'999':"Dummy 2" }
- */
- #define TEMP_SENSOR_0 1
- #define TEMP_SENSOR_1 0
- #define TEMP_SENSOR_2 0

```

#define TEMP_SENSOR_3 0

#define TEMP_SENSOR_4 0

#define TEMP_SENSOR_BED 0

// Dummy thermistor constant temperature readings, for use with 998 and 999
#define DUMMY_THERMISTOR_998_VALUE 25
#define DUMMY_THERMISTOR_999_VALUE 100

// Use temp sensor 1 as a redundant sensor with sensor 0. If the readings
// from the two sensors differ too much the print will be aborted.
// #define TEMP_SENSOR_1_AS_REDUNDANT
#define MAX_REDUNDANT_TEMP_SENSOR_DIFF 10

// Extruder temperature must be close to target for this long before M109 returns success
#define TEMP_RESIDENCY_TIME 10 // (seconds)
#define TEMP_HYSTERESIS 3 // (degC) range of +/- temperatures considered "close" to the target one
#define TEMP_WINDOW 1 // (degC) Window around target to start the residency timer x degC early.

// Bed temperature must be close to target for this long before M190 returns success
#define TEMP_BED_RESIDENCY_TIME 10 // (seconds)
#define TEMP_BED_HYSTERESIS 3 // (degC) range of +/- temperatures considered "close" to the target one
#define TEMP_BED_WINDOW 1 // (degC) Window around target to start the residency timer x degC early.

// The minimal temperature defines the temperature below which the heater will not be enabled It is used
// to check that the wiring to the thermistor is not broken.
// Otherwise this would lead to the heater being powered on all the time.
#define HEATER_0_MINTEMP 5
#define HEATER_1_MINTEMP 5

```

```

#define HEATER_2_MINTEMP 5

#define HEATER_3_MINTEMP 5

#define HEATER_4_MINTEMP 5

#define BED_MINTEMP 5

// When temperature exceeds max temp, your heater will be switched off.

// This feature exists to protect your hotend from overheating accidentally, but *NOT* from
thermistor short/failure!

// You should use MINTEMP for thermistor short/failure protection.

#define HEATER_0_MAXTEMP 230

#define HEATER_1_MAXTEMP 230

#define HEATER_2_MAXTEMP 230

#define HEATER_3_MAXTEMP 230

#define HEATER_4_MAXTEMP 230

#define BED_MAXTEMP 120

//=====
//===== PID Settings =====
//=====

// PID Tuning Guide here: http://reprap.org/wiki/PID\_Tuning

// Comment the following line to disable PID and enable bang-bang.
#define PIDTEMP

#define BANG_MAX 255 // Limits current to nozzle while in bang-bang mode; 255=full current

#define PID_MAX BANG_MAX // Limits current to nozzle while PID is active (see
PID_FUNCTIONAL_RANGE below); 255=full current

#define PID_K1 0.95 // Smoothing factor within the PID

#if ENABLED(PIDTEMP)

  //#define PID_AUTOTUNE_MENU // Add PID Autotune to the LCD "Temperature" menu to run
M303 and apply the result.

  //#define PID_DEBUG // Sends debug data to the serial port.

```

```

    //#define PID_OPENLOOP 1 // Puts PID in open loop. M104/M140 sets the output power from 0 to
PID_MAX

    //#define SLOW_PWM_HEATERS // PWM with very low frequency (roughly 0.125Hz=8s) and
minimum state time of approximately 1s useful for heaters driven by a relay

    //#define PID_PARAMS_PER_HOTEND // Uses separate PID parameters for each extruder (useful for
mismatched extruders)

        // Set/get with gcode: M301 E[extruder number, 0-2]

    #define PID_FUNCTIONAL_RANGE 10 // If the temperature difference between the target
temperature and the actual temperature

        // is more than PID_FUNCTIONAL_RANGE then the PID will be shut off and the
heater will be set to min/max.

// If you are using a pre-configured hotend then you can use one of the value sets by uncommenting
it

// Ultimaker
#define DEFAULT_Kp 22.2
#define DEFAULT_Ki 1.08
#define DEFAULT_Kd 114

// MakerGear
//#define DEFAULT_Kp 7.0
//#define DEFAULT_Ki 0.1
//#define DEFAULT_Kd 12

// Mendel Parts V9 on 12V
//#define DEFAULT_Kp 63.0
//#define DEFAULT_Ki 2.25
//#define DEFAULT_Kd 440

#endif // PIDTEMP

//=====

```

```

//===== PID > Bed Temperature Control =====
//=====
// Select PID or bang-bang with PIDTEMPBED. If bang-bang, BED_LIMIT_SWITCHING will enable
hysteresis
//
// Uncomment this to enable PID on the bed. It uses the same frequency PWM as the extruder.
// If your PID_dT is the default, and correct for your hardware/configuration, that means 7.689Hz,
// which is fine for driving a square wave into a resistive load and does not significantly impact you
FET heating.
// This also works fine on a Fotek SSR-10DA Solid State Relay into a 250W heater.
// If your configuration is significantly different than this and you don't understand the issues
involved, you probably
// shouldn't use bed PID until someone else verifies your hardware works.
// If this is enabled, find your own PID constants below.
#define PIDTEMPBED

//define BED_LIMIT_SWITCHING

// This sets the max power delivered to the bed, and replaces the
HEATER_BED_DUTY_CYCLE_DIVIDER option.
// all forms of bed control obey this (PID, bang-bang, bang-bang with hysteresis)
// setting this to anything other than 255 enables a form of PWM to the bed just like
HEATER_BED_DUTY_CYCLE_DIVIDER did,
// so you shouldn't use it unless you are OK with PWM on your bed. (see the comment on enabling
PIDTEMPBED)
#define MAX_BED_POWER 255 // limits duty cycle to bed; 255=full current

#if ENABLED(PIDTEMPBED)

//define PID_BED_DEBUG // Sends debug data to the serial port.

//120V 250W silicone heater into 4mm borosilicate (MendelMax 1.5+)
//from FOPDT model - kp=.39 Tp=405 Tdead=66, Tc set to 79.2, aggressive factor of .15 (vs .1, 1, 10)

```

```

#define DEFAULT_bedKp 10.00
#define DEFAULT_bedKi .023
#define DEFAULT_bedKd 305.4

//120V 250W silicone heater into 4mm borosilicate (MendelMax 1.5+)
//from pidautotune
//#define DEFAULT_bedKp 97.1
//#define DEFAULT_bedKi 1.41
//#define DEFAULT_bedKd 1675.16

// FIND YOUR OWN: "M303 E-1 C8 S90" to run autotune on the bed at 90 degreesC for 8 cycles.
#endif // PIDTEMPBED

// @section extruder

// This option prevents extrusion if the temperature is below EXTRUDE_MINTEMP.
// It also enables the M302 command to set the minimum extrusion temperature
// or to allow moving the extruder regardless of the hotend temperature.
// *** IT IS HIGHLY RECOMMENDED TO LEAVE THIS OPTION ENABLED! ***
#define PREVENT_COLD_EXTRUSION
#define EXTRUDE_MINTEMP 170

// This option prevents a single extrusion longer than EXTRUDE_MAXLENGTH.
// Note that for Bowden Extruders a too-small value here may prevent loading.
#define PREVENT_LENGTHY_EXTRUDE
#define EXTRUDE_MAXLENGTH 200

//=====
//===== Thermal Runaway Protection =====
//=====

```

```
/**
```

```
* Thermal Protection provides additional protection to your printer from damage  
* and fire. Marlin always includes safe min and max temperature ranges which  
* protect against a broken or disconnected thermistor wire.
```

```
*
```

```
* The issue: If a thermistor falls out, it will report the much lower  
* temperature of the air in the room, and the the firmware will keep  
* the heater on.
```

```
*
```

```
* If you get "Thermal Runaway" or "Heating failed" errors the  
* details can be tuned in Configuration_adv.h
```

```
*/
```

```
#define THERMAL_PROTECTION_HOTENDS // Enable thermal protection for all extruders
```

```
#define THERMAL_PROTECTION_BED // Enable thermal protection for the heated bed
```

```
//=====
```

```
//===== Mechanical Settings =====
```

```
//=====
```

```
// @section machine
```

```
// Uncomment one of these options to enable CoreXY, CoreXZ, or CoreYZ kinematics
```

```
// either in the usual order or reversed
```

```
//#define COREXY
```

```
//#define COREXZ
```

```
//#define COREYZ
```

```
//#define COREYX
```

```
//#define COREZX
```

```
//#define COREZY
```



```

//=====
//===== Endstop Settings =====
//=====

// @section homing

// Specify here all the endstop connectors that are connected to any endstop or probe.
// Almost all printers will be using one per axis. Probes will use one or more of the
// extra connectors. Leave undefined any used for non-endstop and non-probe purposes.
#define USE_XMIN_PLUG
#define USE_YMIN_PLUG
#define USE_ZMIN_PLUG
//#define USE_XMAX_PLUG
//#define USE_YMAX_PLUG
//#define USE_ZMAX_PLUG

// coarse Endstop Settings

#define ENDSTOPPULLUPS // Comment this out (using // at the start of the line) to disable the
endstop pullup resistors

#if DISABLED(ENDSTOPPULLUPS)
// fine endstop settings: Individual pullups. will be ignored if ENDSTOPPULLUPS is defined
//#define ENDSTOPPULLUP_XMAX
//#define ENDSTOPPULLUP_YMAX
//#define ENDSTOPPULLUP_ZMAX
//#define ENDSTOPPULLUP_XMIN
//#define ENDSTOPPULLUP_YMIN
//#define ENDSTOPPULLUP_ZMIN
//#define ENDSTOPPULLUP_ZMIN_PROBE
#endif

```

```
// Mechanical endstop with COM to ground and NC to Signal uses "false" here (most common setup).
#define X_MIN_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define Y_MIN_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define Z_MIN_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define X_MAX_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define Y_MAX_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define Z_MAX_ENDSTOP_INVERTING false // set to true to invert the logic of the endstop.
#define Z_MIN_PROBE_ENDSTOP_INVERTING false // set to true to invert the logic of the probe.
```

```
// Enable this feature if all enabled endstop pins are interrupt-capable.
```

```
// This will remove the need to poll the interrupt pins, saving many CPU cycles.
```

```
//#define ENDSTOP_INTERRUPTS_FEATURE
```

```
//=====
```

```
//===== Movement Settings =====
```

```
//=====
```

```
// @section motion
```

```
/**
```

```
 * Default Settings
```

```
 *
```

```
 * These settings can be reset by M502
```

```
 *
```

```
 * Note that if EEPROM is enabled, saved values will override these.
```

```
 */
```

```
/**
```

```
 * With this option each E stepper can have its own factors for the
```

```
 * following movement settings. If fewer factors are given than the
```

```
 * total number of extruders, the last value applies to the rest.
```

```
 */
```

```
//#define DISTINCT_E_FACTORS
```

```
/**
```

```
* Default Axis Steps Per Unit (steps/mm)
```

```
* Override with M92
```

```
*           X, Y, Z, E0 [, E1[, E2[, E3[, E4]]]]
```

```
*/
```

```
#define DEFAULT_AXIS_STEPS_PER_UNIT { 100, 100, 400, 125 }
```

```
/**
```

```
* Default Max Feed Rate (mm/s)
```

```
* Override with M203
```

```
*           X, Y, Z, E0 [, E1[, E2[, E3[, E4]]]]
```

```
*/
```

```
#define DEFAULT_MAX_FEEDRATE      { 300, 300, 5, 100 }
```

```
/**
```

```
* Default Max Acceleration (change/s) change = mm/s
```

```
* (Maximum start speed for accelerated moves)
```

```
* Override with M201
```

```
*           X, Y, Z, E0 [, E1[, E2[, E3[, E4]]]]
```

```
*/
```

```
#define DEFAULT_MAX_ACCELERATION  { 3000, 3000, 100, 10000 }
```

```
/**
```

```
* Default Acceleration (change/s) change = mm/s
```

```
* Override with M204
```

```
*
```

```
* M204 P Acceleration
```

```
* M204 R Retract Acceleration
```

```
* M204 T Travel Acceleration
```

```

*/
#define DEFAULT_ACCELERATION      3000 // X, Y, Z and E acceleration for printing moves
#define DEFAULT_RETRACT_ACCELERATION 3000 // E acceleration for retracts
#define DEFAULT_TRAVEL_ACCELERATION 3000 // X, Y, Z acceleration for travel (non printing)
moves

/**
 * Default Jerk (mm/s)
 * Override with M205 X Y Z E
 *
 * "Jerk" specifies the minimum speed change that requires acceleration.
 * When changing speed and direction, if the difference is less than the
 * value set here, it may happen instantaneously.
 */
#define DEFAULT_XJERK          10.0
#define DEFAULT_YJERK          10.0
#define DEFAULT_ZJERK           0.3
#define DEFAULT_EJERK           5.0

//=====
//===== Z Probe Options =====
//=====

// @section probes

//
// See http://marlinfw.org/docs/configuration/probes.html
//

/**
 * Z_MIN_PROBE_USES_Z_MIN_ENDSTOP_PIN
 *

```

* Enable this option for a probe connected to the Z Min endstop pin.

*/

```
#define Z_MIN_PROBE_USES_Z_MIN_ENDSTOP_PIN
```

```
/**
```

```
* Z_MIN_PROBE_ENDSTOP
```

```
*
```

* Enable this option for a probe connected to any pin except Z-Min.

* (By default Marlin assumes the Z-Max endstop pin.)

* To use a custom Z Probe pin, set Z_MIN_PROBE_PIN below.

```
*
```

* - The simplest option is to use a free endstop connector.

* - Use 5V for powered (usually inductive) sensors.

```
*
```

* - RAMPS 1.3/1.4 boards may use the 5V, GND, and Aux4->D32 pin:

* - For simple switches connect...

* - normally-closed switches to GND and D32.

* - normally-open switches to 5V and D32.

```
*
```

* WARNING: Setting the wrong pin may have unexpected and potentially

* disastrous consequences. Use with caution and do your homework.

```
*
```

```
*/
```

```
//#define Z_MIN_PROBE_ENDSTOP
```

```
/**
```

```
* Probe Type
```

```
*
```

* Allen Key Probes, Servo Probes, Z-Sled Probes, FIX_MOUNTED_PROBE, etc.

* Activate one of these to use Auto Bed Leveling below.

```
*/
```

```
/**
 * The "Manual Probe" provides a means to do "Auto" Bed Leveling without a probe.
 * Use G29 repeatedly, adjusting the Z height at each point with movement commands
 * or (with LCD_BED_LEVELING) the LCD controller.
 */
//#define PROBE_MANUALLY
```

```
/**
 * A Fix-Mounted Probe either doesn't deploy or needs manual deployment.
 * (e.g., an inductive probe or a nozzle-based probe-switch.)
 */
//#define FIX_MOUNTED_PROBE
```

```
/**
 * Z Servo Probe, such as an endstop switch on a rotating arm.
 */
//#define Z_ENDSTOP_SERVO_NR 0 // Defaults to SERVO 0 connector.
//#define Z_SERVO_ANGLES {70,0} // Z Servo Deploy and Stow angles
```

```
/**
 * The BLTouch probe uses a Hall effect sensor and emulates a servo.
 */
//#define BLTOUCH
#if ENABLED(BLTOUCH)
  // #define BLTOUCH_DELAY 375 // (ms) Enable and increase if needed
#endif
```

```
/**
 * Enable one or more of the following if probing seems unreliable.
 * Heaters and/or fans can be disabled during probing to minimize electrical
```

```

* noise. A delay can also be added to allow noise and vibration to settle.
* These options are most useful for the BLTouch probe, but may also improve
* readings with inductive probes and piezo sensors.
*/
//#define PROBING_HEATERS_OFF    // Turn heaters off when probing
//#define PROBING_FANS_OFF      // Turn fans off when probing
//#define DELAY_BEFORE_PROBING 200 // (ms) To prevent vibrations from triggering piezo sensors

// A probe that is deployed and stowed with a solenoid pin (SOL1_PIN)
//#define SOLENOID_PROBE

// A sled-mounted probe like those designed by Charles Bell.
//#define Z_PROBE_SLED
//#define SLED_DOCKING_OFFSET 5 // The extra distance the X axis must travel to pickup the sled. 0
should be fine but you can push it further if you'd like.

//
// For Z_PROBE_ALLEN_KEY see the Delta example configurations.
//

/**
* Z Probe to nozzle (X,Y) offset, relative to (0, 0).
* X and Y offsets must be integers.
*
* In the following example the X and Y offsets are both positive:
* #define X_PROBE_OFFSET_FROM_EXTRUDER 10
* #define Y_PROBE_OFFSET_FROM_EXTRUDER 10
*
* +-- BACK ---+
* |      |
* L |  (+) P  | R <-- probe (20,20)

```

```

* E |      | I
* F | (-) N (+) | G <-- nozzle (10,10)
* T |      | H
*   | (-)   | T
*   |      |
*   O-- FRONT --+
*   (0,0)
*/

#define X_PROBE_OFFSET_FROM_EXTRUDER 10 // X offset: -left +right [of the nozzle]
#define Y_PROBE_OFFSET_FROM_EXTRUDER 10 // Y offset: -front +behind [the nozzle]
#define Z_PROBE_OFFSET_FROM_EXTRUDER 0 // Z offset: -below +above [the nozzle]

// X and Y axis travel speed (mm/m) between probes
#define XY_PROBE_SPEED 8000

// Speed for the first approach when double-probing (MULTIPLE_PROBING == 2)
#define Z_PROBE_SPEED_FAST HOMING_FEEDRATE_Z

// Speed for the "accurate" probe of each point
#define Z_PROBE_SPEED_SLOW (Z_PROBE_SPEED_FAST / 2)

// The number of probes to perform at each point.
// Set to 2 for a fast/slow probe, using the second probe result.
// Set to 3 or more for slow probes, averaging the results.
// #define MULTIPLE_PROBING 2

/**
 * Z probes require clearance when deploying, stowing, and moving between
 * probe points to avoid hitting the bed and other hardware.
 * Servo-mounted probes require extra space for the arm to rotate.
 * Inductive probes need space to keep from triggering early.

```


*

- * Use these settings to specify the distance (mm) to raise the probe (or
- * lower the bed). The values set here apply over and above any (negative)
- * probe Z Offset set with Z_PROBE_OFFSET_FROM_EXTRUDER, M851, or the LCD.
- * Only integer values ≥ 1 are valid here.

*

- * Example: `M851 Z-5` with a CLEARANCE of 4 => 9mm from bed to nozzle.
- * But: `M851 Z+1` with a CLEARANCE of 2 => 2mm from bed to nozzle.

*/

```
#define Z_CLEARANCE_DEPLOY_PROBE 10 // Z Clearance for Deploy/Stow
#define Z_CLEARANCE_BETWEEN_PROBES 5 // Z Clearance between probe points
```

```
// For M851 give a range for adjusting the Z probe offset
```

```
#define Z_PROBE_OFFSET_RANGE_MIN -20
```

```
#define Z_PROBE_OFFSET_RANGE_MAX 20
```

```
// Enable the M48 repeatability test to test probe accuracy
```

```
// #define Z_MIN_PROBE_REPEATABILITY_TEST
```

```
// For Inverting Stepper Enable Pins (Active Low) use 0, Non Inverting (Active High) use 1
```

```
// :{ 0:'Low', 1:'High' }
```

```
#define X_ENABLE_ON 0
```

```
#define Y_ENABLE_ON 0
```

```
#define Z_ENABLE_ON 0
```

```
#define E_ENABLE_ON 0 // For all extruders
```

```
// Disables axis stepper immediately when it's not being used.
```

```
// WARNING: When motors turn off there is a chance of losing position accuracy!
```

```
#define DISABLE_X false
```

```
#define DISABLE_Y false
```

```
#define DISABLE_Z false
```

```
// Warn on display about possibly reduced accuracy
// #define DISABLE_REDUCED_ACCURACY_WARNING

// @section extruder

#define DISABLE_E false // For all extruders
#define DISABLE_INACTIVE_EXTRUDER true // Keep only the active extruder enabled.

// @section machine

// Invert the stepper direction. Change (or reverse the motor connector) if an axis goes the wrong way.
#define INVERT_X_DIR false
#define INVERT_Y_DIR true
#define INVERT_Z_DIR false

// Enable this option for Toshiba stepper drivers
// #define CONFIG_STEPPERS_TOSHIBA

// @section extruder

// For direct drive extruder v9 set to true, for geared extruder set to false.
#define INVERT_E0_DIR false
#define INVERT_E1_DIR false
#define INVERT_E2_DIR false
#define INVERT_E3_DIR false
#define INVERT_E4_DIR false

// @section homing

// #define NO_MOTION_BEFORE_HOMING // Inhibit movement until all axes have been homed
```

```
//#define Z_HOMING_HEIGHT 4 // (in mm) Minimal z height before homing (G28) for Z clearance above the bed, clamps, ...
```

```
// Be sure you have this distance over your Z_MAX_POS in case.
```

```
// Direction of endstops when homing; 1=MAX, -1=MIN
```

```
// :[-1,1]
```

```
#define X_HOME_DIR -1
```

```
#define Y_HOME_DIR -1
```

```
#define Z_HOME_DIR -1
```

```
// @section machine
```

```
// The size of the print bed
```

```
#define X_BED_SIZE 300
```

```
#define Y_BED_SIZE 300
```

```
// Travel limits (mm) after homing, corresponding to endstop positions.
```

```
#define X_MIN_POS 0
```

```
#define Y_MIN_POS 0
```

```
#define Z_MIN_POS 0
```

```
#define X_MAX_POS X_BED_SIZE
```

```
#define Y_MAX_POS Y_BED_SIZE
```

```
#define Z_MAX_POS 300
```

```
/**
```

```
* Software Endstops
```

```
*
```

```
* - Prevent moves outside the set machine bounds.
```

```
* - Individual axes can be disabled, if desired.
```

```
* - X and Y only apply to Cartesian robots.
```

* - Use 'M211' to set software endstops on/off or report current state

*/

// Min software endstops curtail movement below minimum coordinate bounds

#define MIN_SOFTWARE_ENDSTOPS

#if ENABLED(MIN_SOFTWARE_ENDSTOPS)

 #define MIN_SOFTWARE_ENDSTOP_X

 #define MIN_SOFTWARE_ENDSTOP_Y

 #define MIN_SOFTWARE_ENDSTOP_Z

#endif

// Max software endstops curtail movement above maximum coordinate bounds

#define MAX_SOFTWARE_ENDSTOPS

#if ENABLED(MAX_SOFTWARE_ENDSTOPS)

 #define MAX_SOFTWARE_ENDSTOP_X

 #define MAX_SOFTWARE_ENDSTOP_Y

 #define MAX_SOFTWARE_ENDSTOP_Z

#endif

/**

* Filament Runout Sensor

* A mechanical or opto endstop is used to check for the presence of filament.

*

* RAMPS-based boards use SERVO3_PIN.

* For other boards you may need to define FIL_RUNOUT_PIN.

* By default the firmware assumes HIGH = has filament, LOW = ran out

*/

//#define FILAMENT_RUNOUT_SENSOR

#if ENABLED(FILAMENT_RUNOUT_SENSOR)

 #define FIL_RUNOUT_INVERTING false // set to true to invert the logic of the sensor.

```
#define ENDSTOPPULLUP_FIL_RUNOUT // Uncomment to use internal pullup for filament runout pins if the sensor is defined.
```

```
#define FILAMENT_RUNOUT_SCRIPT "M600"
```

```
#endif
```

```
//=====
```

```
//===== Bed Leveling =====
```

```
//=====
```

```
// @section calibrate
```

```
/**
```

```
* Choose one of the options below to enable G29 Bed Leveling. The parameters
```

```
* and behavior of G29 will change depending on your selection.
```

```
*
```

```
* If using a Probe for Z Homing, enable Z_SAFE_HOMING also!
```

```
*
```

```
* - AUTO_BED_LEVELING_3POINT
```

```
* Probe 3 arbitrary points on the bed (that aren't collinear)
```

```
* You specify the XY coordinates of all 3 points.
```

```
* The result is a single tilted plane. Best for a flat bed.
```

```
*
```

```
* - AUTO_BED_LEVELING_LINEAR
```

```
* Probe several points in a grid.
```

```
* You specify the rectangle and the density of sample points.
```

```
* The result is a single tilted plane. Best for a flat bed.
```

```
*
```

```
* - AUTO_BED_LEVELING_BILINEAR
```

```
* Probe several points in a grid.
```

```
* You specify the rectangle and the density of sample points.
```

```
* The result is a mesh, best for large or uneven beds.
```

```
*
```

```

* - AUTO_BED_LEVELING_UBL (Unified Bed Leveling)
* A comprehensive bed leveling system combining the features and benefits
* of other systems. UBL also includes integrated Mesh Generation, Mesh
* Validation and Mesh Editing systems.
*
* - MESH_BED_LEVELING
* Probe a grid manually
* The result is a mesh, suitable for large or uneven beds. (See BILINEAR.)
* For machines without a probe, Mesh Bed Leveling provides a method to perform
* leveling in steps so you can manually adjust the Z height at each grid-point.
* With an LCD controller the process is guided step-by-step.
*/
//#define AUTO_BED_LEVELING_3POINT
//#define AUTO_BED_LEVELING_LINEAR
//#define AUTO_BED_LEVELING_BILINEAR
//#define AUTO_BED_LEVELING_UBL
//#define MESH_BED_LEVELING

/**
* Enable detailed logging of G28, G29, M48, etc.
* Turn on with the command 'M111 S32'.
* NOTE: Requires a lot of PROGMEM!
*/
//#define DEBUG_LEVELING_FEATURE

#if ENABLED(MESH_BED_LEVELING) || ENABLED(AUTO_BED_LEVELING_BILINEAR) ||
ENABLED(AUTO_BED_LEVELING_UBL)

// Gradually reduce leveling correction until a set height is reached,
// at which point movement will be level to the machine's XY plane.
// The height can be set with M420 Z<height>
#define ENABLE_LEVELING_FADE_HEIGHT

```

```

// For Cartesian machines, instead of dividing moves on mesh boundaries,
// split up moves into short segments like a Delta. This follows the
// contours of the bed more closely than edge-to-edge straight moves.
#define SEGMENT_LEVELLED_MOVES
#define LEVELLED_SEGMENT_LENGTH 5.0 // (mm) Length of all segments (except the last one)

/**
 * Enable the G26 Mesh Validation Pattern tool.
 */
#define G26_MESH_VALIDATION // Enable G26 mesh validation
#if ENABLED(G26_MESH_VALIDATION)
  #define MESH_TEST_NOZZLE_SIZE 0.4 // (mm) Diameter of primary nozzle.
  #define MESH_TEST_LAYER_HEIGHT 0.2 // (mm) Default layer height for the G26 Mesh
  Validation Tool.
  #define MESH_TEST_HOTEND_TEMP 205.0 // (°C) Default nozzle temperature for the G26 Mesh
  Validation Tool.
  #define MESH_TEST_BED_TEMP 60.0 // (°C) Default bed temperature for the G26 Mesh
  Validation Tool.
#endif

#endif

#if ENABLED(AUTO_BED_LEVELING_LINEAR) || ENABLED(AUTO_BED_LEVELING_BILINEAR)

// Set the number of grid points per dimension.
#define GRID_MAX_POINTS_X 3
#define GRID_MAX_POINTS_Y GRID_MAX_POINTS_X

// Set the boundaries for probing (where the probe can reach).
#define LEFT_PROBE_BED_POSITION 15
#define RIGHT_PROBE_BED_POSITION 170

```

```

#define FRONT_PROBE_BED_POSITION 20

#define BACK_PROBE_BED_POSITION 170

// The Z probe minimum outer margin (to validate G29 parameters).
#define MIN_PROBE_EDGE 10

// Probe along the Y axis, advancing X after each column
// #define PROBE_Y_FIRST

#if ENABLED(AUTO_BED_LEVELING_BILINEAR)

// Beyond the probed grid, continue the implied tilt?
// Default is to maintain the height of the nearest edge.
// #define EXTRAPOLATE_BEYOND_GRID

//
// Experimental Subdivision of the grid by Catmull-Rom method.
// Synthesizes intermediate points to produce a more detailed mesh.
//
// #define ABL_BILINEAR_SUBDIVISION
#if ENABLED(ABL_BILINEAR_SUBDIVISION)
// Number of subdivisions between probe points
#define BILINEAR_SUBDIVISIONS 3
#endif

#endif

#elif ENABLED(AUTO_BED_LEVELING_3POINT)

// 3 arbitrary points to probe.
// A simple cross-product is used to estimate the plane of the bed.

```



```

#define ABL_PROBE_PT_1_X 15
#define ABL_PROBE_PT_1_Y 180
#define ABL_PROBE_PT_2_X 15
#define ABL_PROBE_PT_2_Y 20
#define ABL_PROBE_PT_3_X 170
#define ABL_PROBE_PT_3_Y 20

#elif ENABLED(AUTO_BED_LEVELING_UBL)

//=====
//===== Unified Bed Leveling =====
//=====

//#define MESH_EDIT_GFX_OVERLAY // Display a graphics overlay while editing the mesh

#define MESH_INSET 1 // Mesh inset margin on print area
#define GRID_MAX_POINTS_X 10 // Don't use more than 15 points per axis, implementation
limited.
#define GRID_MAX_POINTS_Y GRID_MAX_POINTS_X

#define UBL_PROBE_PT_1_X 39 // Probing points for 3-Point leveling of the mesh
#define UBL_PROBE_PT_1_Y 180
#define UBL_PROBE_PT_2_X 39
#define UBL_PROBE_PT_2_Y 20
#define UBL_PROBE_PT_3_X 180
#define UBL_PROBE_PT_3_Y 20

#define UBL_MESH_EDIT_MOVES_Z // Sophisticated users prefer no movement of nozzle
#define UBL_SAVE_ACTIVE_ON_M500 // Save the currently active mesh in the current slot on
M500

#elif ENABLED(MESH_BED_LEVELING)

```

```

//=====
//===== Mesh =====
//=====

#define MESH_INSET 10    // Mesh inset margin on print area
#define GRID_MAX_POINTS_X 3 // Don't use more than 7 points per axis, implementation limited.
#define GRID_MAX_POINTS_Y GRID_MAX_POINTS_X

//#define MESH_G28_REST_ORIGIN // After homing all axes ('G28' or 'G28 XYZ') rest Z at
Z_MIN_POS

#endif // BED_LEVELING

/**
 * Use the LCD controller for bed leveling
 * Requires MESH_BED_LEVELING or PROBE_MANUALLY
 */
//#define LCD_BED_LEVELING

#if ENABLED(LCD_BED_LEVELING)
  #define MBL_Z_STEP 0.025 // Step size while manually probing Z axis.
  #define LCD_PROBE_Z_RANGE 4 // Z Range centered on Z_MIN_POS for LCD Z adjustment
#endif

// Add a menu item to move between bed corners for manual bed adjustment
//#define LEVEL_BED_CORNERS

/**
 * Commands to execute at the end of G29 probing.
 * Useful to retract or move the Z probe out of the way.

```

```

*/
//#define Z_PROBE_END_SCRIPT "G1 Z10 F12000\nG1 X15 Y330\nG1 Z0.5\nG1 Z10"

// @section homing

// The center of the bed is at (X=0, Y=0)
//#define BED_CENTER_AT_0_0

// Manually set the home position. Leave these undefined for automatic settings.
// For DELTA this is the top-center of the Cartesian print volume.
//#define MANUAL_X_HOME_POS 0
//#define MANUAL_Y_HOME_POS 0
//#define MANUAL_Z_HOME_POS 0

// Use "Z Safe Homing" to avoid homing with a Z probe outside the bed area.
//
// With this feature enabled:
//
// - Allow Z homing only after X and Y homing AND stepper drivers still enabled.
// - If stepper drivers time out, it will need X and Y homing again before Z homing.
// - Move the Z probe (or nozzle) to a defined XY point before Z Homing when homing all axes (G28).
// - Prevent Z homing when the Z probe is outside bed area.
//
//#define Z_SAFE_HOMING

#if ENABLED(Z_SAFE_HOMING)
  #define Z_SAFE_HOMING_X_POINT ((X_BED_SIZE) / 2) // X point for Z homing when homing all
  axes (G28).
  #define Z_SAFE_HOMING_Y_POINT ((Y_BED_SIZE) / 2) // Y point for Z homing when homing all
  axes (G28).
#endif

```

```

// Homing speeds (mm/m)
#define HOMING_FEEDRATE_XY (50*60)
#define HOMING_FEEDRATE_Z (4*60)

// @section calibrate

/**
 * Bed Skew Compensation
 *
 * This feature corrects for misalignment in the XYZ axes.
 *
 * Take the following steps to get the bed skew in the XY plane:
 * 1. Print a test square (e.g., https://www.thingiverse.com/thing:2563185)
 * 2. For XY_DIAG_AC measure the diagonal A to C
 * 3. For XY_DIAG_BD measure the diagonal B to D
 * 4. For XY_SIDE_AD measure the edge A to D
 *
 * Marlin automatically computes skew factors from these measurements.
 * Skew factors may also be computed and set manually:
 *
 * - Compute AB : SQRT(2*AC*AC+2*BD*BD-4*AD*AD)/2
 * - XY_SKEW_FACTOR : TAN(PI/2-ACOS(((AC*AC-AB*AB-AD*AD)/(2*AB*AD))))
 *
 * If desired, follow the same procedure for XZ and YZ.
 * Use these diagrams for reference:
 *
 * Y          Z          Z
 * ^  B-----C  ^  B-----C  ^  B-----C
 * | / / /      | / / /      | / / /
 * | / / /      | / / /      | / / /

```

```

* | A-----D      | A-----D      | A-----D
* +----->X  +----->X  +----->Y
* XY_SKEW_FACTOR   XZ_SKEW_FACTOR   YZ_SKEW_FACTOR
*/

//#define SKEW_CORRECTION

#if ENABLED(SKEW_CORRECTION)
  // Input all length measurements here:
  #define XY_DIAG_AC 282.8427124746
  #define XY_DIAG_BD 282.8427124746
  #define XY_SIDE_AD 200

  // Or, set the default skew factors directly here
  // to override the above measurements:
  #define XY_SKEW_FACTOR 0.0

  //#define SKEW_CORRECTION_FOR_Z
  #if ENABLED(SKEW_CORRECTION_FOR_Z)
    #define XZ_DIAG_AC 282.8427124746
    #define XZ_DIAG_BD 282.8427124746
    #define YZ_DIAG_AC 282.8427124746
    #define YZ_DIAG_BD 282.8427124746
    #define YZ_SIDE_AD 200
    #define XZ_SKEW_FACTOR 0.0
    #define YZ_SKEW_FACTOR 0.0
  #endif

  // Enable this option for M852 to set skew at runtime
  //#define SKEW_CORRECTION_GCODE
#endif

```

```

//=====
//===== Additional Features =====
//=====

// @section extras

//
// EEPROM
//
// The microcontroller can store settings in the EEPROM, e.g. max velocity...
// M500 - stores parameters in EEPROM
// M501 - reads parameters from EEPROM (if you need reset them after you changed them
temporarily).
// M502 - reverts to the default "factory settings". You still need to store them in EEPROM
afterwards if you want to.
//
// #define EEPROM_SETTINGS // Enable for M500 and M501 commands
// #define DISABLE_M503 // Saves ~2700 bytes of PROGMEM. Disable for release!
#define EEPROM_CHITCHAT // Give feedback on EEPROM commands. Disable to save PROGMEM.

//
// Host Keepalive
//
// When enabled Marlin will send a busy status message to the host
// every couple of seconds when it can't accept commands.
//
#define HOST_KEEPALIVE_FEATURE // Disable this if your host doesn't like keepalive messages
#define DEFAULT_KEEPALIVE_INTERVAL 2 // Number of seconds between "busy" messages. Set with
M113.
#define BUSY_WHILE_HEATING // Some hosts require "busy" messages even during heating

//

```

```
// M100 Free Memory Watcher

//

// #define M100_FREE_MEMORY_WATCHER // Add M100 (Free Memory Watcher) to debug
memory usage

//

// G20/G21 Inch mode support

//

// #define INCH_MODE_SUPPORT

//

// M149 Set temperature units support

//

// #define TEMPERATURE_UNITS_SUPPORT

// @section temperature

// Preheat Constants

#define PREHEAT_1_TEMP_HOTEND 180

#define PREHEAT_1_TEMP_BED 70

#define PREHEAT_1_FAN_SPEED 0 // Value from 0 to 255

#define PREHEAT_2_TEMP_HOTEND 240

#define PREHEAT_2_TEMP_BED 110

#define PREHEAT_2_FAN_SPEED 0 // Value from 0 to 255

/**

 * Nozzle Park

 *

 * Park the nozzle at the given XYZ position on idle or G27.

 *
```

```


* The "P" parameter controls the action applied to the Z axis:
*
* P0 (Default) If Z is below park Z raise the nozzle.
* P1 Raise the nozzle always to Z-park height.
* P2 Raise the nozzle by Z-park amount, limited to Z_MAX_POS.
*/
//#define NOZZLE_PARK_FEATURE

#if ENABLED(NOZZLE_PARK_FEATURE)
  // Specify a park position as { X, Y, Z }
  #define NOZZLE_PARK_POINT { (X_MIN_POS + 10), (Y_MAX_POS - 10), 20 }
  #define NOZZLE_PARK_XY_FEEDRATE 100 // X and Y axes feedrate in mm/s (also used for delta
  printers Z axis)
  #define NOZZLE_PARK_Z_FEEDRATE 5 // Z axis feedrate in mm/s (not used for delta printers)
#endif

/**
* Clean Nozzle Feature -- EXPERIMENTAL
*
* Adds the G12 command to perform a nozzle cleaning process.
*
* Parameters:
* P Pattern
* S Strokes / Repetitions
* T Triangles (P1 only)
*
* Patterns:
* P0 Straight line (default). This process requires a sponge type material
* at a fixed bed location. "S" specifies strokes (i.e. back-forth motions)
* between the start / end points.
*

```


- * P1 Zig-zag pattern between (X0, Y0) and (X1, Y1), "T" specifies the
- * number of zig-zag triangles to do. "S" defines the number of strokes.
- * Zig-zags are done in whichever is the narrower dimension.
- * For example, "G12 P1 S1 T3" will execute:

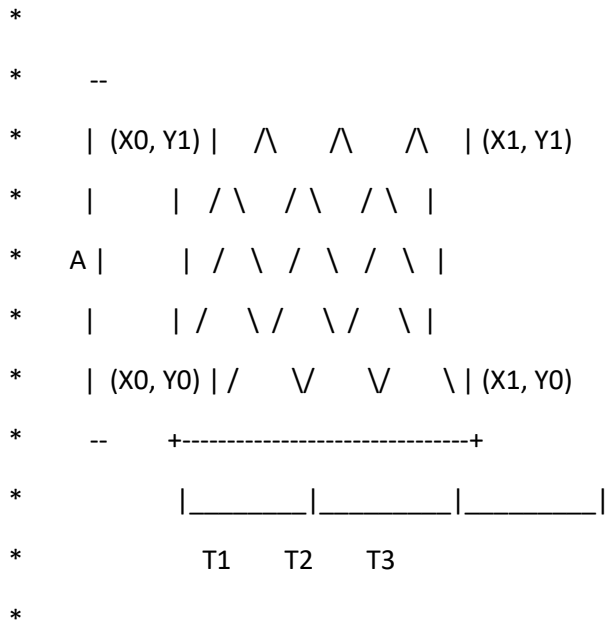

- * P2 Circular pattern with middle at NOZZLE_CLEAN_CIRCLE_MIDDLE.
- * "R" specifies the radius. "S" specifies the stroke count.
- * Before starting, the nozzle moves to NOZZLE_CLEAN_START_POINT.
- *
 - * Caveats: The ending Z should be the same as starting Z.
 - * Attention: EXPERIMENTAL. G-code arguments may change.
- * /

```

//#define NOZZLE_CLEAN_FEATURE

#if ENABLED(NOZZLE_CLEAN_FEATURE)
  // Default number of pattern repetitions
  #define NOZZLE_CLEAN_STROKES 12

  // Default number of triangles
  #define NOZZLE_CLEAN_TRIANGLES 3

```

```

// Specify positions as { X, Y, Z }
#define NOZZLE_CLEAN_START_POINT { 30, 30, (Z_MIN_POS + 1)}
#define NOZZLE_CLEAN_END_POINT {100, 60, (Z_MIN_POS + 1)}

// Circular pattern radius
#define NOZZLE_CLEAN_CIRCLE_RADIUS 6.5
// Circular pattern circle fragments number
#define NOZZLE_CLEAN_CIRCLE_FN 10
// Middle point of circle
#define NOZZLE_CLEAN_CIRCLE_MIDDLE NOZZLE_CLEAN_START_POINT

// Moves the nozzle to the initial position
#define NOZZLE_CLEAN_GOBACK
#endif

/**
 * Print Job Timer
 *
 * Automatically start and stop the print job timer on M104/M109/M190.
 *
 * M104 (hotend, no wait) - high temp = none,    low temp = stop timer
 * M109 (hotend, wait)   - high temp = start timer, low temp = stop timer
 * M190 (bed, wait)     - high temp = start timer, low temp = none
 *
 * The timer can also be controlled with the following commands:
 *
 * M75 - Start the print job timer
 * M76 - Pause the print job timer
 * M77 - Stop the print job timer
 */

```

```
#define PRINTJOB_TIMER_AUTOSTART
```

```
/**
```

```
* Print Counter
```

```
*
```

```
* Track statistical data such as:
```

```
*
```

```
* - Total print jobs
```

```
* - Total successful print jobs
```

```
* - Total failed print jobs
```

```
* - Total time printing
```

```
*
```

```
* View the current statistics with M78.
```

```
*/
```

```
//#define PRINTCOUNTER
```

```
//=====
```

```
//===== LCD and SD support =====
```

```
//=====
```

```
// @section lcd
```

```
/**
```

```
* LCD LANGUAGE
```

```
*
```

```
* Select the language to display on the LCD. These languages are available:
```

```
*
```

```
* en, an, bg, ca, cn, cz, cz_utf8, de, el, el-gr, es, eu, fi, fr, fr_utf8, gl,
```

```
* hr, it, kana, kana_utf8, nl, pl, pt, pt_utf8, pt-br, pt-br_utf8, ru, sk_utf8,
```

```
* tr, uk, zh_CN, zh_TW, test
```

```
*
```

```
* :{ 'en':'English', 'an':'Aragonese', 'bg':'Bulgarian', 'ca':'Catalan', 'cn':'Chinese', 'cz':'Czech',
'cz_utf8':'Czech (UTF8)', 'de':'German', 'el':'Greek', 'el-gr':'Greek (Greece)', 'es':'Spanish', 'eu':'Basque-
Euskera', 'fi':'Finnish', 'fr':'French', 'fr_utf8':'French (UTF8)', 'gl':'Galician', 'hr':'Croatian', 'it':'Italian',
'kana':'Japanese', 'kana_utf8':'Japanese (UTF8)', 'nl':'Dutch', 'pl':'Polish', 'pt':'Portuguese', 'pt-
br':'Portuguese (Brazilian)', 'pt-br_utf8':'Portuguese (Brazilian UTF8)', 'pt_utf8':'Portuguese (UTF8)',
'ru':'Russian', 'sk_utf8':'Slovak (UTF8)', 'tr':'Turkish', 'uk':'Ukrainian', 'zh_CN':'Chinese (Simplified)',
'zh_TW':'Chinese (Taiwan)', test:'TEST' }
```

```
*/
```

```
#define LCD_LANGUAGE en
```

```
/**
```

```
* LCD Character Set
```

```
*
```

```
* Note: This option is NOT applicable to Graphical Displays.
```

```
*
```

```
* All character-based LCDs provide ASCII plus one of these
```

```
* language extensions:
```

```
*
```

```
* - JAPANESE ... the most common
```

```
* - WESTERN ... with more accented characters
```

```
* - CYRILLIC ... for the Russian language
```

```
*
```

```
* To determine the language extension installed on your controller:
```

```
*
```

```
* - Compile and upload with LCD_LANGUAGE set to 'test'
```

```
* - Click the controller to view the LCD menu
```

```
* - The LCD will display Japanese, Western, or Cyrillic text
```

```
*
```

```
* See http://marlinfw.org/docs/development/lcd\_language.html
```

```
*
```

```
* :['JAPANESE', 'WESTERN', 'CYRILLIC']
```

```
*/
```

```
//#define DISPLAY_CHARSET_HD44780 JAPANESE
```

```
/**
 * LCD TYPE
 *
 * Enable ULTRA_LCD for a 16x2, 16x4, 20x2, or 20x4 character-based LCD.
 * Enable DOGLCD for a 128x64 (ST7565R) Full Graphical Display.
 * (These options will be enabled automatically for most displays.)
 *
 * IMPORTANT: The U8glib library is required for Full Graphic Display!
 *   https://github.com/olikraus/U8glib\_Arduino
 */
//#define ULTRA_LCD // Character based
//#define DOGLCD // Full graphics display
```

```
/**
 * SD CARD
 *
 * SD Card support is disabled by default. If your controller has an SD slot,
 * you must uncomment the following option or it won't work.
 *
 */
//#define SDSUPPORT
```

```
/**
 * SD CARD: SPI SPEED
 *
 * Enable one of the following items for a slower SPI transfer speed.
 * This may be required to resolve "volume init" errors.
 */
//#define SPI_SPEED SPI_HALF_SPEED
//#define SPI_SPEED SPI_QUARTER_SPEED
```

```
//#define SPI_SPEED SPI_EIGHTH_SPEED

/**
 * SD CARD: ENABLE CRC
 *
 * Use CRC checks and retries on the SD communication.
 */
#define SD_CHECK_AND_RETRY

//
// ENCODER SETTINGS
//
// This option overrides the default number of encoder pulses needed to
// produce one step. Should be increased for high-resolution encoders.
//
#define ENCODER_PULSES_PER_STEP 1

//
// Use this option to override the number of step signals required to
// move between next/prev menu items.
//
#define ENCODER_STEPS_PER_MENU_ITEM 5

/**
 * Encoder Direction Options
 *
 * Test your encoder's behavior first with both options disabled.
 *
 * Reversed Value Edit and Menu Nav? Enable REVERSE_ENCODER_DIRECTION.
 * Reversed Menu Navigation only? Enable REVERSE_MENU_DIRECTION.
 * Reversed Value Editing only? Enable BOTH options.
```

```
*/

//
// This option reverses the encoder direction everywhere.
//
// Set this option if CLOCKWISE causes values to DECREASE
//
//#define REVERSE_ENCODER_DIRECTION

//
// This option reverses the encoder direction for navigating LCD menus.
//
// If CLOCKWISE normally moves DOWN this makes it go UP.
// If CLOCKWISE normally moves UP this makes it go DOWN.
//
//#define REVERSE_MENU_DIRECTION

//
// Individual Axis Homing
//
// Add individual axis homing items (Home X, Home Y, and Home Z) to the LCD menu.
//
//#define INDIVIDUAL_AXIS_HOMING_MENU

//
// SPEAKER/BUZZER
//
// If you have a speaker that can produce tones, enable it here.
// By default Marlin assumes you have a buzzer with a fixed frequency.
//
//#define SPEAKER
```

```
//  
// The duration and frequency for the UI feedback sound.  
// Set these to 0 to disable audio feedback in the LCD menus.  
//  
// Note: Test audio output with the G-Code:  
// M300 S<frequency Hz> P<duration ms>  
//  
//#define LCD_FEEDBACK_FREQUENCY_DURATION_MS 100  
//#define LCD_FEEDBACK_FREQUENCY_HZ 1000  
  
//  
// CONTROLLER TYPE: Standard  
//  
// Marlin supports a wide variety of controllers.  
// Enable one of the following options to specify your controller.  
//  
  
//  
// ULTIMAKER Controller.  
//  
//#define ULTIMAKERCONTROLLER  
  
//  
// ULTIPANEL as seen on Thingiverse.  
//  
//#define ULTIPANEL  
  
//  
// PanelOne from T3P3 (via RAMPS 1.4 AUX2/AUX3)  
// http://reprap.org/wiki/PanelOne
```



```
//  
//#define PANEL_ONE  
  
//  
// MaKr3d Makr-Panel with graphic controller and SD support.  
// http://reprap.org/wiki/MaKr3d\_MaKrPanel  
//  
//#define MAKRPANEL  
  
//  
// ReprapWorld Graphical LCD  
// https://reprapworld.com/?products\_details&products\_id/1218  
//  
//#define REPRAPWORLD_GRAPHICAL_LCD  
  
//  
// Activate one of these if you have a Panucatt Devices  
// Viki 2.0 or mini Viki with Graphic LCD  
// http://panucatt.com  
//  
//#define VIKI2  
//#define miniVIKI  
  
//  
// Adafruit ST7565 Full Graphic Controller.  
// https://github.com/eboston/Adafruit-ST7565-Full-Graphic-Controller/  
//  
//#define ELB_FULL_GRAPHIC_CONTROLLER  
  
//  
// RepRapDiscount Smart Controller.
```

```
// http://reprap.org/wiki/RepRapDiscount\_Smart\_Controller
//
// Note: Usually sold with a white PCB.
//
// #define REPRAP_DISCOUNT_SMART_CONTROLLER

//
// GADGETS3D G3D LCD/SD Controller
// http://reprap.org/wiki/RAMPS\_1.3/1.4\_GADGETS3D\_Shield\_with\_Panel
//
// Note: Usually sold with a blue PCB.
//
// #define G3D_PANEL

//
// RepRapDiscount FULL GRAPHIC Smart Controller
// http://reprap.org/wiki/RepRapDiscount\_Full\_Graphic\_Smart\_Controller
//
#define REPRAP_DISCOUNT_FULL_GRAPHIC_SMART_CONTROLLER

//
// MakerLab Mini Panel with graphic
// controller and SD support - http://reprap.org/wiki/Mini\_panel
//
// #define MINIPANEL

//
// RepRapWorld REPRAPWORLD_KEYPAD v1.1
// http://reprapworld.com/?products\_details&products\_id=202&cPath=1591\_1626
//
// REPRAPWORLD_KEYPAD_MOVE_STEP sets how much should the robot move when a key
```

```
// is pressed, a value of 10.0 means 10mm per click.
//
// #define REPRAPWORLD_KEYPAD
// #define REPRAPWORLD_KEYPAD_MOVE_STEP 1.0
//
// RigidBot Panel V1.0
// http://www.inventapart.com/
//
// #define RIGIDBOT_PANEL
//
// BQ LCD Smart Controller shipped by
// default with the BQ Hephestos 2 and Witbox 2.
//
// #define BQ_LCD_SMART_CONTROLLER
//
// Cartesio UI
// http://mauk.cc/webshop/cartesio-shop/electronics/user-interface
//
// #define CARTESIO_UI
//
// ANET and Tronxy Controller supported displays.
//
// #define ZONESTAR_LCD // Requires ADC_KEYPAD_PIN to be assigned to an analog pin.
// This LCD is known to be susceptible to electrical interference
// which scrambles the display. Pressing any button clears it up.
// This is a LCD2004 display with 5 analog buttons.
```

```
//#define ANET_FULL_GRAPHICS_LCD // Anet 128x64 full graphics lcd with rotary encoder as used
on Anet A6

        // A clone of the RepRapDiscount full graphics display but with
        // different pins/wiring (see pins_ANET_10.h).

//
// LCD for Melzi Card with Graphical LCD
//
//#define LCD_FOR_MELZI

//
// CONTROLLER TYPE: I2C
//
// Note: These controllers require the installation of Arduino's LiquidCrystal_I2C
// library. For more info: https://github.com/kiyoshigawa/LiquidCrystal\_I2C
//
//
// Elefu RA Board Control Panel
// http://www.elefu.com/index.php?route=product/product&product\_id=53
//
//#define RA_CONTROL_PANEL

//
// Sainsmart YW Robot (LCM1602) LCD Display
//
// Note: This controller requires F.Malpartida's LiquidCrystal_I2C library
// https://bitbucket.org/fmalpartida/new-liquidcrystal/wiki/Home
//
//#define LCD_I2C_SAINSMART_YWROBOT
```

```
//  
// Generic LCM1602 LCD adapter  
//  
//#define LCM1602  
  
//  
// PANELOLU2 LCD with status LEDs,  
// separate encoder and click inputs.  
//  
// Note: This controller requires Arduino's LiquidTWI2 library v1.2.3 or later.  
// For more info: https://github.com/lincomatic/LiquidTWI2  
//  
// Note: The PANELOLU2 encoder click input can either be directly connected to  
// a pin (if BTN_ENC defined to != -1) or read through I2C (when BTN_ENC == -1).  
//  
//#define LCD_I2C_PANELOLU2  
  
//  
// Panucatt VIKI LCD with status LEDs,  
// integrated click & L/R/U/D buttons, separate encoder inputs.  
//  
//#define LCD_I2C_VIKI  
  
//  
// SSD1306 OLED full graphics generic display  
//  
//#define U8GLIB_SSD1306  
  
//  
// SAV OLEd LCD module support using either SSD1306 or SH1106 based LCD modules  
//
```

```
//#define SAV_3DGLCD
#if ENABLED(SAV_3DGLCD)
  //#define U8GLIB_SSD1306
  #define U8GLIB_SH1106
#endif

//
// CONTROLLER TYPE: Shift register panels
//
// 2 wire Non-latching LCD SR from https://goo.gl/aJJ4sH
// LCD configuration: http://reprap.org/wiki/SAV_3D_LCD
//
//#define SAV_3DLCD

//
// TinyBoy2 128x64 OLED / Encoder Panel
//
//#define OLED_PANEL_TINYBOY2

//
// Makeboard 3D Printer Parts 3D Printer Mini Display 1602 Mini Controller
// https://www.aliexpress.com/item/Micromake-Makeboard-3D-Printer-Parts-3D-Printer-Mini-
// Display-1602-Mini-Controller-Compatible-with-Ramps-1/32765887917.html
//
//#define MAKEBOARD_MINI_2_LINE_DISPLAY_1602

//
// MKS MINI12864 with graphic controller and SD support
// http://reprap.org/wiki/MKS_MINI_12864
//
//#define MKS_MINI_12864
```

```
//  
  
// Factory display for Creality CR-10  
  
// https://www.aliexpress.com/item/Universal-LCD-12864-3D-Printer-Display-Screen-With-Encoder-For-CR-10-CR-7-Model/32833148327.html  
  
//  
  
// This is RAMPS-compatible using a single 10-pin connector.  
  
// (For CR-10 owners who want to replace the Melzi Creality board but retain the display)  
  
//  
  
// #define CR10_STOCKDISPLAY  
  
  
//  
  
// MKS OLED 1.3" 128x64 FULL GRAPHICS CONTROLLER  
  
// http://reprap.org/wiki/MKS\_12864OLED  
  
//  
  
// Tiny, but very sharp OLED display  
  
// If there is a pixel shift, try the other controller.  
  
//  
  
// #define MKS_12864OLED // Uses the SH1106 controller (default)  
  
// #define MKS_12864OLED_SSD1306 // Uses the SSD1306 controller  
  
  
// Silvergate GLCD controller  
  
// http://github.com/android444/Silvergate  
  
//  
  
// #define SILVER_GATE_GLCD_CONTROLLER  
  
  
  
//===== Extra Features =====  
  
// @section extras
```

```
// Increase the FAN PWM frequency. Removes the PWM noise but increases heating in the
FET/Arduino

//#define FAST_PWM_FAN

// Use software PWM to drive the fan, as for the heaters. This uses a very low frequency
// which is not as annoying as with the hardware PWM. On the other hand, if this frequency
// is too low, you should also increment SOFT_PWM_SCALE.

//#define FAN_SOFT_PWM

// Incrementing this by 1 will double the software PWM frequency,
// affecting heaters, and the fan if FAN_SOFT_PWM is enabled.
// However, control resolution will be halved for each increment;
// at zero value, there are 128 effective control positions.
#define SOFT_PWM_SCALE 0

// If SOFT_PWM_SCALE is set to a value higher than 0, dithering can
// be used to mitigate the associated resolution loss. If enabled,
// some of the PWM cycles are stretched so on average the desired
// duty cycle is attained.
//#define SOFT_PWM_DITHER

// Temperature status LEDs that display the hotend and bed temperature.
// If all hotends, bed temperature, and target temperature are under 54C
// then the BLUE led is on. Otherwise the RED led is on. (1C hysteresis)
//#define TEMP_STAT_LEDS

// M240 Triggers a camera by emulating a Canon RC-1 Remote
// Data from: http://www.doc-diy.net/photo/rc-1\_hacked/
//#define PHOTOGRAPH_PIN 23
```



```
// SkeinForge sends the wrong arc g-codes when using Arc Point as fillet procedure
```

```
//#define SF_ARC_FIX
```

```
// Support for the BariCUDA Paste Extruder
```

```
//#define BARICUDA
```

```
// Support for BlinkM/CyzRgb
```

```
//#define BLINKM
```

```
// Support for PCA9632 PWM LED driver
```

```
//#define PCA9632
```

```
/**
```

```
* RGB LED / LED Strip Control
```

```
*
```

```
* Enable support for an RGB LED connected to 5V digital pins, or
```

```
* an RGB Strip connected to MOSFETs controlled by digital pins.
```

```
*
```

```
* Adds the M150 command to set the LED (or LED strip) color.
```

```
* If pins are PWM capable (e.g., 4, 5, 6, 11) then a range of
```

```
* luminance values can be set from 0 to 255.
```

```
* For Neopixel LED an overall brightness parameter is also available.
```

```
*
```

```
* *** CAUTION ***
```

```
* LED Strips require a MOSFET Chip between PWM lines and LEDs,
```

```
* as the Arduino cannot handle the current the LEDs will require.
```

```
* Failure to follow this precaution can destroy your Arduino!
```

```
* NOTE: A separate 5V power supply is required! The Neopixel LED needs
```

```
* more current than the Arduino 5V linear regulator can produce.
```

```
* *** CAUTION ***
```

```
*
```

```

* LED Type. Enable only one of the following two options.
*
*/
//#define RGB_LED
//#define RGBW_LED

#if ENABLED(RGB_LED) || ENABLED(RGBW_LED)
  #define RGB_LED_R_PIN 34
  #define RGB_LED_G_PIN 43
  #define RGB_LED_B_PIN 35
  #define RGB_LED_W_PIN -1
#endif

// Support for Adafruit Neopixel LED driver
//#define NEOPIXEL_LED
#if ENABLED(NEOPIXEL_LED)
  #define NEOPIXEL_TYPE NEO_GRBW // NEO_GRBW / NEO_GRB - four/three channel driver type
  (defined in Adafruit_NeoPixel.h)

  #define NEOPIXEL_PIN 4 // LED driving pin on motherboard 4 => D4 (EXP2-5 on Printrboard) /
  30 => PC7 (EXP3-13 on Rumba)

  #define NEOPIXEL_PIXELS 30 // Number of LEDs in the strip

  #define NEOPIXEL_IS_SEQUENTIAL // Sequential display for temperature change - LED by LED.
  Disable to change all LEDs at once.

  #define NEOPIXEL_BRIGHTNESS 127 // Initial brightness (0-255)

  //#define NEOPIXEL_STARTUP_TEST // Cycle through colors at startup
#endif

/**
* Printer Event LEDs
*
* During printing, the LEDs will reflect the printer status:
*

```

- * - Gradually change from blue to violet as the heated bed gets to target temp
 - * - Gradually change from violet to red as the hotend gets to temperature
 - * - Change to white to illuminate work surface
 - * - Change to green once print has finished
 - * - Turn off after the print has finished and the user has pushed a button
- */

```
#if ENABLED(BLINKM) || ENABLED(RGB_LED) || ENABLED(RGBW_LED) || ENABLED(PCA9632) ||
ENABLED(NEOPIXEL_LED)
```

```
#define PRINTER_EVENT_LEDS
```

```
#endif
```

```
/**
```

- * R/C SERVO support
 - * Sponsored by TrinityLabs, Reworked by codexmas
- */

```
/**
```

- * Number of servos
 - *
 - * For some servo-related options NUM_SERVOS will be set automatically.
 - * Set this manually if there are extra servos needing manual control.
 - * Leave undefined or set to 0 to entirely disable the servo subsystem.
- */

```
//#define NUM_SERVOS 3 // Servo index starts with 0 for M280 command
```

```
// Delay (in milliseconds) before the next move will start, to give the servo time to reach its target
angle.
```

```
// 300ms is a good value but you can try less delay.
```

```
// If the servo can't reach the requested position, increase it.
```

```
#define SERVO_DELAY { 300 }
```

```
// Servo deactivation
```

```
//  
// With this option servos are powered only during movement, then turned off to prevent jitter.  
//#define DEACTIVATE_SERVOS_AFTER_MOVE  
  
#endif // CONFIGURATION_H
```