



**ProMate® 6.0**  
WATER CONDITIONING SYSTEM

**IRON CURTAIN® JR**  
SYSTEM



## ProMate 6.0 Iron Curtain Junior Filter Manual

# Owner's Filter Manual

p/n 109438 Rev A  
6/16/17-LBRY  
©2011-2017

Manufactured by:  
**HELLENBRAND, INC.**  
404 Moravian Valley Road  
Wauwaukee, Wisconsin 53597  
Web: [www.hellenbrand.com](http://www.hellenbrand.com) • Email: [info@hellenbrand.com](mailto:info@hellenbrand.com)

---

---

This owner's manual is designed to assist owners and installers with the operation, maintenance and installation of your new water filter. It is our sincere hope that this manual is clear, concise and helpful. Detailed instructions on general operating conditions, pre-installation and installation instructions, start-up, and meter programming are included. We have included a troubleshooting guide, service instructions and parts diagrams to assist future needs.

**In the event that you need professional assistance for servicing your water filter, please contact the dealer who installed this system.**

## TABLE OF CONTENTS

Job Specification Sheet.....	Page 3
General Specifications.....	3
Pre-Installation Check List.....	4
Bypass Valve Operation.....	4
Installation Instructions.....	5
Startup Instructions.....	6
Operating Conditions.....	6
Specifications.....	6
Programming.....	7
Displays/Settings.....	7
Regeneration Modes.....	8
Disinfection.....	8
Set Time of Day.....	9
Installation Displays/Settings.....	9
Filter Setup.....	10-13
Diagnostics.....	13
Valve History.....	14
Cycle Sequence.....	14
Trouble Shooting.....	15-16
Parts Diagrams.....	17-21
Installation Fittings.....	22-23
Warranty.....	24

---

Dealer Name \_\_\_\_\_ Phone \_\_\_\_\_

Address \_\_\_\_\_ Email \_\_\_\_\_

---

---

---

# JOB SPECIFICATION SHEET

MODEL NO. \_\_\_\_\_

## \*WATER TEST AT TIME OF INSTALLATION

_____ Iron (ppm)	_____ Hydrogen Sulfide	_____ Manganese
_____ pH	_____ Chlorine	_____ Other _____
_____ TDS	_____ Tannins	_____ Other _____

## \*SIZING INFORMATION

All Water is Filtered Except:

\_\_\_\_\_ Rear Hose Bib    \_\_\_\_\_ Front Hose Bib    \_\_\_\_\_ Kitchen Cold    \_\_\_\_\_ Toilets    \_\_\_\_\_ All Cold  
\_\_\_\_\_ Other \_\_\_\_\_

\*INSTALLATION DATE \_\_\_\_\_

\*SERIAL NUMBER \_\_\_\_\_

NOTES \_\_\_\_\_

\_\_\_\_\_

---

---

## GENERAL SPECIFICATIONS

### OPERATING PRESSURES

Minimum/Maximum ..... 30 psi-120 psi

### OPERATING TEMPERATURES

Minimum/Maximum ..... 40° - 110° F

### METER

Accuracy ..... ±5%  
Flow Rate Range ..... 0.25 - 27 GPM  
Gallon Range ..... 20 - 50,000

### DIMENSIONS

Drain Line ..... 3/4" or 1" NPT  
Regenerant Line ..... 3/8" Poly Tube

**ELECTRICAL CURRENT DRAW AND VOLTAGE** ..... 0.5A 110v

Compatible with the following regenerants or chemicals: Sodium chloride, potassium permanganate, sodium bisulfite, sodium hydroxide, hydroxide, hydrochloric acid, chlorine and chloramines.

# PRE-INSTALLATION CHECK LIST

(All electrical & plumbing should be done in accordance to all local codes)

**Water Pressure:** A minimum of 30 pounds of water pressure (psi) is required for regeneration. Maximum pressure 120 psi.

**Water Quality:** On rural water supplies there is often a problem with sand or sediment in the water. (This problem occasionally occurs in public water supplies.) Sand and sediment may plug the filter, restricting the flow through the media bed. Note: Well and/or pump problems affecting the operation of the filter and repairs are not covered under the warranty.

**Electrical:** A continuous 110 volt/60 cycle current supply is required. Make certain the current supply is uninterrupted and cannot be turned off with another switch. All electrical connections must be connected per local codes. **Surge protection is recommended with all electrical controls.**

**Existing Plumbing:** Condition of existing plumbing must be free from lime and iron build-up. Piping that is built-up heavily

with lime and/or iron must be replaced. If piping is blocked with iron, additional equipment may be needed ahead of the filter to correct the problem.

**Drain Line:** The filter should be located close to a drain. Avoid overhead drain lines if possible to prevent back pressure. Overhead drains are not to exceed 8 feet above the floor and no more than 20 feet in length. The pipe size for the drain line should be a minimum of 3/4". Backwash flow rates in excess of 10 gpm or length in excess of 20' require 1" drain line.

**Bypass Valves:** Always provide for the installation of a bypass valve.

**Caution:** Water temperature is not to exceed 110°F; the filter cannot be subject to freezing conditions, or to a vacuum due to loss of pressure (such as a water main break).

## BYPASS VALVE OPERATION

### NORMAL OPERATION Softening - Filtering

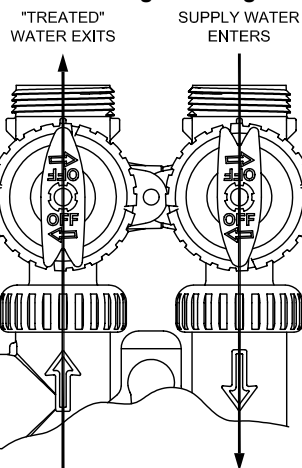


Figure 1

### BYPASS OPERATION

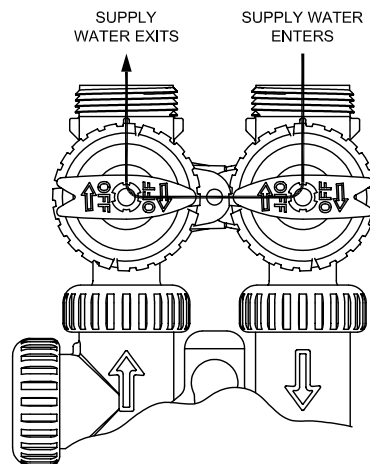


Figure 2

### DIAGNOSTIC MODE

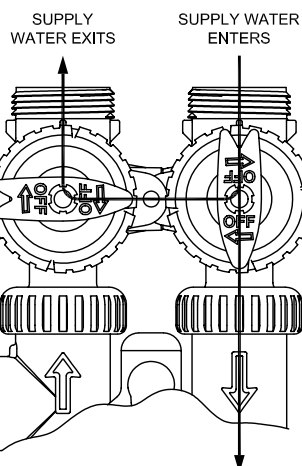


Figure 3

### SHUT OFF MODE

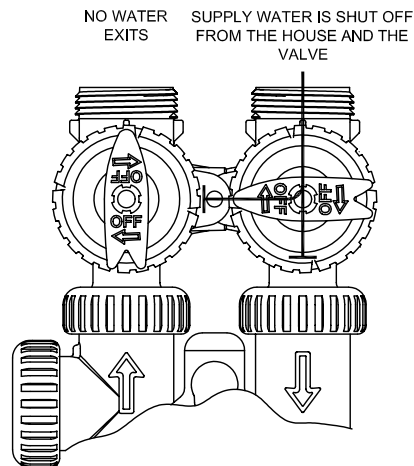


Figure 4

# INSTALLATION INSTRUCTIONS



(All electrical & plumbing should be done in accordance to all local codes)

Your new Iron Curtain® Junior allows for simple installation and start up. Installation diagrams are provided to assist you. Use of these diagrams and the following procedures will ensure that the system is properly installed.

## Follow all state and local plumbing and electrical codes!

- Do not use vaseline, oils, other hydrocarbon lubricants or spray silicone anywhere. A silicon lubricant may be used on black o-rings but is not necessary. **Avoid any type of lubricants, including silicone, on red or clear lip seals.**
- Do not use pipe dope or other sealants on threads. Only teflon tape may be used on threads. Teflon tape is not necessary on the nut connection or caps because of radial o-ring seals.
- **The pipe size for the drain line should be a minimum of 3/4". Backwash flow rates in excess of 10 gpm or length in excess of 20' require 1" drain line.**

1. Place the filter where you want to install it, making sure it is on a clean, level and firm base.
2. Do all necessary plumbing (Install check valve on inlet to filter, inlet to inlet, outlet to outlet and drain line to drain). The control valve, fittings and/or bypass are designed to accommodate minor plumbing misalignments but are not designed to support the weight of a system or the plumbing.
3. When assembling the installation fitting package (inlet and outlet), connect the fitting to the plumbing system first and then attach the nut, split ring and o-ring. Heat from soldering or solvent cements may damage the nut, split ring or o-ring. Solder joints should be cool and solvent cements should be set before installing the nut, split ring and o-ring.

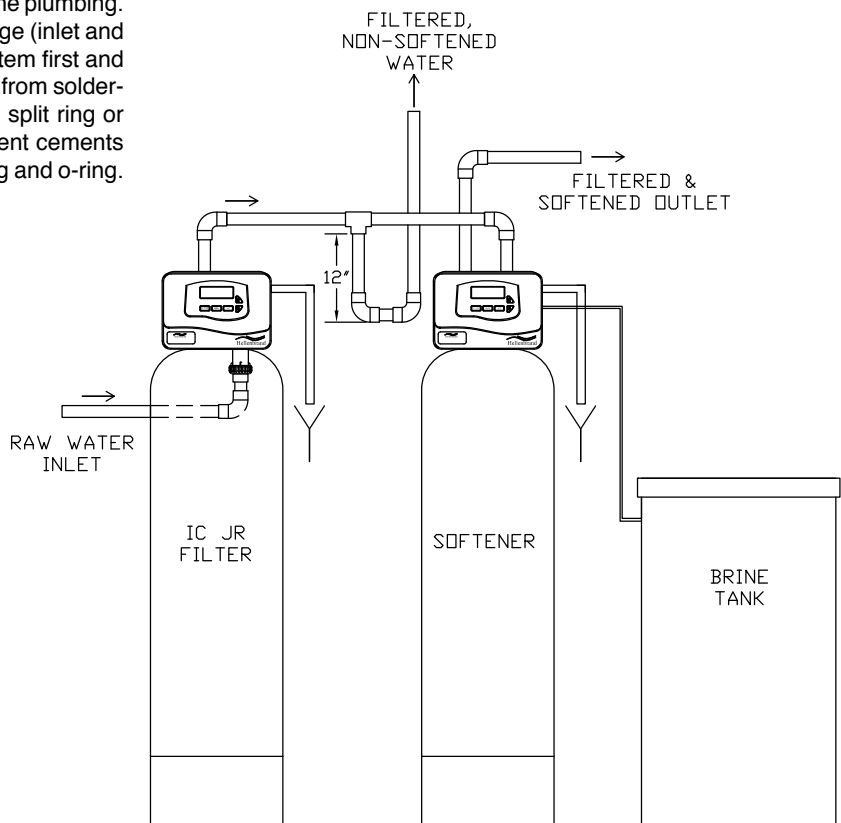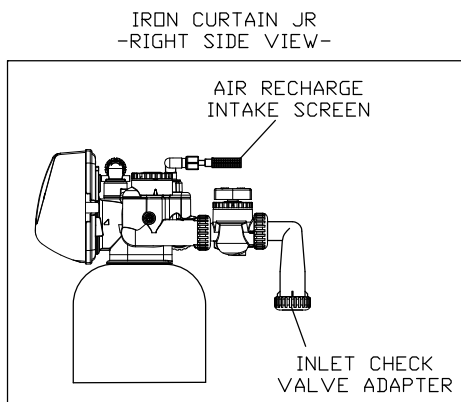

Avoid getting primer and solvent cement on any part of the o-rings, split rings, bypass valve or control valve.

4. **A jumper ground wire should be installed between the inlet and outlet pipe whenever the metallic continuity of a water distribution piping system is interrupted. Install grounding strap on metal pipes.**
5. The drain connection may be made using either 5/8" poly-tube with nut & insert (see page 23, figure 17) or a 3/4" female adapter. If soldering, joints near the drain must be done prior to connecting the drain line flow control fitting. Leave at least 6" between the drain line control fitting and solder joints when soldering pipes that are connected on the drain line control fitting. Failure to do this could cause interior damage to the drain line flow control fitting.
6. When installing a filter system it is common to provide filtered water to some fixtures such as the kitchen cold faucet. This is typically done as a matter of personal preference. In rare occasions it has been noted that the customer may experience some air in the filtered water line on the morning after regeneration. It has proven to be beneficial to plumb the line for filtered-only water fixture in a downward direction before the inlet to the softener (12 inches recommended), then make a reverse turn and go upward toward the fixture. Understanding that air always rises to the highest point in a water system, and it cannot naturally flow downward. Connect inlet of filter to water system supply lines.

When installing an Iron Curtain Filter system it is common to provide filtered only water to some fixtures such as the kitchen cold faucet. This is typically done as a matter of personal preference. On rare occasions, the customer may experience some air in the filtered water line the morning after regeneration. It has proven beneficial to plumb the line for the filtered only water fixture in a downward direction from the inlet of the softener (12 inches recommended), then make a reverse turn and go upward toward the fixture. Any accumulated air always rises to the highest point in a water system and cannot naturally flow downward.

# Iron Curtain Jr Start Up Instructions

1. Complete all plumbing connections; inlet, outlet and drain line.
2. Place bypass valve in bypass position (see page 4). Turn on main water supply and open a cold filtered faucet to flush piping of any air and/or foreign material. Run until water is clear.
3. Open inlet valve slowly until it is in fully open position. Let water run to drain until clear. Plug unit into 120V outlet and remove cover and plug transformer connection into 4-prong connection on circuit board labeled power. Valve will return to service position.
4. Initiate backwash by holding "REGEN" button down until piston movement is heard. Backwash until water at drain is clear.
5. Let regeneration proceed automatically to fast rinse and air recharge.
6. Push "Set Clock" and use UP and DN arrows to set correct time of day.

## Operating Conditions

**pH** — The pH level of the influent water must be 7.0 or higher for iron oxidation reaction to proceed per the engineering specifications.\*

**Iron** — This system is rated for a maximum of 3.0 ppm of ferrous (clear water) and/or ferric (red water) iron.\*

**Iron Bacteria** — If iron bacteria are present; more frequent service may result, life of the Iron Curtain Junior system may be limited and the system may be unable to properly remove iron. **By properly controlling the iron bacteria with chlorine or other approved methods for bacterial reduction, the Iron Curtain Junior System will function properly. In some instances, continuous chlorination of the water supply may be needed.**

**Hydrogen Sulfide** — Sometimes referred to as "rotten egg" odor. This system is rated for a maximum of 1.0 ppm hydrogen sulfide. Hydrogen sulfide levels vary depending on barometric pressure.\*

**Manganese** — Limit 1.0 ppm; amounts present over 1.0 ppm may gradually prevent iron removal. Note: For optimum manganese reduction, pH should be greater than 8.5.\*

**Organic Matter (Tannins)** — The presence of organic matter such as tannins will prevent the oxidation process of converting the dissolved element, such as iron or manganese, to a

nonsoluble precipitate or solid substance. In other words, organics can tie up the iron preventing filtration. **The presence of organics such as tannins above 0.5 ppm voids any claims for this system to perform as stated above. In some applications, tannin levels below 0.5 ppm or the presence of other organics may hinder the operation of this system.\***

**Chlorine** — The presence of chlorine in the raw water supply ahead of this system should be limited to a maximum of 1.0 ppm free chlorine residual and 0.5 ppm free chlorine or less when fed continuously.

**Total Dissolved Solids (TDS)** — While TDS does not directly affect iron removal, it is a good indicator of potential interference. Most waters have TDS less than 500 and generally present no problems to iron reduction. If any ion becomes excessive, it may cause failure of iron removal.

**A TDS more than 500 ppm voids any claims for this system to perform as stated above.\***

**\*For application parameters outside the specified operation conditions or additional information regarding the listed items, contact your dealer.**

## Specifications

Iron Curtain Junior Models	Filter Tank Size	Media Cu. Ft	Inlet/Outlet	Max. Service Flow GPM	(1) Backwash Rate GPM
Iron Curtain JR-10	10"x54"	1.1	1"	4.0	5.3
Iron Curtain JR-12	12"x52"	1.6	1"	6.0	7.5
Iron Curtain JR-13	13"x54"	1.9	1"	7.0	10

(1) Water temps above 60° F will require a higher backwash rate. Consult factory.

# BACKWASH FREQUENCY

## Iron Applications

- 0.3 - 1.0 ppm Iron - Every 3rd Day
- 1.0 - 2.0 ppm Iron - Every Other Day
- 2.0 - 3.0 ppm Iron - Every Day

## Hydrogen Sulfide Applications

0.1 - 1.0 ppm Hydrogen Sulfide - 100 Gallon for Air Draw Cycle, decrease as needed to initiate cycle each night.

Regeneration currently set to occur at 12:30 to minimize interference with softener regeneration.

# PROGRAMMING

## General Information

The control valve is the "brain" of your water filter. It consists of the valve body and powerhead with solid state microprocessor.

The display panel (see Figure 7) consists of the LCD display and five push buttons which are used in displaying and programming the water filter settings.

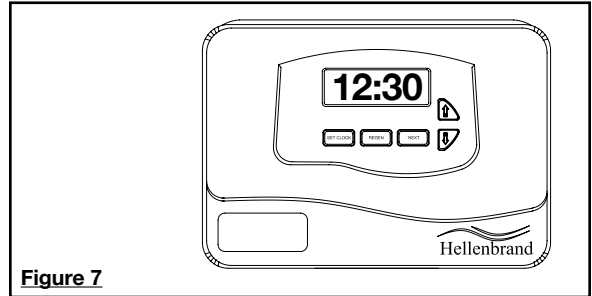


Figure 7

# USER DISPLAYS/SETTINGS

## General Operation

When the system is operating, one of three displays may be shown. Pressing NEXT will alternate between the displays. One of the displays is the current time of day. The second display is one of the following: days to a regen or gallons remaining. Days To A Regen is the number of days left before the system goes through a regeneration cycle. Capacity remaining is the number of gallons that will be treated before the system goes through a regeneration cycle. The third display is current flow in gal/min. The user can scroll between the displays as desired by pushing NEXT or display will scroll automatically.

When water is being treated (i.e. water is flowing through the system) the word "GPM" flashes on left side of display when other than flow rate is displayed.

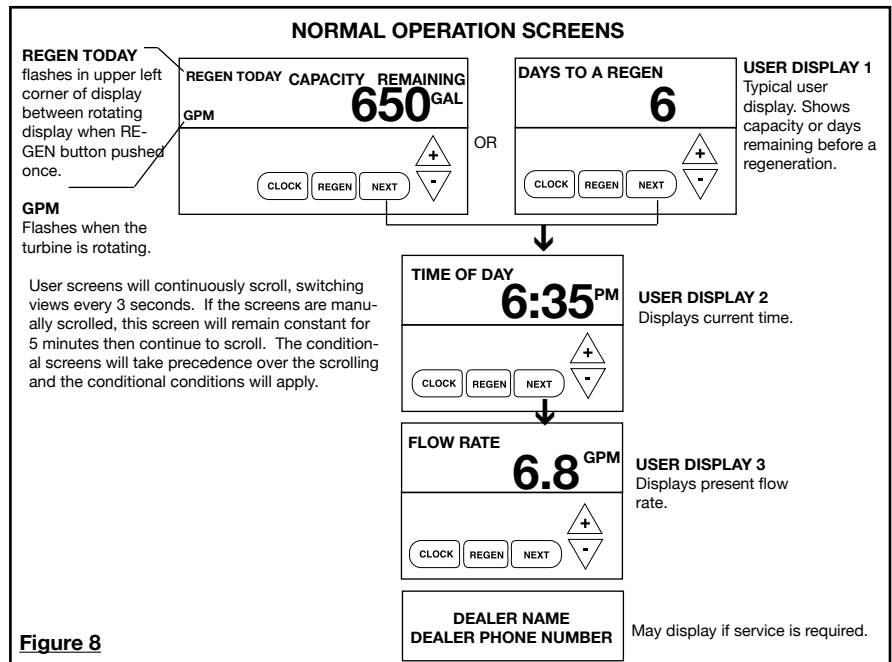


Figure 8

## Regeneration Mode

Typically a system is set to regenerate at a time of low water usage. An example of a time with low water usage is when the household is asleep. If there is a demand for water when the system is regenerating, untreated water will be supplied.

When the system begins to regenerate, the display will change to include information about the step of the regeneration process and the time remaining for that step to be completed. The system runs through the steps automatically and will reset itself to provide treated water when the regeneration has been completed.

## Manual Regeneration

Sometimes there is a need to regenerate the system, sooner than when the system calls for it, usually referred to as manual regeneration. There may be a period of heavy water usage because of guests or heavy laundry day.

To initiate a manual regeneration at the preset delayed regeneration time, press and release "REGEN". The words "REGEN TODAY" will flash on the display to indicate that the system will regenerate at the preset delayed regeneration time. If you pressed the "REGEN" button in error, pressing the button again will cancel the request.

To initiate a manual regeneration immediately, press and hold the "REGEN" button for three seconds. The system will begin to regenerate immediately. The request cannot be cancelled. You must cycle all the way through the cycles to make it stop. PLEASE NOTE: This will reset the meter.

Regeneration Step #2  
(shows time remaining in "Backwash" is 8:22)



Figure 11

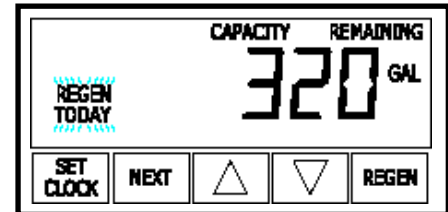


Figure 12

## TABLE 4 - FILTERING REGENERATION CYCLES

No Chemical Regeneration	Factory Settings	Length of Cycle
#1 Sequence	Backwash	10 seconds
	Air Draw	10" tank - 5 minutes
		12" tank - 8 minutes
		13" tank - 13 minutes
#2 Sequence	Backwash	12 Minutes
	Rinse	6 Minutes
	Air Draw	10" tank - 5 minutes
		12" tank - 8 minutes
		13" tank - 13 minutes

## WATER FILTER DISINFECTION


The materials of construction of your water filter will not support bacterial growth nor will these materials contaminate a water supply. However, the normal conditions existing during shipping, storage, and installation indicate the advisability of disinfecting a filter after installation, before the equipment is used to treat potable water. In addition, during normal use a filter may become fouled with organic matter or in some cases, with bacteria from the water supply.

Every water filter should be disinfected after installation, some will require periodic disinfection during their normal life. **Disinfection:** Disinfection methods kill most of harmful bacteria found in water which may cause illness. Disinfection methods may vary depending on what media is contained in the filter. Contact your dealer for specific instructions.



## SET TIME OF DAY

△+ = ▲ Up Arrow    ▽- = ▼ Down Arrow

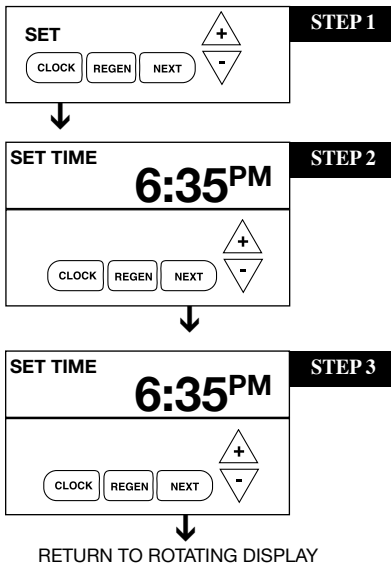

**Step 1** - Press SET CLOCK.

**Step 2** - Current Time (**hour**): Set the hour of the day using ▲ or ▼ buttons. AM/PM toggles after 12. Press NEXT to go to step 3.

**Step 3** - Current Time (**minutes**): Set the minutes of day using ▲ or ▼ buttons. Press NEXT to exit Set Clock. Press REGEN to return to previous step.


**Power Loss** - Lithium battery on circuit board provides up to 2 years of time clock backup during power outages. If the power is out when battery is depleted, only time of day needs to be reset, all other values are stored in non-volatile memory. When time of day is flashing, replace lithium coin type 2032 battery.

Battery back-up feature will be activated after 24 hours of power.

Do not forget to reset for daylight savings time.

## INSTALLER PROGRAMMING

△+ = ▲ Up Arrow    ▽- = ▼ Down Arrow

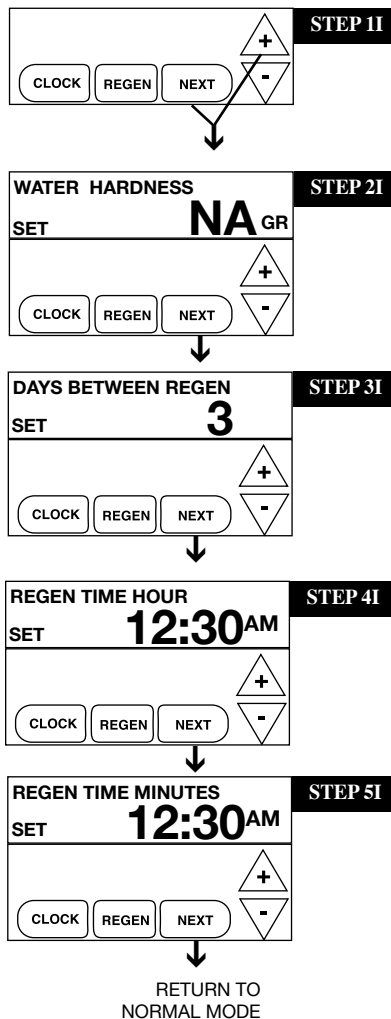

**Step 1I** - Press NEXT and ▲ simultaneously for 3 seconds.

This display may not appear on standard filtering mode.

**Step 2I - Hardness:** Not Applicable (nA) Press NEXT to go to Step 3.

**Step 3I - Day Override:** This sets the number of days between regenerations. If value set to "oFF" regeneration initiation is based solely on gallons used. If value is set as a number (allowable range from 1 to 28) a regeneration initiation will be called for on that day even if sufficient number of gallons were not used to call for a regeneration. Set Day Override using ▲ or ▼ buttons: **Factory setting is 3 days.**

- number of days between regeneration (1 to 28); or
- "oFF"

Press NEXT to go to step 4. Press REGEN to return to previous step.

**When AIR REGEN FILTER-DLY is selected, this screen appears first**


**Step 4I - Regeneration Time (hour):** Set the hour of day for regeneration using ▲ or ▼ buttons. AM/PM toggles after 12. **The factory setting time is 12:30 a.m.** This display will show REGEN IMMEDIATE ON ZERO GAL if system is set for immediate regeneration. Press NEXT to go to step 5I. Press REGEN to return to previous step.

**Note:** When installing this unit as part of a multi unit parallel system the regen time of day must be adjusted to prevent multiple units from regenerating at the same time.


**Step 5I - Regeneration Time (minutes):** Set the minutes of day for regeneration using ▲ or ▼ buttons. This display will not be shown if system is set for immediate regeneration. Press NEXT to exit Installer Displays/Settings. Press REGEN to return to previous step.

# FILTER SETUP


▲ = ▲ Up Arrow    ▼ = ▼ Down Arrow

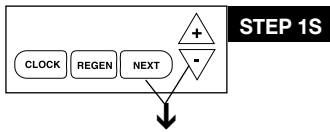

**STEP 1S** – Press NEXT and ▼ simultaneously for 3 seconds. If screen in Step 2S does not appear in 5 seconds the lock on the valve is activated.

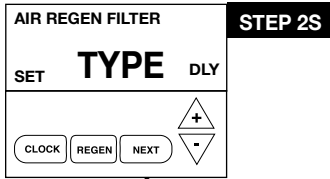


**STEP 2S** – Select **AIR REGEN FILTER-DLY**. Other options include Softening, Filtering or Air Regen Fiter IMM. Choose by using ▼ or ▲ button. If Immediate (IMM) is chosen, this option will allow regeneration immediately and raw water will bypass to service. **Factory setting is AIR REGEN FILTER-DLY**. Press NEXT to go to Step 3S. Press REGEN to exit Filter System Setup.

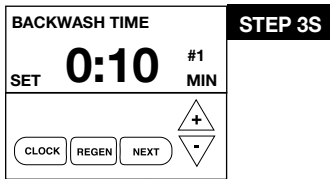


**STEP 3S** – First cycle is **BACKWASH for 10 seconds**. This can not be modified. Press NEXT to go to Step 4S. Press REGEN to return to previous step.




**STEP 4S** – Select the time for the **DRAW cycle for #1 sequence** (DRAW Sequence) using ▼ or ▲ button. 8 minutes is displayed but draw down time is varied based on filter size, see page 8. Press NEXT to go to Step 5S. Press REGEN to return to the previous step.

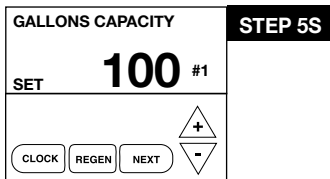

**STEP 5S** – Select the **GALLON SETTING between #1 Air Draw sequence** using ▼ or ▲ button. Press NEXT to go to Step 6S. Press REGEN to return to the previous step. **Factory Setting is 100 Gallons**.

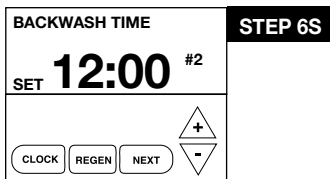


**STEP 6S** – Set Backwash Time for #2 sequence using ▼ or ▲ button. **Factory Setting is 12:00 minutes**.

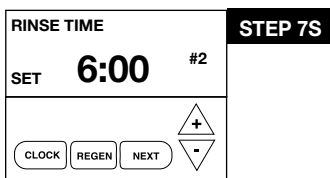

**STEP 7S** – Set Rinse Time for #2 sequence using the ▼ or ▲ button. If value is set to:

**Factory Setting is 6:00 minutes**. Press NEXT to go to Step 8S. Press REGEN to return to previous step.

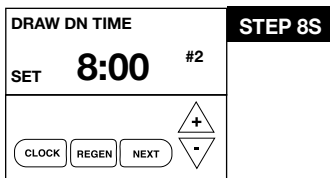

**STEP 8S** – Set Draw Time for #2 sequence using the ▼ or ▲ button. Draw time varies based on filter size, see page 8.

DAYS BETWEEN REGEN		<b>STEP 9S</b>
SET	<b>3</b> #2	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 9S – Set Days Between for #2 Regeneration sequence** using the ▼ or ▲ button.

**Factory Setting is 3, it is not advised to increase this without factory input.** Press NEXT to go to Step 10S. Press REGEN to return to previous step.

TIME		<b>STEP 10S</b>
SET	<b>RELAY1</b> #1	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 10S – Set Relay to activate by Time, Gallons, Regen Gallons, Lockout, Off or Service Alarm** by using ▼ or ▲ buttons. Factory setting is off.

The choices are:

- **Relay Triggered on Time** - Relay activates after set number of minutes after start of regeneration. Start of regeneration is defined by first backwash cycle, dn brine or up brine, whichever is first. Relay deactivates after set time. Press NEXT for programming.
- **Relay Triggered on Gallons** - Relay activates every set number of gallons while in service and deactivates after set time.
- **Relay Triggered on Regen Gallons** - Relay activates after set number of gallons in service or gallons used during regeneration and de-activates after set time or when meter stops registering flow, whichever comes first.
- **Service Alarm** - Relay activates on service alarm setting: gallons, time or both, see step 17S.
- **Relay Triggered for Lockout** - Relay closes at set number of minutes before or after start of regeneration. Start of regeneration is referenced by 1st backwash or draw mode. Negative start time delays regeneration by that amount. Relay remains active during error, after power loss and after manual advance. Selection of energizing relay for complete regeneration cycle is available by selecting REGEN for time setting, see step 18S.
- **Off** - If off is selected, Steps 11S to 18S will not be shown. Press NEXT to go to Step 19S

Press NEXT to go to step 11S and other selection screens for relay settings.

RELAY 1 SET POINT		<b>STEP 11S</b>
SET	<b>10</b> MIN	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 11S –** If off was selected in previous step, this screen does not appear. **If Time was chosen to Activate Relay,** use up and down arrows to set # of minutes AFTER START OF REGEN to activate relay. Start of regeneration is defined as first Backwash or Regenerant Draw mode. Time Range = 1 - 500 minutes. Press NEXT to go to step 12S.

RELAY 1 DURATION		<b>STEP 12S</b>
SET	<b>3:00</b> MIN	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 12S –** Use Up and Down arrows to set duration of relay activation in minutes. Time Range is 0:01 (1 second) to 500:00 (500 minutes). Press NEXT to go to Step 20S. Press REGEN to return to previous step.

RELAY 1 "GALLONS"		<b>STEP 13S</b>
SET	<b>TRIGGER</b>	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 13S –** Gallons chosen to activate relay. If Off or Time was selected in previous steps, this screen does not appear. Press NEXT for trigger programming.

RELAY 1 "GALLONS"		<b>STEP 14S</b>
SET	<b>TRIGGER</b>	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 14S –** Use up and down arrows to select number of gallons per relay activation of regen gallon setting. Range = 0.1-100 gallons. Press NEXT to go to Step 15S. Press REGEN to return to previous step.

RELAY 1 DURATION		<b>STEP 15S</b>
SET	<b>0:01</b> MIN	
CLOCK	REGEN	NEXT
		▲ ▼

**STEP 15S –** Use up and down arrows to set duration of relay activation in minutes. Range = 0:01 (1 second) - 500:00 (500 minutes). Press NEXT to go to Step 16S.

**RELAY 1 TRIGGER** **STEP 16S**

SET **REGEN** GAL

CLOCK REGEN NEXT

▲  
▼

**STEP 16S – If REGEN gallons chosen to activate relay.** Relay activates after set number of gallons have been used in service or during regeneration and then deactivates after set period of time or after flow stops, whichever comes first. Meter reads during regeneration. Press NEXT to go to Step 14S.

**RELAY 1 SET POINT** **STEP 17S**

SET **1.0** GAL

CLOCK REGEN NEXT

▲  
▼

**STEP 17S –** Use up and down arrows to select number of gallons per relay activation of regen gallon setting. Range 0.1 - 20,000 gallons. Press NEXT to go to Step 18S.

**RELAY 1 DURATION** **STEP 18S**

SET **0:01** MIN

CLOCK REGEN NEXT

▲  
▼

**STEP 18S –** If OFF or TIME was selected in previous steps, this screen does not appear. Use up and down arrows to set duration of relay activation in minutes. Range = 0:01 (1 second) - 500:00 (500 minutes). Press NEXT to go to Step 19S. Press REGEN to return to previous step.

**RELAY 1 SERV ALARM** **STEP 19S**

SET **TRIGGER**

CLOCK REGEN NEXT

▲  
▼

**STEP 19S – Service Alarm chosen to activate relay,** relay closes whenever Service Alarm has triggered. Programming for relay closure on service reminder is done on Step 21S. Relay opens when service alarm reset. Press NEXT to go to Step 20S to set Relay 2 Settings.

- Relay closes on Gallons
- Relay closes on Time
- Relay closes on Both
- Off, Factory setting is off

**RELAY 1 TRIGGER** **STEP 20S**

SET **OFF**

CLOCK REGEN NEXT

▲  
▼

**STEP 20S – Relay Triggered for Lockout,** relay is activated for set number of minutes into regeneration including negative numbers to activate prior to regeneration starting. Range -20 to 500 minutes. Regen is also an option for lockout. Relay initiates 2 minutes prior to regen and completes 1 minute after regen. Press NEXT to set start time.

**RELAY 1 SETPOINT** **STEP 21S**

SET **-20** MIN

CLOCK REGEN NEXT

▲  
▼

**STEP 21S –** Use up and down arrows to select minutes of relay activation. Range -20 - 500 minutes. Press NEXT to select duration of relay activation.

**RELAY 1 DURATION** **STEP 22S**

SET **70:00** MIN

CLOCK REGEN NEXT

▲  
▼

**STEP 22S –** Use up and down arrows to select duration of relay activation. Range = 0:01 (1 second) - 500:00 (500 minutes). Press NEXT to go to Relay 2 programming.

**RELAY 2 TRIGGER** **STEP 23S**

SET **REGEN** GAL

CLOCK REGEN NEXT

▲  
▼

**STEP 23S –** Relay 2 programming includes similar options as Relay 1. Program per application. Press NEXT to go to Step 24S.

**SERVICE ALARM** **STEP 24S**



SET **BOTH**

CLOCK REGEN NEXT



▲  
▼

**STEP 24S –** Set scheduled service display using up and down arrows. Available options are OFF, TIME, ON GAL or BOTH. Selecting OFF disables this feature. If OFF is selected, press NEXT to exit System Setup. If TIME, ON GAL or BOTH is selected, press NEXT to select the TIME and/or ON GAL values. See Steps 25S and/or 26S. This can also activate relay if Service Alarm is selected on Step 19S. Press REGEN to return to previous step.

## SERVICE REMINDER

SCHEDULED SERVICE		<b>STEP 25S</b>
SET	0.25 YR	
CLOCK	REGEN	NEXT
 		

**STEP 25S** – Service alarm for TIME ranges from 0.25 to 9.75 years. Press ▲ and ▼ buttons together until "set" appears to select value. Press NEXT to either exit System Setup or if BOTH was selected go to Step 23S. Press REGEN to return to the previous step.

SCHEDULED SERVICE		<b>STEP 26S</b>
SET	80000 GAL	
CLOCK	REGEN	NEXT
 		



**STEP 26S** – Service alarm for ON GAL ranges from 100 to 9,999,900 gallons. Press ▲ and ▼ buttons together until "set" appears, use arrows to select value. When time selected and number of days remaining drops below 1 year, next display will show "scheduled service in XXX days" after screen where service reminder is programmed. Service technician can reset if desired. Press NEXT to exit System Setup. Press REGEN to return to the previous step.

Reset service reminder by holding down up and down arrows together when reminder is displayed.



RETURN TO NORMAL MODE

## DIAGNOSTICS



To reset diagnostic data push "Next" & ▼ button until TYPE appears in window, then press "▲ & ▼" button simultaneously for 3 seconds until screens return to rotating display.

		<b>STEP 1D</b>
CLOCK	REGEN	
 		



**STEP 1D** – Press ▼ or ▲ simultaneously for three seconds. If screen in step 2D does not appear in 5 seconds the lock on the valve is activated.

DAYS SINCE REGEN		<b>STEP 2D</b>
	2 DAY	
CLOCK	REGEN	NEXT
 		



**STEP 2D – Days, since last regeneration:** This display shows the days since the last regeneration occurred. Press the NEXT button to go to Step 3D. Press REGEN to exit Diagnostics.

SINCE LAST REGEN		<b>STEP 3D</b>
	342 GAL	
CLOCK	REGEN	NEXT
 		



**STEP 3D – Volume, since last regeneration:** This display shows gallons of water that has been treated since the last regeneration. This display will equal zero if a water meter is not installed. Press the NEXT button to go to Step 4D. Press REGEN to return to previous step.

RESERVE HISTORY		<b>STEP 4D</b>
DAY	0 160 GAL	
CLOCK	REGEN	NEXT
 		

**STEP 4D – Volume of reserve capacity used for last 7 days:** If the unit is set up as a softener, a meter is installed and Set Volume Capacity is set to "Auto", this display shows 0 day (for today) and the reserve capacity. Pressing the ▲ button will show day 1 (which would be yesterday) and displays the reserve capacity. Pressing the ▲ button again will show day 2 (the day before yesterday) and the reserve capacity. Keep pressing the ▲ button to show the capacity for days 3, 4, 5 and 6. The ▼ button can be pressed to move backwards in the day series. Press NEXT button at any time to go to Step 5D. Press REGEN to return to previous step.

USAGE HISTORY		<b>STEP 5D</b>
DAY	1 108 GAL	
CLOCK	REGEN	NEXT
 		


**STEP 5D – Volume of water used, 63-day usage history:** This display shows day 0 (for today) and 1 (for yesterday) will show day 2 (which would be the day before yesterday) and flashes the volume of water treated on that day. Continue to press the ▲ button to show the volume of water treated for the last 63 days. If a regeneration occurred on the day the "letter R" will also be displayed. This display will show dashes if a water meter is not installed. Press the NEXT button at any time to go to Step 6D. Press REGEN to return to the previous step.

MAX FLOW		<b>STEP 6D</b>
DAY	6 12.7 GAL	
CLOCK	REGEN	NEXT
 		

**STEP 6D – Flow rate, maximum of each of last seven days:** The maximum flow rate in gallons per minute that occurred in each of the last seven days will be displayed. Press ▲ arrow to display maximum flow rate today = 0, yesterday = 1. This display will equal zero if a water meter is not installed. Press the NEXT button to exit Diagnostics. Press REGEN to return to the previous step.

RETURN TO NORMAL MODE

## VALVE HISTORY - (Can not be reset)

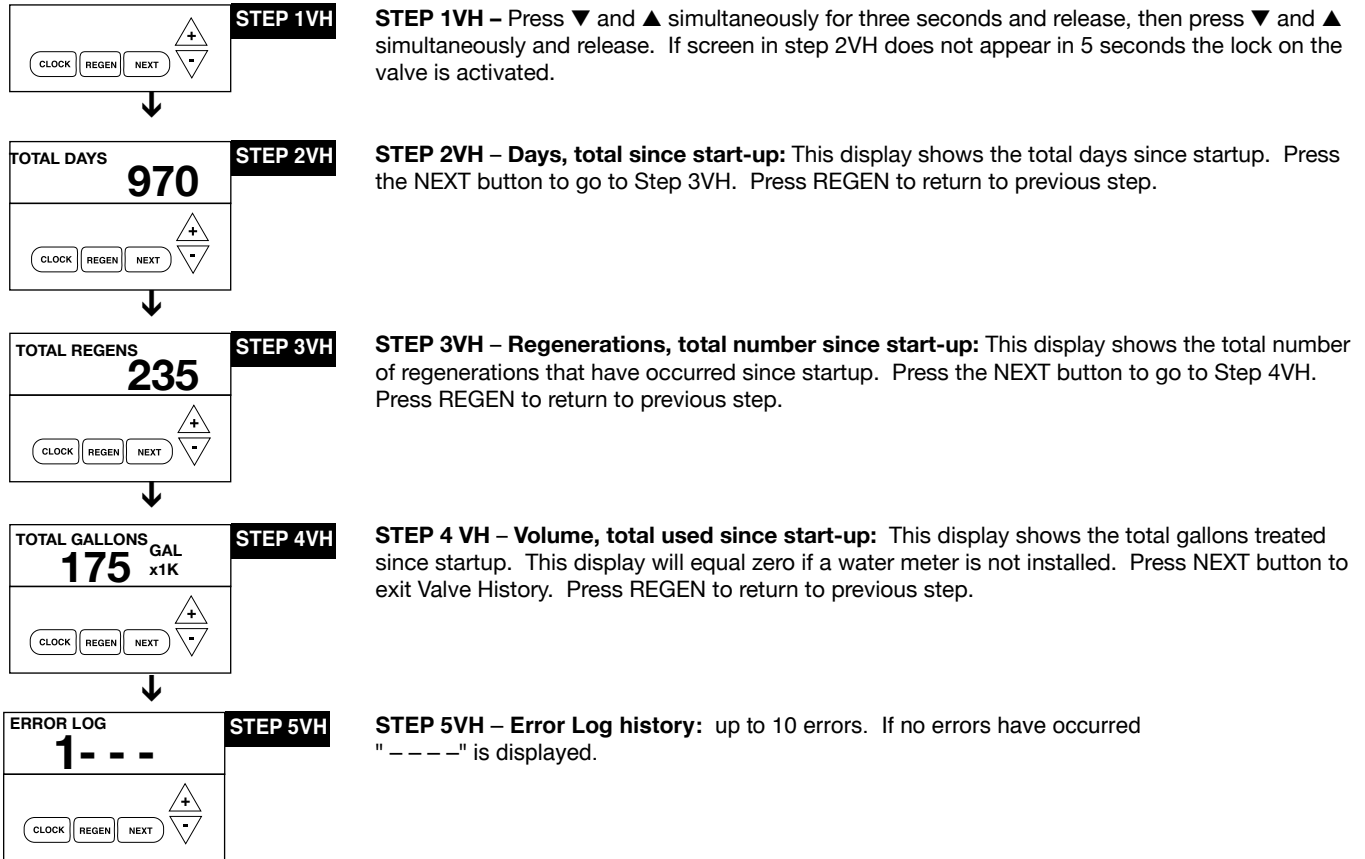

## CYCLE SEQUENCE


Anytime cycle sequence is modified, filter set-up will revert to manufacturer setting and must be reprogrammed as desired.

Cycle Sequence instructions allows the operator to set the order of the cycles. The Filter System Setup allows the operator to set how long the cycles will last. The operator may choose up to 9 cycles in any order.

Cycle Options		
BACKWASH	REGENERANT DRAW	
RINSE	FILTERING	END

END must be used as the last cycle option. The FILTERING cycle should only be used in regenerant prefill applications.

The following is an example of how to set a valve so that when regeneration is initiated, BACKWASH occurs first, REGENERANT DRAW DN occurs second, RINSE occurs third, and FILL occurs fourth.

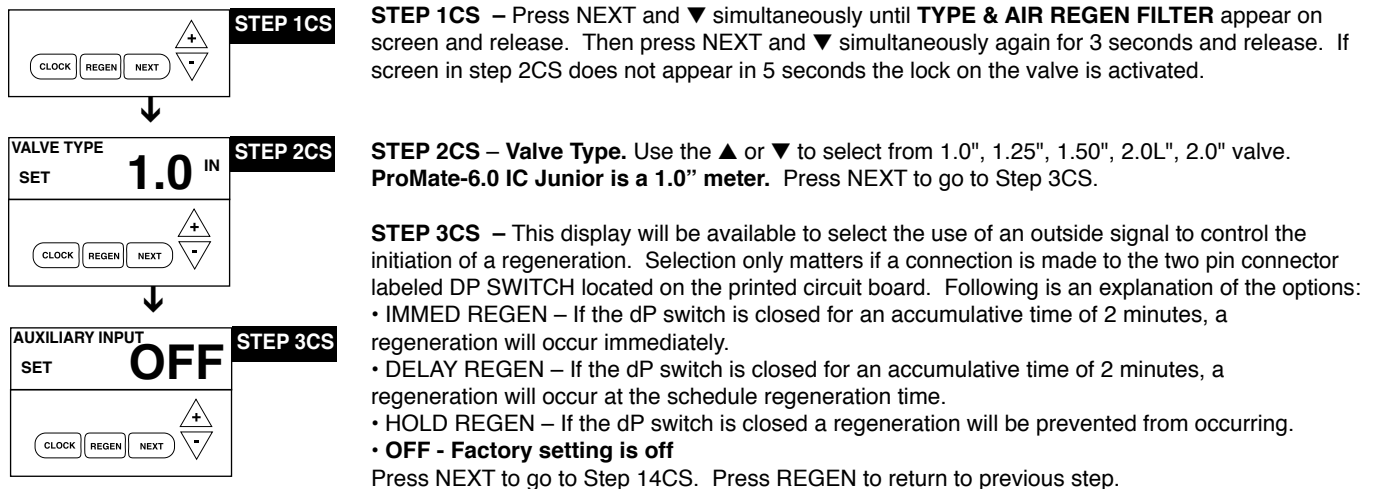

# TROUBLE SHOOTING


PROBLEM	CAUSE	CORRECTION
<p>After resolving the cause of any error code or any service valve, press NEXT &amp; REGEN simultaneously for 5 seconds or disconnect power supply for 5 seconds at PC board and reconnect to resynchronize software with piston position.</p>		
<p><b>VALVE ERROR CODES</b></p>		
<p><b>Error Code 101</b> - Unable to recognize start of regeneration</p>	<p>A1. Control not reading piston position</p>	<p>A1. Resynchronize software with piston position by pressing start of regeneration NEXT and REGEN buttons simultaneously for 5 seconds, until screen changes. Initiate regeneration to verify function by pressing and holding REGEN button until regeneration initiates, step through regeneration modes by pushing REGEN button each time motor stops.</p> <p>A2. Verify motor connection to PC board; motor wires intact and motor fully inserted to engage pinion.</p> <p>A3. Verify correct assembly; PC board snapped onto drive bracket and wires are in backplate guides and drive bracket snapped onto backplate. Verify three drive gears are in place on drive bracket.</p>
<p><b>Error Code 102</b> - Unexpected stall</p>	<p>B1. Mechanical Binding</p>    <p>B2. Buildup on piston</p> <p>B3. Improper voltage being delivered to board</p>	<p>B1a. Check for any foreign material in stack assembly impeding piston movement and remove; verify seals intact and in place, if not, replace stack assembly and piston.</p> <p>B1b. Check for incorrect assembly, drive bracket not snapped into place, motor pushed inside of barrel of drive bracket (black gear on motor end should be flush with end of shaft).</p> <p>B1c. Drive gears unable to rotate freely - replace gear(s) if not rotating freely.</p> <p>B2. Clean with soft cloth and vinegar, or replace piston</p> <p>B3. Motor unable to move piston, check voltage is present on 12V DC motor at start of regeneration modes. Transformer should provide 12 volts when plugged into outlet and not attached to board - if not replace transformer</p>
<p><b>Error Code 103</b> - Motor ran too long, timed out trying to reach next position</p>	<p>C1. High drive forces on piston</p>	<p>C1. Loosen drive cap gear 1/4 turn</p> <p>C2. Address high drive forces</p> <p>C3. Motor failure during regeneration-replace motor</p>
<p><b>Error Code 104</b> - Motor ran too long, timed out trying to reach home position</p>	<p>D1. Piston unable to reach home position</p>	<p>D1. Incorrect assembly; check drive bracket is correctly seated and snapped into place on backplate, wires outside of guides on backplate can impede drive bracket from correct position.</p> <p>D2. Check PC board is seated on posts and snapped into place on drive bracket</p> <p>D3. Drive gear labels dirty or missing, missing or broken gear, replace as needed</p>
<p><b>MAV ERROR CODES</b></p> <p>After resolving any MAV error or servicing MAV, resynchronize software with piston positioning by pressing NEXT and REGEN buttons simultaneously for 5 seconds or disconnecting power from PC board for 5 seconds and reconnecting.</p>		
<p><b>ALTERNATING MAV DRIVE - ERROR CODES 106 &amp; 107</b></p>		
<p><b>Error Code 106</b> - Alternating MAV ran too long</p>		<p>A1. Control valve is programmed for alternating or as NHWB without having MAV connected to board. Reprogram valve to proper setting or connect MAV to alternating MAV drive on PC board</p> <p>A2. MAV motor not fully engaged with gears</p>
<p><b>Error Code 107</b> - Alternating MAV stalled</p>	<p>B. Mechanical Binding</p>	<p>B1. Open MAV and check for foreign material on stack assembly, remove if present, verify seals intact and in place. If not, replace stack assembly</p> <p>B2. Drive gear should spin freely-replace if necessary</p>
<p><b>AUXILIARY MAV DRIVE - ERROR CODES 116 &amp; 117</b></p>		
<p><b>Error Code 116</b> - Auxiliary MAV ran too long</p>		<p>A1. Control valve is programmed for auxiliary MAV without having MAV connected to board. Reprogram valve to proper setting or connect MAV to two-pin connection labeled auxiliary drive on PC board</p> <p>A2. MAV motor not fully engaged with gears</p>
<p><b>Error Code 117</b> - Auxiliary MAV stalled</p>	<p>B2. Mechanical Binding</p>	<p>B1. Open MAV and check for foreign material on stack assembly, remove if present, verify seals intact and in place. If not, replace stack assembly</p> <p>B2. Drive gear and reducing gears should spin freely, replace if necessary</p>

# TROUBLE SHOOTING

PROBLEM	CAUSE	CORRECTION
1. Control valve stalled in regeneration	A. Motor not operating B. No electric power at outlet C. Defective transformer  D. Defective PC board E. Broken drive gear or drive cap assembly F. Broken piston retainer G. Broken main or regenerant piston	A. Replace Motor B. Repair outlet or use working outlet C. Should provide 12 volts when plugged into outlet, if not, replace transformer D. Replace PC board E. Replace drive gear or drive cap assembly F. Replace drive cap assembly G. Replace main or regenerant piston
2. Blank or incomplete LED display	A. Transformer unplugged B. No electric power at outlet C. Defective transformer  D. Short in meter  E. Check battery, should be greater than 3 volts F. Defective PC board	A. Connect to power B. Repair outlet or use working outlet C. Should provide 12 volts when plugged into outlet, if not, replace transformer D. Unplug meter from PC board, if LED lights appropriately, replace meter assembly. E. Replace battery if less than 3 volts F. Replace PC board
3. Control does not display correct	A. Power outage > 2 years time of day B. Power outage < 2 years, time of day flashing, battery depleted	A. Reset time of day, replace lithium coin type battery on circuit board B. Reset time of day, replace lithium coin type battery on circuit board
4. No "filtering" display when water is flowing	A. Bypass valve in bypass position B. Meter connection disconnected C. Restricted/stalled meter turbine  D. Defective meter E. Defective PC board	A. Put bypass valve in service position B. Connect meter to PC board C. Remove meter and check for rotation, clean foreign material D. Replace meter E. Replace PC board
5. Control valve regenerates at wrong time of day	A. Power outages B. Time of day not set correctly C. Time of regeneration incorrect D. Control valve set at "on 0" (immediate regeneration) E. Control valve set at NORMAL + on 0	A. Reset control valve to correct time of day B. Reset to correct time of day C. Reset regeneration time D. Check control valve set-up procedure regeneration time option E. Check control valve set-up procedure regeneration time option

# RELAY TROUBLESHOOTING

PROBLEM	CAUSE	CORRECTION
18. Relay does not energize		
A. Relay driver programmed on "Time"	A. Programmed incorrectly B. Defective relay, See figure below C. Defective PC Board D. Faulty wire connections between PC board and relay	A. Reprogram, see page 11 B. Replace Relay C. Replace PC Board D. Check and repair wire connections
B. Relay driver programmed on "Gallons"	A. Programmed incorrectly B. Faulty meter connection C. Defective relay, See figure below D. Defective PC Board E. Faulty wire connections between PC board and relay	A. Reprogram, see page 11 B. Repair or replace meter assembly C. Replace Relay D. Replace PC Board E. Check and repair wire connections
19. Relay energized during regeneration	A. Relay programmed as "on REGEN gallons"	A. Reprogram, see page 11

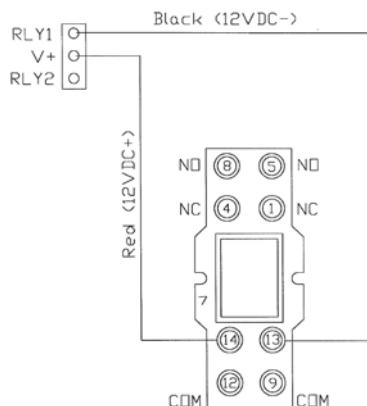


### Relay operation while in error modes

1. Relays should turn off immediately whenever a Valve Error occurs.
2. Relays should remain on and continue to operate as programmed if a MAV Error (106/107 or 116/117) occurs and the valve has already entered regen.
3. Relays should remain off, and not operate as programmed, if a MAV Error (106/107 or 116/117) occurs and the valve has not entered regen.



# PROMATE 6 IRON CURTAIN JUNIOR

Item	Description	Qty	Part #
1	Metered Control	1	104295, specify flow control
3&4	Mineral Tank Assembly		<u>Item 3 only</u> <u>Item 4 only</u>
	IC-JR 1054 Filter Tank	1	104554      102241, 101173
	IC-JR 1252 Filter Tank	1	104561      102239, 101173
5	Filter Media	1	109285 IC JR-10 Rebed 109286 IC JR-12 Rebed
6	Plate Distributor - (Part of Vortech Tank)		
7	Bypass Valve	1	101325
8	Inline Check Valve Kit	1	104174 (includes 90° vertical adapter & inline check valve)
9	Air Recharge Intake Screen	1	109038
10	Internal Check Valve Elbow Assy	1	110822

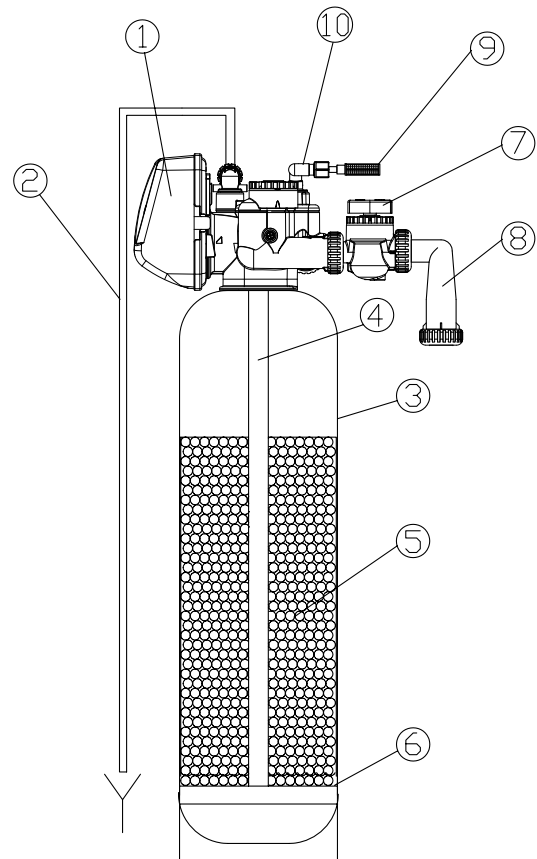

Compatible with the following regenerants or chemicals: Sodium chloride, potassium permanganate, sodium bisulfite, sodium hydroxide, hydrochloric acid, chlorine and chloramines. For specific regeneration systems, contact factory.

## FRONT COVER AND DRIVE ASSEMBLY

**Optional Relay Kit  
Item #7**

When replacing the battery, align positives and push down to fully seat.  
Battery Fully Seated

Correct Battery Orientation

Battery replacement is 3 volt lithium coin cell type 2032.

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	103473	PM 6.0 Cover Assy w/Label	1
2	102096	Motor	1
3	101262	Drive Bracket & Spring Clip	1
4	107081	PM 6.0 - PC Board	1
5	101746	Drive Gear 12x36	3
6	101459	Drive Gear Cover	1
7	Relay Kit Options:		1
	103724	PCM Relay Installed	
	103723	PCM Relay Kit	
	103730	Pigtail Relay Installed	
	103729	Pigtail Relay Kit	
8	102385	Relay Only	1
Not Shown	102653	Transformer 110V-12V	1


After completing any valve maintenance involving the drive assembly or the drive cap assembly and pistons, press and hold NEXT and REGEN buttons for 3 seconds or unplug power source jack from the printed circuit board (black wire) and plug back in. This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version (ex: 214) and then reset the valve to the service position.

**Figure 14**

## DRIVE CAP ASSEMBLY, DOWNFLOW PISTON, REGENERANT PISTON AND SPACER STACK ASSEMBLY

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102548	Spacer Stack Assy	1
2	101613	Drive Cap Assy.	1
3	102167	O-Ring 228 -Drive Cap Assy.	1
4a	102292	Piston Downflow Assy.	1**
4b	102297	Piston Upflow Assy.	1
5	102296	Regenerant Piston	1
6	102192	O-ring 337-tank	1
7	102165	O-ring - Distributor Tube	1
8	101189	PM 6.0 Back Plate	1
9	102892	Service Wrench - Not Shown	1

\*102292 is labeled with DN and 102297 is labeled with UP.  
 Note: The regenerant piston is not used in backwash only applications.  
 \*\*Standard Option.

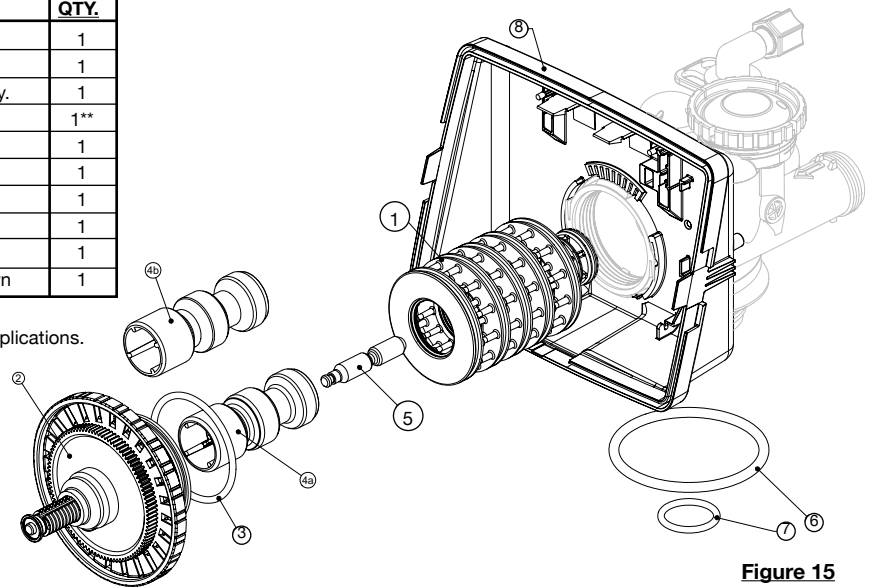

**Figure 15**

Do not use vaseline, oils, other hydrocarbon lubricants or spray silicone anywhere. A silicone lubricant may be used on black o-rings but is not necessary. **Avoid any type of lubricants, including silicone, on red or clear lip seals.**

After completing any valve maintenance involving the drive assembly or the drive cap assembly and pistons, press and hold NEXT and REGEN buttons for 3 seconds or unplug power source jack from the printed circuit board (black wire) and plug back in. This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version (ex: 214) and then reset the valve to the service position.

# INJECTOR CAP, INJECTOR SCREEN, INJECTOR, PLUG AND O-RING

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	101375	Injector Cap	1
2	102159	O-ring 135	1
3	102457	Injector Screen	1
4	102319	Injector Assy. Z Plug-Filter	1
5	101825	Injector Assy. A Black	1
	101826	Injector Assy. B Brown	
	101827	Injector Assy. C Violet	
	101828	Injector Assy. D Red	
	101829	Injector Assy. E White	
	101830	Injector Assy. F Blue	
	101831	Injector Assy. G Yellow	
	101832	Injector Assy. H Green	
	101833	Injector Assy. I Orange	
	101834	Injector Assy. J Light Blue	
	<b>101835</b>	<b>Injector Assy K Light Green</b>	
Not Shown	106767	O-ring 011	*
Not Shown	106768	O-ring 013	*

\* The injector plug and the injector each contain one 011 (lower) and 013 (upper) o-ring.

Note: For upflow position, injector is located in the up hole and injector plug in the down hole. For a filter that only backwashes injector plugs are located in both holes.


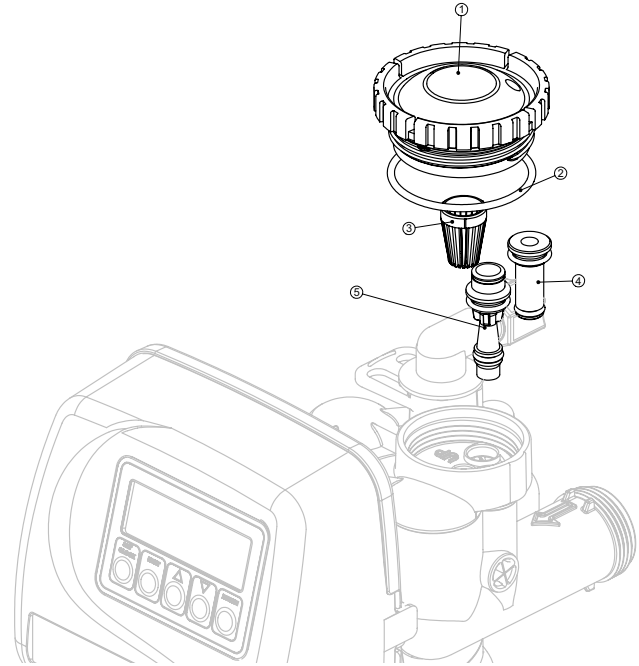


Figure 15

The nuts and caps are designed to be unscrewed or tightened by hand or with the special plastic wrench. If necessary a pliers can be used to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen nuts or caps. Do not place screwdriver in slots on caps and/or tap with a hammer.

Do not use pipe dope or other sealants on threads. Teflon tape must be used on threads of the 1" NPT connection and on the threads for the drain line connection. Teflon tape is not necessary on the nut connection nor caps because of o-rings seals.

# REFILL AND REFILL PORT PLUG

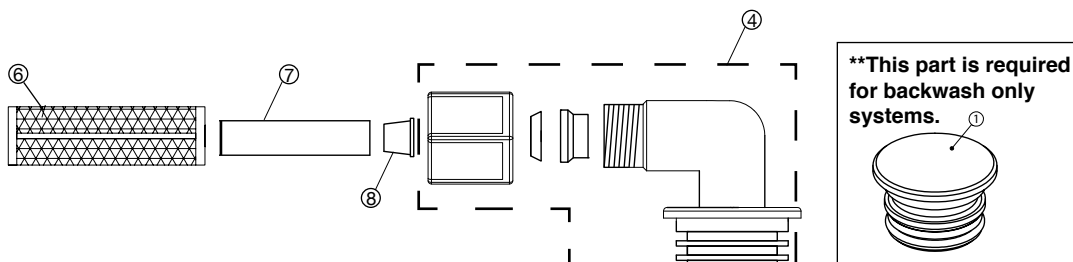

ITEM NO.	ORDER NO.	DESCRIPTION	QTY
1	102322	Refill Port Plug Assy	1
2	101414	Elbow Locking Clip	1
4	110822	Elbow, 3/8 Assy (Includes Check Valve & Nut)	1
5	102153	O-Ring 019	1
6	109038	Air Recharge Intake Screen	1
7	111004	Tubing 3/8"	1
8	111006	Polytube Insert 5/16"	1

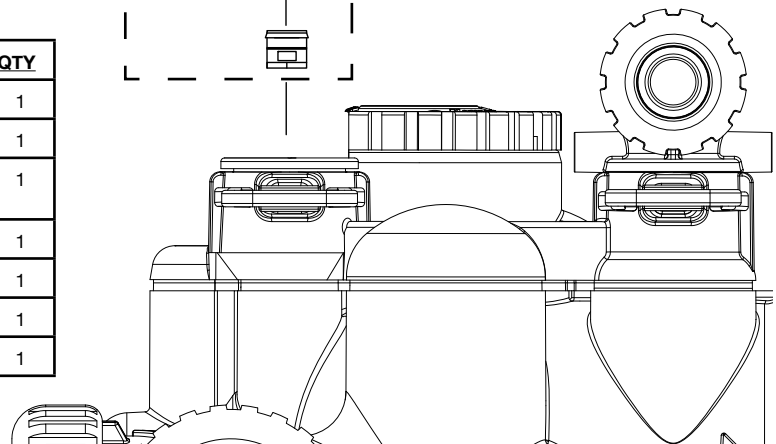



Figure 16

## DRAIN LINE - 3/4"

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	101414	Elbow Locking Clip	1
2	101871	Polytube Insert, 5/8"	Optional
3	102131	Nut, 3/4" Drain Elbow	Optional
4-5	101619	Drain Elbow 3/4" Male Asy-No Vent	1
5	102153	O-Ring 019	1
6	102406	DLFC Retainer Assy.	1
7	101591	DLFC 5.3 gpm for 3/4"	1
	101595	DLFC 7.5 gpm for 3/4"	
	101598	DLFC 9.0 gpm for 3/4"	
	101561	DLFC 10.0 gpm for 3/4"	
<b>One DLFC must be used if 3/4 fitting is used</b>			

Systems are shipped without 3/4" nut for drain elbow (polytube installation only) and 5/8" polytube insert (polytube installation only).

**Option:** 101618 – 3/4" Drain Elbow with Silencer Vent.

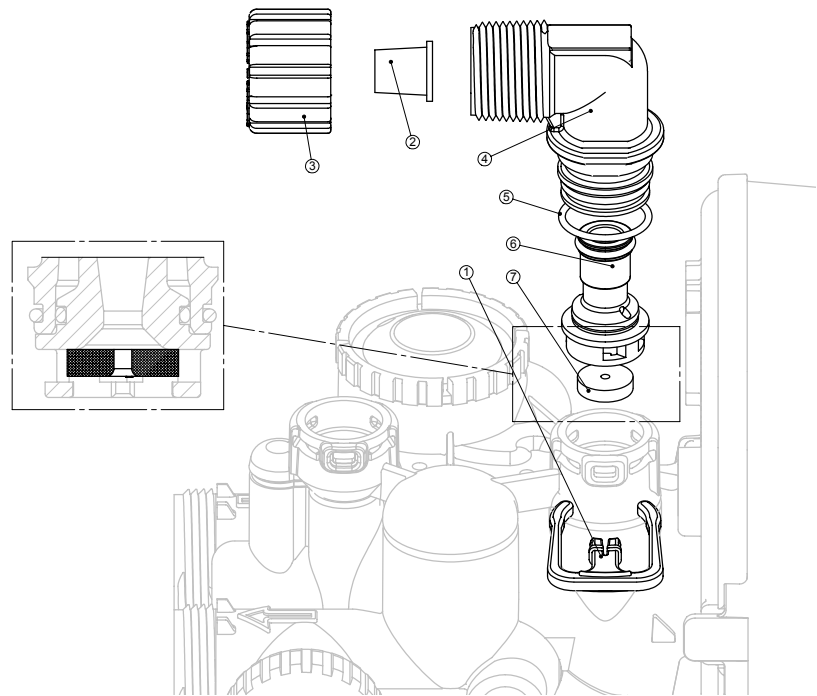

**Figure 17**


## WATER METER AND METER PLUG

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" QC	1
2-4	102051*	Meter Assy.	1
3	102687	Turbine Assy.	1
4	102165	O-ring 215	1
5	102321	Meter Plug Assy.**	1

\*Order number 102051 includes 102687 and 102165, which are item numbers 3 & 4.

\*\*Only used if metering is not to be done (time clock units)

The nuts and caps are designed to be unscrewed or tightened by hand or with the special plastic wrench. If necessary a pliers can be used to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen nuts or caps. Do not place screwdriver in slots on caps and/or tap with a hammer.

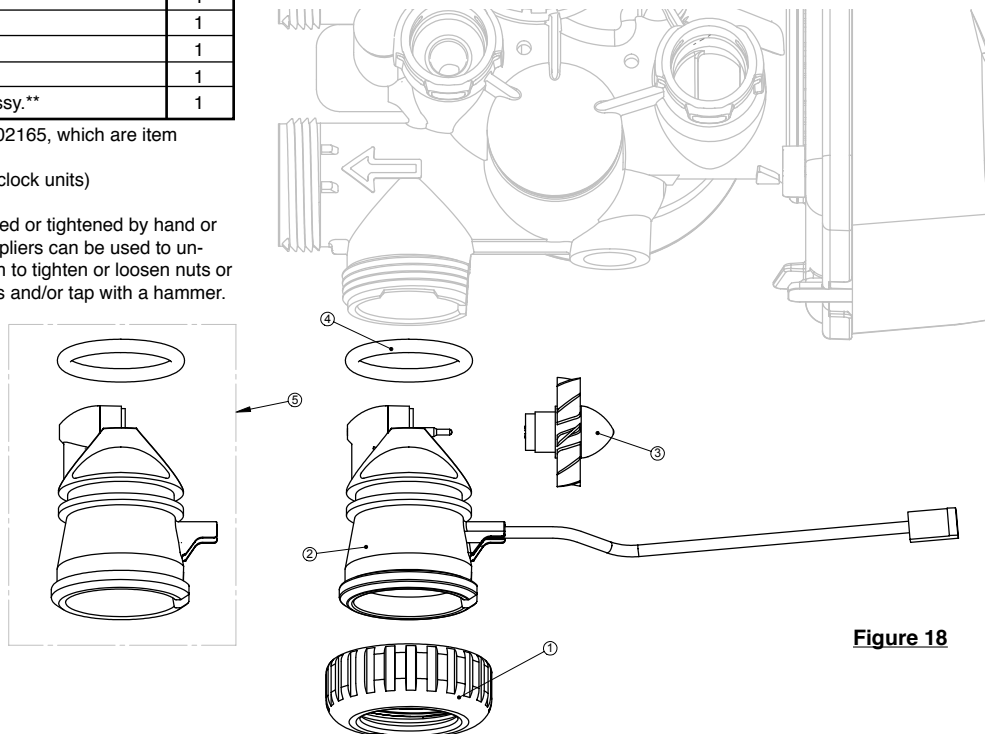

**Figure 18**

## BYPASS VALVE

### Bypass Valve


ITEM NO.	ORDER NO.	DESCRIPTION	QTY
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O'Ring 215	2
4	102450	Bypass 1" Rotor	2
5	110997	Bypass Cap	2
6	110998	Bypass Handle	2
7	109479	Bypass Rotor Seal Retainer	2
8	102159	O-Ring 135	2
9	102161	O-Ring 112	2
10	102160	O-Ring 214	2

### (Not Shown) Bypass Vertical Adapter Assembly

ORDER NO.	DESCRIPTION	QTY
102141	Nut 1" Quick Connect	2
102437	Split Ring	2
102165	O'Ring 215	2
106858	Bypass Vertical Adapter	2

The nuts and caps are designed to be unscrewed or tightened by hand or with the special plastic wrench. If necessary a pliers can be used to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen nuts or caps. Do not place screwdriver in slots on caps and/or tap with a hammer.

Do not use pipe dope or other sealants on threads. Teflon tape must be used on threads of the 1" NPT connection and on the threads for the drain line connection. Teflon tape is not necessary on the nut connection nor caps because of o-ring seals.

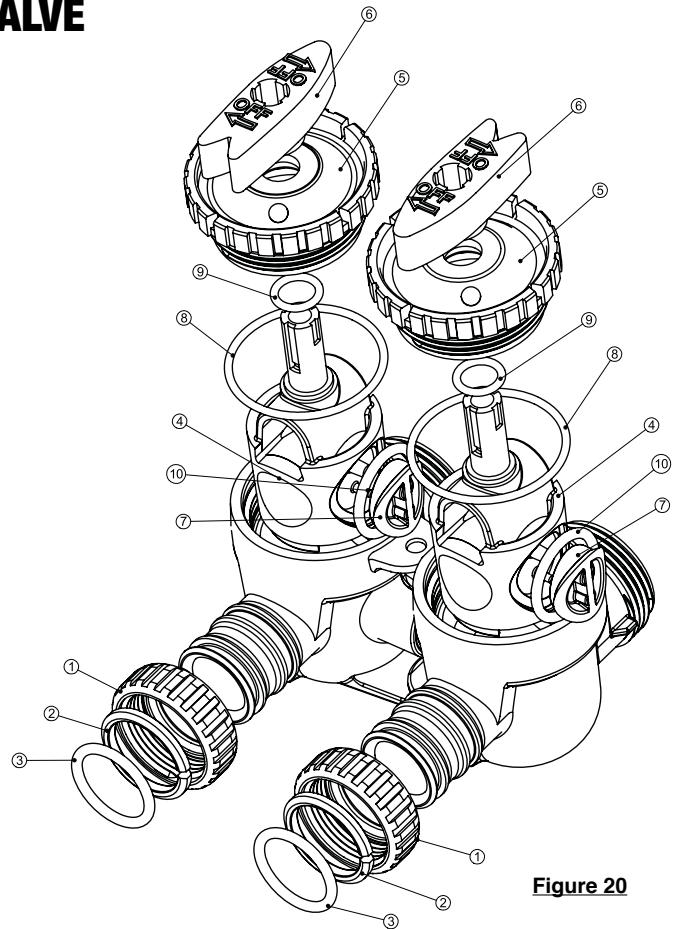

**Figure 20**

## RECOMMENDED ANNUAL MAINTENANCE


### Annually

- Test raw water, assure filter settings are appropriate for the application. Note and record any changes.
- Verify injector is clean and functioning.
- View head of air and determine need for cleaning inlet diffuser by running at service flow and then note difference when bypass open. If significantly different, disconnect valve from tank and clean inlet diffuser. If IRB slime or iron build-up is present, bacterial control may be required.
- Check back wash flow is proper and water supply is maintained for the duration of the backwash cycle.
- Check, clean or replace air draw check valve (at brine elbow).
- Confirm draw time setting draws air to top of bed.
- Check filter valve settings.
- Check diagnostic information to review any errors, address errors if present.
- Note and record any changes.
- Anticipated life of stack & piston is 5-7 years for standard ferric and ferrous iron applications. The presence of iron bacteria may require more frequent service.
- It is recommended to change the battery (CR2032), stock code 110038, on the control valve circuit board if it is more than two years old. This maintains time of day in the event of power loss.

# INSTALLATION FITTING ASSEMBLIES


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106761	Fitting 1" PVC Male NPT Elbow	2
1-4	101639	Ftg 1" PVC Male NPT Assy (Set of 2)	1

**Figure 21**

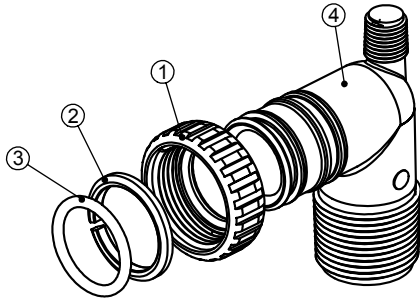

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106762	Fitting 3/4" & 1" PVC Solv. 90	2
1-4	101640	Ftg 3/4" & 1" PVC Solv 90 (Set of 2)	1

**Figure 22**

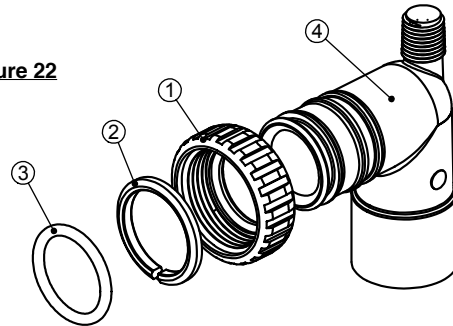


The nuts and caps are designed to be unscrewed or tightened by hand or with the special plastic wrench. If necessary a pliers can be used to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen nuts or caps. Do not place screwdriver in slots on caps and/or tap with a hammer.

Do not use pipe dope or other sealants on threads. Teflon tape must be used on threads of the 1" NPT connection and on the threads for the drain line connection. Teflon tape is not necessary on the nut connection nor caps because of o-rings seals.


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106763	Fitting 1" Brass Sweat	2
1-4	101641	Ftg 1" Brass Sweat Assy (Set of 2)	1

**Figure 23**

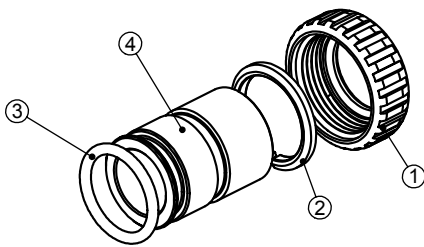


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106764	Fitting 3/4" Brass Sweat	2
1-4	101642	Ftg 3/4" Brass Sweat Assy (Set of 2)	1

**Figure 24**

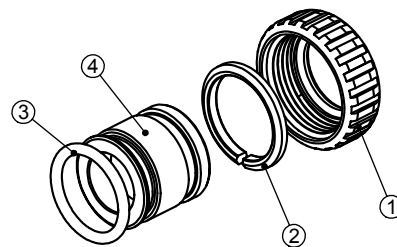


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106765	Fitting 1" Plastic Male NPT	2
1-4	101643	Fitting 1" Male NPT Assy (Set of 2)	1

**Figure 26**

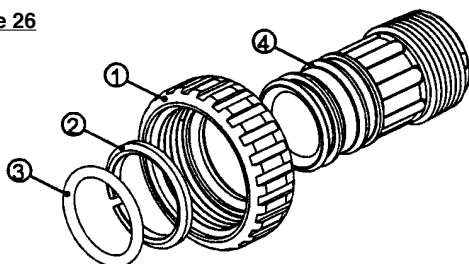

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106766	Fitting 1-1/4" Plastic Male NPT	2
1-4	101644	Fitting 1-1/4" Male NPT (Set of 2)	1

**Figure 27**

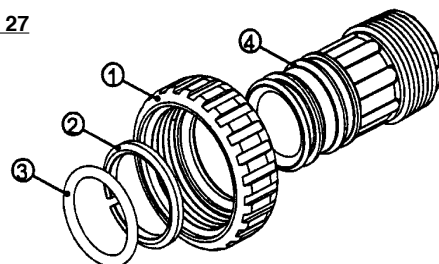


## INSTALLATION FITTING ASSEMBLIES CONTINUED

Order No: 110135

Description: IC 2.0 Fitting 3/4" Brass SharkBite Assembly


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106769	Fitting 3/4" Brass Sharkbite	2
1-4	110135	Fitting 3/4" Brass Sharkbite Asy.(Set of 2)	1

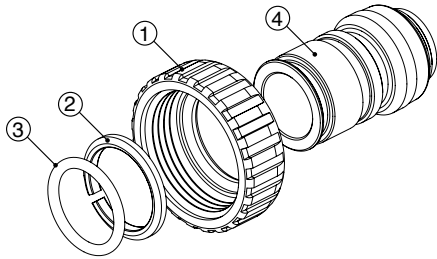


Order No: 110136

Description: IC 2.0 Fitting 1" Brass SharkBite Assembly

ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	106770	Fitting 1" Brass Sharkbite	2
1-4	110136	Fitting 1" Brass Sharkbite Asy. (Set of 2)	1

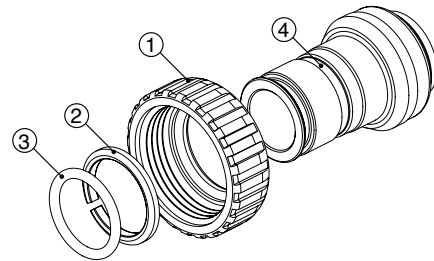


ITEM NO.	ORDER NO.	DESCRIPTION	QTY.
1	102141	Nut 1" Quick Connect	2
2	102437	Split Ring	2
3	102165	O-Ring 215	2
4	V3790	Fitting 3/4" John Guest	2
1-4	108478	Fitting 3/4" JG QC Assy (Set of 2)	1

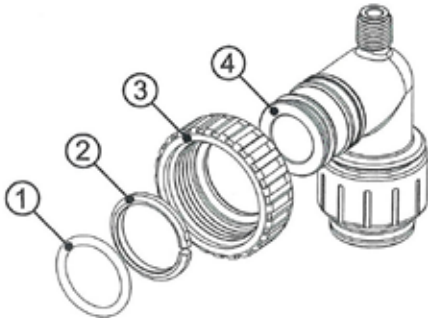

## WRENCH

Although no tools are necessary to assemble or disassemble the valve, the wrench (shown in various positions on the valve) may be purchased to aid in assembly or disassembly.

Wrench part number is 102892.

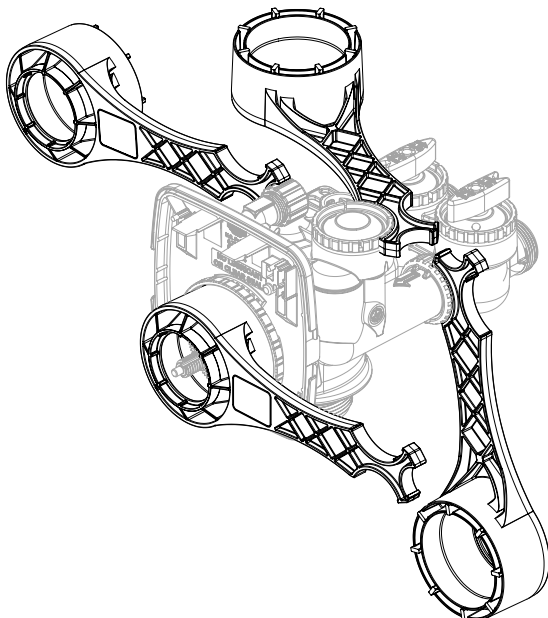

---

---

# FILTER WARRANTY

## INCLUDES – Iron Curtain® 2.0, Iron Curtain® Jr. and Storm Filter Systems

Hellenbrand, Inc., warrants to the original consumer purchaser that the system and the parts listed below will be free from defects in material and/or workmanship from the date of the original installation for the following time periods:

For a Period of FIVE YEARS: The filter control valve electrical parts including the motor and board, control valve body, excluding internal parts.

For a Period of FIVE YEARS: The IC-2.0 Aeration Macromatic Timer.

For a Period of FIVE YEARS: The IC-2.0 aeration control body, excluding its internal parts, solenoid and air pump assemblies.

For a Period of TEN YEARS: The fiberglass aeration or mineral tanks, 6" Diameter - 13" Diameter.

For a Period of FIVE YEARS: The fiberglass aeration or mineral tanks, 14" Diameter - Up.

For a Period of ONE YEAR: The Ozone Generator.

For a Period of ONE YEAR: The entire unit system ("System").

Any parts used for replacement are warranted for the remainder of the original warranty period for the applicable part.

THIS WARRANTY IS EFFECTIVE TO THE ORIGINAL CONSUMER PURCHASER ONLY, AND ONLY FOR AS LONG AS THE SYSTEM REMAINS AT THE ORIGINAL INSTALLATION SITE. COVERAGE TERMINATES IF YOU SELL OR OTHERWISE TRANSFER THE SYSTEM OR IF THE SYSTEM IS MOVED FROM THE ORIGINAL INSTALLATION SITE.

No sales representative, distributor, agent, dealer, reseller, authorized seller or any other person or entity is authorized to make any other warranty, or modify or expand the warranty provided herein on behalf of Hellenbrand. Upon expiration of the applicable warranty period, Hellenbrand shall have no further liability related to the System/parts to which the warranty period applies, except with respect to valid warranty claims asserted during the appropriate warranty period.

If the System or any part described above becomes defective within the specified warranty period, you should notify your local authorized seller of Hellenbrand products, and arrange a time during normal business hours for the inspection of the System at the original installation site. You may also contact Hellenbrand and we will provide you with the contact information for your local authorized seller of Hellenbrand products. Hellenbrand, at its option, will repair or replace the System or any part found defective within the terms of this warranty. You are responsible for freight from our factory and any service fees charged by the local authorized seller of Hellenbrand products for installation, repair, removal, replacement, service, etc., of any System or parts. This warranty does not include any labor charges. This paragraph sets forth the exclusive remedy for any valid warranty claims against Hellenbrand.

THIS WARRANTY DOES NOT COVER defects caused by sand, sediment or bacteria fouling, accident, fire, flood, Act of God, misuse, misapplication, neglect, alteration, installation or operation contrary to Hellenbrand's printed instructions, or installation, repair or service by anyone other than Hellenbrand or an authorized seller of Hellenbrand products.

IN ADDITION, THIS WARRANTY DOES NOT COVER UNPROTECTED OUTDOOR INSTALLATIONS. This System, including all of the electrical components, must be protected against windblown dust, falling and windblown rain, freezing temperatures and the formation of ice, with an appropriate enclosure consisting of a floor, roof, walls, ventilation and heat.

As a manufacturer, we do not know the characteristics of your water supply or the purpose for which you are purchasing this system. You should be aware that the quality of water supplies may vary seasonally or over a period of time, and that your water usage rate may vary as well. Water characteristics may change considerably if this System is moved to a new location. For these reasons, Hellenbrand assumes no liability for the determination of the proper equipment necessary to meet your needs; and Hellenbrand does not authorize others to assume such obligations for Hellenbrand.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, REMEDIES FOR DEFECTS OR FAILURES ARE LIMITED TO THE REMEDIES PROVIDED IN THIS WARRANTY. THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE SET FORTH HEREIN. ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ANY WARRANTIES ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING, OR FROM USAGES OF TRADE, ARE LIMITED IN DURATION TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

UNDER NO CIRCUMSTANCES SHALL HELLENBRAND BE LIABLE TO THE ORIGINAL CONSUMER PURCHASER OR TO ANY OTHER PERSON FOR ANY INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR FOR ANY OTHER LOSS, DAMAGE, OR EXPENSE OF ANY KIND, INCLUDING LOSS OF PROFITS, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, IN TORT OR OTHERWISE, AND REGARDLESS OF WHETHER HELLENBRAND WAS AWARE OF THE POSSIBILITY OF SUCH LOSS. THESE LIMITATIONS WILL APPLY REGARDLESS OF ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Similarly, some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.