

Technical data



UNINTERRUPTIBLE POWER SUPPLY

Series GENIO Tower Plus

USSEP VFI 0,7 - 3kVA

1 phase input / 1 phase output

On Line / Double Conversion (VFI) Technology

CONTENTS

<u>1.</u> (GENERAL DESCRIPTION	3
1.1.	MAIN FEATURES OF THE UPS UNIT	4
1.2.	STANDARD VERSIONS	4
1.3.	ER VERSIONS FOR EXTENDED AUTONOMY	4
<u>2.</u> (GENIO TOWER PLUS SERIES UPS AESTHETICS	<u>5</u>
2.1.	GENIO TOWER PLUS FRONT PANEL	5
2.2.	GENIO TOWER PLUS REAR PANEL	6
<i>2.3.</i>	BATTERY BOX FRONT PANEL	7
2.4.	BATTERY BOX REAR PANEL	7
A. l	USBBOX T12 REAR PANEL	8
<u>3.</u> <u>1</u>	TECHNICAL DATA TABLE	9
3.1.	GENIO TOWER PLUS UPS	9
<i>3.2.</i>	T10 BATTERY BOX	12
3.3.	T12 BATTERY BOX	12
<u>4.</u> <u>E</u>	BLOCK DIAGRAM	13
<u>5.</u> (COMMUNICATION PORTS AND FIRMWARE	14
<i>5.</i> 1.	EXAMPLES FOR CONNECTING SIGNALS THROUGH THE RS232 PORT	15
<i>5.2.</i>	TECHNICAL DATA FOR "PIN 6" POWER THROUGH THE RS232 PORT	15
<i>5.3.</i>	FIRMWARE	15
5.4.	EXAMPLES FOR REPO CONNECTOR CONNECTIONS	15
6. F	PROTECTION LEVEL IP21 (OPTIONAL)	16



1. GENERAL DESCRIPTION

The GENIO TOWER PLUS family UPS is an online single phase unit, with power levels of up to 3 kVA, in a cabinet tower configuration of two different sizes based on the power required.

That UPS is designed to be configured for various operating modes:

- ON-LINE is the operating mode which offers maximum load protection and the best output waveform quality (*)
- ECO is the operating mode which offers the least UPS consumption, or rather maximum efficiency (**)
- SMART ACTIVE is the operating mode which allows the UPS to decide whether to enable ON-LINE or ECO
 functionality, based on a statistic regarding the quality of the Power Supply network.
- STAND-BY OFF [Mode 1] is the operating mode in which the UPS functions as an emergency device. While power is
 present the UPS does not intervene. In the event of a blackout, the necessary power is provided by the UPS.

(*) the effective values (rms) of the voltage and the output frequency are constantly controlled by the microprocessor independently with respect to the waveform of the network voltage, thereby maintaining the output frequency synchronized with the network within a configurable interval.

Outside of this interval, the UPS eliminates its synchronism with the network and brings itself to its nominal frequency; under these conditions, the UPS cannot utilize the bypass.

(**) In order to optimize yield, the load is normally powered by the bypass in ECO mode. In the event that the network should move outside of the pre-set tolerances, the UPS will switch to ON LINE functionality. Once the network has moved back within the pre-set tolerances for at least five minutes, the UPS will go back to powering the load through the bypass.

ADDITIONAL FUNCTIONS

MANUAL BYPASS

The Manual Bypass function allows the UPS to be switched to the bypass line. In this configuration, the load is powered directly by the input network and any network disruptions will have a direct effect on the load.

This family of UPS units is completed with relative battery cabinets.

The USBB36 and USBB72 Battery Boxes have the same aesthetic design as the UPS units and are capable of housing one or two battery branches in parallel.

The USBB36-B1 and USBB72-B1 Battery Boxes are larger battery cabinets which are suitable for housing 40 Ah batteries. Both Battery Box versions are available without batteries. These versions come complete with all of the required kits so that the user can decide upon the most suitable configuration to meet his/her needs.

All of the Battery Box versions are supplied without battery charger boards.

For increased recharging current, ER version UPS units are available, which contain high-powered battery charger boards instead of batteries.



1.1. Main features of the UPS unit

The main features of the GENIO TOWER PLUS series include:

- VFI (On-line) / pure sinusoidal waveform during battery-powered functionality
- Output frequency with automatic selection (auto-sensing)
- Front/rear ventilation
- LCD display
- UPS with configurable and customizable functions (i.e. by-pass thresholds, automatic testing, acoustic alarm, etc.) through proprietary configuration software
- Protected battery expansion connector
- Unlimited expandability of autonomy with dedicated or custom Battery Boxes
- Expansion slot for communication cards (i.e. second USB and RS232 Port, SNMP, ModBus, etc.)
- RS232 and USB communication ports
- Frequency converter mode with a derating of 30%
- "Free Running" mode with a derating of 30%
- Eco mode function with 98% yield

1.2. STANDARD VERSIONS

- 700 VA 630 W PF 0.9 2 batteries, 12 V, 7 Ah small cabinet
- 1000 VA 900 W PF 0.9 3 batteries, 12 V, 7 Ah small cabinet with battery expansion
- 1500 VA 1350 W PF 0.9 3 batteries, 12 V, 9 Ah small cabinet 2200 VA 1980 W PF 0.9 6 batteries, 12 V, 7 Ah large cabinet with battery expansion
- 3000 VA 2700 W PF 0.9 6 batteries, 12 V, 9 Ah large cabinet with battery expansion

1.3. ER Versions for extended autonomy

- 1000 VA ER, 2200 VA ER, 3000 VA ER
- Same features as the standard version
- Recharging battery current 6 A




2. GENIO TOWER PLUS SERIES UPS AESTHETICS

2.1. GENIO TOWER PLUS FRONT PANEL




- Chassis reference colour: Pantone Black 6U
- Colour of the silver parts: RAL 9006

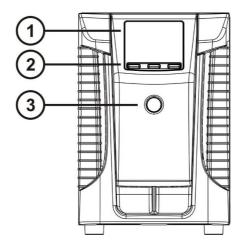



- Display
 Multifunction keys
- 3. ON/OFF button




2.2. GENIO TOWER PLUS REAR PANEL

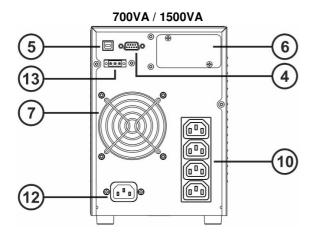

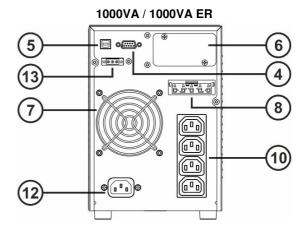

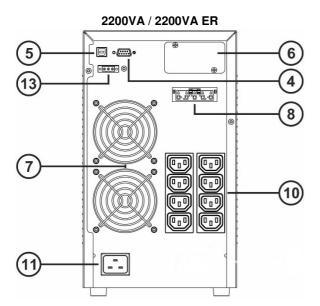

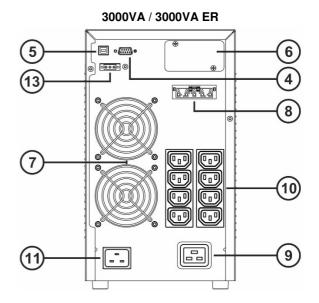


- RS232 communication port and opto-isolated contacts
- **USB** Port
- 6. Expansion slot
- 7. Cooling fans
- 8. Battery expansion connector
- 9. IEC 16 A output socket
- 10. IEC 10 A output socket11. IEC 16 A input plug
- 12. IEC 10 A input plug
- 13. REPO connector

2.3. BATTERY BOX FRONT PANEL




2.4. BATTERY BOX REAR PANEL

36 V Battery Box

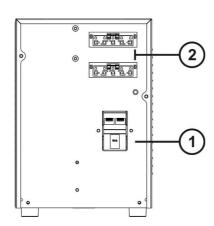


- Battery disconnection switch (SWBATT)
 Battery expansion connector

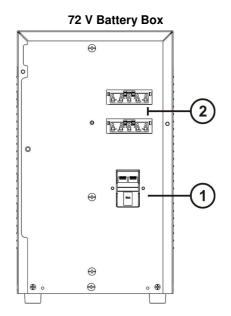




a. USBBox T12 REAR PANEL

36 V Battery Box

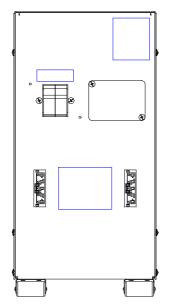

- Battery disconnection switch (SWBATT)
 Battery expansion connector

72 V Battery Box

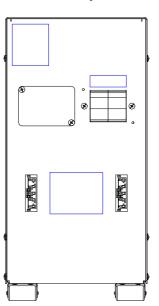



3. TECHNICAL DATA TABLE

3.1.GENIO TOWER PLUS UPS

GENIO TOWER PLUS UPS		700 VA	1000 VA	1500 VA	2200 VA	3000 VA	
		700 VA	1000 VA ER	1500 VA	2200 VA ER	3000 VA ER	
INPUT							
Rated voltage	[Vac]	220 - 230 – 240					
Maximum allowed input voltage	[Vac]	300					
Voltage range for no battery intervention (configurable through UPSTools)		Maximum: 276 Vac Minimum: 184 Vac AT 100% load Minimum: 184 Vac ÷ 140 Vac (from 100% to 50% load in linear mode) Return to network powered functionality: 190 Vac					
Rated frequency	[Hz]	50 – 60					
Power factor		≥ 0.98					
Current distortion @ maximum I	oad	≤ 7%					
Maximum current@184 Vac (1)	[A]	4	5,8	8,2	12	16	
Rated current@220 Vac (2)	[A]	3,3 4,7 6,9 10,1 1					
Circuit breaker	[A]	7	7	10	12	16	
Rated current (only for ER versions) @220 Vac(2)	[A]	N/A	5,7	N/A	12,2	14,1	

- (1) @ rated load, minimum voltage of 184 Vac, battery charging
- (2) @ rated load, rated voltage of 220 Vac, battery charging

GENIO TOWER PLUS UPS	700 VA	1000 VA	1500 VA	2200 VA	3000 VA			
GENIO TOWER PLUS UPS		1000 VA ER		2200 VA ER	3000 VA ER			
BYPASS								
Accepted voltage range for switching	oltage range for [Vac]			Minimum configurable threshold: 180 ÷ 200 Maximum configurable threshold: 250 ÷ 264				
Accepted frequency range for inverter synchronization		Selectable: 3% ÷ 10% Default: ±5%						
Switching time	Typical: 4							
BATTERY								
Number of batteries / V	[no.] /[V]	2 / 12	3 / 12	3 / 12	6 / 12	6 / 12		
Standard capacity	[Ah]	7 (a)	7 (a)	9 (b)	7 (a)	9 (b)		
Charging current @ UPS ON with fan at maximum speed	[A]	1	1	1	1,1	1,1		
Charging time (c)	[h]	<4 for 80% of the load						
Expandability and rated voltage of the Battery Box		Not expandable	36 Vdc	Not expandable	72 Vdc	72 Vdc		
Charging current (only for ER ve	ersions)	N/A	6 A (d)	N/A	6 A (d)	6 A (d)		

- (a) 12 V / 7 Ah Batteries: **CSB GP1272-F2** or **CSB GP1272(28W)** or **CSB UPS12360-7** or **YUASA NPW36-12**
- (b) 12 V / 9 Ah Batteries: *CSB HR1234W-F2* or *YUASA NPW45-12*
- (c) For the ER versions, the charging time depends on the batteries installed in the Battery Box
- (d) The charging current depends on the input voltage and the internal temperature of the UPS. Under normal conditions, temperature derating of about 2-3 A may occur
 In order to select the minimum capacity of the Battery Box, verify the maximum charging current accepted by the

In order to select the minimum capacity of the Battery Box, verify the maximum charging current accepted by the batteries.



GENIO TOWER PLUS UPS		700 VA	1000 VA 1000 VA ER	1500 VA	2200 VA 2200 VA ER	3000 VA 3000 VA ER	
OUTPUT							
Rated voltage	[Vac]	Selectable: 220 / 230 / 240					
Static variation (3)				1.5%			
Dynamic variation (4)				≤5% in 20 ms			
Waveform				Sinusoidal			
Voltage distortion @ linear load				≤ 2%			
Voltage distortion @ distorting lo	oad			≤ 5%			
Frequency (5)	[Hz]	Selectable: 50 / 60 / automatic detection					
Current crest factor		≥ 3:1					
Rated power	[VA]	700	1000	1500 VA	2200	3000	
Rated power	[W]	630	900	1350	1980	2700	
Derating: Frequency converter / forced fred de-synchronization	quency	-30%					
Overload: 100% <load <110%<="" th=""><th></th><th colspan="5">Bypass line available: activates the bypass after 2 sec. shut down after 120 sec. Bypass line unavailable: shutdown after 60 sec.</th></load>		Bypass line available: activates the bypass after 2 sec. shut down after 120 sec. Bypass line unavailable: shutdown after 60 sec.					
Overload: 110% <load <150%<="" th=""><th colspan="5">Bypass line available: activates the bypass after 2 sec. shutdown after 4 sec. Bypass line unavailable: shutdown after 4 sec.</th></load>	Bypass line available: activates the bypass after 2 sec. shutdown after 4 sec. Bypass line unavailable: shutdown after 4 sec.						
Load overload >150%		Bypass line available: activates the bypass instantaneously shutdown after 1 sec. Bypass line unavailable: shutdown after 0.5 sec.					
Inverter short circuit		Short circu	it current ≤ Pow	ver [VA] / 220 V	x 2 shutdown a	fter 300 ms	

- Network/Battery @ 0% 100% load @ Network / battery / network @ 0% / 100% / 0% resistive load If the network frequency is within $\pm 5\%$ of the selected value, the UPS is synchronized with the network. If the frequency is off tolerance or battery-powered functionality is enabled, the frequency is that which is selected $\pm 0.1\%$ (3) (4) (5)

			1000 VA		2200 VA	3000 VA	
GENIO TOWER PLUS UPS		700 VA		1500 VA			
			1000 VA ER		2200 VA ER	3000 VA ER	
AUTONOMIES							
Measured autonomy @ 100% linear load – only internal batteries		4'10"	5'	4'10"	4'10"	4'10"	
MISCELLANEOUS							
Leakage current to ground	[mA]		≤ 1.5		≤ 2		
AC/AC yield in ON-LINE mode		88,4%	89,2%	91,7%	92,4%	93,2%	
Automatic consumption in ECO mod (batteries disconnected)	de	10,5 W	10,5 W	10,5 W	12 W	12 W	
DC/AC yield in BATTERY mode		86,3%	88,0%	88,3%	90%	90,4%	
Automatic consumption from the network (batteries disconnected)		42 W	29 W	38 W	44 W	58 W	
Automatic consumption in Stand- by mode (batteries disconnected)		6 W	6 W	6 W	6 W	14 W	
Automatic consumption with on/off switch turned off		0,1 W	0,1 W	0,1 W	0,4 W	0,4 W	
Power loss with resistive nominal load	[W] [BTU/h] [kcal/h]	80 270 68	107 367 93	121 416 105	161 550 139	202 690 174	
Operating room temperature (6)	[℃]			0 – 40			
Humidity			< 90%	without conde	nsation		
Installation height	Operation: 1000 m at nominal power (-1% power for every 100 m above 1000 m) 4000 m maximum Transport: <15000 m						
Protection devices		Excessive battery discharge – overcurrent – short circuit – over voltage – undervoltage – thermal					
Overvoltage protection		2 VDR x 300 Joule					
Noise levels			<	<40 dB(A) at 1 m			
Dimensions L x D x H	[mm]	158 x 422 x 235			190 x 44	16 x 333	
Packaging dimensions L x D x H	[mm]	245 x 500 x 340 325 x 585 x 47				35 x 470	
Net weight	[kg]	11	13	14	26	28	
Gross weight	[kg]	12.5	14.5	15.5	29	31	
Net weight (only for ER versions)	[kg]	N/A	7	N/A	14	15	
Gross weight (only for ER versions)	[kg]	N/A	8.5	N/A	17	18	



CENIO TOWER BLUE LIRE	700 VA	1000 VA	1500 VA	2200 VA	3000 VA		
GENIO TOWER PLUS UPS		1000 VA ER		2200 VA ER	3000 VA ER		
ADDITIONAL INFORMATION							
Safety compliance	EN 62040-1 and 2006/95/EC Directives						
EMC compliance	EN 62040-2 cat. C2 and 2004/108/EC Directives						
Certifications		(Nemko	yeprüte Sicherheit			

3.2.T10 BATTERY BOX


T10 BATTERY BOX		AB36M1	USBB36A3	USBB36M1	AB72M1	USBB72A3	USBB72M1
Rated battery voltage	[Vdc]	36			72		
Number of batteries / V	[no.]/[V]	0 / 12	3 / 12	3+3 / 12	0 / 12	6 / 12	6+6 / 12
Standard capacity	Ah	0	7	14	0	7	14
Dimensions L x D x H	[mm]	158 x 422 x 235			190 x 446 x 333		
Packaging dimensions L x D x H	[mm]	245 x 500 x 340			3	25 x 585 x 47	70
Net weight	[kg]	6	14	21	12	27	41
Gross weight	[kg]	7	15	22	14	29	43

3.3.T12 BATTERY BOX

T12 BATTERY BOX		USBB36B1	USBB72B1	AB72B1		
Rated battery voltage	[Vdc]	36	36 / 72			
Number of batteries / V	[no.]/[V]	3 / 12	6 / 12	0 / 12		
Standard capacity	Ah	40	40	0		
Dimensions L x D x H	[mm]	158 x 422 x 235				
Packaging dimensions L x D x H	[mm]	590 x 320 x 760				
Net weight	[kg]	55	100	10		
Gross weight	[kg]	65	110	20		



4. BLOCK DIAGRAM

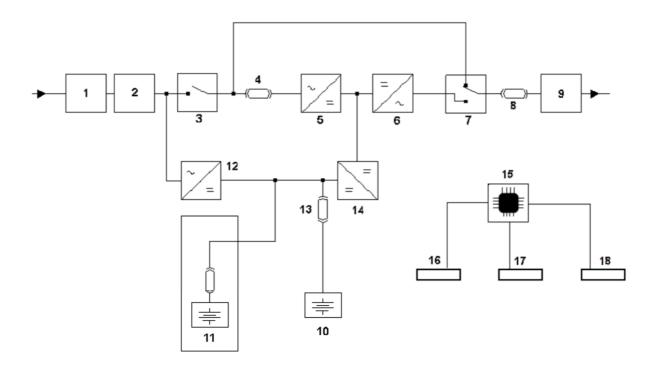

- 1) Resettable Input protection
- 2) Input filter
- 3) Back-feed relay
- 4) Input fuse
- 5) Rectifier
- 6) Inverter
- 7) Automatic By-pass
- 8) Output fuse (only for 2.2 and 3 kVA models)
- 9) Output filter (only for 2.2 and 3 kVA models)
- 10) Batteries
- 11) External batteries (optional)
- 12) Battery charger
- 13) Batteries fuse
- 14) DC/DC Boost
- 15) Microprocessor
- 16) Communication slot
- 17) RS232 and USB interface
- 18) LCD Display




5. COMMUNICATION PORTS AND FIRMWARE

The UPS comes with a standard RS232 port with input and output signals, a USB Port and an expansion slot for connecting additional electronic boards.

RS232 Connector

RS232 CONNECTOR

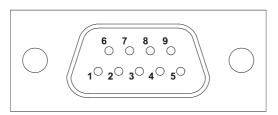


PIN#	SIGNAL	NOTES
1	Programmable output*: [default: UPS shutdown]	
2	TXD	
3	RXD	(*) Opto-isolated contact max. +30 Vdc / 35 mA.
4	NC	These contacts can be associated with other events using
5	GND	the appropriate software
6	DC Power Supply (Imax = 20 mA)	For additional information about interfacing with the UPS unit,
7	NC	please refer to the appropriate manual
8	Programmable output*: [default: discharge pre-alarm]	prodoction to the appropriate manda
9	Programmable output*: [default: battery-powered functionality]	

Communications Slot

The UPS comes supplied with an expansion slot for optional communication cards (see the diagram on the right), which can allow the device to communicate using the most common communication standards.

Some examples include:

- Additional RS232 and USB communication ports
- Serial duplicator
- Ethernet network card with TCP/IP, HTTP and SNMP protocols
- JBUS / MODBUS protocol converter card
- · PROFIBUS protocol converter card
- · Card with isolated relay contacts

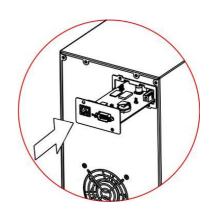



Please consult the website www.ups-technet.com to check the availability of additional accessories




5.1. Examples for connecting signals through the RS232 port

UPS INTERNAL CIRCUIT

CUSTOMER

EXAMPLE FOR THE EXTERNAL CIRCUIT

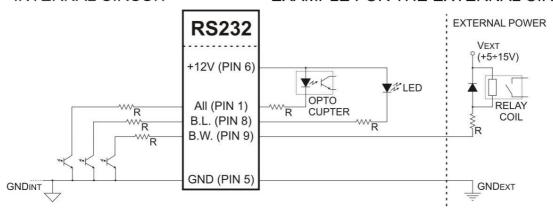

5.2. TECHNICAL DATA FOR "PIN 6" POWER THROUGH THE RS232 PORT

The voltage provided by the serial port's 6pin power depends on the absorbed current.


Vcc max: 10.8 Vdc without load Vcc min: 8 Vdc @ 25 mA


5.3.FIRMWARE

The firmware of the UPS unit can be updated by inserting the appropriate programming card into the expansion slot. This operation must be carried out by authorized personnel.

5.4.EXAMPLES FOR REPO CONNECTIONS


Connections for REPO functionality and remote ON/OFF

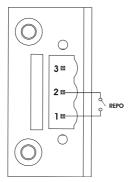


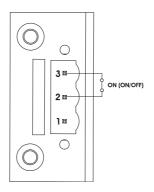



6. PROTECTION LEVEL IP21 (OPTIONAL)

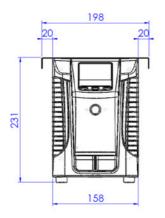

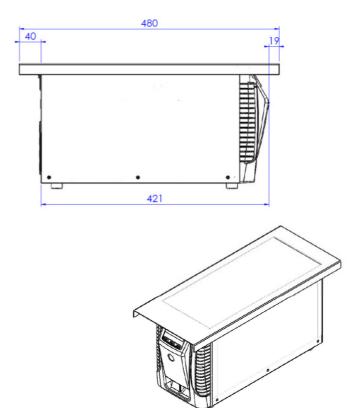



THE COMPANY

HEADQUARTERS _

SCHRACK TECHNIK GMBH
Seybelgasse 13, A-1230 Vienna
PHONE +43(0)1/866 85-5900
FAX +43(0)1/866 85-98800
E-MAIL export@schrack.com

SCHRACK COMPANIES _

BELGIUM

SCHRACK TECHNIK B.V.B.A Twaalfapostelenstraat 14 BE-9051 St-Denijs-Westrem PHONE +32 9/384 79 92 FAX +32 9/384 87 69 E-MAIL info@schrack.be

BOSNIEN-HERZEGOWINA SCHRACK TECHNIK BH D.O.O.

Put za aluminijski kombinat bb BH-88000 Mostar PHONE +387/36 333 666 FAX +387/36 333 667 E-MAIL schrack@schrack.ba

BULGARIA

SCHRACK TECHNIK EOOD Prof. Tsvetan Lazarov 162 Druzhba - 2 BG-1000 Sofia PHONE +359/(2) 890 79 13 FAX +359/(2) 890 79 30 E-MAIL sofia@schrack.bg

CROATIA

SCHRACK TECHNIK D.O.O.
Zavrtnica 17
HR-10000 Zagreb
PHONE +385 1/605 55 00
FAX +385 1/605 55 66
E-MAIL schrack@schrack.hr

CZECH REPUBLIC SCHRACK TECHNIK SPOL. SR.O.

Dolnomecholupska 2 CZ-10200 Praha 10 – Hostivar PHONE +42(0)2/810 08 264 FAX +42(0)2/810 08 462 E-MAIL praha@schrack.cz

HUNGARY

SCHRACK TECHNIK KFT.
Vidor u. 5
H-1172 Budapest
PHONE +36 1/253 14 01
FAX +36 1/253 14 91
E-MAIL schrack@schrack.hu

GERMANY

SCHRACK TECHNIK GMBH
Thomas-Wimmer-Ring 17
D-80539 München
PHONE +49 89/999 533 900
FAX +49 89/999 533 902
E-MAIL info@schrack-technik.de

POLAND

SCHRACK TECHNIK POLSKA SP.ZO.O.
ul. Staniewicka 5
PL-03-310 Warszawa
PHONE +48 22/205 31 00
FAX +48 22/205 31 01
E-MAIL kontakt@schrack.pl

ROMANIA

SCHRACK TECHNIK SRL Str. Simion Barnutiu nr. 15 RO-410204 Oradea PHONE +40 259/435 887 FAX +40 259/412 892 E-MAIL schrack@schrack.ro

SERBIA

SCHRACK TECHNIK D.O.O.
Kumodraska 260
RS-11000 Beograd
PHONE +38 1/11 309 2600
FAX +38 1/11 309 2620
E-MAIL office@schrack.co.rs

SLOVAKIA

SCHRACK TECHNIK S.R.O. Ivanská cesta 10/C SK-82104 Bratislava PHONE +42 (02)/491 081 01 FAX +42 (02)/491 081 99 E-MAIL info@schrack.sk

SLOVENIA

SCHRACK TECHNIK D.O.O.
Pameče 175
SLO-2380 Slovenj Gradec
PHONE +38 6/2 883 92 00
FAX +38 6/2 884 34 71
E-MAIL schrack.sg@schrack.si

WWW.SCHRACK.COM

TD_GENIO Tower Plus_0,7-3kVA_EN_2017_03 SPTSEPA1S17AREN

